


# Operation Navigation PERT View

The PERT view is an alternative mode of displaying the operation navigation diagram. When this view is configured, the default operation navigation diagram is not available.

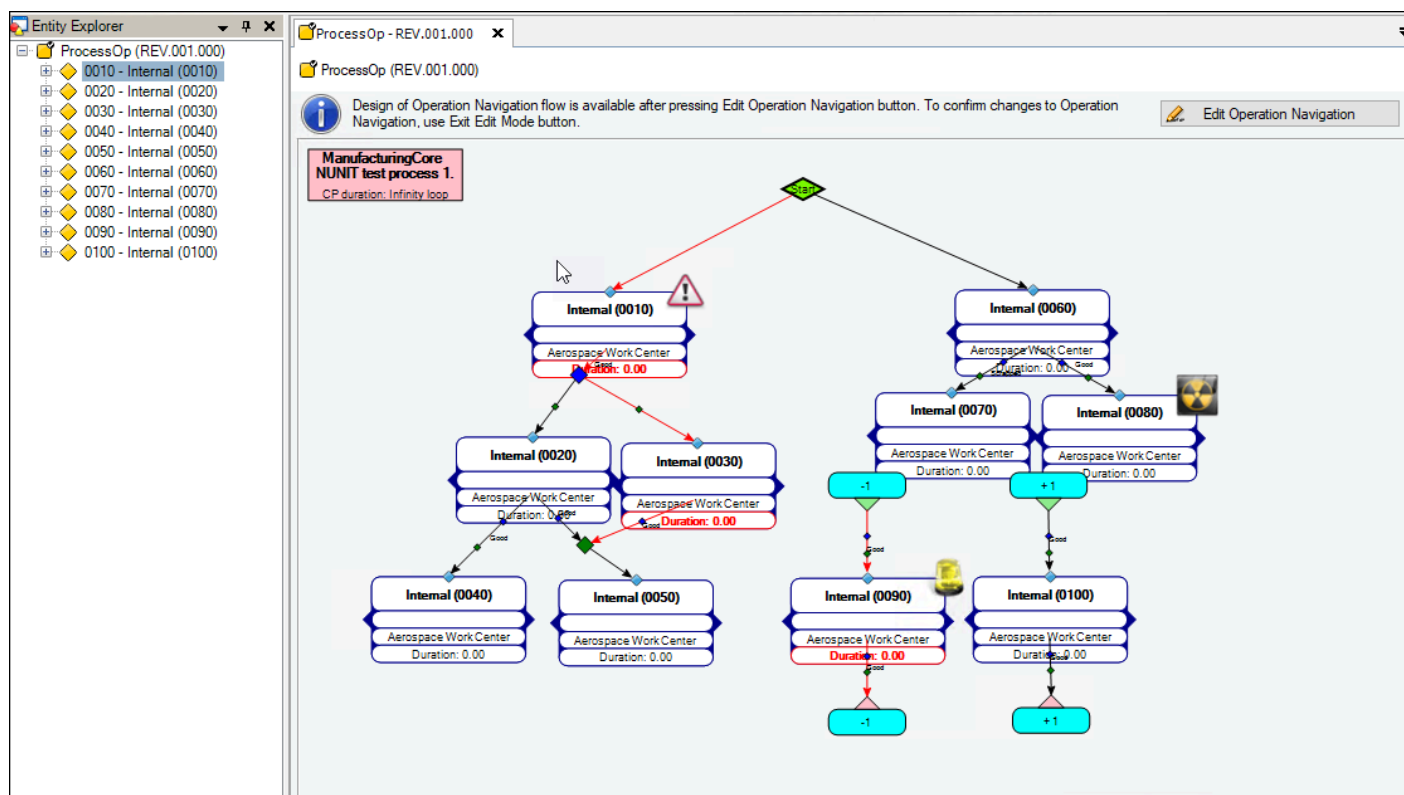

## To Configure the PERT View


1. Open the CentralConfiguration.xml file located under <drive>\Program Files\Dassault Systemes\DELMIA Apriso 2025\Website\CentralConfiguration.
2. Find the PertOperationNavigation key in the ProcessBuilder section. For details, refer to **Central Configuration Documentation**.
3. Set the key value to True.

```
<add key="PertOperationNavigation" value="True" />
```

## PERT Diagram Elements

The system automatically determines the critical path duration and makes it visible through red lines and boxes. Each operation node displayed in the PERT view contains the following information:


- ▶ Operation name
- ▶ Operation WBS code
- ▶ Work center description
- ▶ Operation duration (in hours)

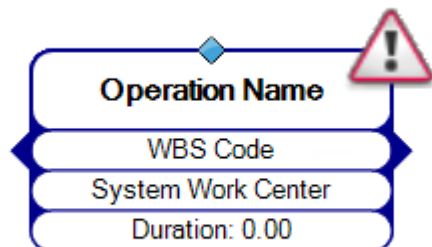

You can display any image –  in this example – on the operation node to illustrate the operation type.

To add or replace the image:

1. Place the image in the *Images* folder located under <drive>\Program Files\Dassault Systemes\DELMIA Apriso 2025\WebSite\Portal. You can specify the URL path to the folder using the ImageRepositoryUrl key in the Media section of the Central Configuration file.
2. In the operation navigation workspace, right-click the operation node and choose **Change Picture** from the [right-click](#) menu.
3. Write the image name in the displayed window.

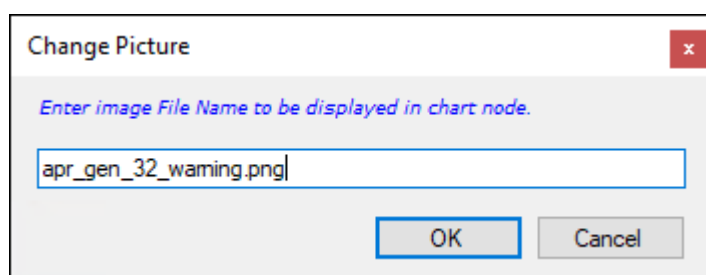

To remove the image:

1. Make sure that the operation navigation is in the editable mode.
2. In the operation navigation workspace, right-click the operation node and choose **Change Picture** from the [right-click](#) menu.
3. Remove the image name from the displayed window.