

Operation Properties

To Launch the Process Operation or Operation Properties

1. In the Entity Explorer, select a process operation or an operation from the list or select the operation on the diagram.
2. Choose one of the following options:

▷ Choose **View > Properties** from the [main menu](#).

▷ Use the `F4` [shortcut](#).

You can also open the **Entity Properties** window by selecting an operation in the [Entity Manager](#) and using one of the following options:

- ▷ Choose **Properties** from the right-click menu.
- ▷ Use the `Shift+F4` [shortcut](#).

Operation Properties

General Tab

Properties

General

Work Instructions

Advanced

Name

Operation

Subtype

Generic

Operation code

Operation

Revision

REV.001.000

☒ Default Revision

Description

Valid between

06/10/2024 12:00 AM

and

Version

1.0.0.9

Edit Mask...


Version host

☒ Allow editing in Prototype mode

Field	Description
Name	Translated name of the operation. The name can be up to 80 characters long.
Subtype	Types of the operation. Use the following subtypes: ▷ Generic ▷ Labor ▷ Machine ▷ Background The Labor, Machine, and Background subtypes are visible if you selected one of them when creating the operation. For more information on the subtypes, see New Entity Wizard.
Operation code	Internal name of the operation. This field is read-only.
Revision	The revision of the operation. This field is read-only.
Default Revision	The revision of the operation that is used in runtime. It is selected by

	default for a newly created operation (next revisions of the operation are not selected as the default ones).
Description	The description of the operation.
Valid Between	Enables changing the date range for the validity of the operation. Values are not validated when changing. If values are incorrect, a warning is displayed during the entity validation.
Version	An auto-incremented number of an operation that increases when you modify and save the entity. Click Edit Mask to enter a custom mask.
Version host	The name of the last server where an operation has been modified.
Allow editing in Prototype mode	If enabled, the entity can be edited in the prototype status. This setting is selected when creating the entity.

Work Instructions Tab

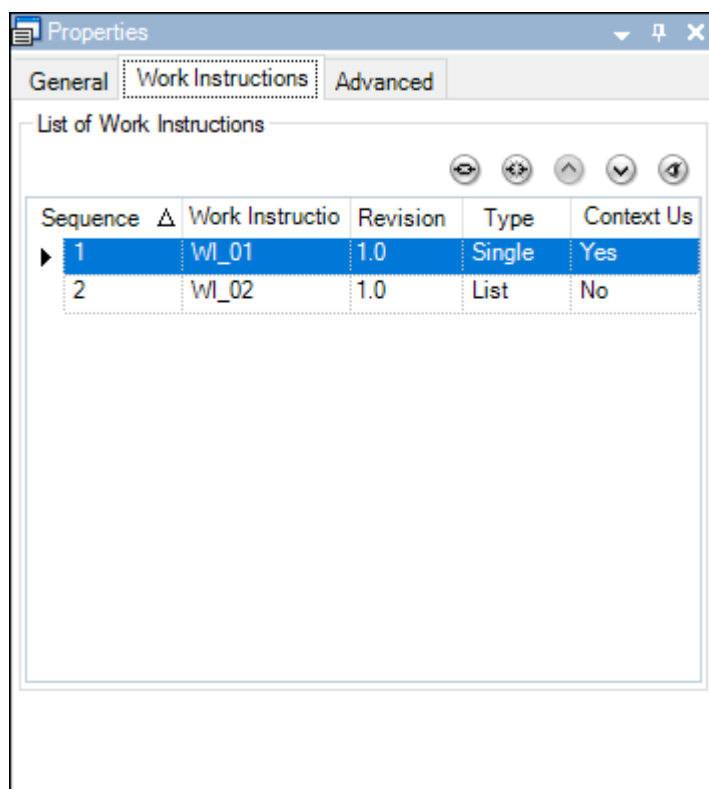

This tab lists all linked work instructions. Their order is specified in the **Sequence** column. The **Context Usage** column informs if the work instruction has the usage context linked:

- ▶ **No** – there is no usage context parameters defined.
- ▶ **Yes** – the usage context parameters are defined or the work instruction is of the list type and consists of work instructions with the linked usage context parameters.

If you link the operation to the process from which an execution order is exploded, the list of work instruction is visible in the **Execution Order** screen.

The status of the linked work instructions must be prototype or active.

Available Actions

- ▶ Double-click a work instruction to open the **Work Instruction Revision** browser (for dynamic revision) or **Work Instruction Properties Editor** (for specific revision).
- ▶  – opens the **Add Work Instruction Wizard**, which lists available work instructions. Select one or more of them to link them to the operation.
- ▶  – removes the selected work instruction from the list.
- ▶  and  – changes the order in which the work instructions are defined.
- ▶  – displays a preview of all linked work instructions in a read-only pop-up window. You cannot perform any actions on them.

Advanced Tab

Properties

General

Work Instructions

Advanced

Task Permissions

Additional Properties

Created on:

6/10/2024 9:33:52 AM (4 days ago)

Created by:

ADMIN

Modified on:

6/10/2024 1:51:00 PM (3 days ago)

Modified by:

ADMIN

ID:

100002127

FUID:

53c1ffbf-3af9-4d3b-974f-13526625f1ed

Field	Description
Task Permissions	Opens the Task Permissions window (see Task Permissions Tab).
Additional Properties	For more information, see Additional Properties Editor.
Created on	Date the entity was created on.
Created by	User who created the entity.
Modified on	Date the entity was last modified on.
Modified by	User who last modified the entity.
ID	ID of the record in the database.
FUID	FUID of the record in the database.

Process Operation Properties

General Tab

Properties

General | Work Instructions | Advanced

Name
Kitting

Operation code
Kitting

Revision

Execution Template
Show


Description
Kitting

Operation Sequence No.
0001

Process Operation type
Labor


Valid between
06/13/2024 12:00 AM

and

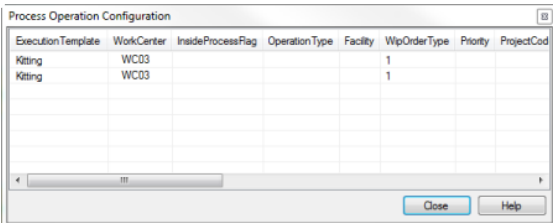Field	Description
Name	Translated name of the process operation.
Operation Code	Internal name of the operation used in the orocess. This field is read-only.
Revision	Revision of the operation, if this process operation is based on a stand-alone operation. This field is read-only.
Execution Template	The name of the operation (from external system) retrieved from the PROCESS_OPERATION.ExecutionTemplate field. It is used to decide which operation to use during explosion of type 4 via <i>APR_PPR_EXPLOSION_OPERATION</i> determination. The field is active only for operations imported and managed by an external system (for example, DELMIA). These operations are in Active status and do not need to have any steps inside so that the validation could be successful.
Show	Displays the Process Operation Configuration pop-up window (executes the <i>QueryDeterminationInputByET</i> business component method).  The window lists all process operations existing on the server which ExecutionTemplate field on the database is the same. It displays determination configuration according to Execution Template field value (on the Properties pane). Double-clicking the row on the pop-up opens selected process operation.
Description	The textual description of the entity.
Operation Sequence Number/No.	Identification number of the process operation (the sequence number for this operation, commonly 0010, 0020, 0030, etc.).
Process Operation type	Reference only. Select one of the following from the drop-down list: ► Labor – means that the pace of the operation is governed

	by the labor resources allocated to the operation. ▶ Machine – means that the pace of the operation is governed by the machine resources allocated to the operation. ▶ Background – means that the pace of the operation is governed by the background resources allocated to the operation. If the operation is linked to the process from which an execution order is exploded in the Execution Order screen, and the operation subtype is other than <i>Generic</i>, selecting one of these three types is required.
Valid Between	Enables changing the date range for the validity of the process operation. Values are not validated when changing. If values are incorrect, a warning is displayed during the validation of the entity.

Work Instructions Tab

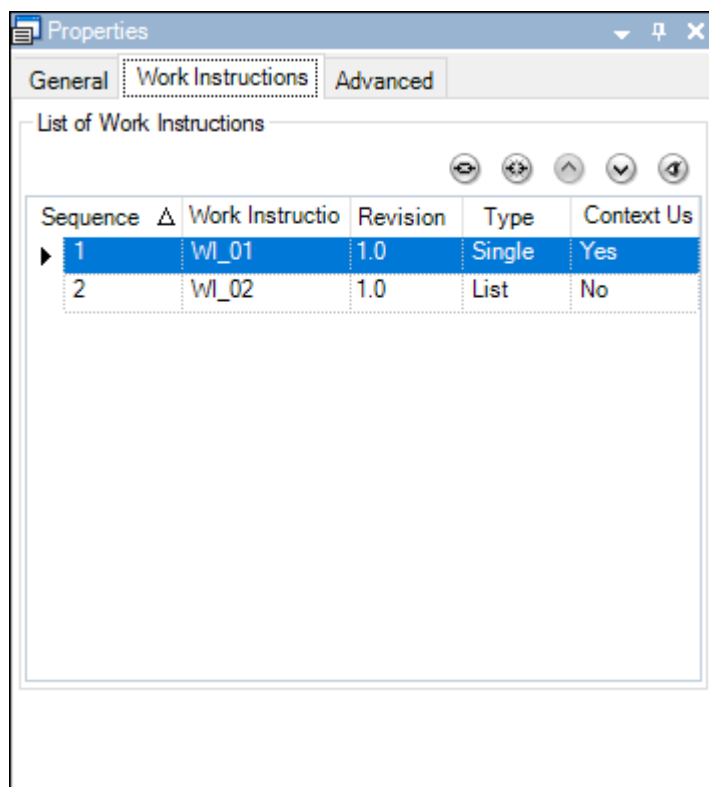

This tab lists all linked work instructions. Their order is specified in the **Sequence** column. The **Context Usage** column informs if the work instruction has the usage context linked:

- ▶ **No** – there is no usage context parameters defined.
- ▶ **Yes** – the usage context parameters are defined or the work instruction is of the list type and consists of work instructions with the linked usage context parameters.

If you link the operation to the process from which an execution order is exploded, the list of work instruction is visible in the **Execution Order** screen.

The status of the linked work instructions must be prototype or active.


Available Actions

- ▶ Double-click a work instruction to open the **Work Instruction Revision** browser (for dynamic

revision) or **Work Instruction Properties Editor** (for specific revision).

- ▶  – opens the **Add Work Instruction Wizard**, which lists available work instructions. Select one or more of them to link them to the operation.
- ▶  – removes the selected work instruction from the list.
- ▶  and  – changes the order in which the work instructions are defined.
- ▶  – displays a preview of all linked work instructions in a read-only pop-up window. You cannot perform any actions on them.

Advanced Tab

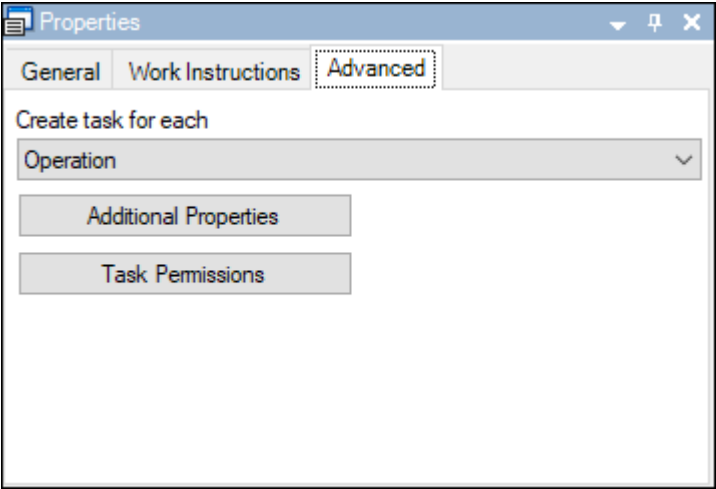

Field	Description
Create task for each	Task strategy type for process operation.
Additional properties	For more information, see Additional Properties Editor .
Task Permissions	Opens the Task Permissions window (see Task Permissions Tab).