

Step Properties

To Launch the Step Properties Tool Pane

1. Select a step in the **Entity Explorer** or in the navigation diagram.
2. Choose one of the following options:


▷ Choose **Properties** from the step navigation right-click menu.

▷ Use the **F4** keyboard shortcut.

▷ Click  (Properties) in the toolbar.

▷ Choose **Properties** from the **View** menu.

General Tab

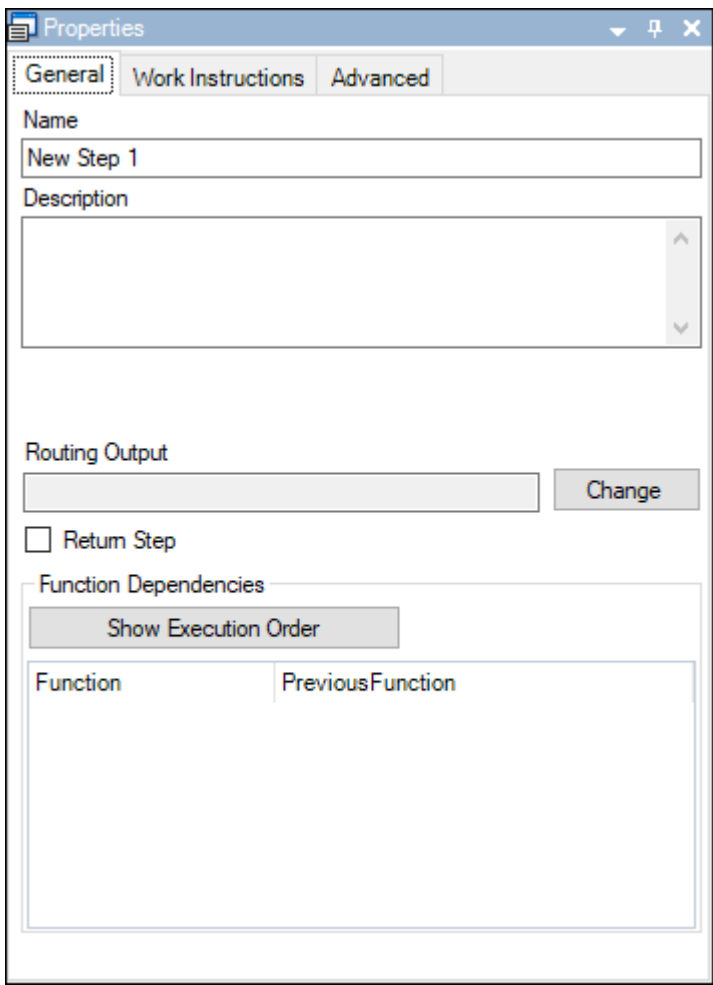



Field	Description
Name	The translated name of the step. The name can be up to 80 characters long.
Description	The textual description of the step.
Routing Output	Enables setting a function output that will be used as an output routing of a DFC step.
Return Step	When this check box is selected, it indicates that the step is in the step flow and should be considered when the "BACK" value is used in runtime.
Show Execution Order	This button analyzes the dependencies between functions within the step and shows the predicted order of execution. See Define Functions Dependencies.
Functions Dependencies	See Define Functions Dependencies.

Work Instructions Tab


Work instructions defined on the DFC level are visible at every step.

The settings of the **Display Mode** section are not supported in the **Screen Flows client mode**. In this case, use **Work Instructions** business control.

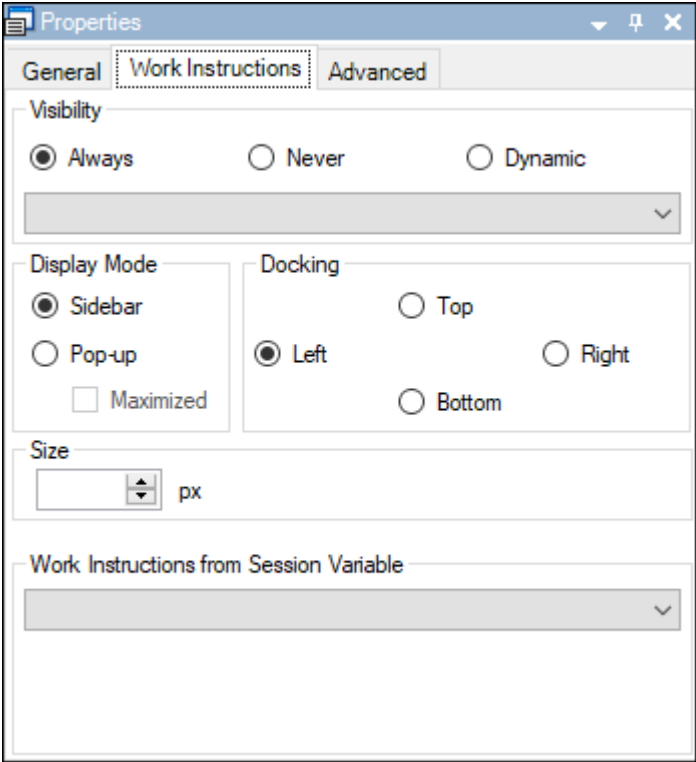

Field	Description
Visibility	The visibility options for work instructions: ▶ <i>Always</i> – work instructions are displayed in runtime. ▶ <i>Never</i> – work instructions are not displayed in runtime. This option is selected by default. ▶ <i>Dynamic</i> – the visibility of work instructions can be dynamically controlled by an indicated session variable of the Boolean type (if the session variable value is set to true, then the work instruction will be displayed). Work instructions in the cancelled or on hold status are not displayed in runtime. For more information, refer to Work Instructions Help.
Display Mode	The configuration of the appearance of the work instructions: ▶ <i>Sidebar</i> – work instructions are displayed in a sidebar panel that can be positioned at four different sides of the screen (in the Docking section).  ▶ <i>Pop-up</i> – work instructions are displayed in a pop-

up window (the **Show Work Instructions** button appears only if the *Pop-up* option is selected).



- ▷ *Maximized*
– if selected, the pop-up window is opened in a full-screen mode. The **Size** section is grayed out.


The display mode options are not available if the work instructions business control has been added to the step. You can change the default pop-up appearance and behavior in the `ficontrols.js` file (for more information, refer to the jqModal plugin documentation).

Use work instructions in the pop-up mode on devices such as smartphones or tablets.

Docking	The sidebar location of work instructions: top, left, bottom, and right. Available only if the <i>Sidebar</i> display mode option is selected. The docking options are not available if the work instructions business control has been added to the step.
Size	The size of the sidebar and pop-up window (width and

	height separately). If there is more than one size set (from step or DFC), the largest size is chosen. The minimum size that you can set is 100px. The size options are not available if the work instructions business control has been added to the step.
Work Instructions from Session Variable	The list of available session variable outputs (list of char type) defined as work instructions in all DFC steps. The session variable returns: a work instruction name or FUID of a specific work instruction revision.

Advanced Tab

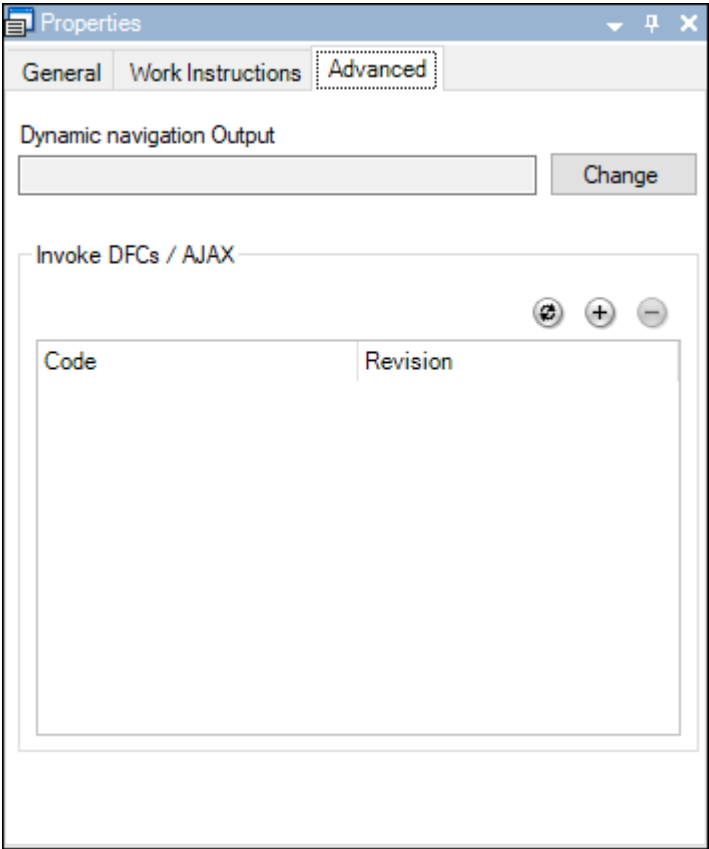

Field	Description
Dynamic Navigation Output	When set, this indicates that the dynamic navigation output should be used when navigating from the step. The output must be of the Char type. When you click Change , the system opens the window to choose an appropriate output. See Dynamic Navigation Between Steps .
Invoke DFCs / AJAX	Contains a list of DFCs that can be called asynchronously from the scripts. The invoked DFC revision must be unique. See Using AJAX .