



How to connect Main Station and IP Speaker

Title:	How to connect Main Station and IP Speaker	Version:	V1.2.30 build 241014	Date:	1/7/2025
Product:	Main Station: DS-KM9503, IP Speaker: DS-QAZ1307G1T-E(O-STD)(C)			Page:	1 of 3

Introduction

In certain scenarios, such as schools, prisons, etc., sometimes it is necessary for manager to use main station to broadcast shouting over IP Speaker. The following describes how to connect the main station and IP Speaker via standard SIP.

How to connect Main Station and IP Speaker

1. Enter IP Speaker’s web, **【Configure】** → **【SIP】** → **【SIP Registration】** , fill in the information and save. If it register to standard SIP successfully, the “Registration Status” will display as “Registered” .

HIKVISION

SIP Registration SIP Call

Enable ☒

SIP Account

* User Account 1005

* Password

* Display Name 1005

SIP Server

* Server Address 10.9.96.248

* Server Port 5060


* Registration Expiration 3600 S

Registration Status Registered [Refresh](#)


Save

Title:	How to connect Main Station and IP Speaker	Version:	V1.2.30 build 241014	Date:	1/7/2025
Product:	Main Station: DS-KM9503, IP Speaker: DS-QAZ1307G1T-E(O-STD)(C)			Page:	2 of 3

2. Enter main station's web, **【Configuration】** → **【Device Access】** → **【VoIP】**, fill in the information and save. If it register to standard SIP successfully, the “Register Status” will display as “Registered”.

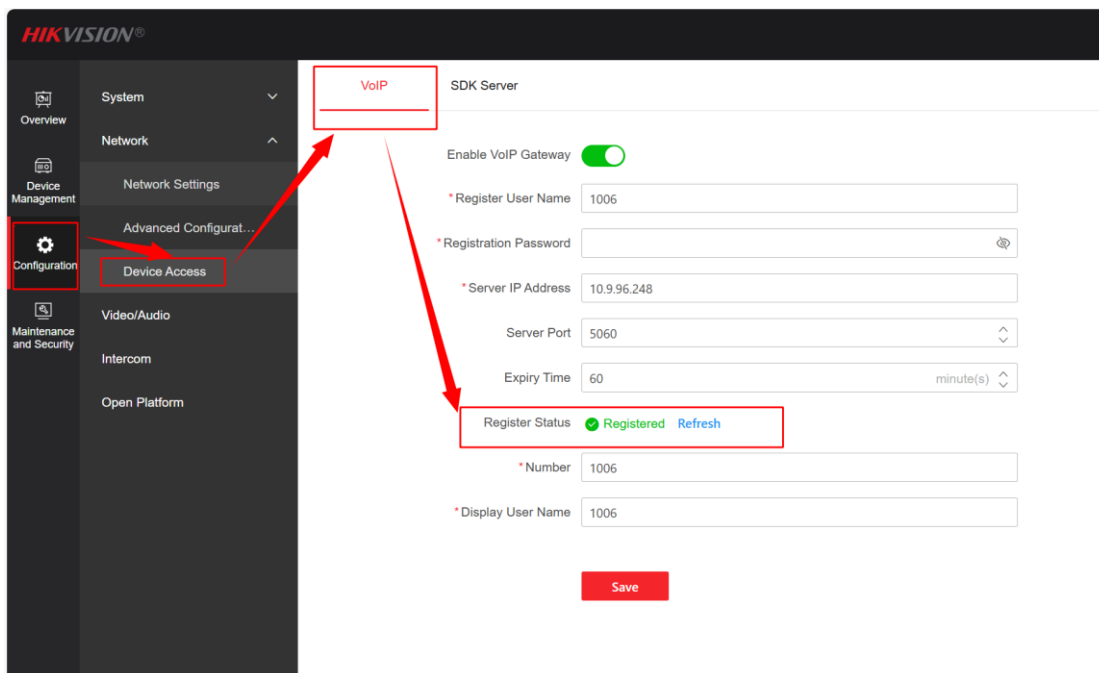



3. Enter main station's web, **【Configuration】** → **【Intercom】** → **【Call Settings】**, you can configure the “Max. Communication Time”. This time is set to 90 seconds by default, so when the main station starts broadcasting over the IP Speaker, it can only last 90 seconds and then ends automatically. This time can be set to a maximum of 1800 seconds.

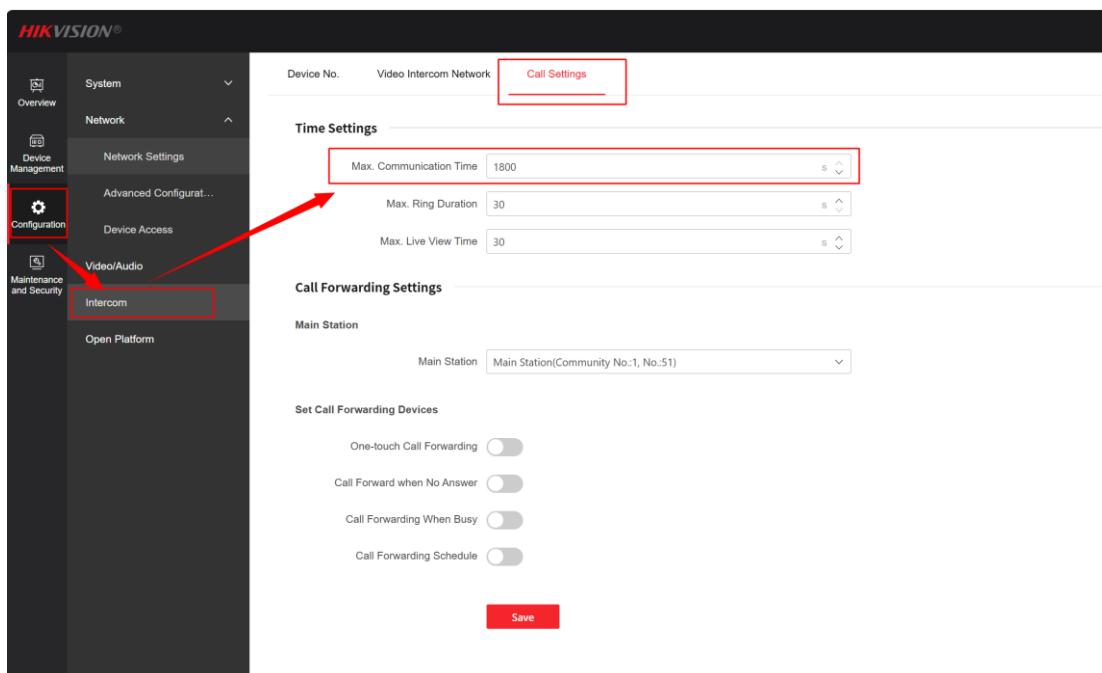

Title:	How to connect Main Station and IP Speaker	Version:	V1.2.30 build 241014	Date:	1/7/2025
Product:	Main Station: DS-KM9503, IP Speaker: DS-QAZ1307G1T-E(O-STD)(C)			Page:	3 of 3

4. After the two devices are register to standard SIP successfully, main station can call IP Speaker via VoIP and start broadcast shouting.

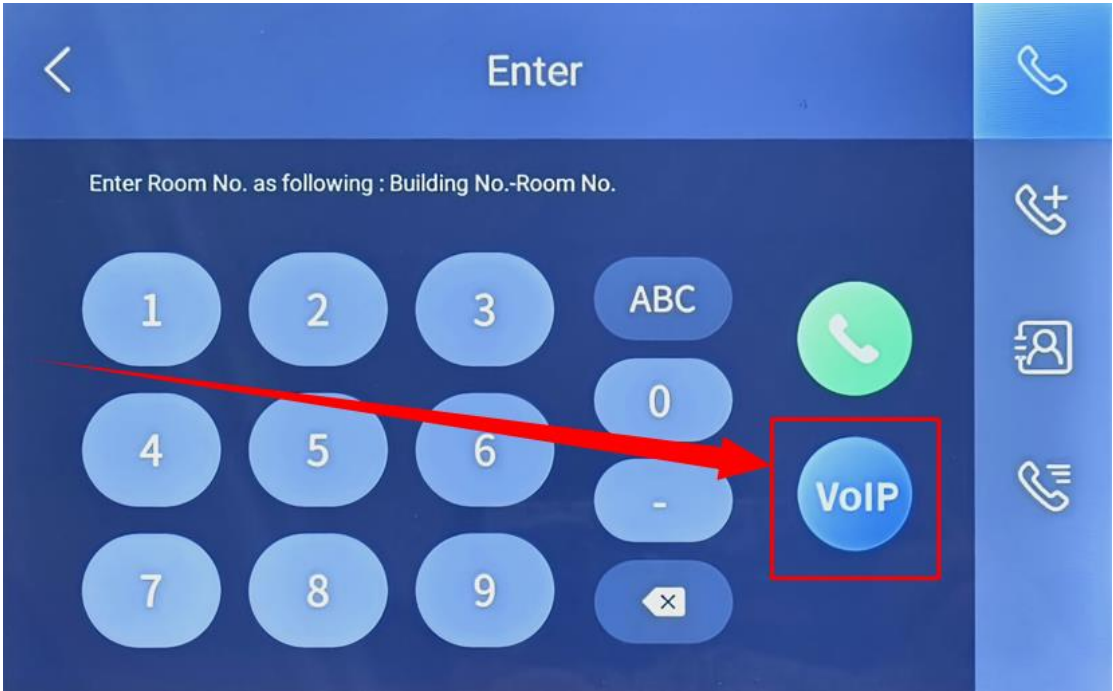

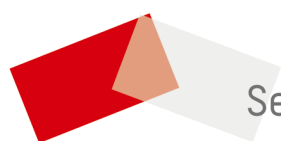

See Far, Go Further