


HOW TO

Connect External Alarm Output to a DVR

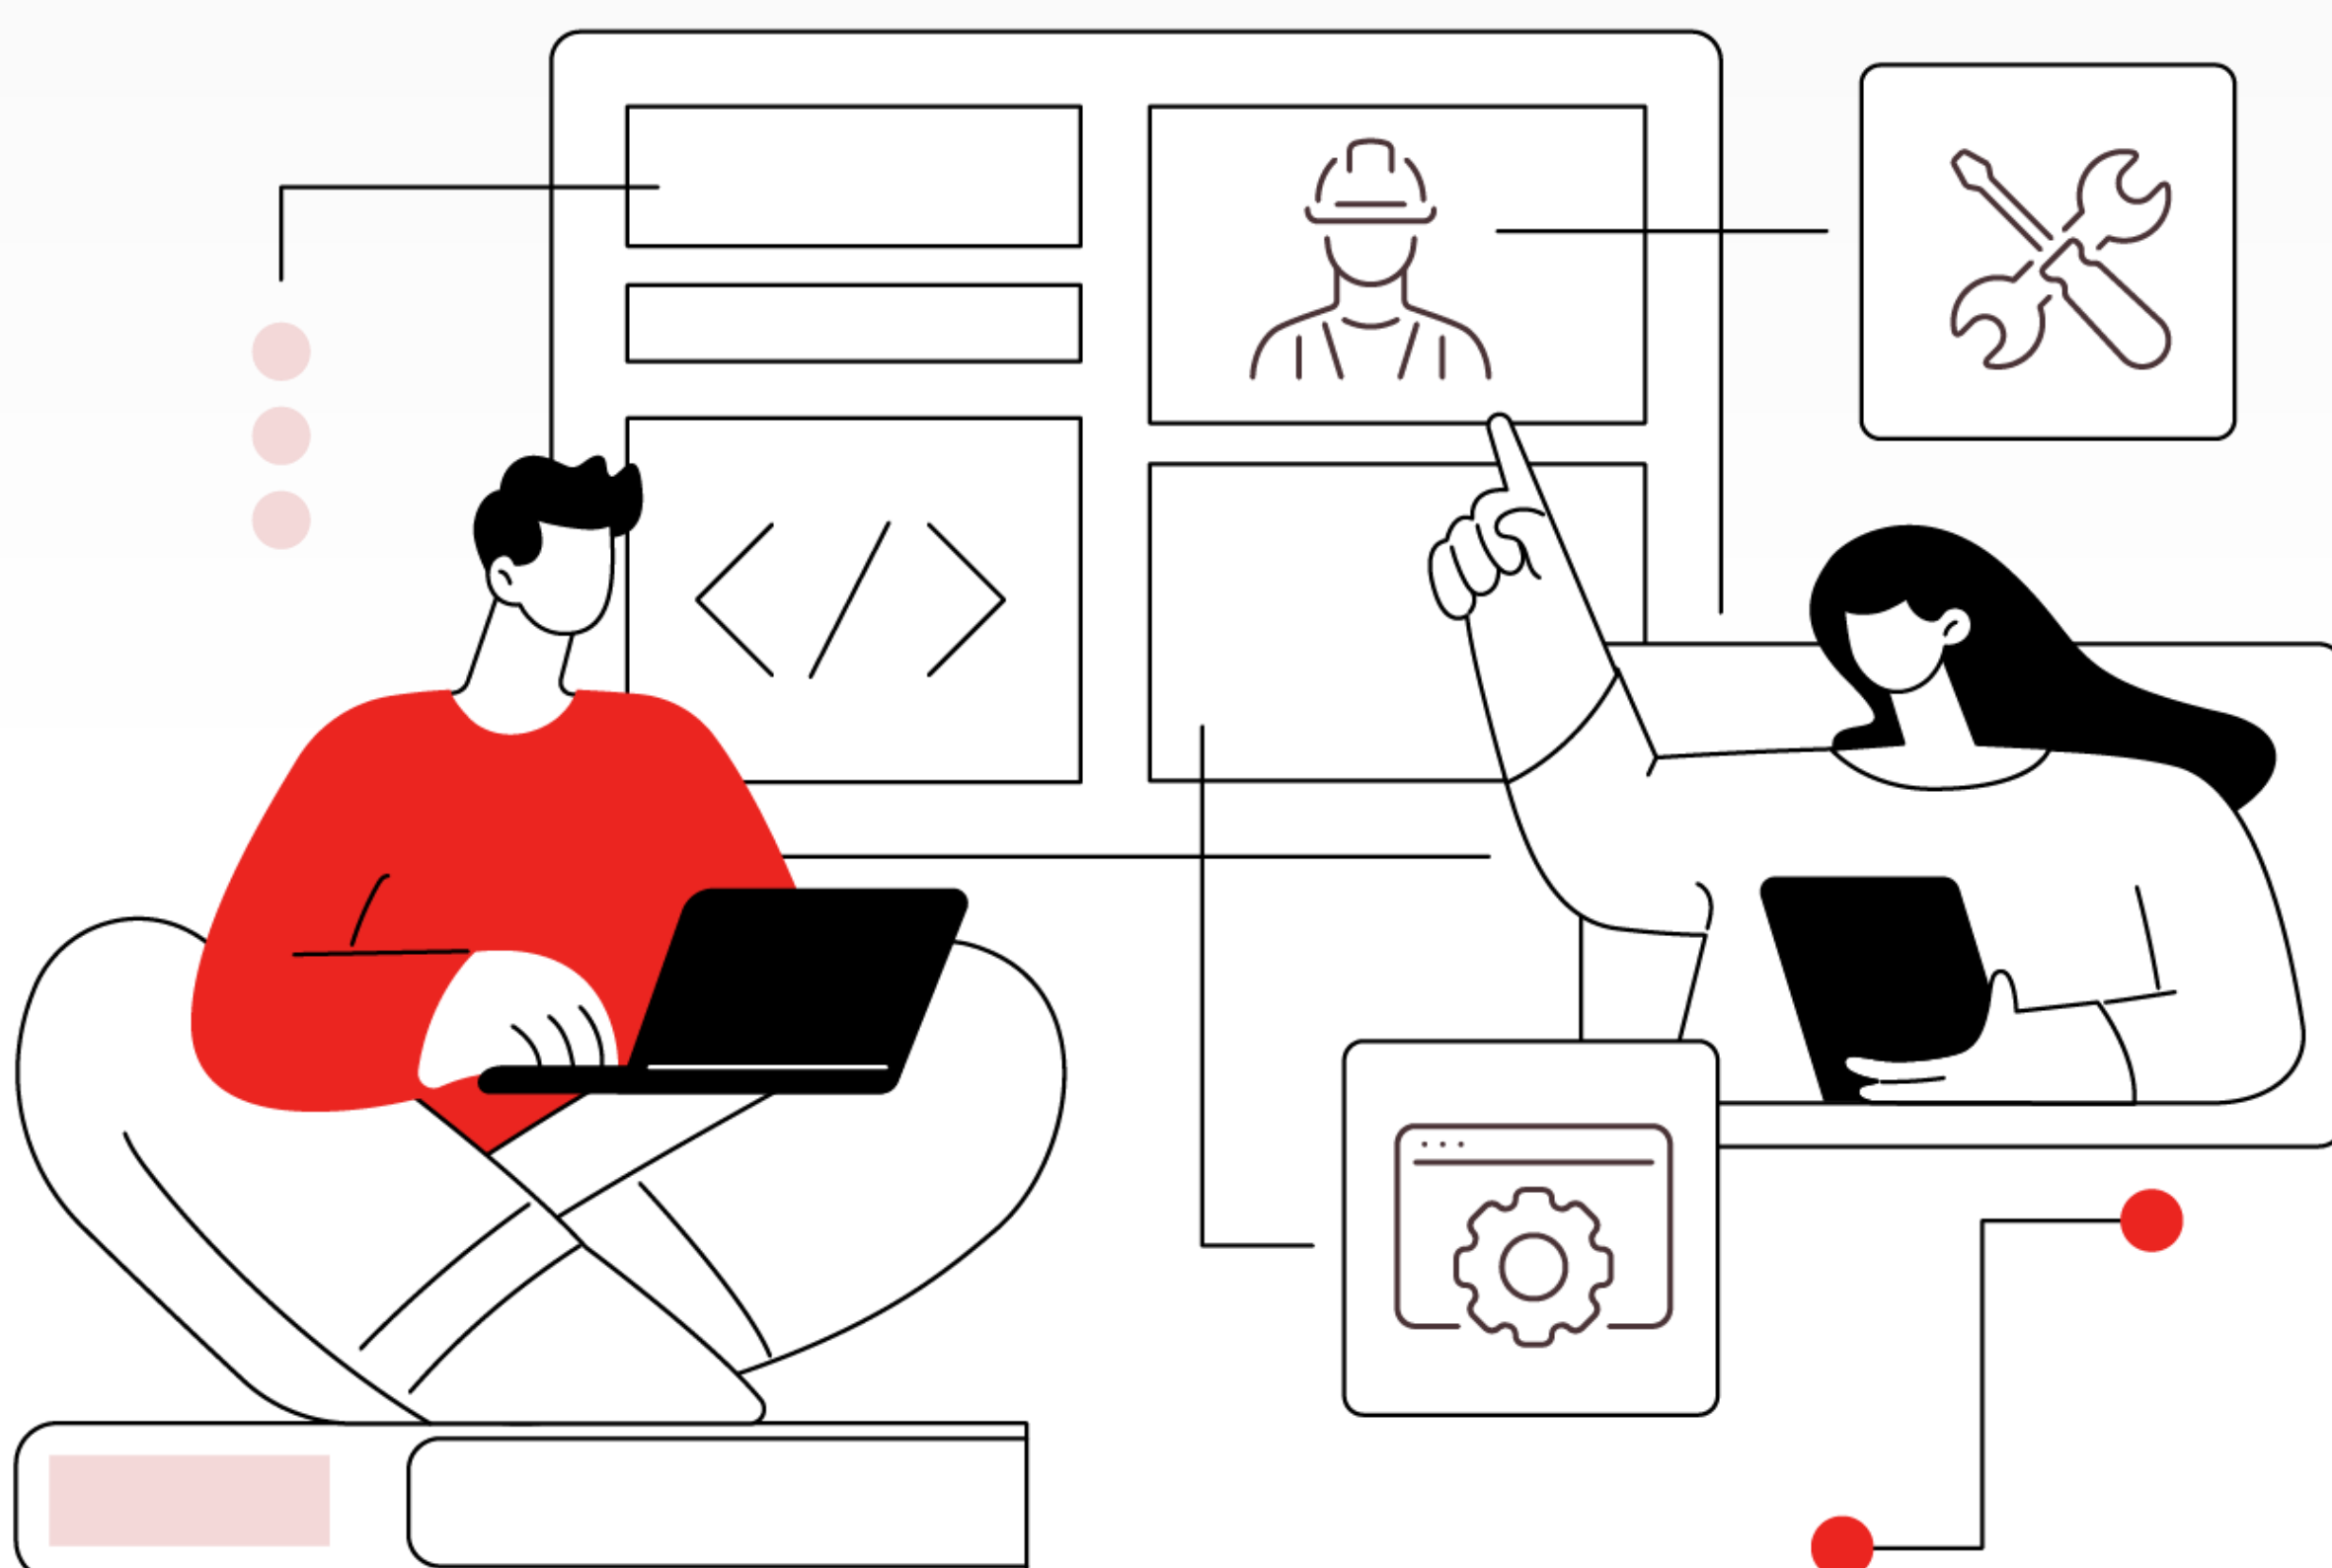


Note: Alarm output interface can be used to connect external alarm devices. When there is an alarm trigger, the alarm output device can be activated.

Alarm output device powered by direct current (DC).

Step 1: Connect the alarm output interface of the recorder to the negative terminal of the external alarm output device.


Step 2: Connect the positive terminal of the external alarm output device to the positive terminal of the power source.

Step 3: Connect the negative terminal of the power source to the GND (ground) of the recorder.

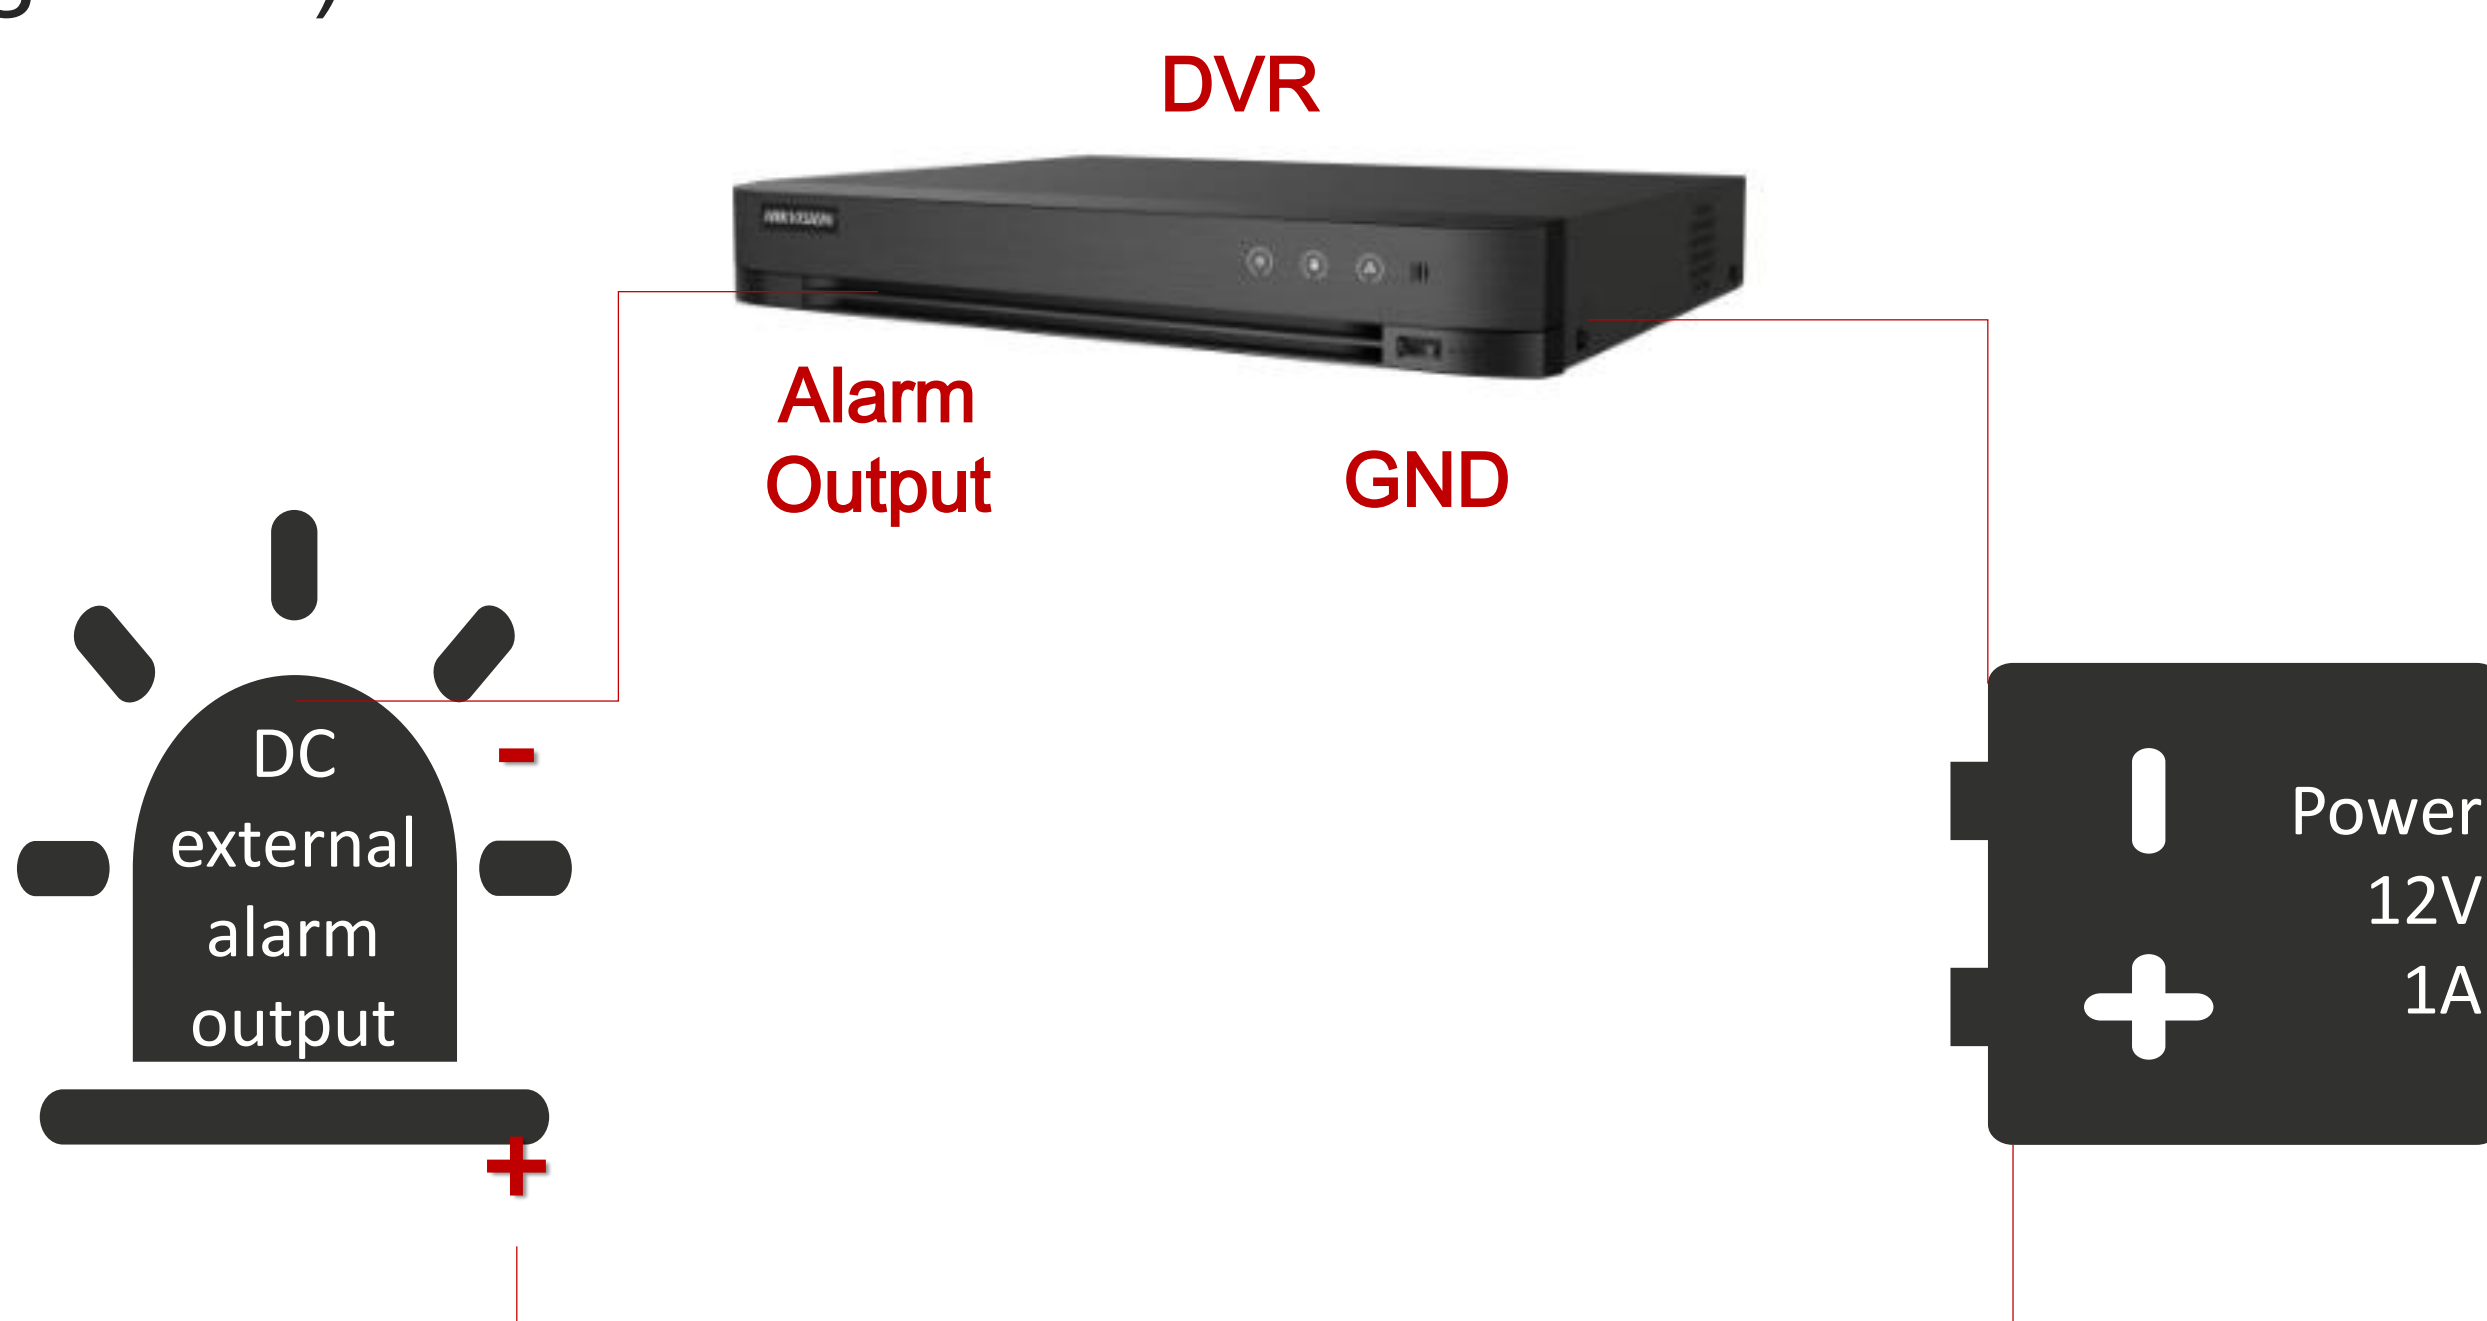

Alarm output device powered by alternating current (AC).

If the alarm output device is powered by AC, disconnect all short connectors on the main board (JPA1, JPA2, etc.)

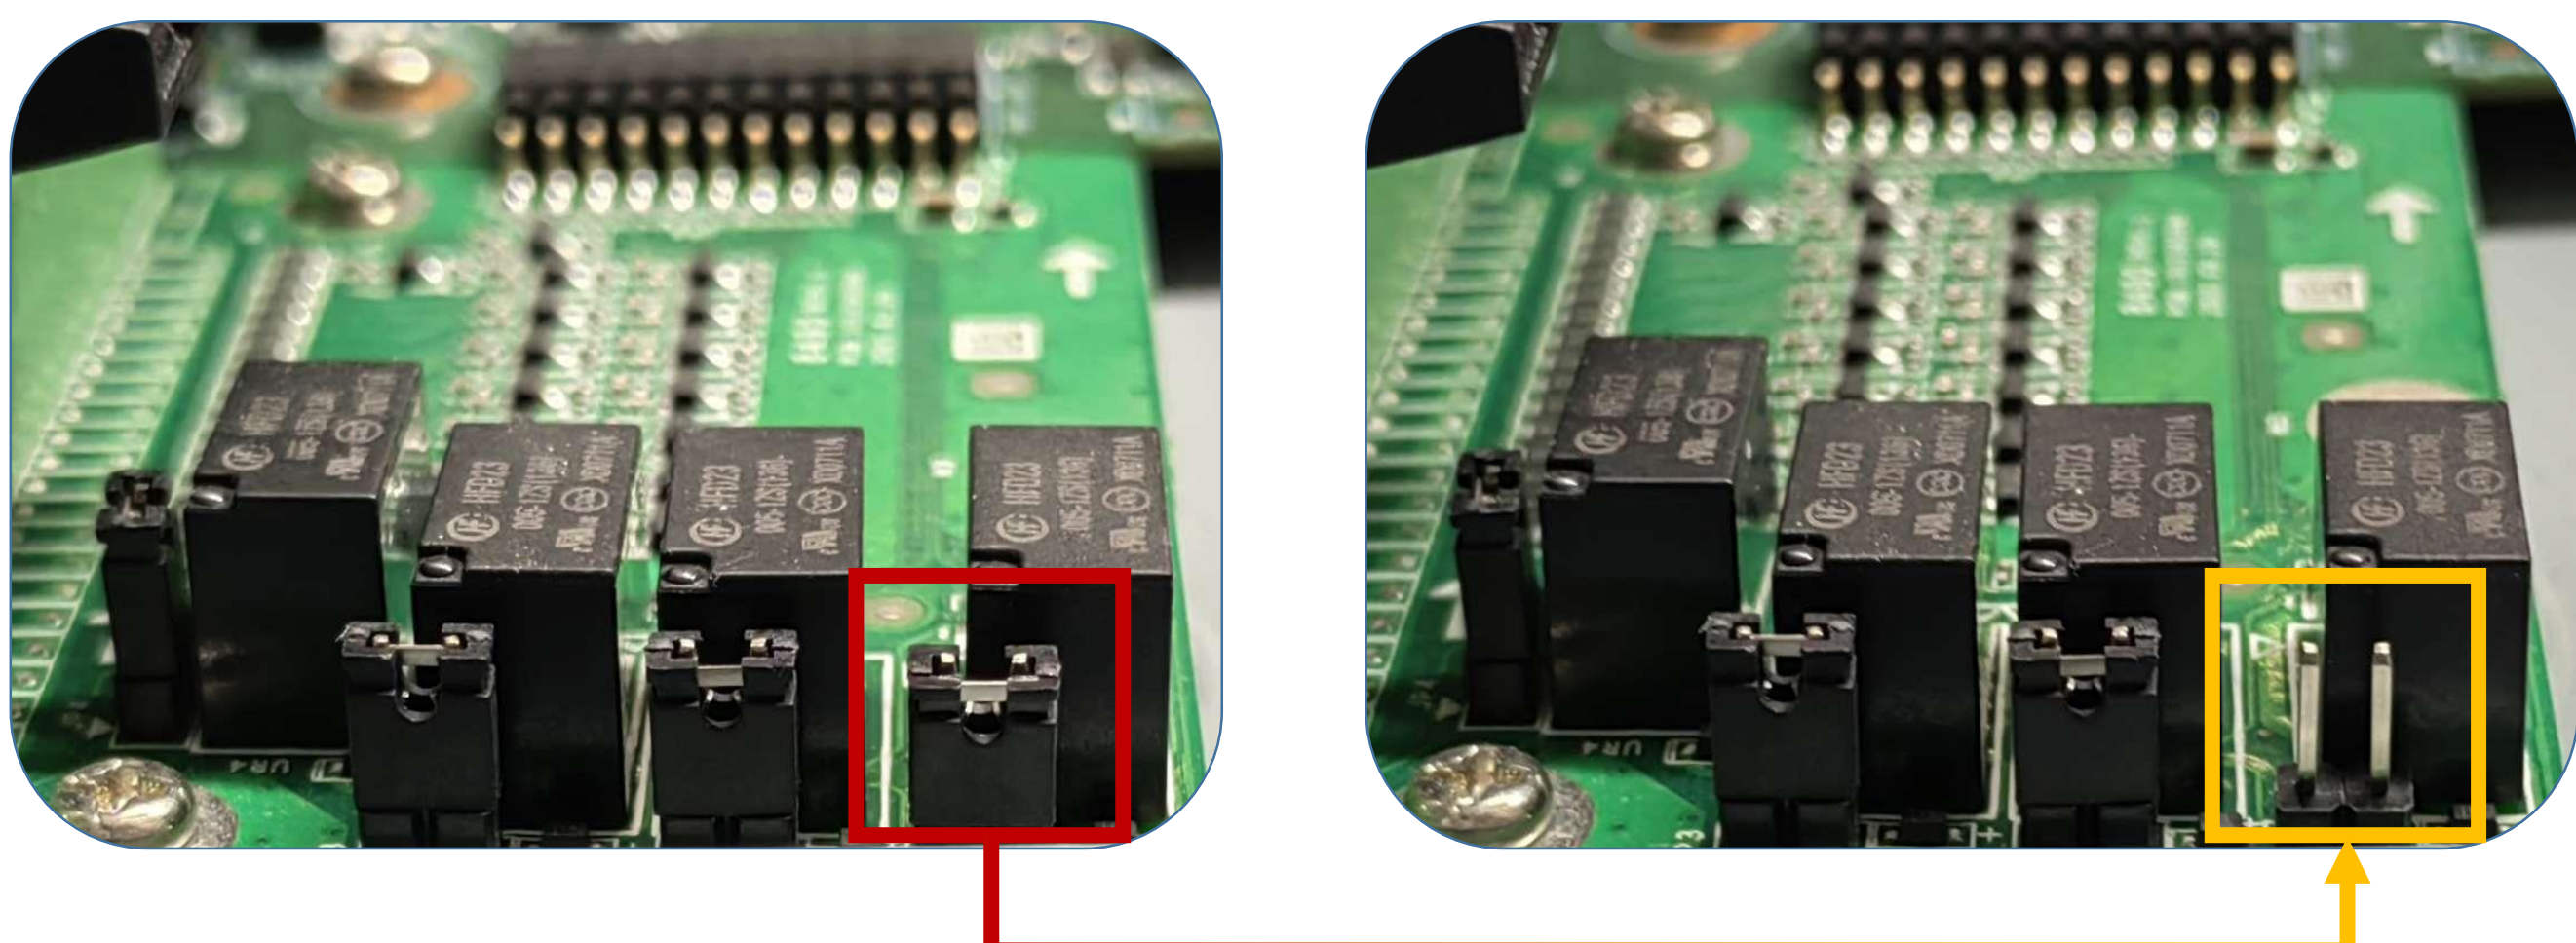

The connection between the recorder's alarm output interface and the external alarm output device requires an external relay.

