


Card · color = outline · 5V amber / 12V red / GND green · Inverted L/R · FSM EC 2005 · OEM · not a service manual

pin # top · wire code bottom · border = wire · red = bench · Inverted L/R

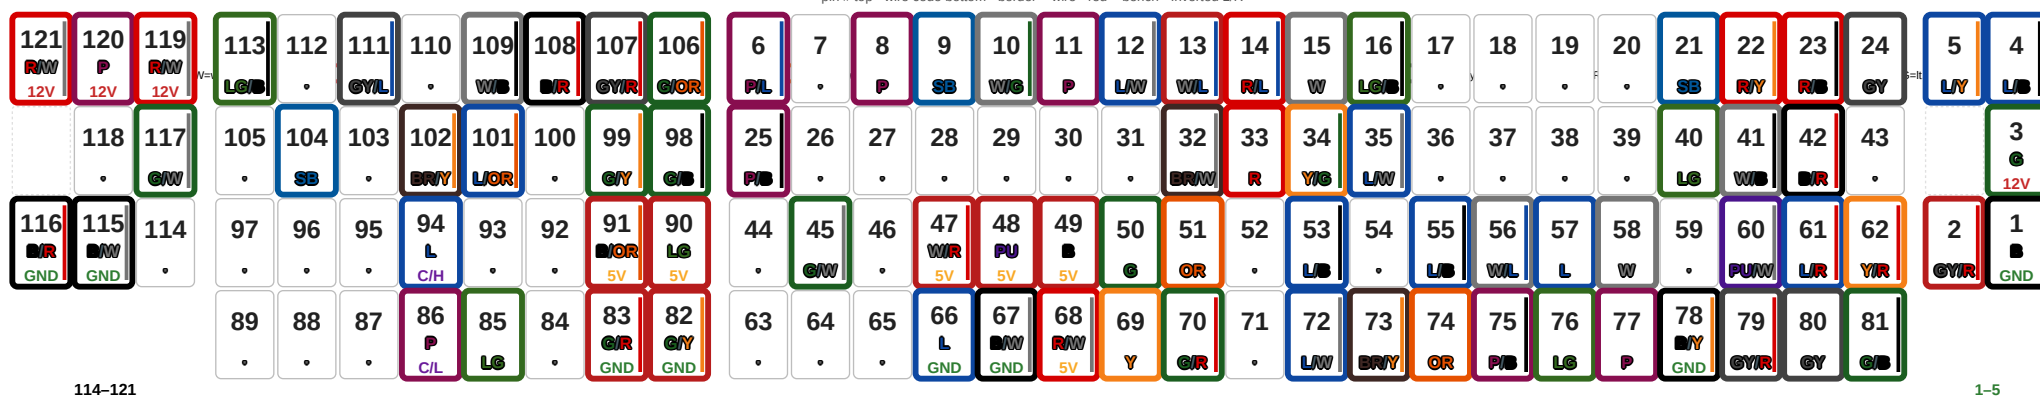

82-113

6-81

pin border = wire color · FSM EC-123

12V	BATT 121=R/W (E108-68G → F102-5H) · IGN 119=R/W · IGN 120=P · VMOT 3 (E8-42)
5V	47 TPS/ETC · 48 EVAP · 49 A/C press · 68 PSP · 90 APP1 · 91 APP2 (separate rails, not one shared 5V)
GND	ECM 1=B · 115=B/W · 116=B/R (→F103-3/2/4→F152) · SNS 66/67/78/82/83 · signals: KNK15 · CKP13 · CAN 86/94 · Afh 2/24


SMJ · PG-85 · 46 cavities · A/T = automatic only; 28H PNP · 23H START (EC-644); empty on M/T (EC-646)

SMJ



control harness $\leftrightarrow$ body · 1H-29H + stub



PATH A/F + HO2S · sensors → E12■F3 (heaters / power) → ECM · heaters ECM 2 / 24

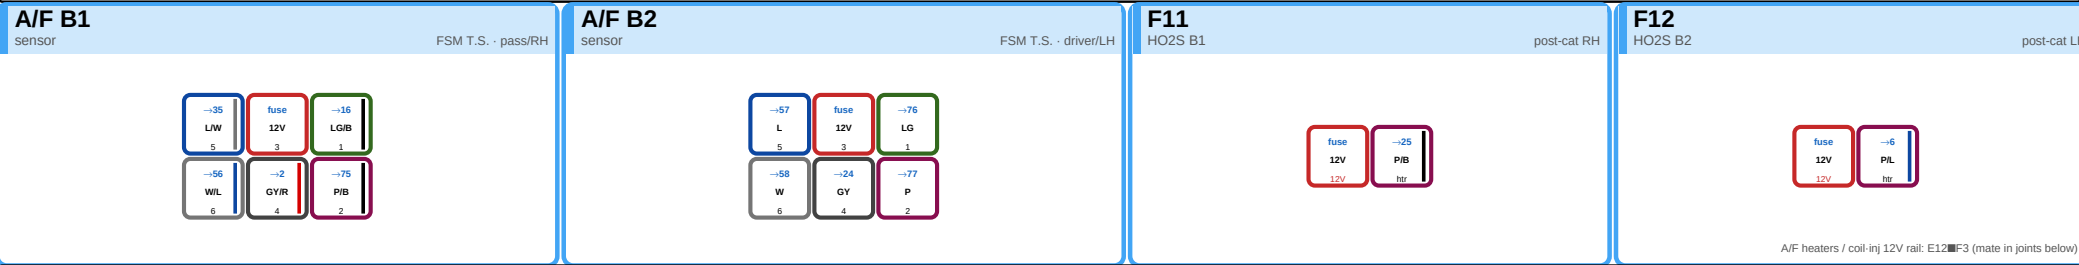

PATH Knock · sensor → F14/F229 → ECM 15 · shield → B/R 116 → F103-4 → F152 · other motor sensors (direct → ECM)

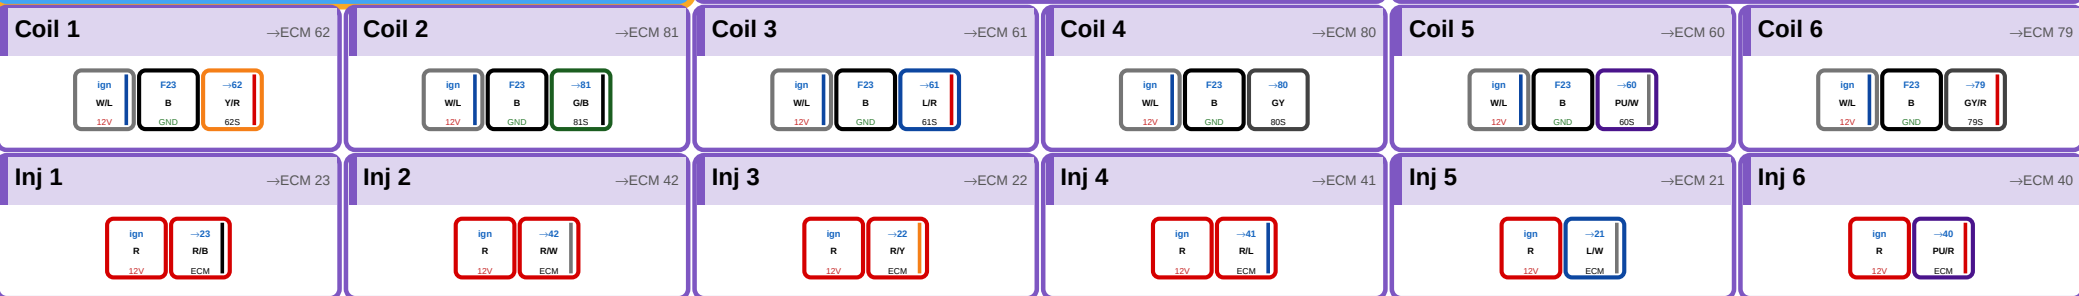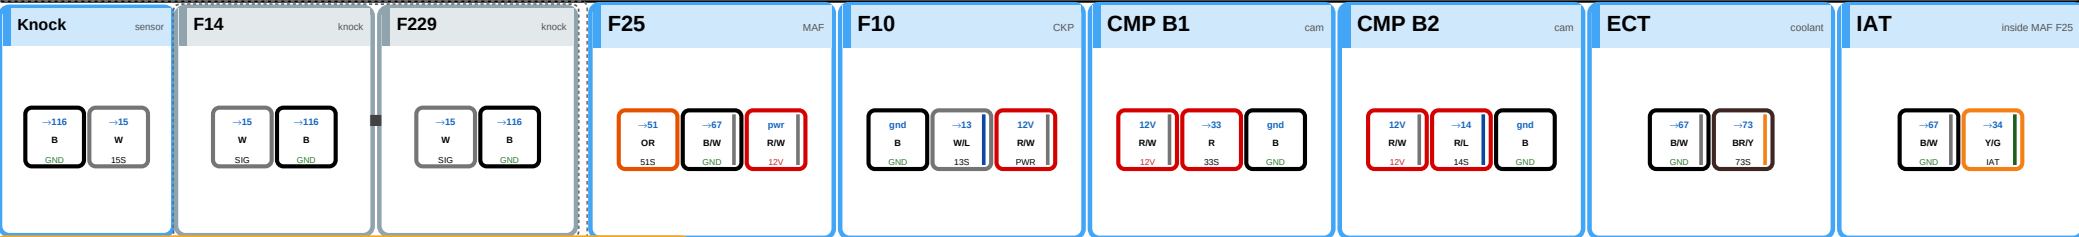

Motor joints · F103/gnd4 → F152 (·1→F3-6→E17) · Ign condenser · SNS GND · E12■F3 · E10■F1 (battery tray)

