

2005 Nissan 350Z VQ35DE — エンジンハーネス印刷パック

ベンチ上のモータ制御ハーネス（F系列）・ ECM MEC61-510 ・ 2ページ: EC-123+カード
カード ・ 色=外形 ・ 5V琥珀 / 12V赤 / GND緑 ・ 左右反転 ・ FSM EC 2005 ・ OEM ・ 整備書の代用不可

1 ・ EC-123 反転 — MEC61-510 ・ （表紙と同じシート）

ピン番号上 ・ ワイヤコード下 ・ 枠=ワイヤ ・ 赤=ベンチ ・ 左右反転



82 - 113

6-81

ECMレール ・ モジュールから出る線（エンジンハーネス）

ピン枠=ワイヤ色 ・ FSM EC-123


- 12V BATT 121=R/W (E108・68G→F102・5H) ・ IGN 119=R/W ・ IGN 120=P ・ VMOT 3 (E8・42)
- 5V 47 TPS/ETC ・ 48 EVAP ・ 49 A/C圧 ・ 68 PSP ・ 90 APP1 ・ 91 APP2 （個別レール、共有5Vではない）
- GND ECM 1=B ・ 115=B/W ・ 116=B/R (→F103・3/2/4→F152) ・ SNS 66/67/78/82/83 ・ 信号: KNK15 ・ CKP13 ・ CAN 86/94 ・ AFh 2/24

F102 ・ SMJ (ENGINE CONTROL HARNESS ・ PG-85) ・ 非反転 ・ ハーネスのモータ側

SMJ ・ PG-85 ・ 46 キャビティ ・ A/T = ATのみ: 28H PNP ・ 23H START (EC-644)、M/Tでは空 (EC-646)

F102
SMJ

制御ハーネス ↔ ボディ ・ 1H - 29H + stub 30H - 46H

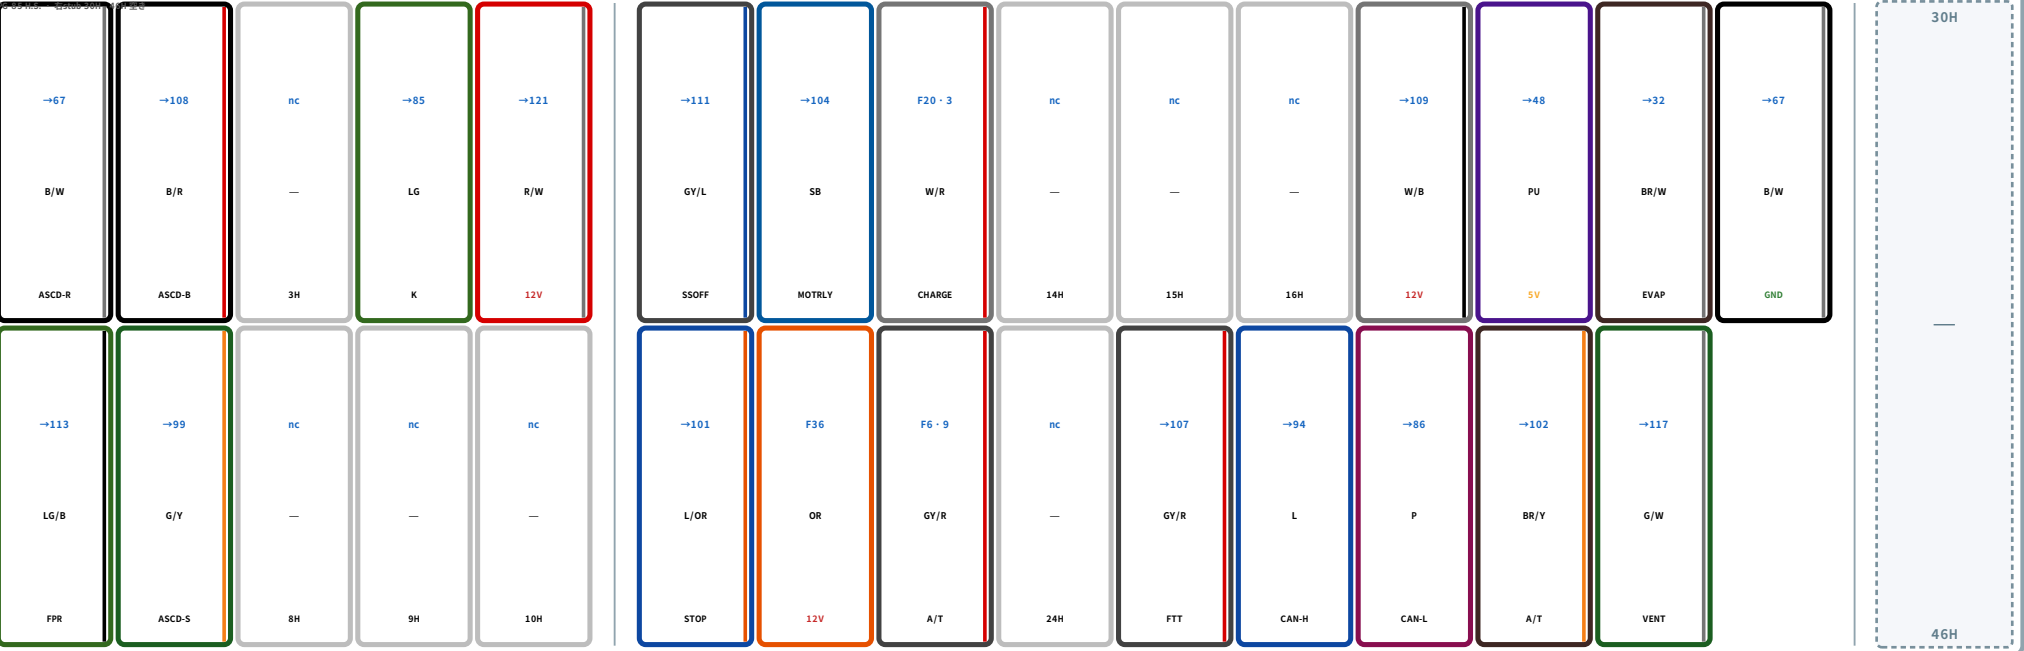

F12

HO2S B2

ポストキャット L



A/Fヒータ コイル・インジェ12Vレール: E12 F3 (下のジョイントでメイト)

Diagram illustrating the connection of the IAT sensor. The IAT sensor (orange box) has pins for Y/G and IAT. The B/W sensor (black box) has pins for B/W and GND. The IAT pin is connected to the Y/G pin.

VTC B2

吸気

吸気力ム LH・→ECM 10

ign
W/L
12V

→10
W/G
ECM

コイル6 → ECM 79

The diagram shows three rectangular boxes representing components of Coil 6. The first box on the left is labeled 'ign' and 'W/L' with '12V' at the bottom. The middle box is labeled 'F23' and 'B' with 'GND' at the bottom. The third box on the right is labeled '→79' and 'GV/R' with '79S' at the bottom.

インジェ6 →ECM 40

ign R 12V	→40 PU/R ECM
-----------------	--------------------

The diagram shows a sensor network (SNS) with three nodes. Each node is represented by a box containing the letter 'B' and a numerical value. The nodes are connected to a common ground labeled 'センサアース' (Sensor Ground). The values for the three nodes are 78, 67, and 66.

Node Label	Value
B	78
B	67
B	66

F1

トレイ

9-pin GY ・ START ・ REV Y/R

E4・3 B/Y 12V	E7・26 Y/R 12V	JB・15A R/B 12V	nc — 4	→49 B 5V
nc — 6	nc — 7	→67 B/W GND	→70 G/R SIG	