


Card · color = outline · 5V amber / 12V red / GND green · Inverted L/R · FSM EC 2005 · OEM · not a service manual

pin # top · wire code bottom · border = wire · red = bench · Inverted L/R

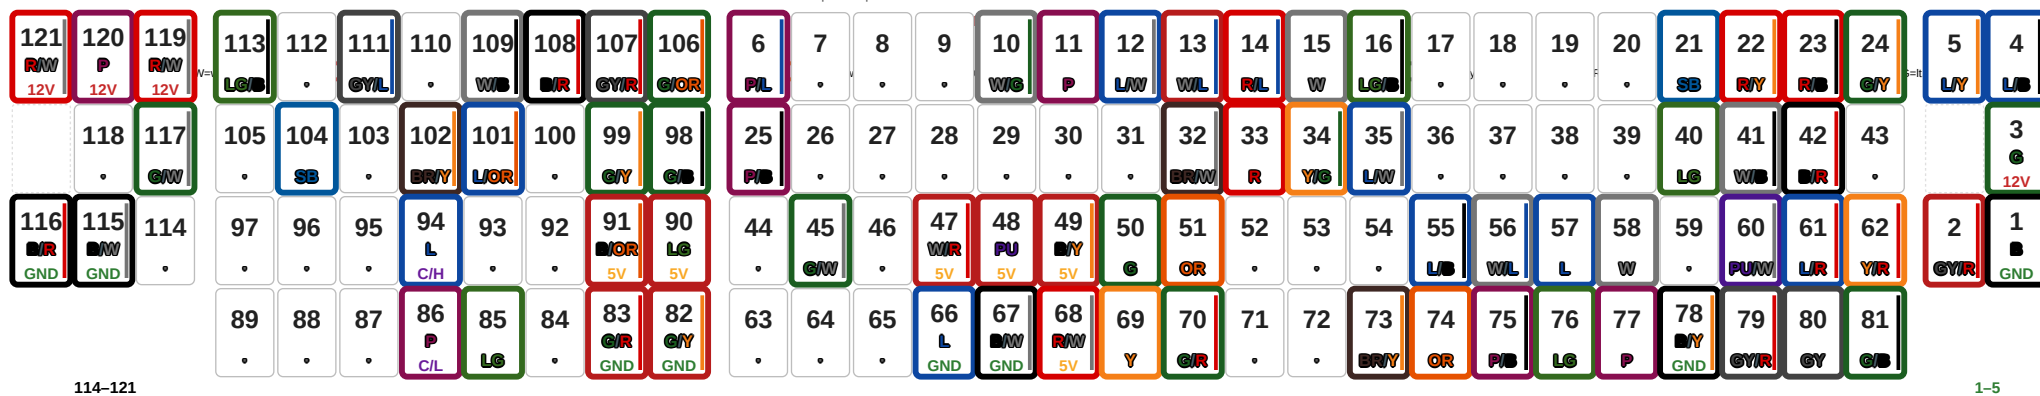

82-113

6-81

pin border = wire color · FSM EC-123

12V	BATT 121=R/W (E108-68G → F102-5H) · IGN 119=R/W · IGN 120=P · VMOT 3 (E8-42)
5V	47 TPS/ETC · 48 EVAP · 49 A/C press · 68 PSP · 90 APP1 · 91 APP2 (separate rails, not one shared 5V)
GND	ECM 1=B · 115=B/W · 116=B/R (→F103/E17) · SNS 66/67/78/82/83 · signals: KNK15 · CKP13 · CAN 86/94 · Afh 2/24


F102 · SMJ (ENGINE CONTROL HARNESS · PG-85) · not inverted · motor face of harness

SMJ · PG-85 · 46 cavities


F102

SMJ



control harness $\leftrightarrow$ body · 1H–29H + stub

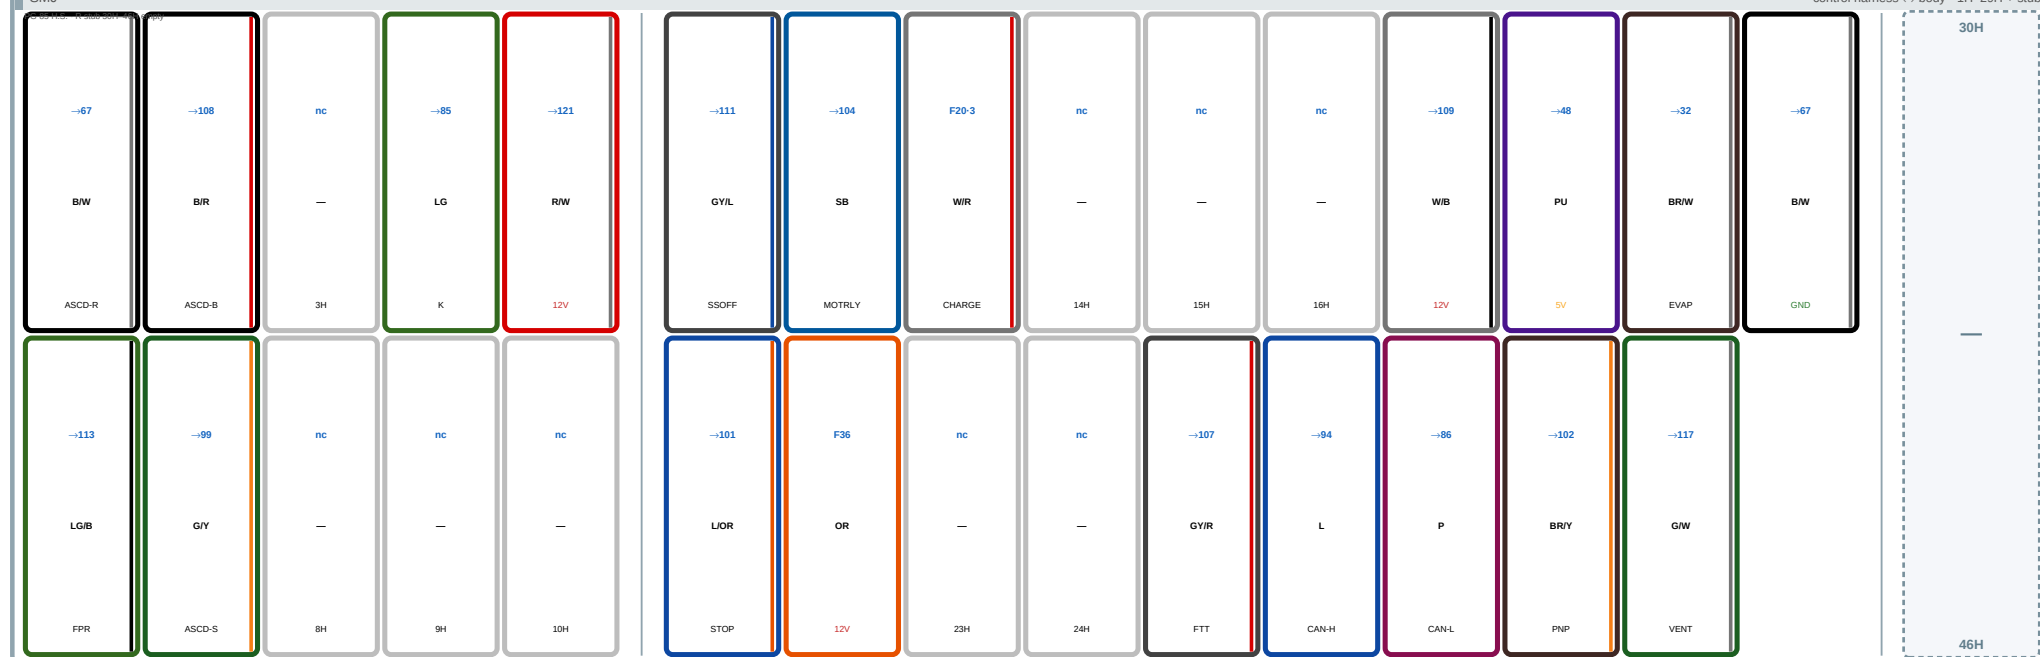

PATH A/F + HO2S · sensors → E12■F3 (heaters / power) → ECM · heaters ECM 2 / 24

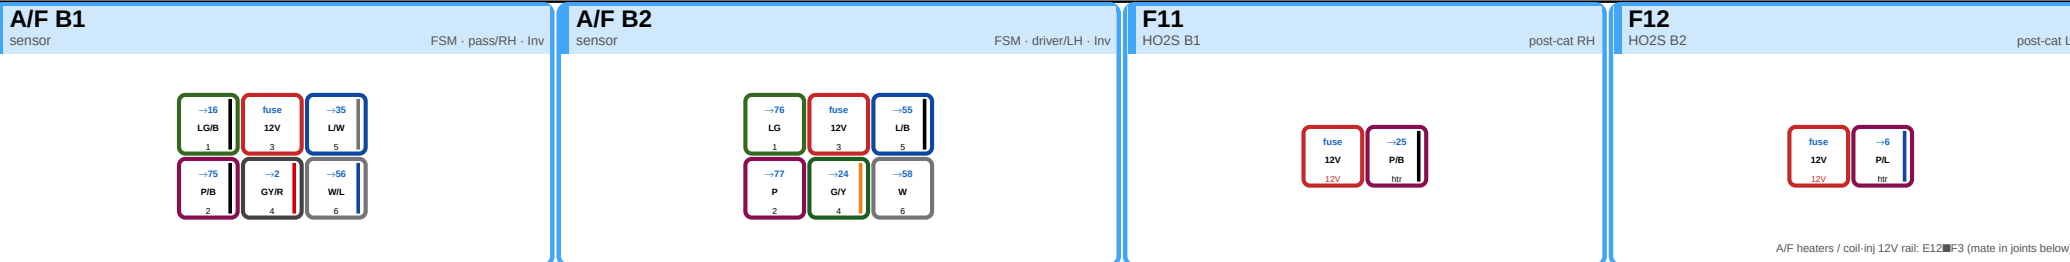

PATH Knock · sensor → F14/F229 → ECM 15 / GND 116 · other motor sensors (direct → ECM)

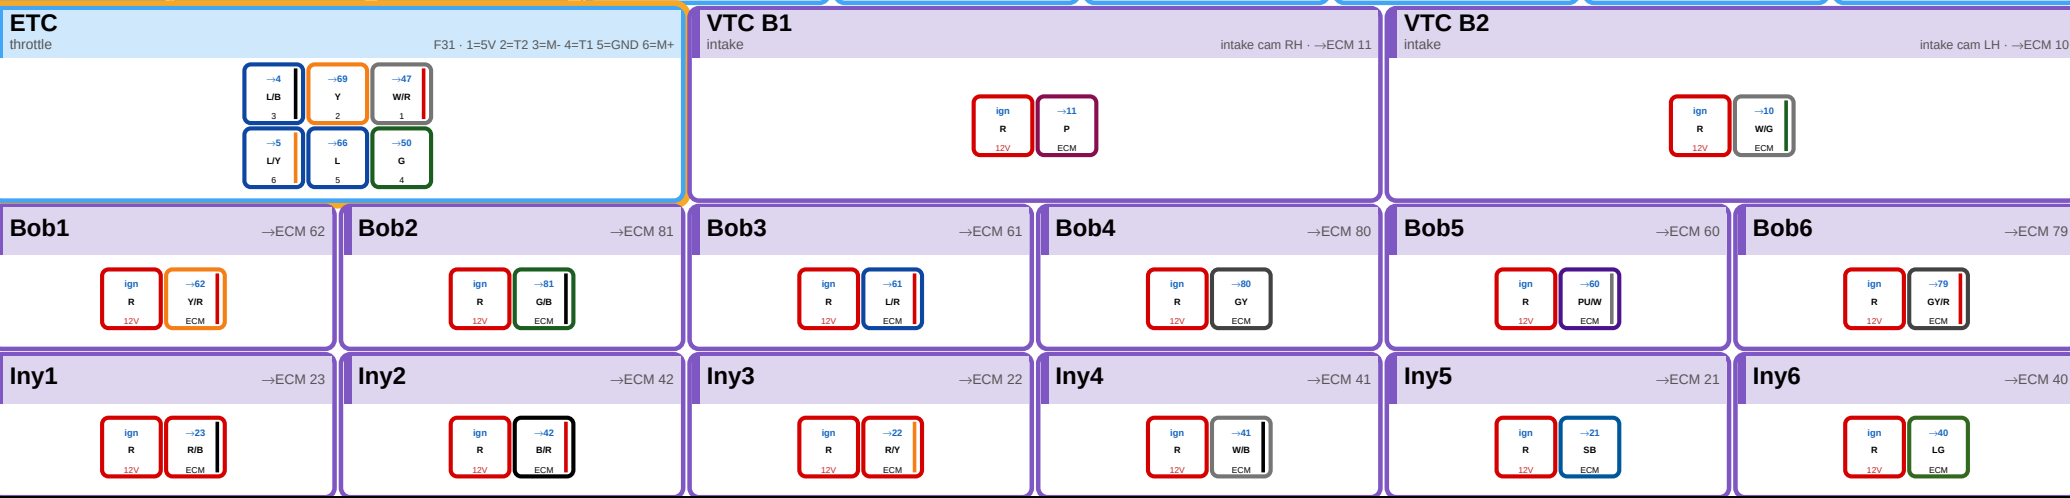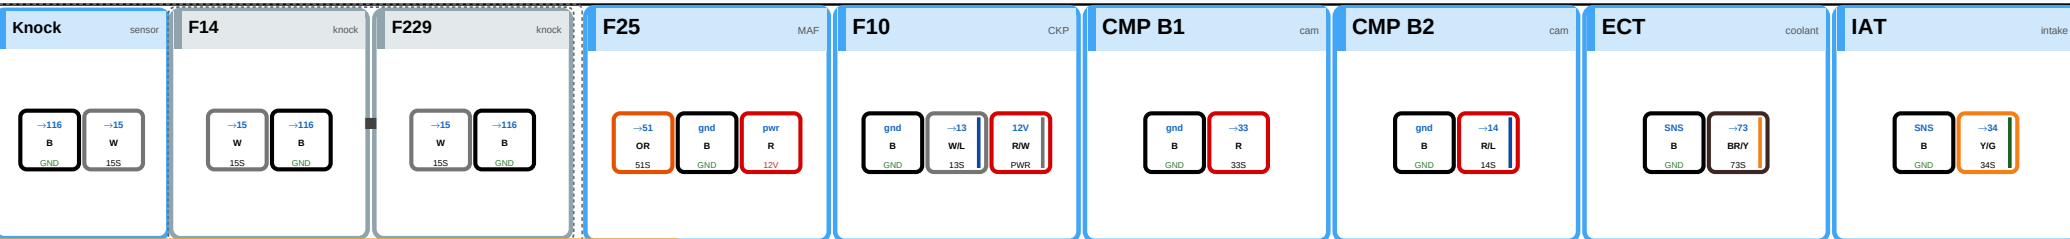

Motor joints · F103/gnd4 → E17 · Ign condenser · SNS GND · E12■F3 · E10■F1 (battery tray)

