BTF-01 慢充慢放 ☒冷型 1 路三元☒☒☒池充放一体☒☒☒ 不可☒内阻，不能☒磷酸☒☒


The BTF-01 battery tester cannot measure internal resistance or lithium iron phosphate

Quick Start Guide


1、Power on and select language.




2、Loading battery

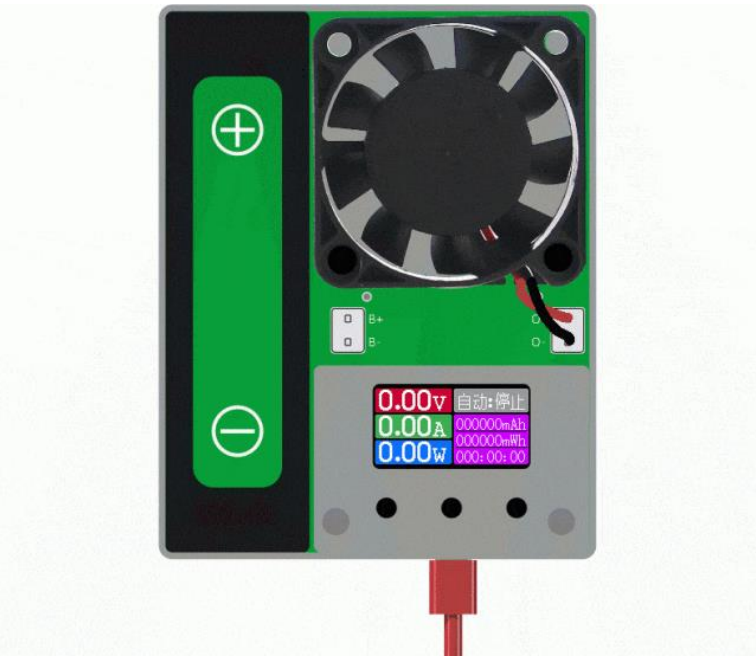

3、Select the corresponding function button as needed to start the program

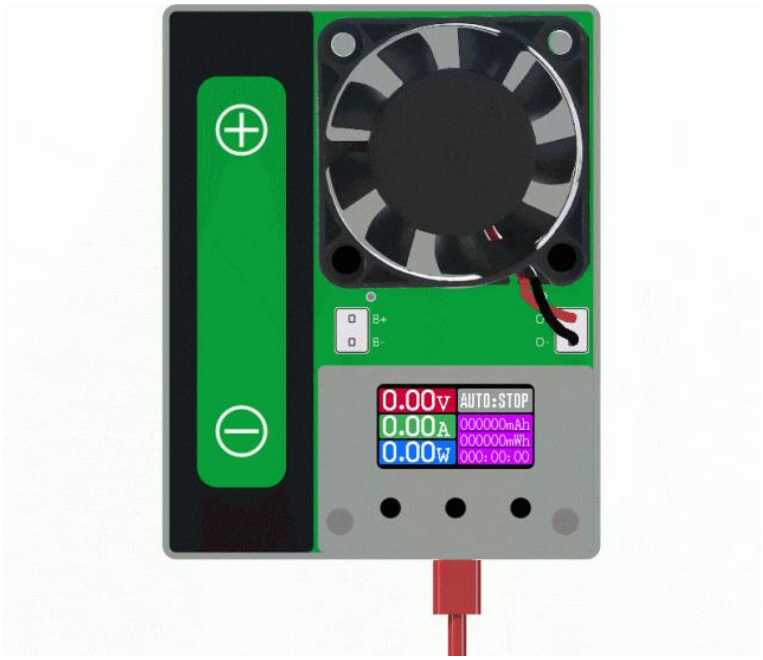

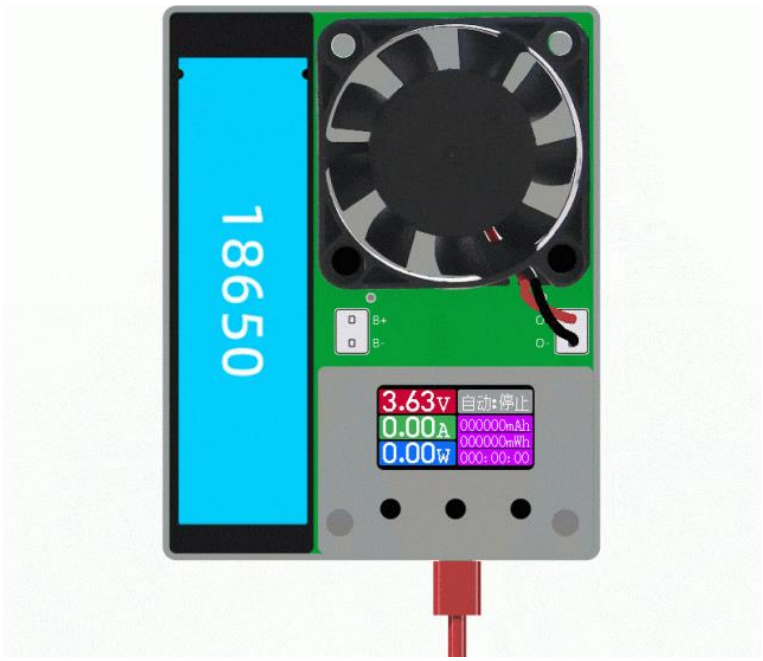

4、Wait for the program to finish running and check the test results.



Important Notes Before Use

*Damaged or leaking batteries must not be tested.

*Ensure correct battery polarity during testing.

*The charging chip is designed specifically for ternary lithium batteries (4056 chip) and **does not support** lithium iron phosphate (LiFePO4) battery charging.

*The product does not include a power adapter. Please use a high-quality 5V charger for power. Low-quality chargers increase the risk of high-voltage chip breakdown.

Tutorial Contents

1.Technical Specifications

2.Hardware Overview

3.Interface Introduction

4.Physical Product Display

5.Usage Instructions

1.Technical Specifications

Working voltage: DC5V

Applicable battery: Li(NiCoMn)O2 ；not supported， LiFePO4

Power supply interface: Type-C power supply interface

(Self provided mobile phone charging and Type-C data cable power supply)

System language: Chinese, English

Supporting batteries: 18650 battery, reserved XH2.54-2P testing interface

Number of channels: 1 channel for charging and discharging measurement

Internal resistance measurement: not supported

Charging function: Supports, automatically cuts off charging when fully charged

Charging voltage: Charging voltage is 4.2V, controlled by 4056 chip. The maximum charging current

on the right battery holder is about 0.5A, and charging stops when the charging current is less than 0.05A.

Discharge function: supported, automatically stops when conditions are met,

The discharge current is not adjustable

Load mode: Fan load, discharge blowing without heating


Discharge current: Approximately 0.2A Non constant current, non adjustable, can increase discharge resistance on its own

Automatic charging and discharging: supported

Status prompt: Support

Product size: 65 × 83 × 32mm

2.Hardware Overview

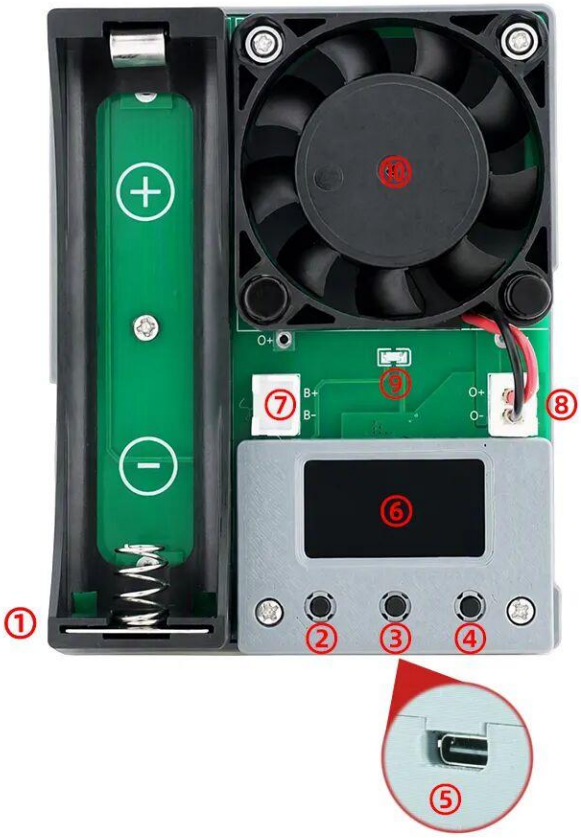

□ 18650 test battery compartment

□ Charging/CHG button

□ Discharge/DSG button

□ Auto/AUTO button

□ Type-C power supply port

□ 0.96-inch IPS display screen

□ XH2.54-2P test interface

□ Load fan interface

□ Work status indicator light

□ Load fan

Note: □nd □cannot be used for testing simultaneously.

3、Interface Introduction



▲ Standby Interface



1. Real time voltage

2. Real time current

3. Real time power


4. Working mode

5. Running status

6. Capacity

7. Energy

8. Running time

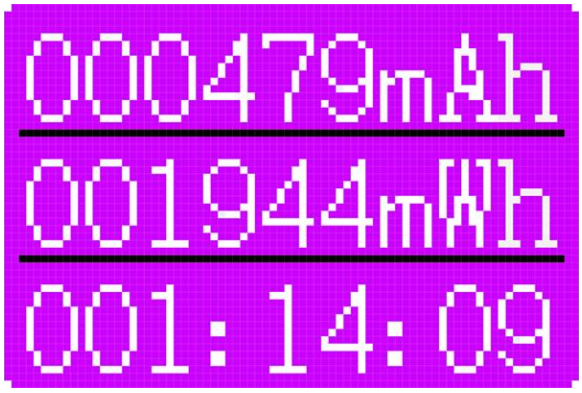

▲ Capacity/Energy Value Display/Cumulative Run Time

4、Physical Product Display



△正面/△ Front



△背面/△ Back




5、Usage Instructions

The following demonstrations are animated tutorials, not actual product demos.

Check battery polarity during installation. If no voltage is detected and the program won't run, first verify the battery orientation is correct.

5.1、Power On/Off

The device powers on automatically when the working battery is installed for the first time or when 5V power is connected.

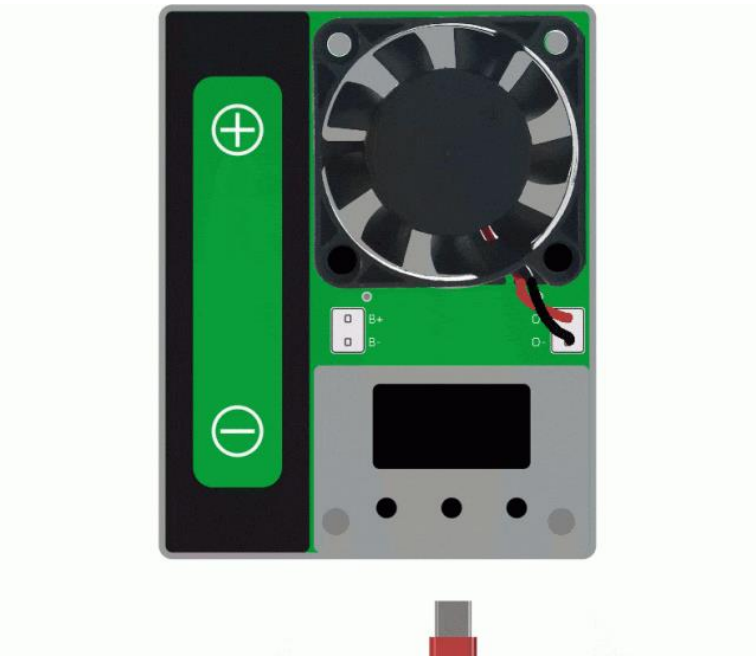

5.2、Switch Language

On the startup screen, click the "放⊠ DSG" button to switch between Chinese/English interfaces. The system defaults to the last used setting.




5.3、Display Flip


In standby mode, long press the "充☒/CHG" button to flip the display.



5.4、Install the tested battery

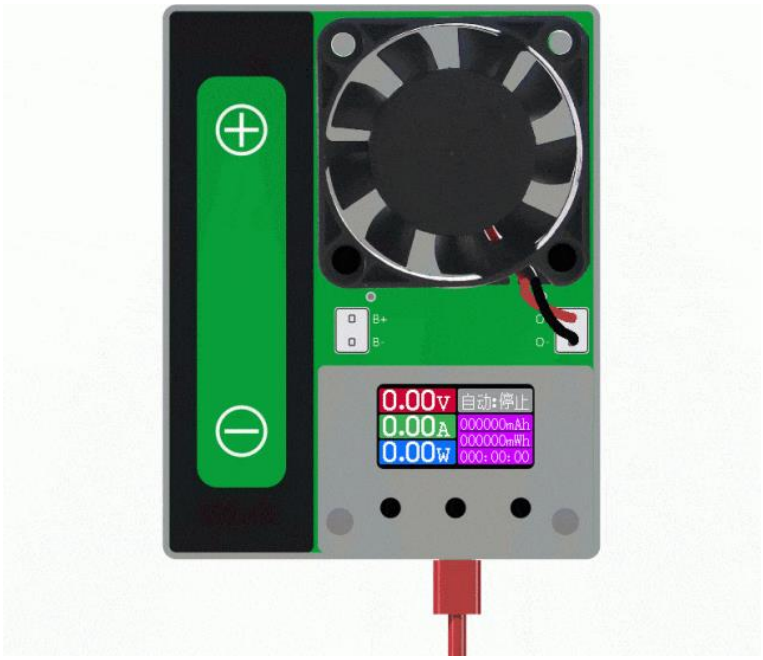

5.5、Button Introduction

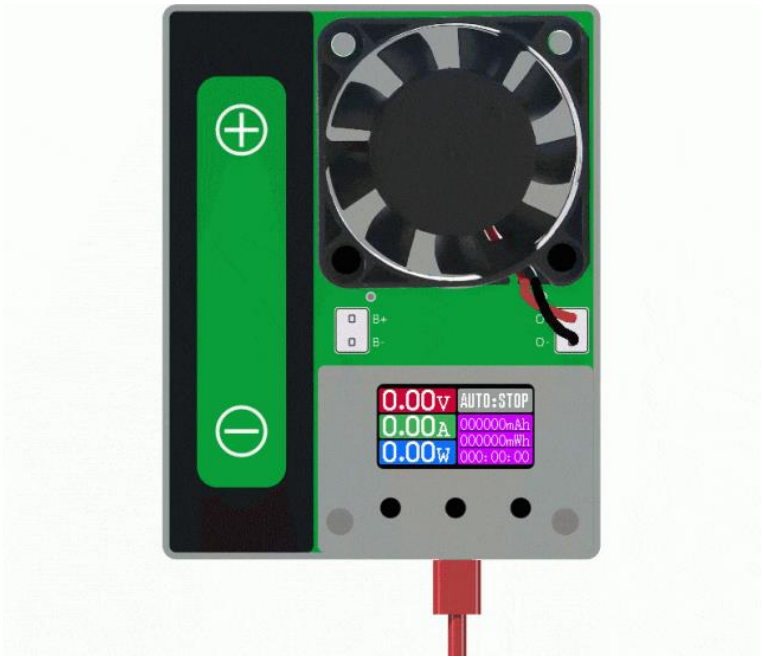

5.6、Low Voltage Protection（LVP）


Reverse installation or undervoltage state of the battery will trigger low voltage protection, and the program cannot run. After troubleshooting, click any key to clear the fault code before it can run normally.



5.7、Charge Mode（CHG）


Click on '充☒/CHG' to run the charging mode. The charging voltage is fixed at 4.2V, the upper limit of the current is about 0.5A, and the charging current is less than 0.05A to complete the charging. After charging, the battery voltage may be less than 4.2V; when using the XH2.54-2P terminal to test a wired

battery, the longer the wire, the greater the wire resistance, and the farther the battery voltage is from 4.2V after stopping charging.

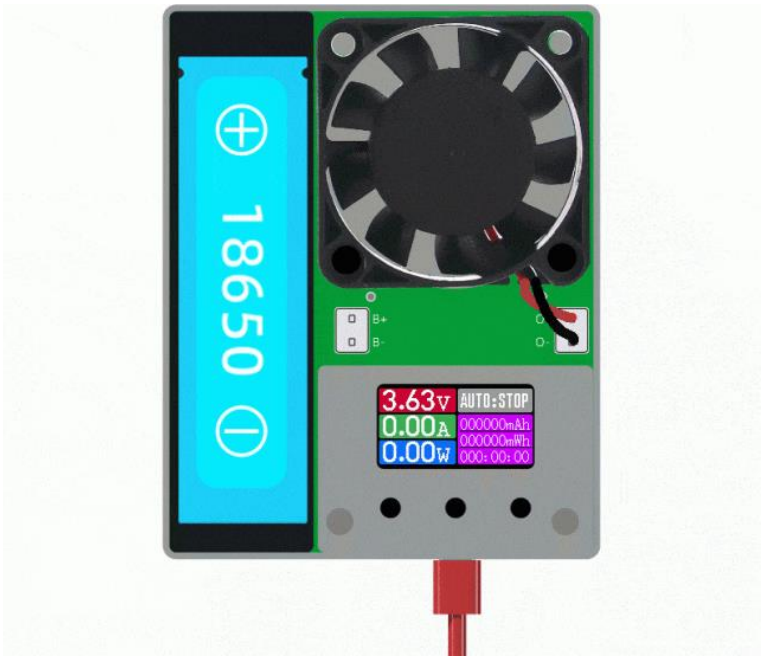

5.8、Discharge Mode（DSG）

Click on '放⊠/CHG' to run the discharge mode. The discharge stop is fixed at 2.75V and cannot be adjusted. The fan load current is about 0.2A. When the load voltage is less than 2.75V, the discharge stops. After stopping, the no-load voltage will rise, and the screen display voltage will be greater than 2.75V. The longer the stop time, the higher the voltage rise.

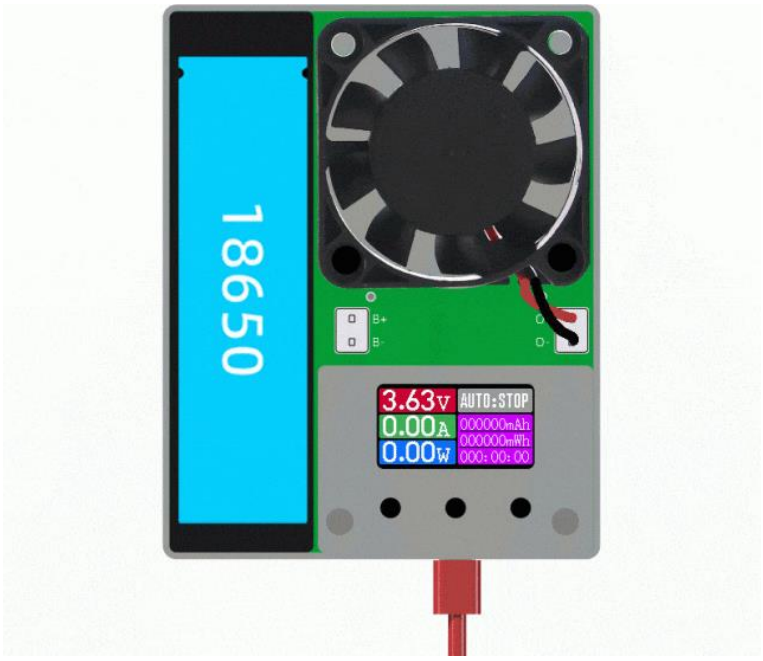


5.9、Auto Mode (AUTO)


Click the 'Auto/AUTO' button to run in automatic mode. The steps for automatic mode are as follows

Process: Charge~ Rest ~Discharge ~Rest ~Charge to Full~ END.

After the charging program is completed, record and display the capacity and energy of the discharge process, as well as the entire running time of the testing program. After completion, the battery voltage may be less than 4.2V; when using the XH2.54-2P terminal to test a wired battery, the longer the wire, the greater the wire resistance, and the farther the battery voltage is from 4.2V after stopping charging.

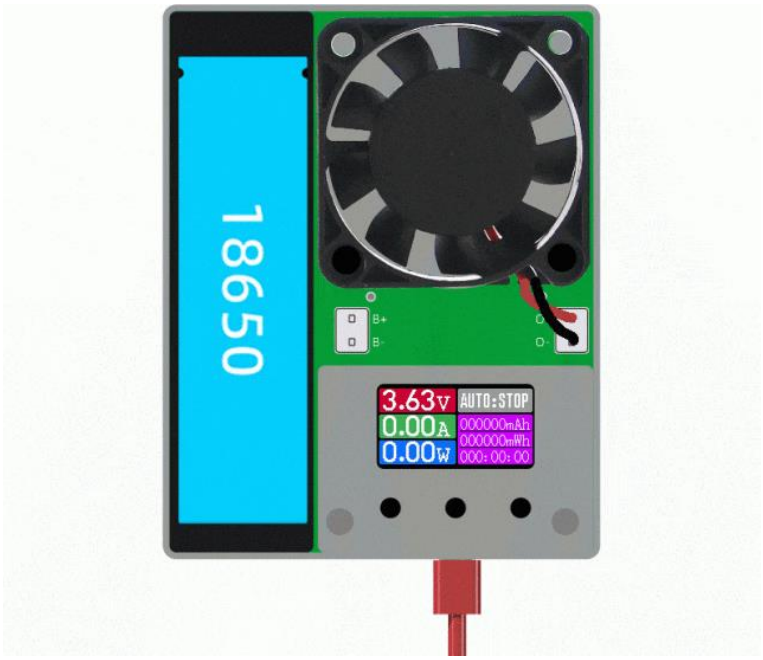

5.10、Test results

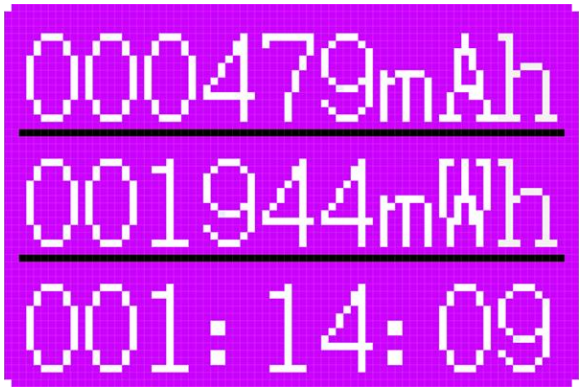

—END—