


Wireless installation diagram

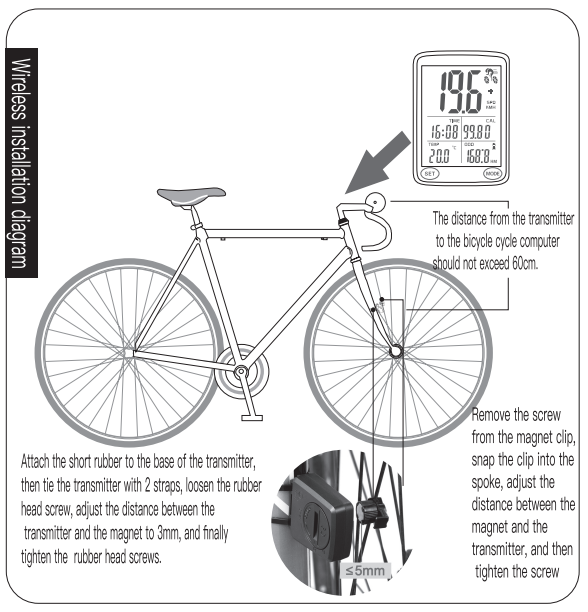


Wired installation diagram

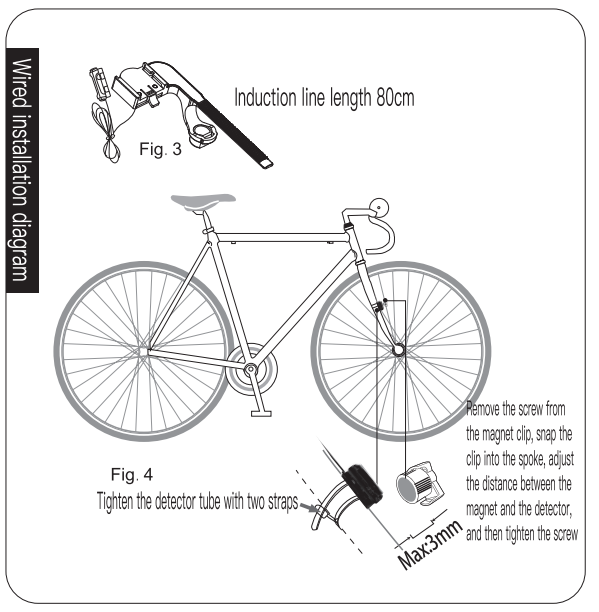


Battery replacement and installation

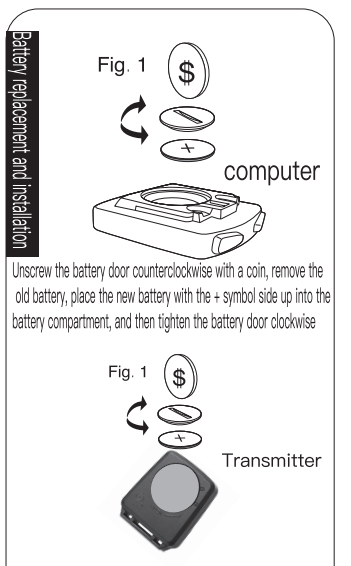


Accessories

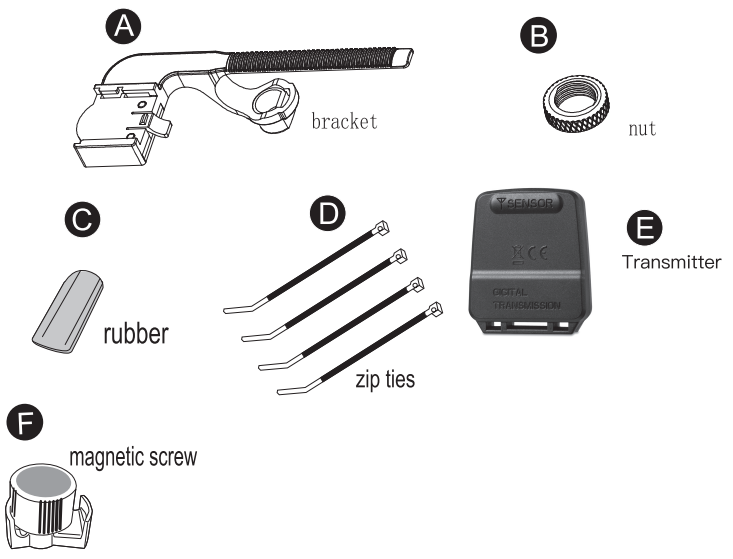

Base combination

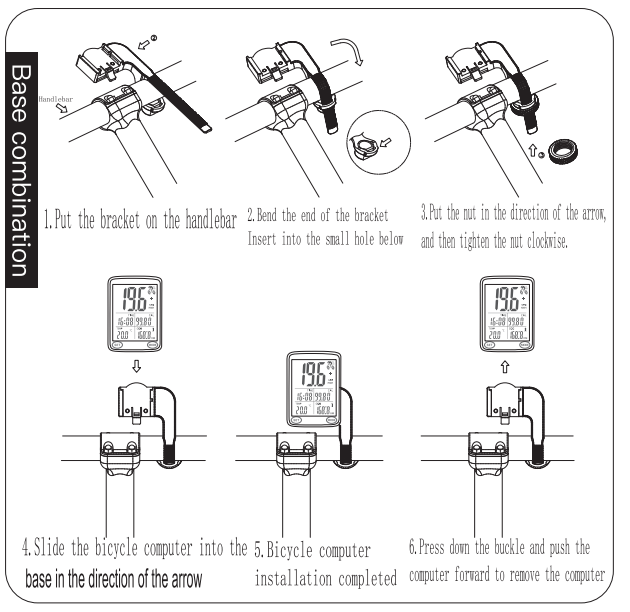

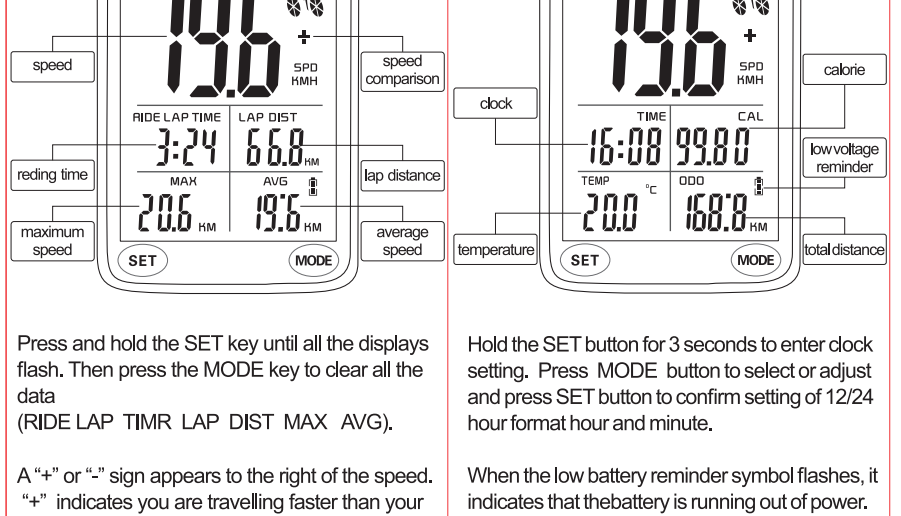

Press and hold the SET key until all the displays flash. Then press the MODE key to clear all the data
(RIDE LAP TIMR LAP DIST MAX AVG).

A “+” or “-” sign appears to the right of the speed. “+” indicates you are travelling faster than your average speed (AVS). A “-” indicates you are riding slower than your average speed

Hold the SET button for 3 seconds to enter clock setting. Press MODE button to select or adjust and press SET button to confirm setting of 12/24 hour format hour and minute.

When the low battery reminder symbol flashes, it indicates that thebattery is running out of power. Please replace the battery in time.

COMPUTER RESET

The computer will reset by either of the following cases.
a) Battery Change
Holding both SET and MODE button for 3 seconds will reset the computer.
b) Whenever you enter the computer setting mode without completion, the computer will automatically turn of after 5 minutes. Press any button will wake up the computer and will go to setting mode again.

START THE COMPUTER

Press any button to wake up the computer with display on before cycling.

Auto Power off

In order to save battery, the unit will go to sleep if no input received for 5 minutes.

Manual Wake-UP

The user can wake up the computer by pressing any button.


Auto Wake-UP

The user can wake up the computer by simply riding the bike without pressing any button within 2 hours after sleep - the unit will wake up within 10 second. More than 2 hours after sleep - the unit will wake up within 1 minute.

MALFUNCTION	PROBLEM
Inaccurate maximum speed reading	Unknown atmospheric or RF interference
No speedometer reading	Improper magnet/transmitter alignment Check battery and correct installation
Black display	Temperature too hot, or display exposed to direct sunlight too long
No trip distance reading alignment	Check correct sensor / magnet alignment Check battery and correct installation
Display shows irregular figures	Take out computer battery and install again

CYCLE COMPUTER

YA-2

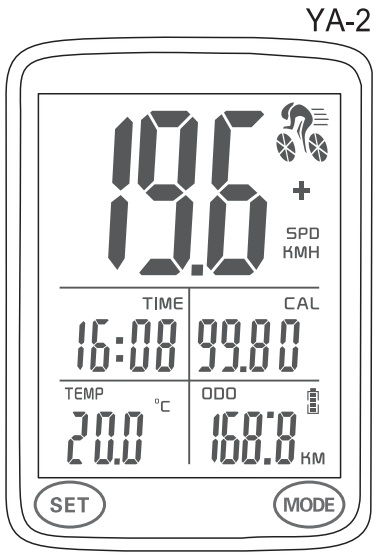

INSTRUCTION MANUAL

FUNCTIONS

ATTENTION: Computer Functions refer to the packing details.

- Speedometer (SPD) - 0~99.9 KM/hr or M/hr
- Average Speed (AVS) - 0~99.9 KM/hr or M/hr
- Maximum Speed (MXS) - 0~99.9 KM/hr or M/hr
- Speed Comparator - (+ or -)
- KM & M Selectable
- Auto Start/Stop
- Odometer (ODO) - 0~9999.9 KM or M
- Tripmeter (DST) - 0~999.9 KM or M
- Trip Timer (TM) - 9:59:59
- Digital Clock - 12 / 24 hour selectable
- Auto Power Off
- Auto start / stop
- Calories
- °C & °F selectable
- Maintenance program
- LED Backlight
- Temperature(TEMP)
- Touch turns backlight on or off

Starting up


Hold down the SET button and the MODE button simultaneously for about 5 seconds until characters appear on the screen.

Go to the computer setting mode by:

a) insert the battery
b) Press MODE Button to select or adjust, press SET Button to confirm the setting

WHEEL SIZE INPUT

Input the wheel size factor C into the computer by multiply by the wheel diameter in millimeter. For convenience, please refer to the chart below.




distance in millimeter per one turn



Enter the circumference of your wheel (unit: millimeters)

Wheel Diameter d	Wheel Factor c
700B	2237
700C X 38MM	2180
700C X 35MM	2168
700C X 32MM	2155
700C X 30MM	2145
700C X 28MM	2136
700C X 25MM	2124
700C X 23MM	2105
700C X 20MM	2074
700C Tubulari	2130
650C X 23MM	1990
650C X 20MM	1945
27" X 1-1/4"	2161
27" X 1-1/8"	2155
26" X 2.3"	2135
26" X 2.25"	2115
26" X 2.1"	2095
26" X 2.0"	2074
26" X 1.9"/1.95"	2055
26" X 1.75"	2035
26" X 1.5"	1985
26" X 1.25"	1953
26" X 1.0"	1913
24" X 1.9"/1.95"	1916
20" X 1-1/4"	1618
16" X 2.0"	1253
16" X 1.95"	1257
16" X 1.5"	1206

Wheel Circumference Measurement

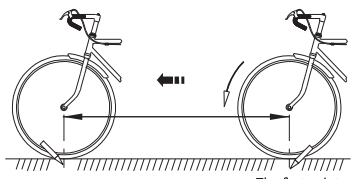


How to measure the wheel circumference?

Place the valve of the wheel on the ground plane, then mark the "first point" on the ground, push the bicycle until the valve returns to the ground plane, mark the "second point" on the ground, and measure the distance between the two points. Use millimeters (mm), which is your wheel circumference.

Quick entry: You can also refer to the table on the left to enter the appropriate round perimeter

KM / MILE SELECTION

After the wheel size input, the following function is the selection of kilometers or miles as the measurement for distance. Press the RIGHT button to choose between kilometer (KM) and Mile (M), press the LEFT button to confirm.




KM or MIH selection

LED backlight

Press and hold the SET button and the MODE button simultaneously to turn on the back light. Press and hold both buttons again to turn off the backlight. Pressing either the SET button or the MODE button alone will turn on the backlight for 10 seconds before it turns off.

Note: If the touch does not work, wait 20 seconds before touching again.

LED backlight is very power-hungry, if the backlight is always measured, the battery can only be used for about 30 hours..

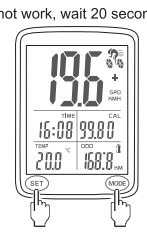

The LED backlight needs to enter the speed measurement state to be turned on or off. When the cycle computer sleeps, the LED backlight automatically turns off and returns to the initial state

AGE / WEIGHT

Set your weight
Weight will be in KG or POUND
If KM or MILE is selected respectively.



Weight


SELECTING COMPUTER FUNCTIONS

a) Press the MODE Button to go to another mode.
b) Press the SET button to enter the sub-function of this mode.
c) Holding the SET button will reset or go to the setting mode of the sub-function.


CLOCK SETTING TEMPERATURE UNIT SET SERVICE PROGRAM

Hold the SET button for 3 seconds to enter clock setting. Press MODE button to select or adjust and press SET button to confirm setting of 12/24 hour format, hour and minute.
It is to remind you the parts replacement or lubricate the chains after preset distance is reached.Right after KM/ MILE selection, the preset total distance of 600km (or miles) will flash, press the MODE button to select between 200, 400, 600 & 800km (or miles) and press SET button to confirm.For example, if 600 KM is set, the spanner () will start to flash whenever the total distance is reached 600 / 200 / 800 etc. Press the SET button to stop flashing of the spanner().

Set the clock

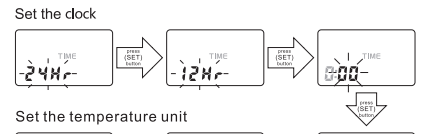

Set the temperature unit

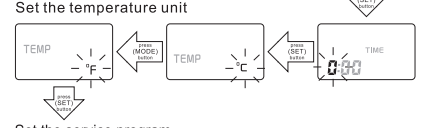

Set the service program

