






|        | Power                                                                                                                                                                                                                                                                                                                                                                                                         | Joystick                                                                                                                                                                                                                                                                                                   | Userport                                                                                                                                                                                                                                                                                                                                                                                  | Audio/Video                                                                                                                                                                                                                                                                                                 | Serial                                                                                                                                                                                                   | Tape                                                                                                                                                                       |
|--------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| C(1)16 | <br>center negative                                                                                                                                                                                                                                                                                                          | <br>JOYSTICK 1 JOYSTICK 2<br>1. JOYX1 JOYB1 Up<br>2. JOYX1 JOYB1 Down<br>3. JOYX2 JOYB2 Left<br>4. JOYX2 JOYB2 Right<br>5. +5VDC +5VDC<br>6. BUTTON A BUTTON B Fire Button<br>7. GROUND GROUND<br>8. DATA 2 DATA 1 Select |                                                                                                                                                                                                                                                                                                                                                                                           | <br>8 pin DIN (262")<br>audio video connector<br>1. Luminance (S-video Y signal)<br>2. Ground<br>3. Audio out<br>4. Composite video<br>5. Audio in<br>6. Chrominance (S-video C signal)<br>7. Not Connected<br>8. +5 Volt | <br>6 pin DIN<br>IEC serial connector<br>1. SRQ<br>2. Ground<br>3. ATN (Attention)<br>4. Clock<br>5. Data<br>6. Reset | <br>1. Ground<br>2. +5 Volt<br>3. Motor<br>4. Read<br>5. Write<br>6. Sense<br>7. Ground |
| Plus/4 | <br>7 pin DIN<br>Power connector<br>1. Ground (5 Volt)<br>2. Ground (5 Volt)<br>3. Ground (5 Volt)<br>4. 5 Volt DC or NC;<br>5. 5 Volt DC<br>6. 9 Volt AC<br>7. 9 Volt AC<br><br>1. +5 Volt DC<br>2. Ground<br>3. 9 Volt AC<br>4. 9 Volt AC | <br>JOYSTICK 1 JOYSTICK 2<br>1. JOYX1 JOYB1 Up<br>2. JOYX1 JOYB1 Down<br>3. JOYX2 JOYB2 Left<br>4. JOYX2 JOYB2 Right<br>5. +5VDC +5VDC<br>6. BUTTON A BUTTON B Fire Button<br>7. GROUND GROUND<br>8. DATA 2 DATA 1 Select | <br>1. Ground<br>2. +5 Volt<br>3. Reset<br>4. P2<br>5. P3<br>6. P4<br>7. P5<br>8. Receive Clock<br>9. SERIAL ATN<br>10. 9 Volt AC 100 mA<br>11. 9 Volt AC 100 mA<br>12. Ground<br>A. Ground<br>B. P0<br>C. RX<br>D. RTS<br>E. DTR<br>F. PB7<br>H. DCID<br>J. P6<br>K. P1<br>L. CSR<br>M. TX<br>N. Ground | <br>8 pin DIN (262")<br>audio video connector<br>1. Luminance (S-video Y signal)<br>2. Ground<br>3. Audio out<br>4. Composite video<br>5. Audio in<br>6. Chrominance (S-video C signal)<br>7. Not Connected<br>8. +5 Volt | <br>6 pin DIN<br>IEC serial connector<br>1. SRQ<br>2. Ground<br>3. ATN (Attention)<br>4. Clock<br>5. Data<br>6. Reset | <br>1. Ground<br>2. +5 Volt<br>3. Motor<br>4. Read<br>5. Write<br>6. Sense<br>7. Ground |

# Keyboards


<https://myoldcomputer.v1.0>

Plus4 C116




| [PIN]   | K0 [17] | K1 [14] | K2 [13] | K7 [2]   | K4 [6] | K5 [8] | K6 [9] | K3 [16] |
|---------|---------|---------|---------|----------|--------|--------|--------|---------|
| P7 [5]  | 1       | CLR     | CTRL    | Run Stop | Space  | ↵      | Q      | 2       |
| P0 [7]  | 3       | W       | A       | Shift    | Z      | S      | E      | 4       |
| P2 [11] | 5       | R       | D       | X        | C      | F      | T      | 6       |
| P1 [10] | 7       | Y       | G       | V        | B      | H      | U      | 8       |
| P3 [12] | 9       | I       | J       | N        | M      | K      | O      | 0       |
| P6 [1]  | ▼       | P       | L       | .        | .      | :      | -      | ▲       |
| P4 [15] | ◀       | *       | ;       | /        | ESC    | =      | +      | ▶       |
| P5 [18] | Del     | Return  | £       | @        | F1     | F2     | F3     | Help    |

pin [4] + 5 Volt



# Expansion

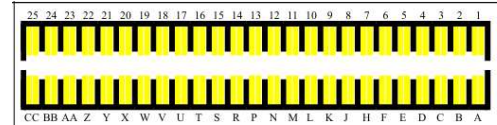

| CC BB AA Z Y X W V U T S R P N M L K J H F E D C B A |            |  |
|------------------------------------------------------|------------|--|
| 1. Ground                                            | A. Ground  |  |
| 2. +5 Volt                                           | B. C1 Low  |  |
| 3. +5 Volt                                           | C. Reset   |  |
| 4. IRQ                                               | D. RAS     |  |
| 5. R-W                                               | E. φ0      |  |
| 6. C1 High                                           | F. A15     |  |
| 7. C2 Low                                            | H. A14     |  |
| 8. C2 High                                           | J. A13     |  |
| 9. CS1 (SC000-SFFFF)                                 | K. A12     |  |
| 10. CS0 (SB000-SBFFF)                                | L. A11     |  |
| 11. CAS                                              | M. A10     |  |
| 12. Mux                                              | N. A9      |  |
| 13. BA                                               | P. A8      |  |
| 14. D7                                               | R. A7      |  |
| 15. D6                                               | S. A6      |  |
| 16. D5                                               | T. A5      |  |
| 17. D4                                               | U. A4      |  |
| 18. D3                                               | V. A3      |  |
| 19. D2                                               | W. A2      |  |
| 20. D1                                               | X. A1      |  |
| 21. D0                                               | Y. A0      |  |
| 22. AEC                                              | Z. N.C.    |  |
| 23. Audio In                                         | AA. N.C.   |  |
| 24. φ2                                               | BB. N.C.   |  |
| 25. Ground                                           | CC. Ground |  |