



How to Read Connector Codes and Terminal Nos.

1) Connector code / Terminal No. / Terminal layout

- The connector shape and terminal layout shown in this manual are those when viewed from "Z" in the illustration.
Refer to "Connector".

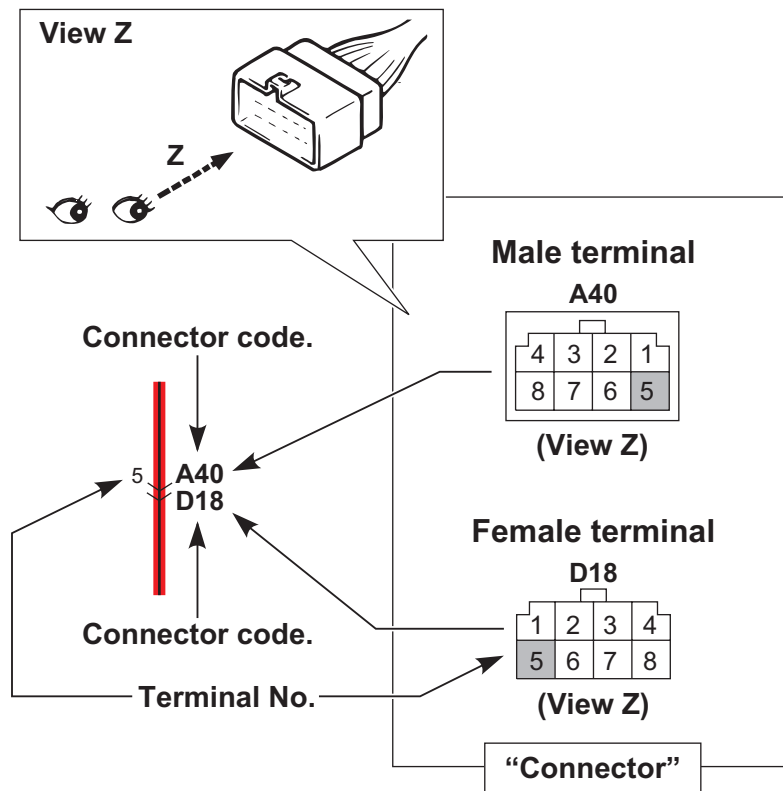


- Some connectors have a tiny height difference between the terminal rows. In this case, the terminal numbers are counted from the top row to the lower rows in sequence. Check **the correct terminal number** in "Connector".

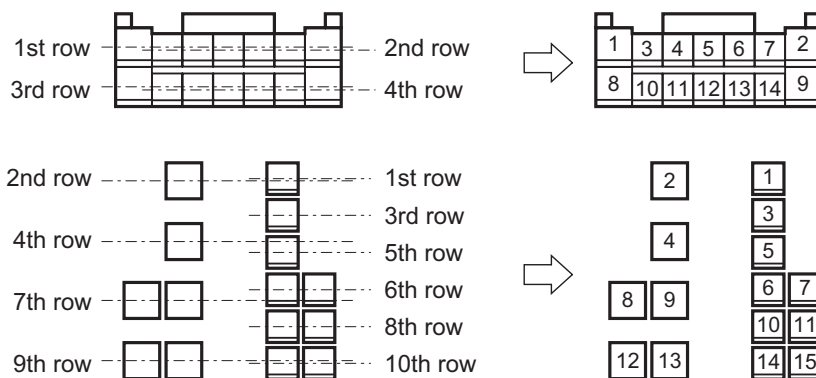

NOTE

Molded terminal numbers that are different from the above can be found on some connectors in rare cases.
These molded numbers are not applied in this manual.


2) Connector type

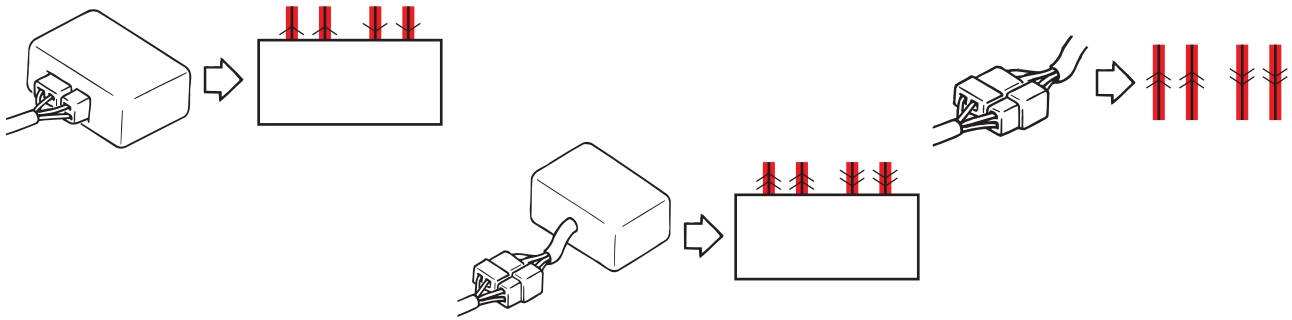

3) Joint connector (J/C)

- Several different wires with the same wire color are joined at a part of J/C.


Example

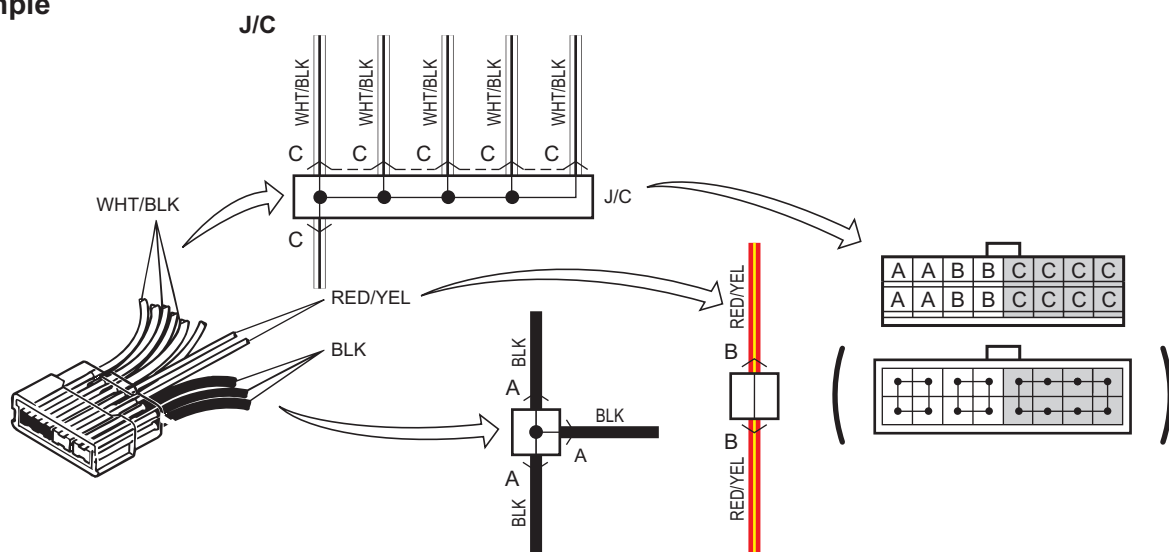

4) Weld splice (W/S)


- Several different wires with the same wire color are joined at a W/S.

Example

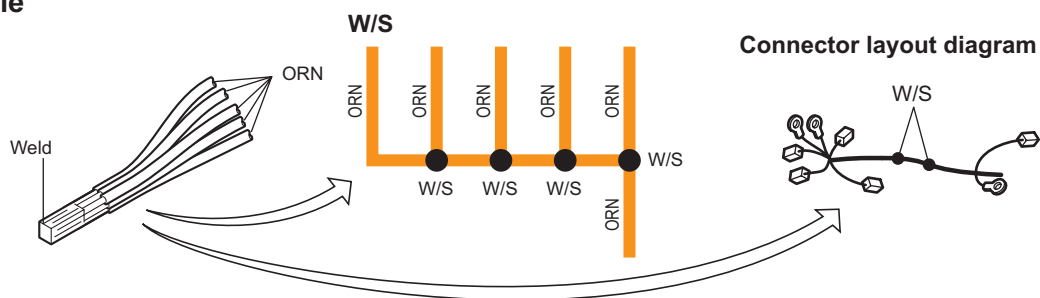


5) Junction block (J/B)


Example

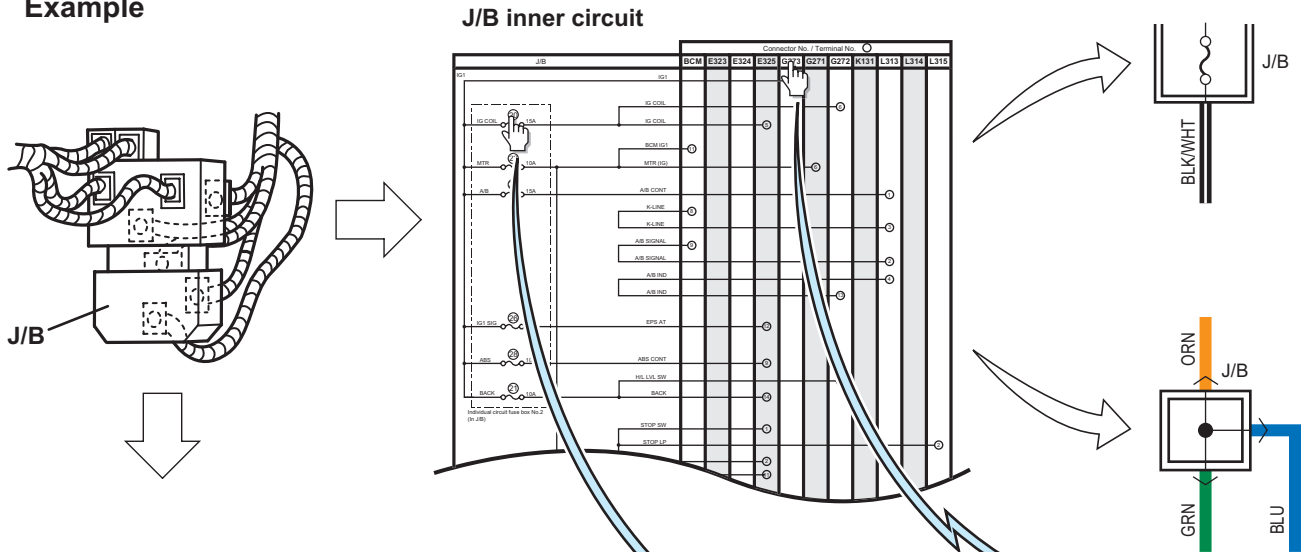

J/B Connector and Fuse Layout

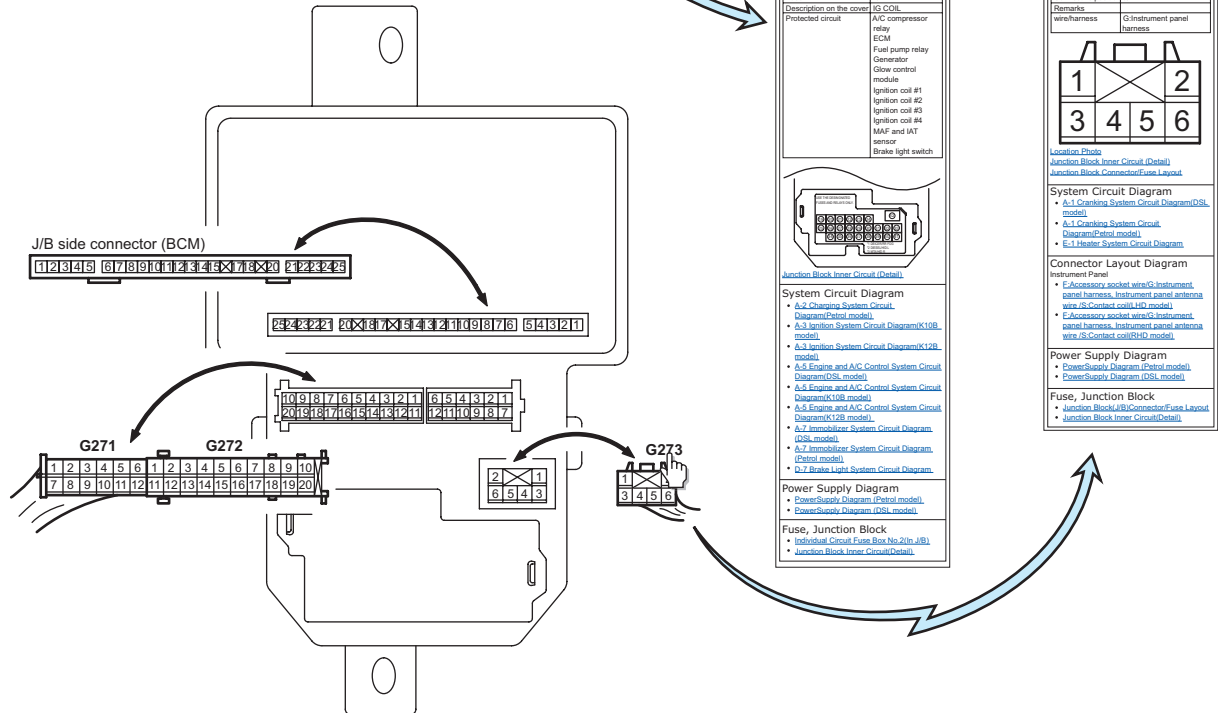

- 6) Connector location, shape and terminal No.
 Refer to "Connector Layout Diagram".
 Refer to "System Circuit Diagram".
 Refer to "Connector".

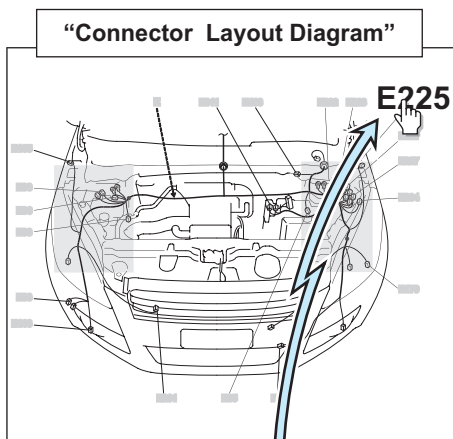

CROSS-REFERENCE

"Connector"	
Connector No.	E225
Connector Color	BLK
Connective position	Starting motor relay
Remarks	Petrol model
wire/harness	E:Main harness

1	2
3	4

[Location Photo](#)

System Circuit Diagram

- [Anti Cranking System Circuit Diagram\(Petrol model\)](#)


Connector Layout Diagram

Engine Compartment

- [E:Main harness\(Petrol LHD model\)](#)
- [E:Main harness\(Petrol RHD model\)](#)

Fuse, Junction Block

- [Individual Circuit Fuse Box No.1\(Petrol model\)](#)

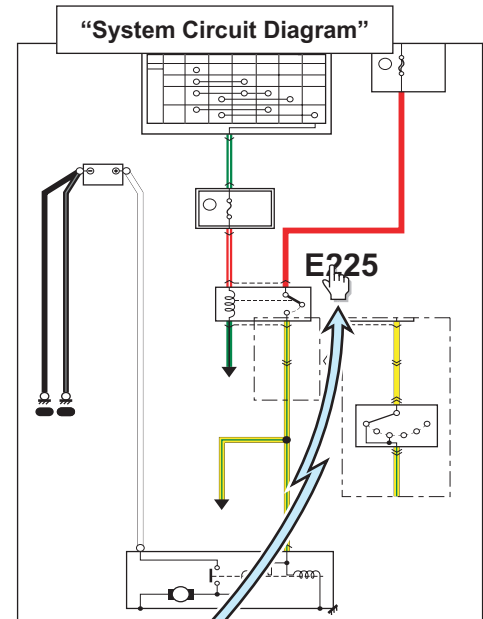

E225

"Location Photo"

