
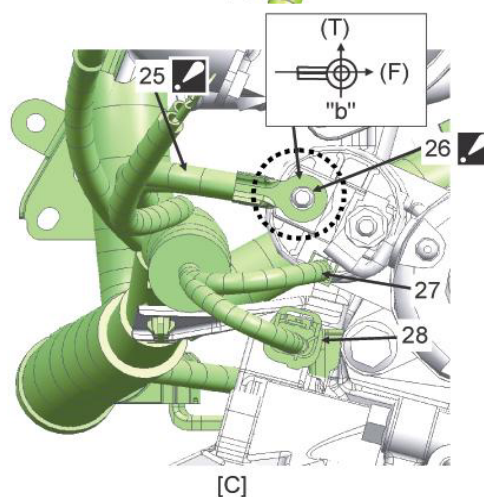
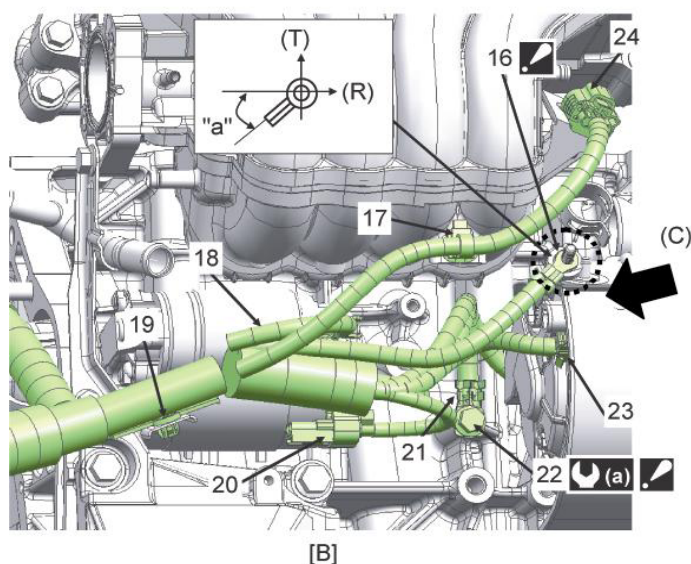
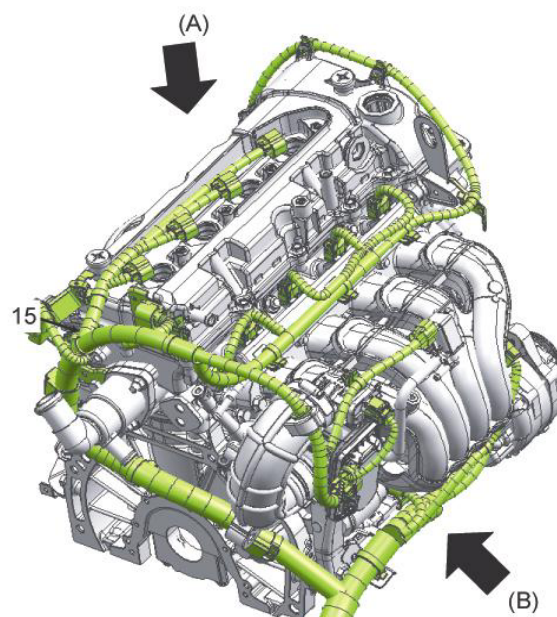


Reassembling Note for Wiring Harness

1/2

Around Engine

Petrol (Engine harness)

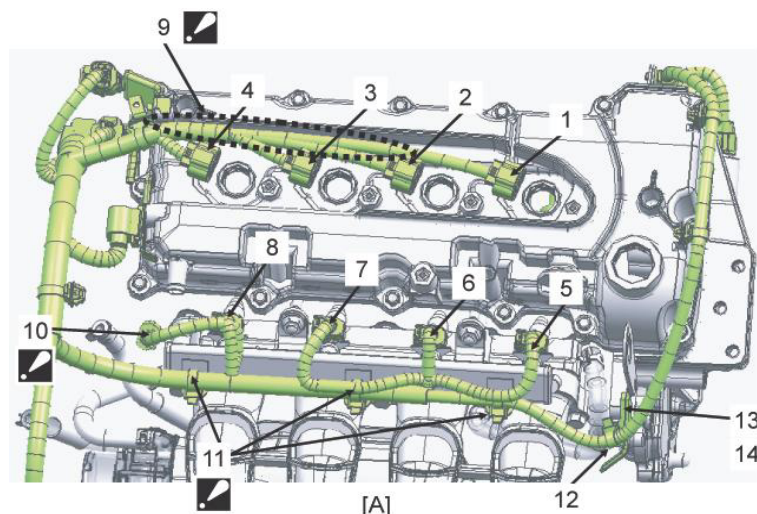

[A]:	View (A)	14.	Engine harness hook bracket bolt
[B]:	View (B)	15.	Engine harness
[C]:	View (C)	16.	Generator (+B) terminal Cover the terminal with the cap after tightening.
(F):	Front	"a".	45° Direct the terminal as shown. Keep this wire away from the intake manifold.
(R):	Right	17.	Clamp
(T):	Top	18.	Starting motor (+B) terminal
1.	Ignition coil No.1	19.	Clamp
2.	Ignition coil No.2	20.	Knock sensor
3.	Ignition coil No.3	21.	Engine ground bolt
4.	Ignition coil No.4	22.	Confirm that the earth terminals do not move after tightening bolts.
5.	Injector No.1	(a) :	8.8 to 13.2 N·m (0.9kgf-m to 1.3kgf-m, 6.5lbt-ft to 10.0lbt-ft)
6.	Injector No.2	23.	Generator

Reassembling Note for Wiring Harness

2/2

Around Engine

Petrol (Engine harness)

7. Injector No.3	24. Air pressure sensor (Except K14B engine model)
8. Injector No.4	 25. Pass this wire on the trunk harness.
 9. Pass the harness inside of head cover rib. Do not pass the harness over head cover rib.	 26. Starting motor (+B) terminal Cover the terminal with the cap after tightening.
 10. CAM sensor Pass the wire in front of the trunk harness.	"b". Direct the terminal as shown.
 11. Clamp Set these clamps before connecting to injector No.1 to No.4.	27. Starting motor magnet
12. Clamp	28. Knock sensor
13. Engine harness hook bracket	