


Reassembling Note for Wiring Harness

1/2

Around Battery

Battery cable (MT-2WD/AT)

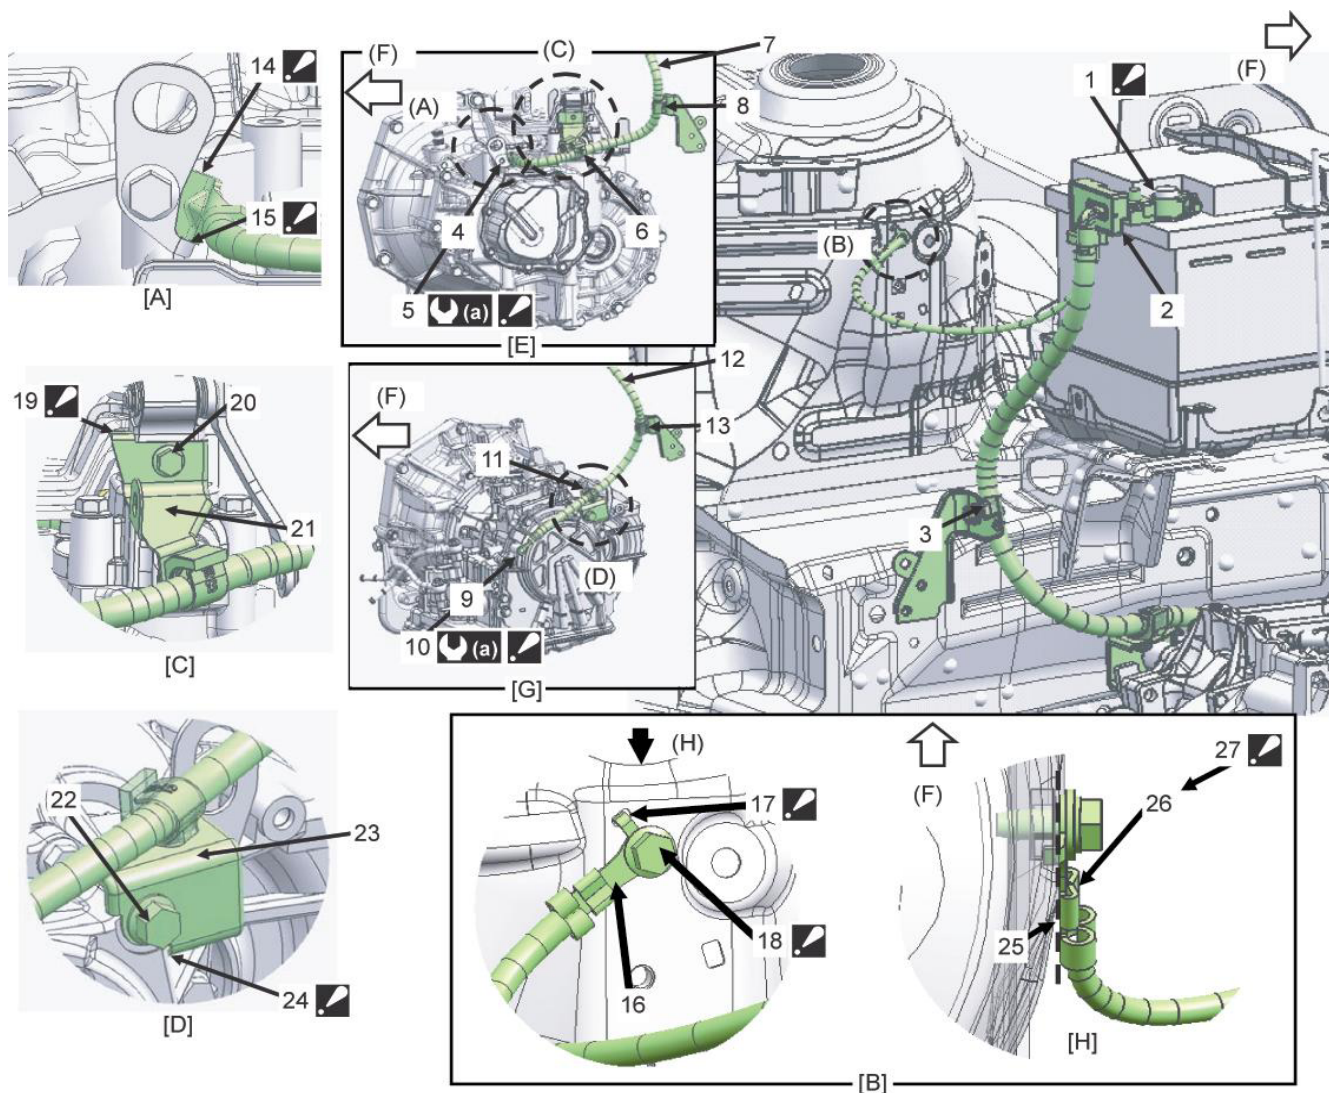

[A]: Detail (A)	⚙️(a) : 19.8 to 30.8 N·m (2.0kgf-m to 3.1kgf-m, 15.0lbt-ft to 23.0lbt-ft)
[B]: Detail (B)	11. Clamp
[C]: Detail (C)	12. Battery ground cable
[D]: Detail (D)	13. Clamp
[E]: M/T, 2WD model	14. Set the terminal between the boss and hook.
[G]: A/T model	15. Direct the terminal backward.
[H]: View (H)	16. Battery ground bolt
(F): Front	17. Set the nail into the body hole.
1. Battery (-) Confirm that the earth terminals do not move after tightening bolts.	18. Confirm that the earth terminals do not move after tightening bolts.
2. Current sensor (Except K14B engine model)	19. Fit the stopper to the case.
3. Clamp	20. Battery ground bracket bolt
4. Battery ground bolt on transmission	21. Battery ground bracket
5. Confirm that the earth terminals do not move after tightening bolts.	22. Battery ground bracket bolt
⚙️(a) : 19.8 to 30.8 N·m (2.0kgf-m to 3.1kgf-m, 15.0lbt-ft to 23.0lbt-ft)	23. Battery ground bracket
6. Clamp	24. Fit the stopper to the case.
7. Battery ground cable	25. Panel surface

Reassembling Note for Wiring Harness

2/2

Around Battery

Battery cable (MT-2WD/AT)

8. Clamp	26. The terminal shape: straight
9. Battery ground bolt on transmission	 27. Do not deform the shape of the terminal when installing.
 10. Confirm that the earth terminals do not move after tightening bolts.	