


Reassembling Note for Wiring Harness

1/1

Around Battery

Petrol (Fusible link /+B terminal)

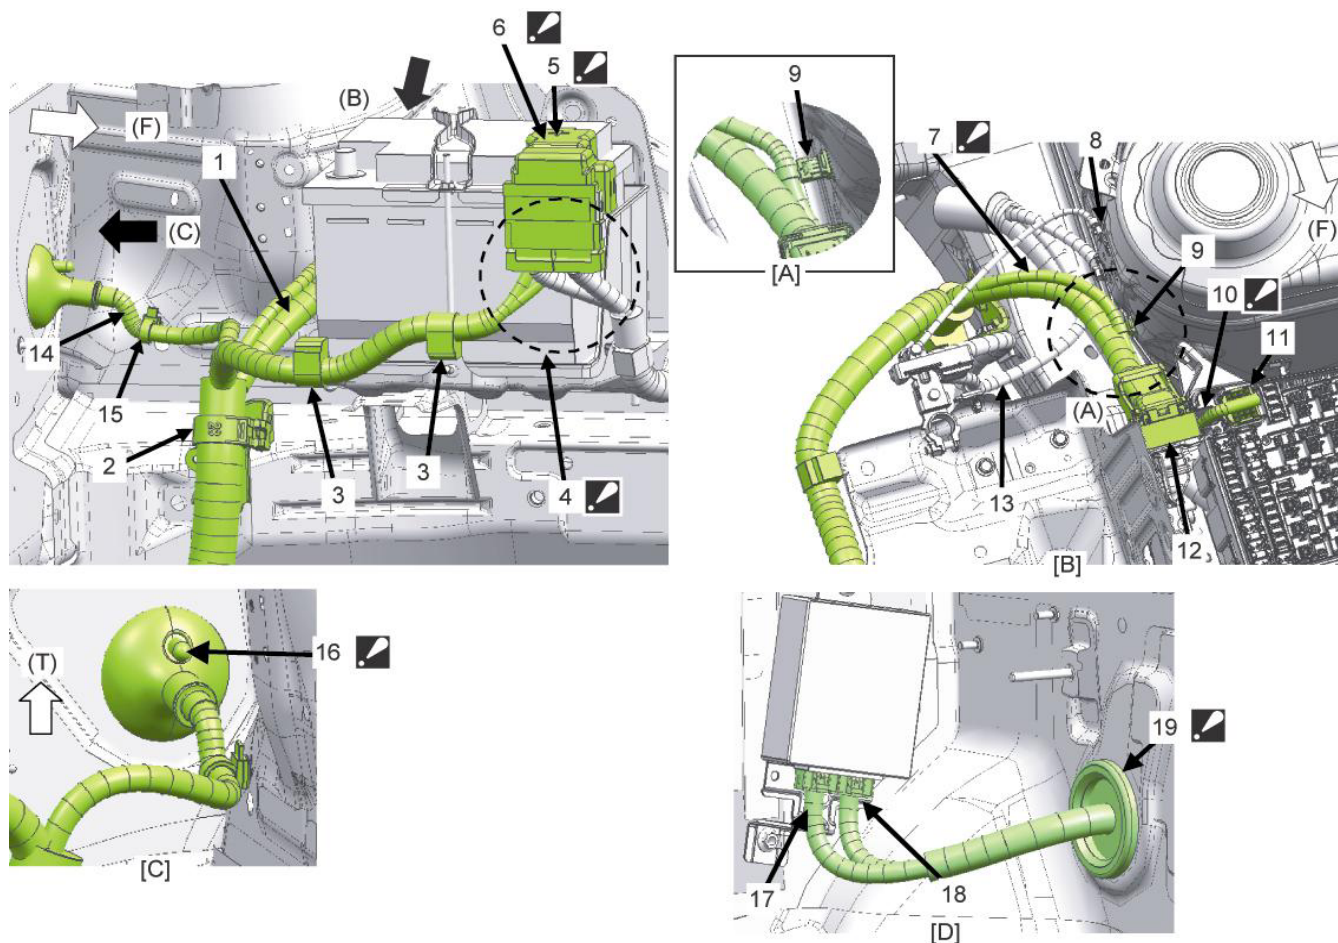

[A]: Detail (A)	8. Body ground
[B]: Top view (B)	9. Clamp
[C]: Front view	10. Lock the hinge of cover after connecting main harness.
[D]: A/T controller (RHD model)	11. Main harness
(F): Front	12. Engine ECU
(T): Top	13. Current sensor
1. Engine harness	14. To A/T controller (Only RHD model)
2. Clamp	15. Clamp
3. Clamp	16. Projection Locate the projection upward.
4. Pass the engine harness (to fusible link) through the battery side of fusible link.	17. A/T controller No.1 (RHD model)
5. Fusible link/+B terminal Put the cover firmly after confirming that the terminal does not move.	18. A/T controller No.2 (RHD model)
6. Confirm that the earth terminals do not move after tightening bolts.	19. Grommet Set the grommet firmly.
7. Pass the engine harness (to ECU) through between body ground and current sensor (main harness).	