
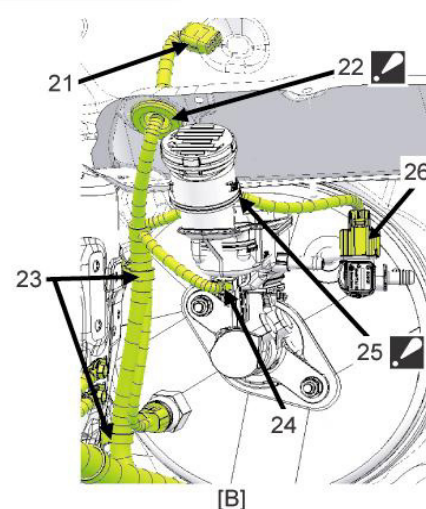
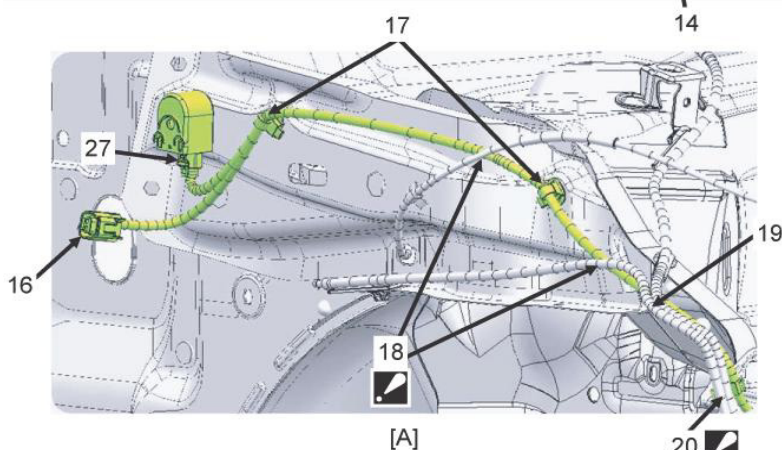


Reassembling Note for Wiring Harness

1/2

Around Strut
Main (Right side)

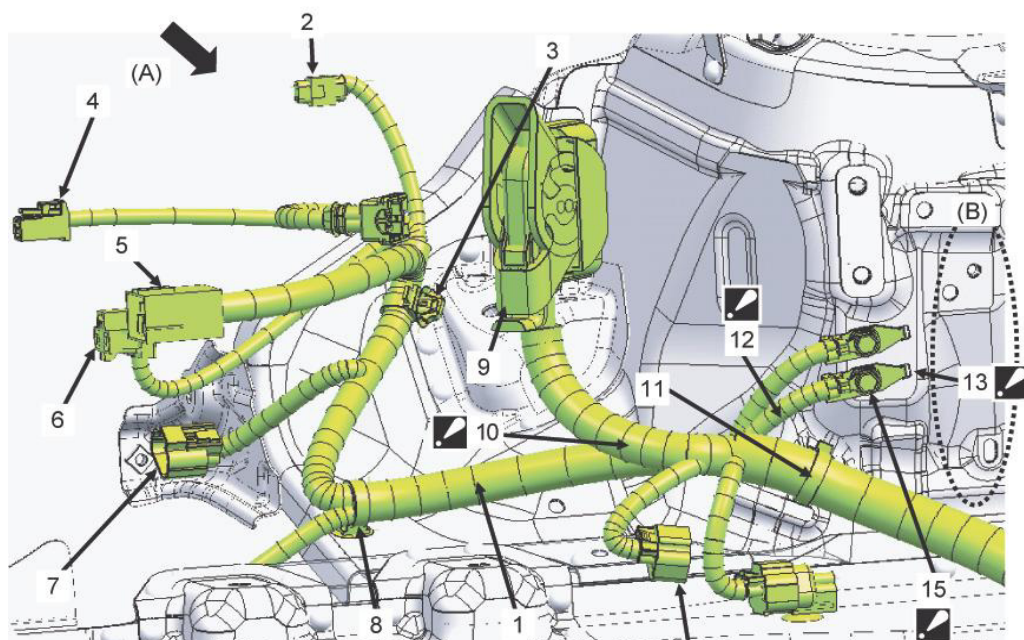






[A]: View (A)	14. A/C pressure sensor
[B]: Detail (B)	15. Ground bolt Confirm that the earth terminals do not move after tightening bolts.
1. Main harness	16. Side turn signal (R)
2. Front turn signal (R)	17. Clamp
3. Clamp	18. Pass the harness inside of the hood release cable and washer hose.
4. Position lamp (R)	19. Washer hose
5. HID unit (R) (If equipped)	20. Set the wire (to side turn (R)) on the washer clamp.
6. Headlight (R)	21. Wiper motor
7. Headlight leveling (R)	22. Grommet Set the grommet firmly.
8. Clamp	23. Clamp
9. ABS/ESP® controller	24. Brake oil switch (Only RHD model)
10. Pass the branch wire above the main trunk wire.	25. Hook the brake fluid switch wire on the master cylinder.

Reassembling Note for Wiring Harness

2/2

Around Strut
Main (Right side)

11. Clamp	26. Brake pedal sensor (Only ENG A-STOP model)
12. Locate the branch wire on the panel side of the trunk wire.	27. K/F buzzer (Only RHD model)
13. Set the terminal to the hole, and tighten the bolt.	

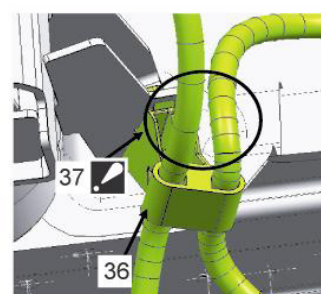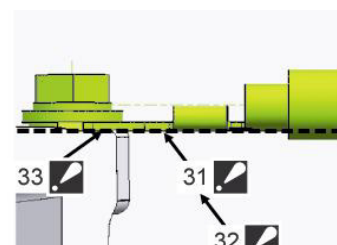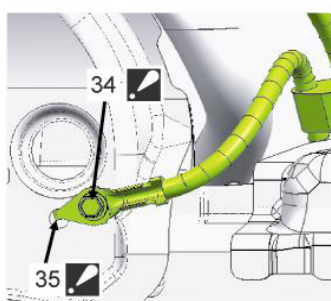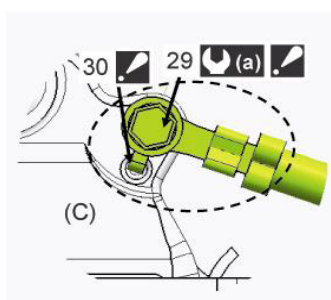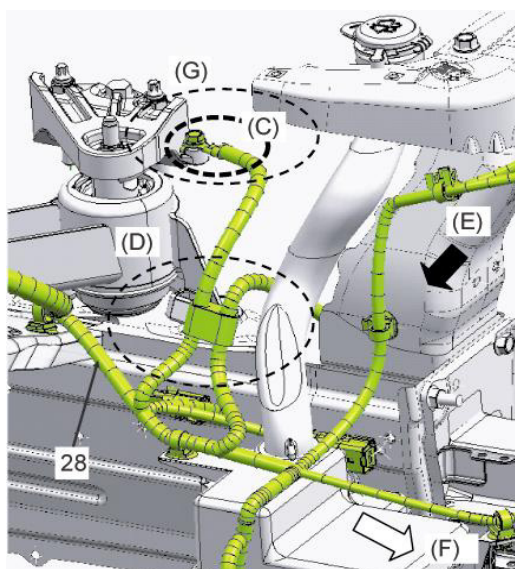

[C]: Detail (C)	30. Engine-Body connecting ground Fit the terminal to the stopper before tightening the bolt.
[D]: Detail (D)	31. The terminal shape: straight
[E]: View (E)	32. Do not deform the shape of the terminal when installing.
[G]: Detail (G)	33. Boss surface
(F): Front	34. Ground wire bolt Confirm that the earth terminals do not move after tightening bolts.
28. Main harness	35. Engine-Body connecting ground Set the terminal to the hole, and tighten the bolt.
29. Ground wire bolt Confirm that the earth terminals do not move after tightening bolts.	36. Clamp
(a) : 8.8 to 13.2 N·m (0.9kgf-m to 1.3kgf-m, 6.5lbt-ft to 10.0lbt-ft)	37. Do not cross two harnesses.