


Reassembling Note for Wiring Harness

1/2

Around Main Floor

Floor (Right side)

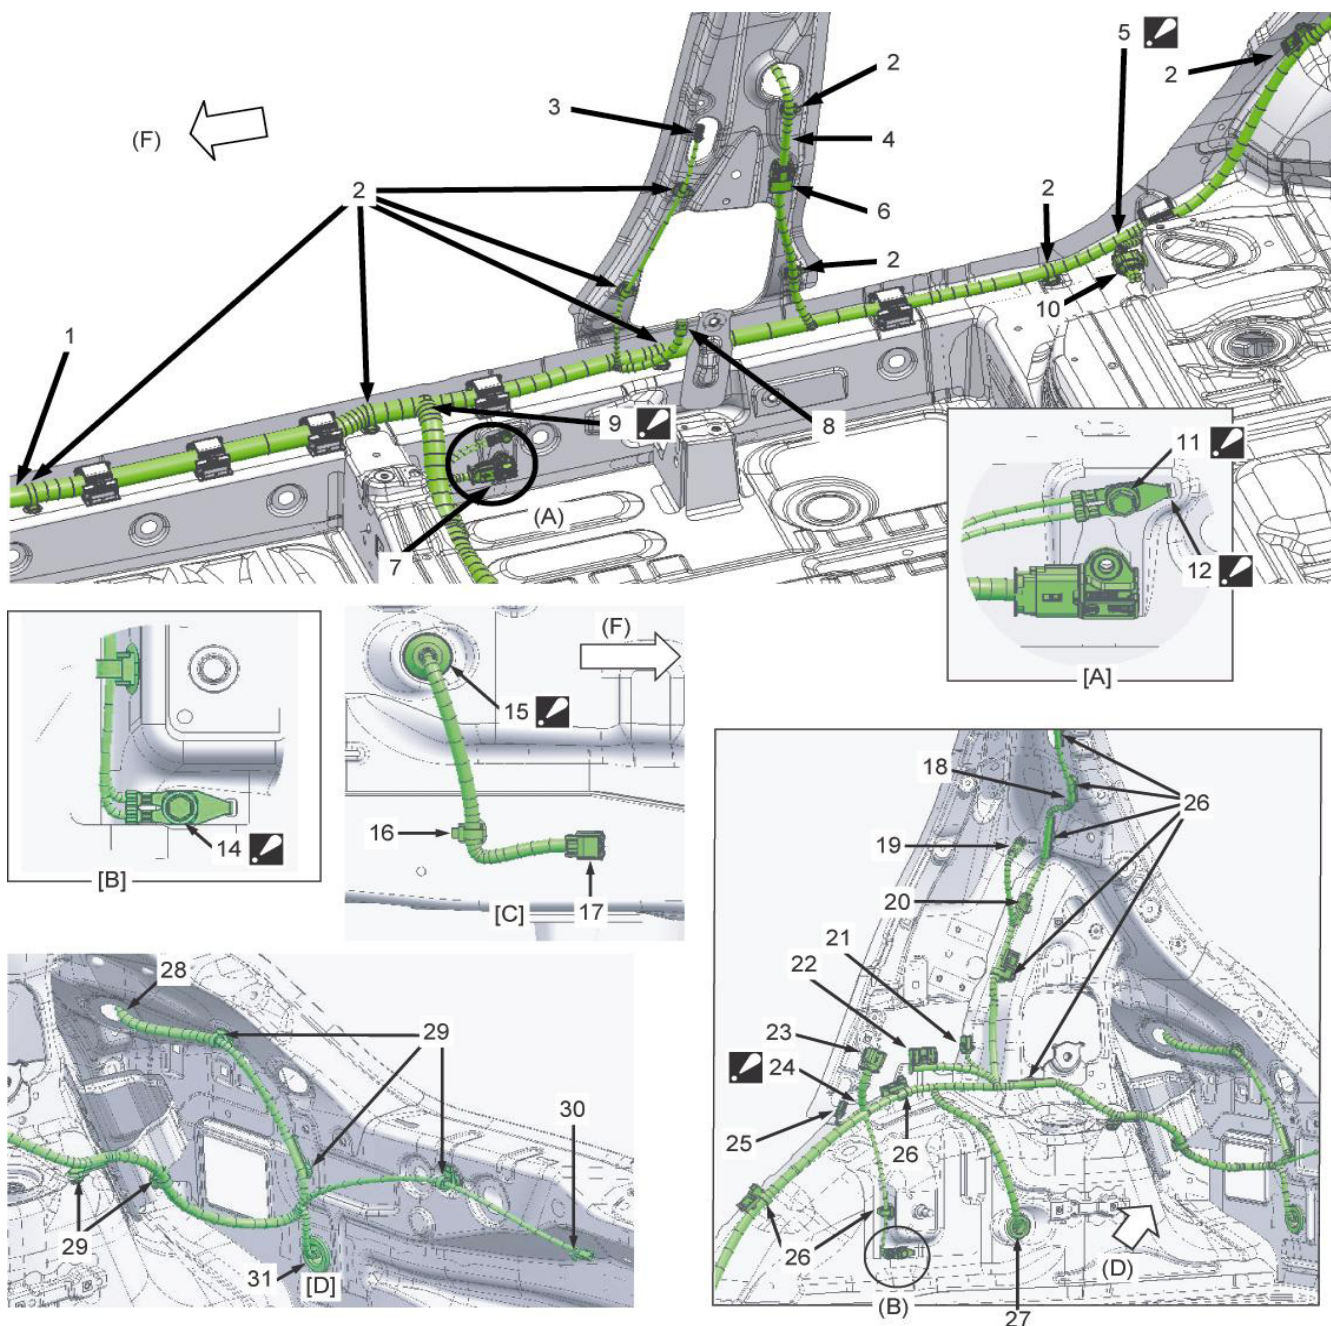

[A]: Detail (A)	15. Set the grommet firmly.
[B]: Detail (B)	16. Clamp
[C]: Outside view	17. ABS sensor (Rear right)
[D]: View (D)	18. Washer hose
(F): Front	19. LHD: Curtain A/B inflator (Front-passenger side) RHD: Curtain A/B inflator (Driver side)
1. Floor harness	20. To high mount stop lamp
2. Clamp	21. Rear sonar buzzer (With rear sonar)

Reassembling Note for Wiring Harness

2/2

Around Main Floor

Floor (Right side)

3.	LHD: Door switch (Front-passenger side) RHD: Door switch (Driver side)	22.	Sonar ECU (With rear sonar)
4.	Rear door wire	23.	LHD: G sensor (Front-passenger side) RHD: G sensor (Driver side)
 5.	Pass the harness under the washer hose.	 24.	Pass the harness under the washer hose.
6.	To door harness (Rear right)	25.	Door switch (Rear right)
7.	LHD: Side-A/B G sensor (Front-passenger side) RHD: Side-A/B G sensor (Driver side)	26.	Clamp
8.	LHD: Pretensioner (Front-passenger side) RHD: Pretensioner (Driver side)	27.	Grommet
 9.	Pass the harness under the washer hose.	28.	Rear combination lamp (R)
10.	To fuel harness	29.	Clamp
 11.	Ground bolt Confirm that the earth terminals do not move after tightening bolts.	30.	Luggage compartment antenna
 12.	Floor ground (A/B) Set the terminal to the hole, and tighten the bolt.	31.	Grommet
 14.	Ground bolt Set the terminal to the hole, and tighten the bolt. Confirm that the earth terminals do not move after tightening bolts.		