




Circuito interno del bloque de conexiones (detalle)

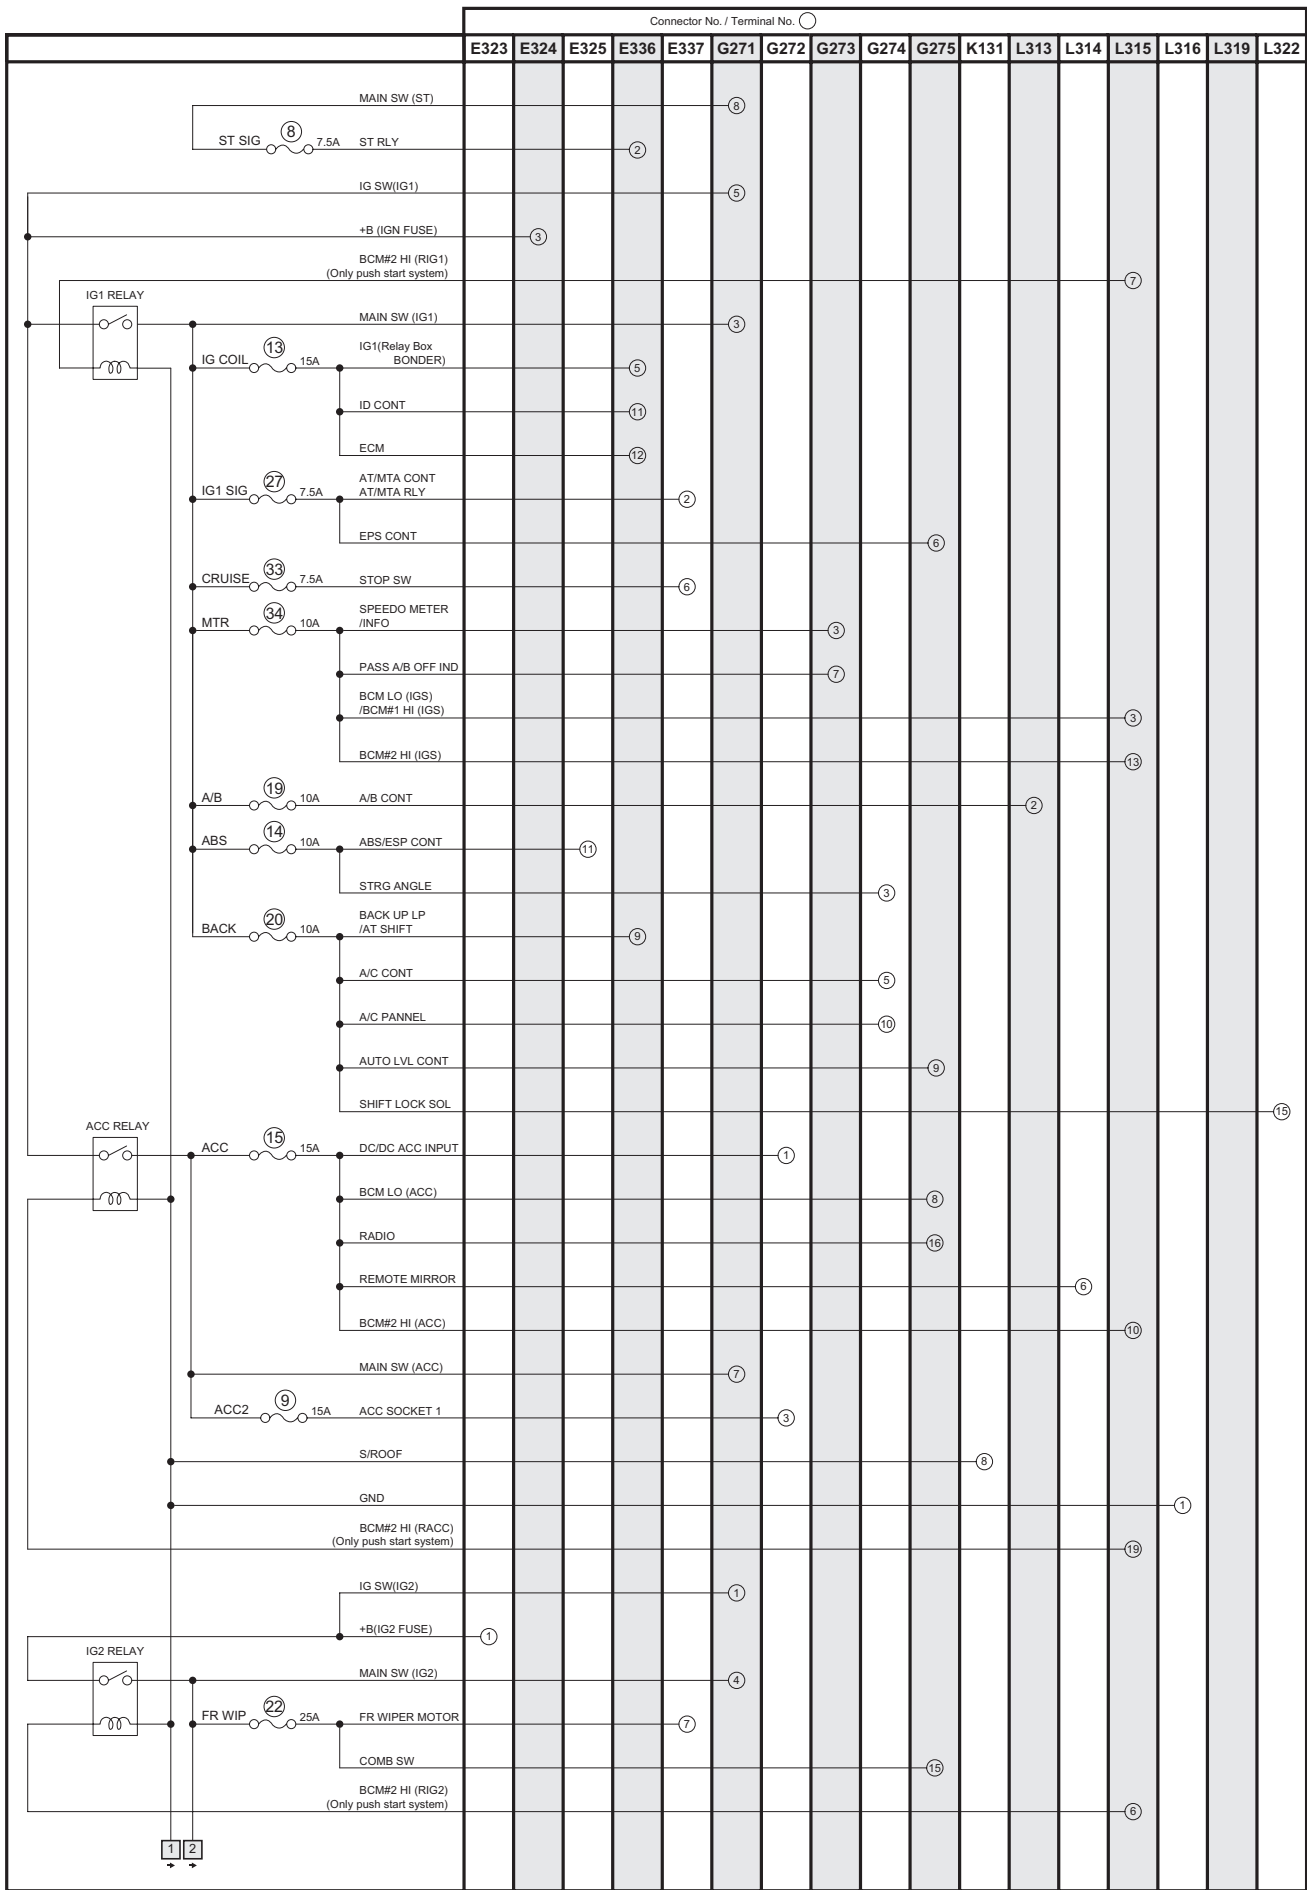

Circuito interno del bloque de conexiones (detalle)

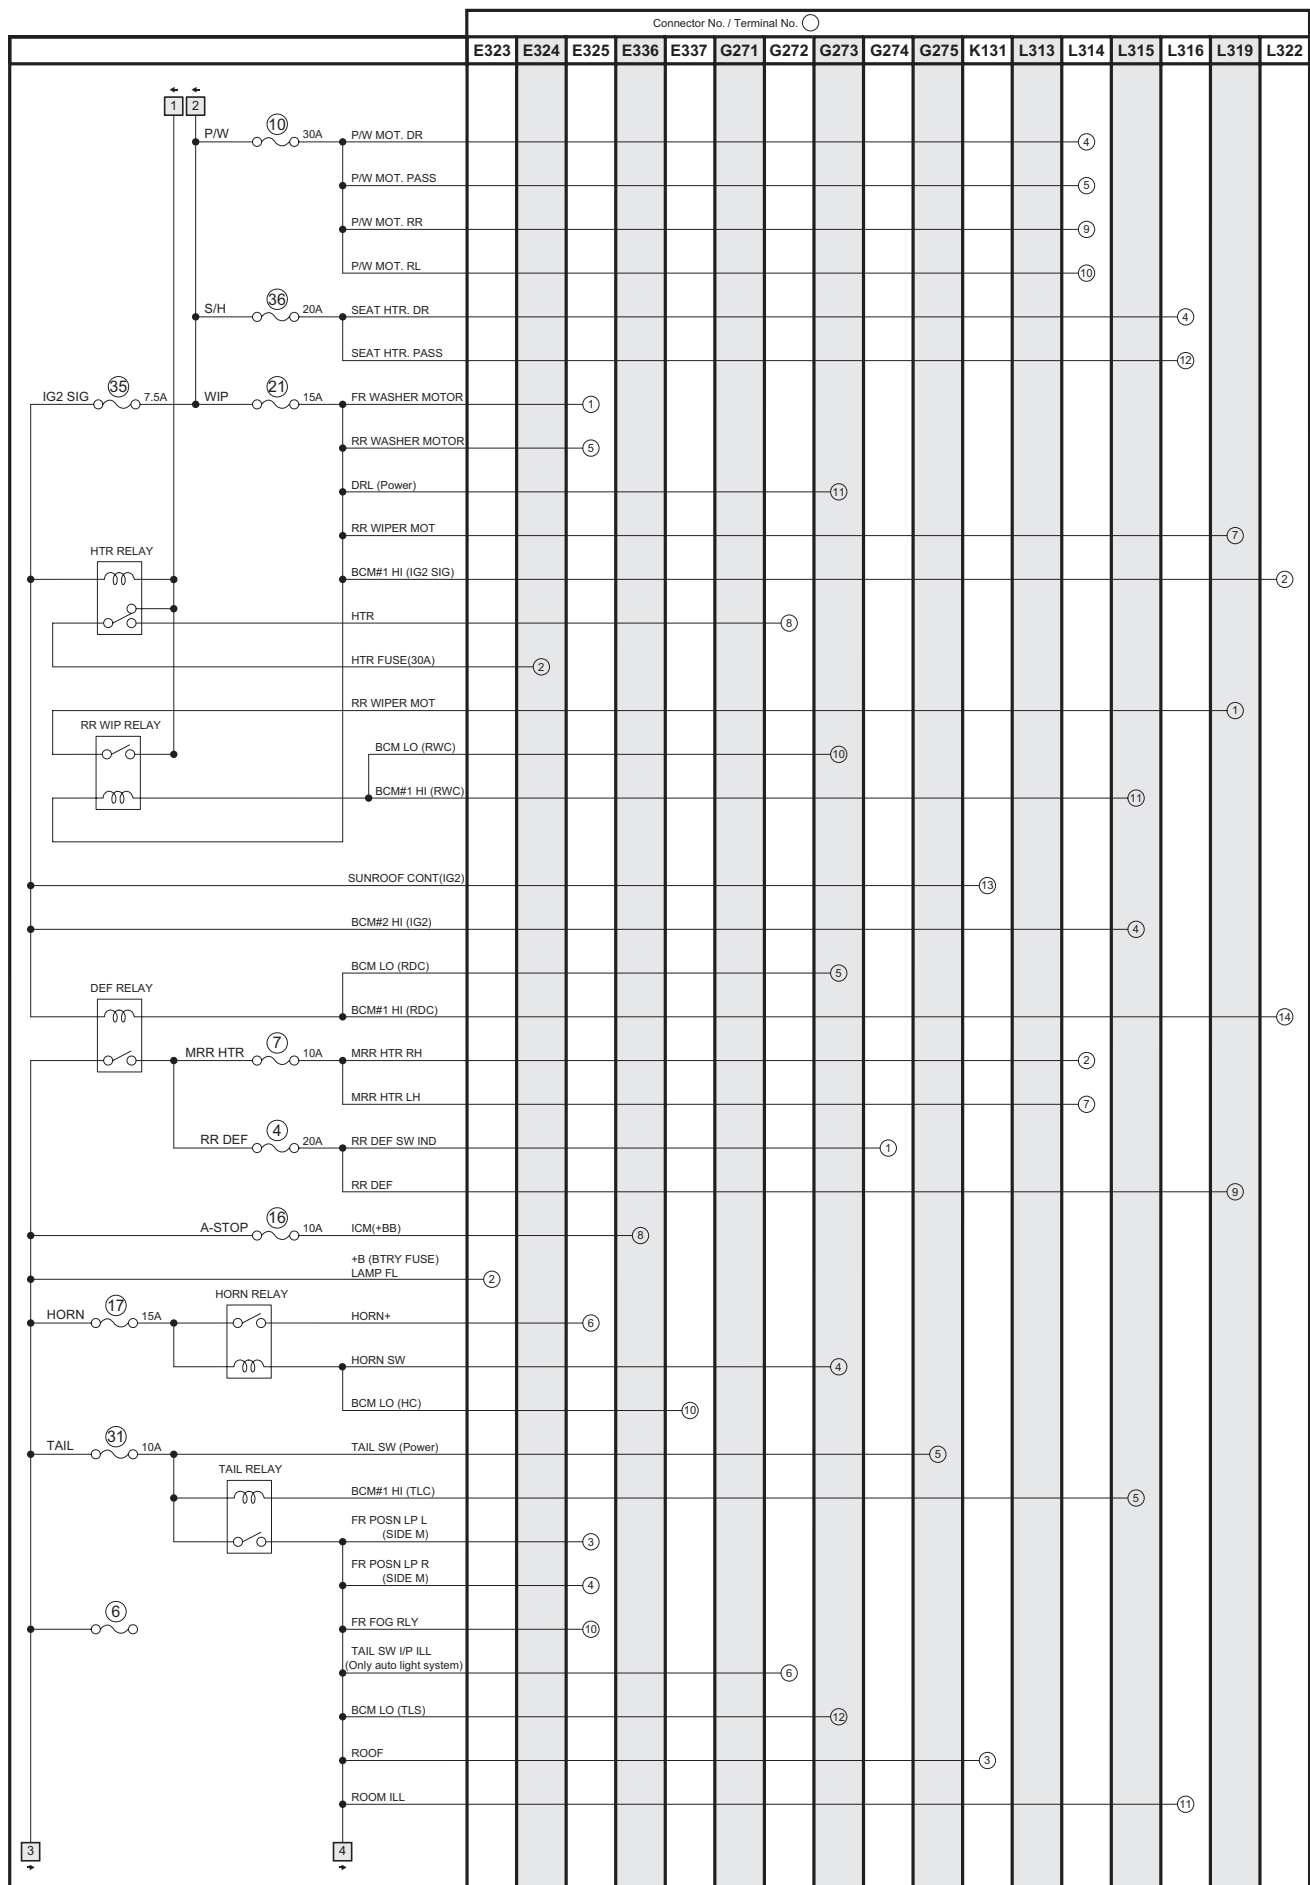

Circuito interno del bloque de conexiones (detalle)

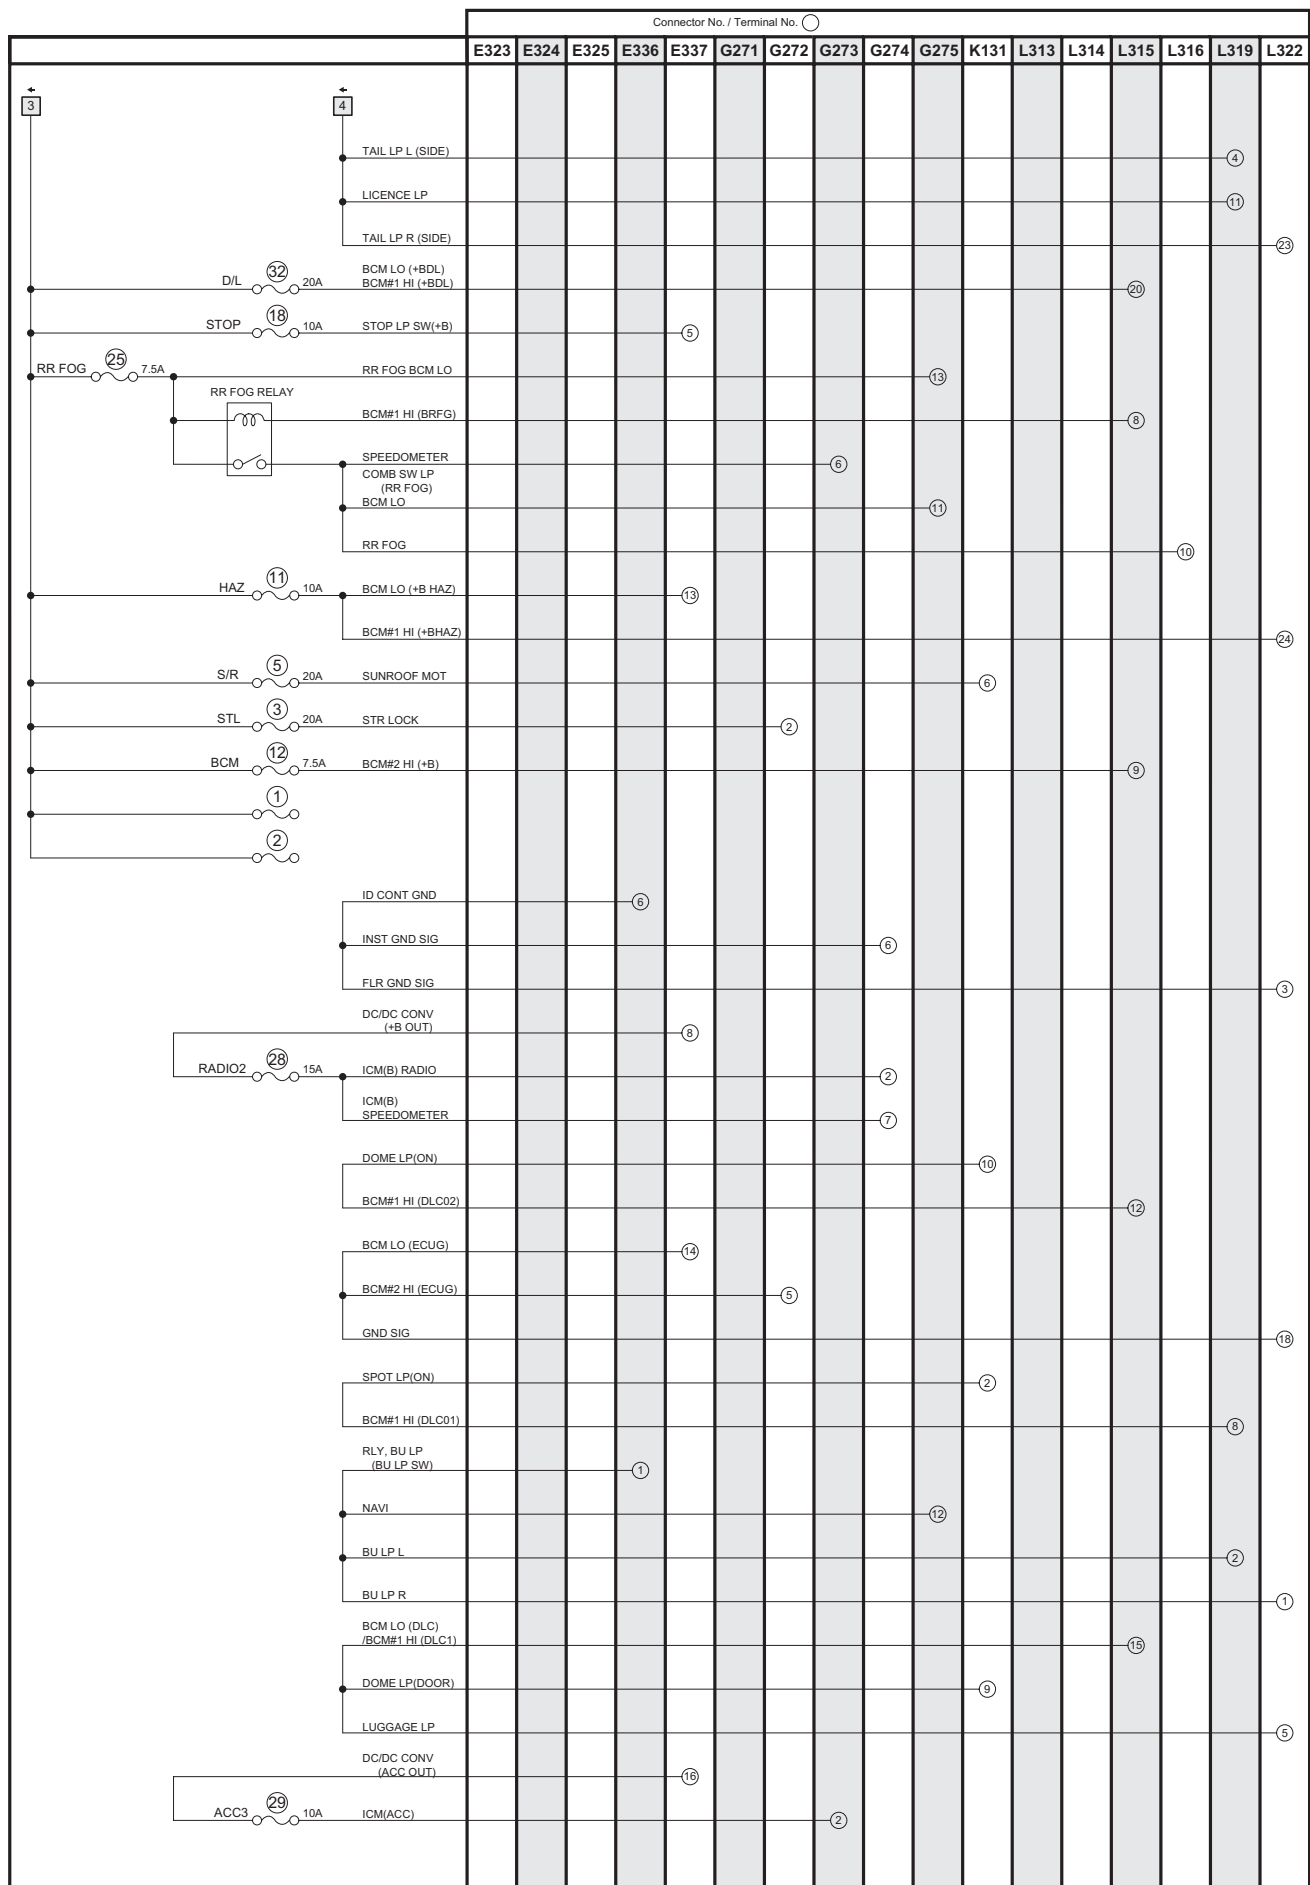

Circuito interno del bloque de conexiones (detalle)

		Connector No. / Terminal No.																	
		E323	E324	E325	E336	E337	G271	G272	G273	G274	G275	K131	L313	L314	L315	L316	L319	L322	
	STOP LP SW (LOAD)				④														
	ECM (STOP SIG)				④														
	BCM#2 HI (SLS)														①				
	STOP LP L																③		
	STOP LP R																	⑬	
	CHMSL																		⑳
	R/B SHORT PIN (30A)		①																
	RADIO ③⑩ 15A RADIO									①									
	DOME ②③ 7.5A AT CONT					①													
	BCM LO (+B) / BCM#2 HI (+BB1)					⑨													
	SPEED METER									⑨									
	HTR CTRL PNL										④								
	STRG ANGL										⑨								
	ALDL											②							
	KEY RMDR SW ILL											③							
	DOME/SPOT LP												④						
	SPOT LP / VANITY MIRR LP													⑫					
	LUGGAGE LP																		⑪
	BCM#1 HI (+B)																		⑲
	SUNROOF ILL / BCM#1 HI (DLC2)									⑩									
SUNROOF ILL / RR SPOT LP (DOOR)												⑪							