




Unutarnji krug razvodnog bloka (detalj)

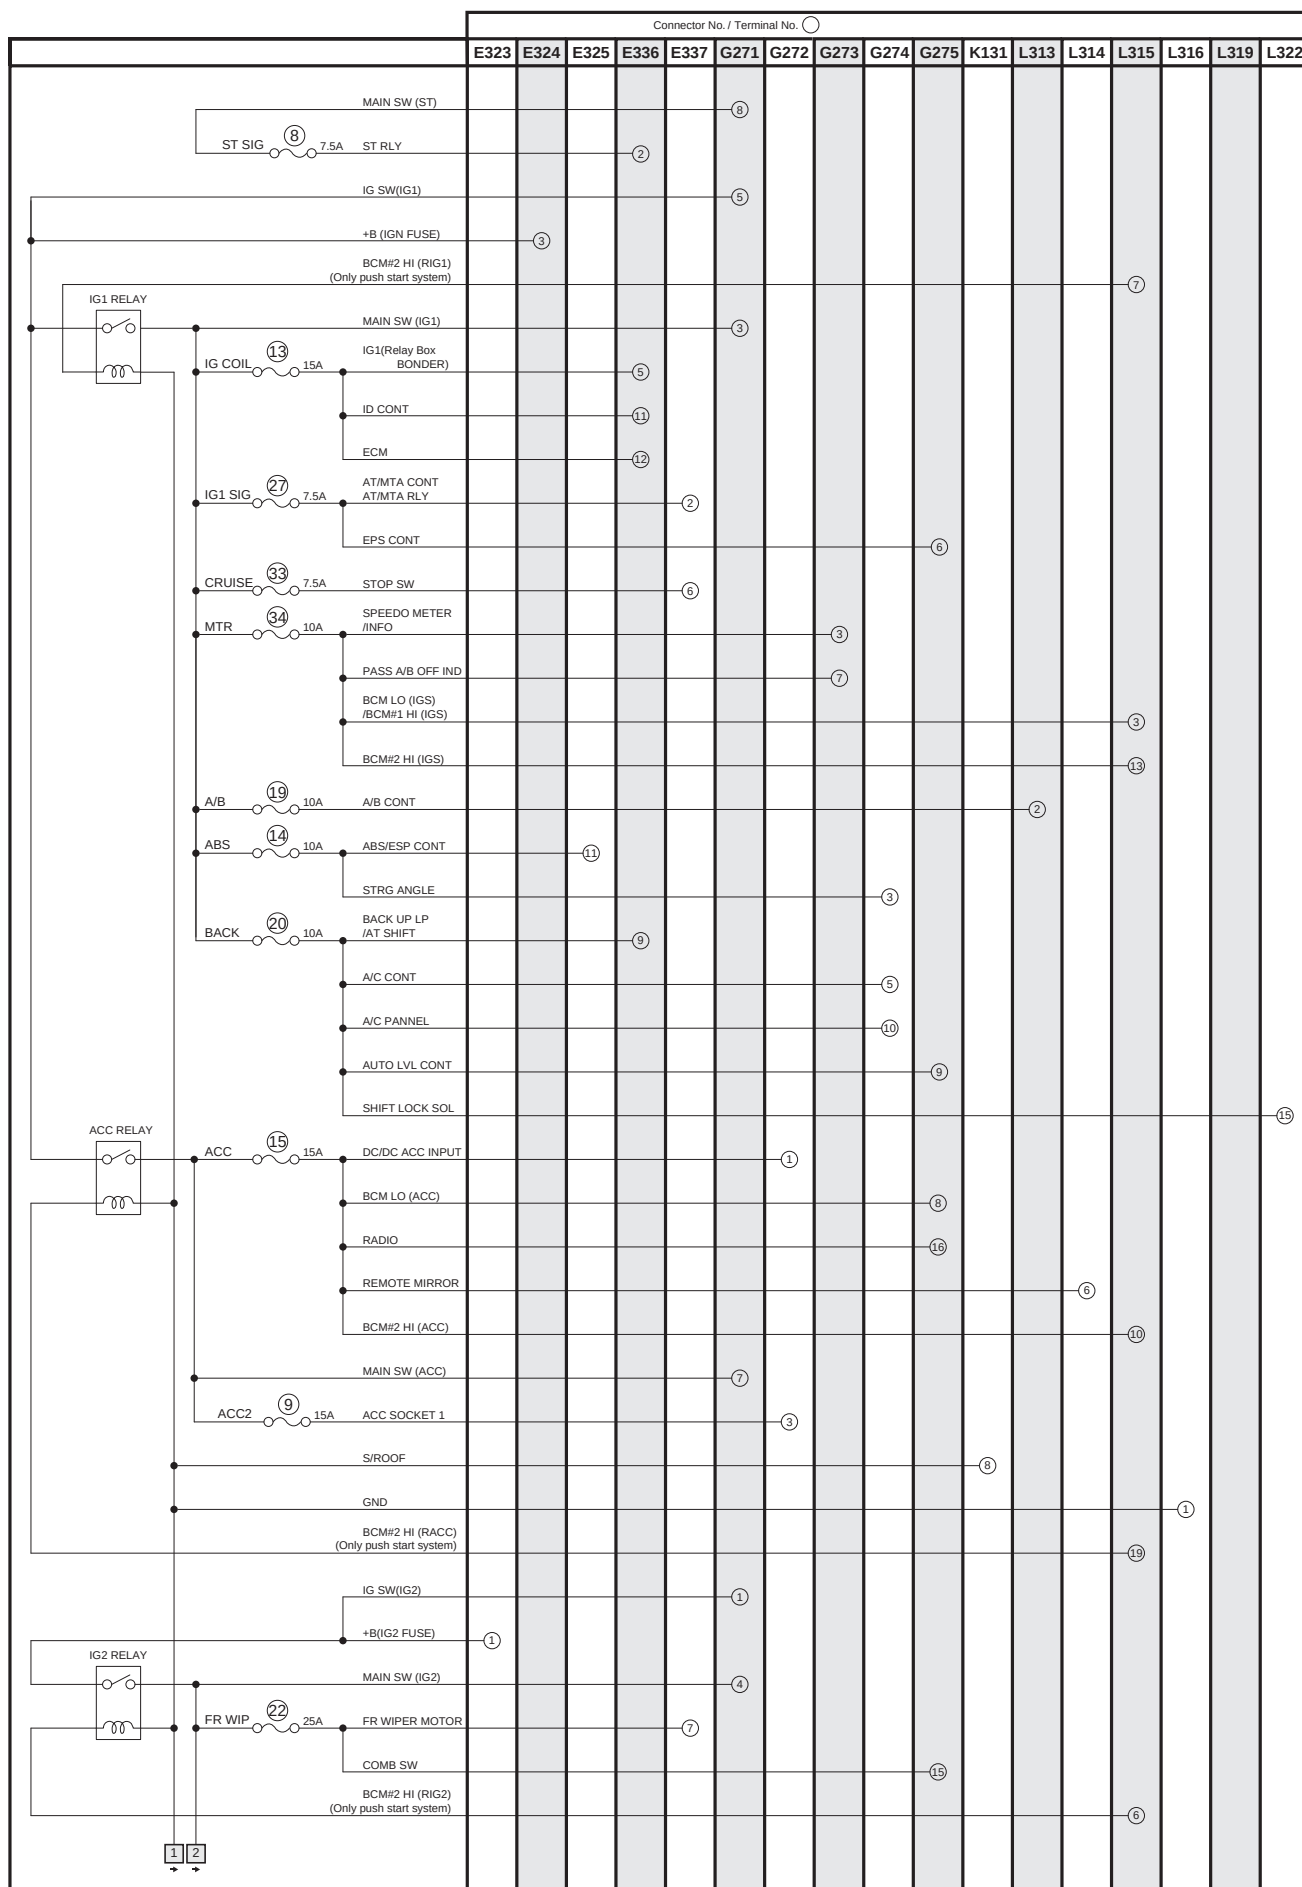


Unutarnji krug razvodnog bloka (detalj)

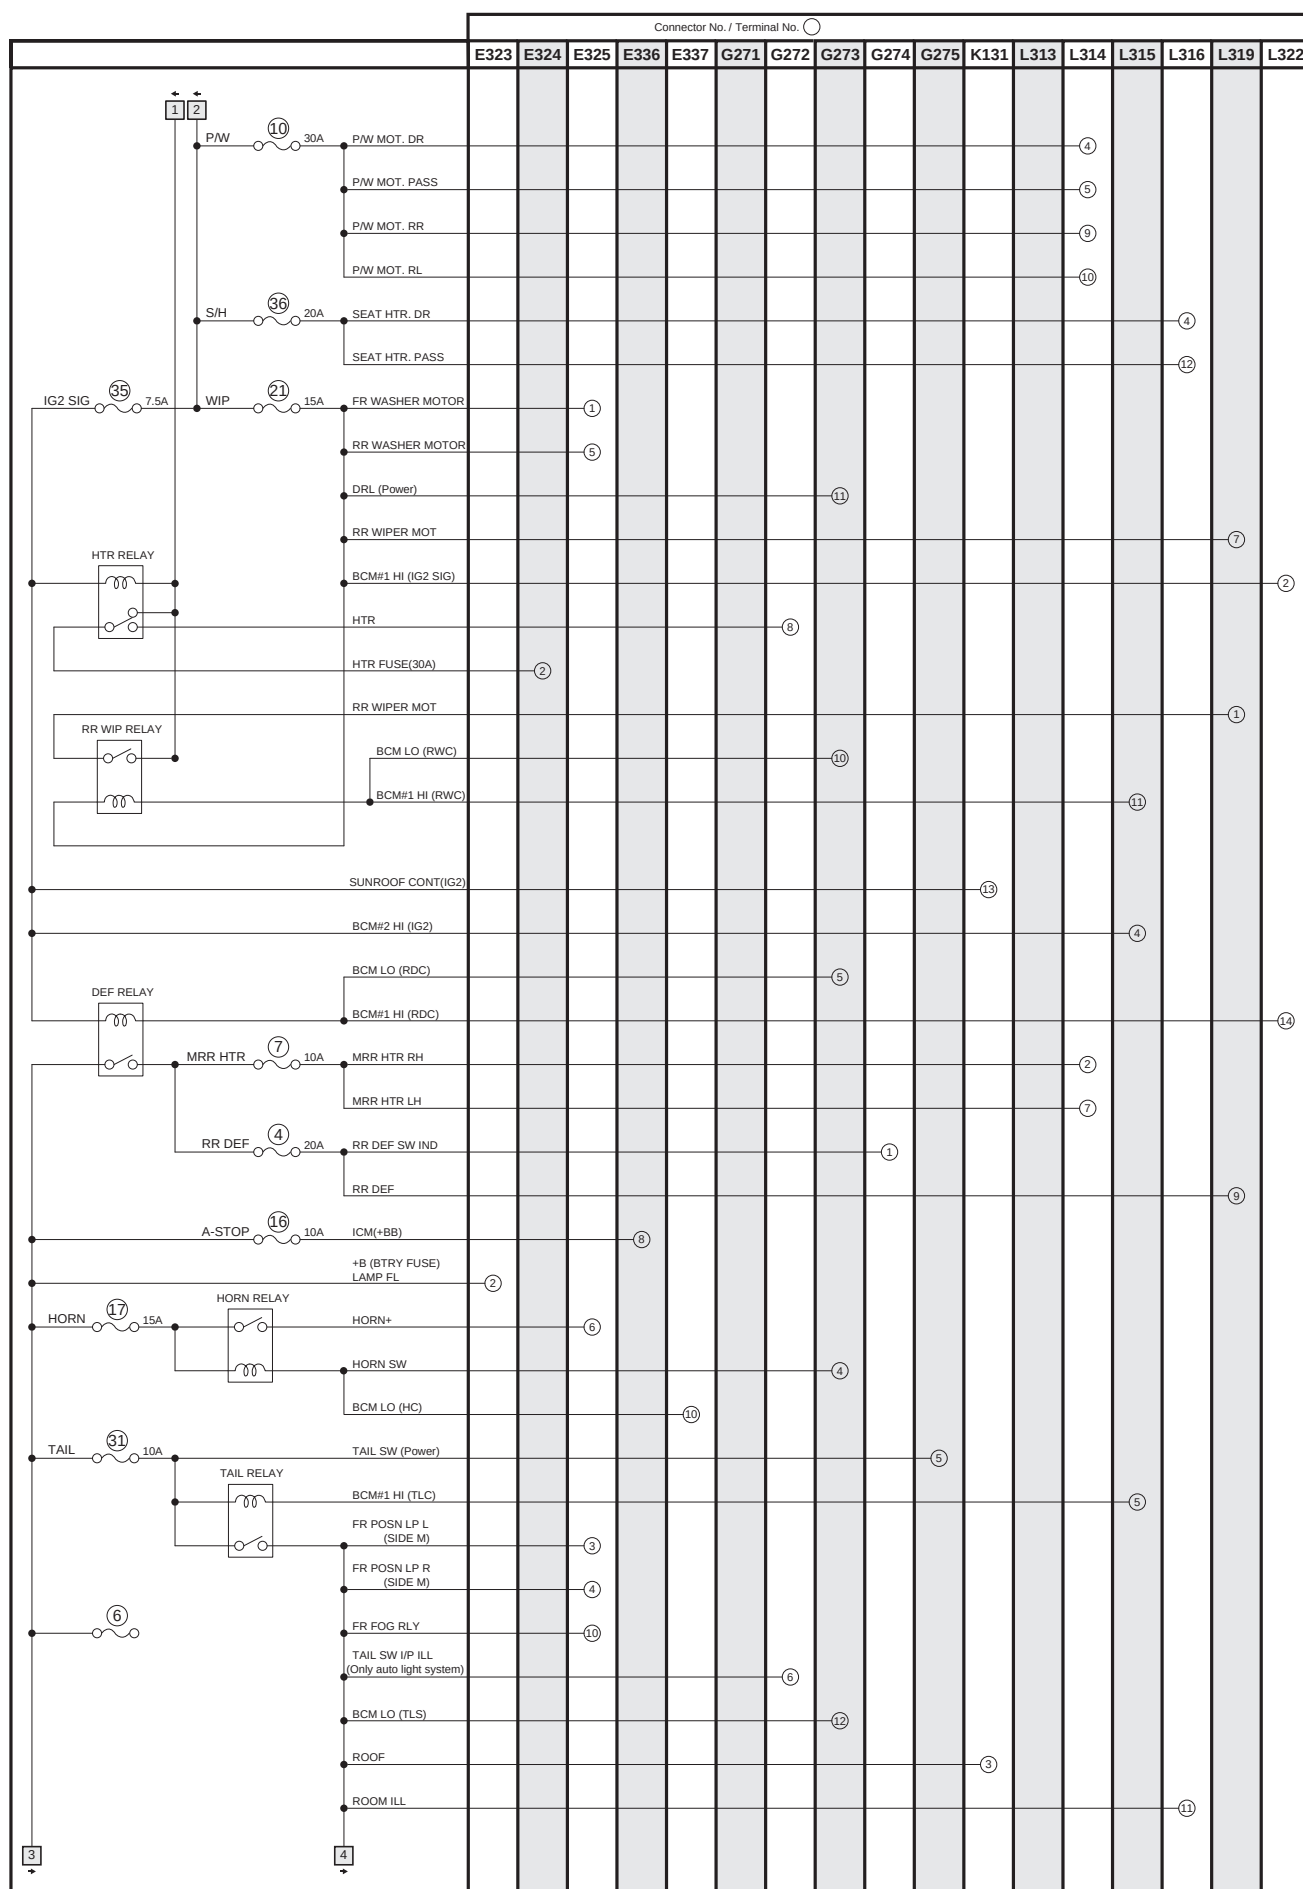

Unutarnji krug razvodnog bloka (detalj)

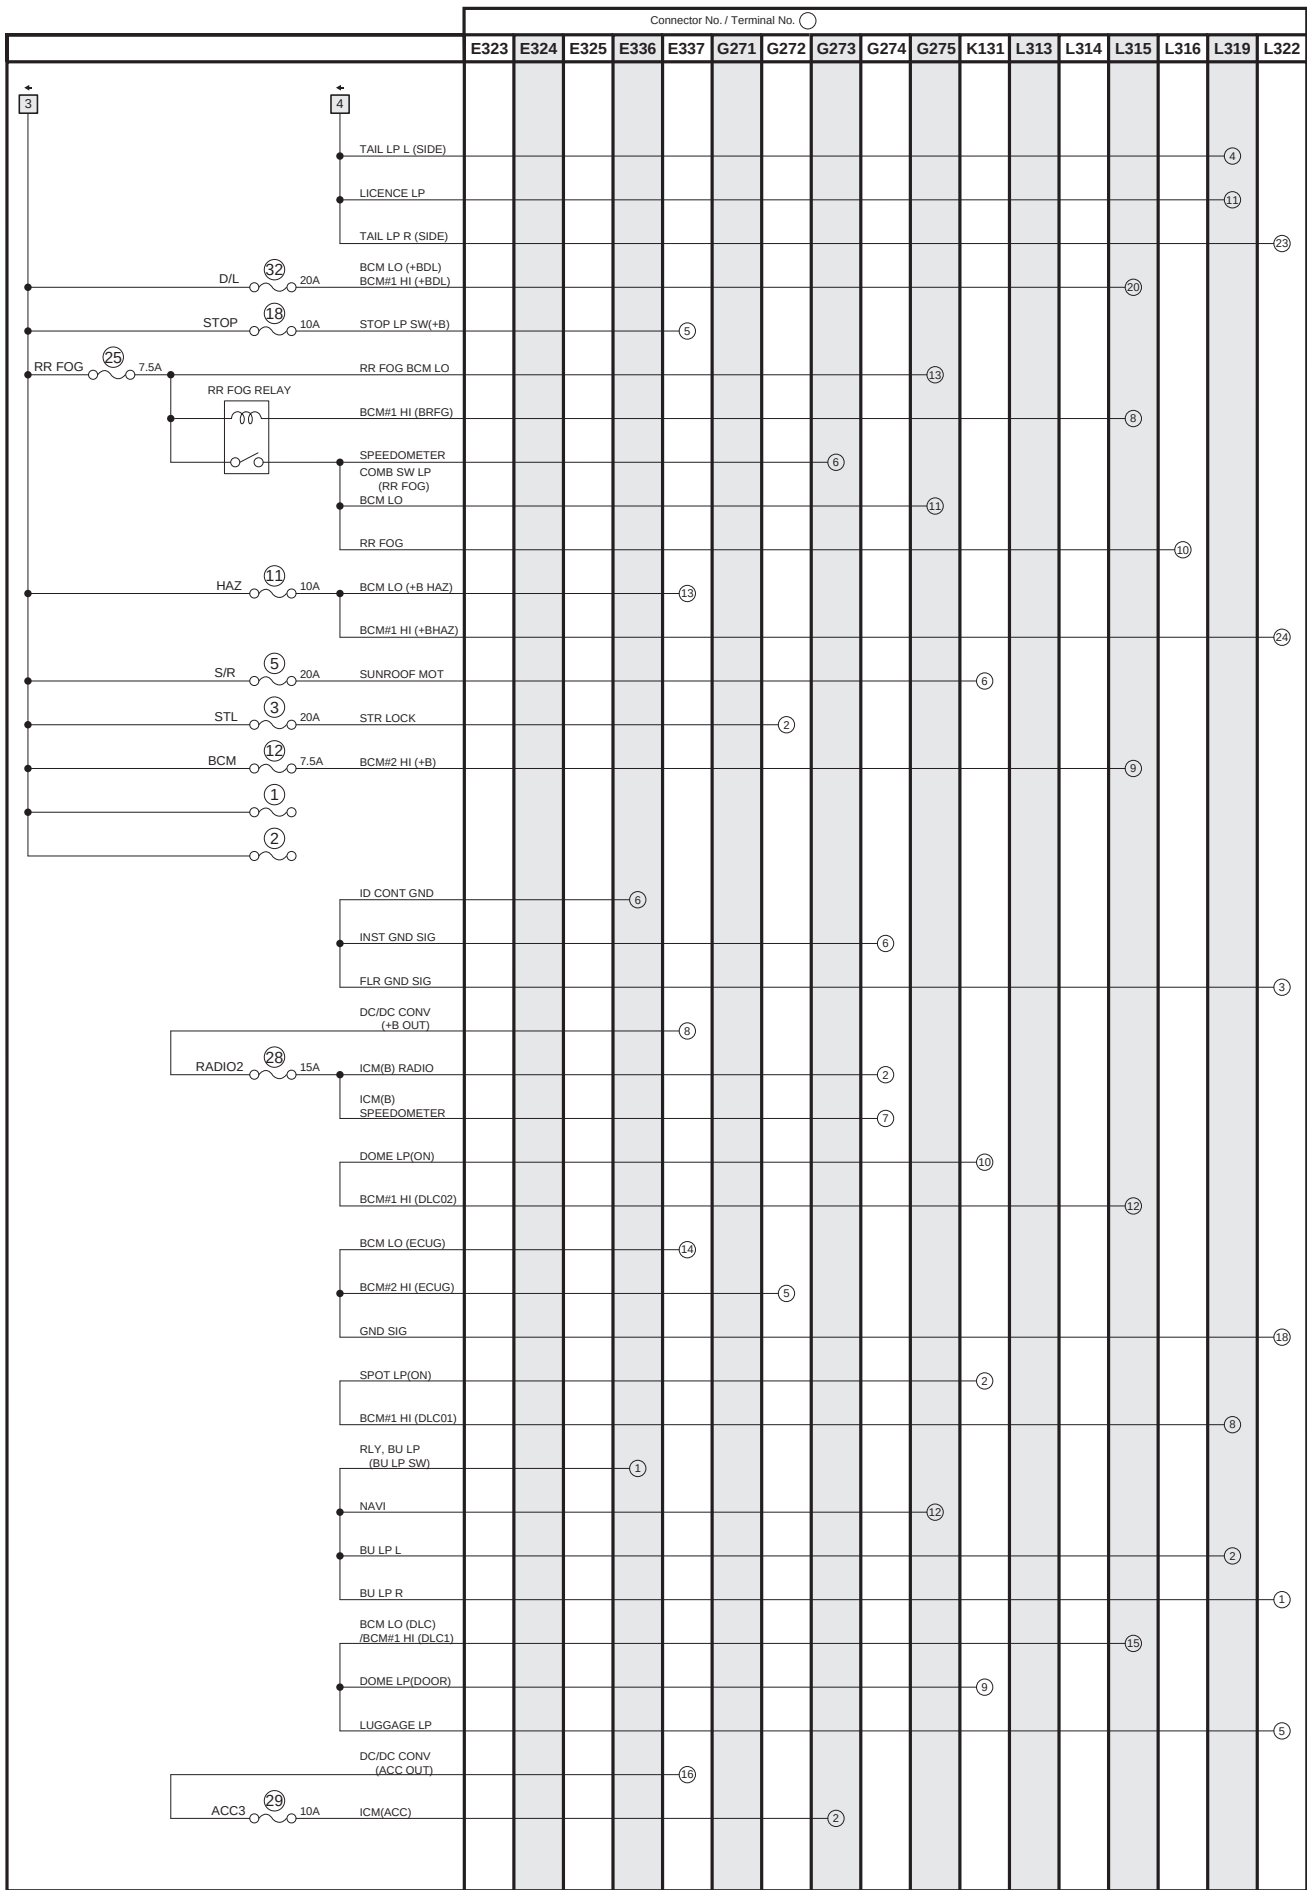

Unutarnji krug razvodnog bloka (detalj)

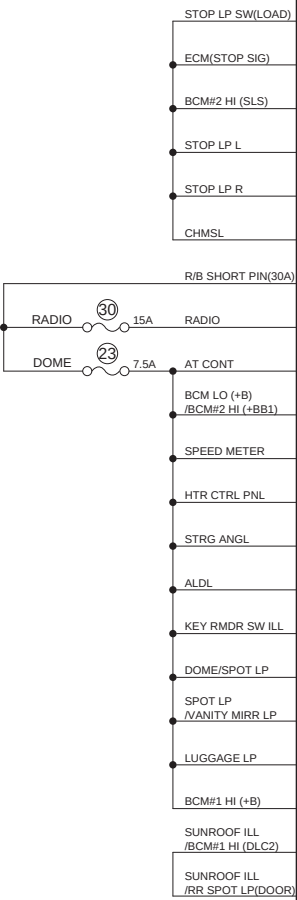		Connector No. / Terminal No. 																	
		E323	E324	E325	E336	E337	G271	G272	G273	G274	G275	K131	L313	L314	L315	L316	L319	L322	
	STOP LP SW(LOAD)					④													
	ECM(STOP SIG)				④														
	BCM#2 HI (SLS)														①				
	STOP LP L																③		
	STOP LP R																	⑬	
	CHMSL																	⑫	
	R/B SHORT PIN(30A)		①																
	RADIO ③① 15A RADIO								①										
	DOME ②③ 7.5A AT CONT					①													
	BCM LO (+B) /BCM#2 HI (+BB1)					⑨													
	SPEED METER								⑨										
	HTR CTRL PNL									④									
	STRG ANGL									⑨									
	ALDL										②								
	KEY RMDR SW ILL										③								
	DOME/SPOT LP											④							
	SPOT LP /VANITY MIRR LP											⑫							
	LUGGAGE LP																		⑪
	BCM#1 HI (+B)																		⑪
	SUNROOF ILL /BCM#1 HI (DLC2)								⑩										
SUNROOF ILL /RR SPOT LP(DOOR)											⑪								