


How to Operate SUZUKI Wiring Diagram Manuals (Advanced Version)

Table of Contents

• Top Screen	 1
• Main Screen	 2
Objects with red mark	 4
Objects with blue mark	 4
• Related Information Window	 5
• Reference Window	 6
• Keyword Search Window	 7
• Print Displayed Information	 8



Top Screen

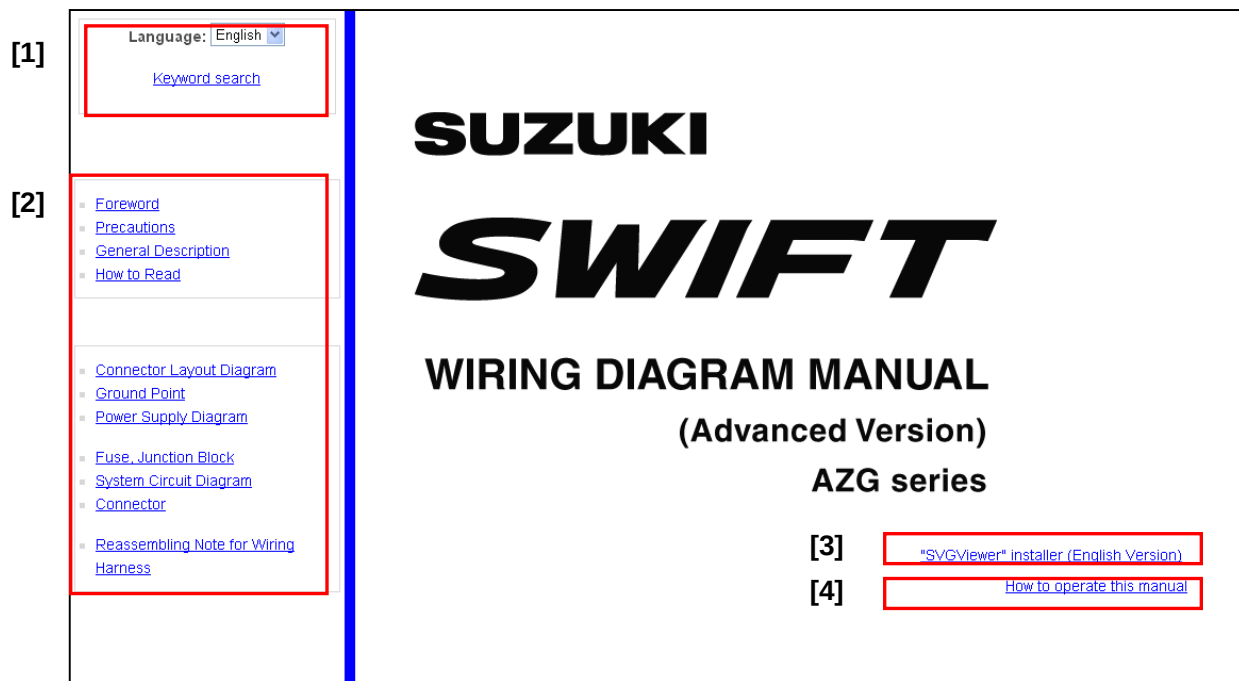

[1] Language selection, Keyword search

- Language selection

Select one language in the pull-down menu to show each manual in the selected language.

- Keyword search

Select this link to show the keyword search window.  Refer to [Keyword search window]

[2] Sub-frame

Sub-frame shows the list of information types.

Select one link of information type. After selecting the link, the main screen will appear or the reference window will separately appear to show the reference information.

[3] SVG viewer installer (only for the window on the browser: "Internet Explorer")


Select this link to activate SVG viewer installer.

SVG viewer has to be installed to show all the images in wiring diagram manuals on the browser: "Internet Explorer".

[4] How to operate this manual

Select this link to show "How to operate this manual".

Main Screen

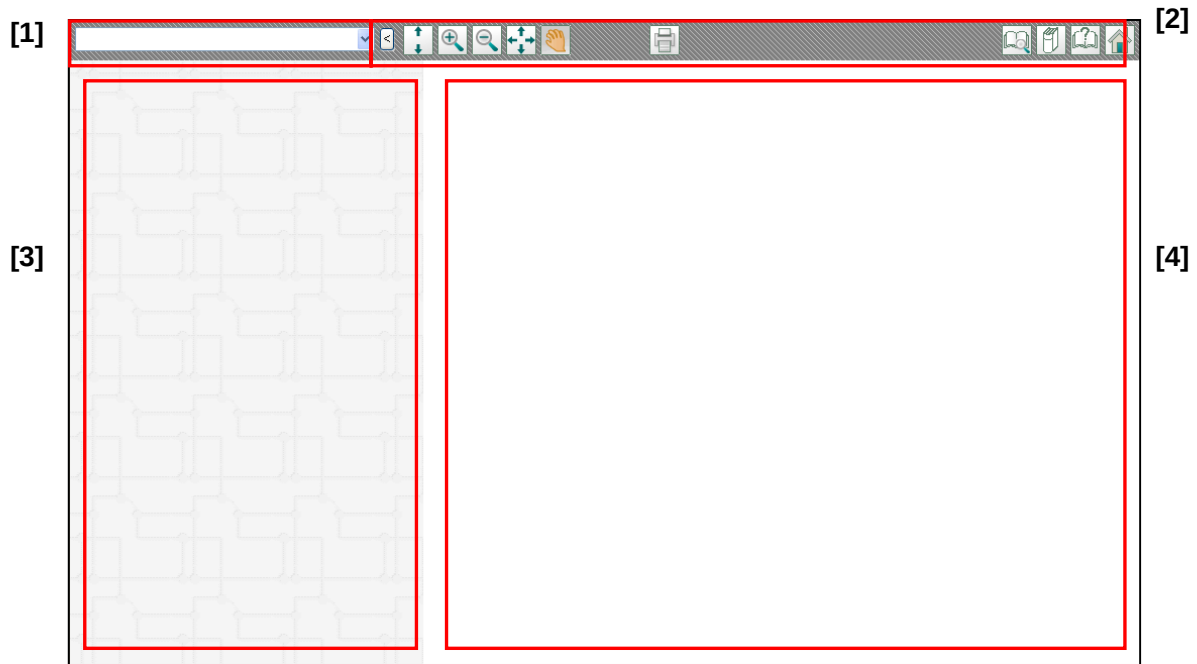

[1] Select menu for information type



Select the information type from this pull-down menu.

The category for the selected information type and the list of contents will appear in the sub-frame.

[2] Icons for each action



- Hide the sub-frame ()
Click this icon to hide the sub-frame and show the enlarged main frame. Click this icon again to display the sub-frame.
- Fit image to window ()
Click this icon to fit the image in the main frame to its frame size.
- Zoom in ()
Click this icon to enlarge the image in the main frame. (Each time you click this icon, the image becomes bigger and bigger.)
- Zoom out ()
Click this icon to reduce the image in the main frame. (Each time you click this icon, the image becomes smaller and smaller.)
- Show whole image ()
Click this icon to show the whole image in the main frame.

- f. Screen switching ()

NOTE

This icon is not displayed on the window of the browser: "FireFox".

Click this icon to switch the status of ON  and OFF .

In the status of ON, drag the image, which is shown in the main frame, to move/adjust the displayed position. In the initial setting, the status is ON.

- g. Print ()

Click this icon to show PDF file by Adobe reader / Acrobat reader and print the displayed PDF file.

- h. Keyword search ()

Click this icon to show the keyword search window.  Refer to [Keyword Search Window]

- i. Glossary ()

Click this icon to show the glossary window.

The glossary window shows the list of terms, which are used in this manual. Terms are listed up in English and the selected language, in a corresponding way.

- j. How to operate this manual ()

Click this icon to show "How to operate this manual".

- k. Top ()

Click this icon to return to the top page .

NOTE

When the target icon is not active, it does not work.


[3] Sub-frame

The sub-frame shows the category according to information type and the list of contents. Select one of contents in the list to show it in the main frame.

- In the selected content, its color is changed and its link is not available.
- Click the category with the mark  to display the contents in subordinate category. Click the same mark again to get back to the original status.

[4] Main frame

Main frame shows the contents, which are selected in the sub-frame.

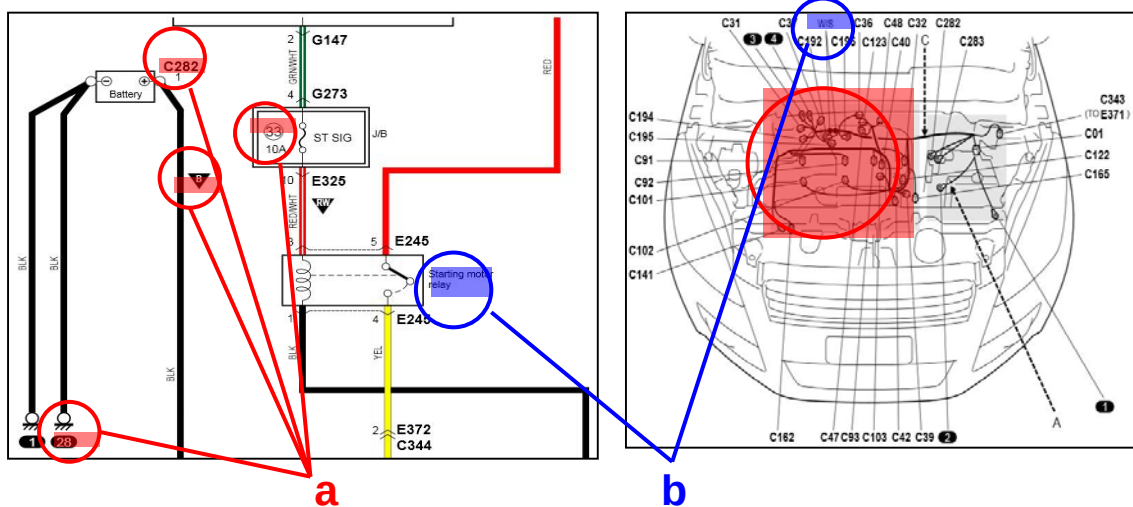

a. Objects with red mark

When putting the pointer over the object with red mark, click the object to show the related information window. After selecting the object, it will blink in red.

Selectable objects: **E221**(Connector code), **42**(Fuse no.), **4**(Ground no.), **B** ("SEE" mark), **[Shaded panel]** Refer to [Related Information Window].

b. Objects with blue mark

When putting the pointer over the object with blue mark, click the object to check the target term in the selected language.

NOTE

By clicking the object with blue mark, any other operation (e.g. showing the related information window) won't work.

Related Information Window

Click the specified object to show the detailed information and the related contents.

- Types of related information window

For the selected object, the following windows will appear.

Connector code

Connector No. G271
Connector Color N
Connector position J18
Remarks Without Engine push start system
Vehicle harness G: Instrument panel harness

1	2	3	4
5	6	7	8

System Circuit Diagram

- A-1-1 Cranking System Circuit Diagram (Petrol Model without Engine Push Start System)
- A-1-3 Cranking System Circuit Diagram (Diesel Model without Engine Push Start System)

Connector Layout Diagram

Instrument Panel

- G: Instrument harness/F: Accessory socket wire/G: Contact coil (RHD model)
- G: Instrument harness/F: Accessory socket wire/G: Contact coil (LHD model)

Power Supply Diagram

- P-1-1 Power Supply Diagram (Petrol Model)
- P-1-2 Power Supply Diagram (Diesel Model)

Fuse, Junction Block

- Junction Block (RHD Connector/Fuse Layout)
- Junction Block (LHD Connector/Fuse Layout)

Ground no.

Ground Point
Ground No. 35
Remarks
Location Photo

System Circuit Diagram

- A-5-1 Engine and A/C Control System Circuit Diagram (Petrol Model)
- A-5-2 Engine and A/C Control System Circuit Diagram (Diesel Model)
- A-6-1 Body Control System Circuit Diagram (Without Engine Push Start System)
- A-6-2 Body Control System Circuit Diagram (With Engine Push Start System)
- A-10 Keyless-security Control System Circuit Diagram (With Engine Push Start System)
- D-1-2 Headlight System Circuit Diagram (With Engine Push Start System)
- D-2-1 Position, Tail, Illumination and Licence Plate Light System Circuit Diagram (With Engine Push Start System)
- D-2-2 Position, Tail, Illumination and Licence Plate Light System Circuit Diagram (Without Engine Push Start System)
- D-3-1 Front Fog Light System Circuit Diagram (Without Engine Push Start System)
- D-3-2 Front Fog Light System Circuit Diagram (With Engine Push Start System)
- D-6 Turn Signal and Hazard Warning Light System Circuit Diagram
- D-9 Headlight Beam Levelling System Circuit Diagram


Connector Layout Diagram

Engine Compartment

- E: Main harness (Diesel RHD model)
- E: Main harness (Diesel LHD model)
- E: Main harness (Petrol RHD model)
- E: Main harness (Petrol LHD model)

Fuse no.

Fuse No. 72
Remarks
Fuse 100A
Description on the cover Generator (+)
Protected circuit

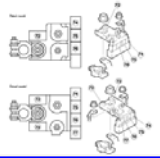

System Circuit Diagram

- A-2-1 Charging System Circuit Diagram (Petrol Model)
- A-2-2 Charging System Circuit Diagram (Diesel Model)

Power Supply Diagram

- P-1-1 Power Supply Diagram (Petrol Model)
- P-1-2 Power Supply Diagram (Diesel Model)

Fuse, Junction Block

- Fuses in Main Fuse Box

"SEE" mark

System Circuit Diagram

- A-3 Ignition System Circuit Diagram (Petrol Model)
- A-5-1 Engine and A/C Control System Circuit Diagram (Petrol Model)

→

Detailed information

→

Link to related contents

→

Link to reference information

- ✧ Detailed information

For the selected object, the detailed information such as terminal arrangement and specifications will appear.

- ✧ Link to related contents

This is the link to the contents, which include the selected object.

By clicking the link, the content in main frame will be changed.

- In the selected content, its color will be changed and its link won't be available.
- In the switched main frame, the selected object will blink.

- ✧ Link to reference information

This is the link to the reference information of selected object, such as location photo and junction block connector/fuse layout.

The reference information will appear in the new reference window.

When the selected object exists in the reference window, it will blink.




Refer to [Reference Window]


Reference Window

Click the specified object in main screen or click the link to the reference information in the related information window, the reference window will appear.

Location photo

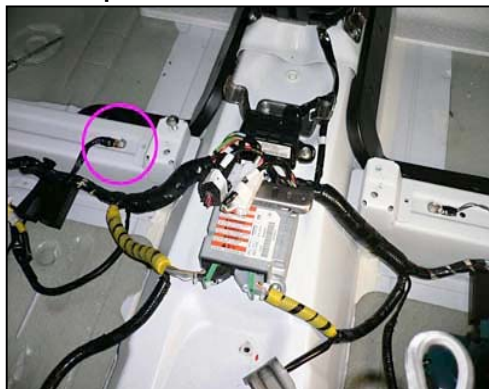


Junction block layout

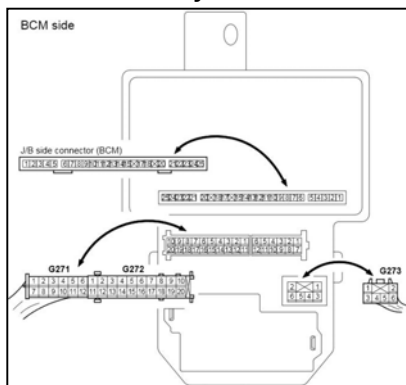

Junction block (detail)

J/B		Connector			
		BCM	E323	E324	E326 G27
IG1	IG1				①
IG COIL ②①	IG COIL				
MTR ②②	BCM IG1				①①
A/B ②⑦	MTR (IG)				
	A/B CONT				
	K-LINE				⑧
	K-LINE				⑧
	A/B SIGNAL				
	A/B SIGNAL				
	A/B IND				
	A/B IND				

Reassembling note for wiring harness

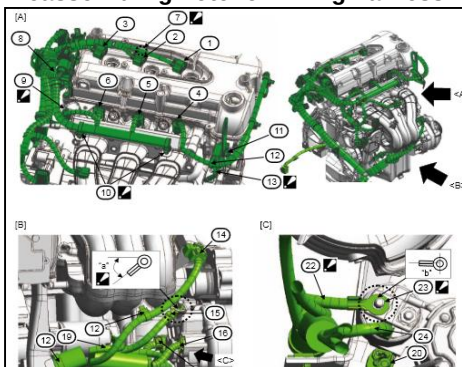

NOTE

In the reference window, [Objects with red mark] and [Objects with blue mark] sometimes exist. You will be able to find these objects when you put the pointer over them, in the same way of the main screen in main frame.

Select [Objects with red mark] to show the related information window and close the reference window.

Select [Objects with blue mark] to show the terms in the language, which is selected on the top page.  Refer to [Main frame]

Keyword Search Window

Select the link for keyword search in the top page or click the keyword search window.

Keyword search

English	Information type	Category	Contents
ABS controller	Reassembling Note for Wiring Harness	Around Strut	Main (Right side)
ABS controller ESP Pass the branch above the main trunk.	Reassembling Note for Wiring Harness	Around Strut	Main (Right side)
ABS sensor (R)	Reassembling Note for Wiring Harness	Around Main Floor	Floor (Left side)
ABS sensor rear	Reassembling Note for Wiring Harness	Around Main Floor	Floor (Right side)
ABS/ESP control module	System Circuit		A-11 Engine Auto Stop and Start

[1]

[2]

[1] Edit box for keyword and search button

Input the target keyword in edit box and click the search button to search the following information.

- Connector Layout Diagram
- Ground Point
- Power Supply Diagram
- Fuse, Junction Block
- System Circuit Diagram
- Reassembling Note for Wiring Harness

NOTE

Input some keywords with a space to search the word, which includes these keywords.
e.g. When you input “switch brake” in the edit box, you will find the word, which includes both “switch” and “brake”.

[2] Search result

The following information is shown.

English	Information type	Category	Contents
ABS controller	Reassembling Note for Wiring Harness	Around Strut	Main (Right side)
ABS controller ESP Pass the branch above the main trunk.	Reassembling Note for Wiring Harness	Around Strut	Main (Right side)
ABS sensor (R)	Reassembling Note for Wiring Harness	Around Main Floor	Floor (Left side)
ABS sensor rear	Reassembling Note for Wiring Harness	Around Main Floor	Floor (Right side)

a

b

c


- This shows the word(s), which includes the keyword.
- This shows the information type and category, which include the keyword.
- This shows the contents which include the keyword. Select the link of each content to get necessary information. The main screen will be changed according to the selected content.

Print Displayed Information


When printing the displayed information is possible, [Print] button  is available.

Click this button which allows the following two functions:

- 1-1. PDF file is displayed by Acrobat Reader / Adobe Reader.
- 1-2. Print the displayed PDF file by using the printing function of Acrobat Reader / Adobe Reader.

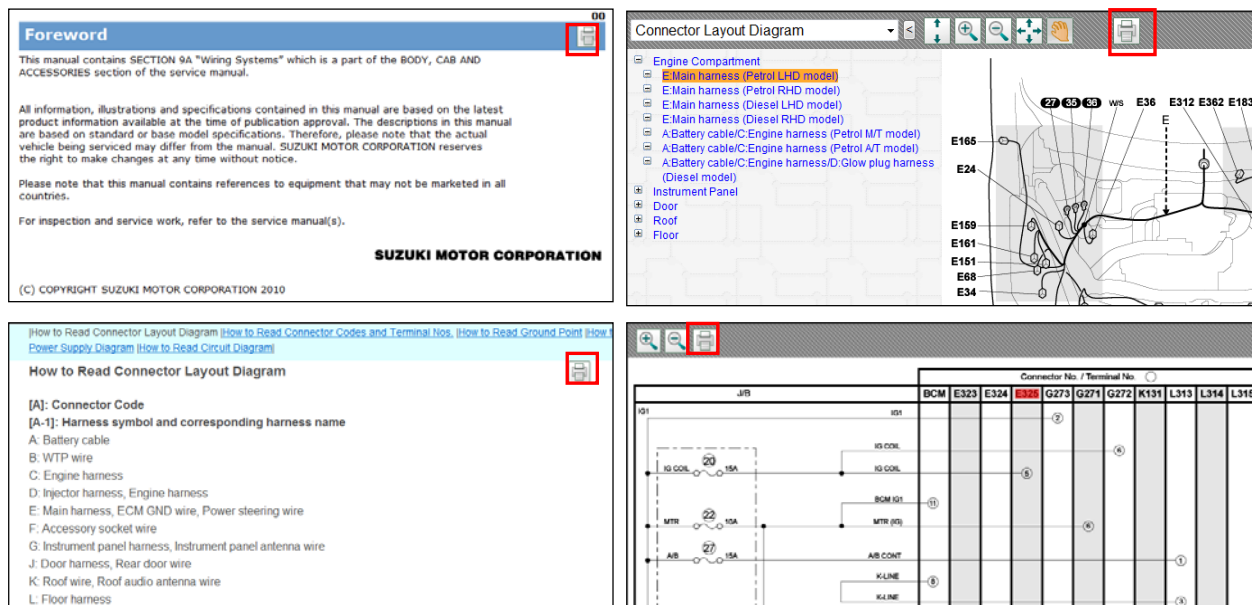

- 2-1. [Print Window] appears. (The window type varies depending on the selected OS and browser.)
- 2-2. Print the displayed window by using the printing function of [Print Window].

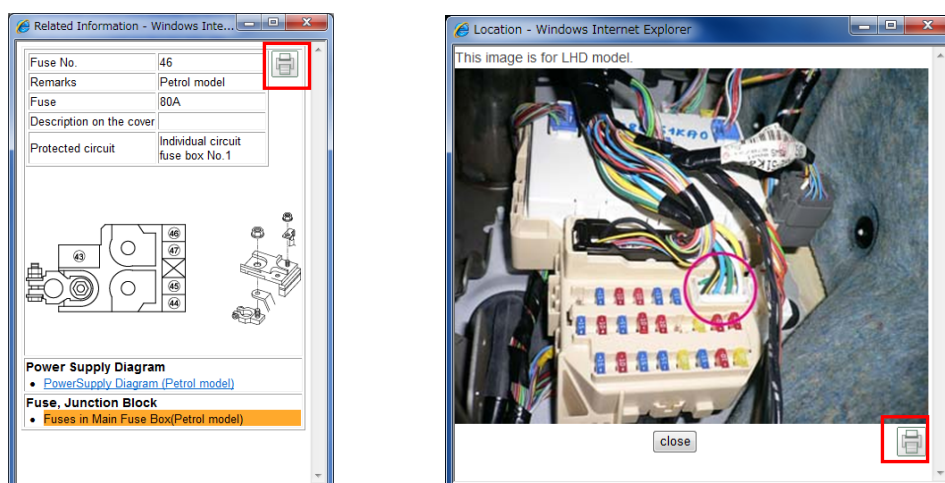

NOTE

If you use [Print] command in the file menu of browser, you might not print the target information properly.

END