
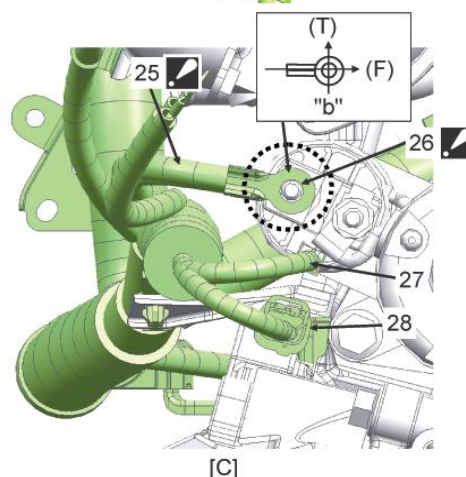
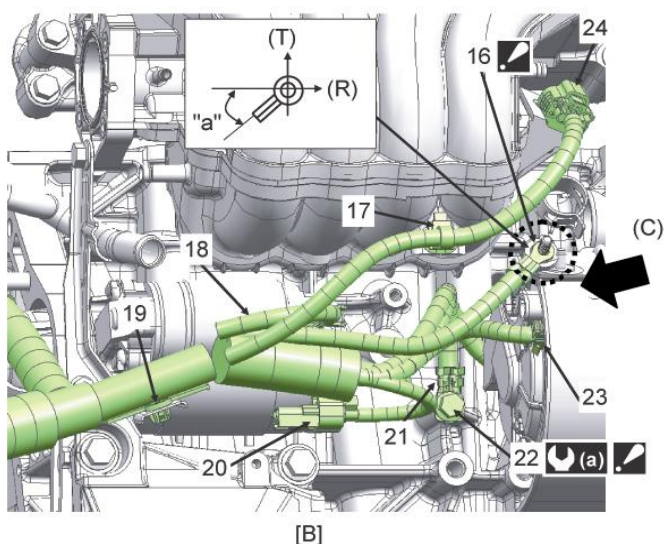
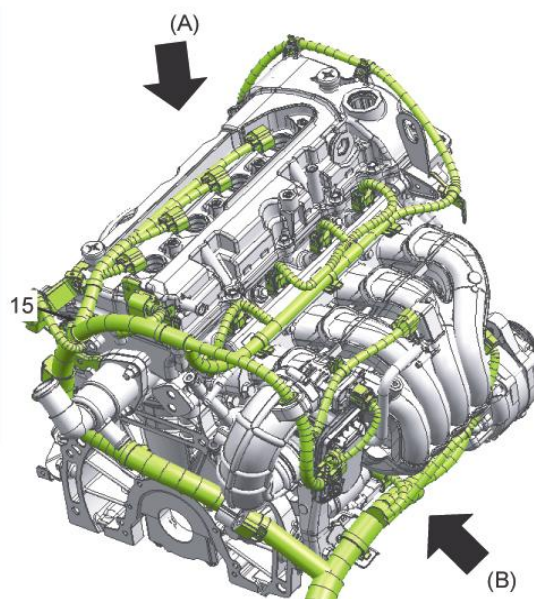


Reassembling Note for Wiring Harness

1/2

Around Engine

Petrol (Engine harness)

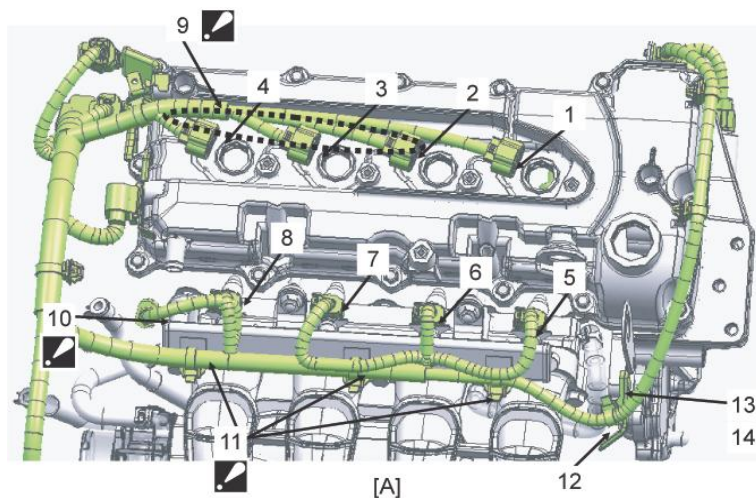

[A]: View (A)	"a". 45° Direct the terminal as shown. Keep this wire away from the intake manifold.
[B]: View (B)	17. Clamp
[C]: View (C)	18. Starting motor (+B) terminal
1. Ignition coil #1	19. Clamp
2. Ignition coil #2	20. Knock sensor
3. Ignition coil #3	21. Engine ground
4. Ignition coil #4	22. Ground bolt Confirm that the earth terminals do not move after tightening bolts.
5. Injector #1	(a) : 8.8 to 13.2 N·m (0.9kgf-m to 1.3kgf-m, 6.5lbt-ft to 10.0lbt-ft)
6. Injector #2	23. Generator
7. Injector #3	24. Air pressure sensor
8. Injector #4	25. Pass this wire on the trunk harness.
9. Pass the harness inside of head cover rib. Do not pass the harness over head cover rib.	26. Starting motor (+B) terminal Cover the terminal with the cap after tightening.
10. CAM sensor Pass the wire in front of the trunk harness.	"b". Direct the terminal as shown.

Reassembling Note for Wiring Harness

2/2

Around Engine

Petrol (Engine harness)

 11. Clamp Set these clamps before connecting to injector #1 to 4.	27. Starting motor magnet
12. Clamp	28. Knock sensor
13. Engine harness hook bracket	(F): Front
14. Engine harness hook bracket bolt	(R): Right
15. Engine harness	(T): Top
 16. Generator (+B) terminal Cover the terminal with the cap after tightening.	