


Reassembling Note for Wiring Harness

1/1

Around Battery

Petrol (Fusible link /+B terminal)

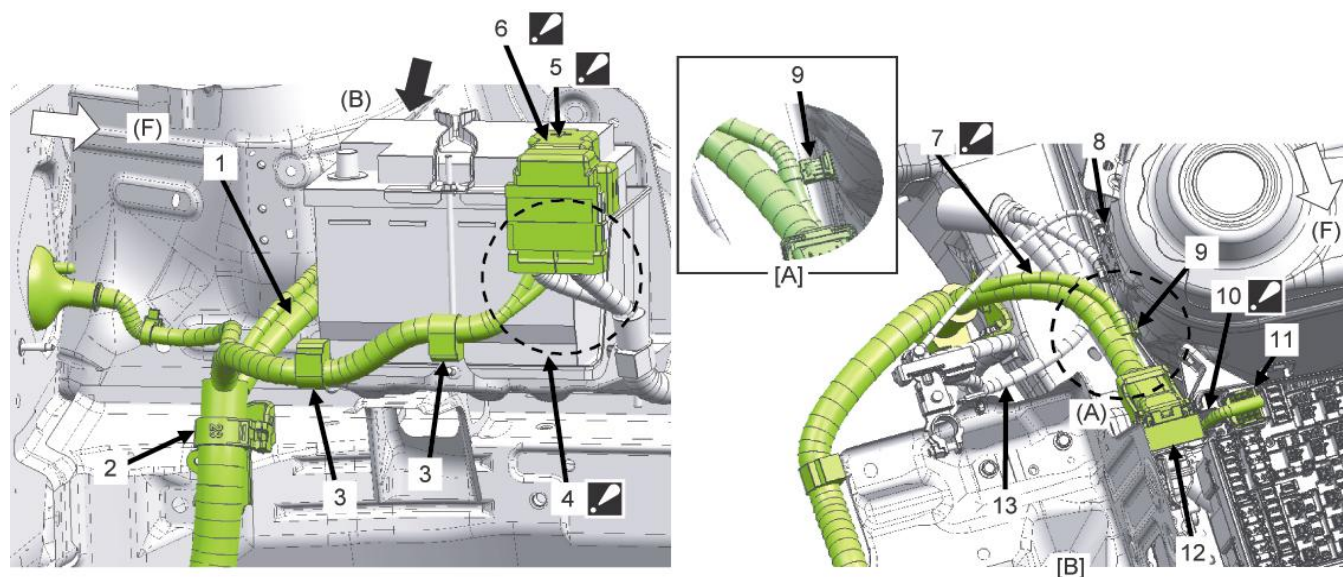

[A]: Detail (A)	7. Pass the engine harness (to ECU) through between body ground and current sensor (main harness).
[B]: Top view (B)	8. Body ground
1. Engine harness	9. Clamp
2. Clamp	10. Lock the hinge of cover after connecting main harness.
3. Clamp	11. Main harness
4. Pass the engine harness (to fusible link) through the battery side of fusible link.	12. Engine ECU
5. Fusible link/+B terminal Put the cover firmly after confirming that the terminal does not move.	13. Current sensor
6. Confirm that the earth terminals do not move after tightening bolts.	(F): Front