


Reassembling Note for Wiring Harness

1/2

Around Strut
Main (Right side)



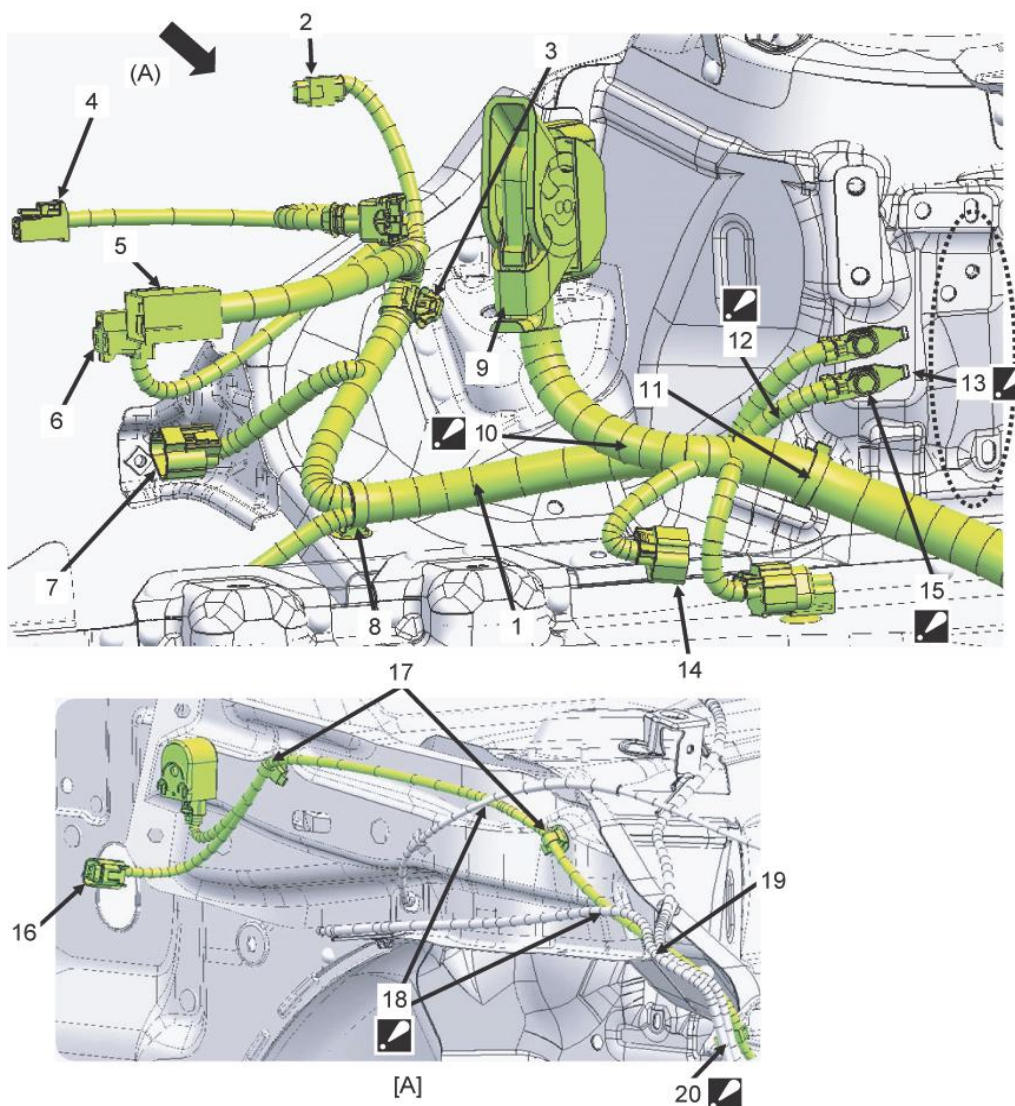


[A]: View (A)	
1. Main harness	11. Clamp
2. Front turn signal (R)	12. Locate the branch wire on the panel side of the trunk wire.
3. Clamp	13. Set the terminal to the hole, and tighten the bolt.
4. Position lamp (R)	14. A/C pressure sensor
5. HID unit (R)	15. Ground bolt Confirm that the earth terminals do not move after tightening bolts.
6. Headlight (R)	16. Side turn signal (R)
7. Headlight leveling (R)	17. Clamp
8. Clamp	18. Pass the harness inside of the hood release cable and washer hose.
9. ABS/ESP® controller	19. Washer hose
10. Pass the branch wire above the main trunk wire.	20. Set the wire (to side turn (R)) on the washer clamp.


Reassembling Note for Wiring Harness

2/2


Around Strut
Main (Right side)

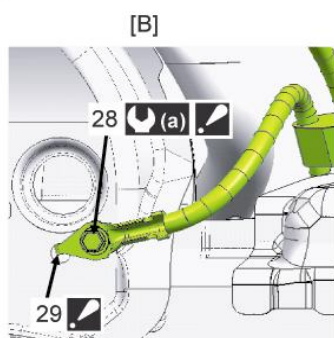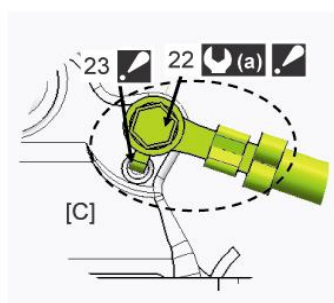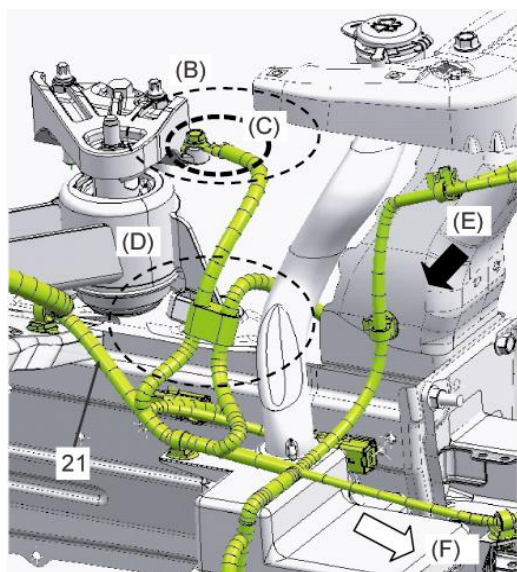

[E]

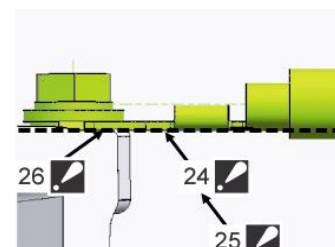

[C]

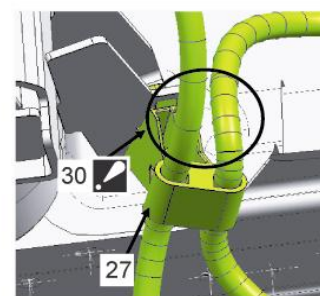

[D]

[B]: Detail (B)	25. Do not deform the shape of the terminal when installing.
[C]: Detail (C)	26. Boss surface
[D]: Detail (D)	27. Clamp
[E]: View (E)	28. Ground wire bolt Confirm that the earth terminals do not move after tightening bolts.
21. Main harness	(a) : 8.8 to 13.2 N·m (0.9kgf-m to 1.3kgf-m, 6.5lbt-ft to 10.0lbt-ft)
22. Ground wire bolt Confirm that the earth terminals do not move after tightening bolts.	29. Engine-Body connecting ground Set the terminal to the hole, and tighten the bolt.
(a) : 8.8 to 13.2 N·m (0.9kgf-m to 1.3kgf-m, 6.5lbt-ft to 10.0lbt-ft)	30. Do not cross two harnesses.
23. Engine-Body connecting ground Fit the terminal to the stopper before tightening the bolt.	(F): Front
24. The terminal shape: straight	