


Reassembling Note for Wiring Harness

1/2

Around Main Floor

Floor (Right side)

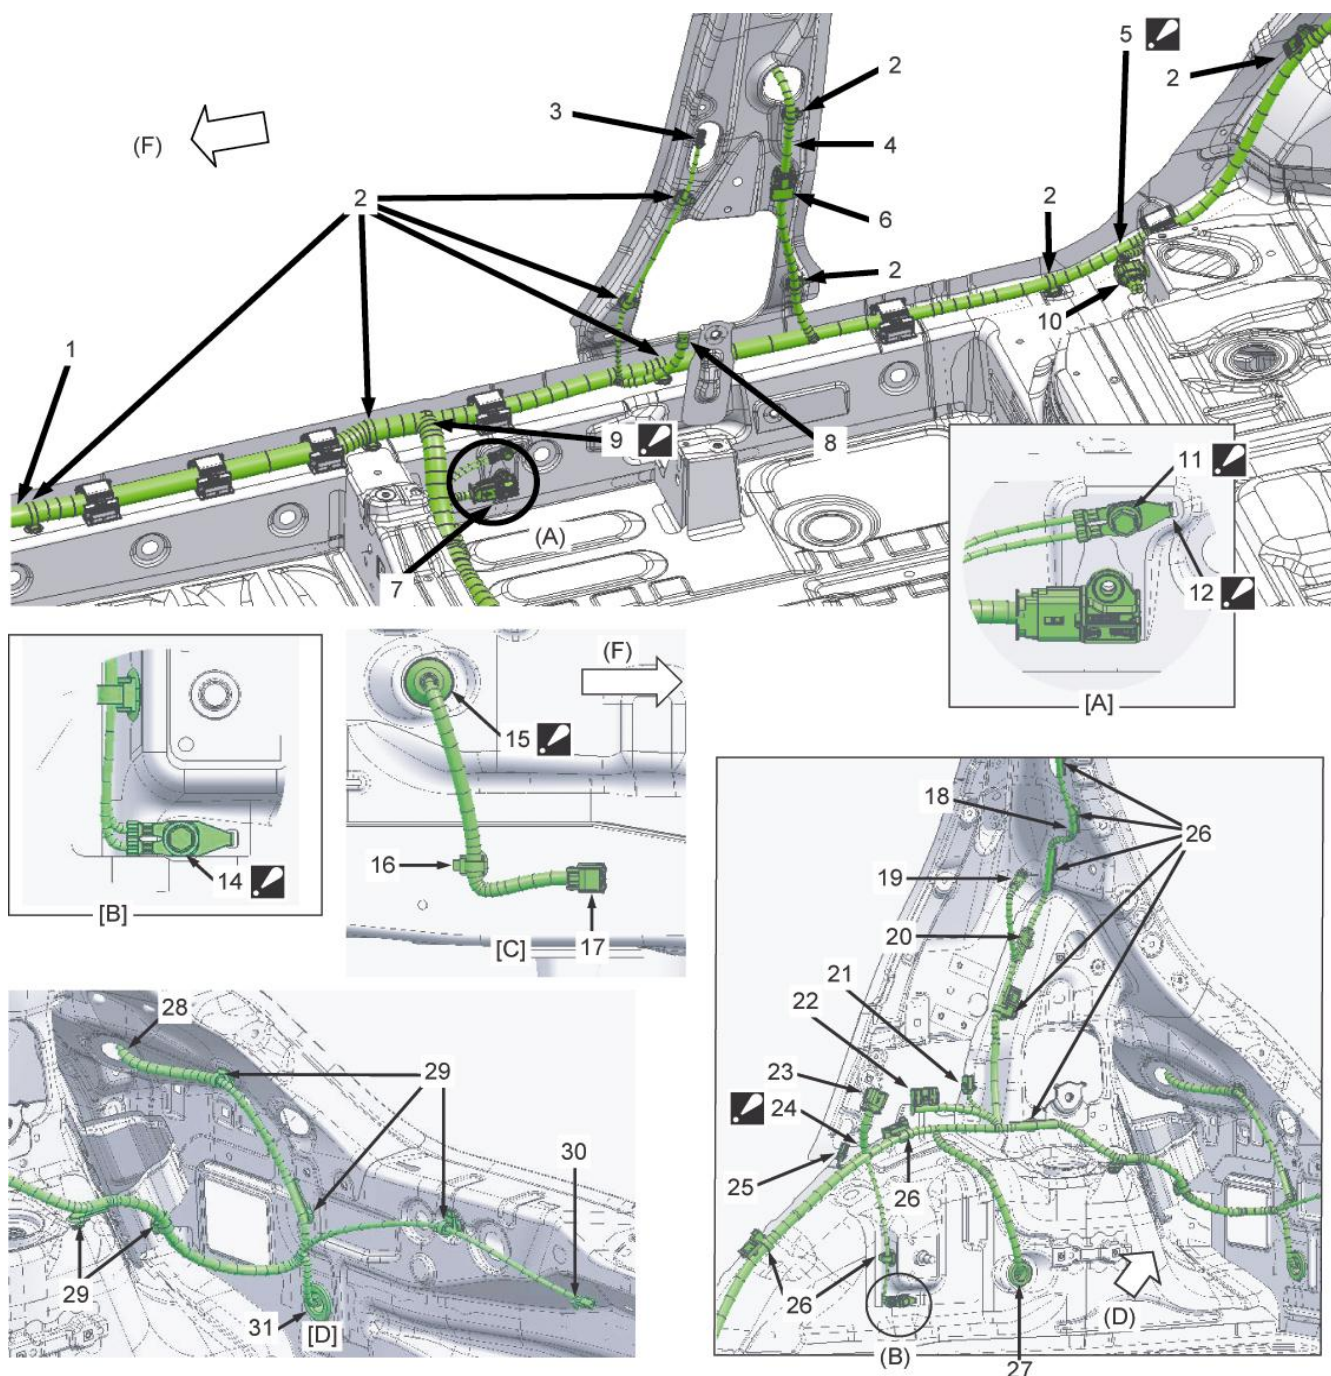

[A]: Detail (A)	16. Clamp
[B]: Detail (B)	17. ABS sensor (rear)
[C]: Outside view	18. Washer hose
[D]: View (D)	19. LHD: Curtain A/B inflator (Front-passenger side)
1. Floor harness	20. To high mount stop lamp
2. Clamp	21. Rear sonar buzzer
3. LHD: Door switch (Front-passenger side)	22. Sonar ECU
4. Rear door wire	23. LHD: G sensor (Front-passenger side)
5. Pass the harness under the washer hose.	24. Pass the harness under the washer hose.
6. To rear door harness	25. Rear door switch
7. LHD: Side-A/B G sensor (Front-passenger side)	26. Clamp
8. LHD: Pretensioner (Front-passenger side)	27. Grommet
9. Pass the harness under the washer hose.	28. Rear combination lamp (R)

Reassembling Note for Wiring Harness

2/2

Around Main Floor

Floor (Right side)

10. To fuel harness	29. Clamp
 11. Ground bolt Confirm that the earth terminals do not move after tightening bolts.	30. Luggage compartment antenna
 12. Floor ground (A/B) Set the terminal to the hole, and tighten the bolt.	31. Grommet
 14. Ground bolt Set the terminal to the hole, and tighten the bolt. Confirm that the earth terminals do not move after tightening bolts.	(F): Front
 15. Set the grommet firmly.	