




Innerer Schaltkreis des Verteilerkastens (Detailansicht)

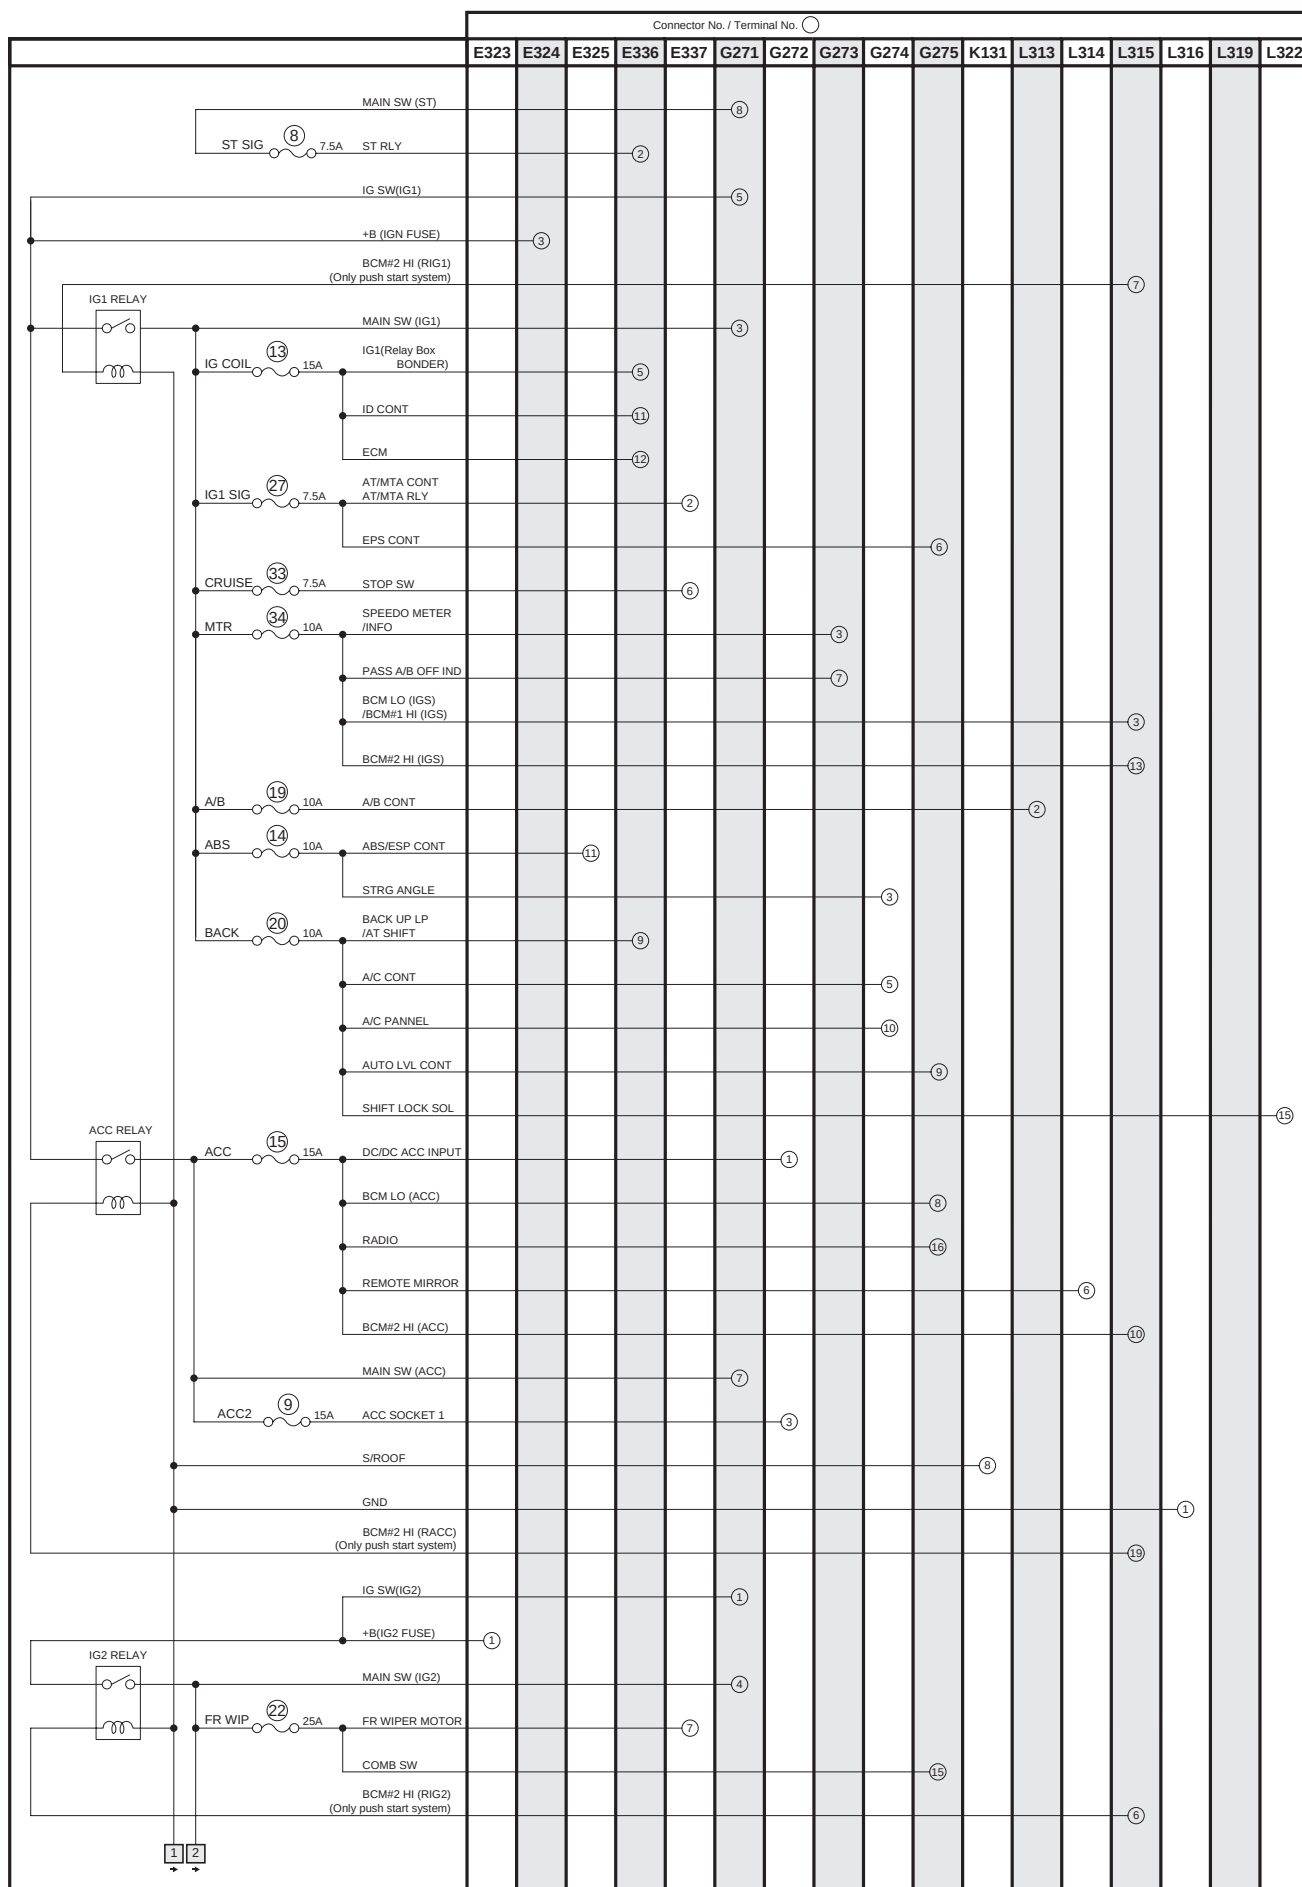


Innerer Schaltkreis des Verteilerkastens (Detailansicht)

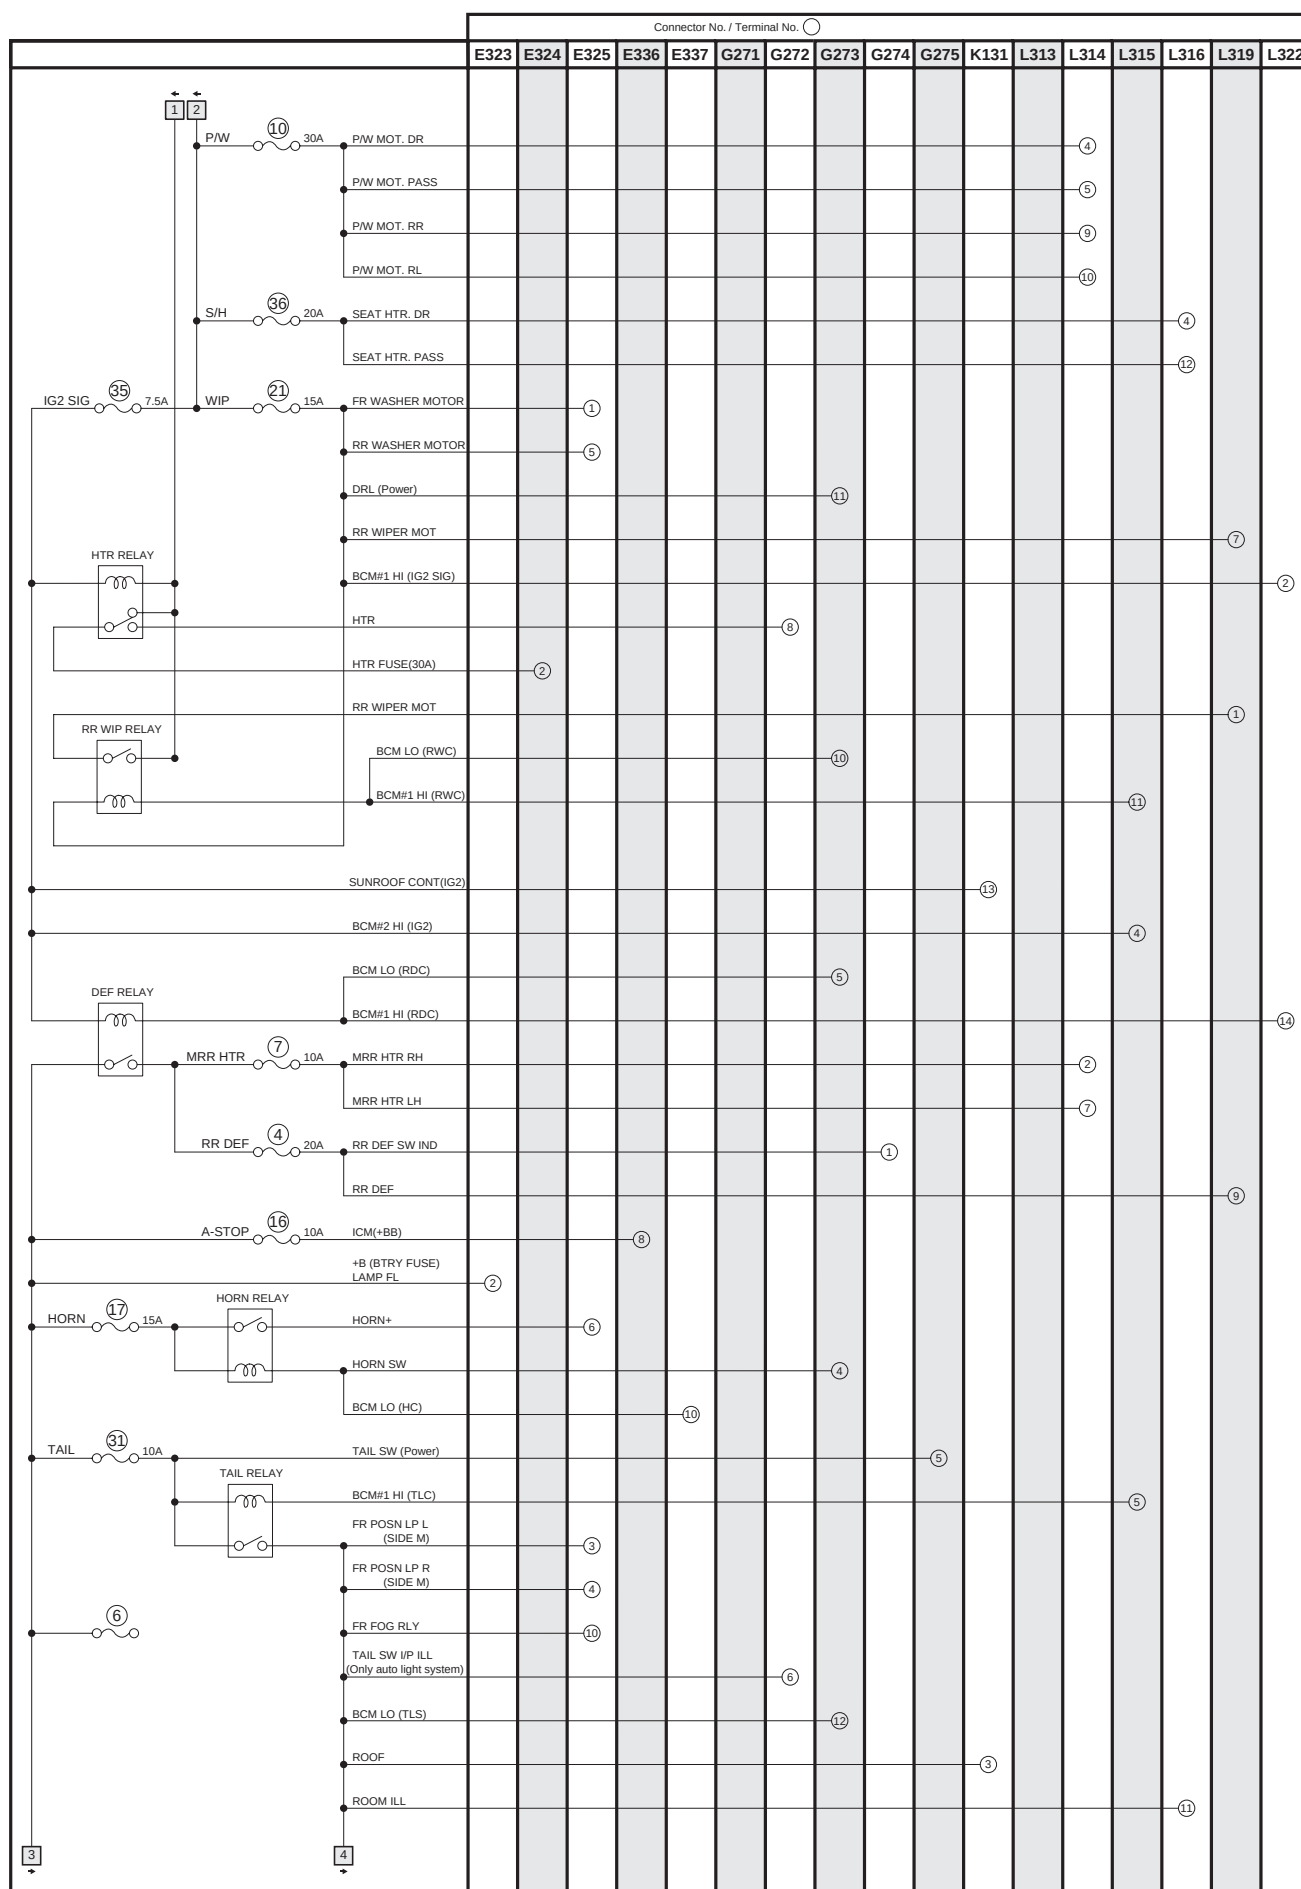

Innerer Schaltkreis des Verteilerkastens (Detailansicht)

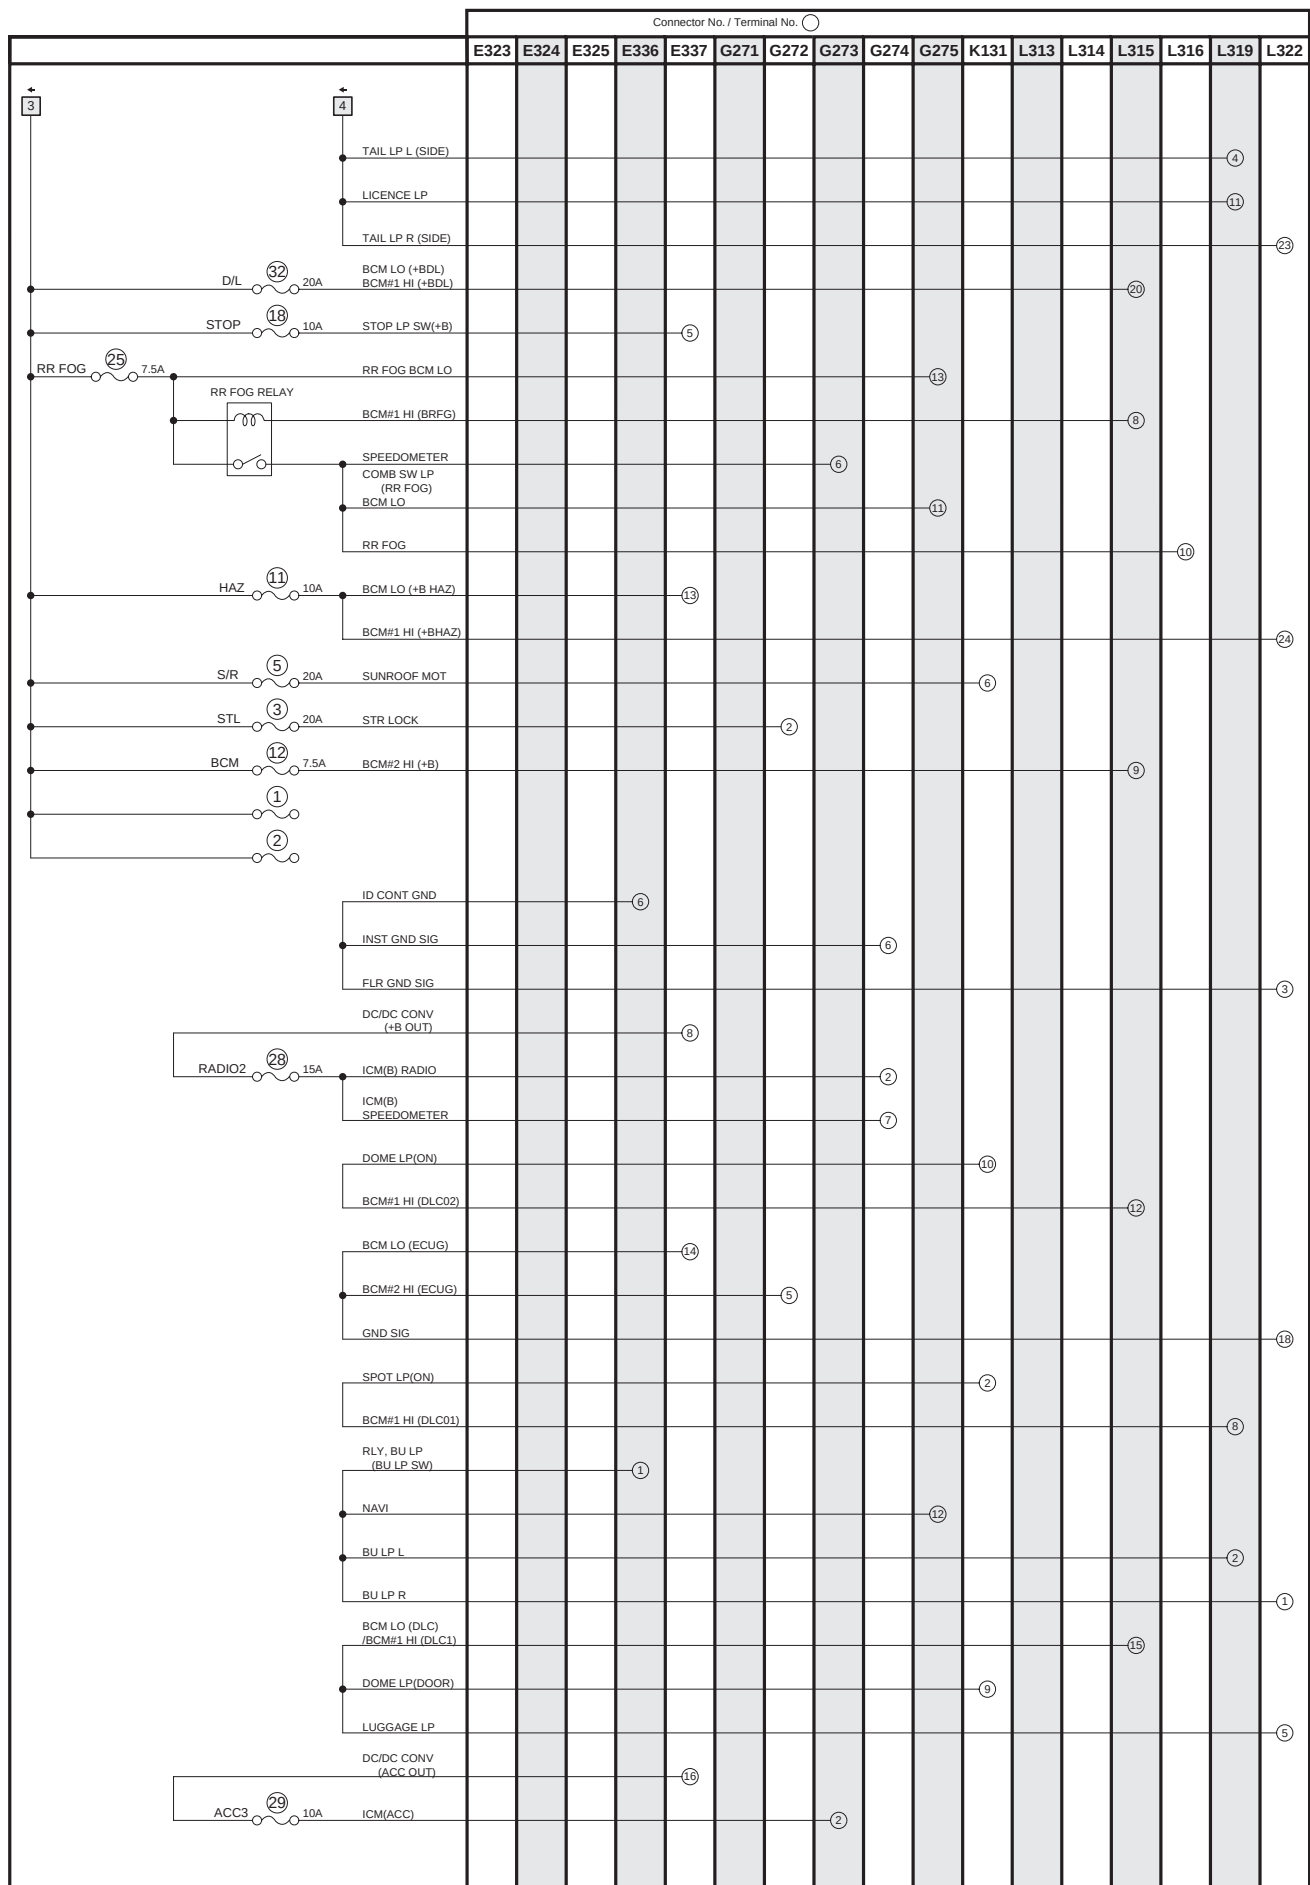

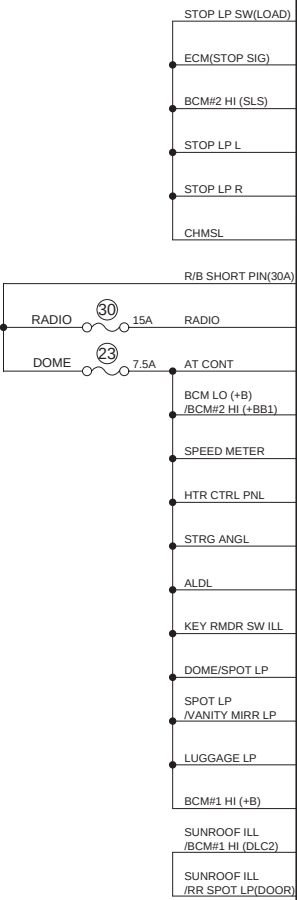		Connector No. / Terminal No. 																
		E323	E324	E325	E336	E337	G271	G272	G273	G274	G275	K131	L313	L314	L315	L316	L319	L322
	STOP LP SW(LOAD)					④												
	ECM(STOP SIG)					④												
	BCM#2 HI (SLS)														①			
	STOP LP L																③	
	STOP LP R																	⑬
	CHMSL																	⑫
	R/B SHORT PIN(30A)		①															
	RADIO ③① 15A RADIO								①									
	DOME ②③ 7.5A AT CONT					①												
	BCM LO (+B) /BCM#2 HI (+BB1)					⑨												
	SPEED METER								⑨									
	HTR CTRL PNL									④								
	STRG ANGL									⑨								
	ALDL										②							
	KEY RMDR SW ILL										③							
	DOME/SPOT LP											④						
	SPOT LP /VANITY MIRR LP											⑫						
	LUGGAGE LP																	⑪
	BCM#1 HI (+B)																	⑪
	SUNROOF ILL /BCM#1 HI (DLC2)								⑩									
SUNROOF ILL /RR SPOT LP(DOOR)											⑪							