




Circuito interno del bloque de conexiones (detalle)

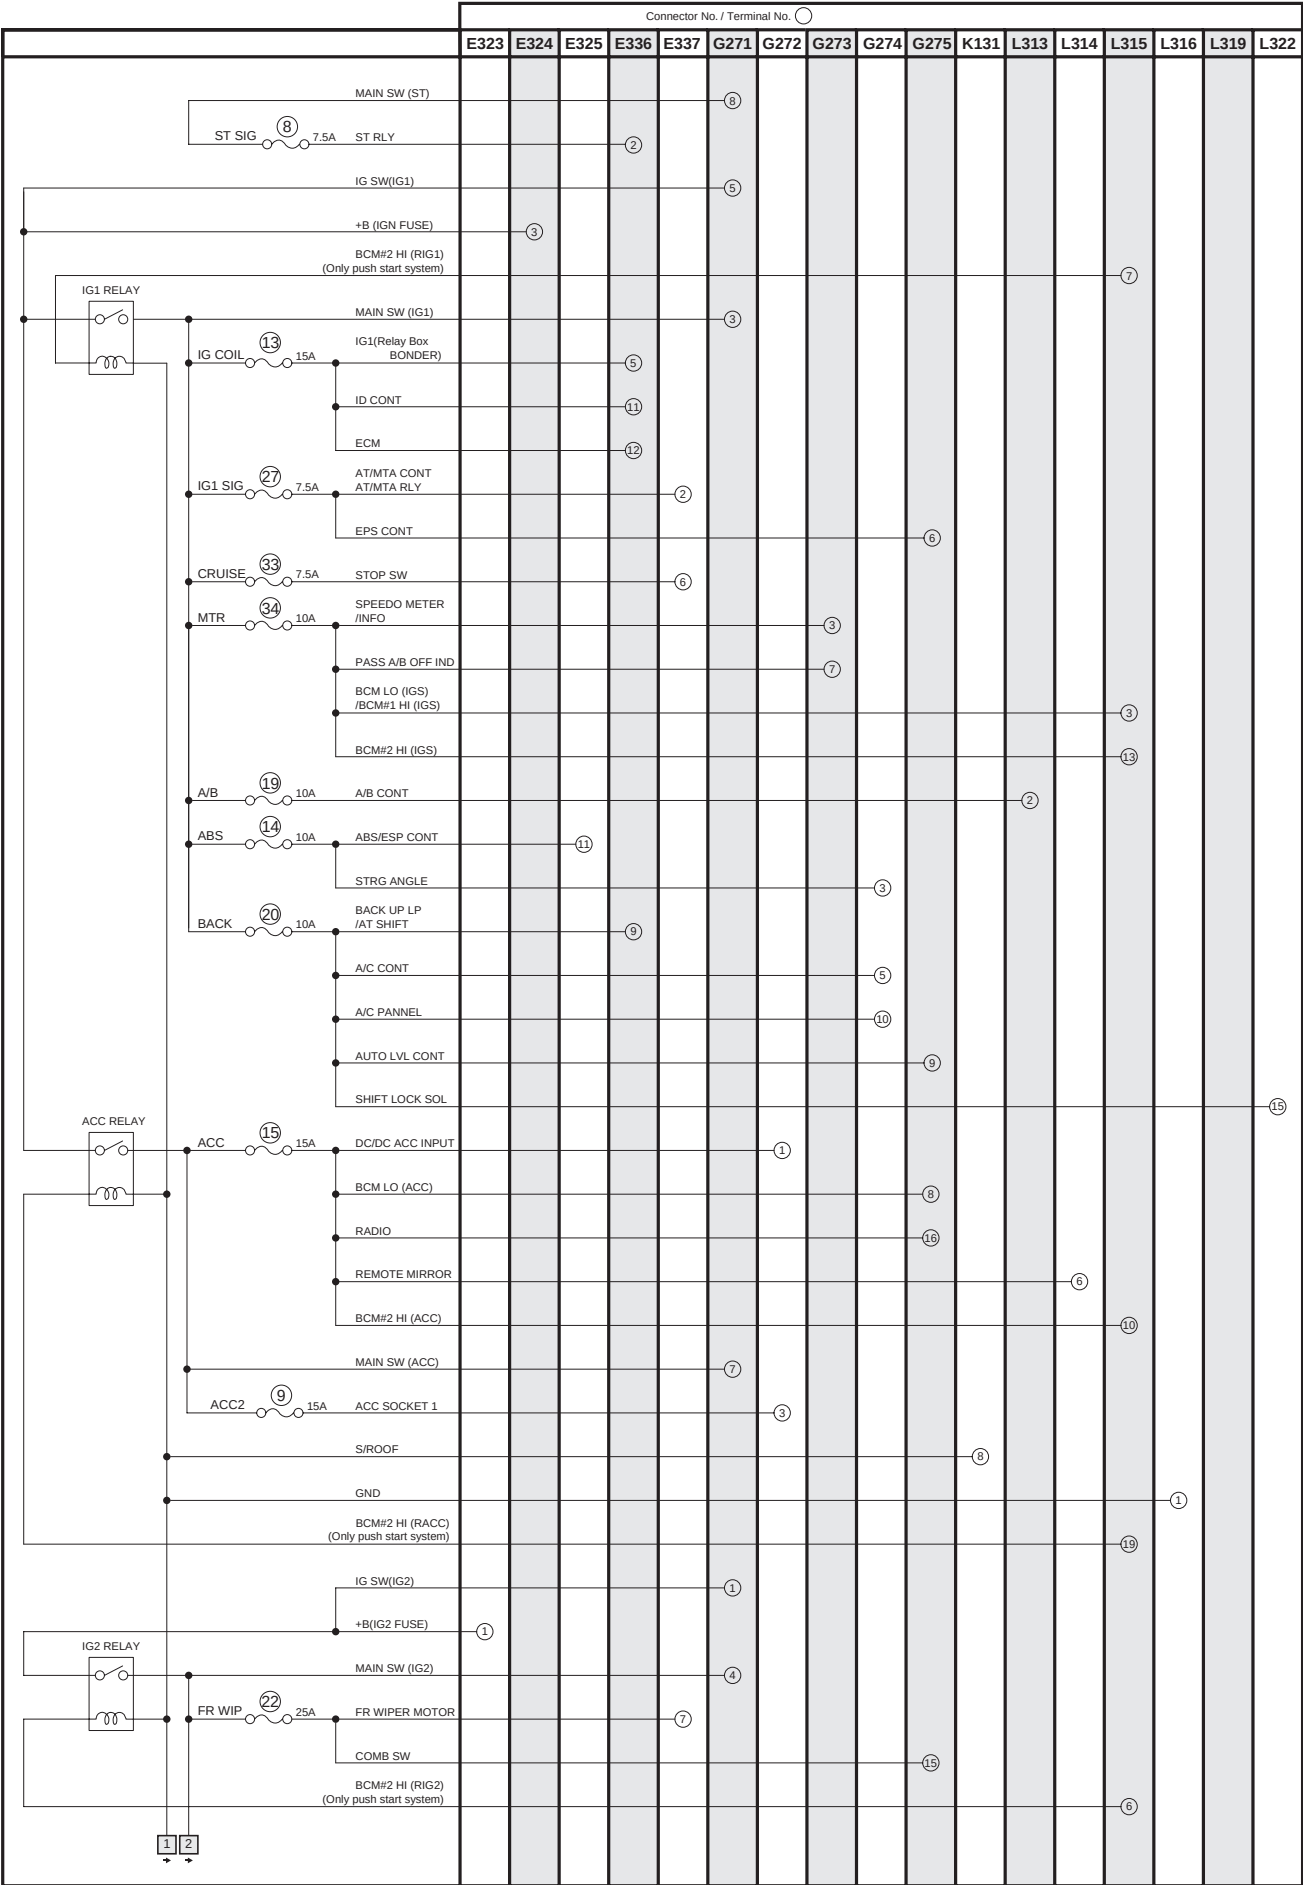


Circuito interno del bloque de conexiones (detalle)

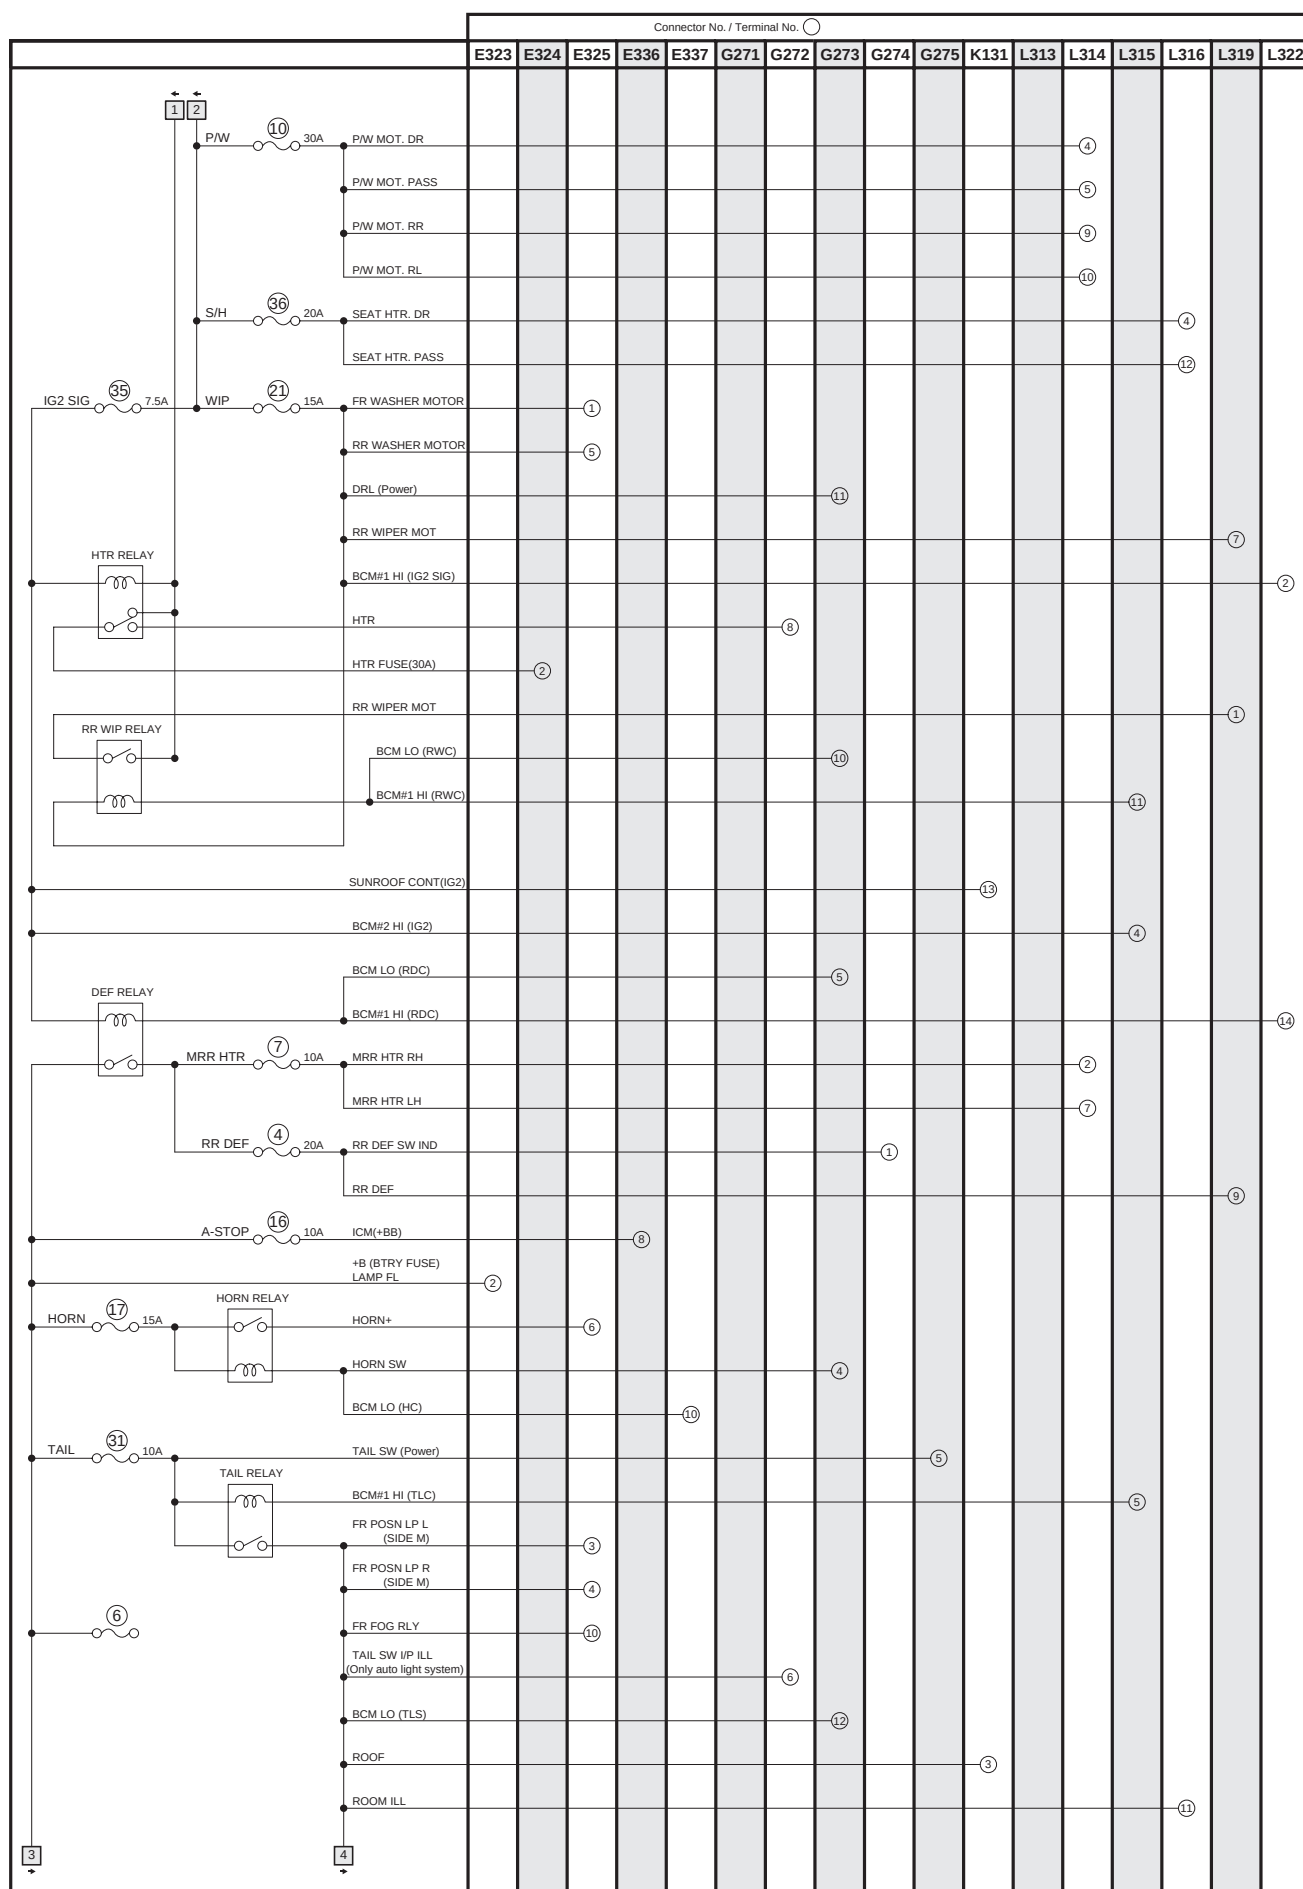

Circuito interno del bloque de conexiones (detalle)

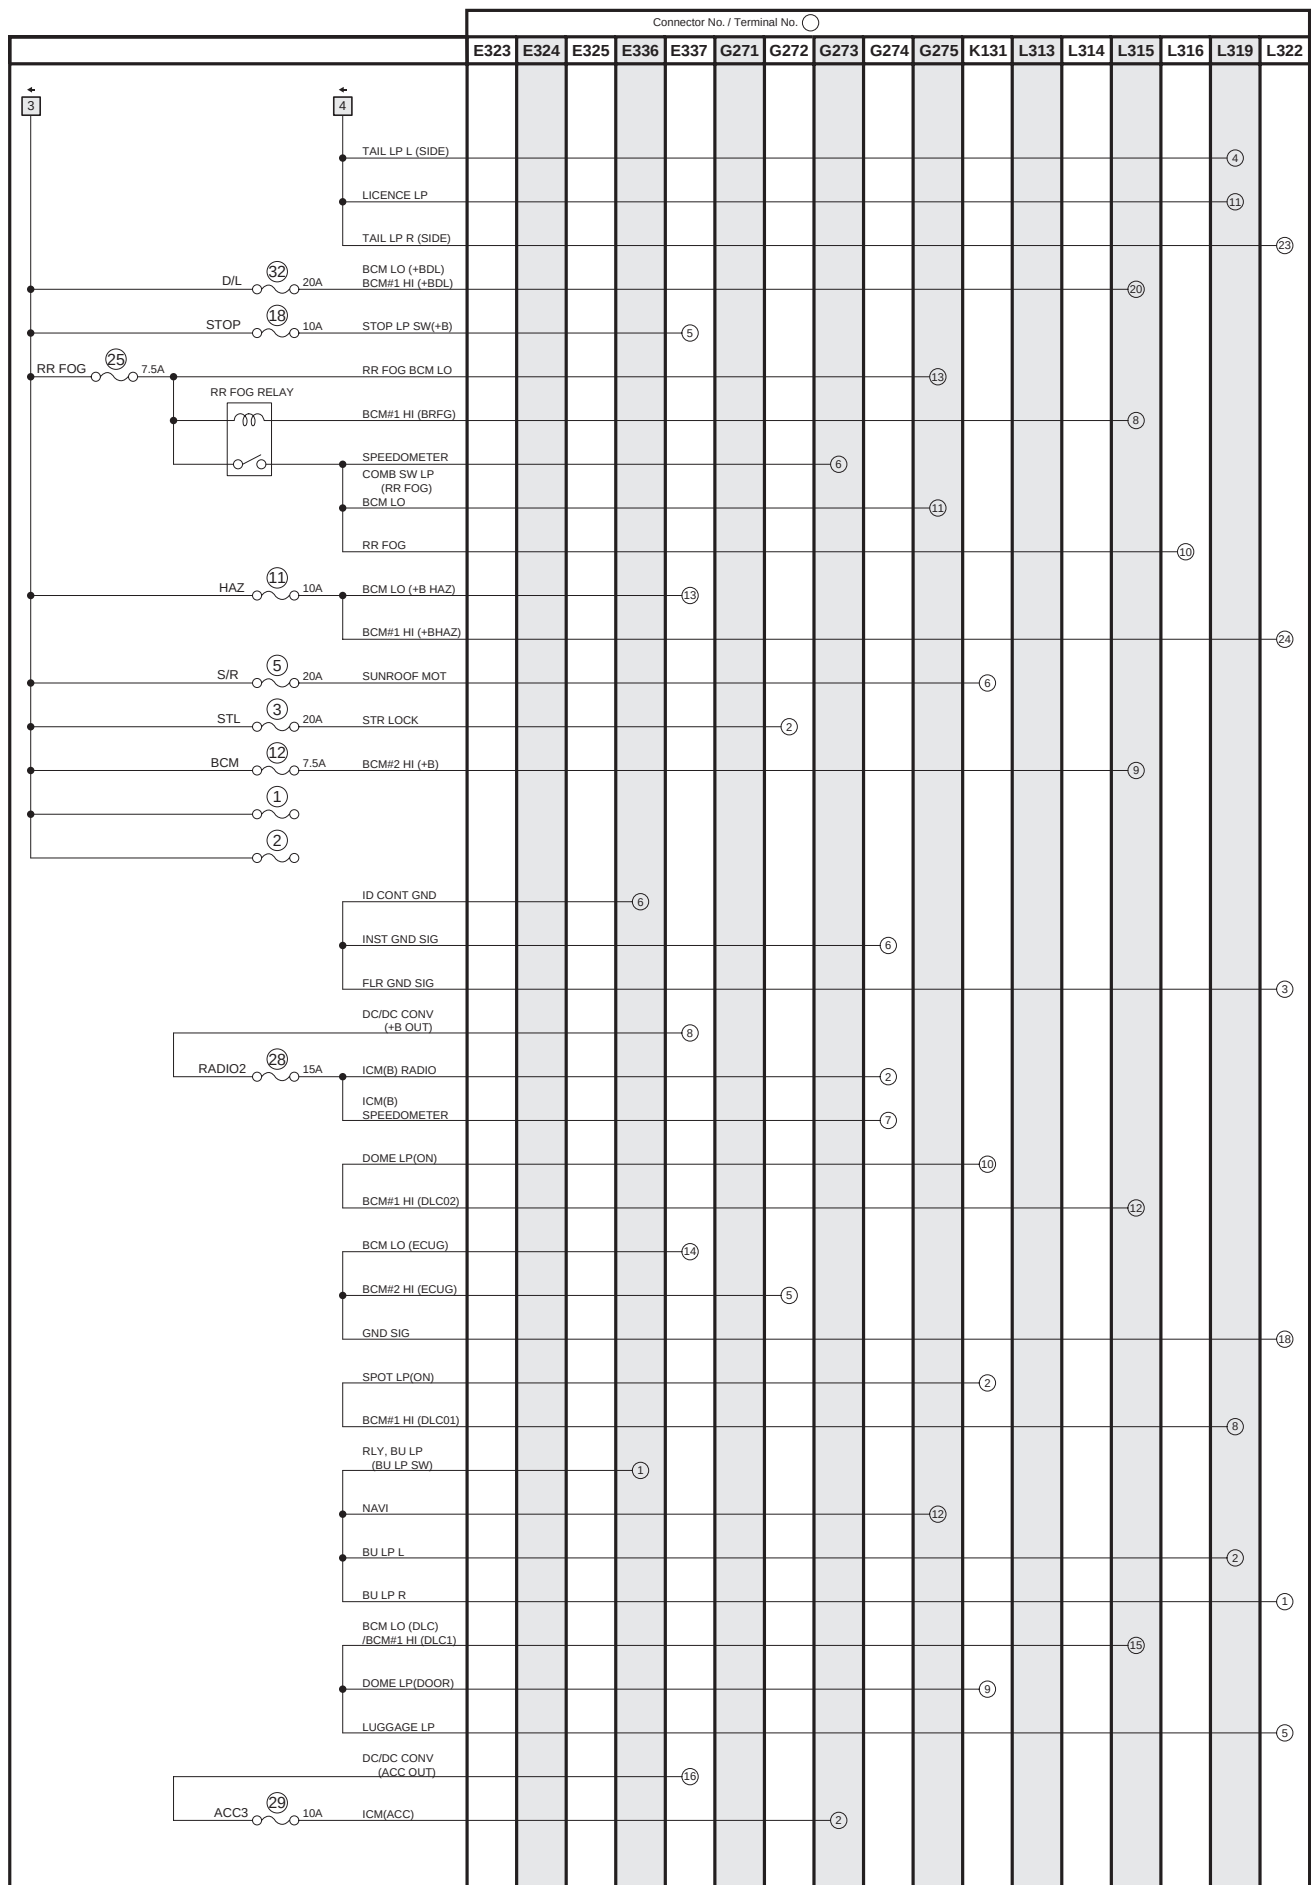

Circuito interno del bloque de conexiones (detalle)

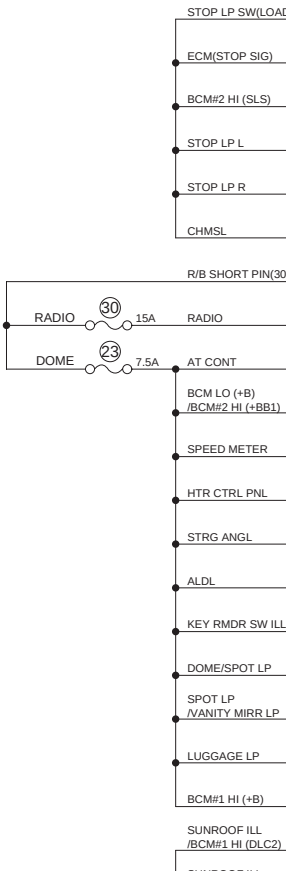		Connector No. / Terminal No. 																		
		E323	E324	E325	E336	E337	G271	G272	G273	G274	G275	K131	L313	L314	L315	L316	L319	L322		
	STOP LP SW(LOAD)					④														
	ECM(STOP SIG)					④														
	BCM#2 HI (SLS)															①				
	STOP LP L																	③		
	STOP LP R																	⑬		
	CHMSL																		⑲	
	R/B SHORT PIN(30A)					①														
	RADIO ⑩ 15A RADIO										①									
	DOME ⑭ 7.5A AT CONT						①													
	BCM LO (+B) /BCM#2 HI (+BB1)						⑨													
	SPEED METER										⑨									
	HTR CTRL PNL											④								
	STRG ANGL											⑨								
	ALDL												②							
	KEY RMDR SW ILL													③						
	DOME/SPOT LP													④						
	SPOT LP /VANITY MIRR LP														⑫					
	LUGGAGE LP																		⑪	
	BCM#1 HI (+B)																		⑳	
	SUNROOF ILL /BCM#1 HI (DLC2)																			⑩
	SUNROOF ILL /RR SPOT LP(DOOR)																			⑪