



EPACO MULTI STREAM - 4 STREAMS

TEL.: +32 14 21 00 31 FAX.: +32 14 21 07 43

COLOR CODE

BK: BLACK	RD: RED	YE/GR: YELLOW/GREEN	OG: ORANGE	GN: GREEN
WH: WHITE	BU: BLUE	BN: BROWN	VT: VIOLET	GY: GREY

CUSTOMER: Don Valley Engineering

CABINET NR: 160737-3-3

SALES ORDER: 160737

FIKE CUST REF: PO 0000032556

Project Number:	
Print Date:	4/6/2022
Designed by:	Stefaan.Joris
Revision:	- Revision date: -

Previous:

Next:

Table of contents

Page	Page description	supplementary page field	Date	Edited by	X
=CABINET3/1	Title page		8/22/2017	SJ	
=CABINET3/2	Table of contents		4/5/2022	Stefaan.Joris	
=CABINET3/2.a	Table of contents		4/5/2022	Stefaan.Joris	
=CABINET3/2.b	Table of contents		4/5/2022	Stefaan.Joris	
=CABINET3/3	Manuals Info Page		8/22/2017	SJ	X
=CABINET3/20	Layout cabinet		2/8/2018	SJ	
=CABINET3/21	Layout cabinet		2/8/2018	SJ	
=CABINET3/22	Enclosure legend		2/8/2018	SJ	
=CABINET3/22.a	Enclosure legend		2/8/2018	SJ	
=CABINET3/23	Enclosure legend		2/8/2018	SJ	
=CABINET3/24	Enclosure legend		2/8/2018	SJ	
=CABINET3/25	Enclosure legend		2/8/2018	SJ	
=CABINET3+POWER/310	Power in		2/8/2018	SJ	
=CABINET3+POWER/320	Power in		2/8/2018	SJ	
=CABINET3+POWER/330	Power in		2/8/2018	SJ	
=CABINET3+POWER/340	Power in		2/8/2018	SJ	
=CABINET3+STREAM1/310.a	Power Supply Unit 1		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM1/311	Explosion Protection Controller 1		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM1/311.a	Explosion Protection Controller 1		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM1/311.b	Explosion Protection Controller 1		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM1/312	Explosion Protection Controller 2		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM1/312.b	Explosion Protection Controller 2		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM1/313	Explosion Protection Controller 3		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM1/313.a	Explosion Protection Controller 3		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM1/313.b	Explosion Protection Controller 3		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM1/314	Explosion Protection Controller 4		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM1/314.a	Explosion Protection Controller 4		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM1/314.b	Explosion Protection Controller 4		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM1/314.c	Explosion Protection Controller 4		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM1/315	RC8		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM1/316	Fike Simulator Module		2/8/2018	SJ	
=CABINET3+STREAM1/317	Status Bus		2/8/2018	SJ	
=CABINET3+STREAM1/318	Fire Bus		8/22/2017	SJ	

Table of contents

Page	Page description	supplementary page field	Date	Edited by	X
=CABINET3+STREAM2/320.a	Power Supply Unit 1		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM2/321	Explosion Protection Controller 1		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM2/321.a	Explosion Protection Controller 1		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM2/321.b	Explosion Protection Controller 1		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM2/322	Explosion Protection Controller 2		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM2/322.b	Explosion Protection Controller 2		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM2/323	Explosion Protection Controller 3		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM2/323.a	Explosion Protection Controller 3		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM2/323.b	Explosion Protection Controller 3		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM2/324	Explosion Protection Controller 4		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM2/324.a	Explosion Protection Controller 4		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM2/324.b	Explosion Protection Controller 4		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM2/324.c	Explosion Protection Controller 4		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM2/325	RC8		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM2/327	Fike Simulator Module		2/8/2018	SJ	
=CABINET3+STREAM2/328	Status Bus		2/8/2018	SJ	
=CABINET3+STREAM2/329	Fire Bus		8/22/2017	SJ	
=CABINET3+STREAM3/330.a	Power Supply Unit 1		2/8/2018	SJ	
=CABINET3+STREAM3/331	Explosion Protection Controller 1		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM3/331.a	Explosion Protection Controller 1		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM3/331.b	Explosion Protection Controller 1		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM3/332	Explosion Protection Controller 2		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM3/332.b	Explosion Protection Controller 2		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM3/333	Explosion Protection Controller 3		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM3/333.a	Explosion Protection Controller 3		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM3/333.b	Explosion Protection Controller 3		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM3/334	Explosion Protection Controller 4		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM3/334.a	Explosion Protection Controller 4		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM3/334.b	Explosion Protection Controller 4		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM3/334.c	Explosion Protection Controller 4		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM3/335	RC8		4/5/2022	Stefaan.Joris	
=CABINET3+STREAM3/337	Fike Simulator Module		2/8/2018	SJ	
=CABINET3+STREAM3/338	Status Bus		2/8/2018	SJ	


Table of contents




Column X: An automatically generated page was edited F06_001

[illegible]

Manuals Info Page

		<u>Part Number</u>	<u>Document Number</u>
	PSU	E10-0067	8.8514.00
	EPC	E10-0066	8.8513.00
	AM	E10-0068	8.8519.00
	RC8	E10-0069	8.8518.00

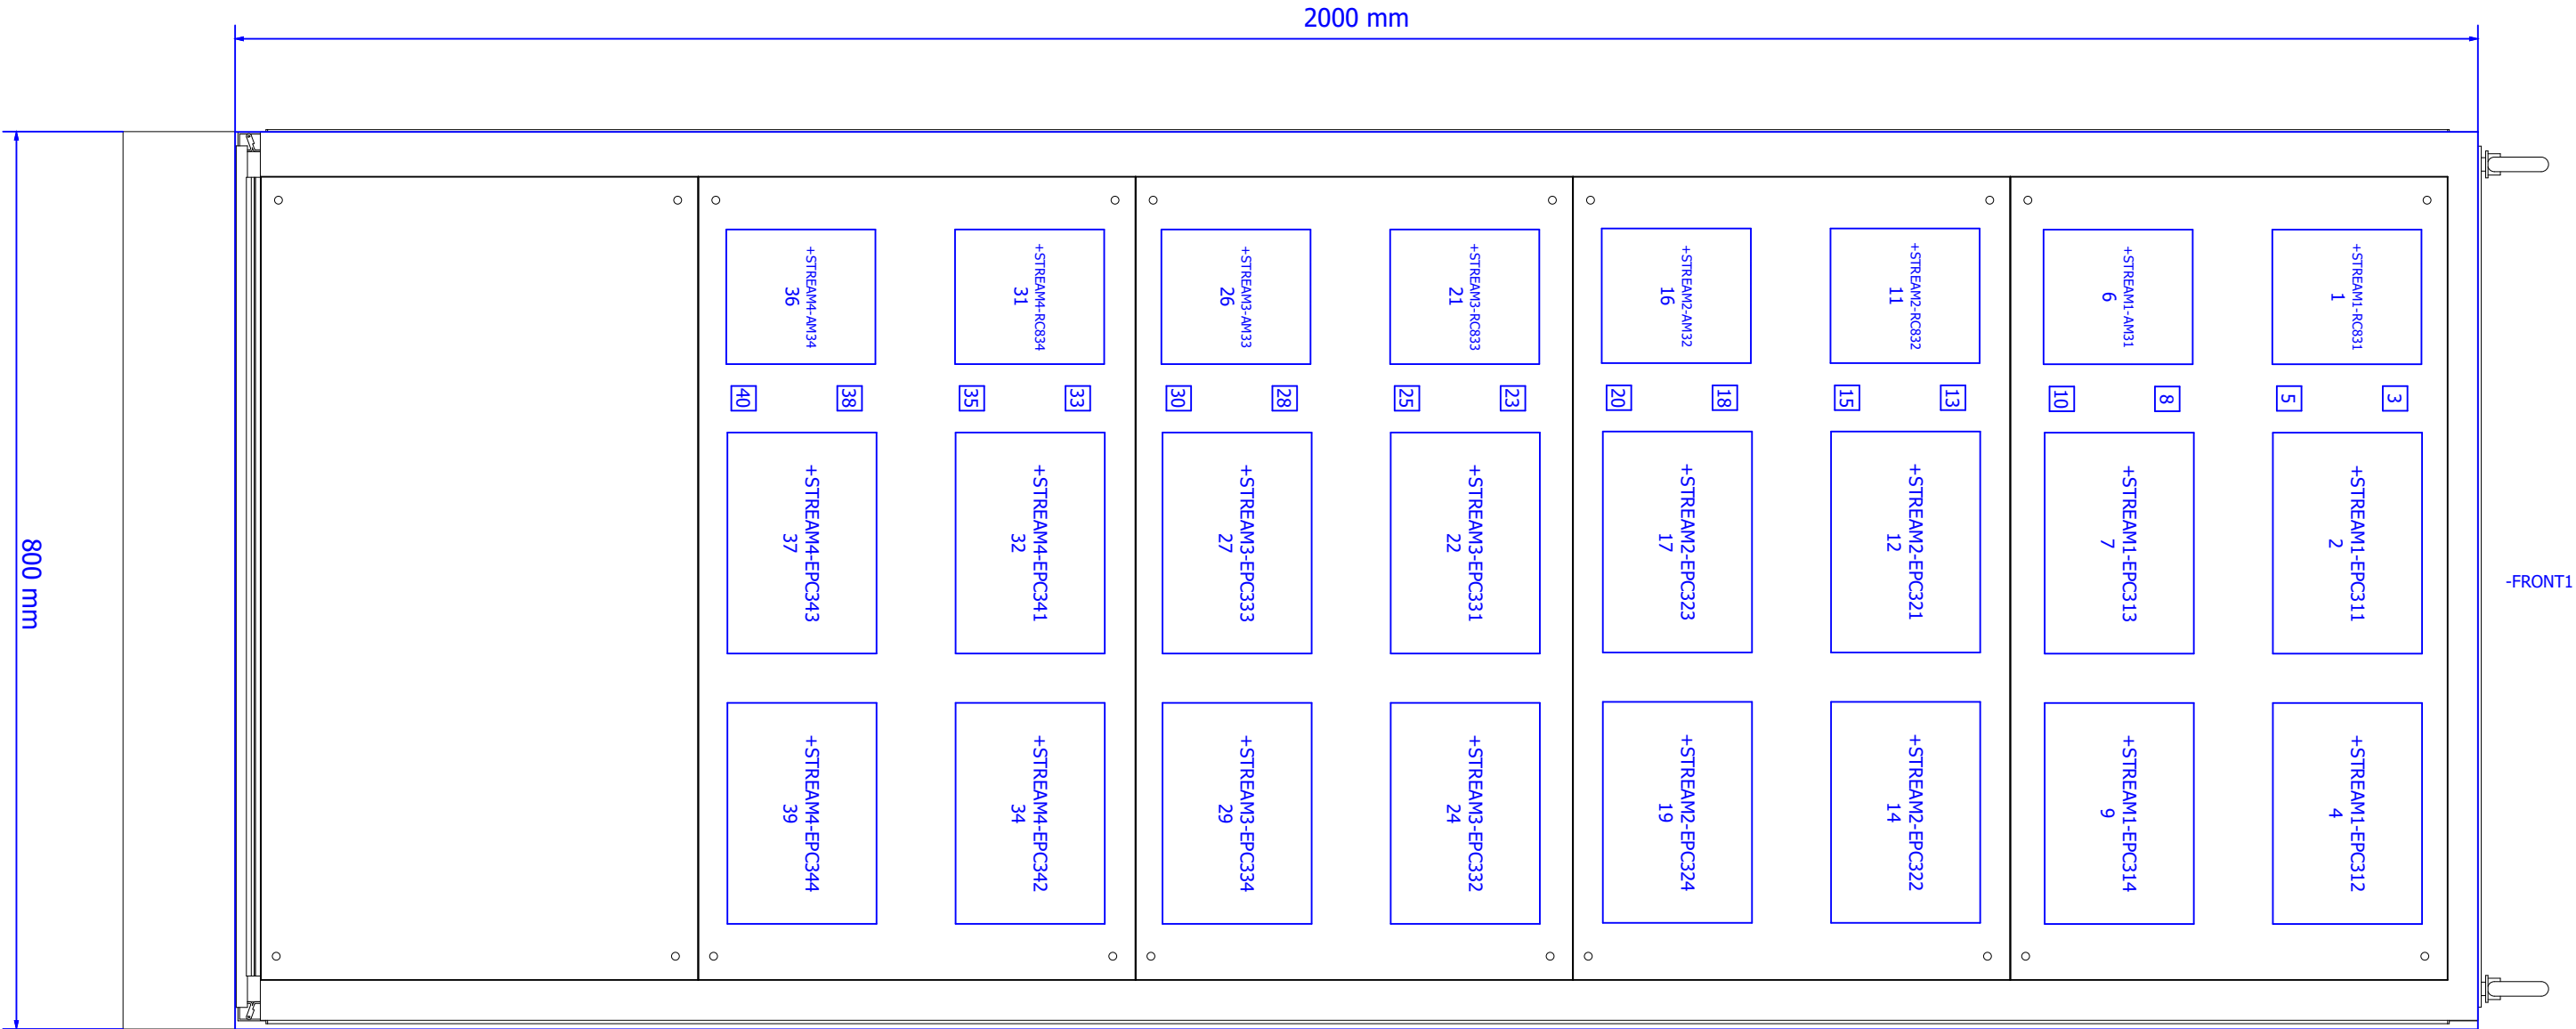


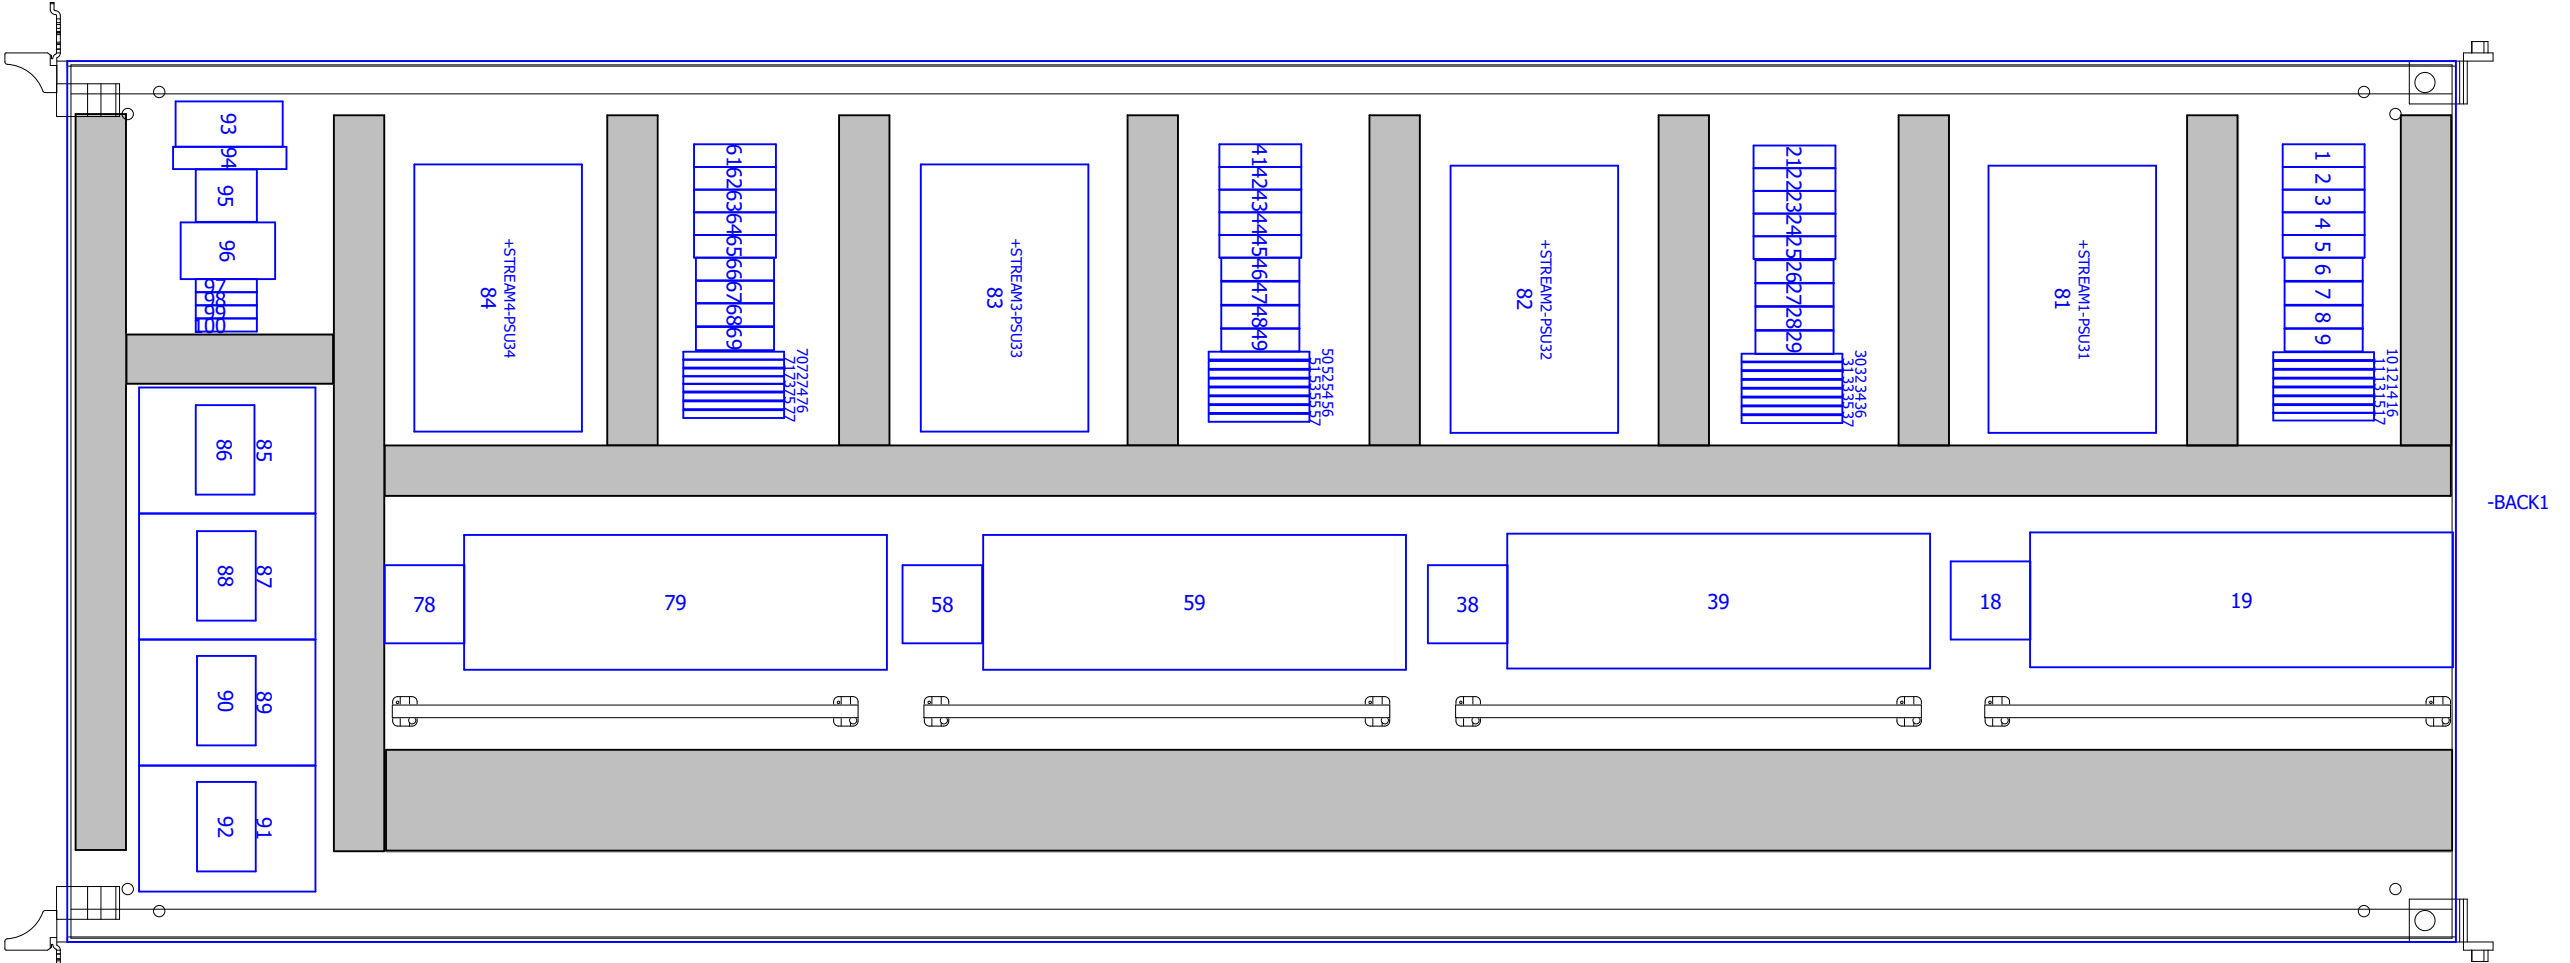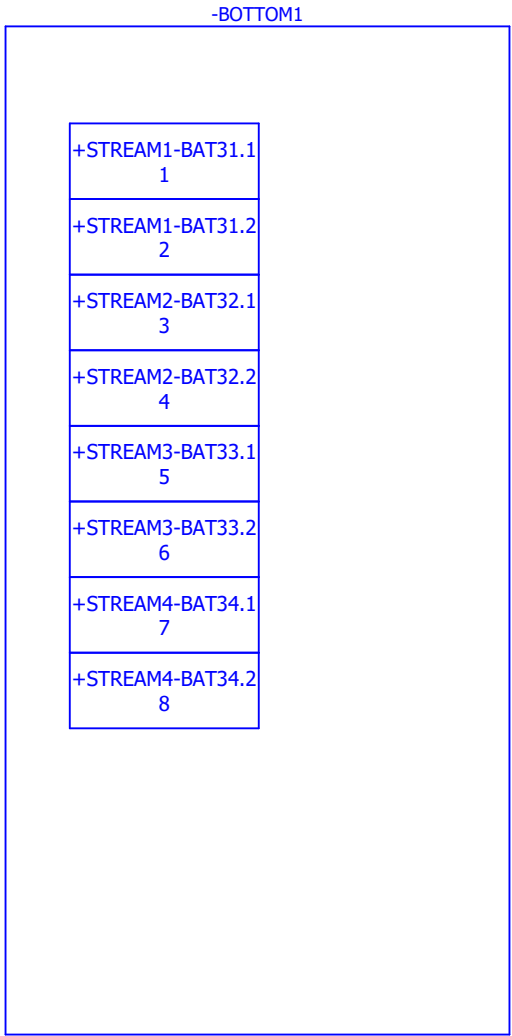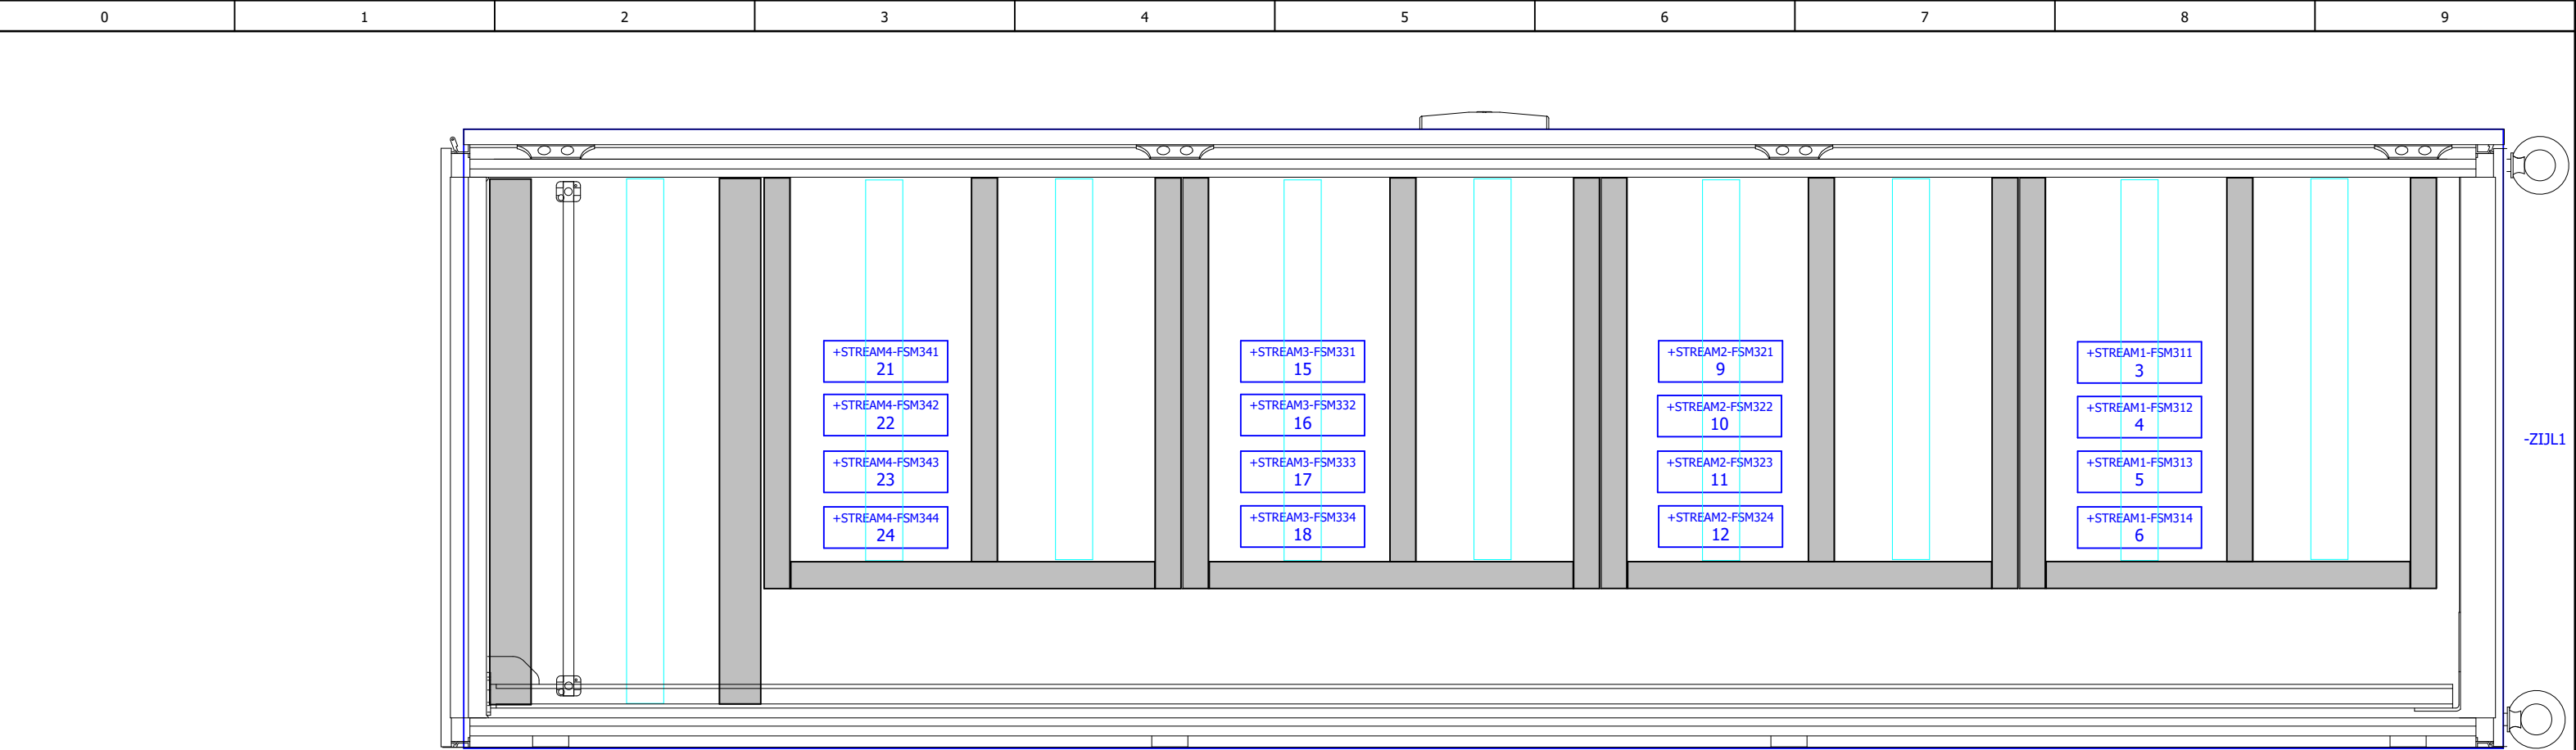



Enclosure legend


F18_001

Item number	Device tag	Type number	Part number	Manufacturer	Function text
1	DC311	A9S60220	SE.A9S60220	SE	
2	DC312	A9S60220	SE.A9S60220	SE	
3	DC313	A9S60220	SE.A9S60220	SE	
4	DC314	A9S60220	SE.A9S60220	SE	
5	DC315	A9S60220	SE.A9S60220	SE	
6	RS311				
7	RS312				
8	RS313				
9	RS314				
10	K311	PLC-RSC- 24DC/21	PXC.2966171	PXC	
11	K313	PLC-RSC- 24DC/21	PXC.2966171	PXC	
12	KDS311	PLC-RSC- 24DC/21	PXC.2966171	PXC	REMOTE
13	KDS314	PLC-RSC- 24DC/21	PXC.2966171	PXC	=
14	K312	PLC-RSC- 24DC/21	PXC.2966171	PXC	
15	K314	PLC-RSC- 24DC/21	PXC.2966171	PXC	
16	KDS312	PLC-RSC- 24DC/21	PXC.2966171	PXC	REMOTE
17	KDS313	PLC-RSC- 24DC/21	PXC.2966171	PXC	=
18	X311				
19	X312				
21	DC321	A9S60220	SE.A9S60220	SE	
22	DC322	A9S60220	SE.A9S60220	SE	
23	DC323	A9S60220	SE.A9S60220	SE	
24	DC324	A9S60220	SE.A9S60220	SE	
25	DC325	A9S60220	SE.A9S60220	SE	
26	RS321				
27	RS322				
28	RS323				
29	RS324				
30	K321	PLC-RSC- 24DC/21	PXC.2966171	PXC	
31	K323	PLC-RSC- 24DC/21	PXC.2966171	PXC	
32	KDS321	PLC-RSC- 24DC/21	PXC.2966171	PXC	REMOTE
33	KDS323	PLC-RSC- 24DC/21	PXC.2966171	PXC	=
34	K322	PLC-RSC- 24DC/21	PXC.2966171	PXC	
35	K324	PLC-RSC- 24DC/21	PXC.2966171	PXC	
36	KDS322	PLC-RSC- 24DC/21	PXC.2966171	PXC	REMOTE
37	KDS324	PLC-RSC- 24DC/21	PXC.2966171	PXC	=
38	X321				
39	X322				
41	DC331	A9S60220	SE.A9S60220	SE	
42	DC332	A9S60220	SE.A9S60220	SE	
43	DC333	A9S60220	SE.A9S60220	SE	
44	DC334	A9S60220	SE.A9S60220	SE	
45	DC335	A9S60220	SE.A9S60220	SE	
46	RS331				
47	RS332				
48	RS333				
49	RS334				
50	K331	PLC-RSC- 24DC/21	PXC.2966171	PXC	
51	K333	PLC-RSC- 24DC/21	PXC.2966171	PXC	
52	KDS331	PLC-RSC- 24DC/21	PXC.2966171	PXC	REMOTE
53	KDS333	PLC-RSC- 24DC/21	PXC.2966171	PXC	=
54	K332	PLC-RSC- 24DC/21	PXC.2966171	PXC	
55	K334	PLC-RSC- 24DC/21	PXC.2966171	PXC	
56	KDS332	PLC-RSC- 24DC/21	PXC.2966171	PXC	REMOTE
57	KDS334	PLC-RSC- 24DC/21	PXC.2966171	PXC	=
58	X331				
59	X332				

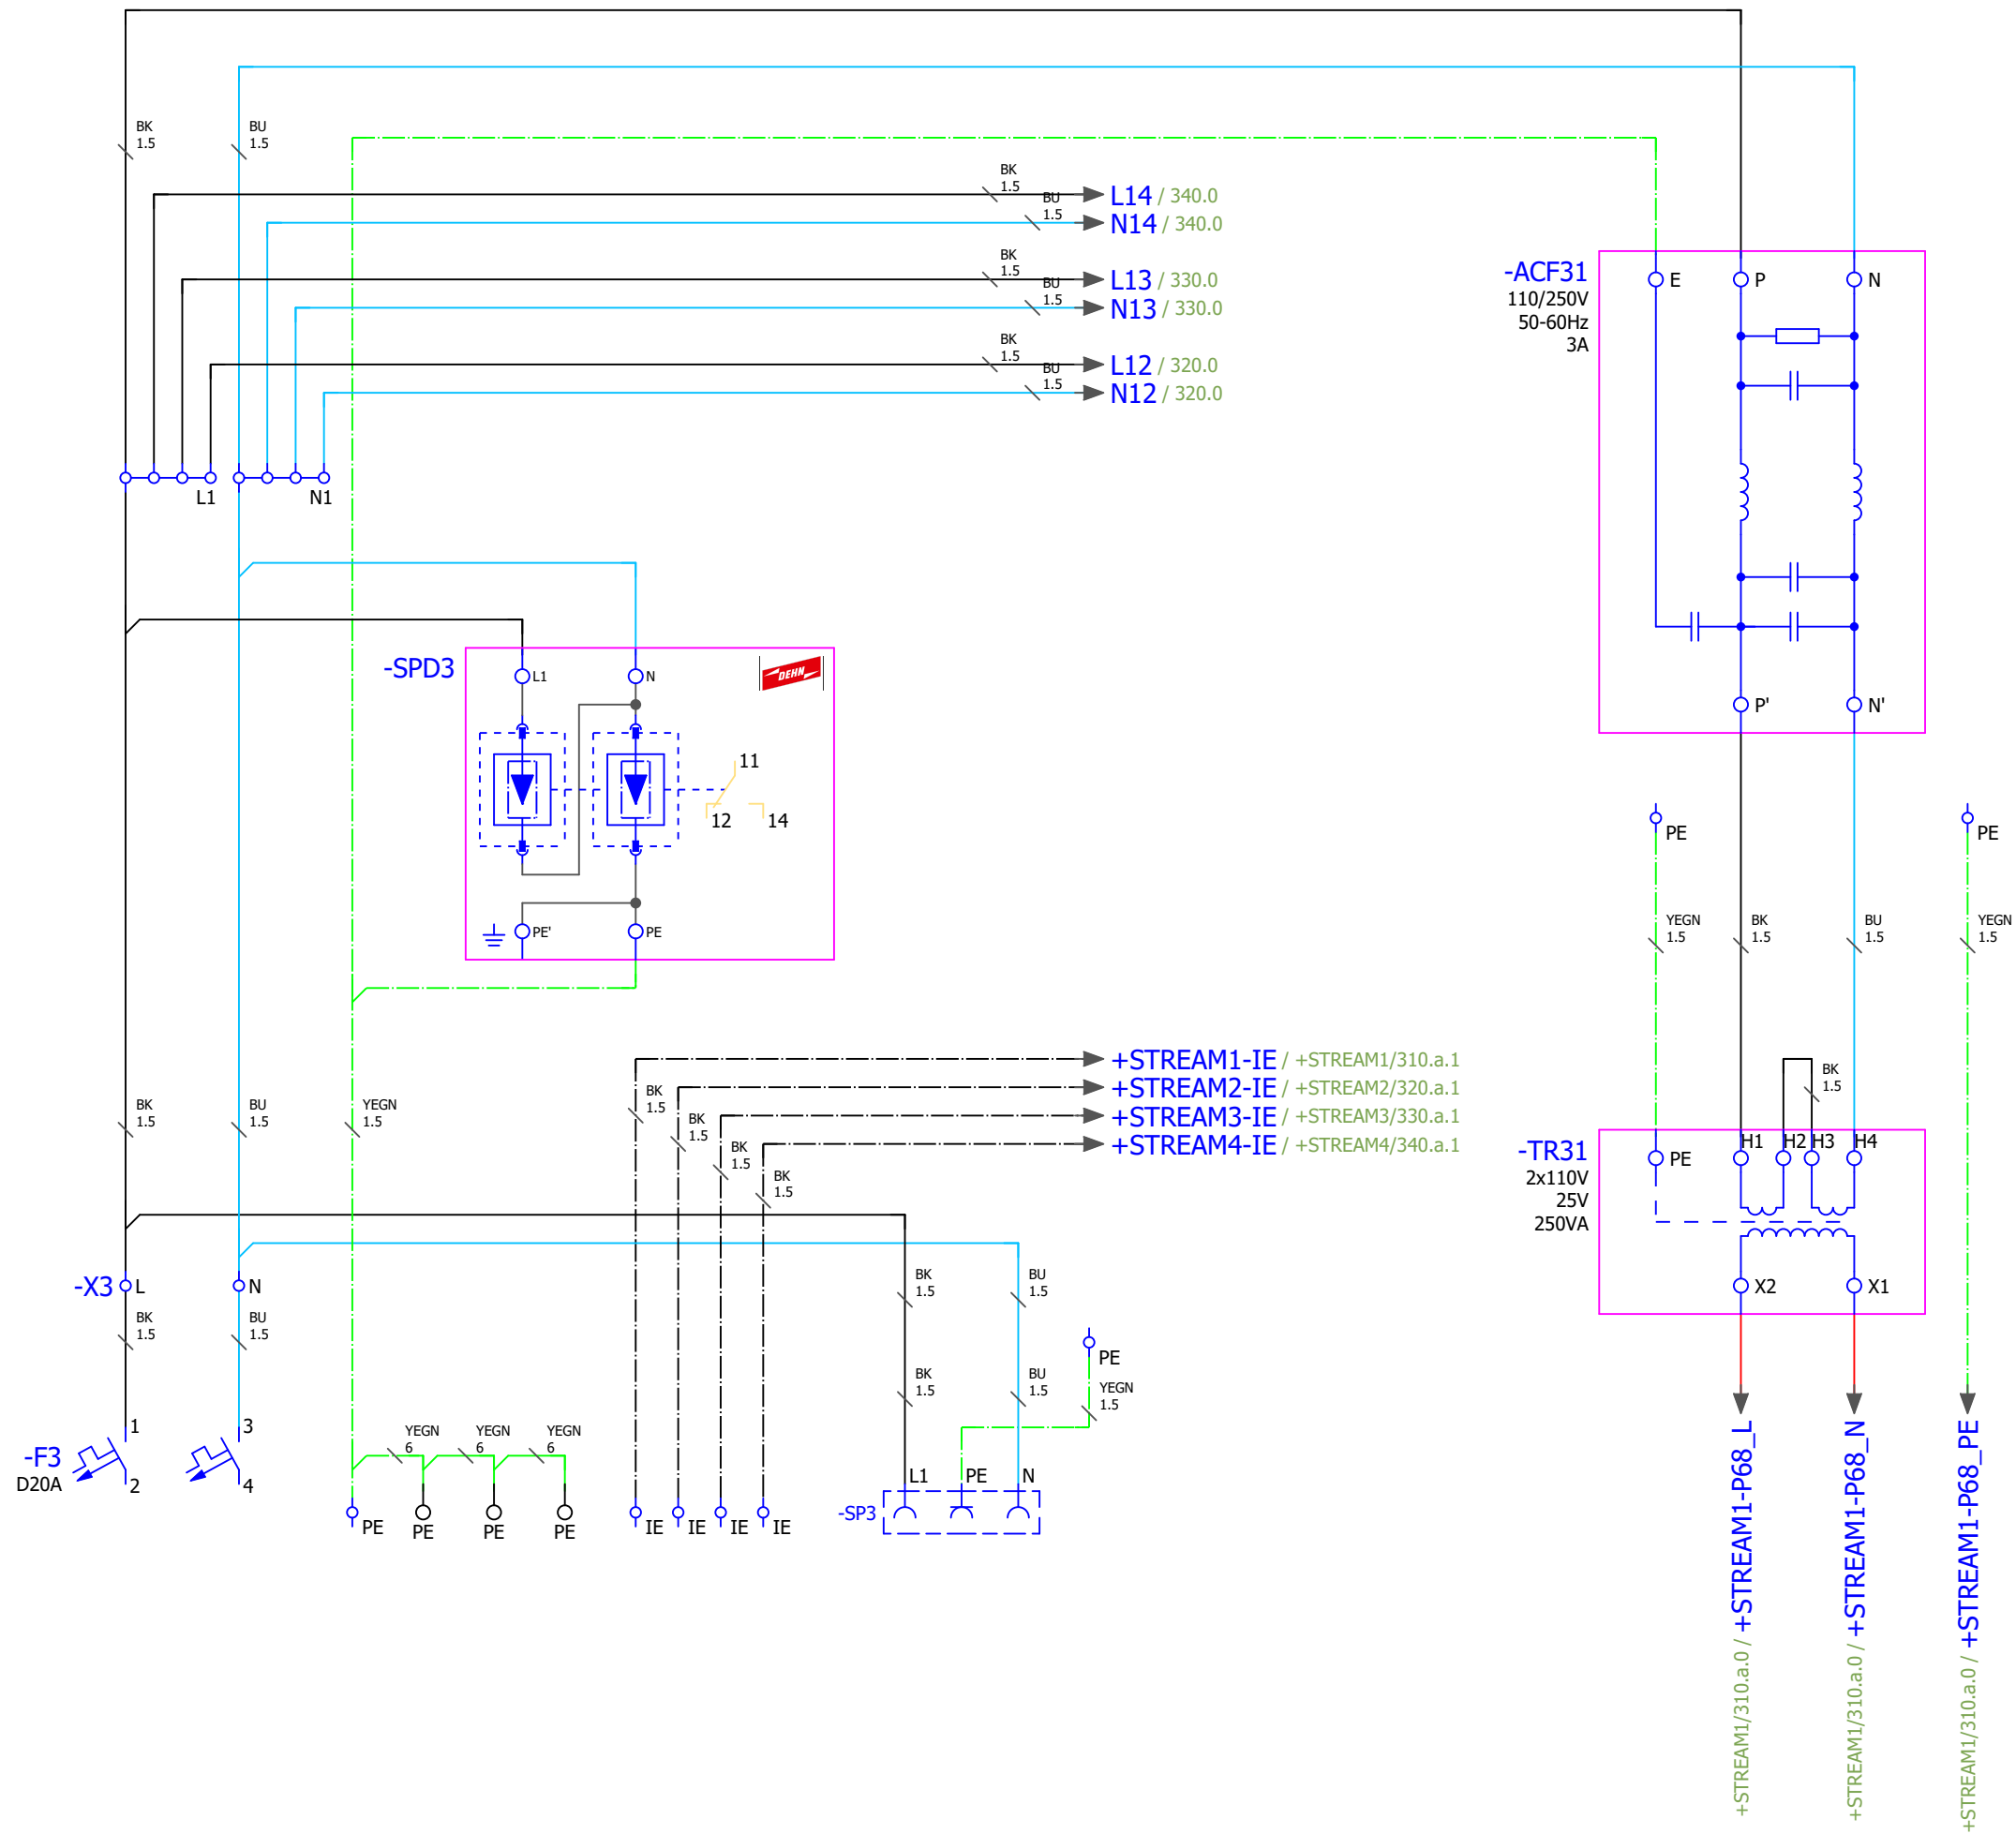

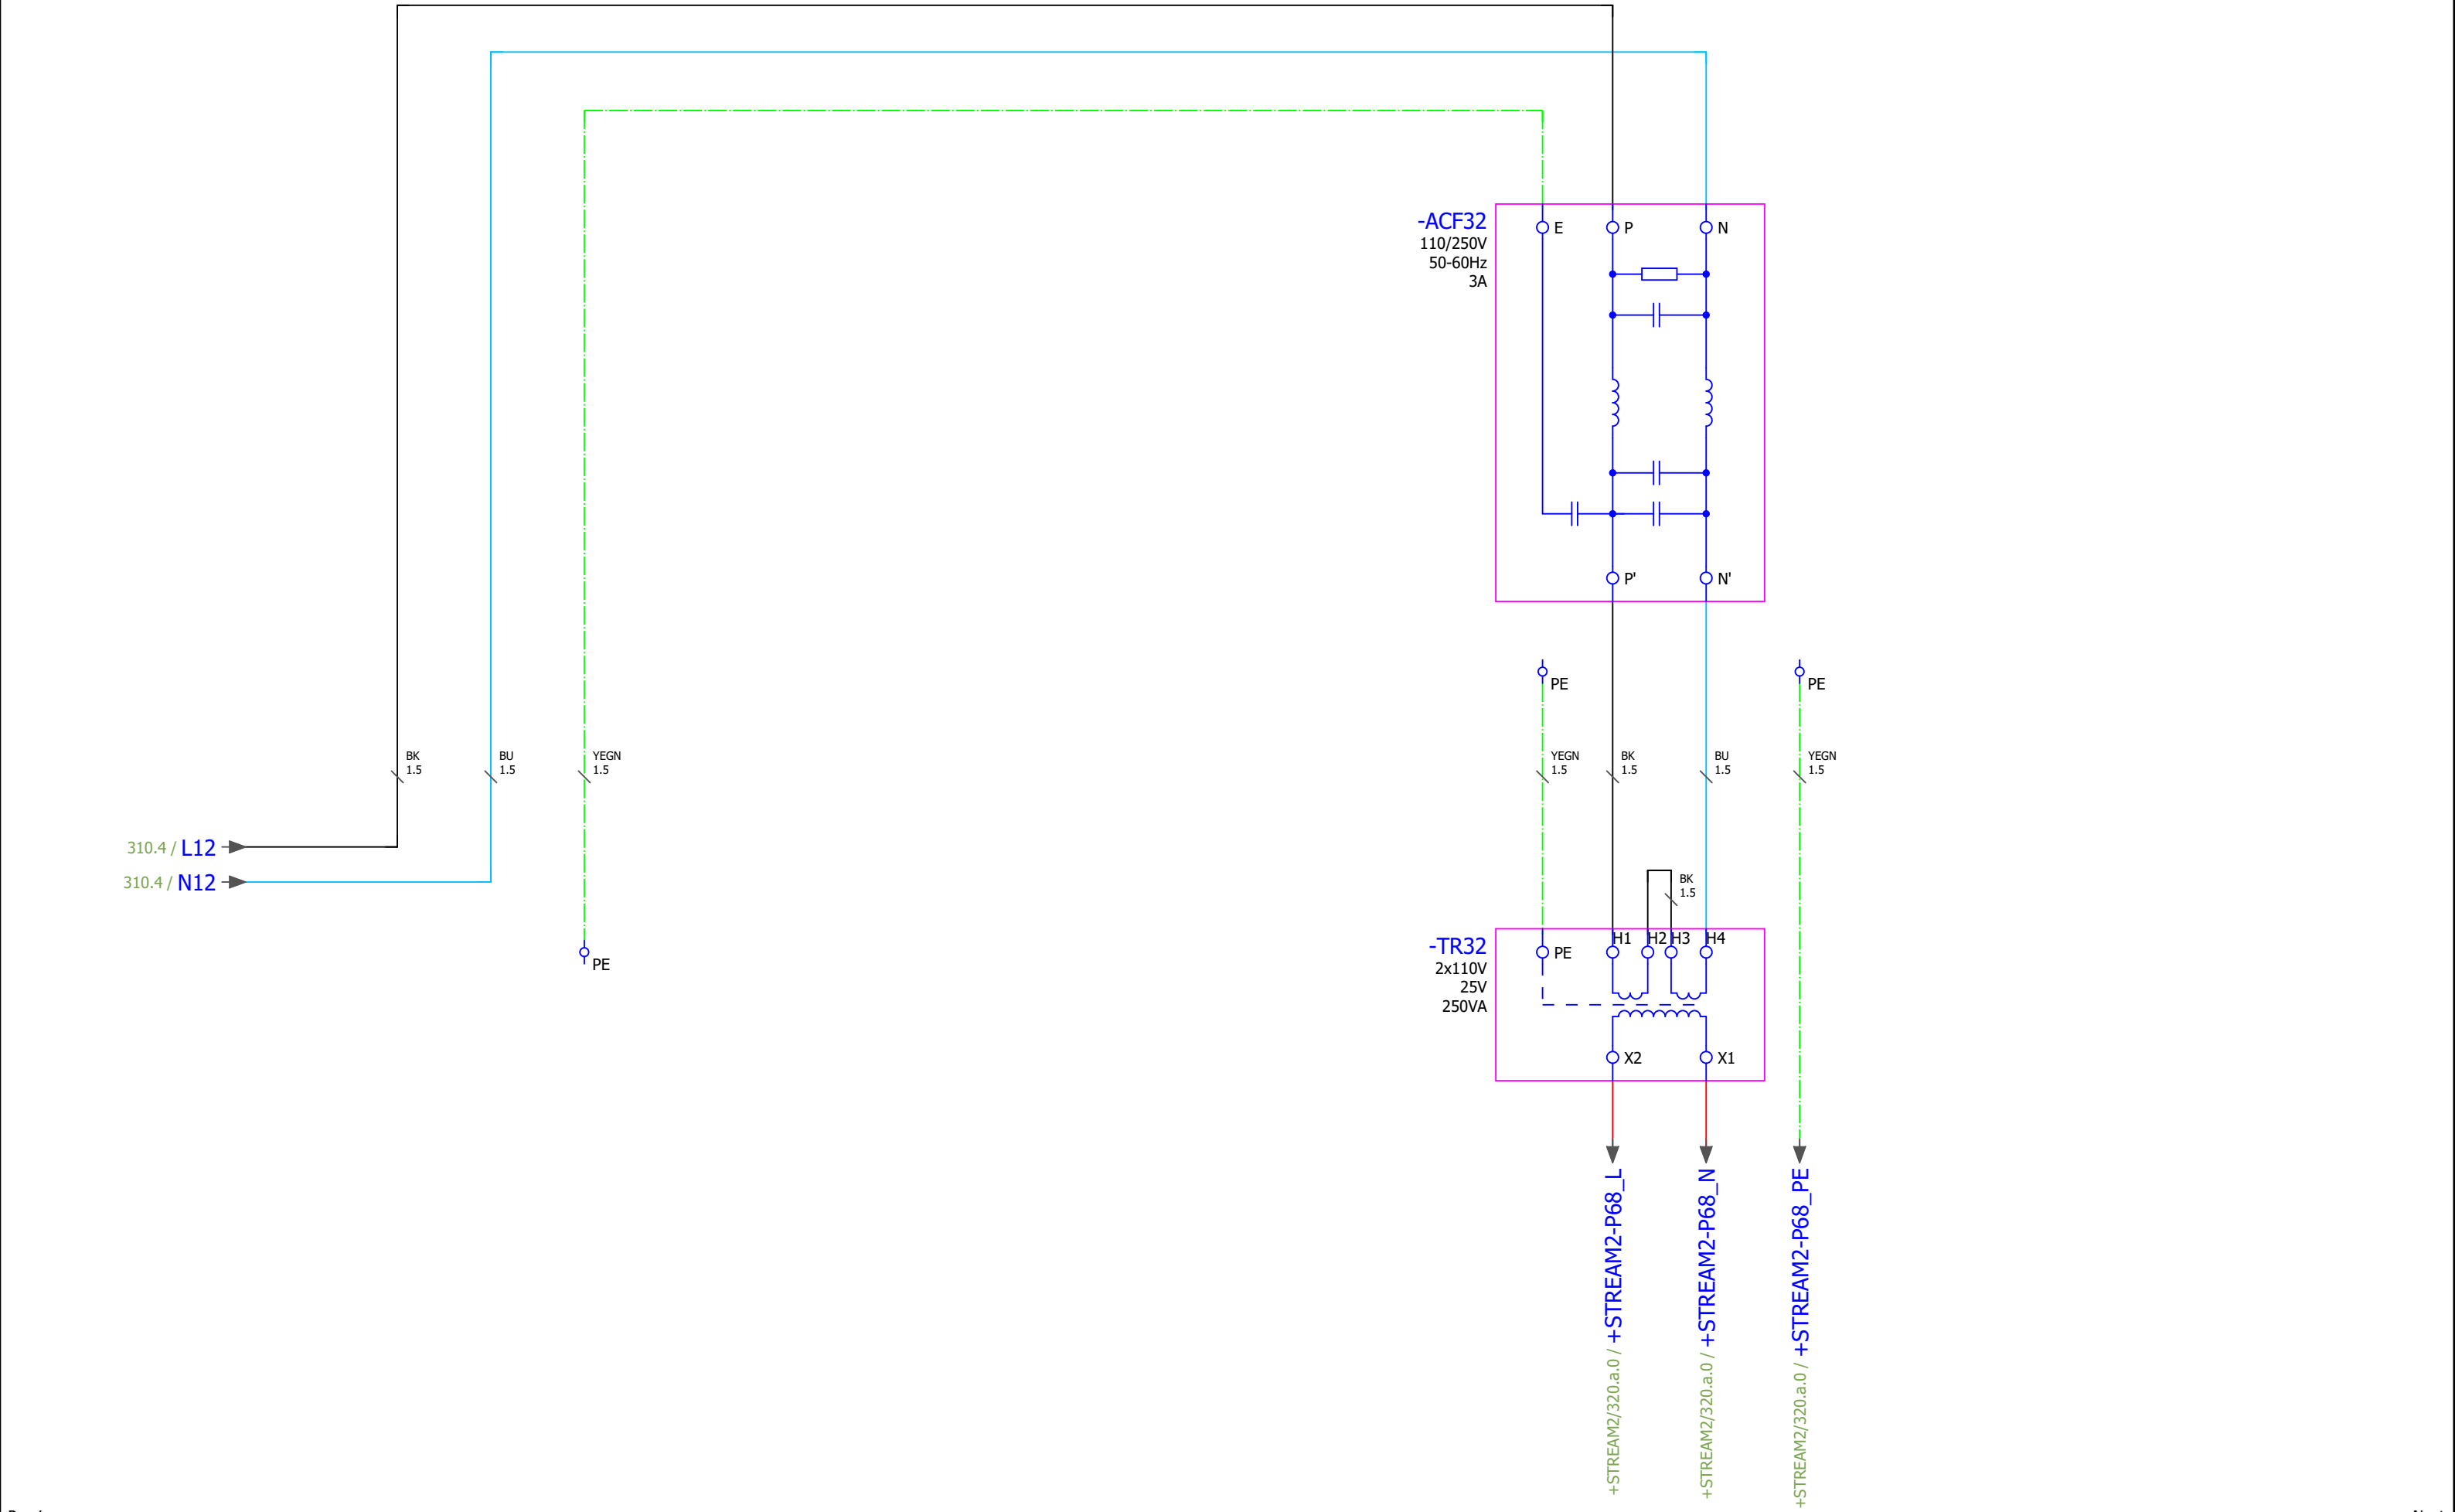


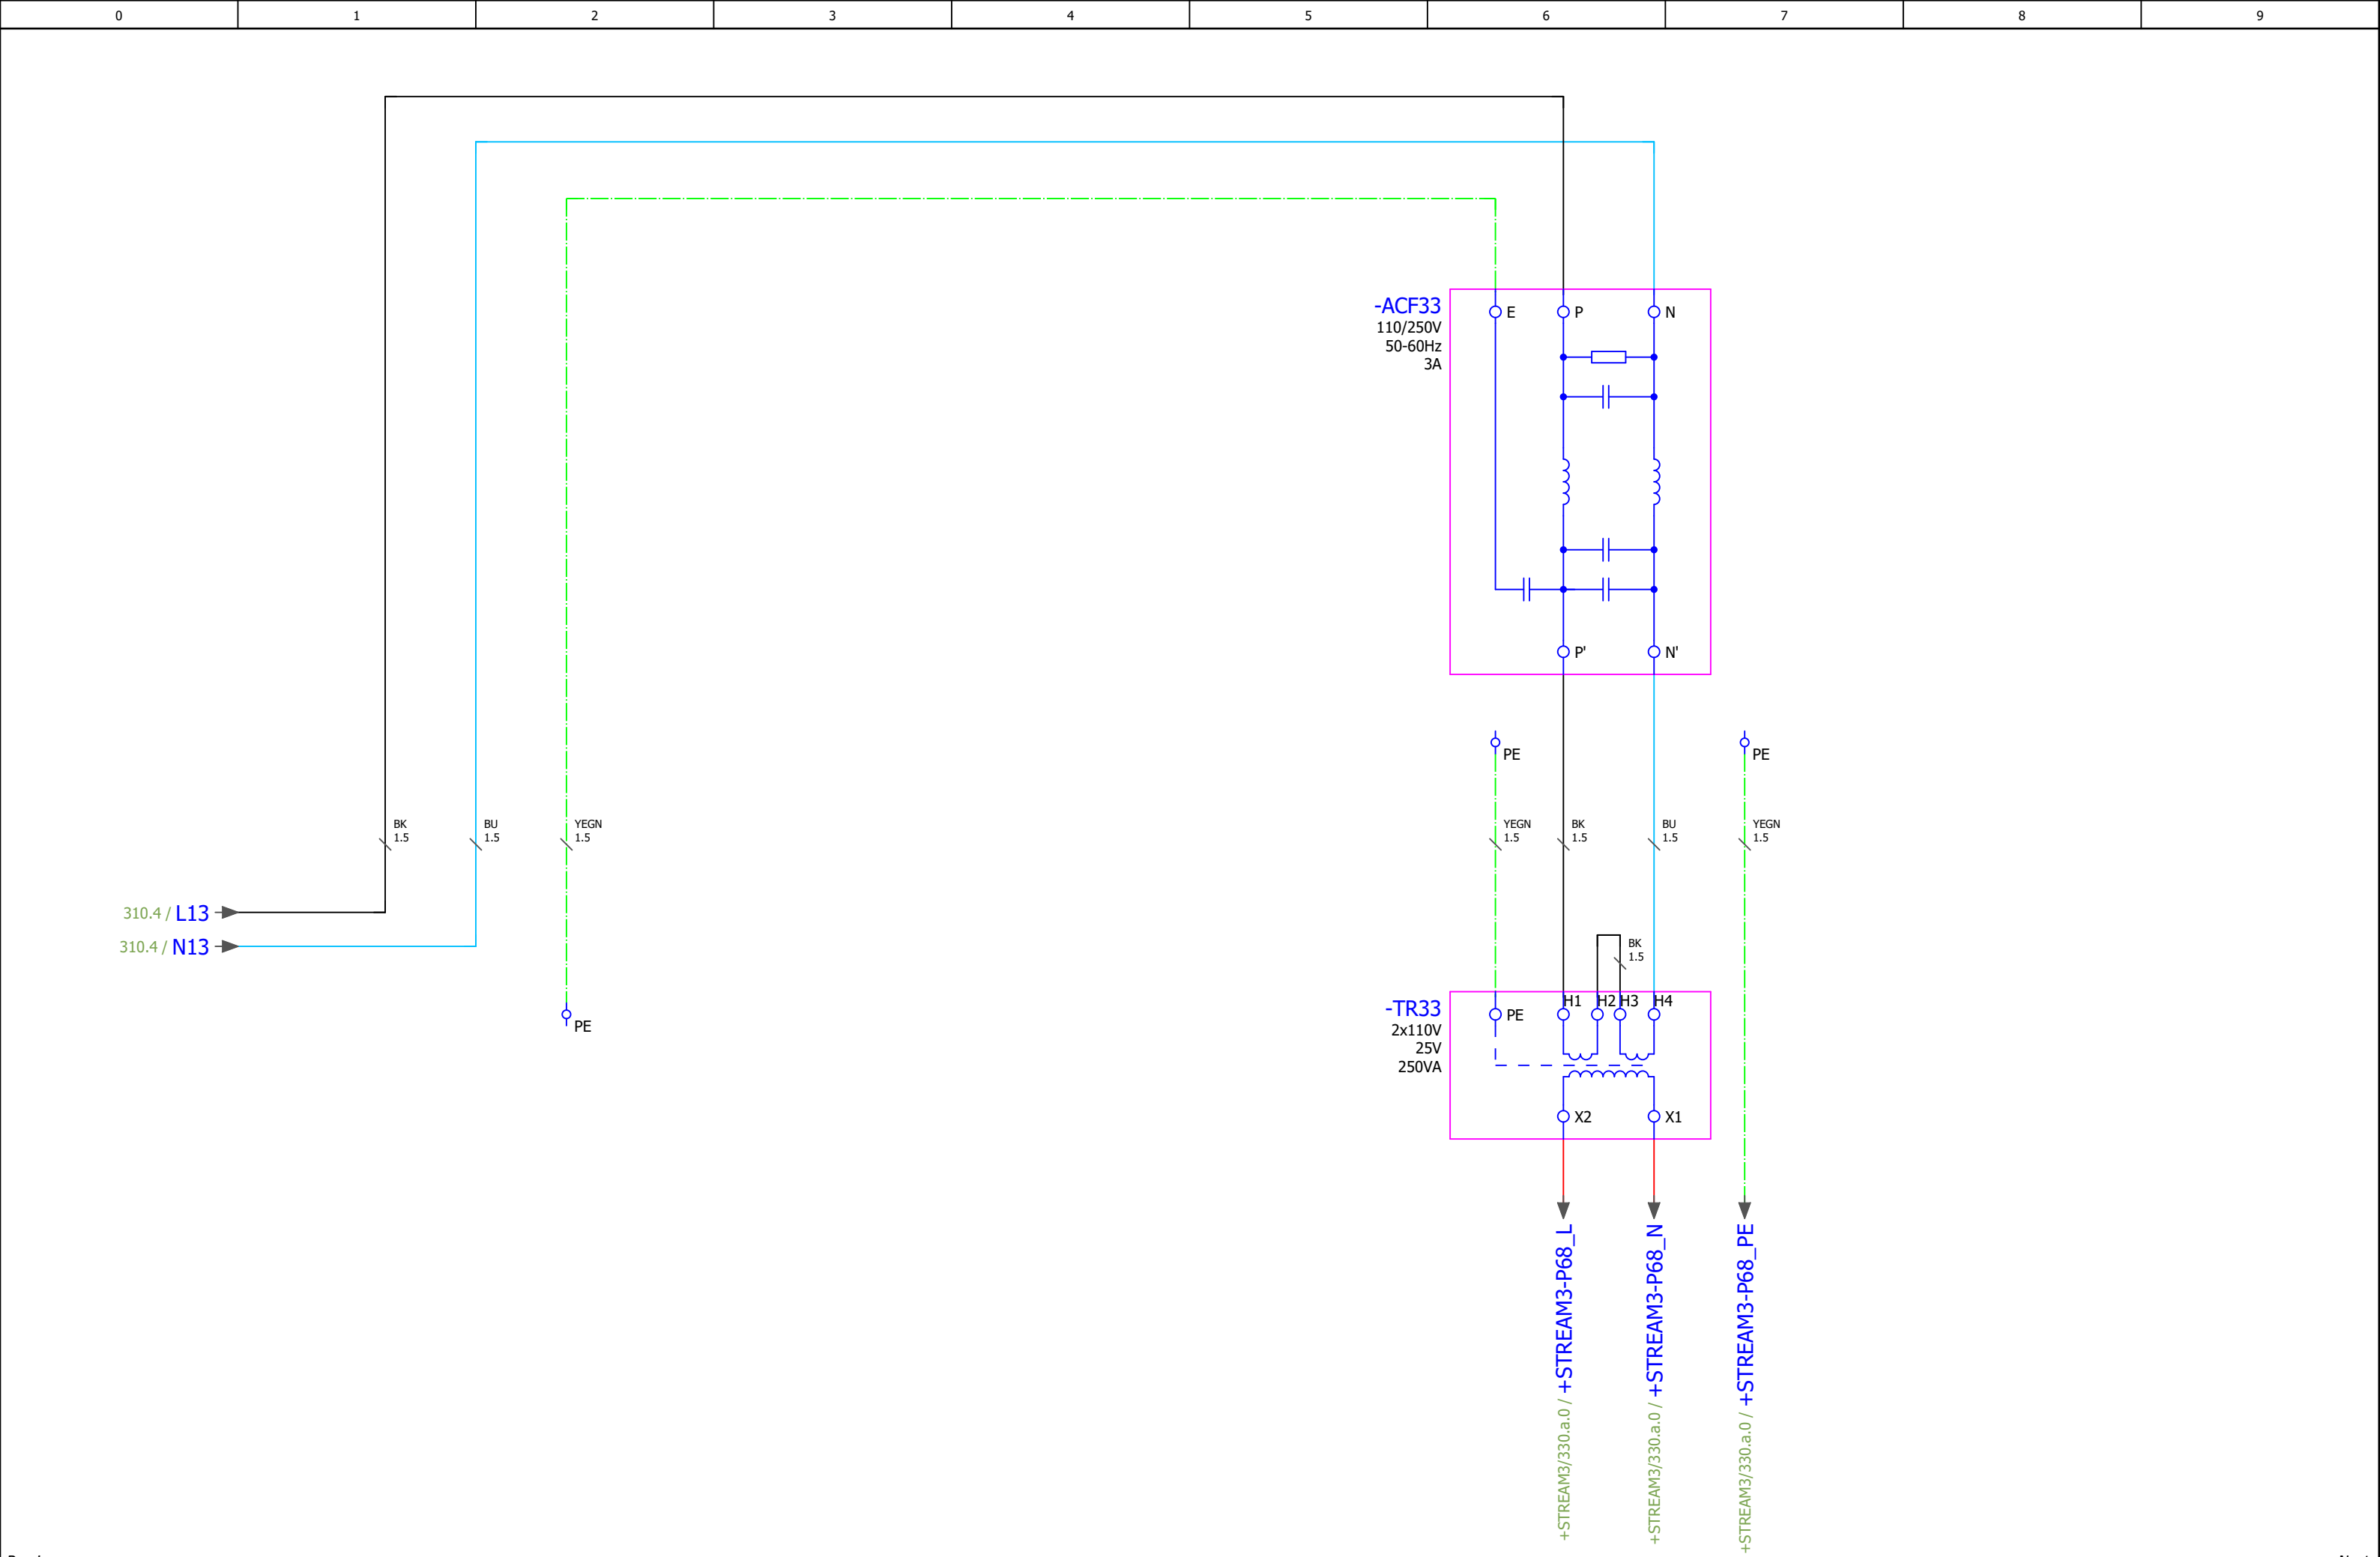


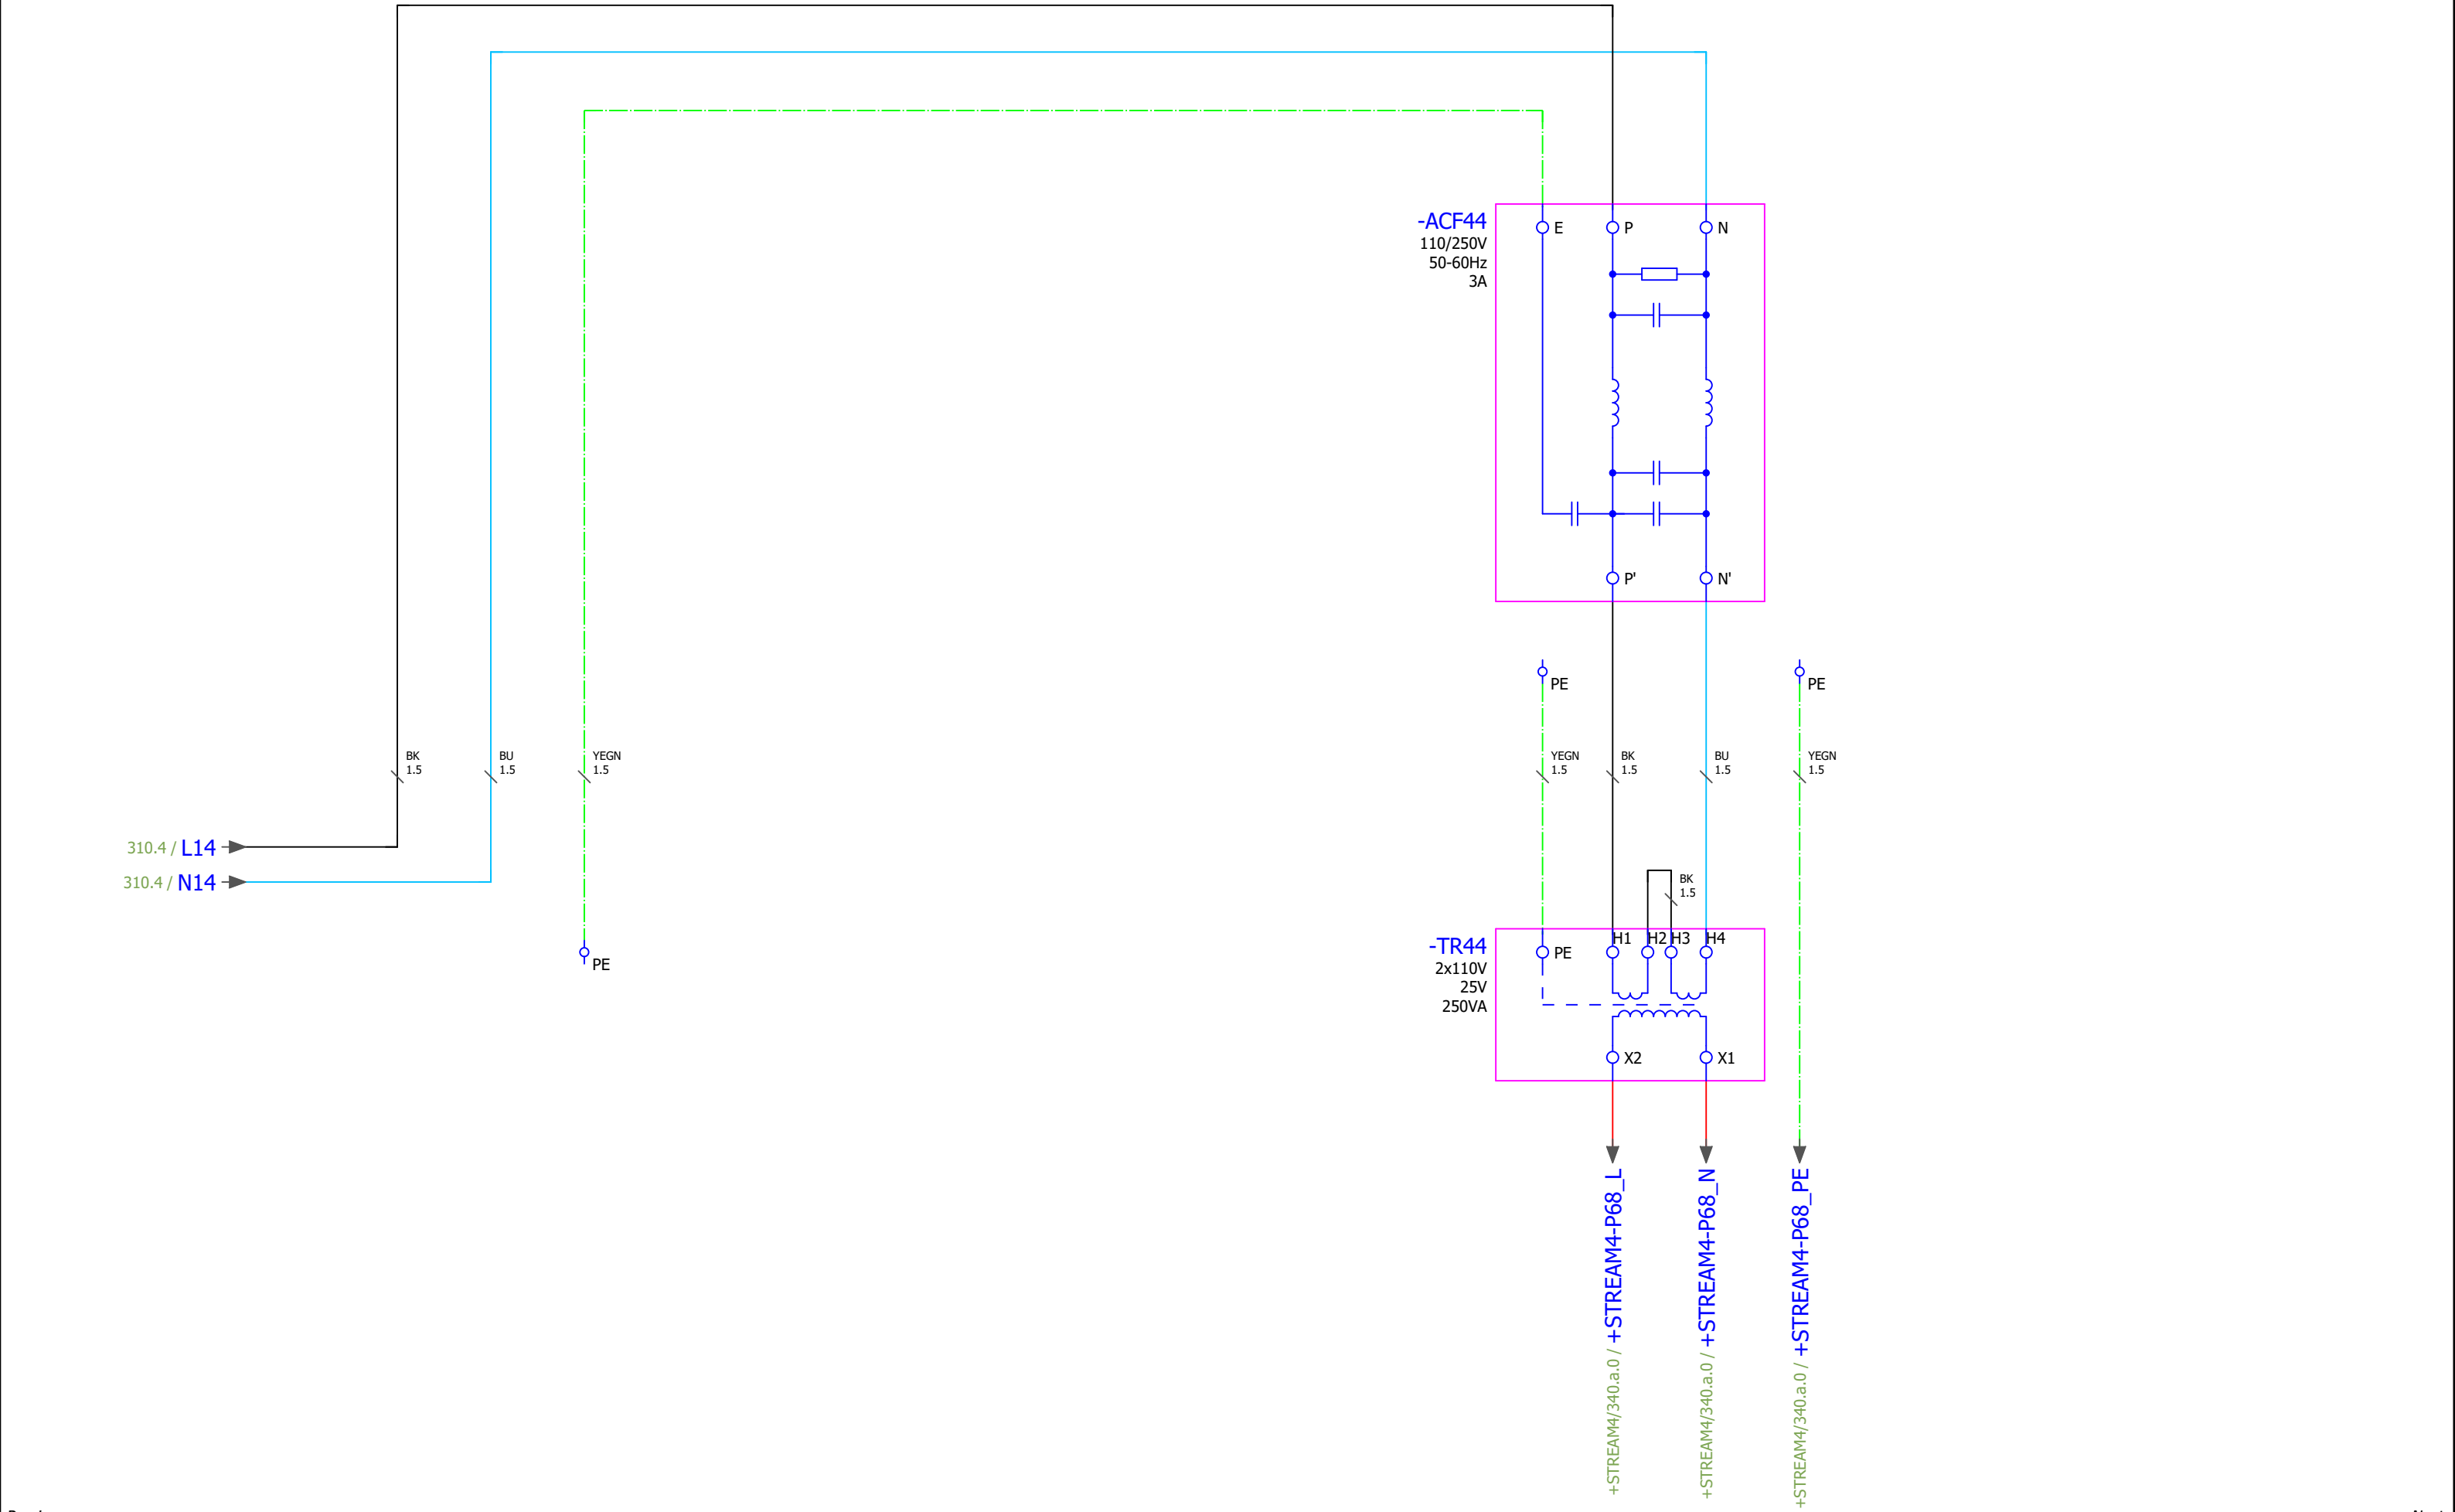


Previous:
330

Next:
+STREAM1/310.a




DB9





PSU


Power Supply unit

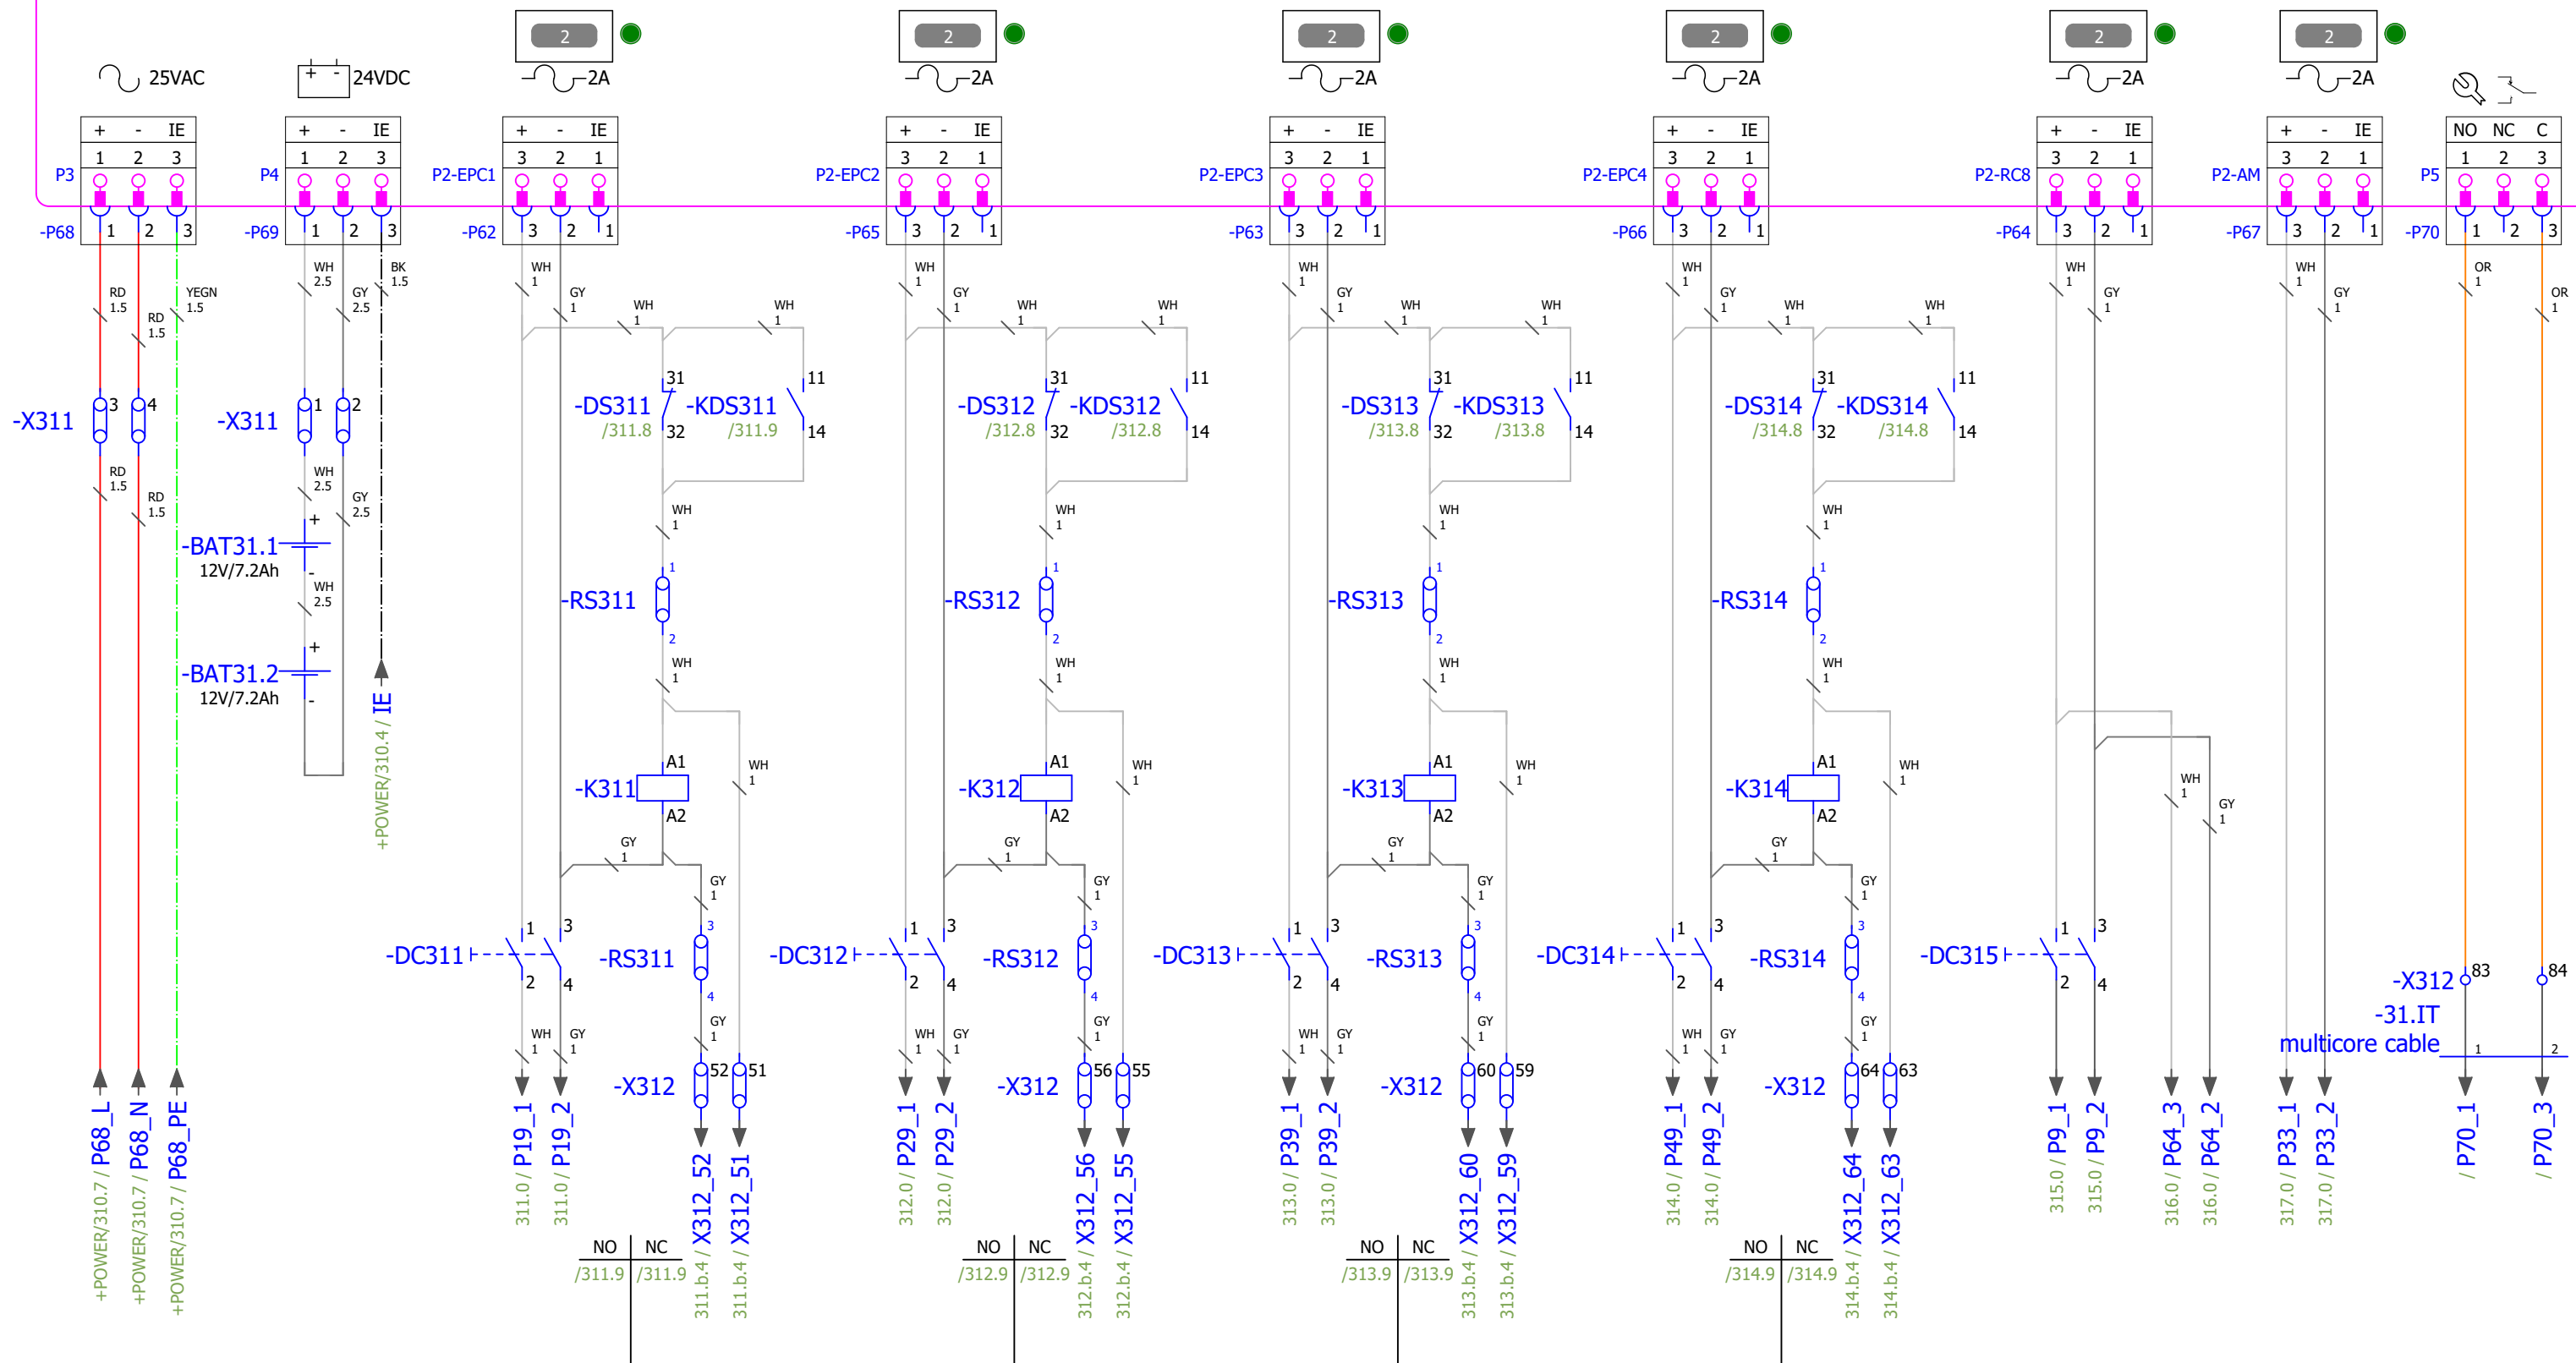

-EPC311

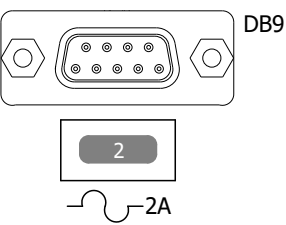


EPC Explosion Protection Controller

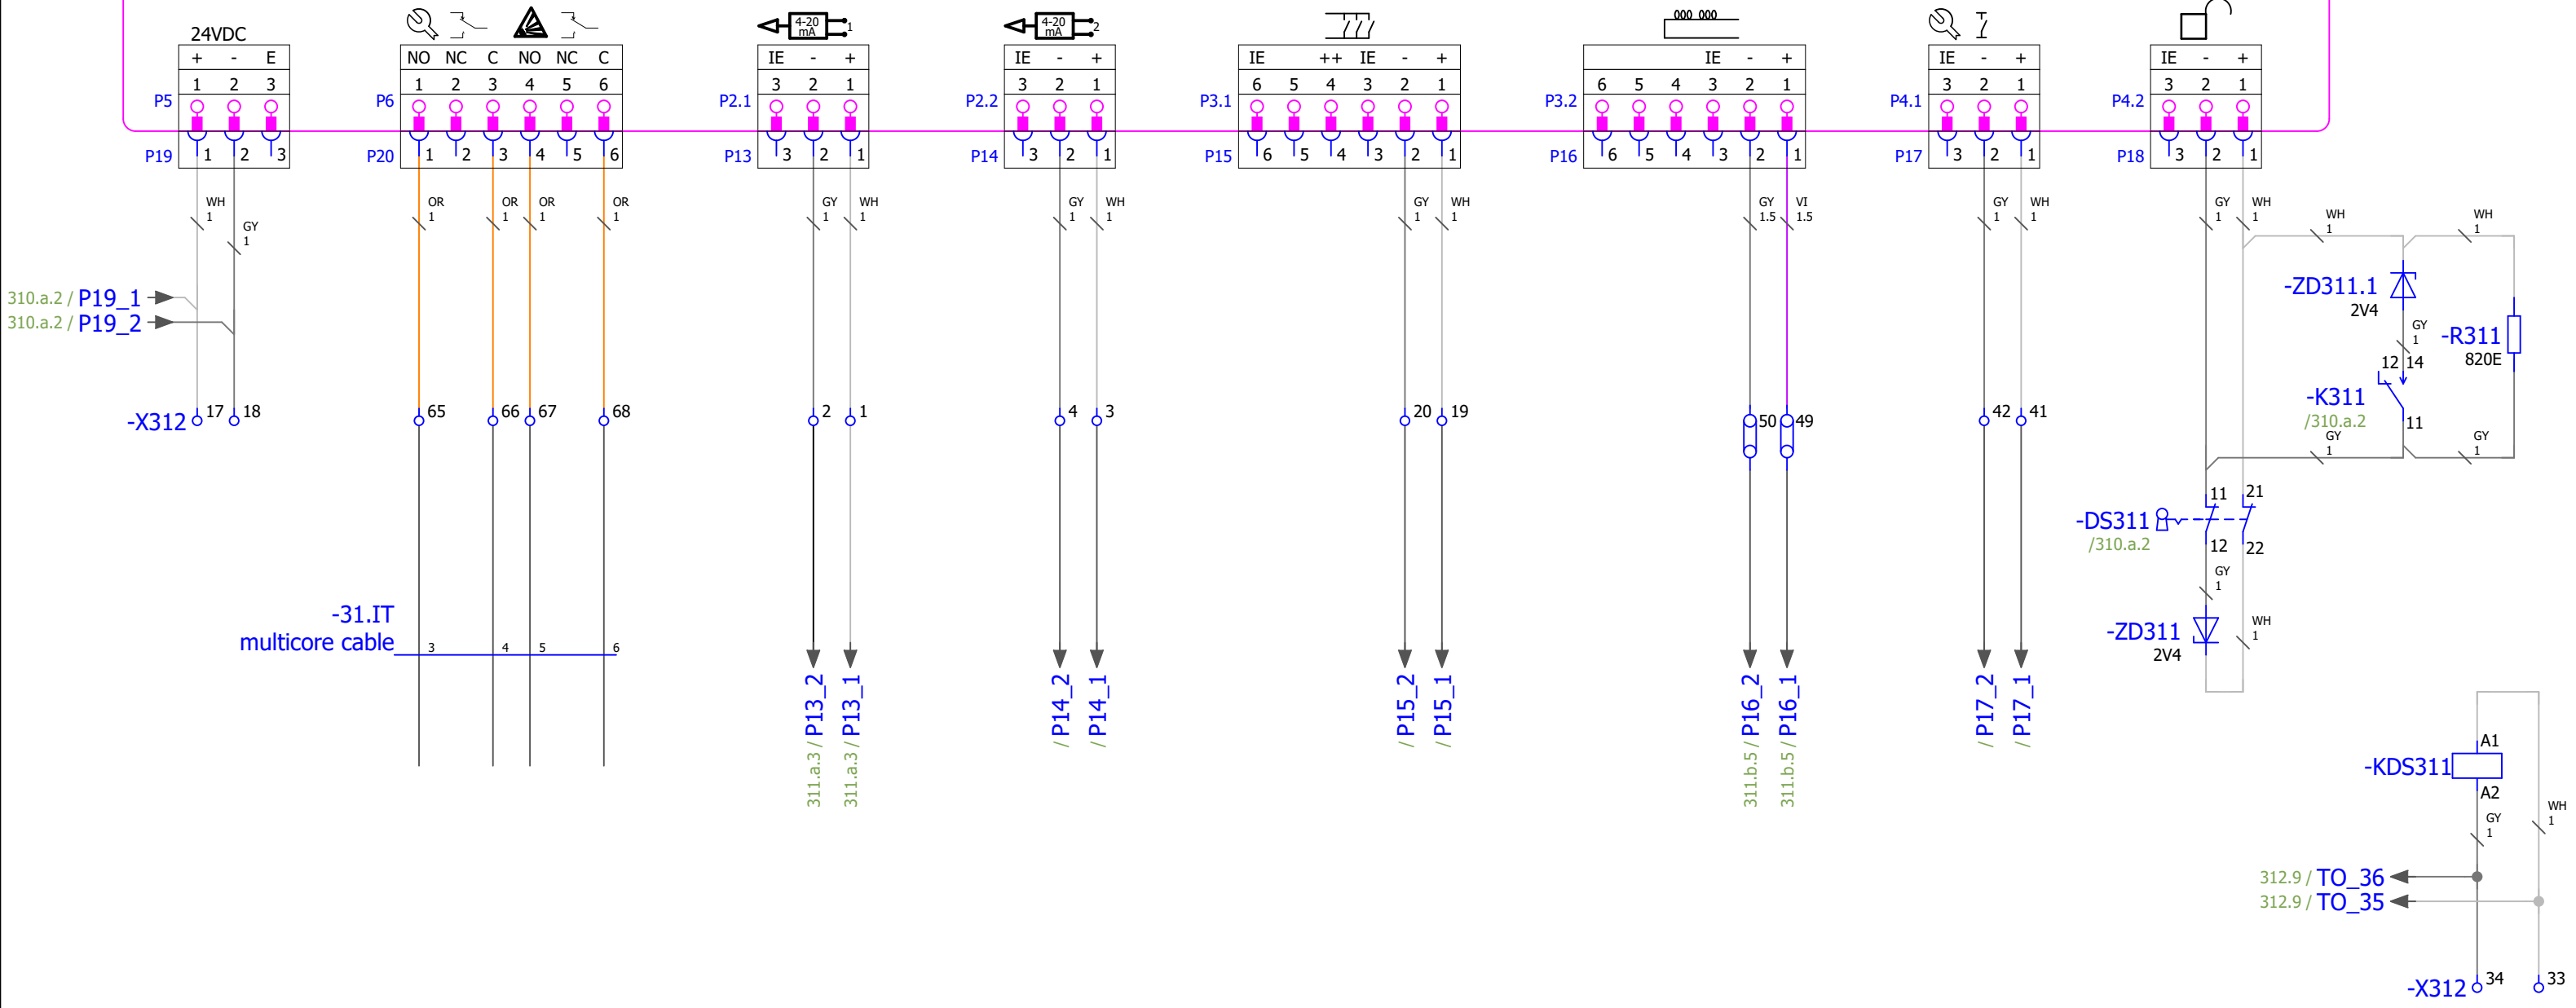


NO	NC
/310.a.3	

Previous:
310.a



Next:
311.a

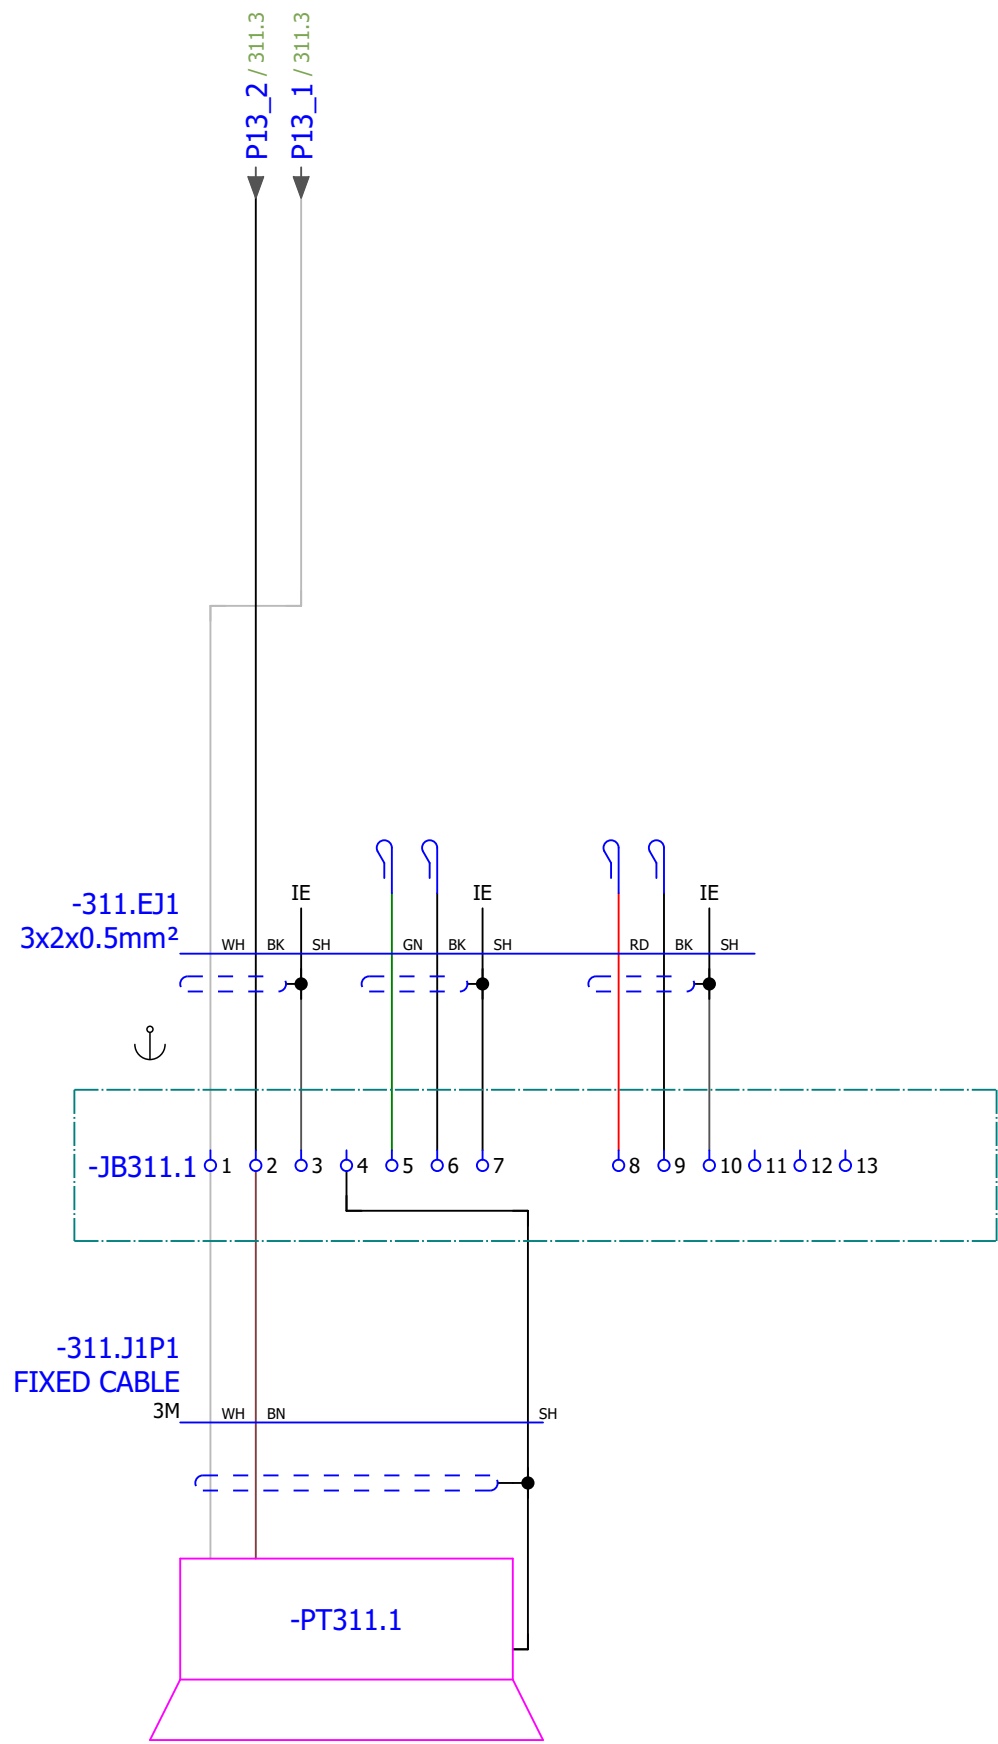


ATTENTION: Do not cut the breather tube from the detector(s) in the junction box

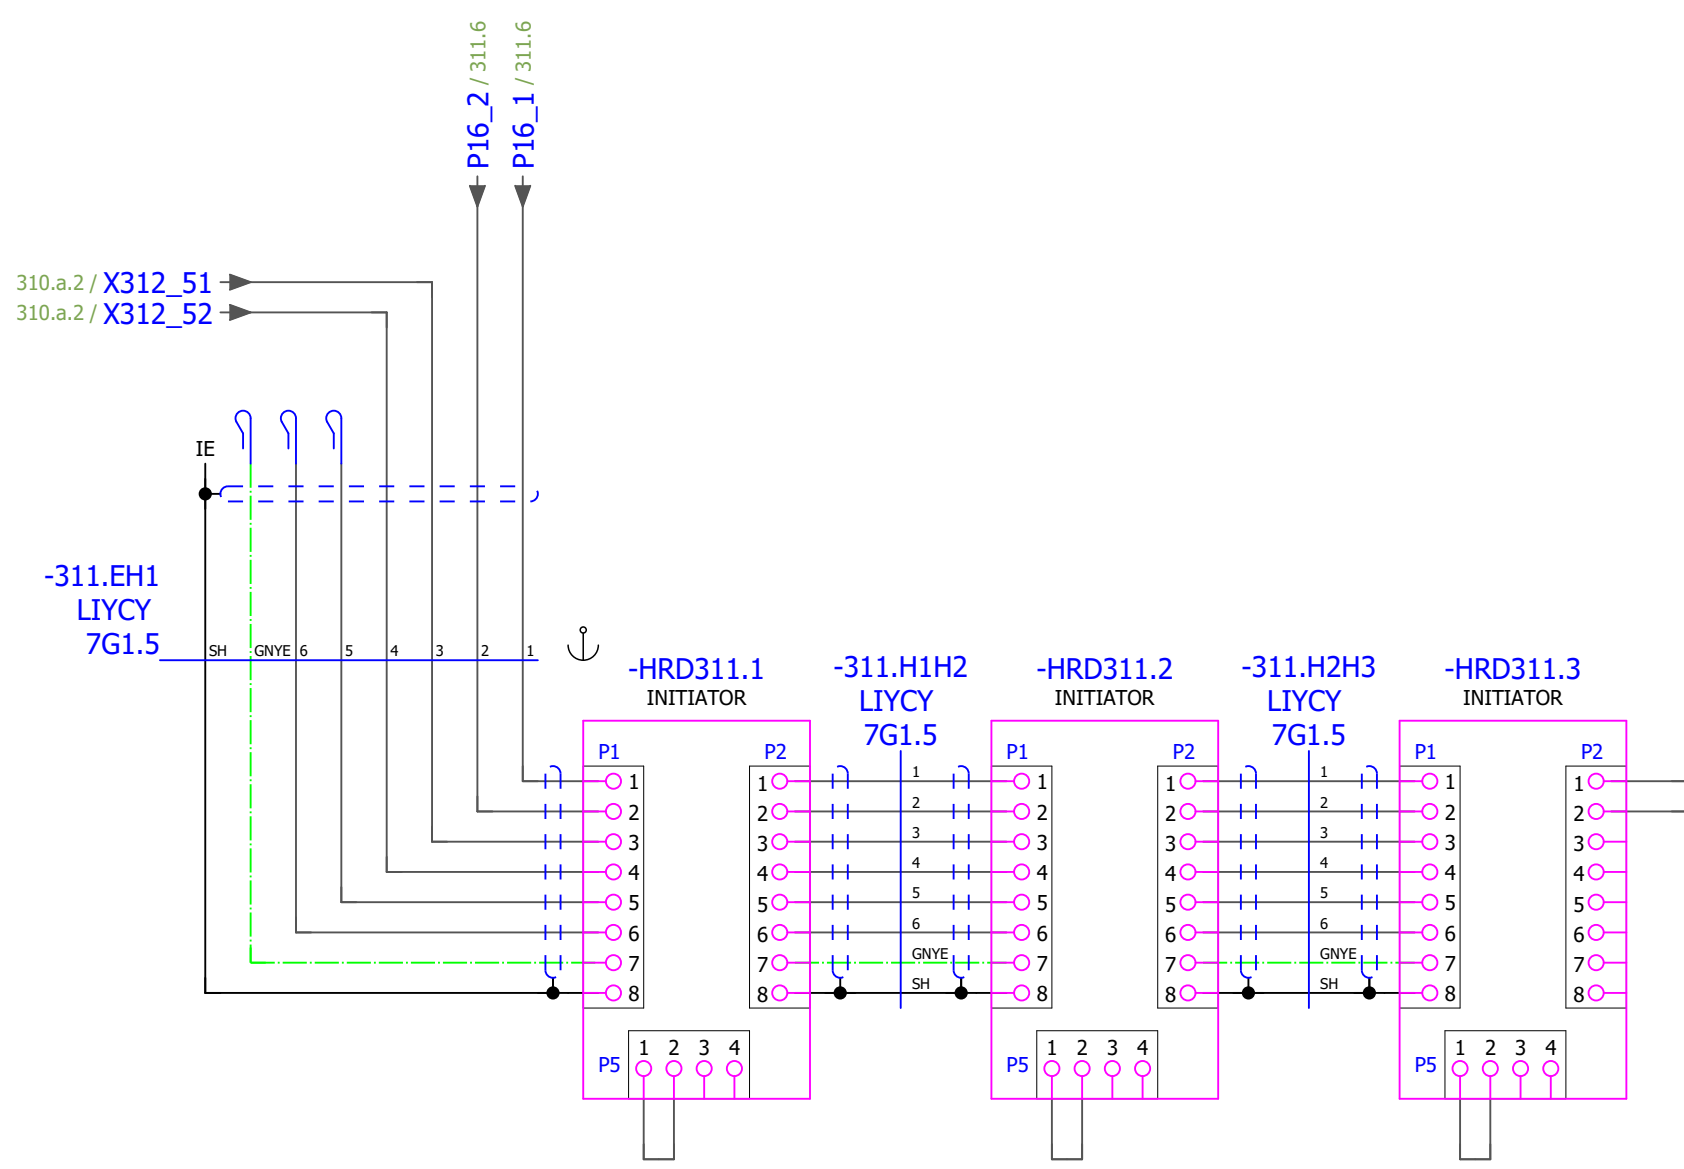

-EPC312

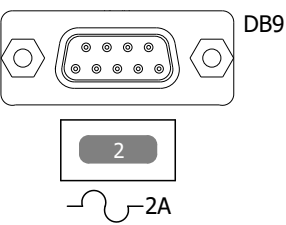


EPC Explosion Protection Controller


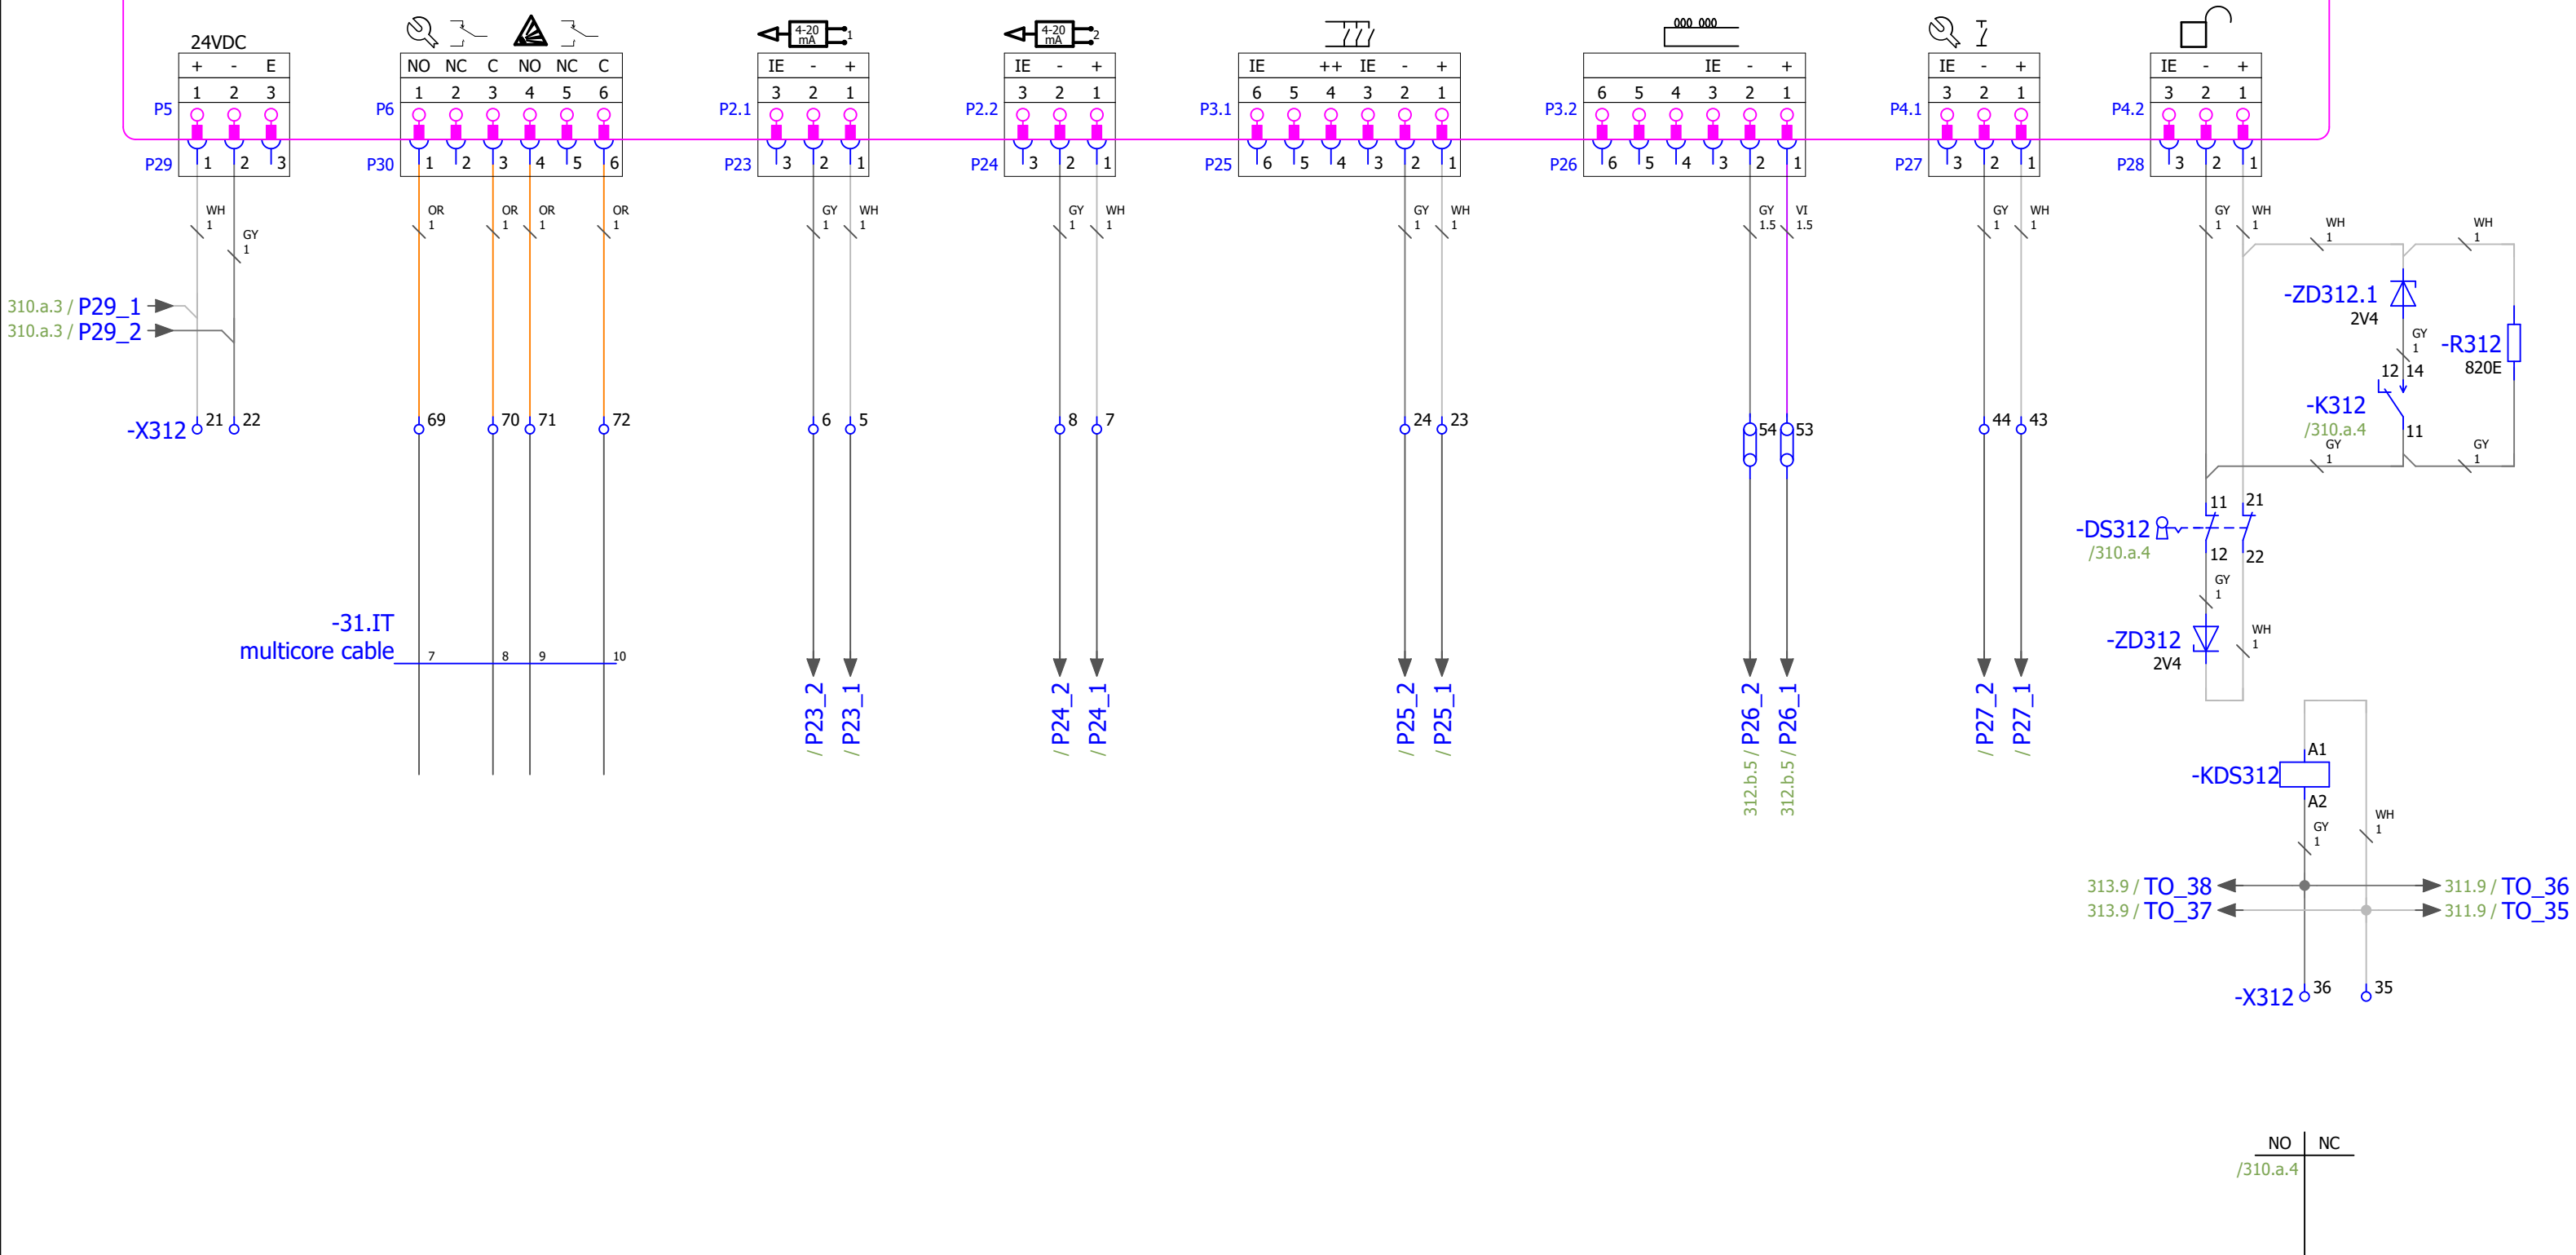


Previous:
311.b


Next:
312.b

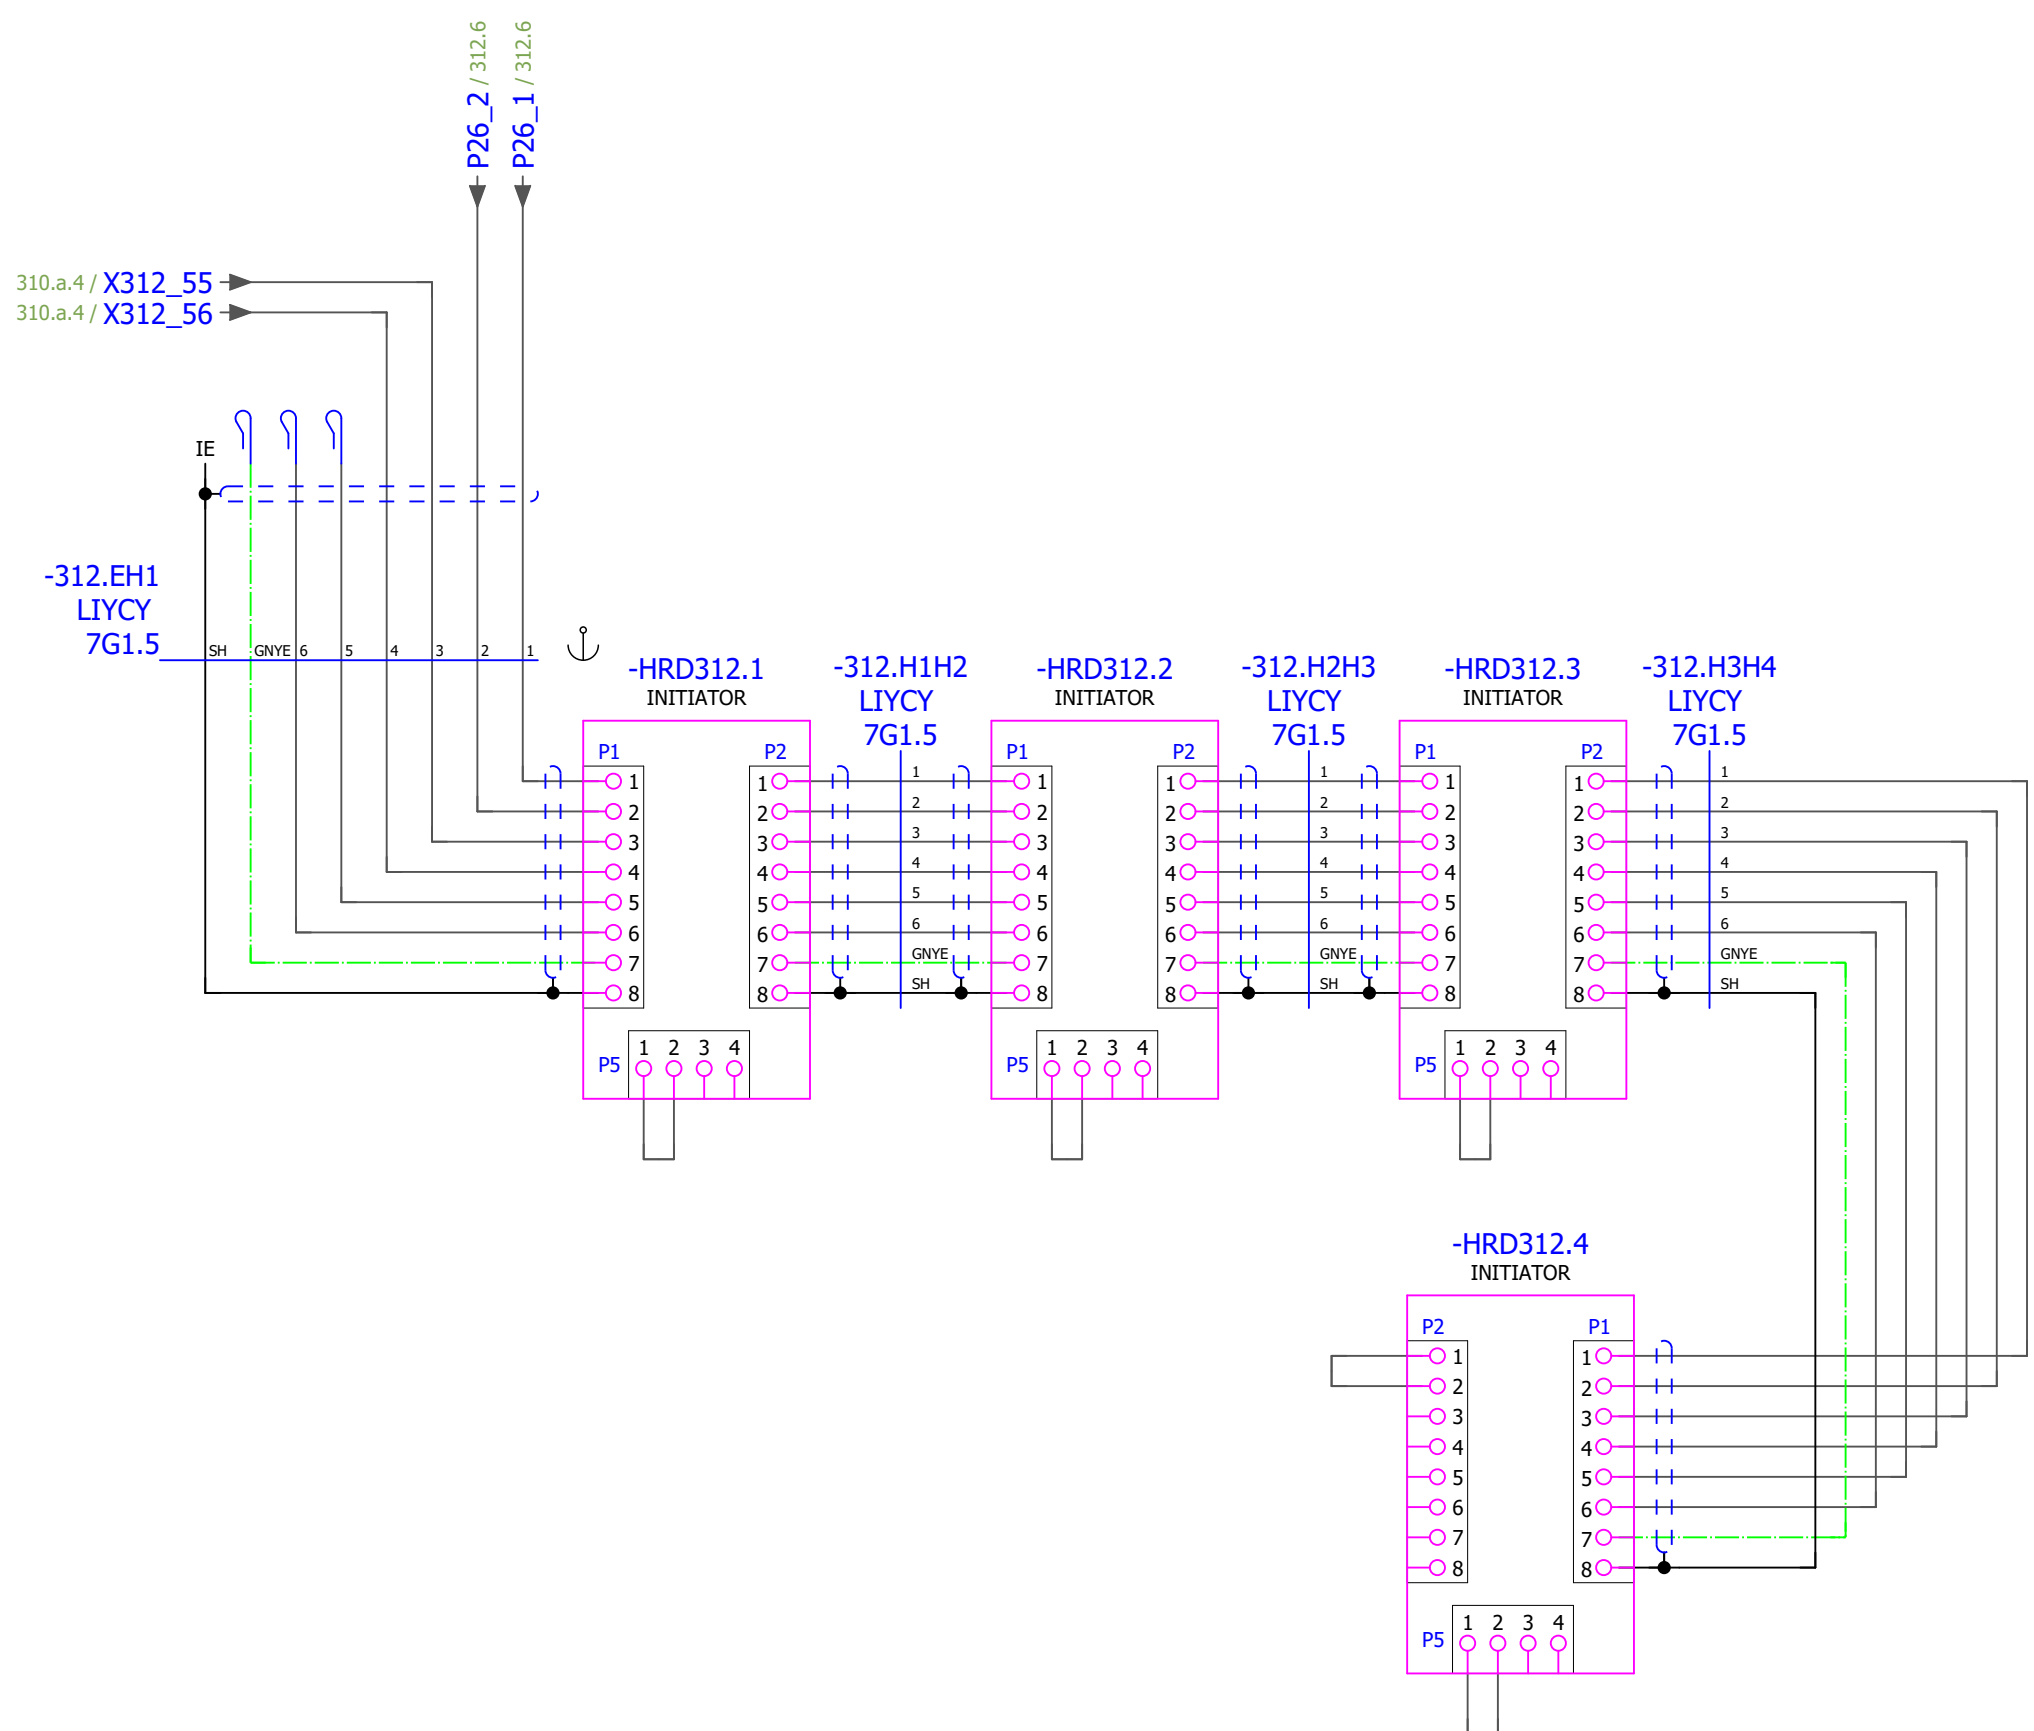


-EPC313

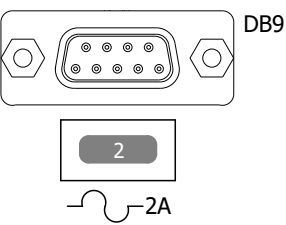


EPC Explosion Protection Controller


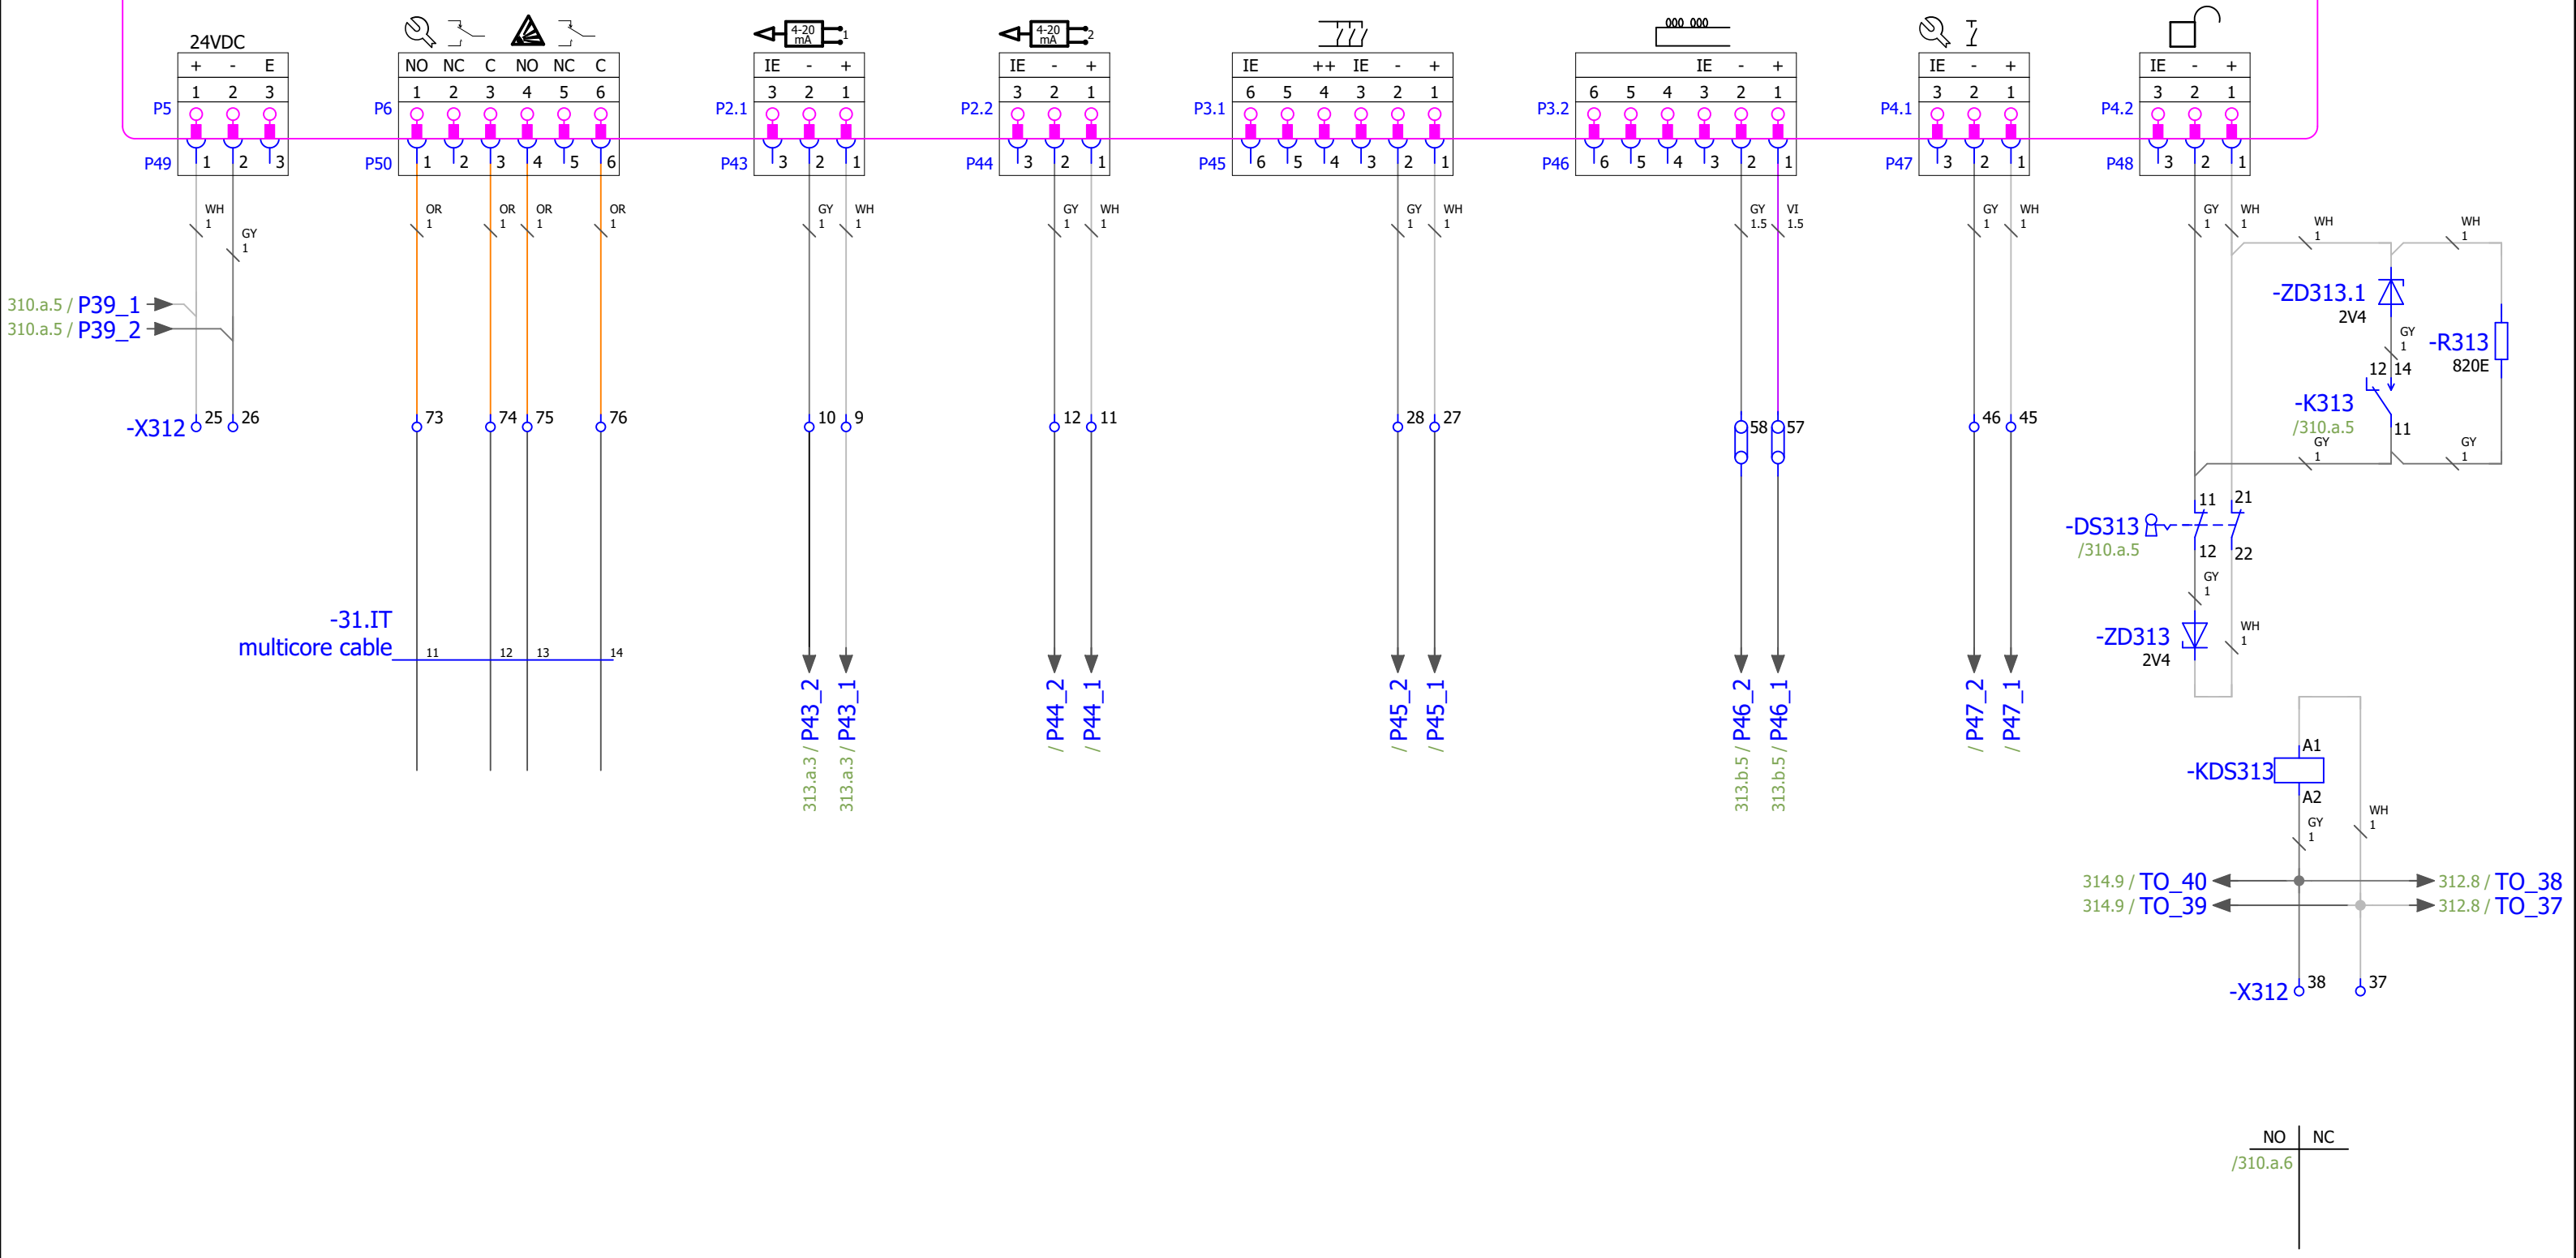


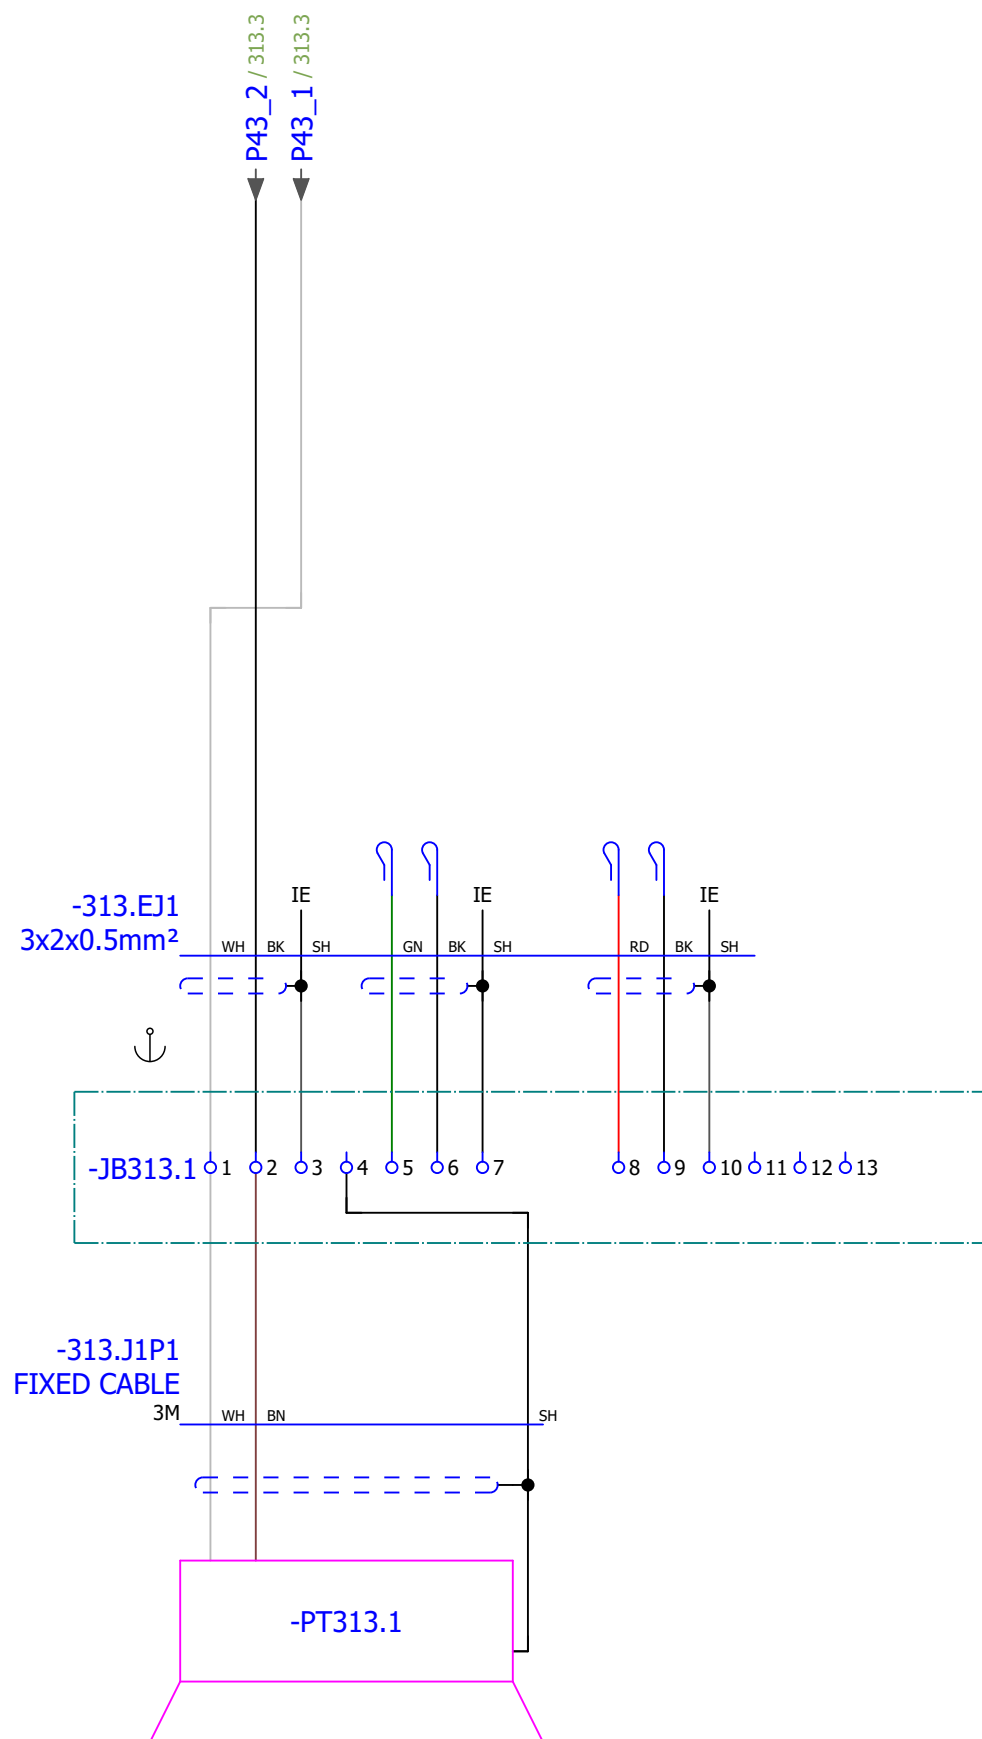


ATTENTION: Do not cut the breather tube from the detector(s) in the junction box

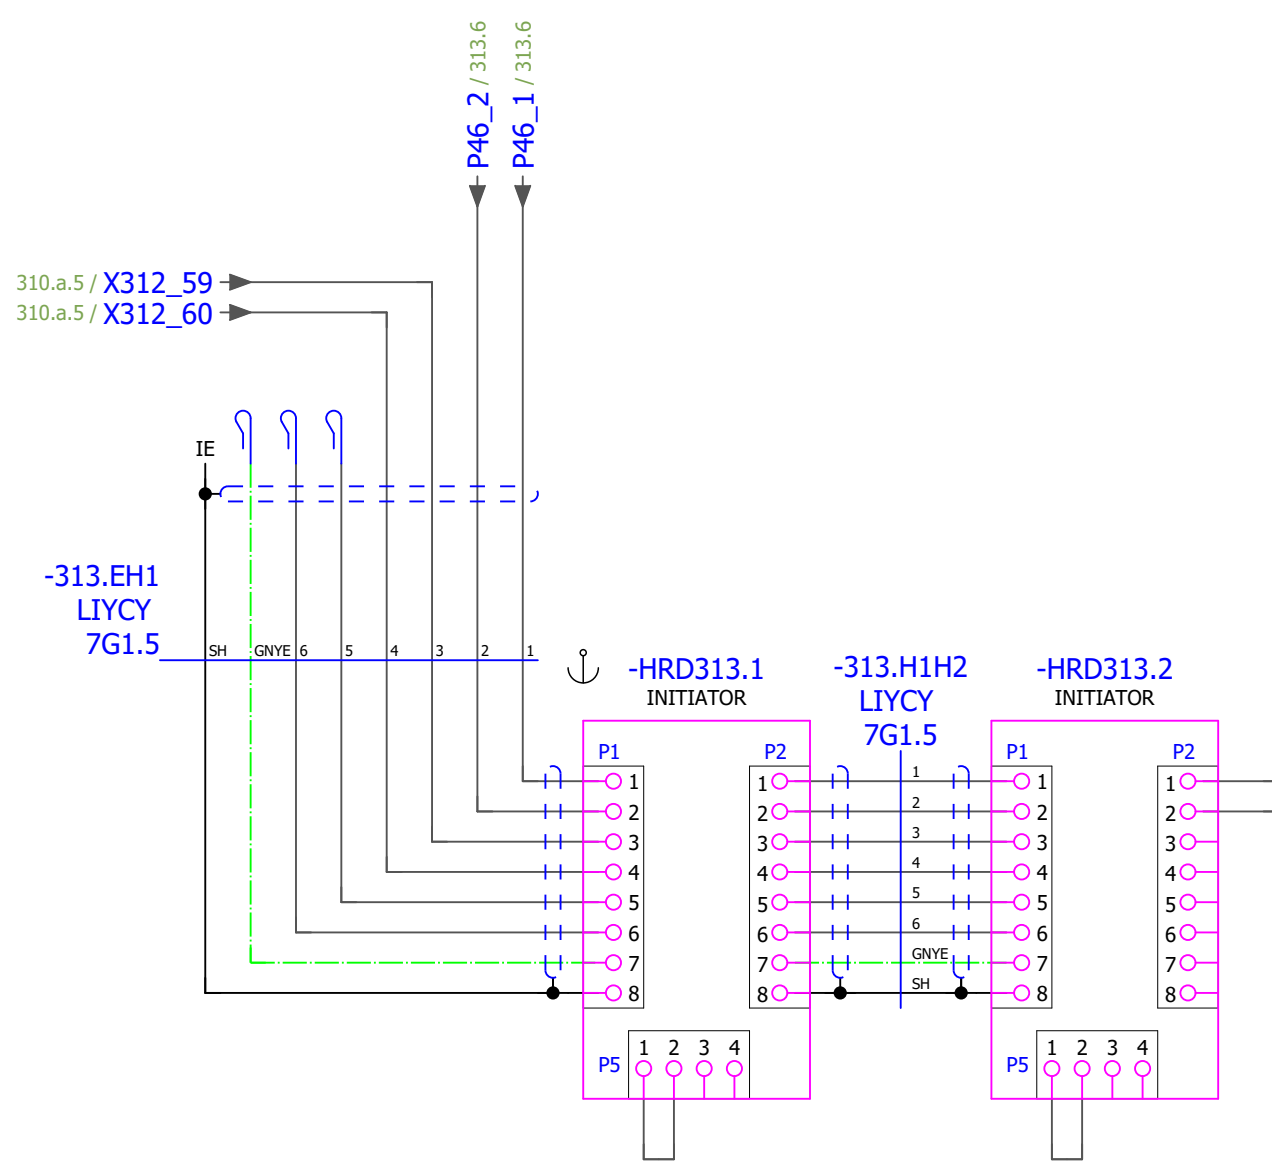

-EPC314

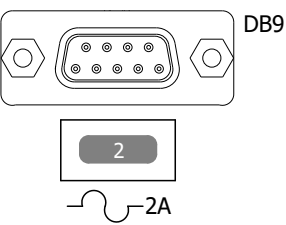


EPC Explosion Protection Controller

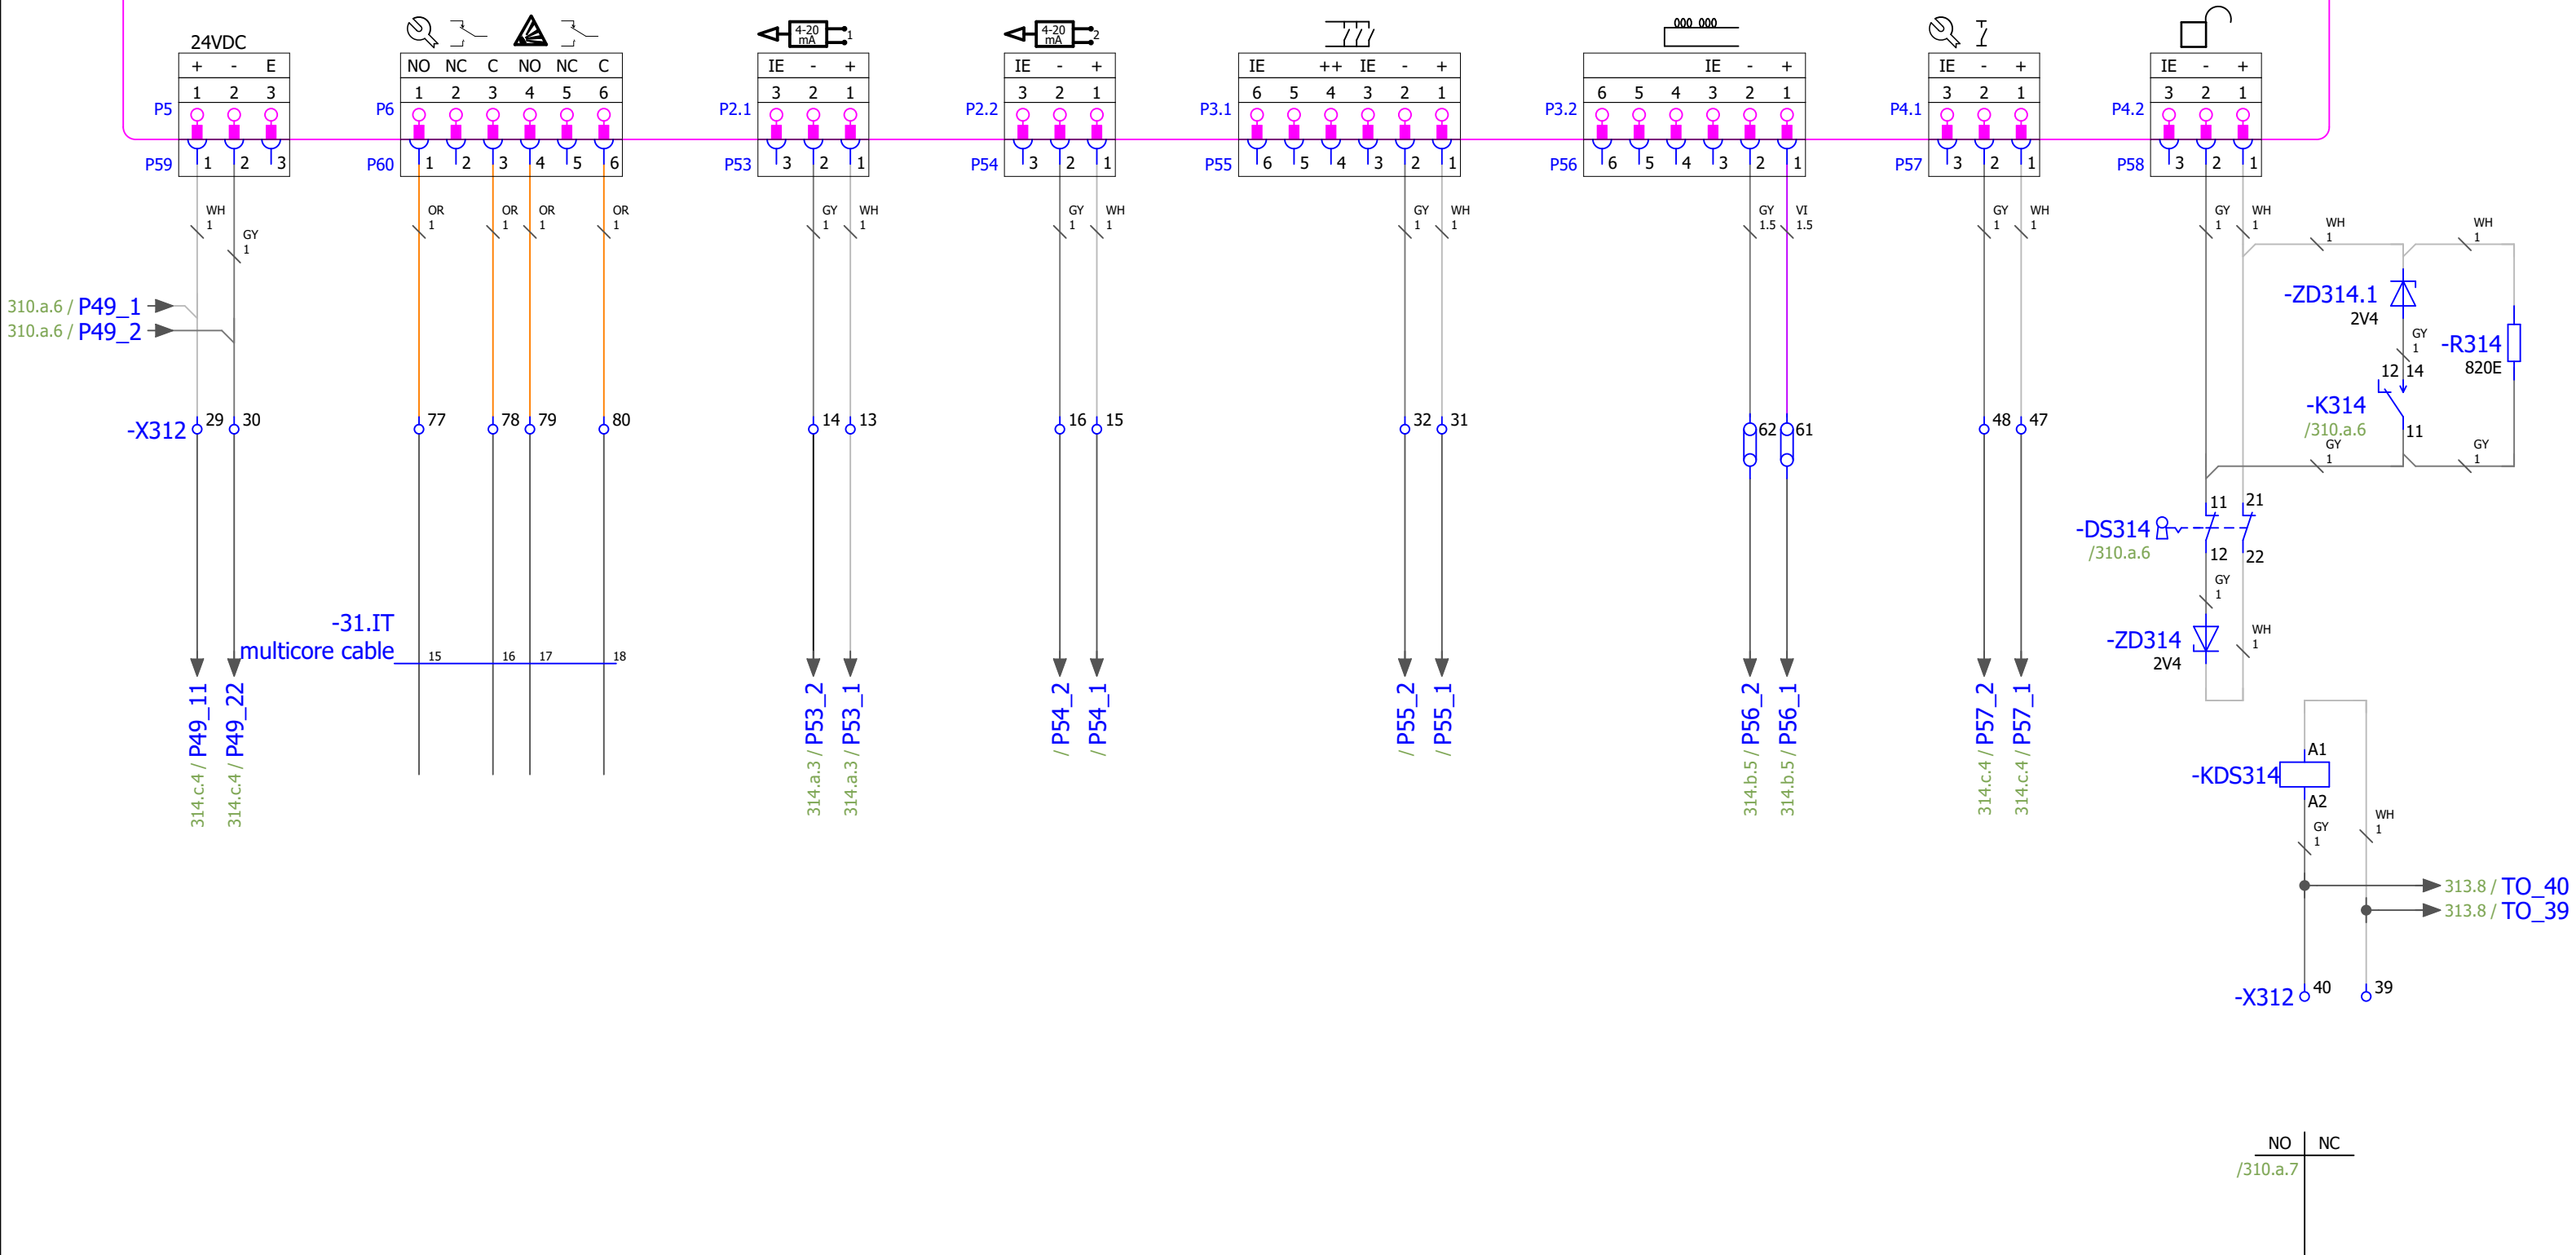



Previous:
313.b

Next:
314.a

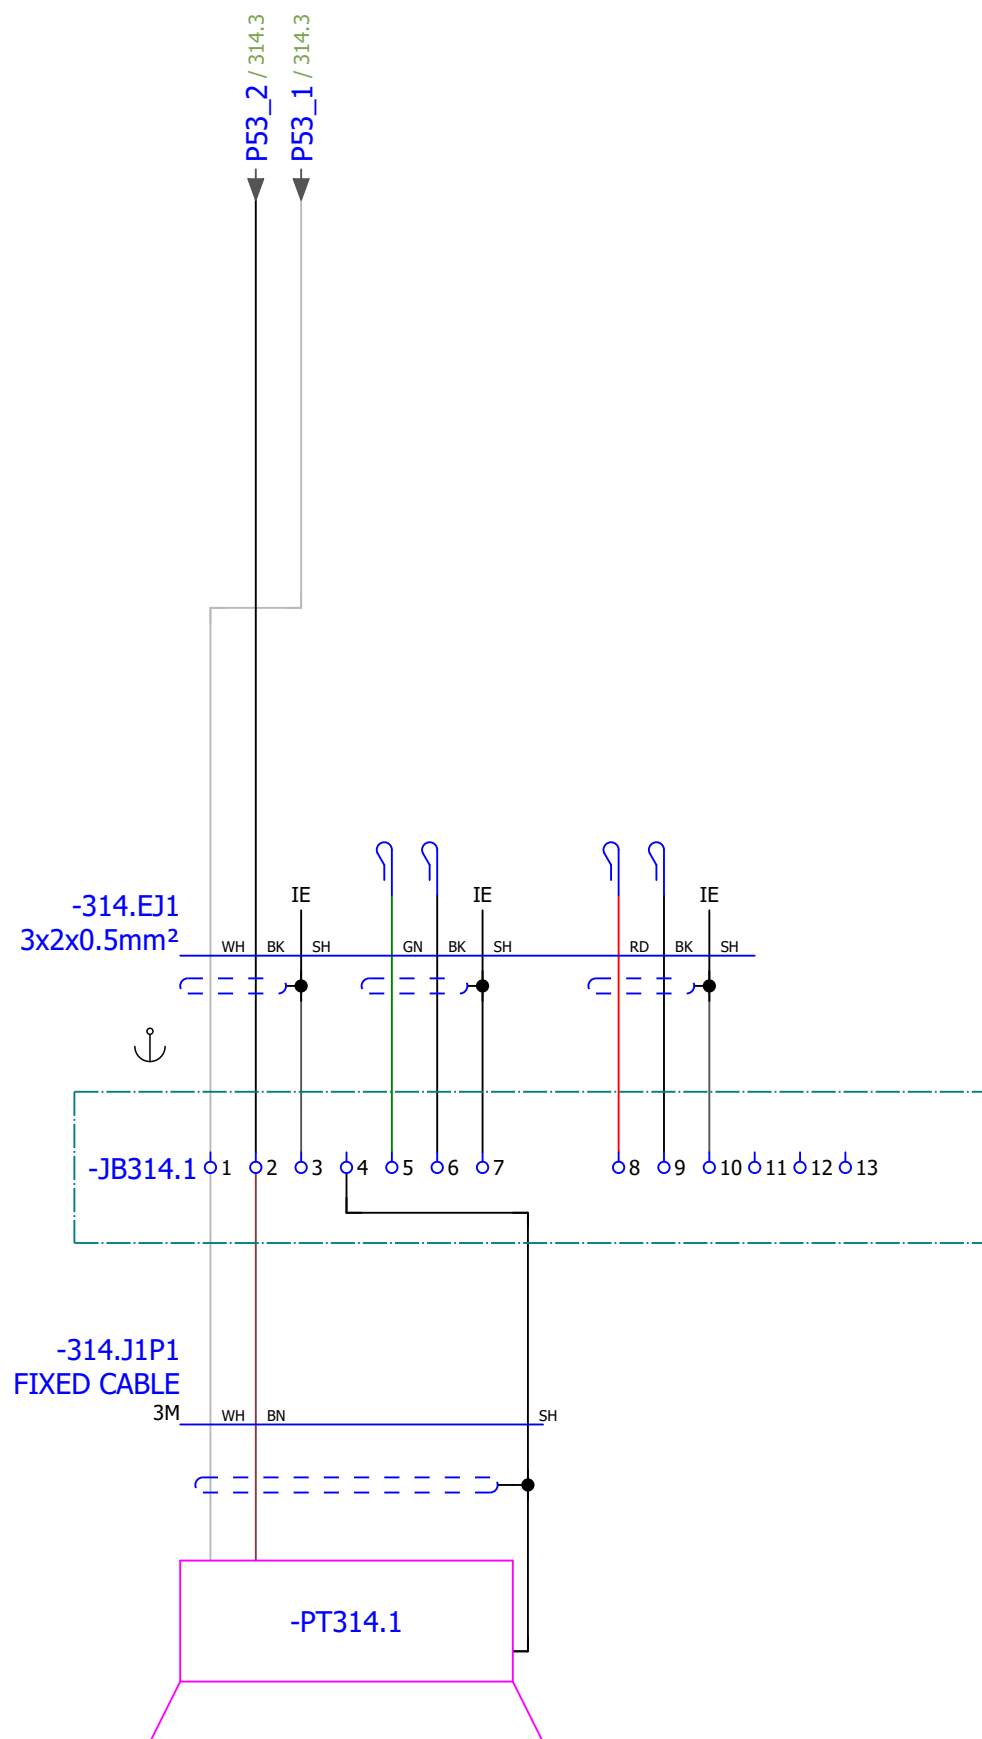

ATTENTION: Do not cut the breather tube from the detector(s) in the junction box

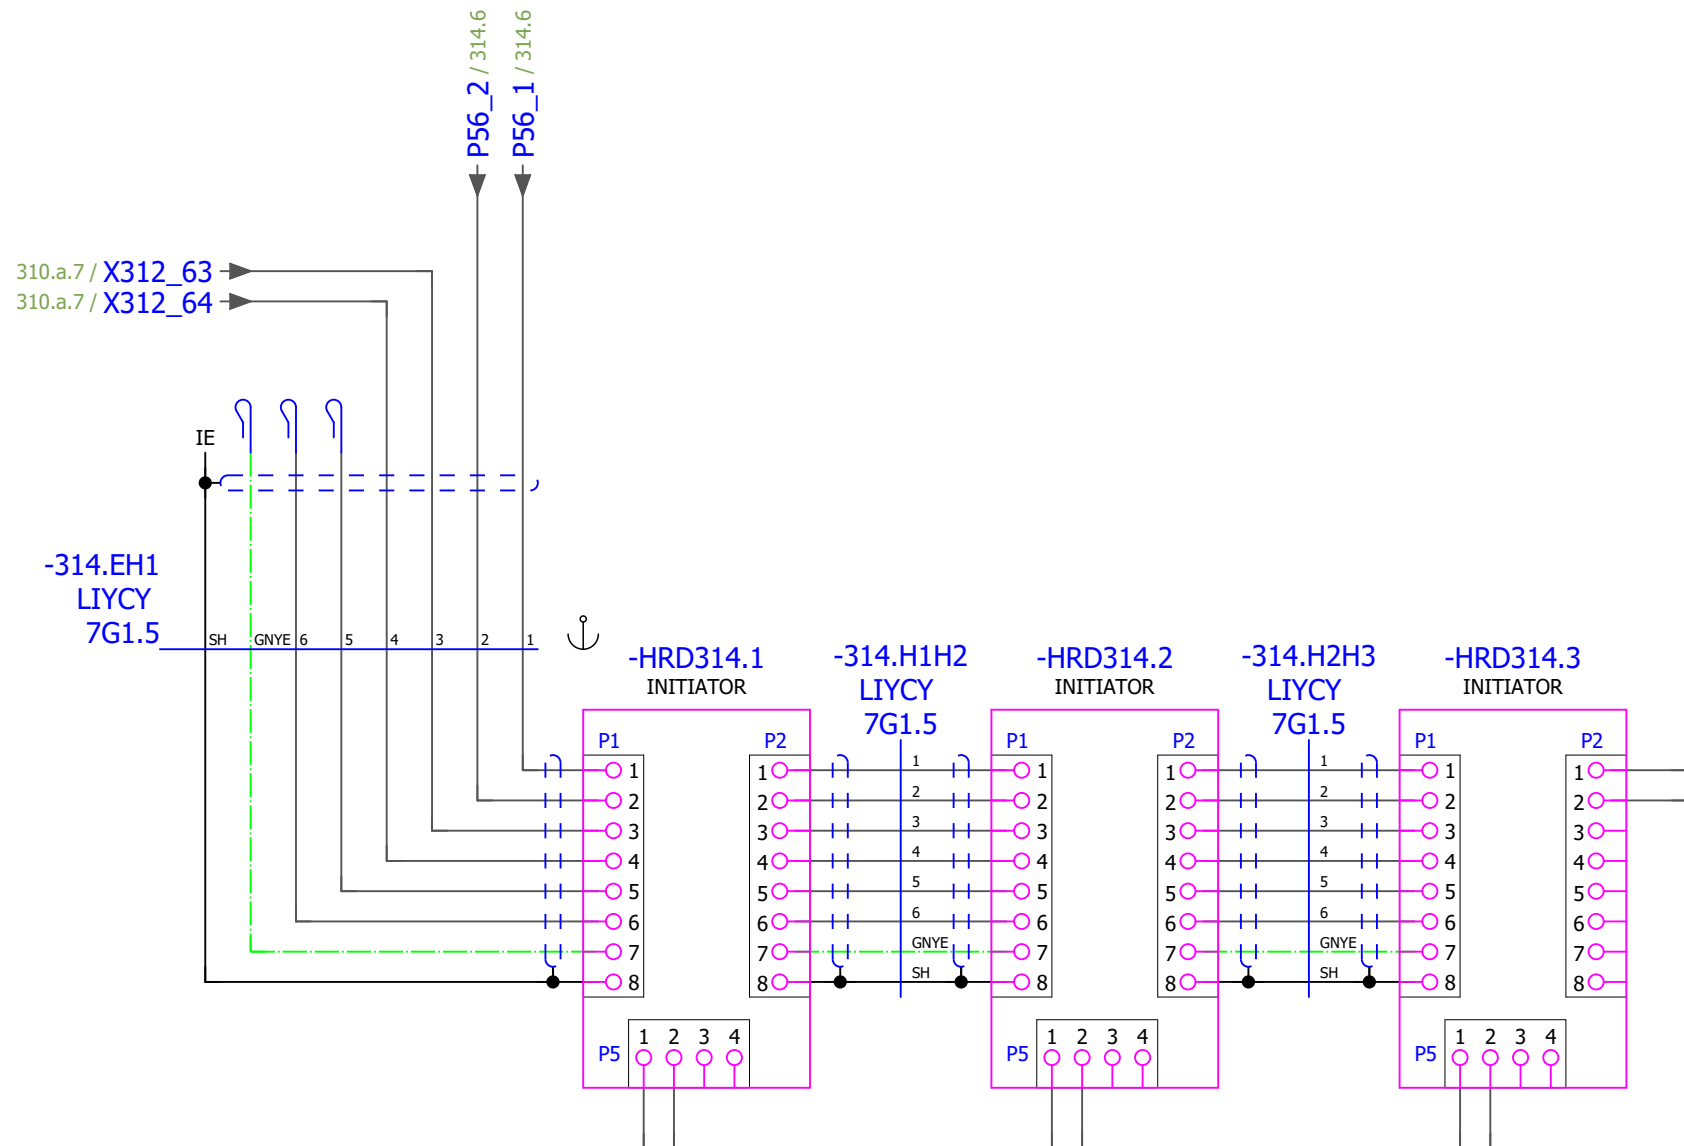

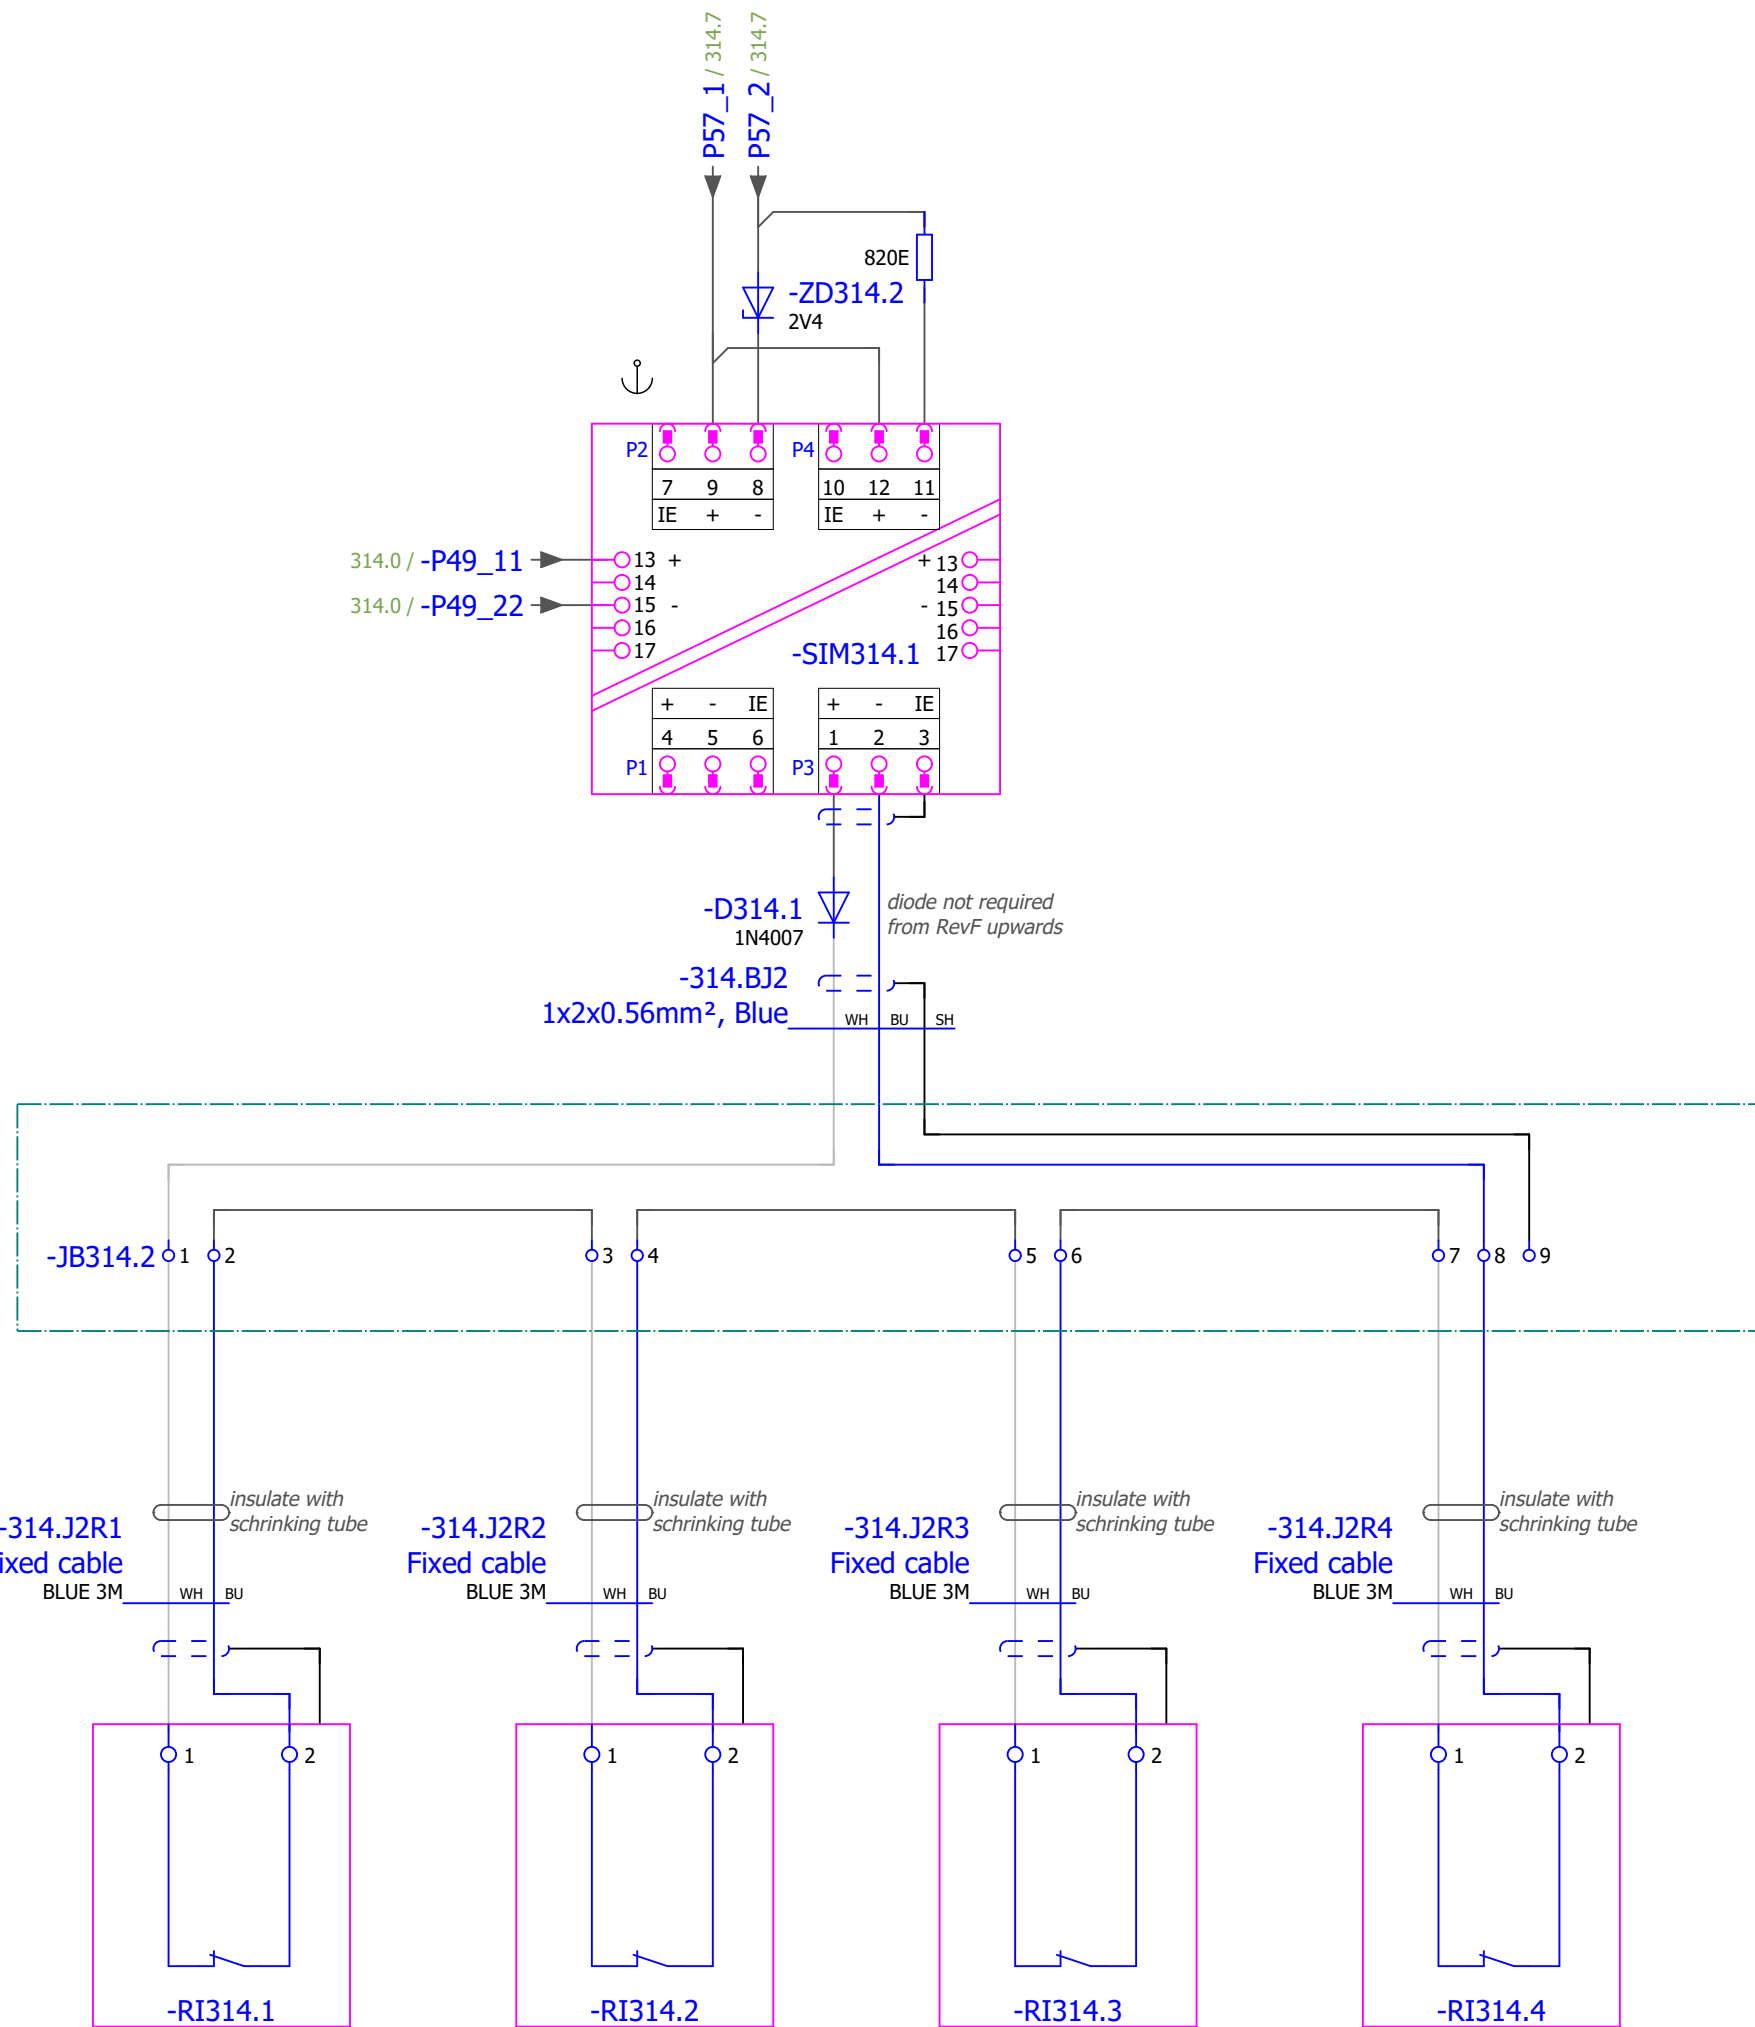

Previous:
314.b


Next:
315

-RC831
/317.8




RC8

Relay Contact module


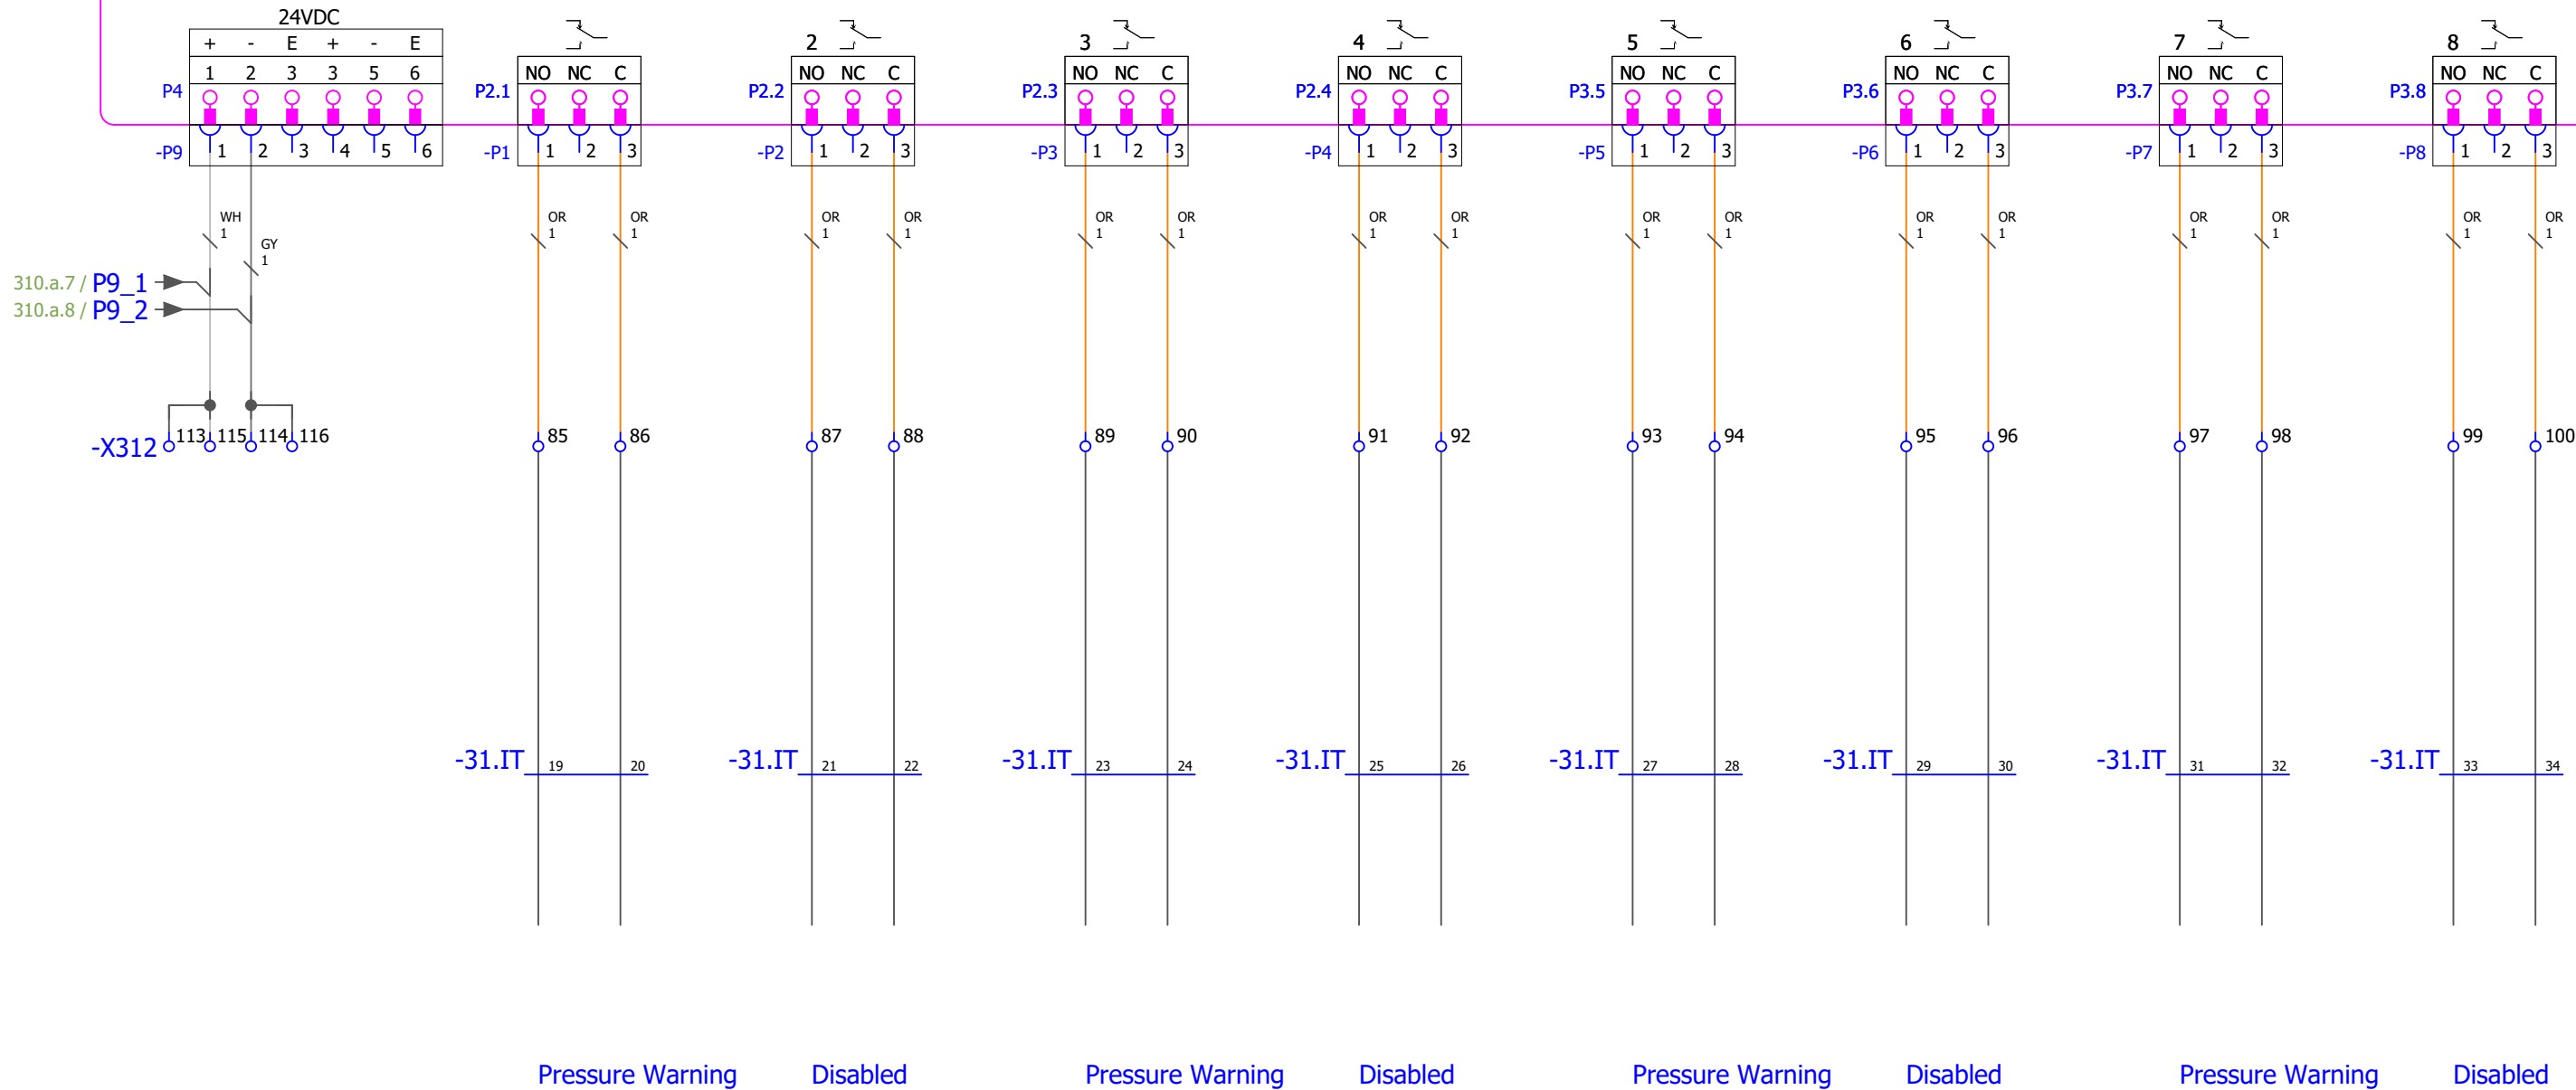


Previous:
314.c

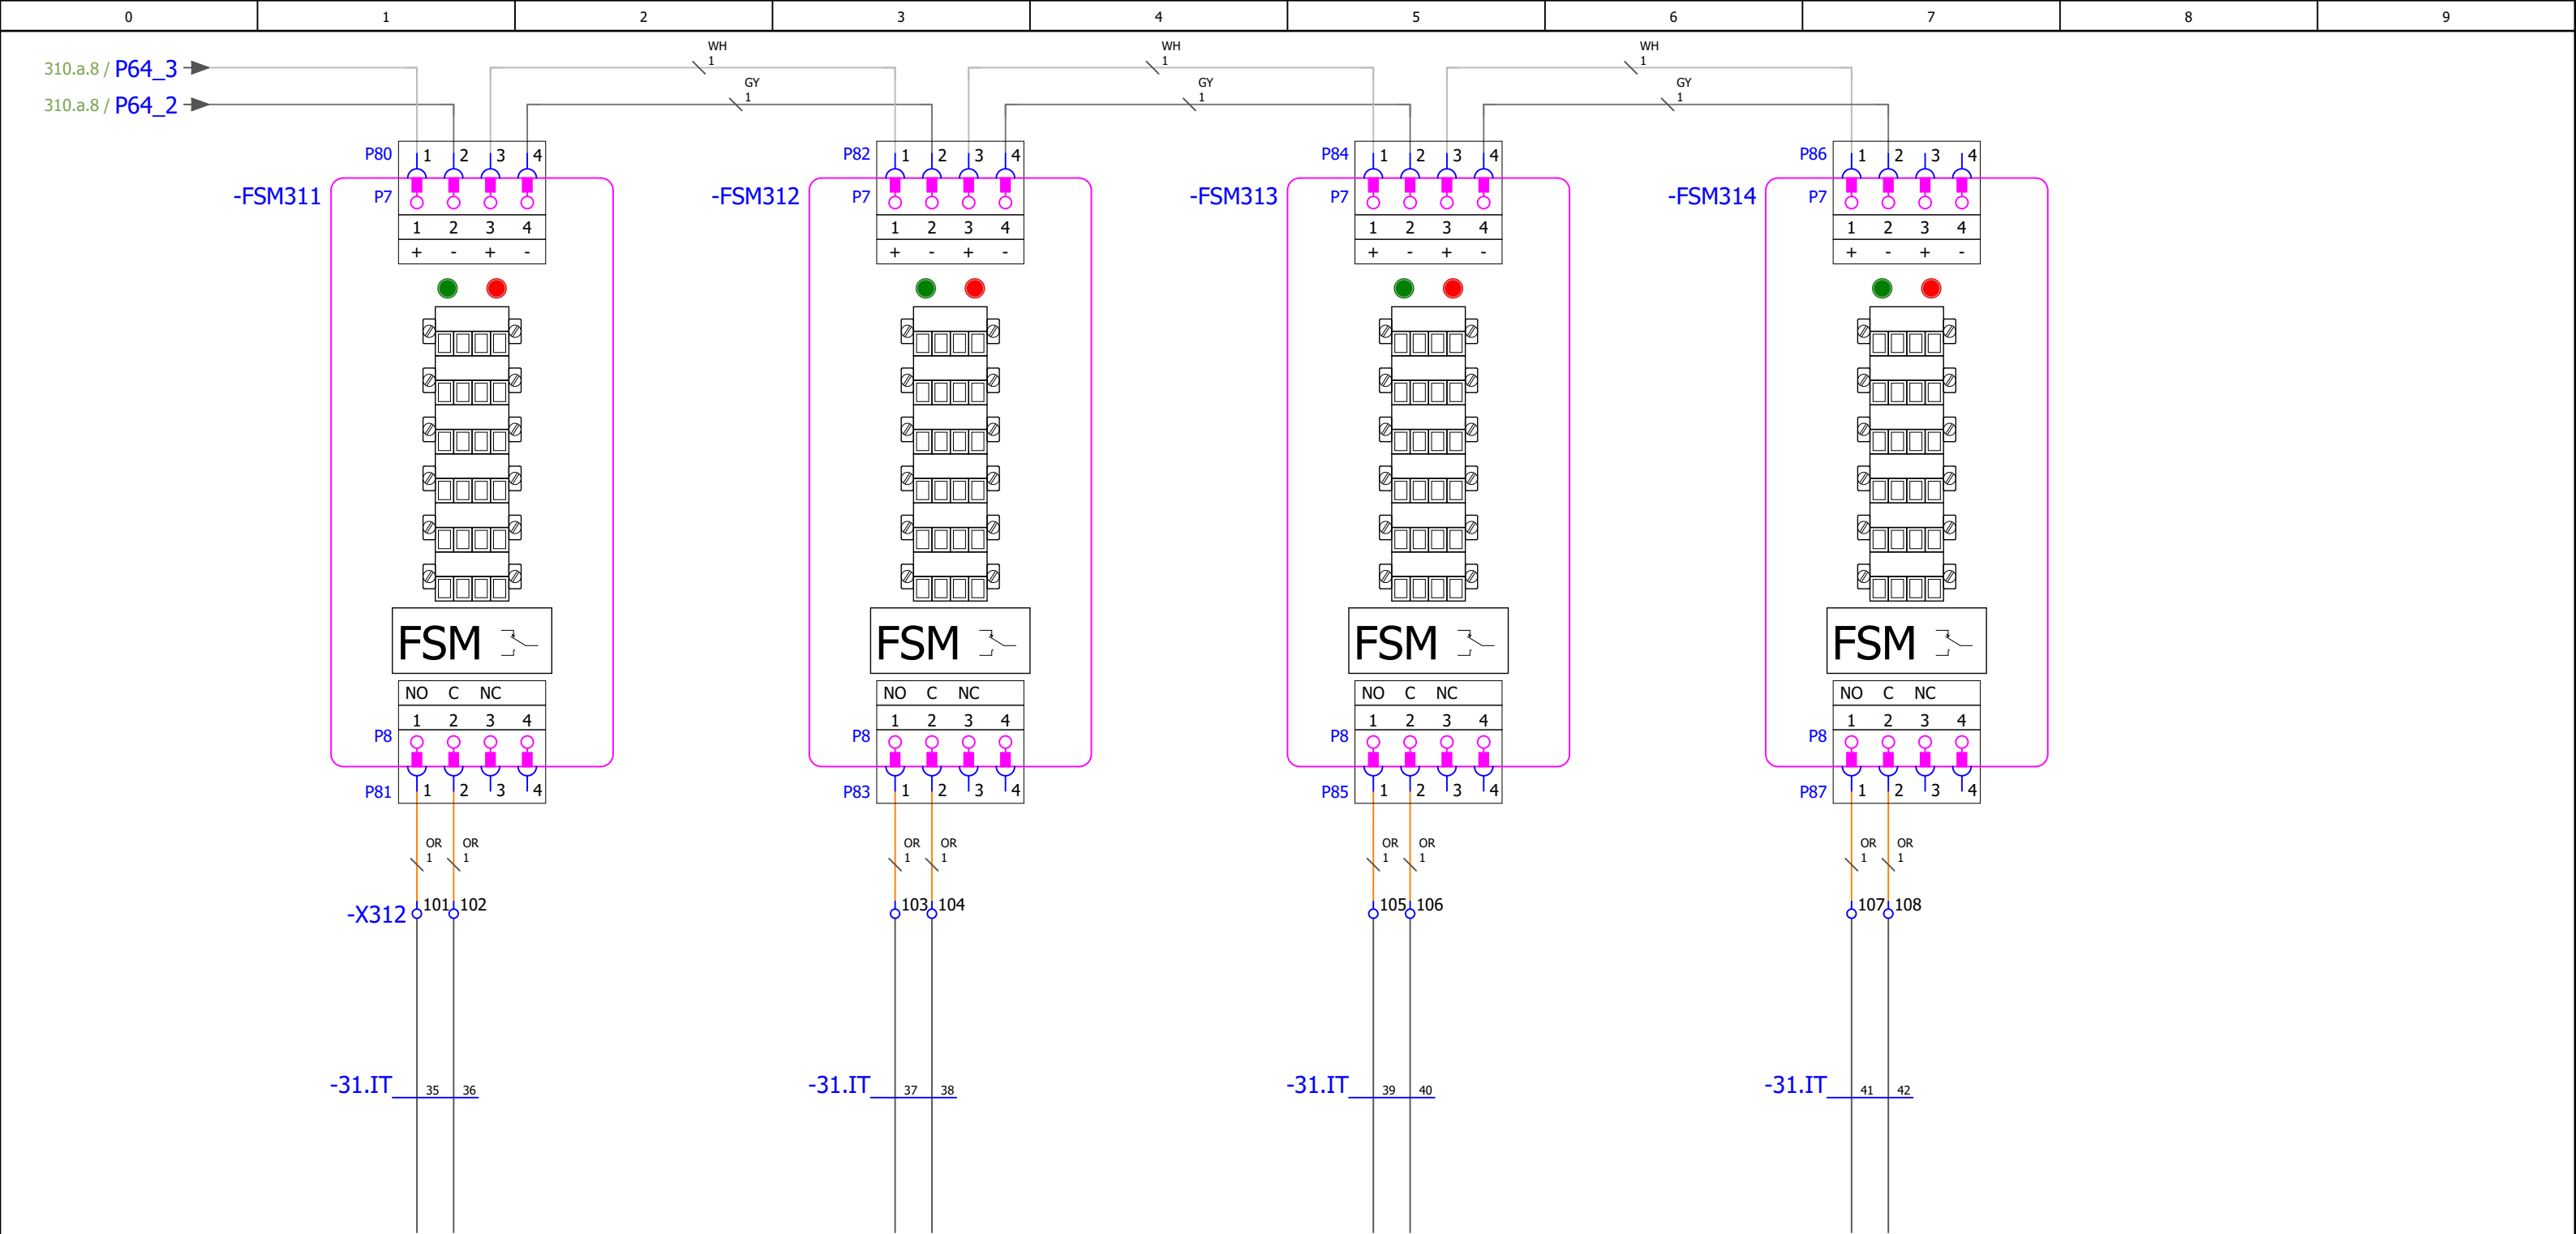


Previous:
315

Next:
317

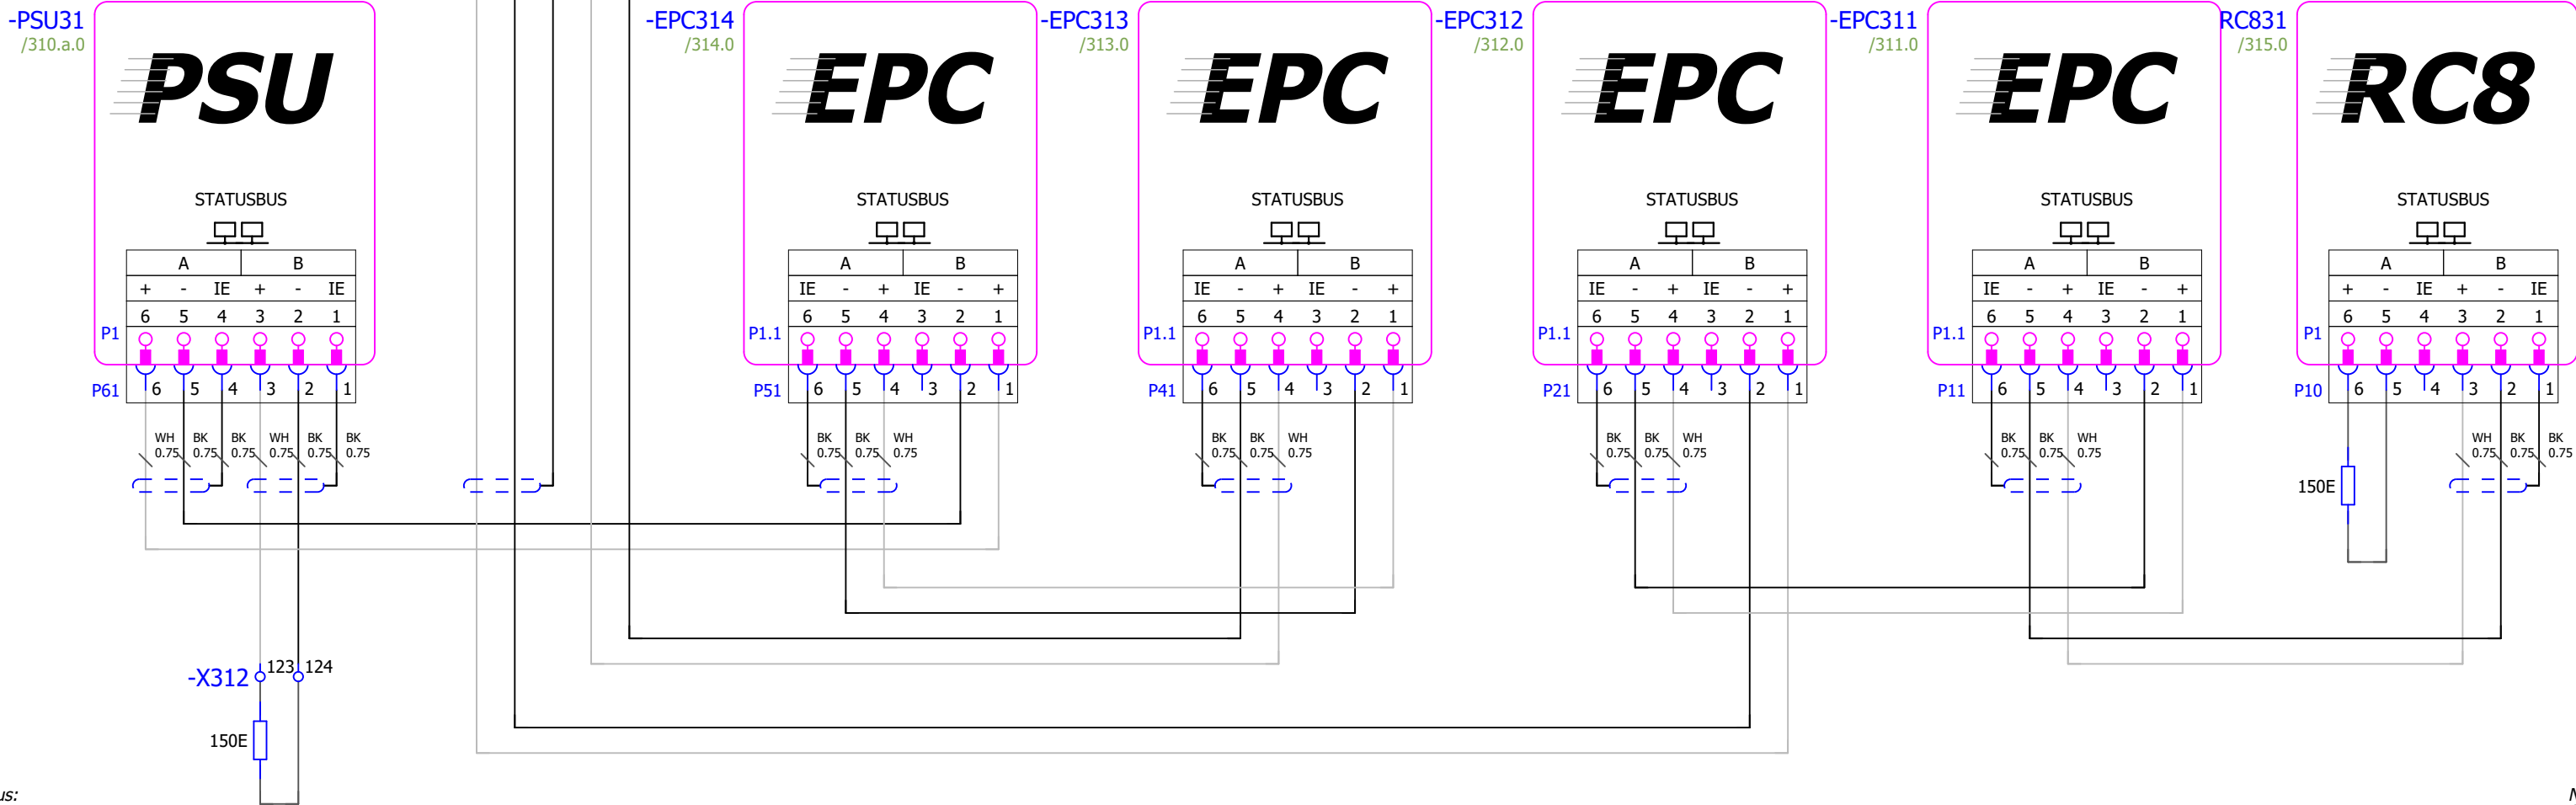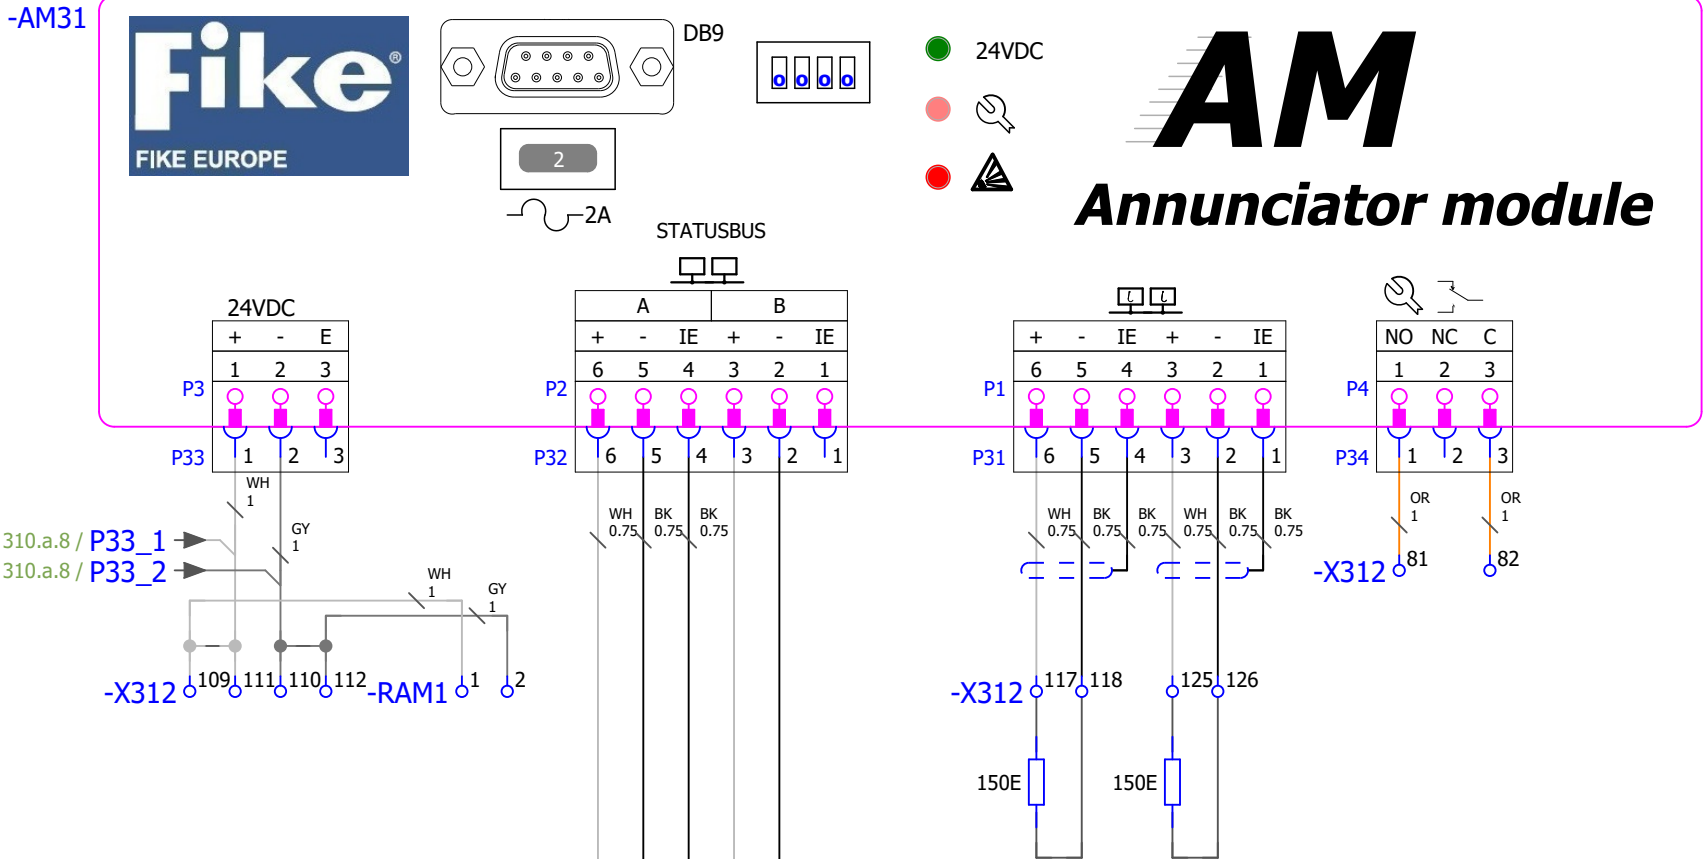


Previous:
316

Next:
318

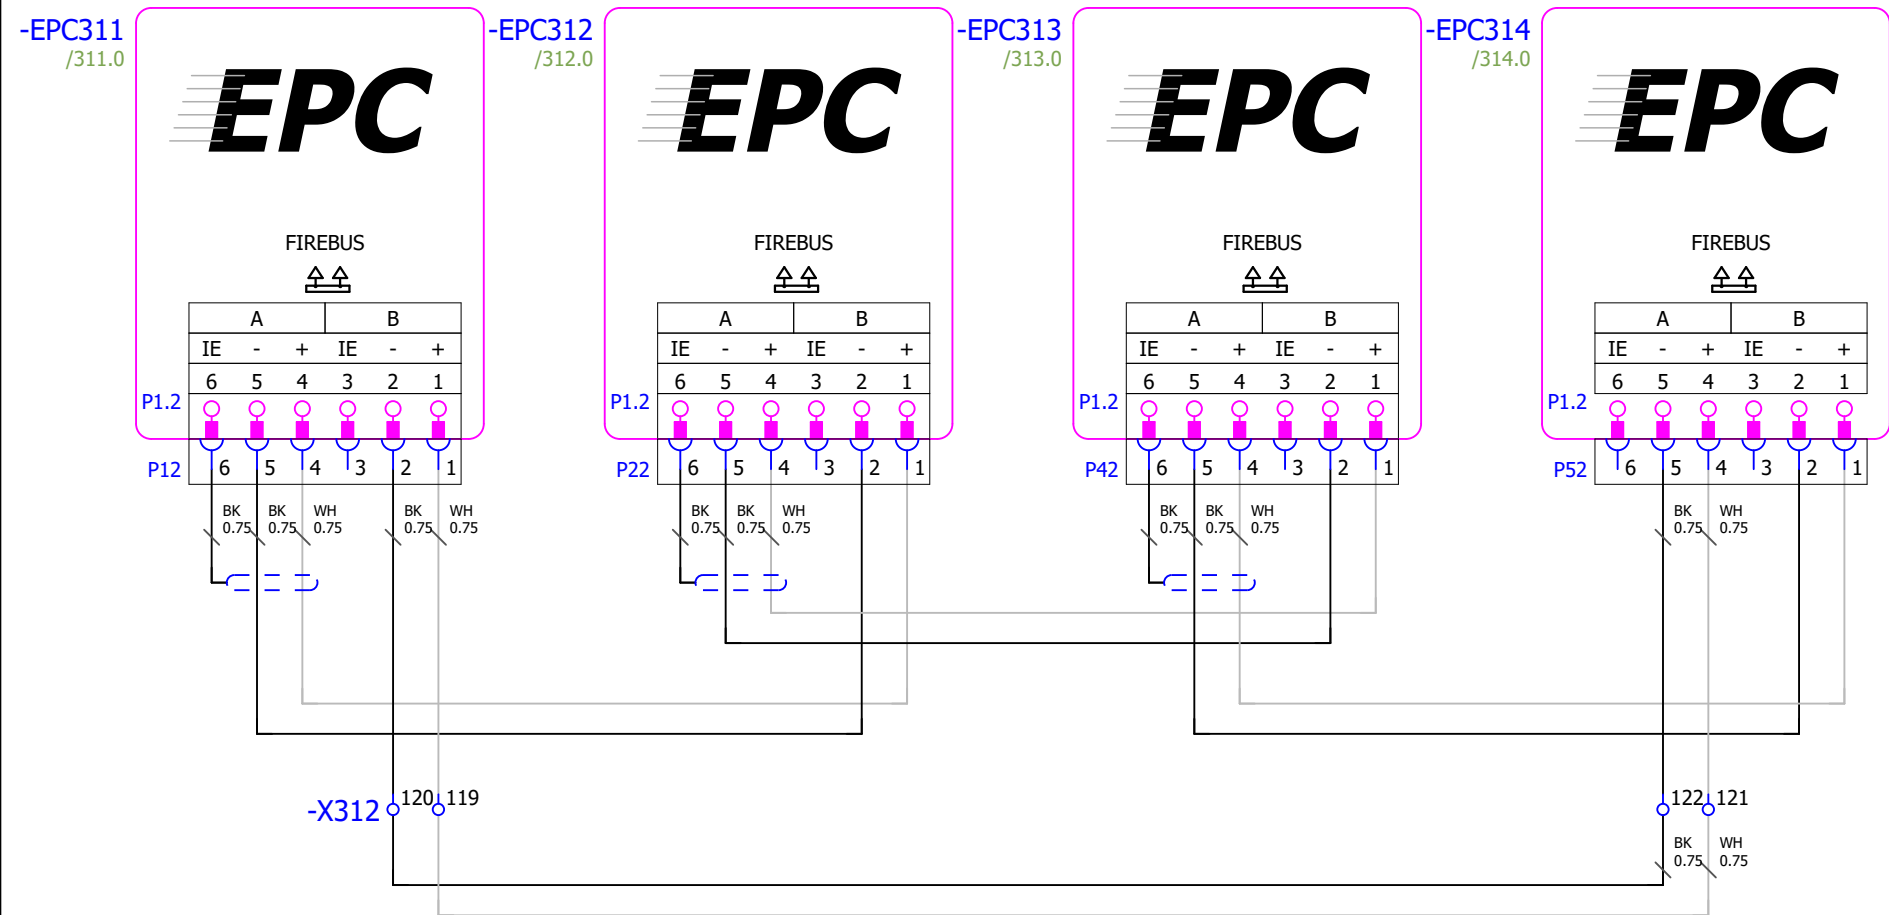

-PSU32
/328.0



DB9

25VAC


OUTPUT
VOLTAGE

24VDC





PSU

Power Supply unit

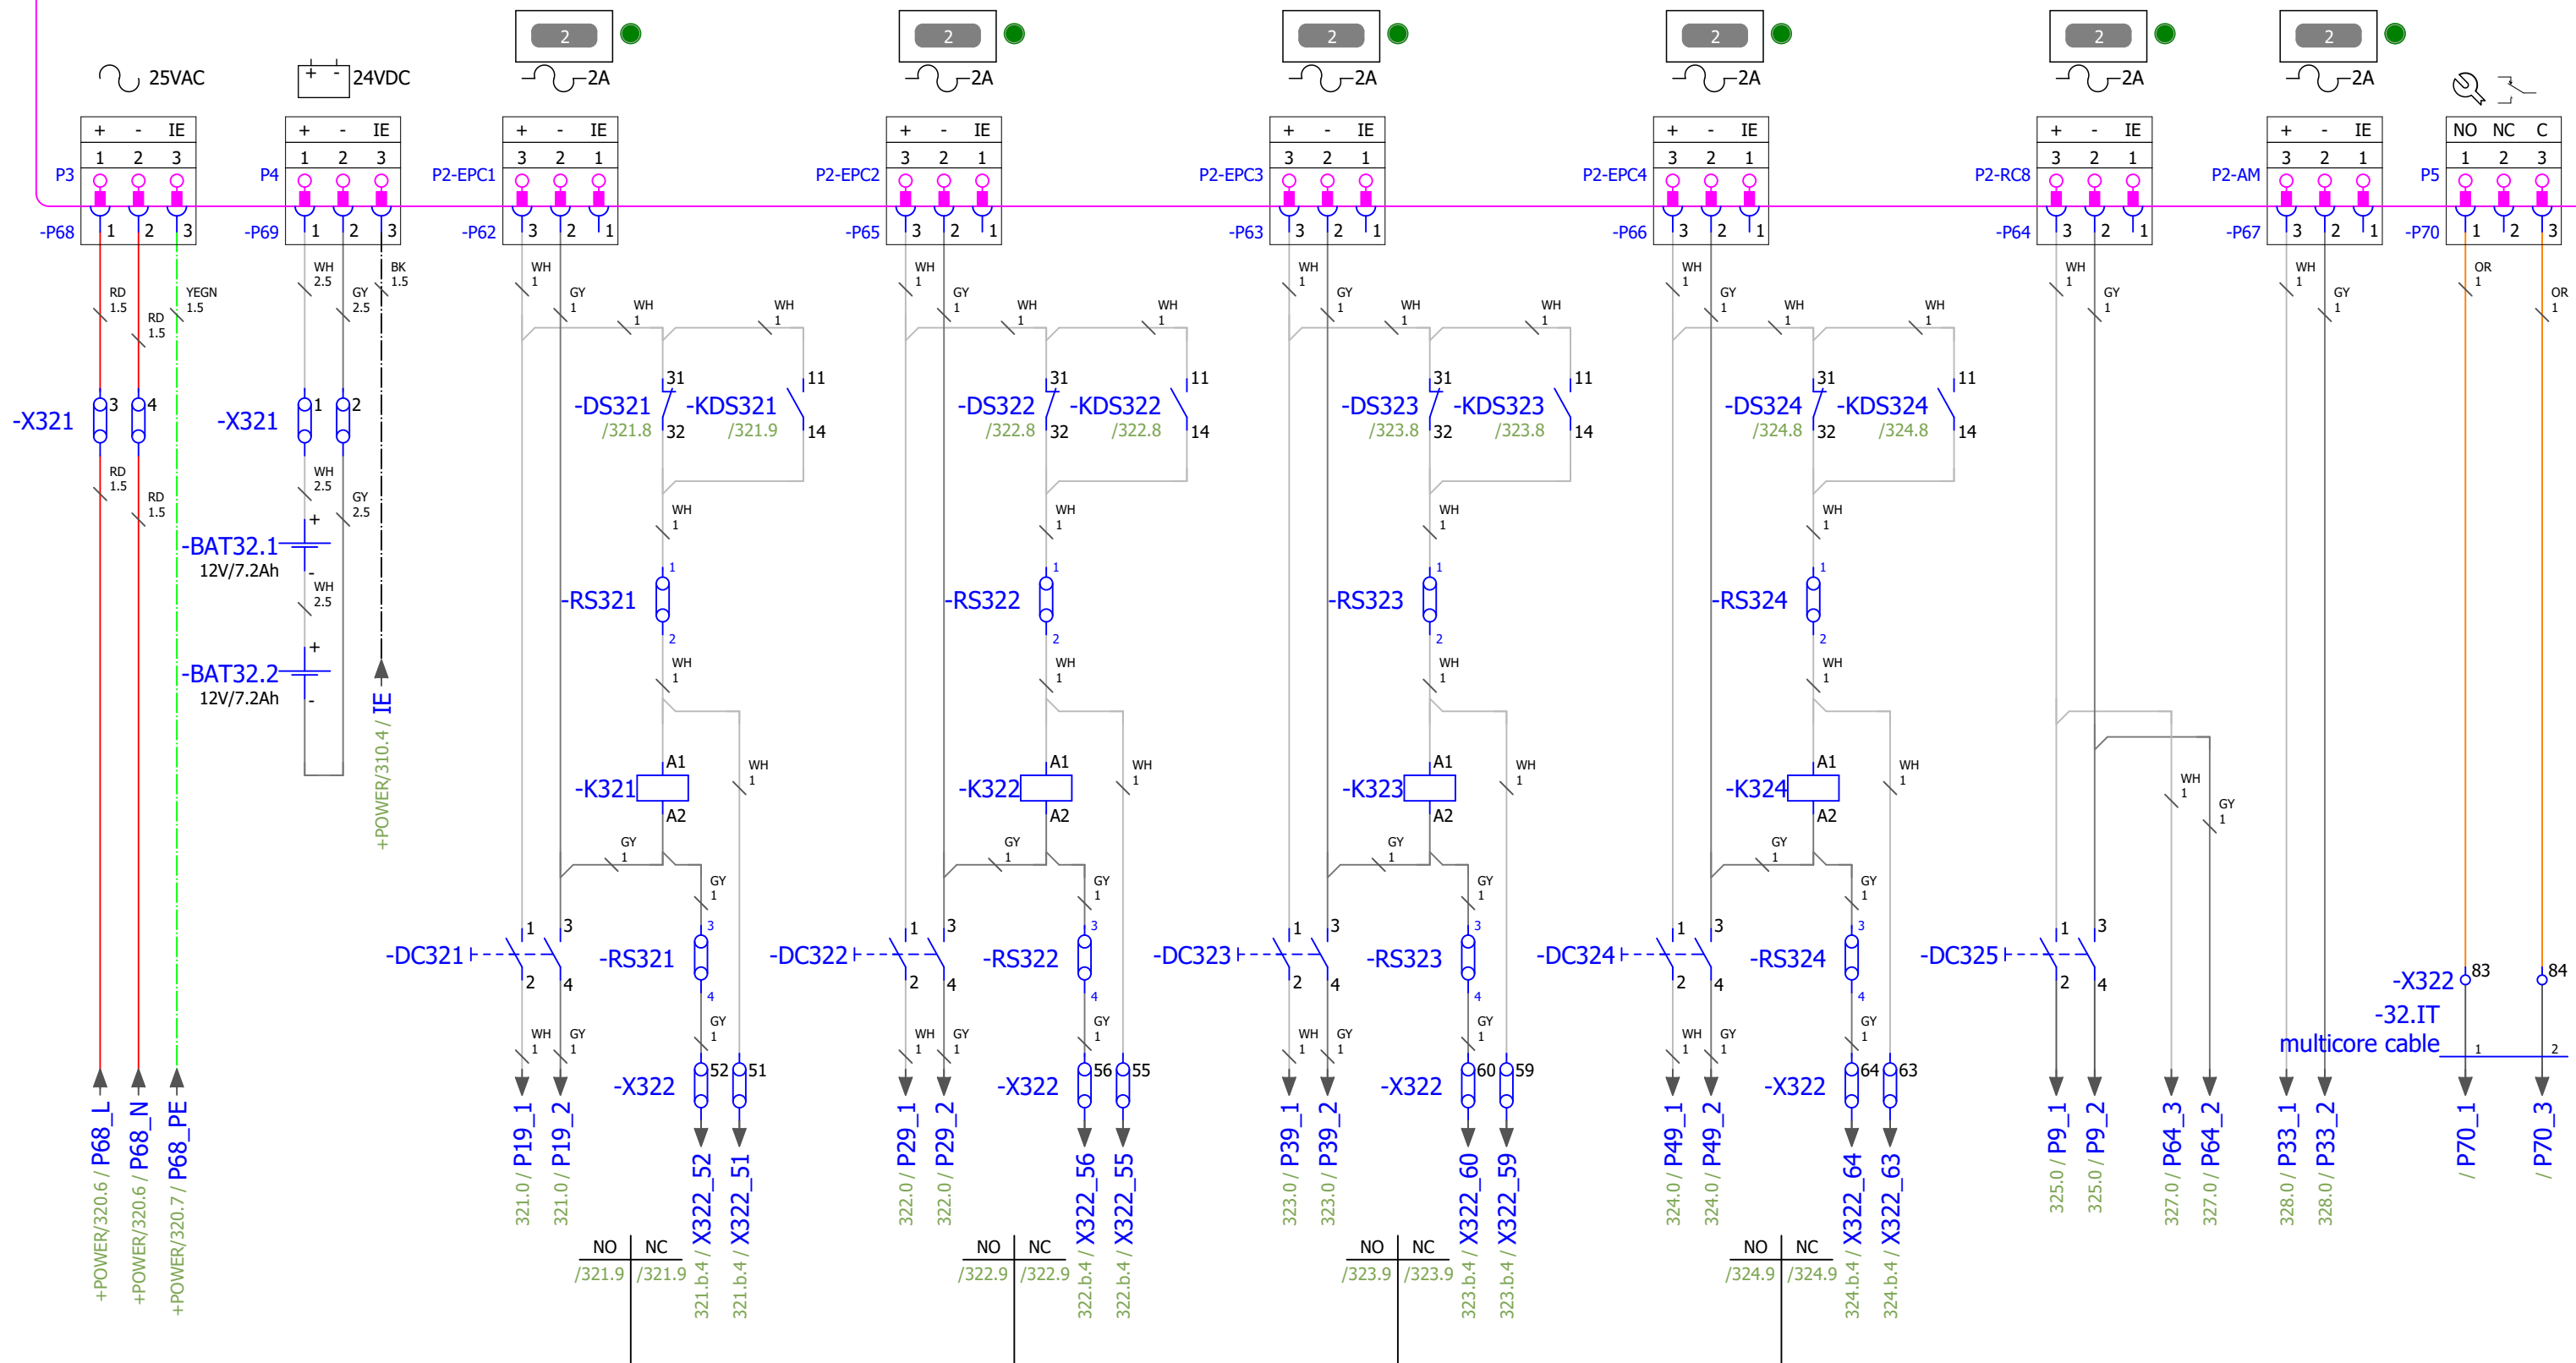


Previous:
+STREAM1/318


-EPC321
/328.7 /329.0

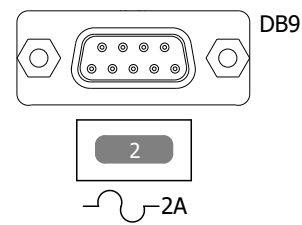


EPC



Explosion Protection Controller

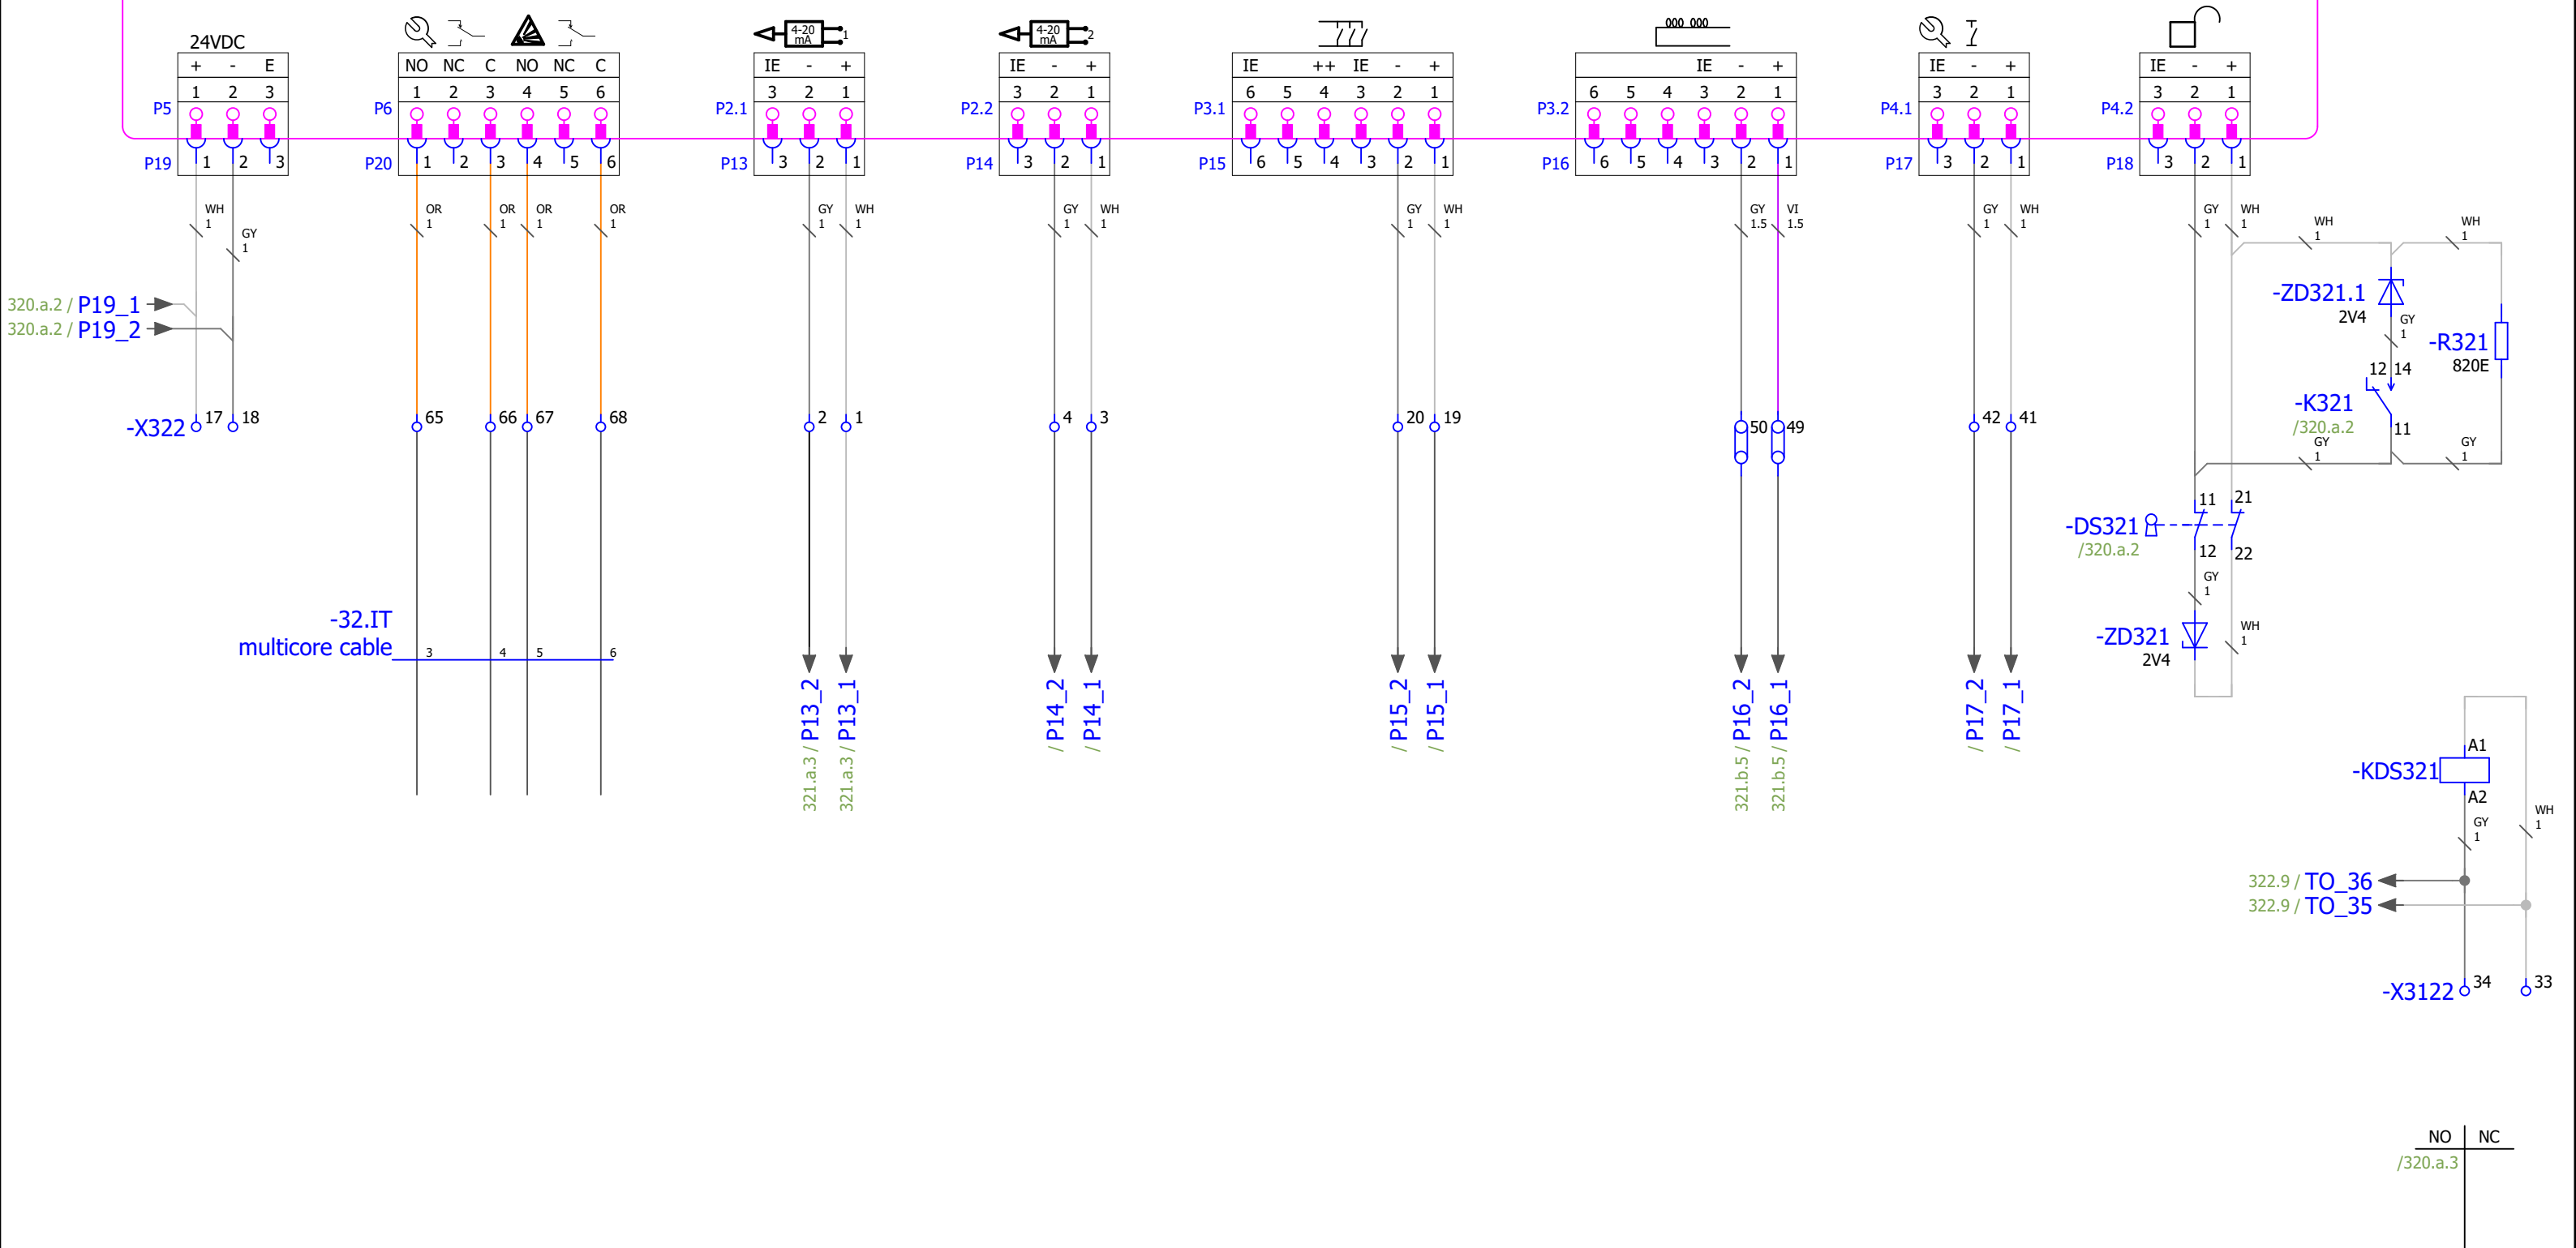

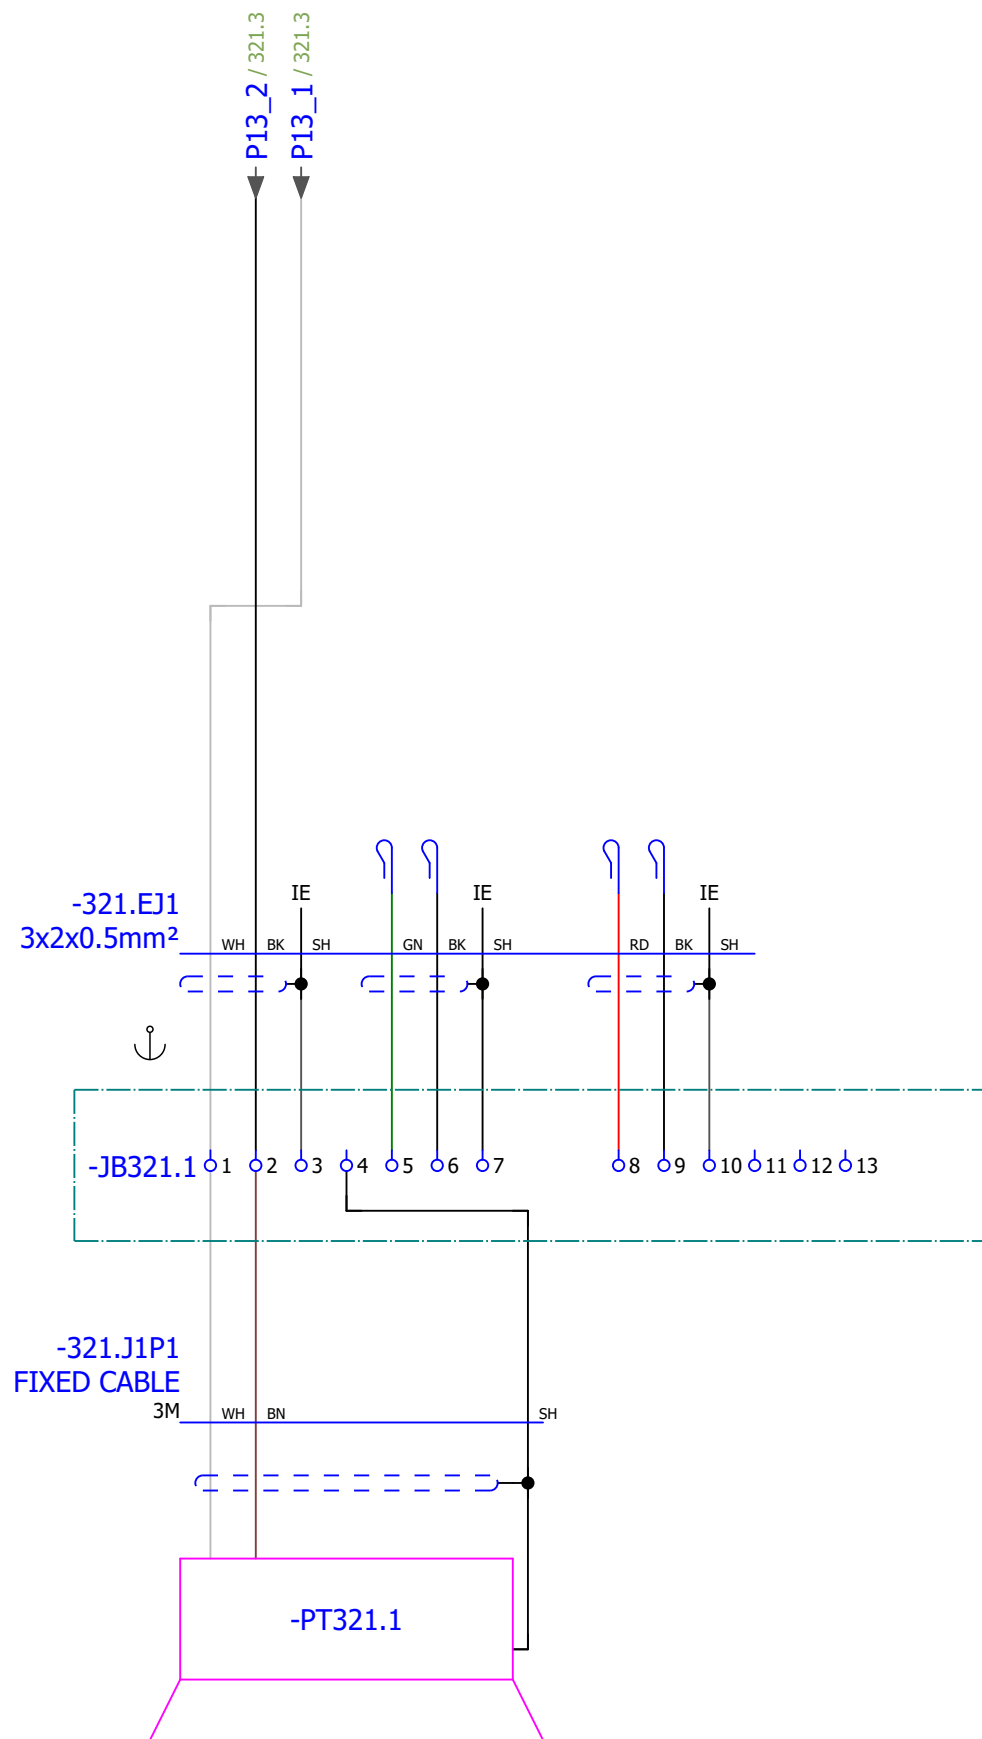


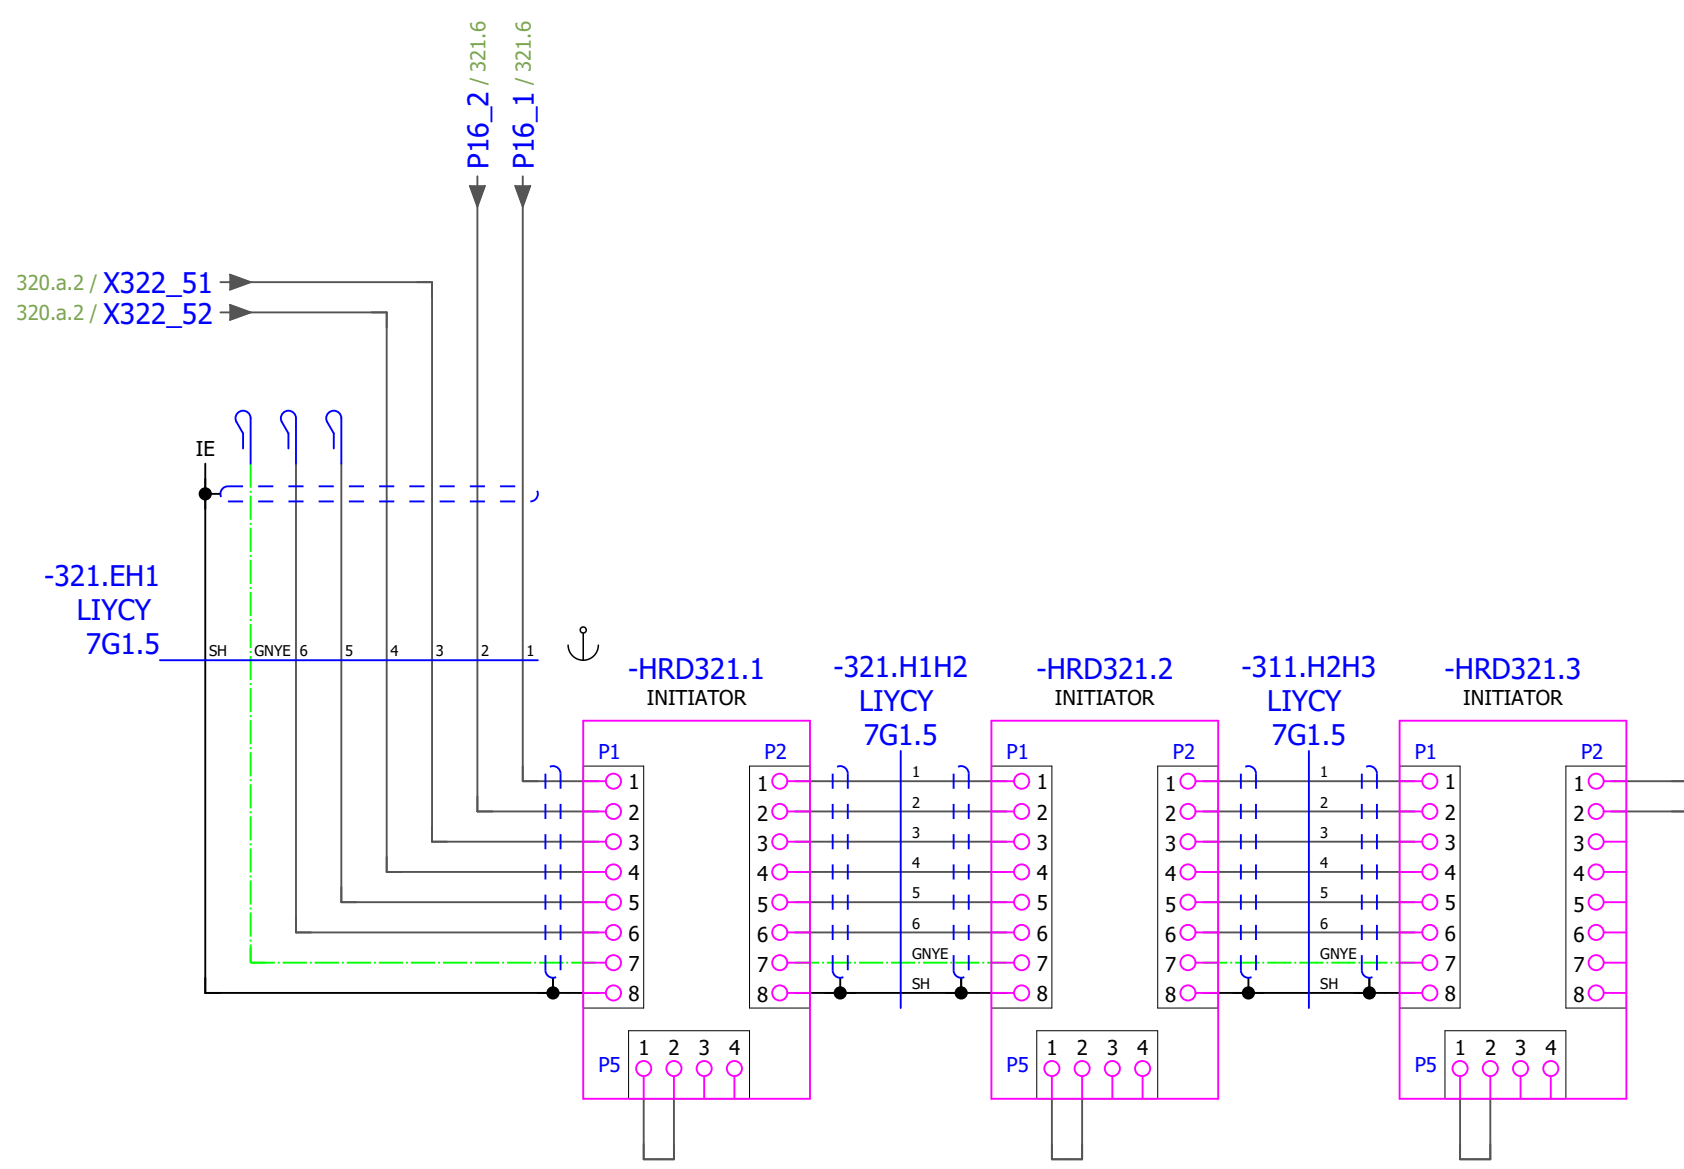


-EPC322
/328.5 /329.1

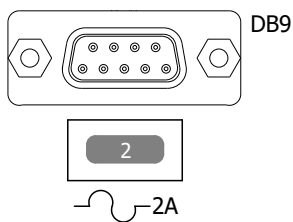



EPC Explosion Protection Controller

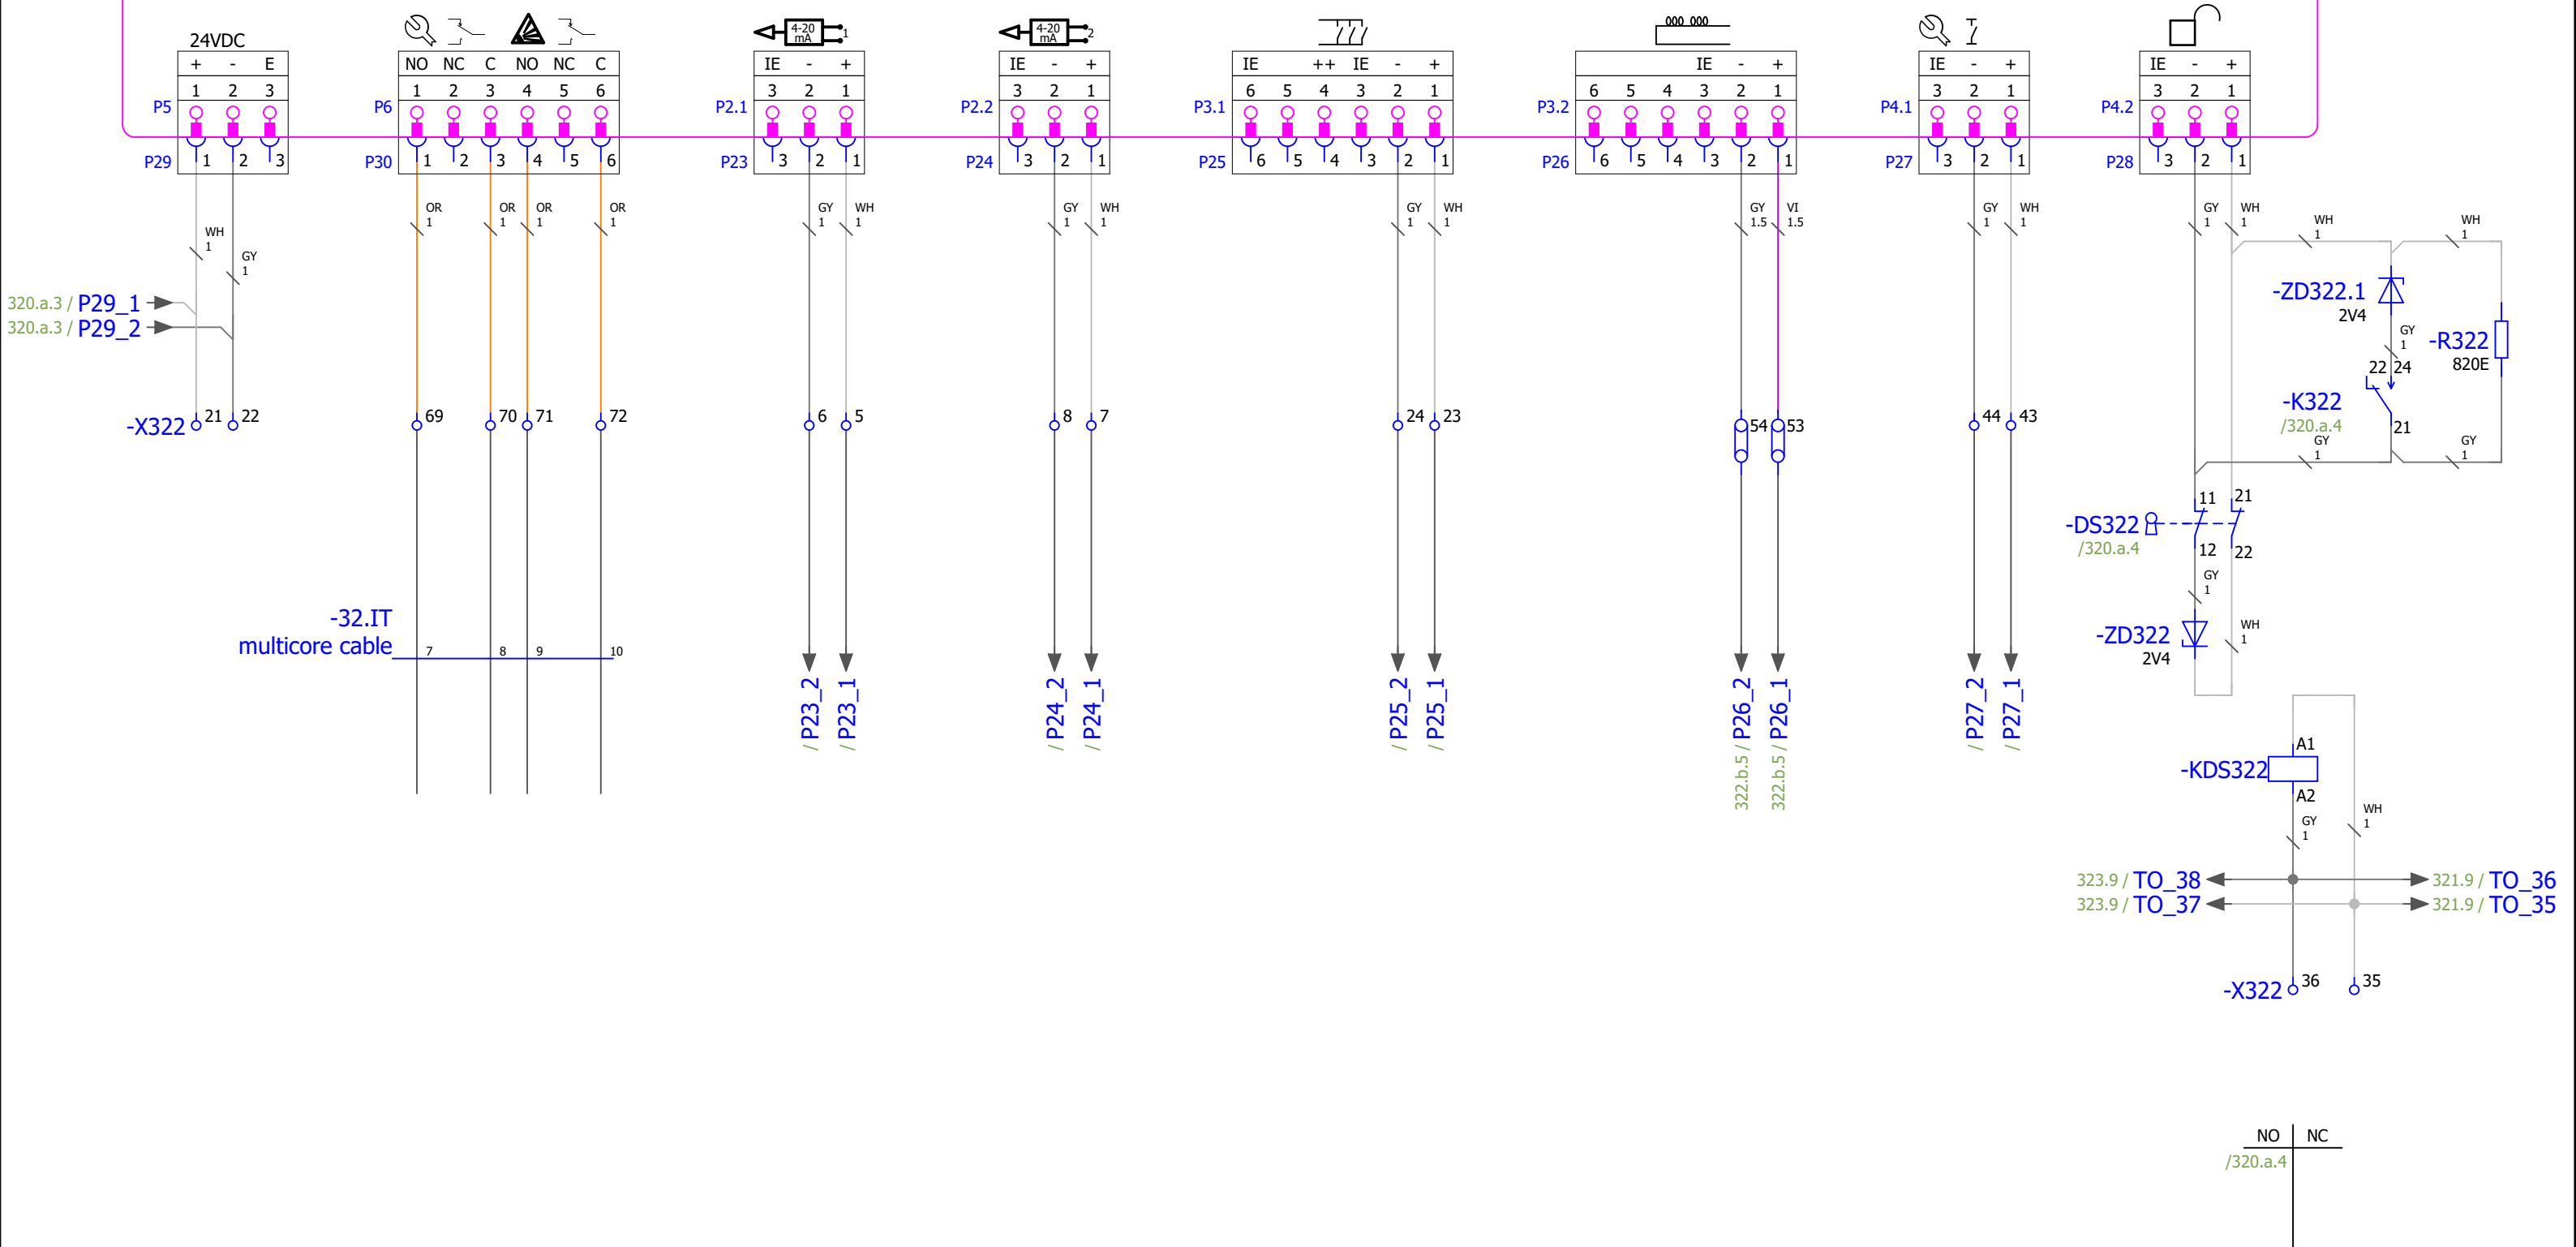


Previous:
321.b

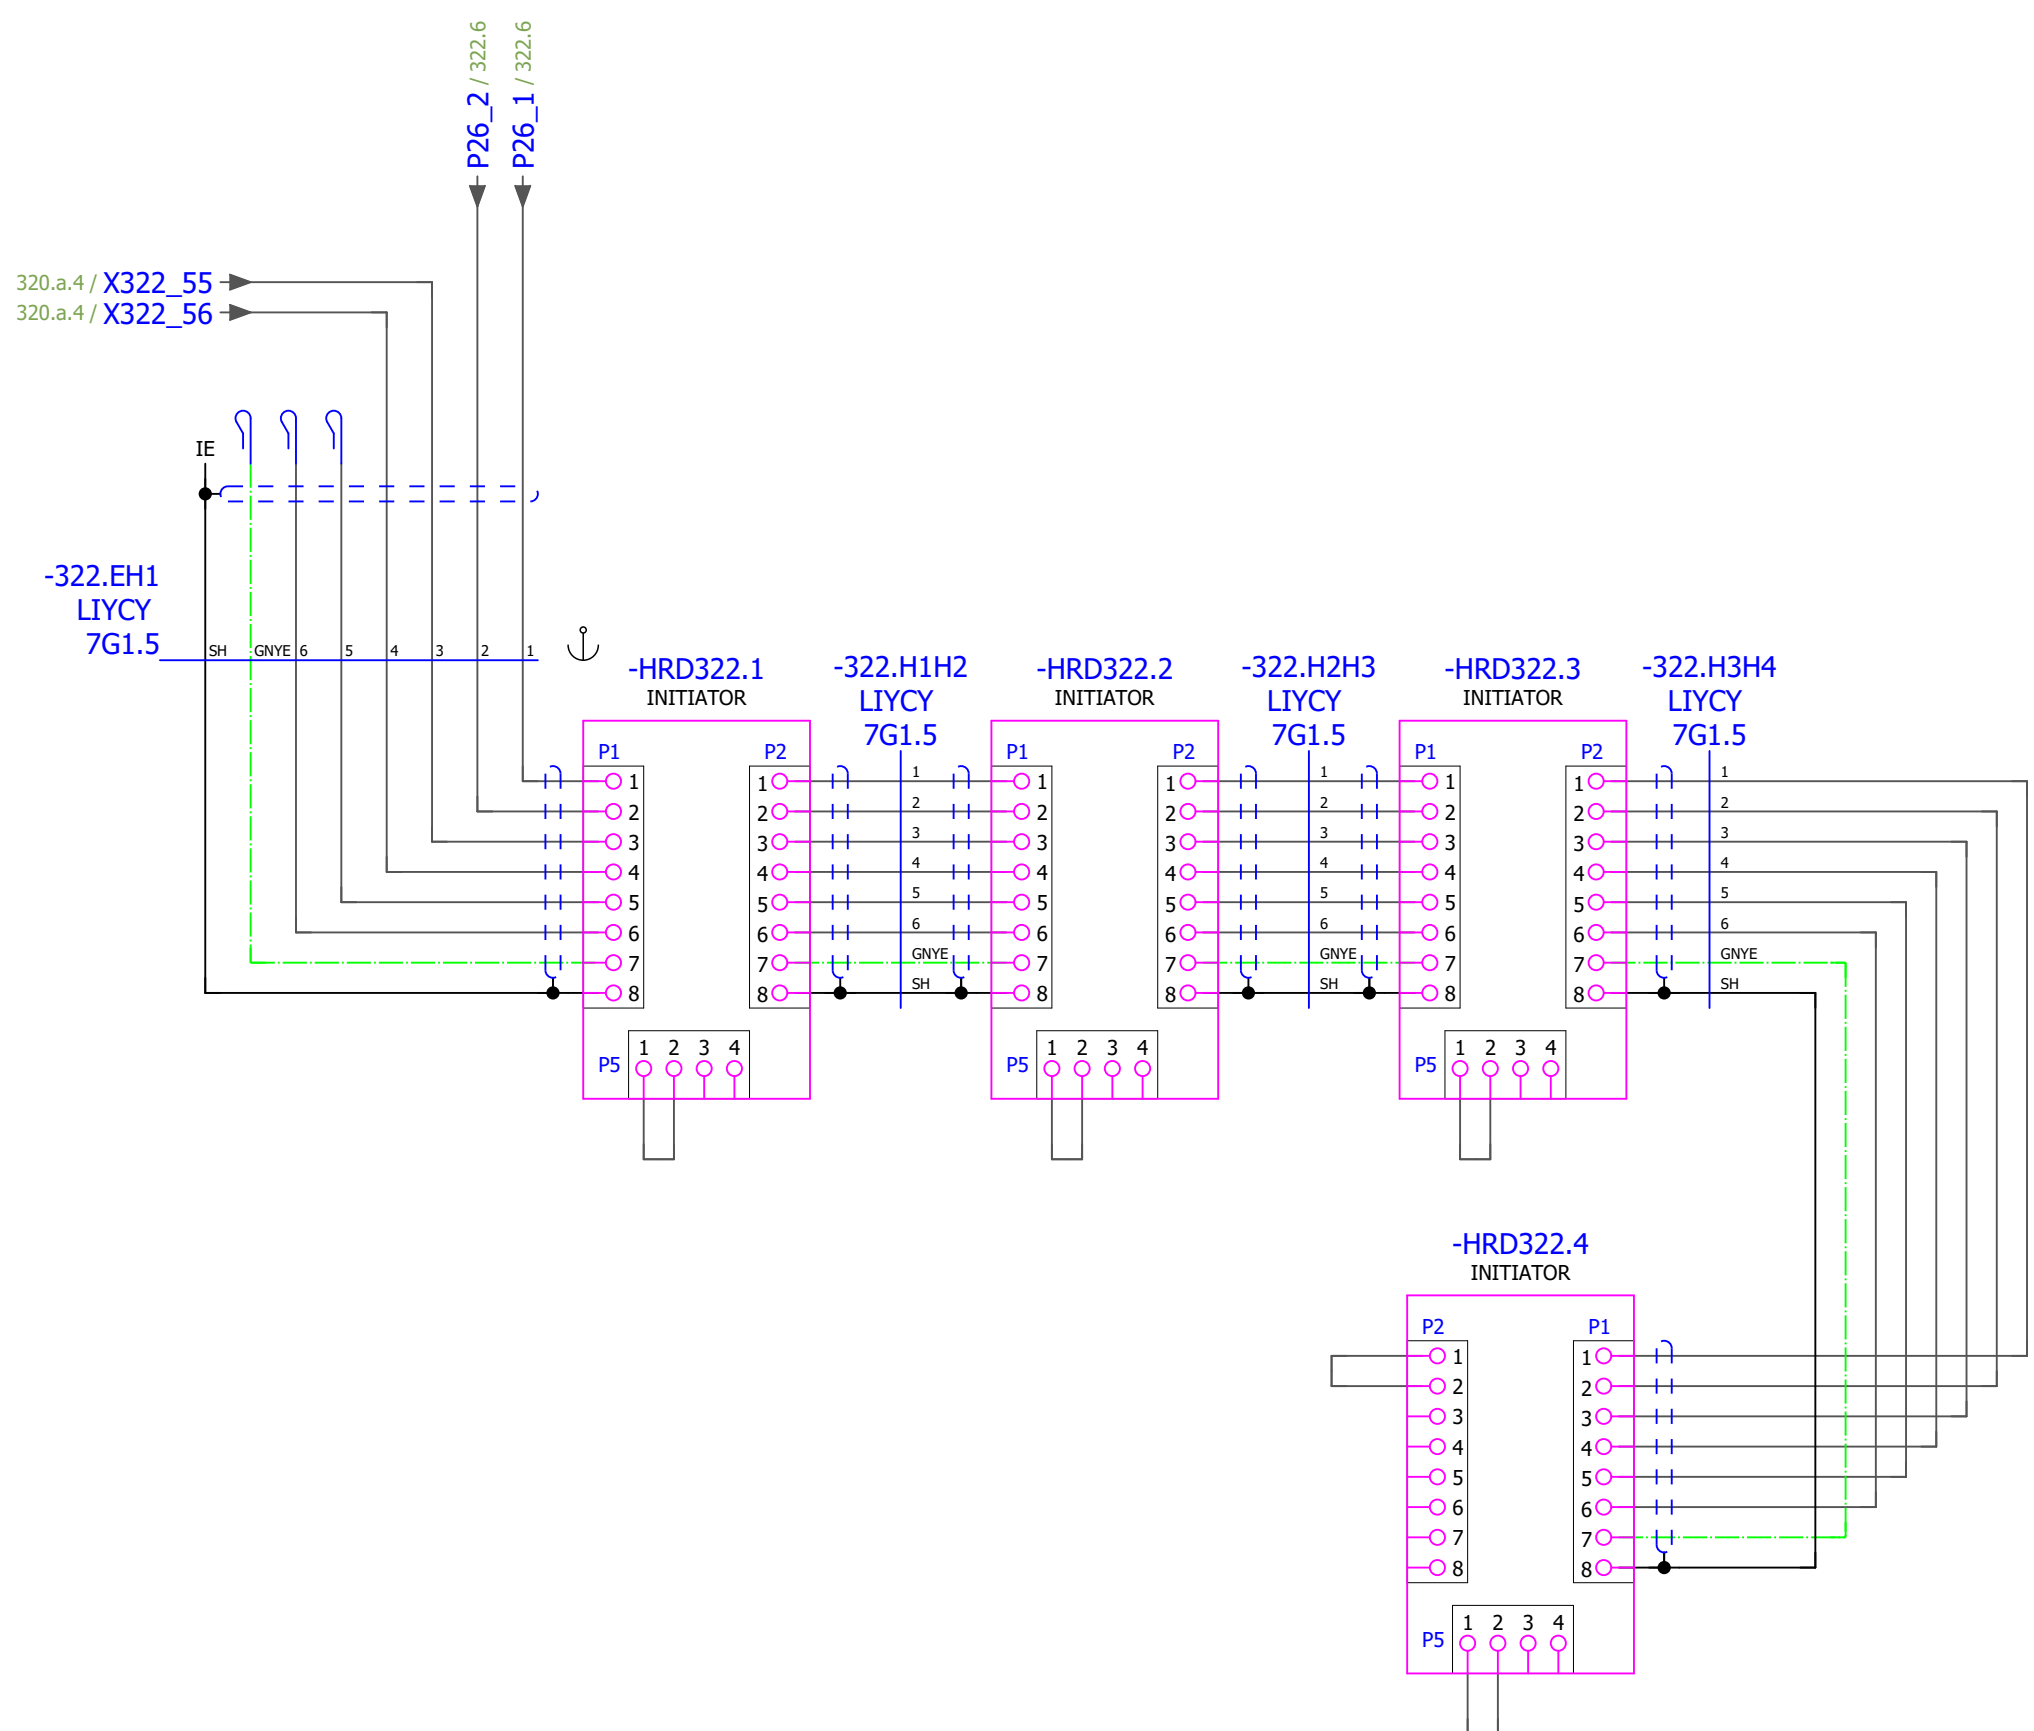

-EPC323
/328.4 /329.3

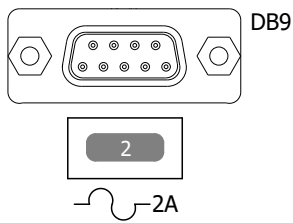



EPC Explosion Protection Controller

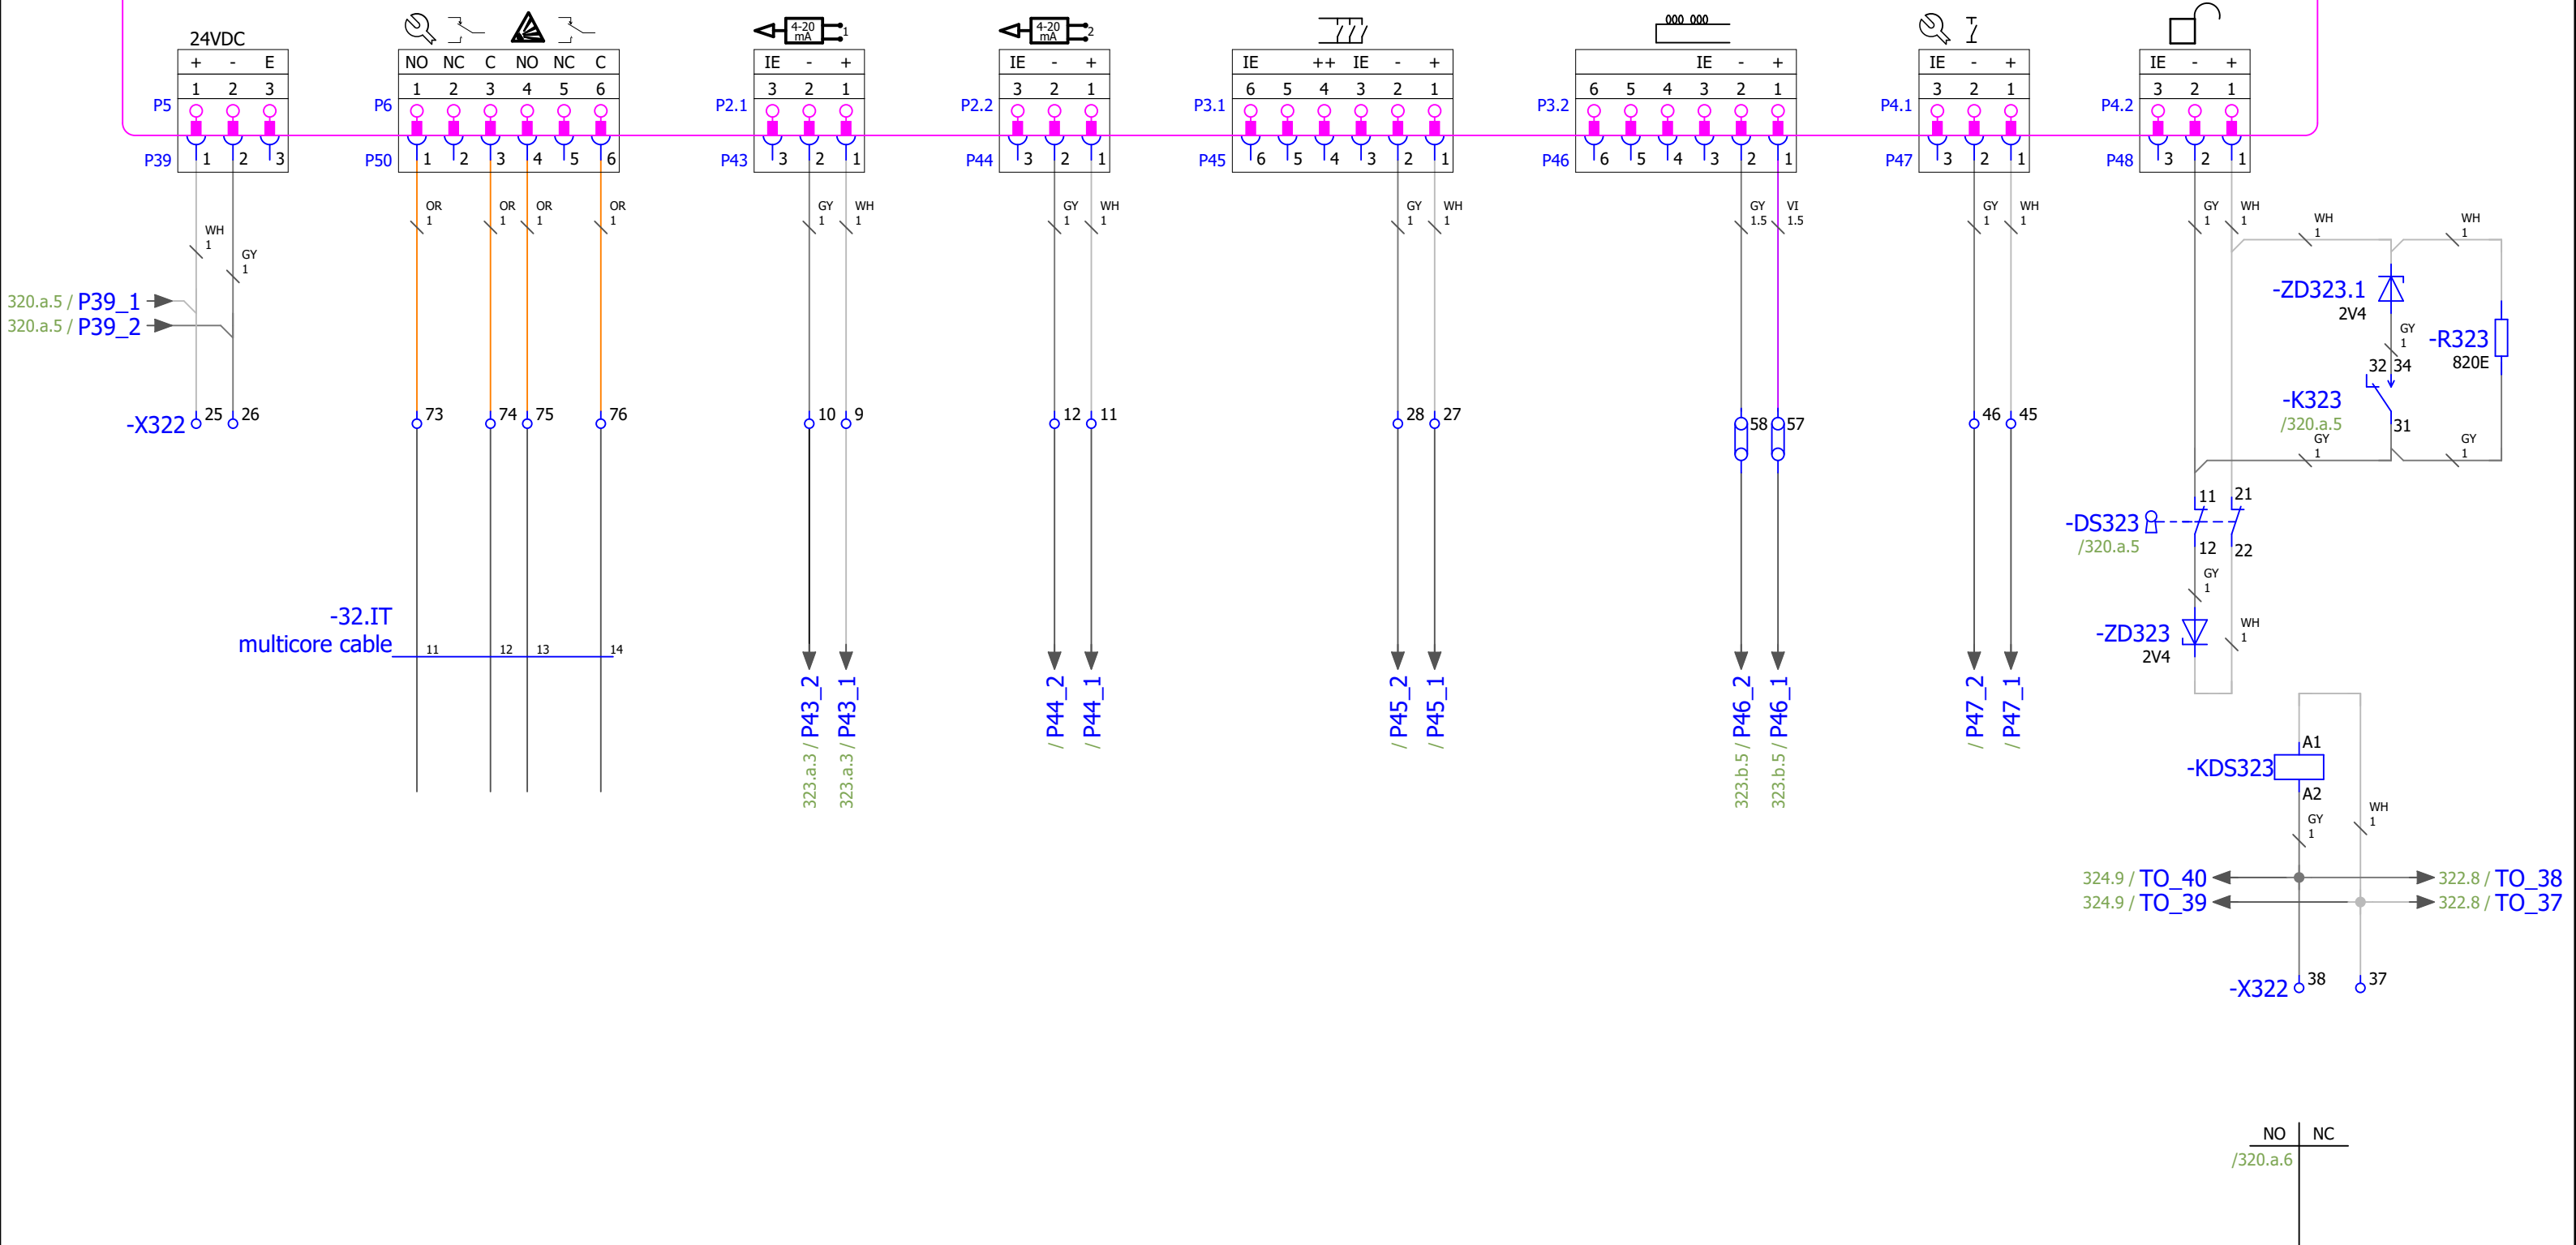



Previous:
322.b

Next:
323.a

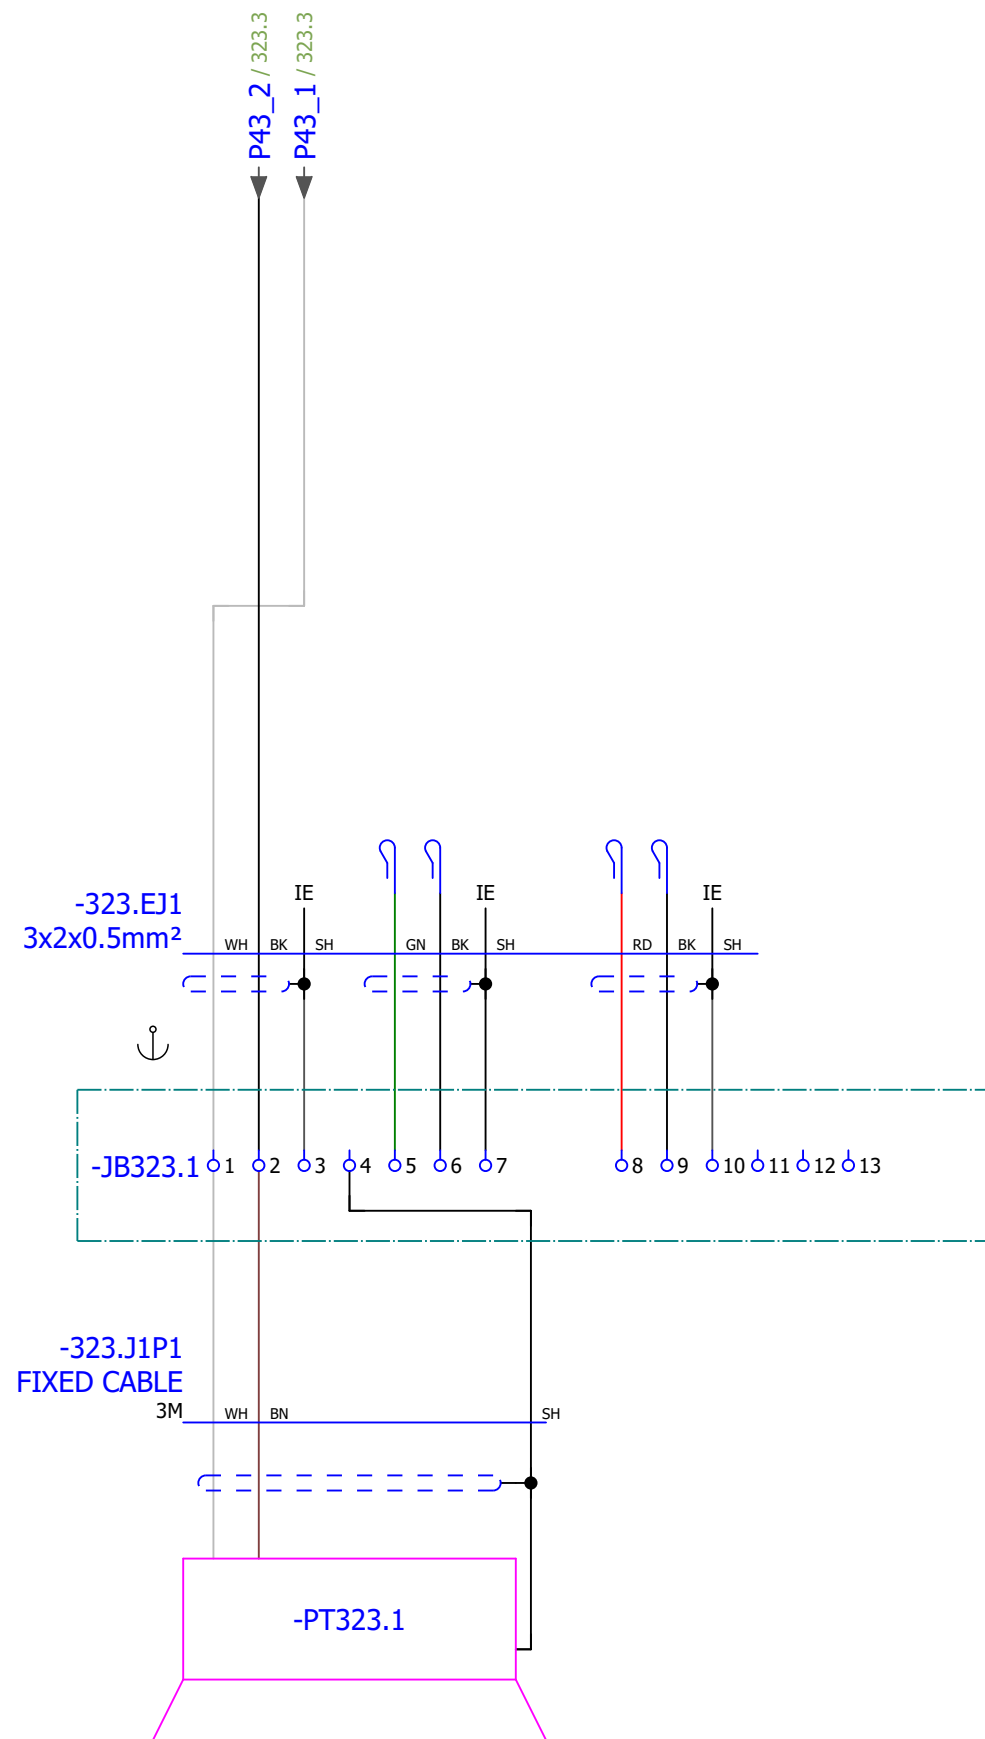


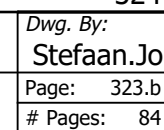


-EPC324
/328.3 /329.4

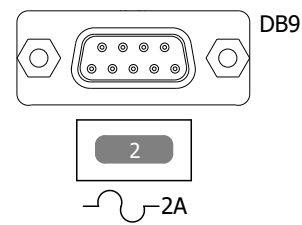



EPC Explosion Protection Controller

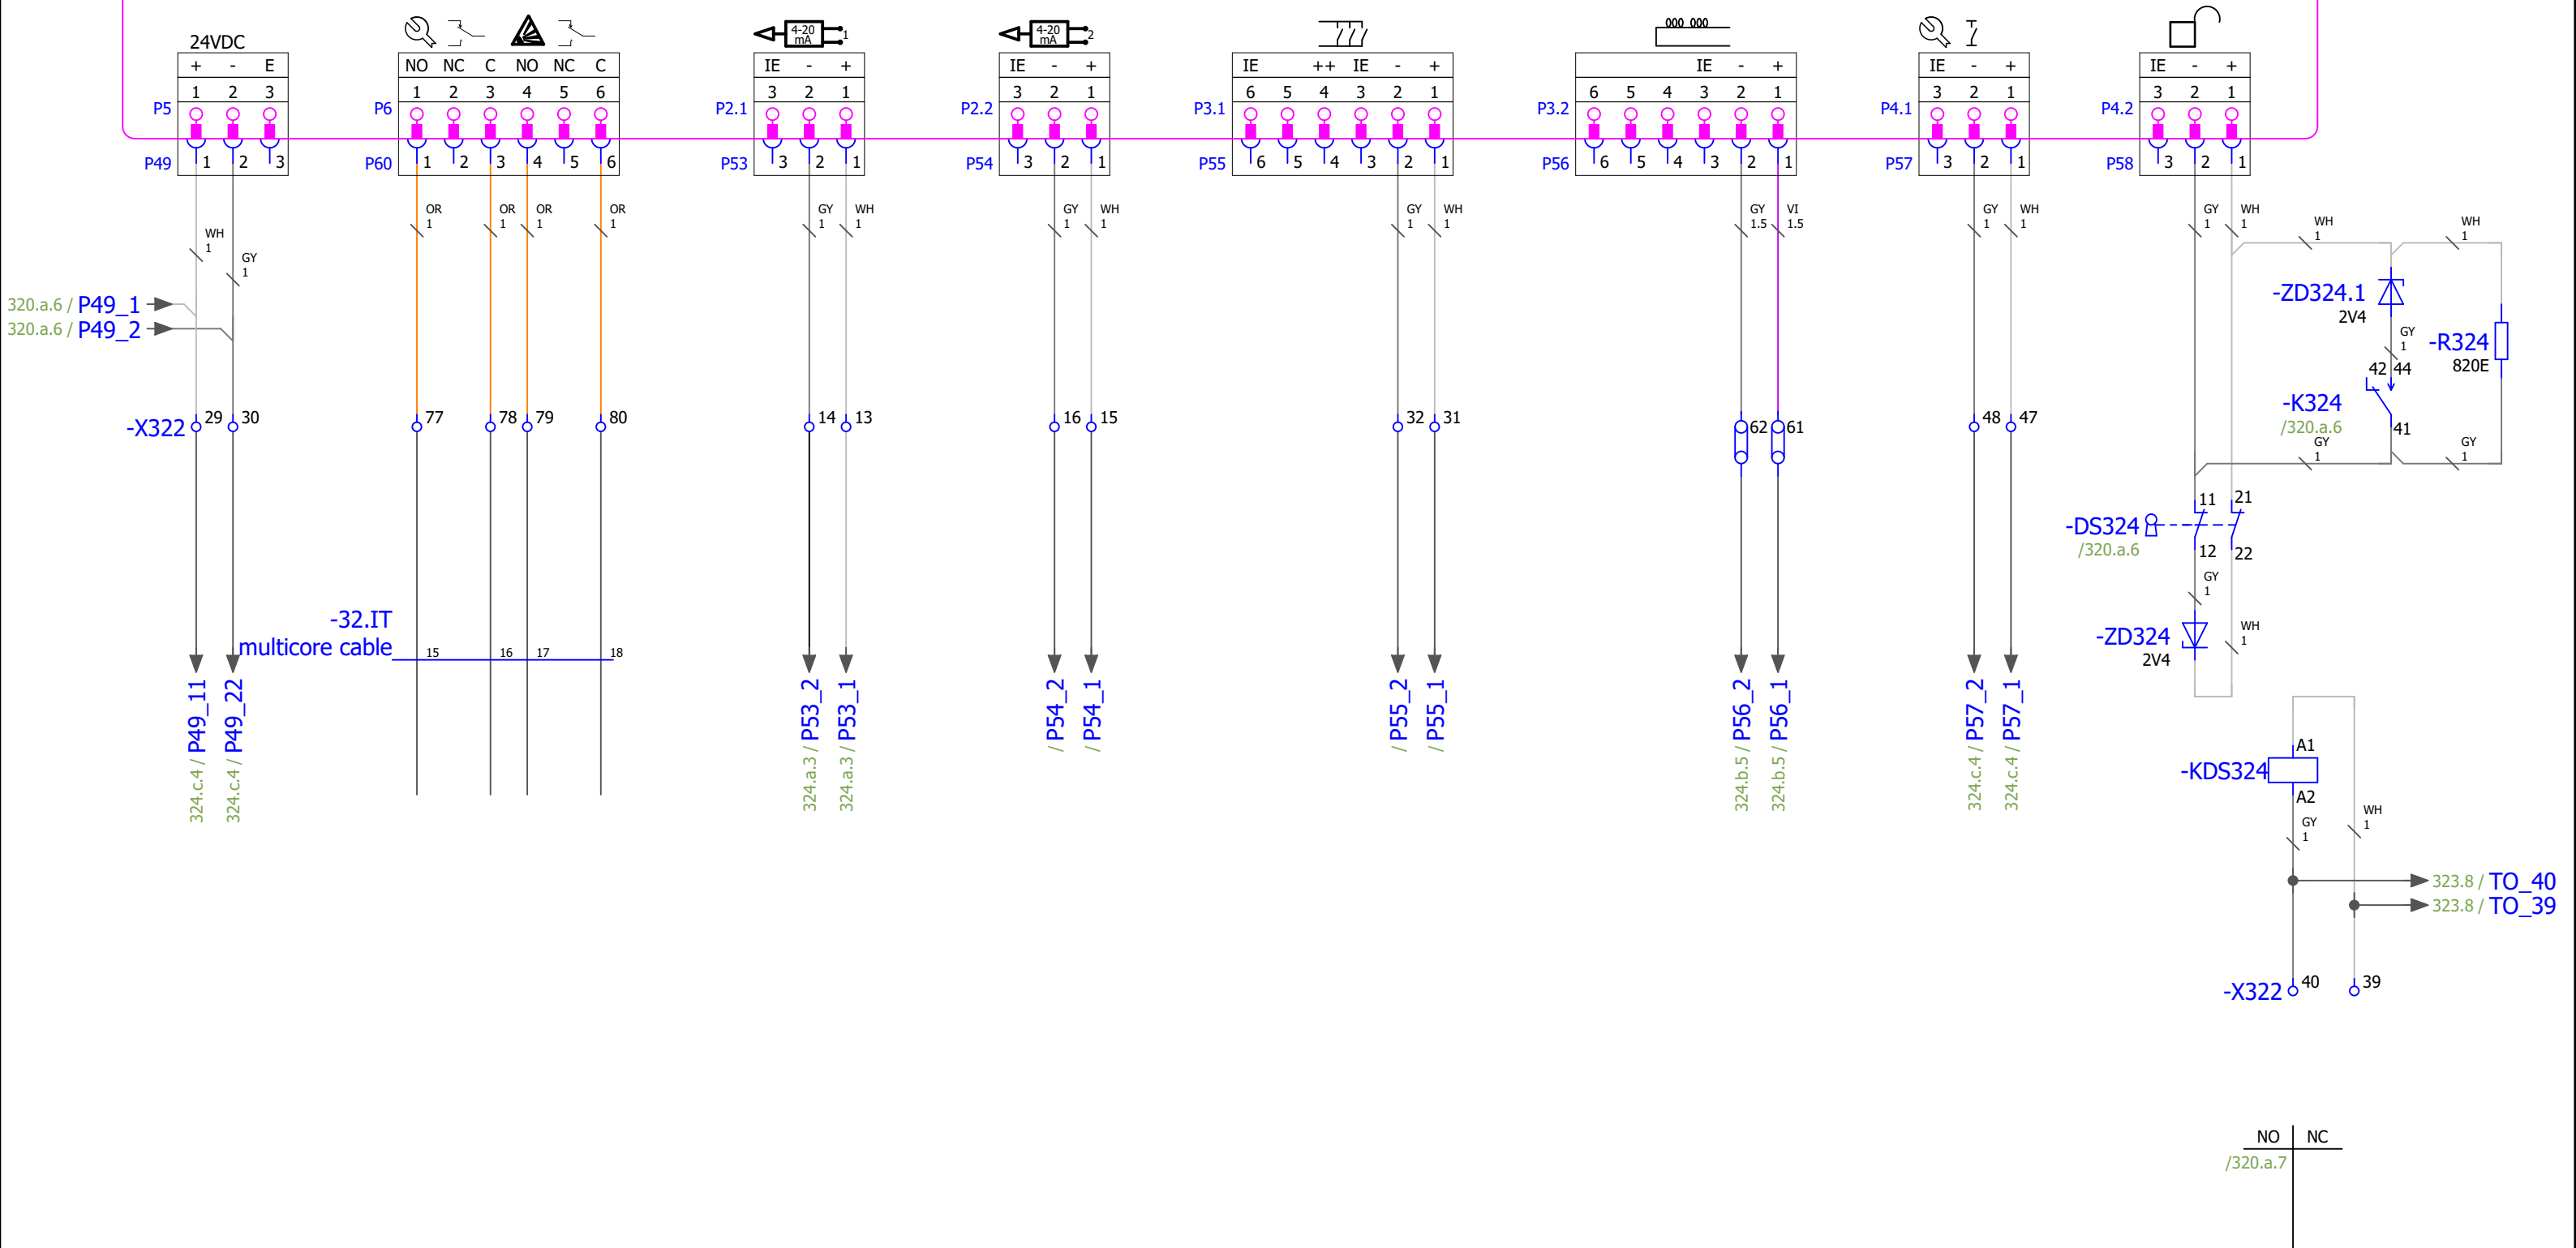

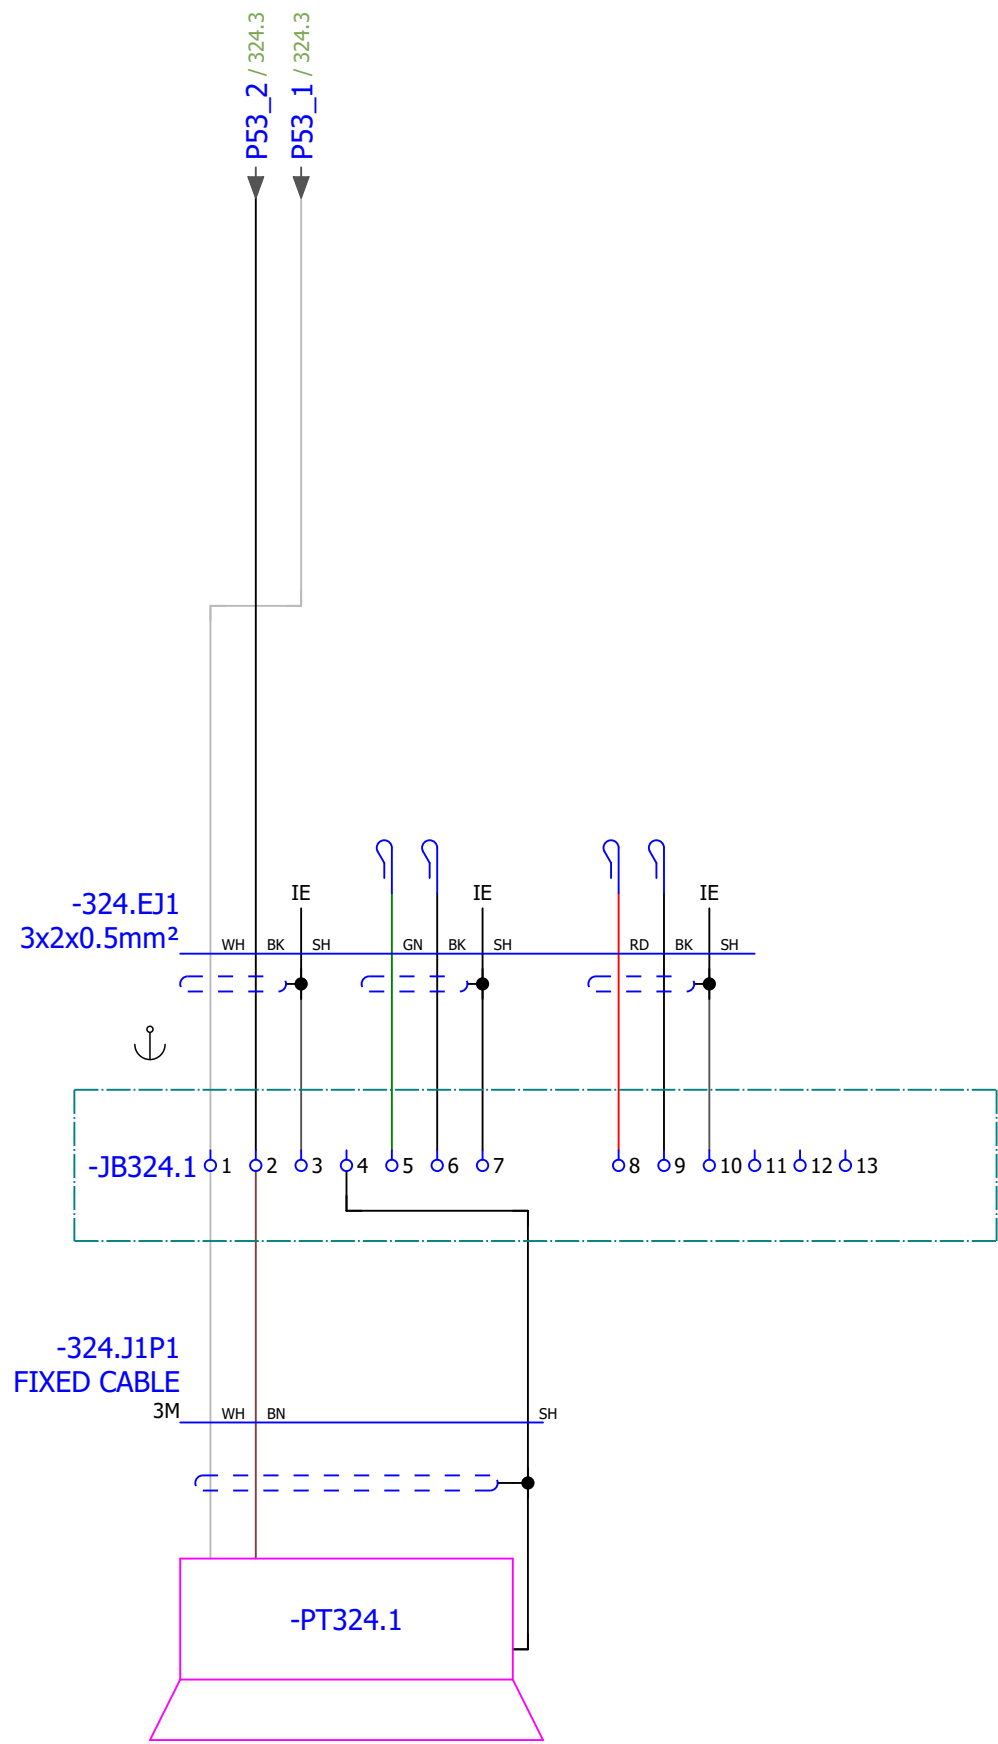

ATTENTION: Do not cut the breather tube from the detector(s) in the junction box

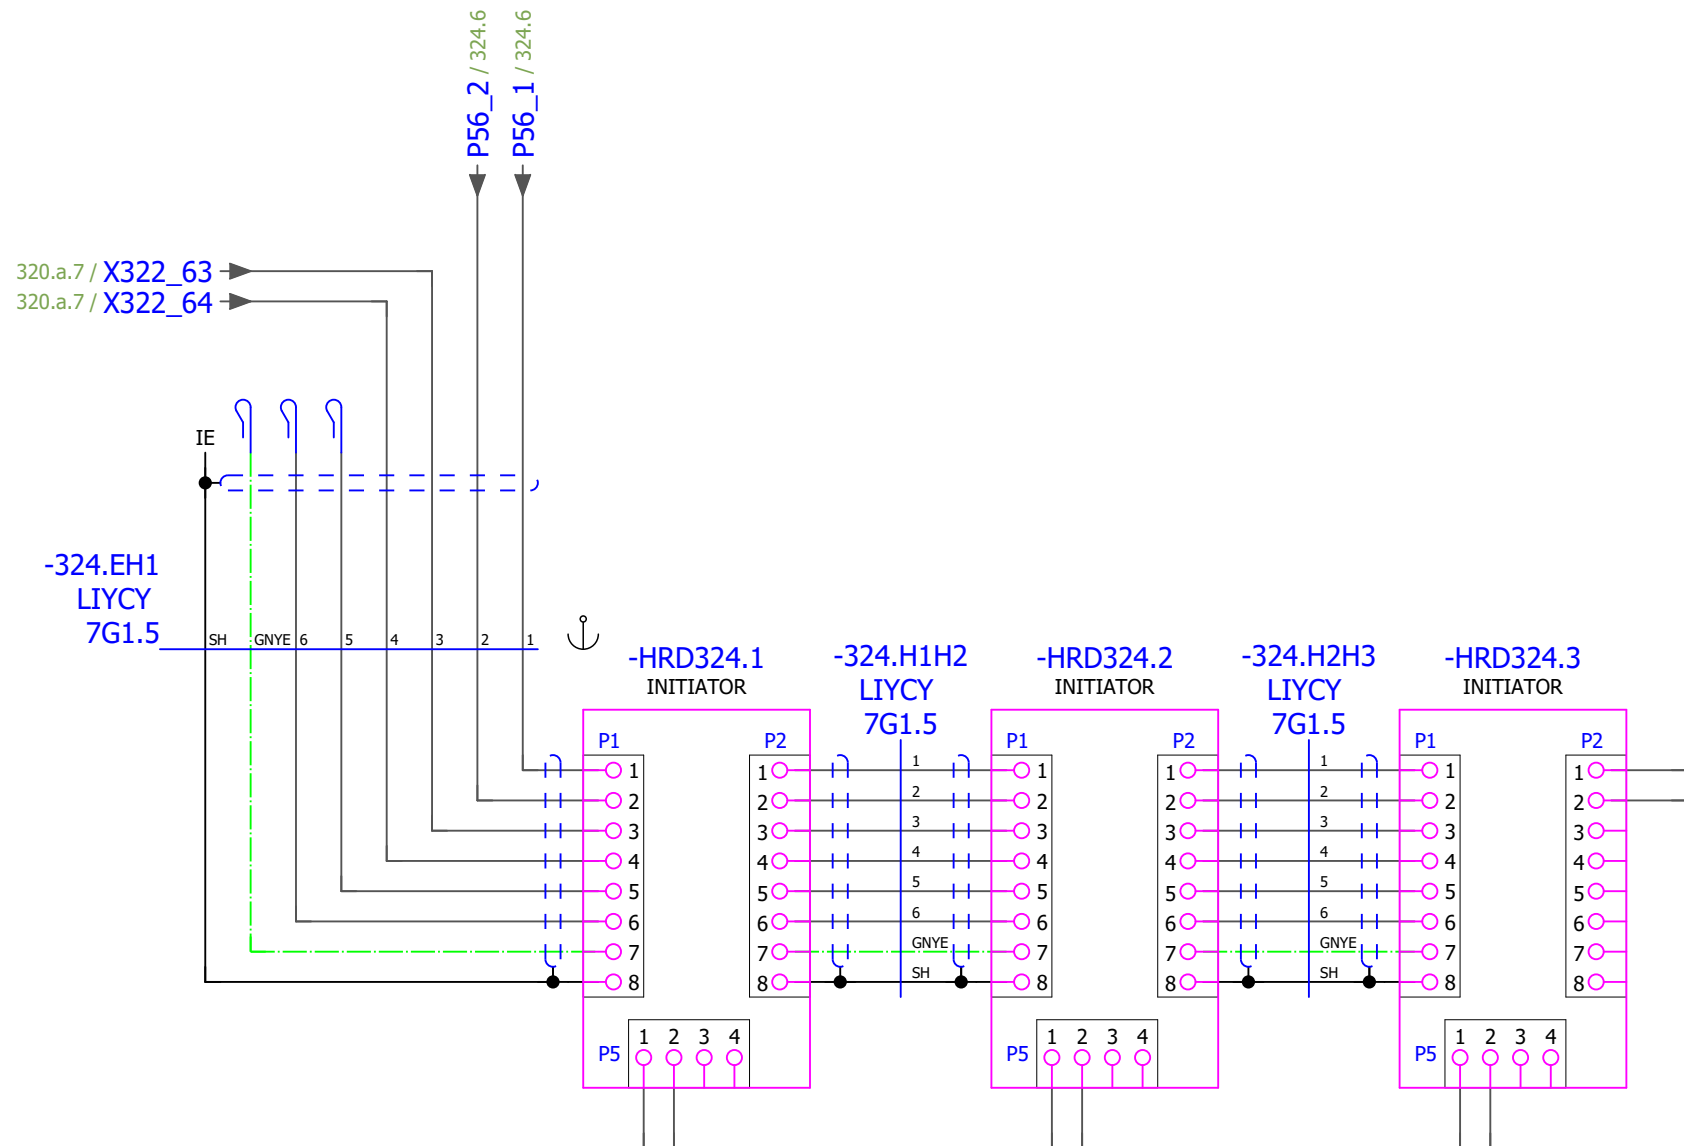





-RC832
/328.8



RC8



Relay Contact module

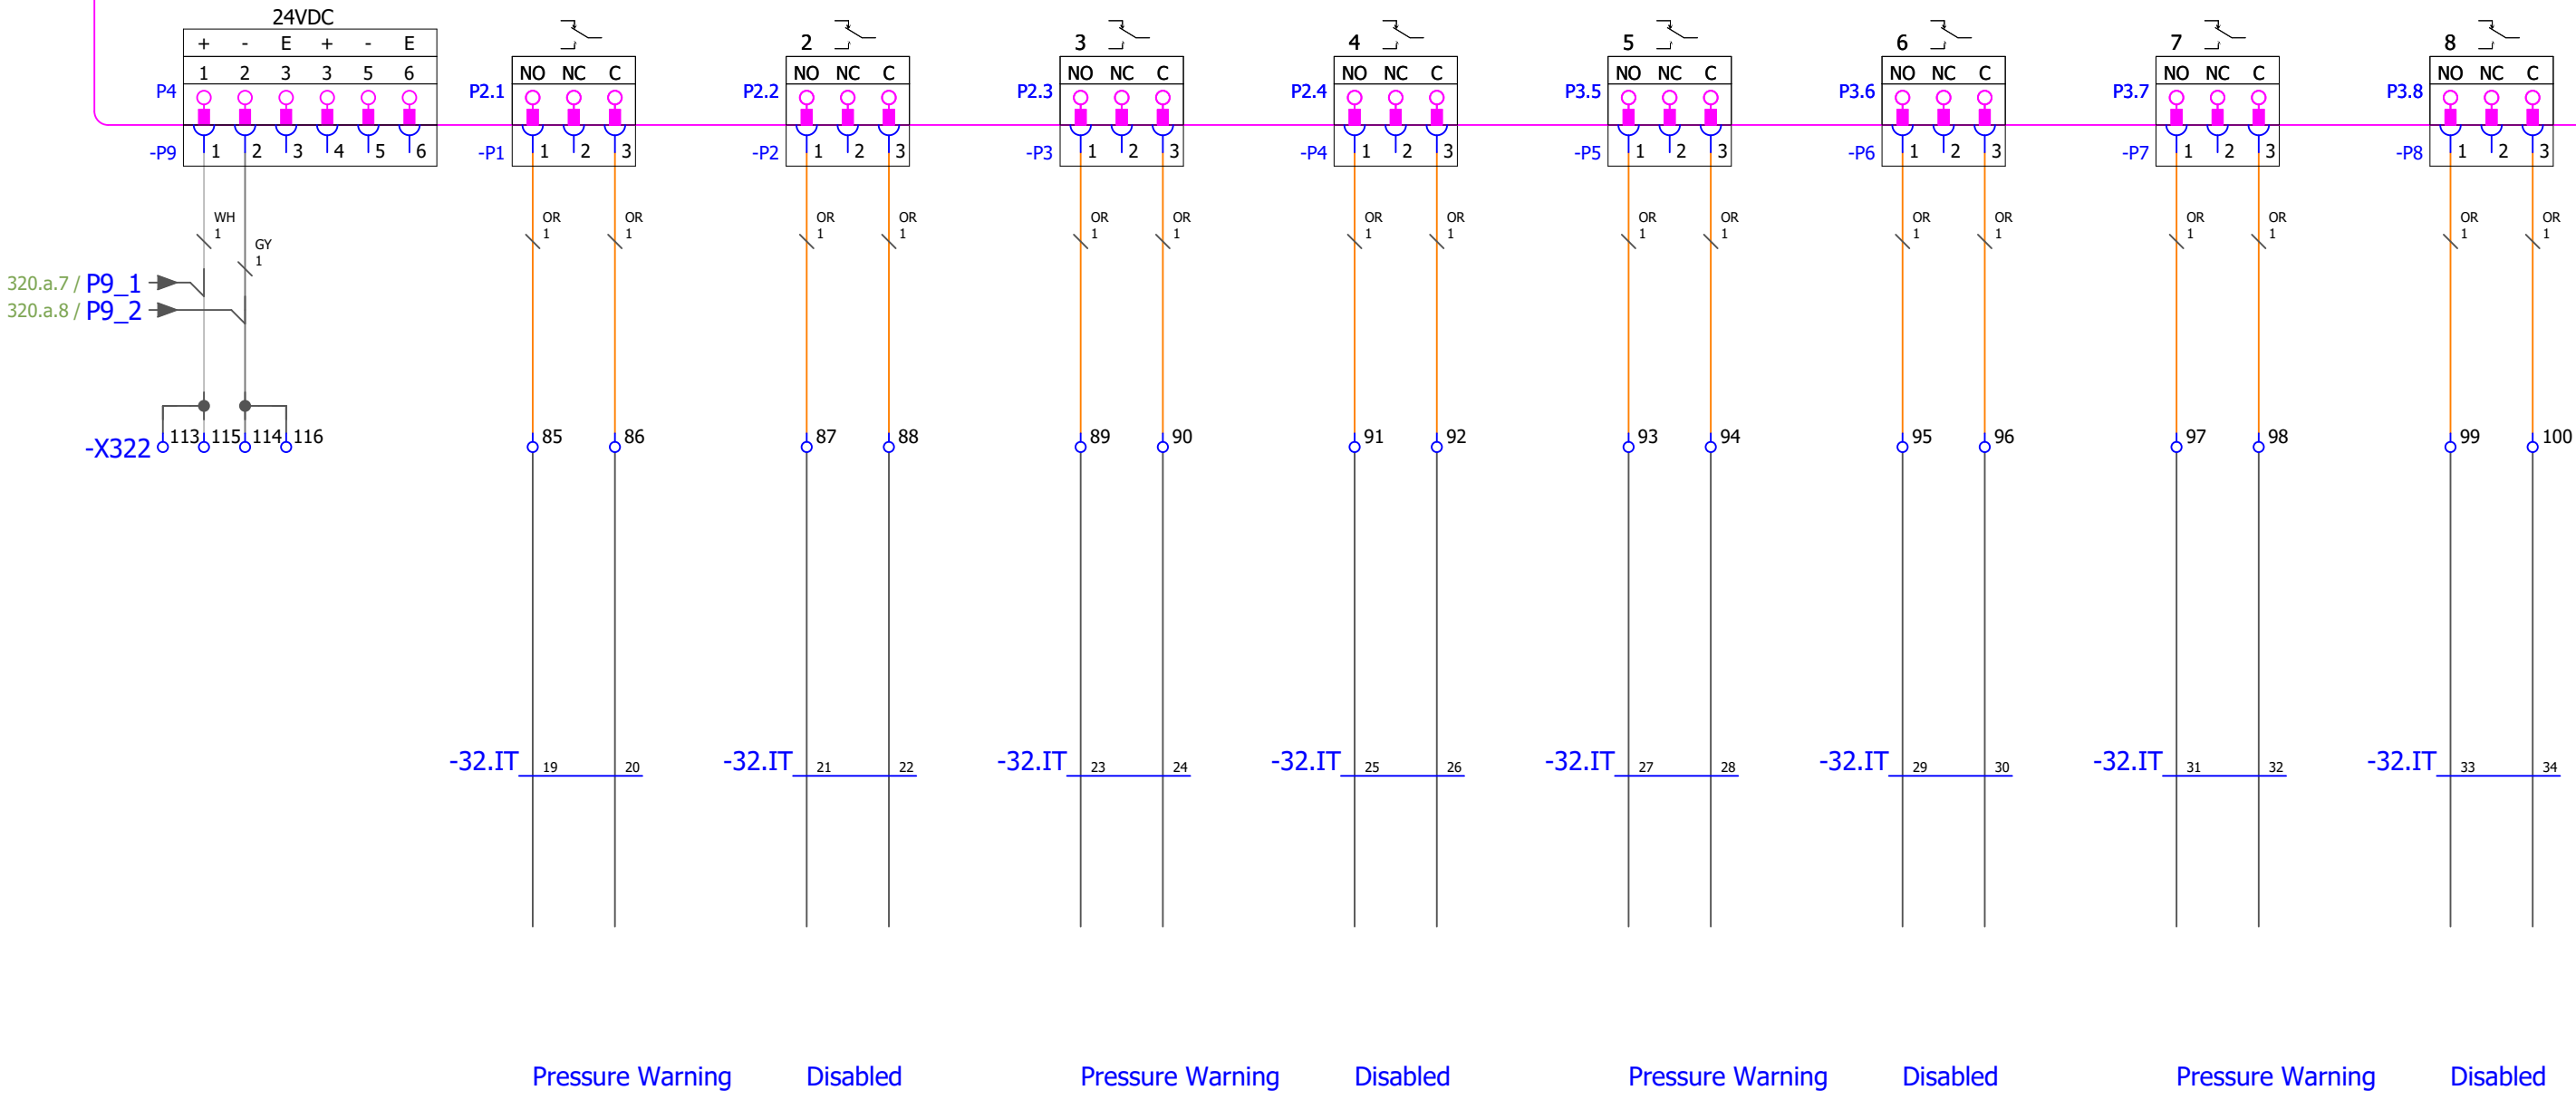

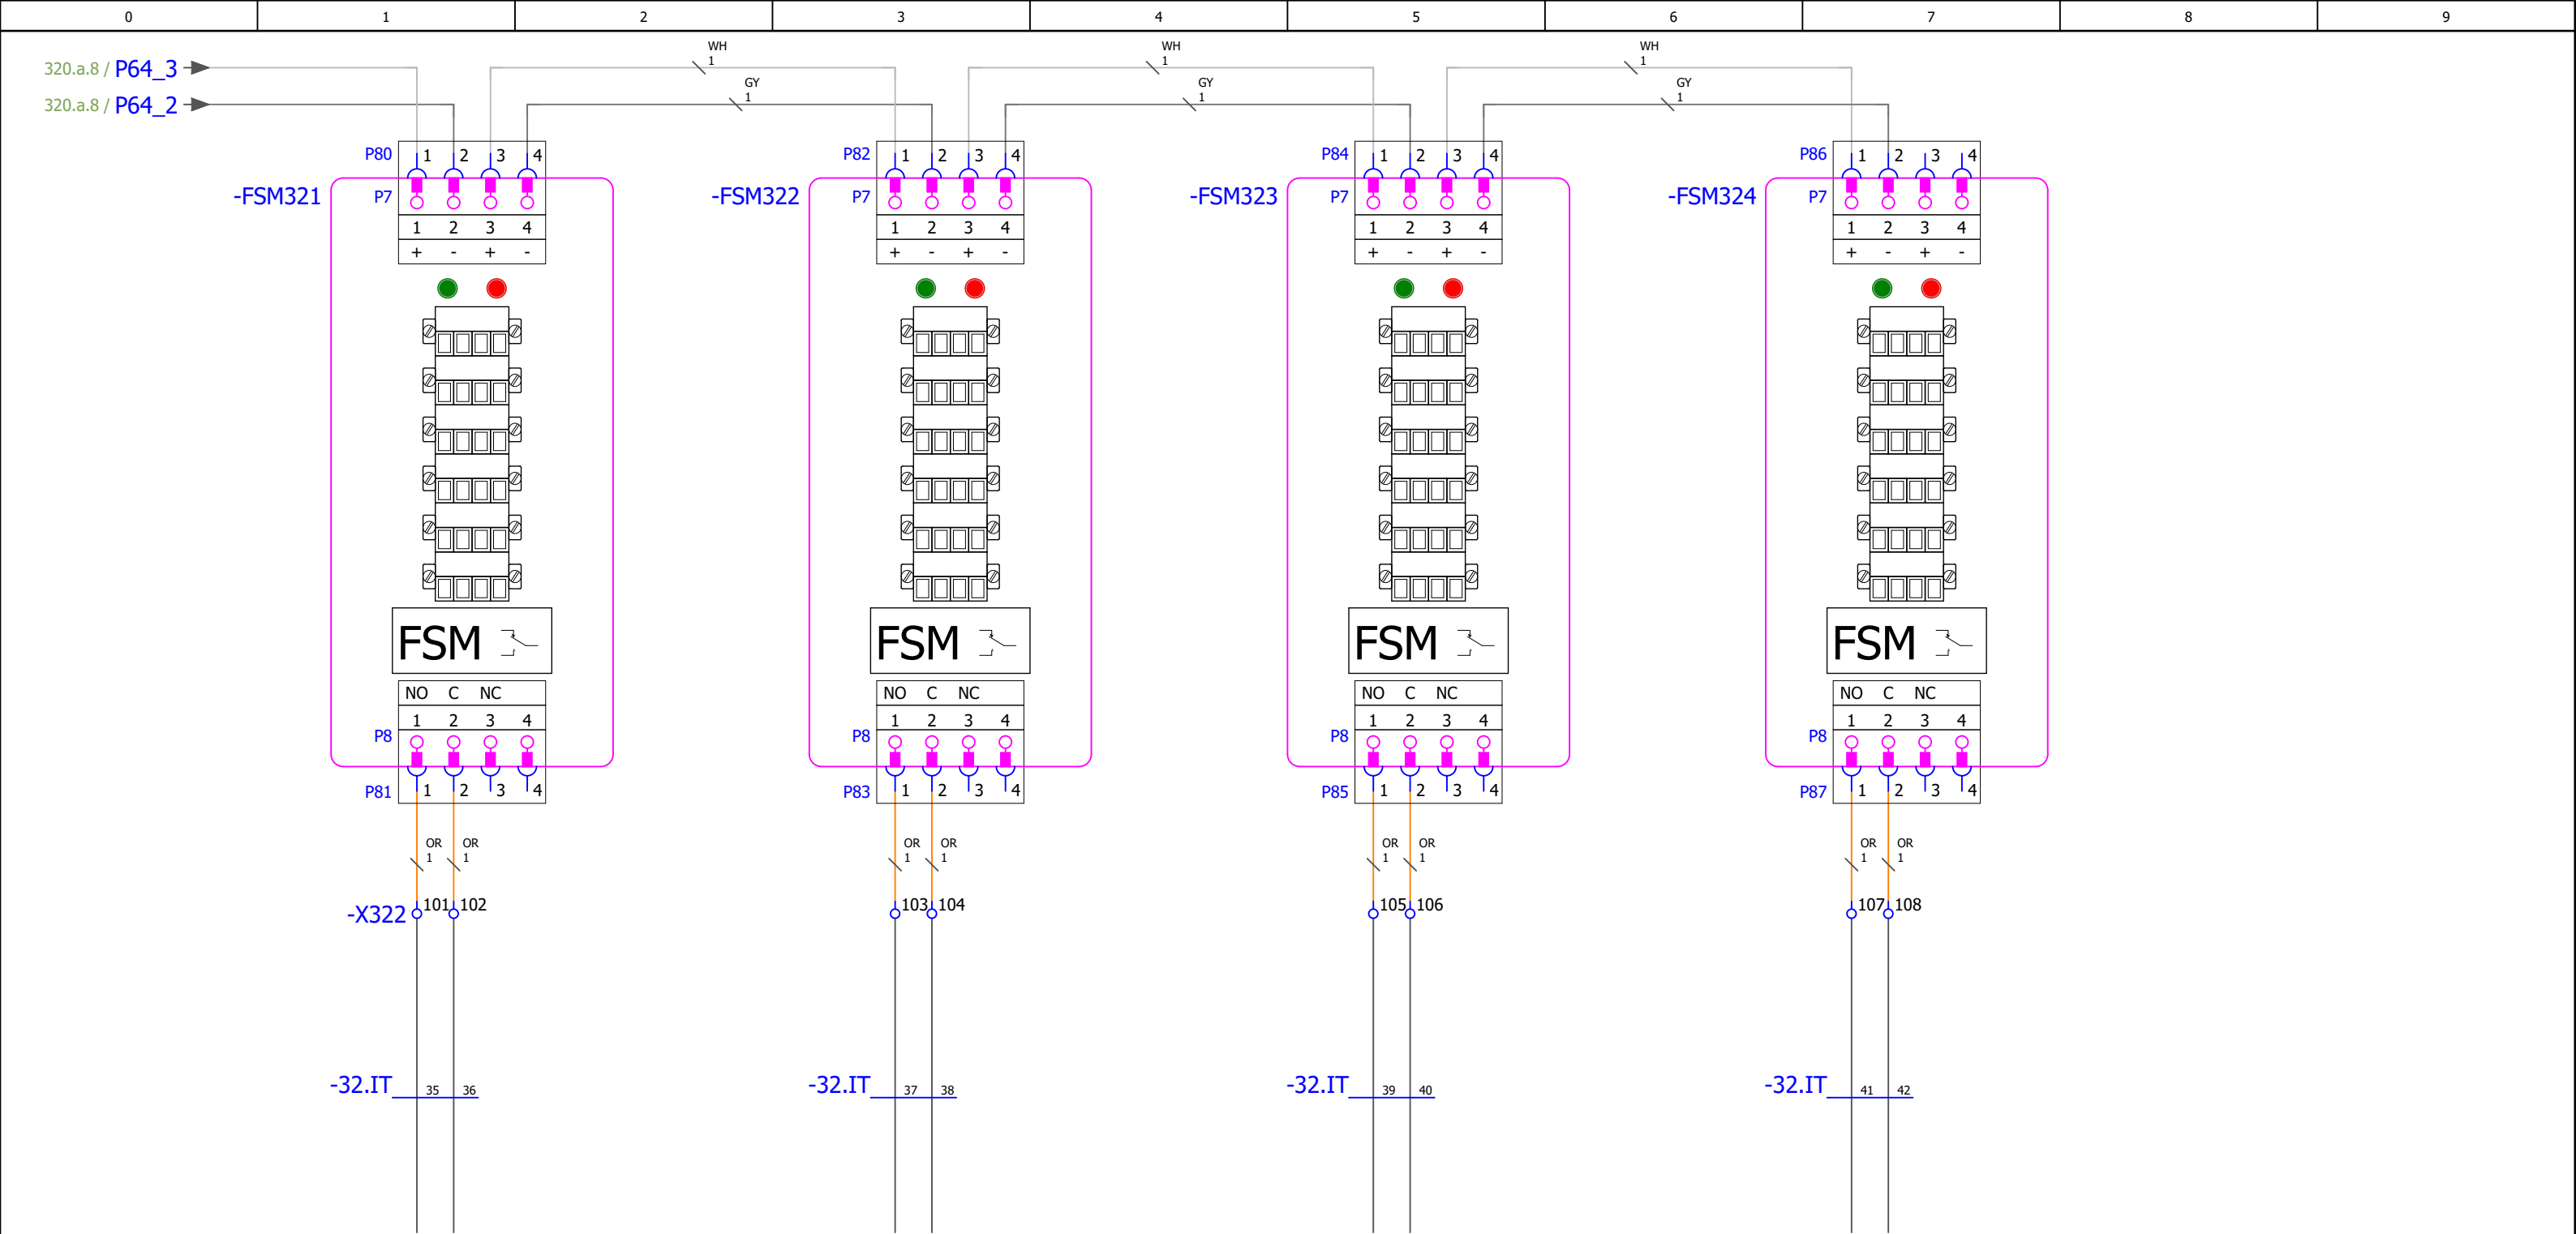


Previous:
325


Next:
328

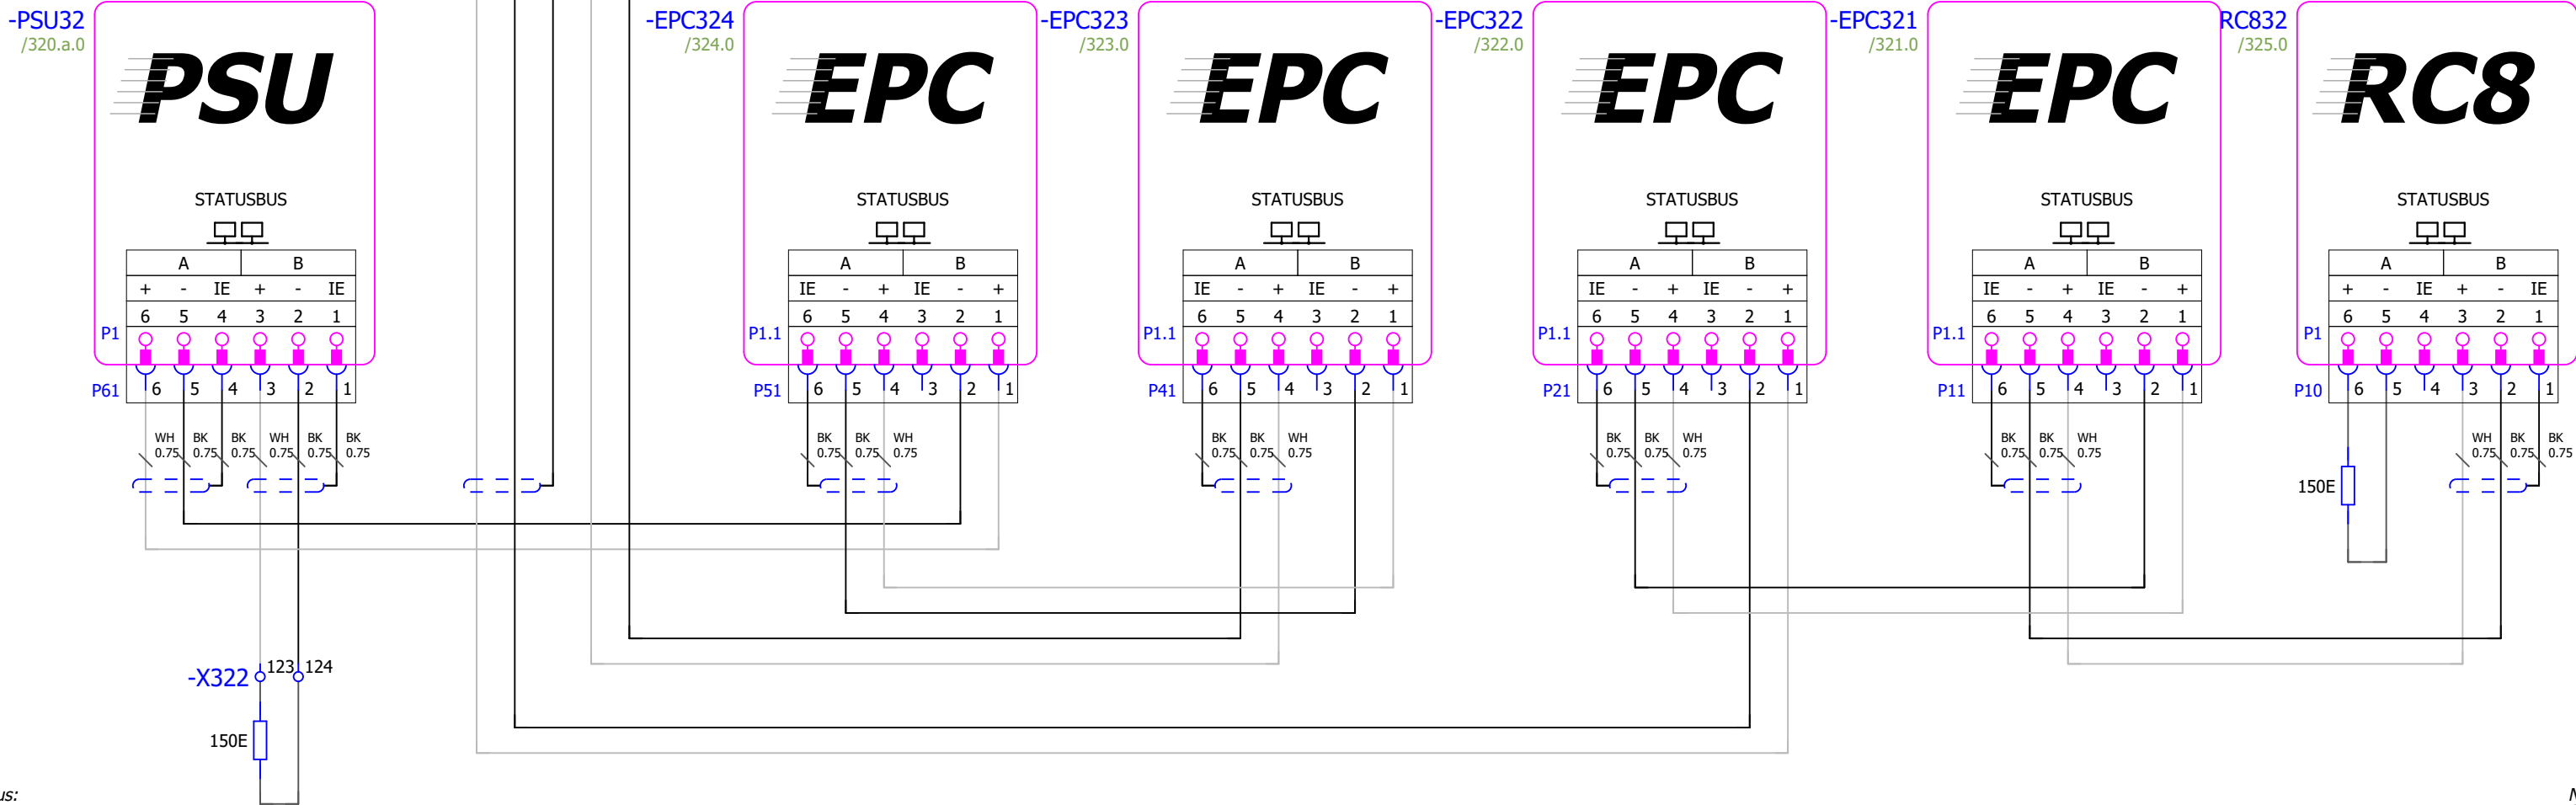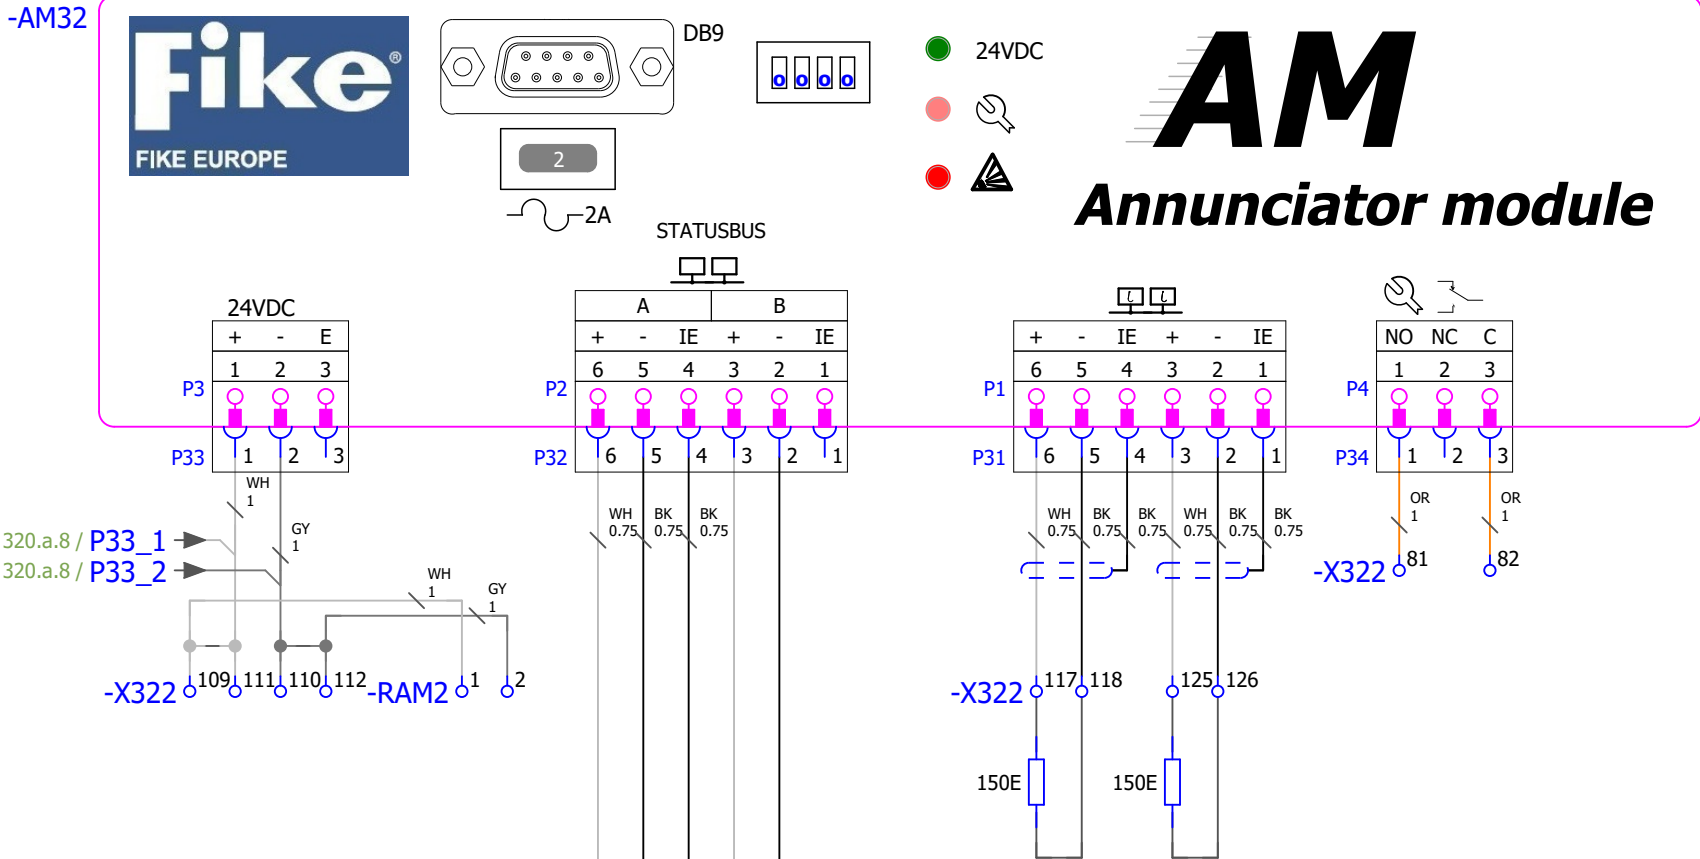



Previous:
327

Next:
329

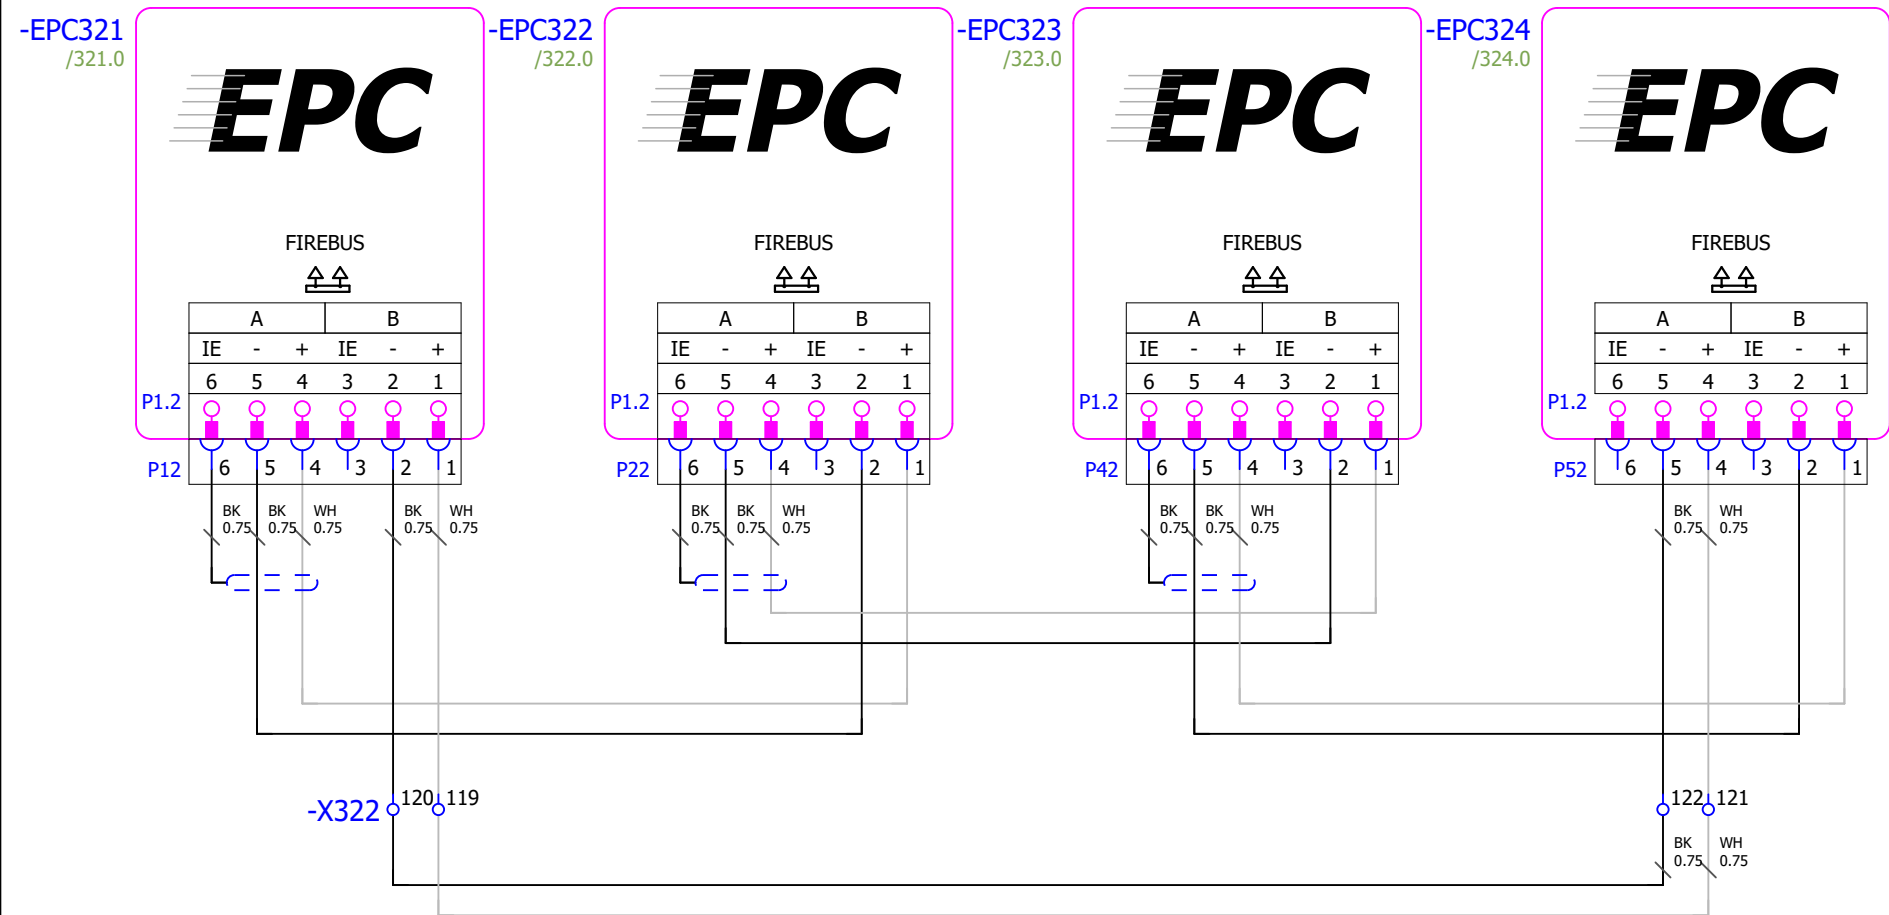




DB9





PSU


Power Supply unit

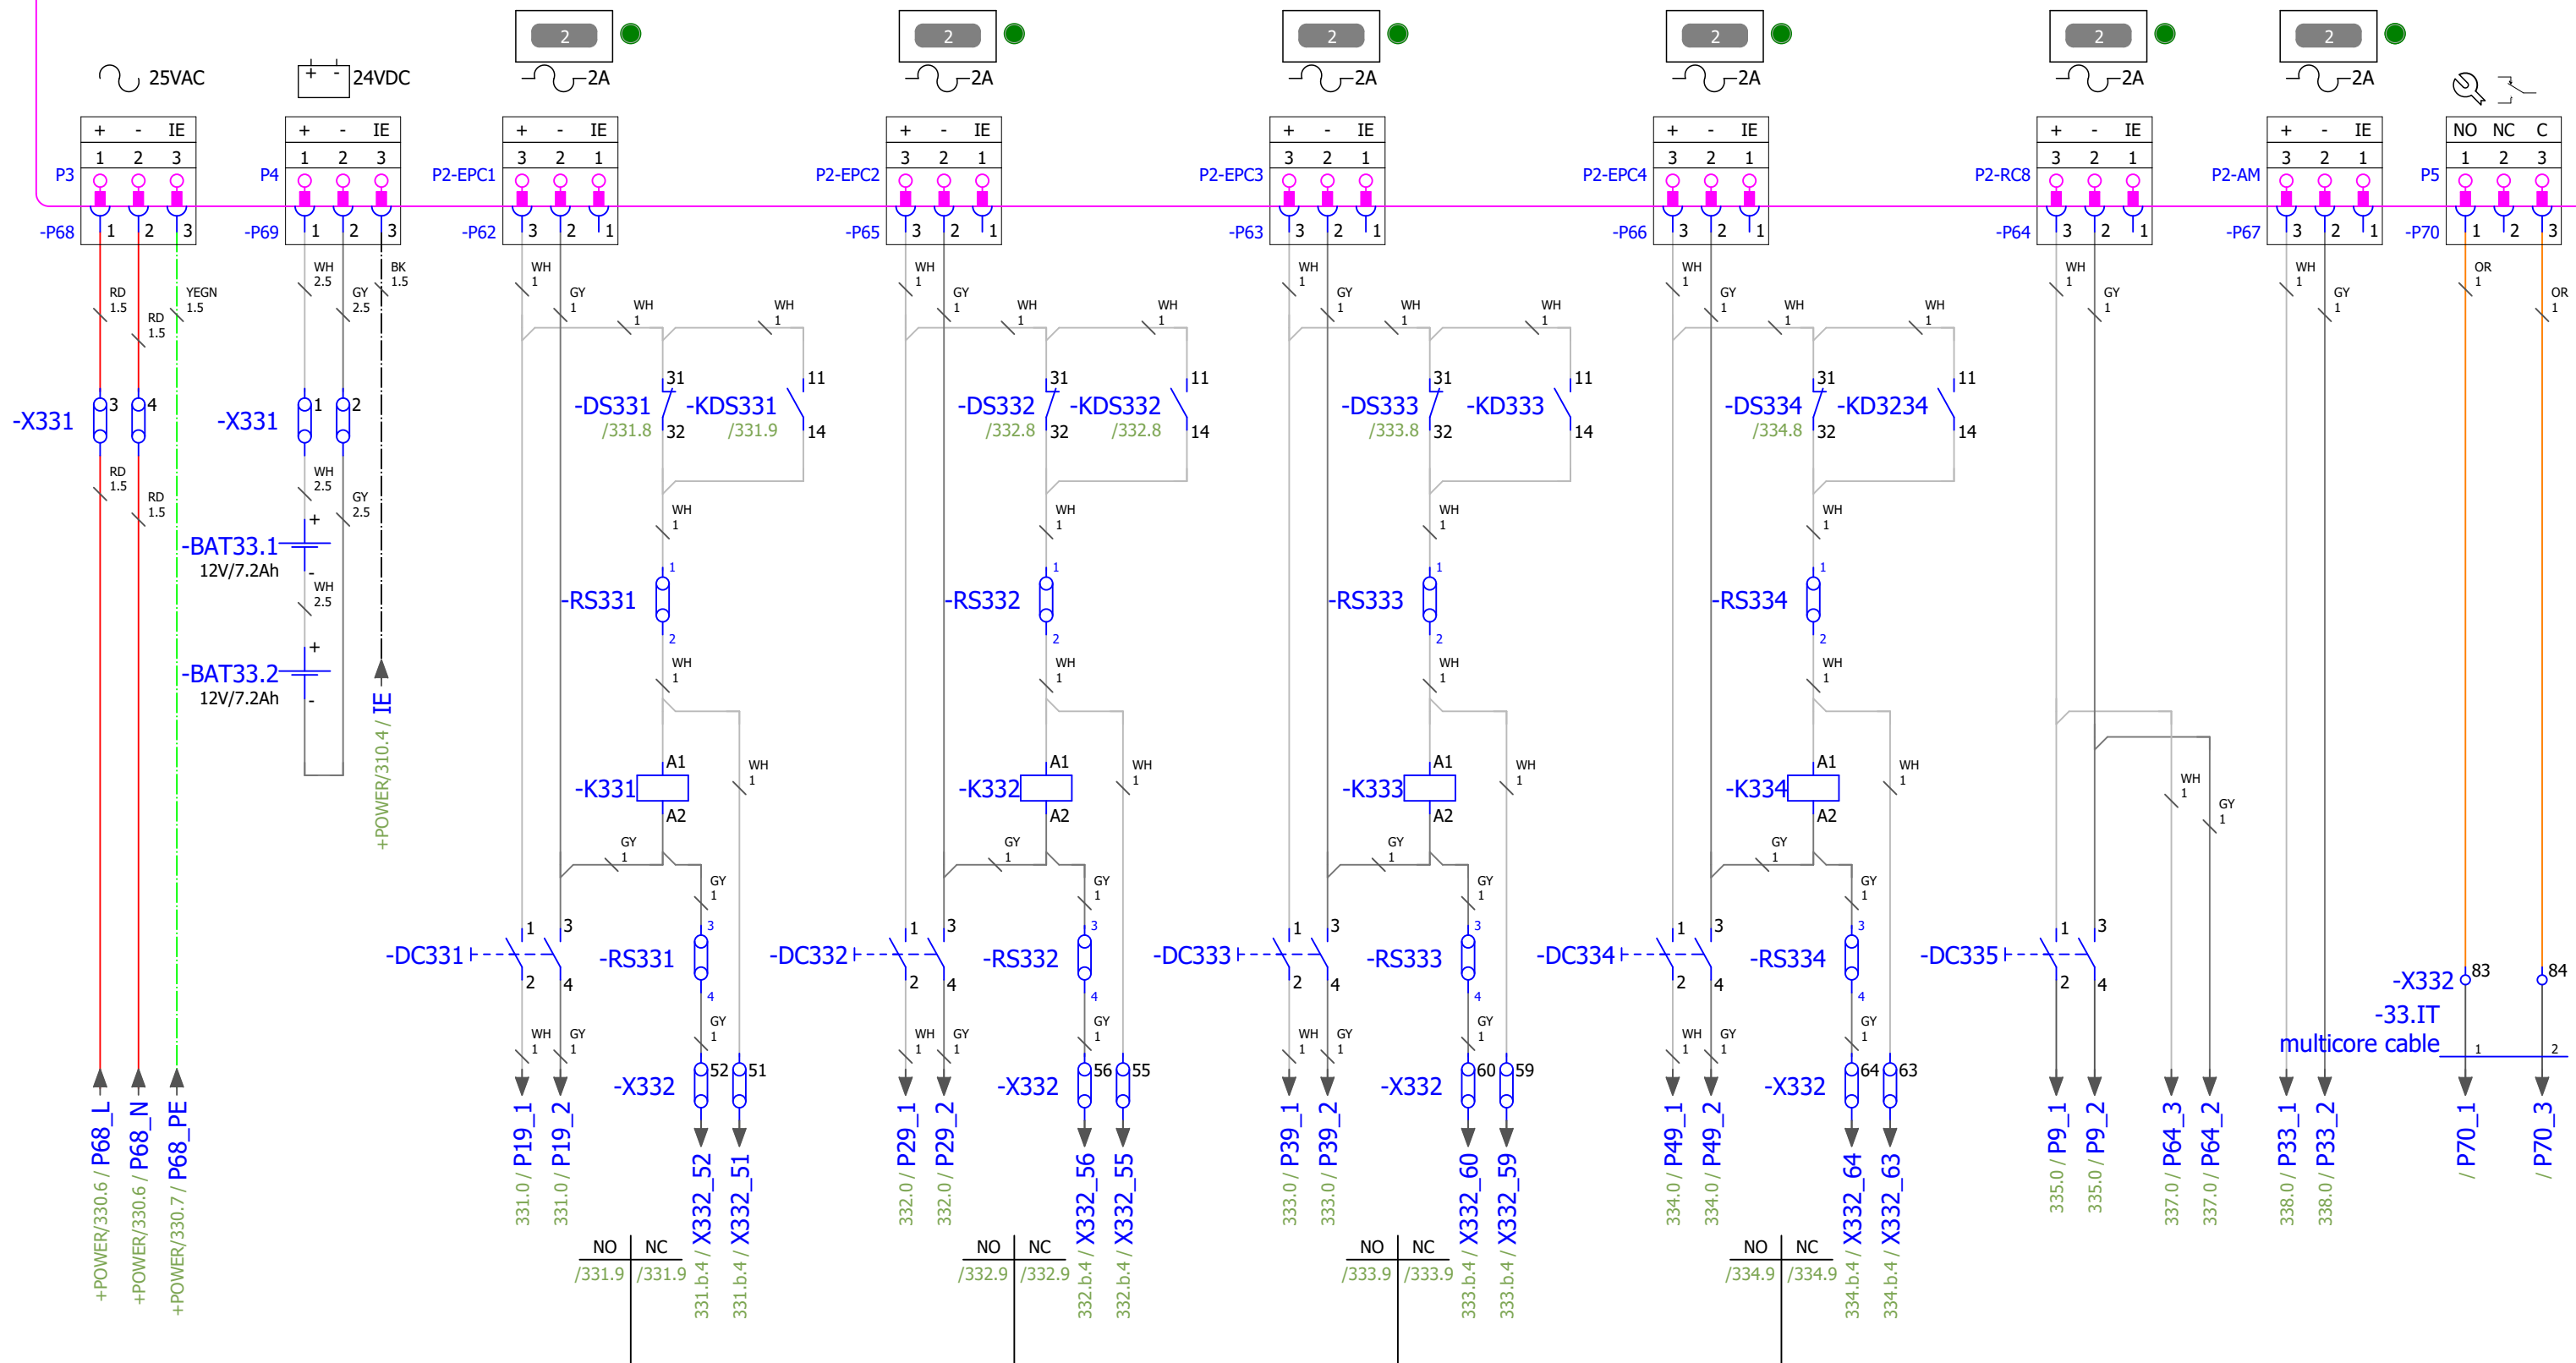


-EPC331
/338.7 /339.0

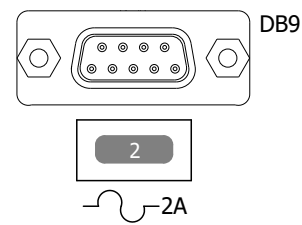


EPC Explosion Protection Controller


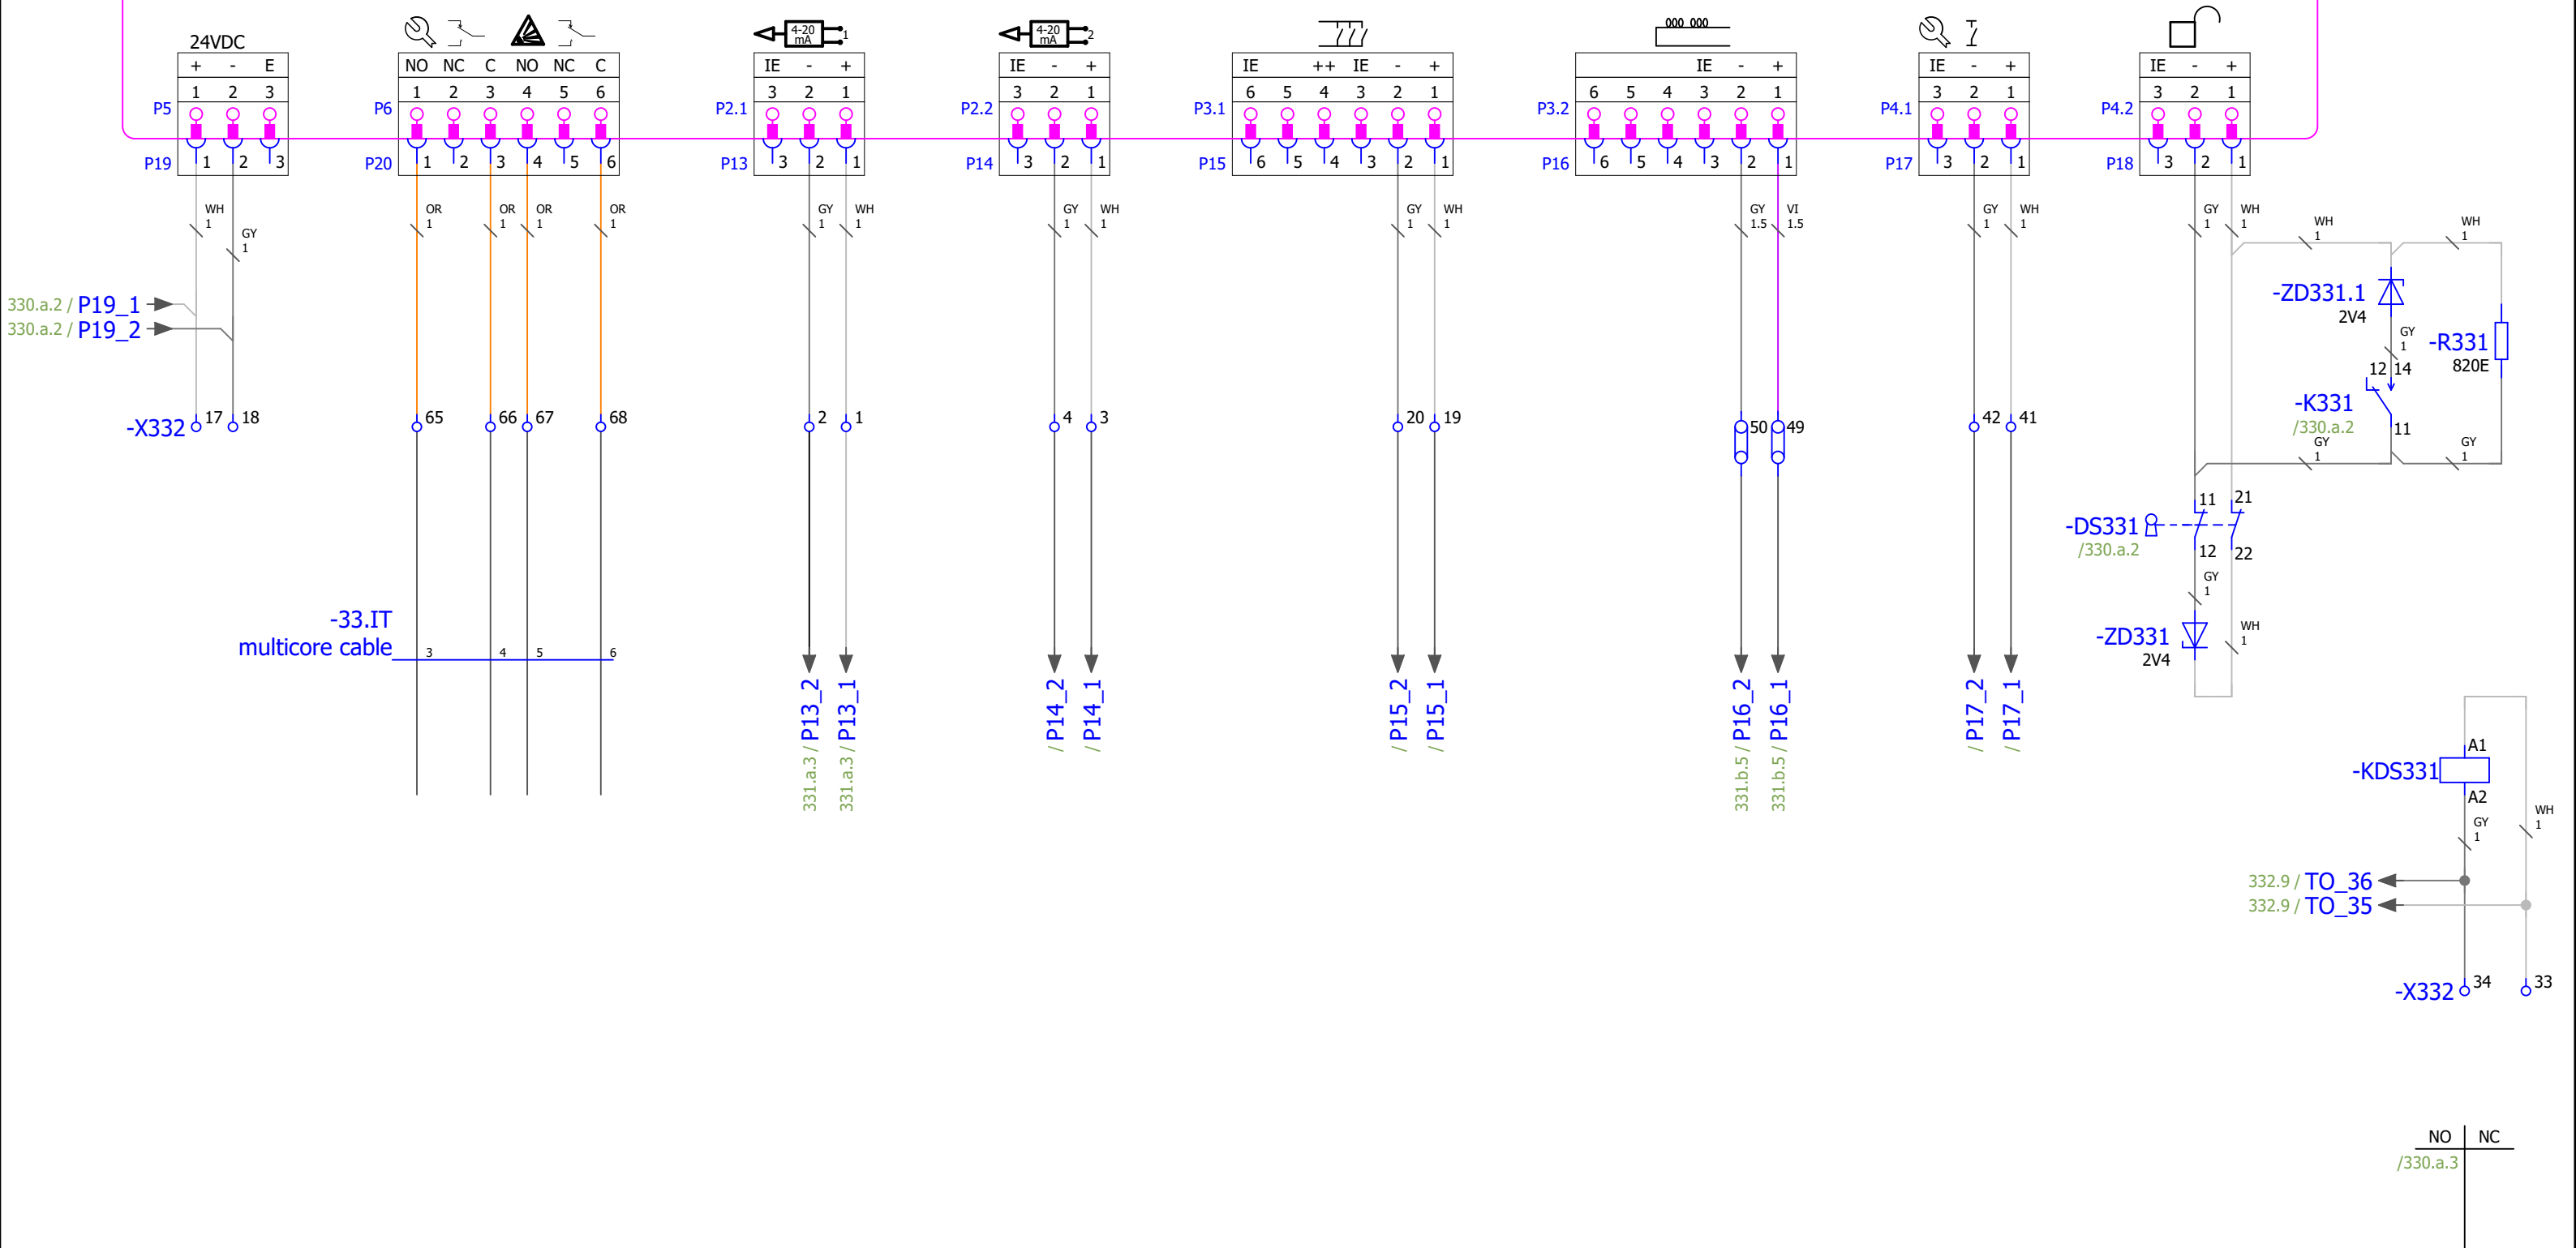


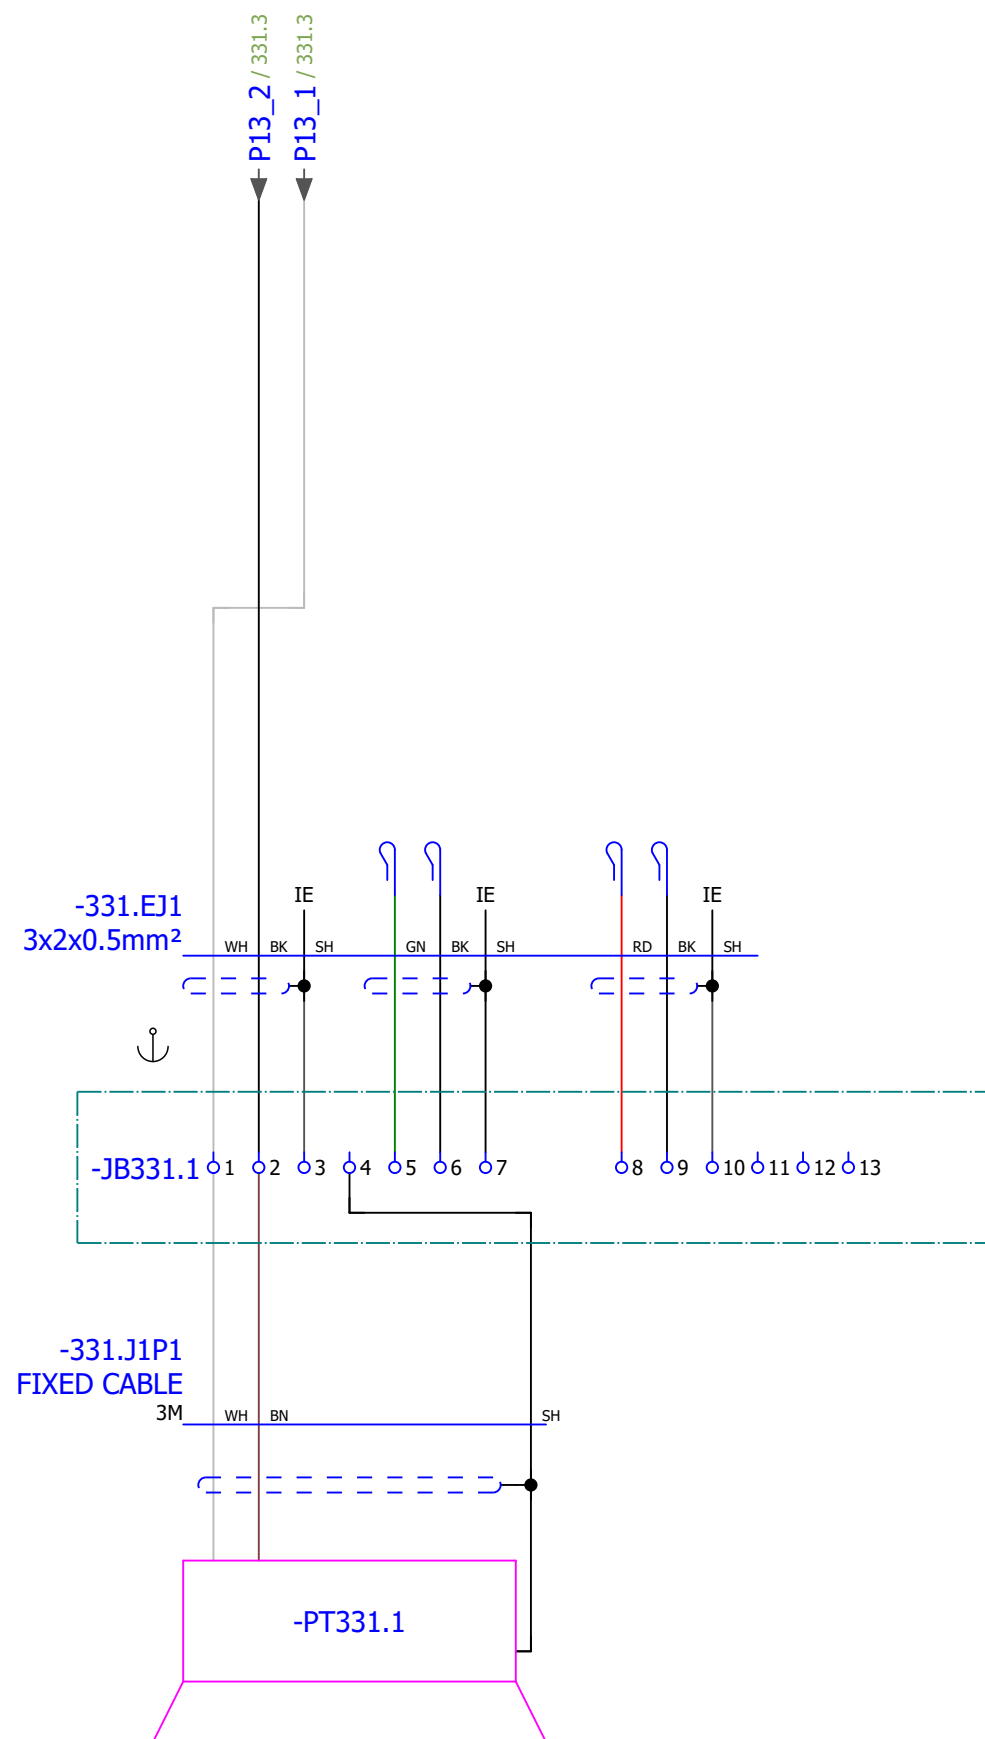


ATTENTION: Do not cut the breather tube from the detector(s) in the junction box

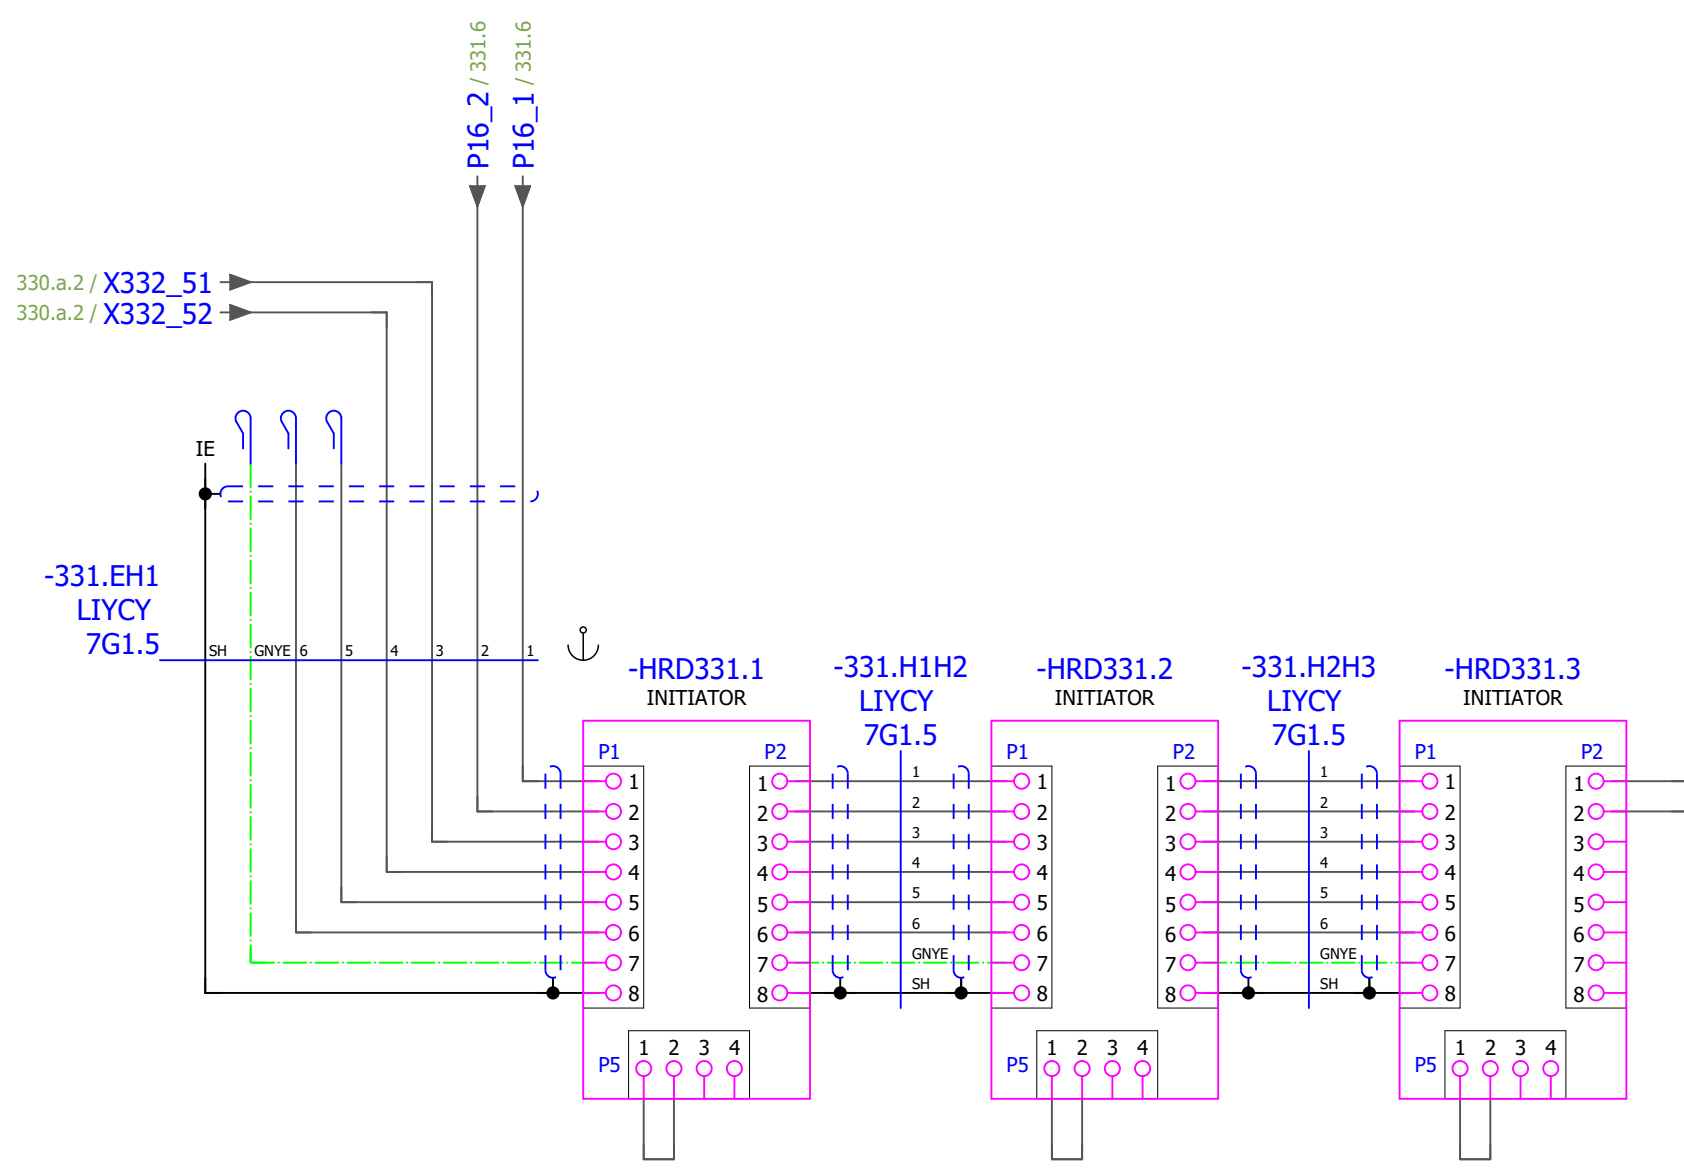


-EPC332
/338.5 /339.1

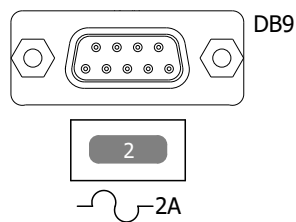



EPC Explosion Protection Controller

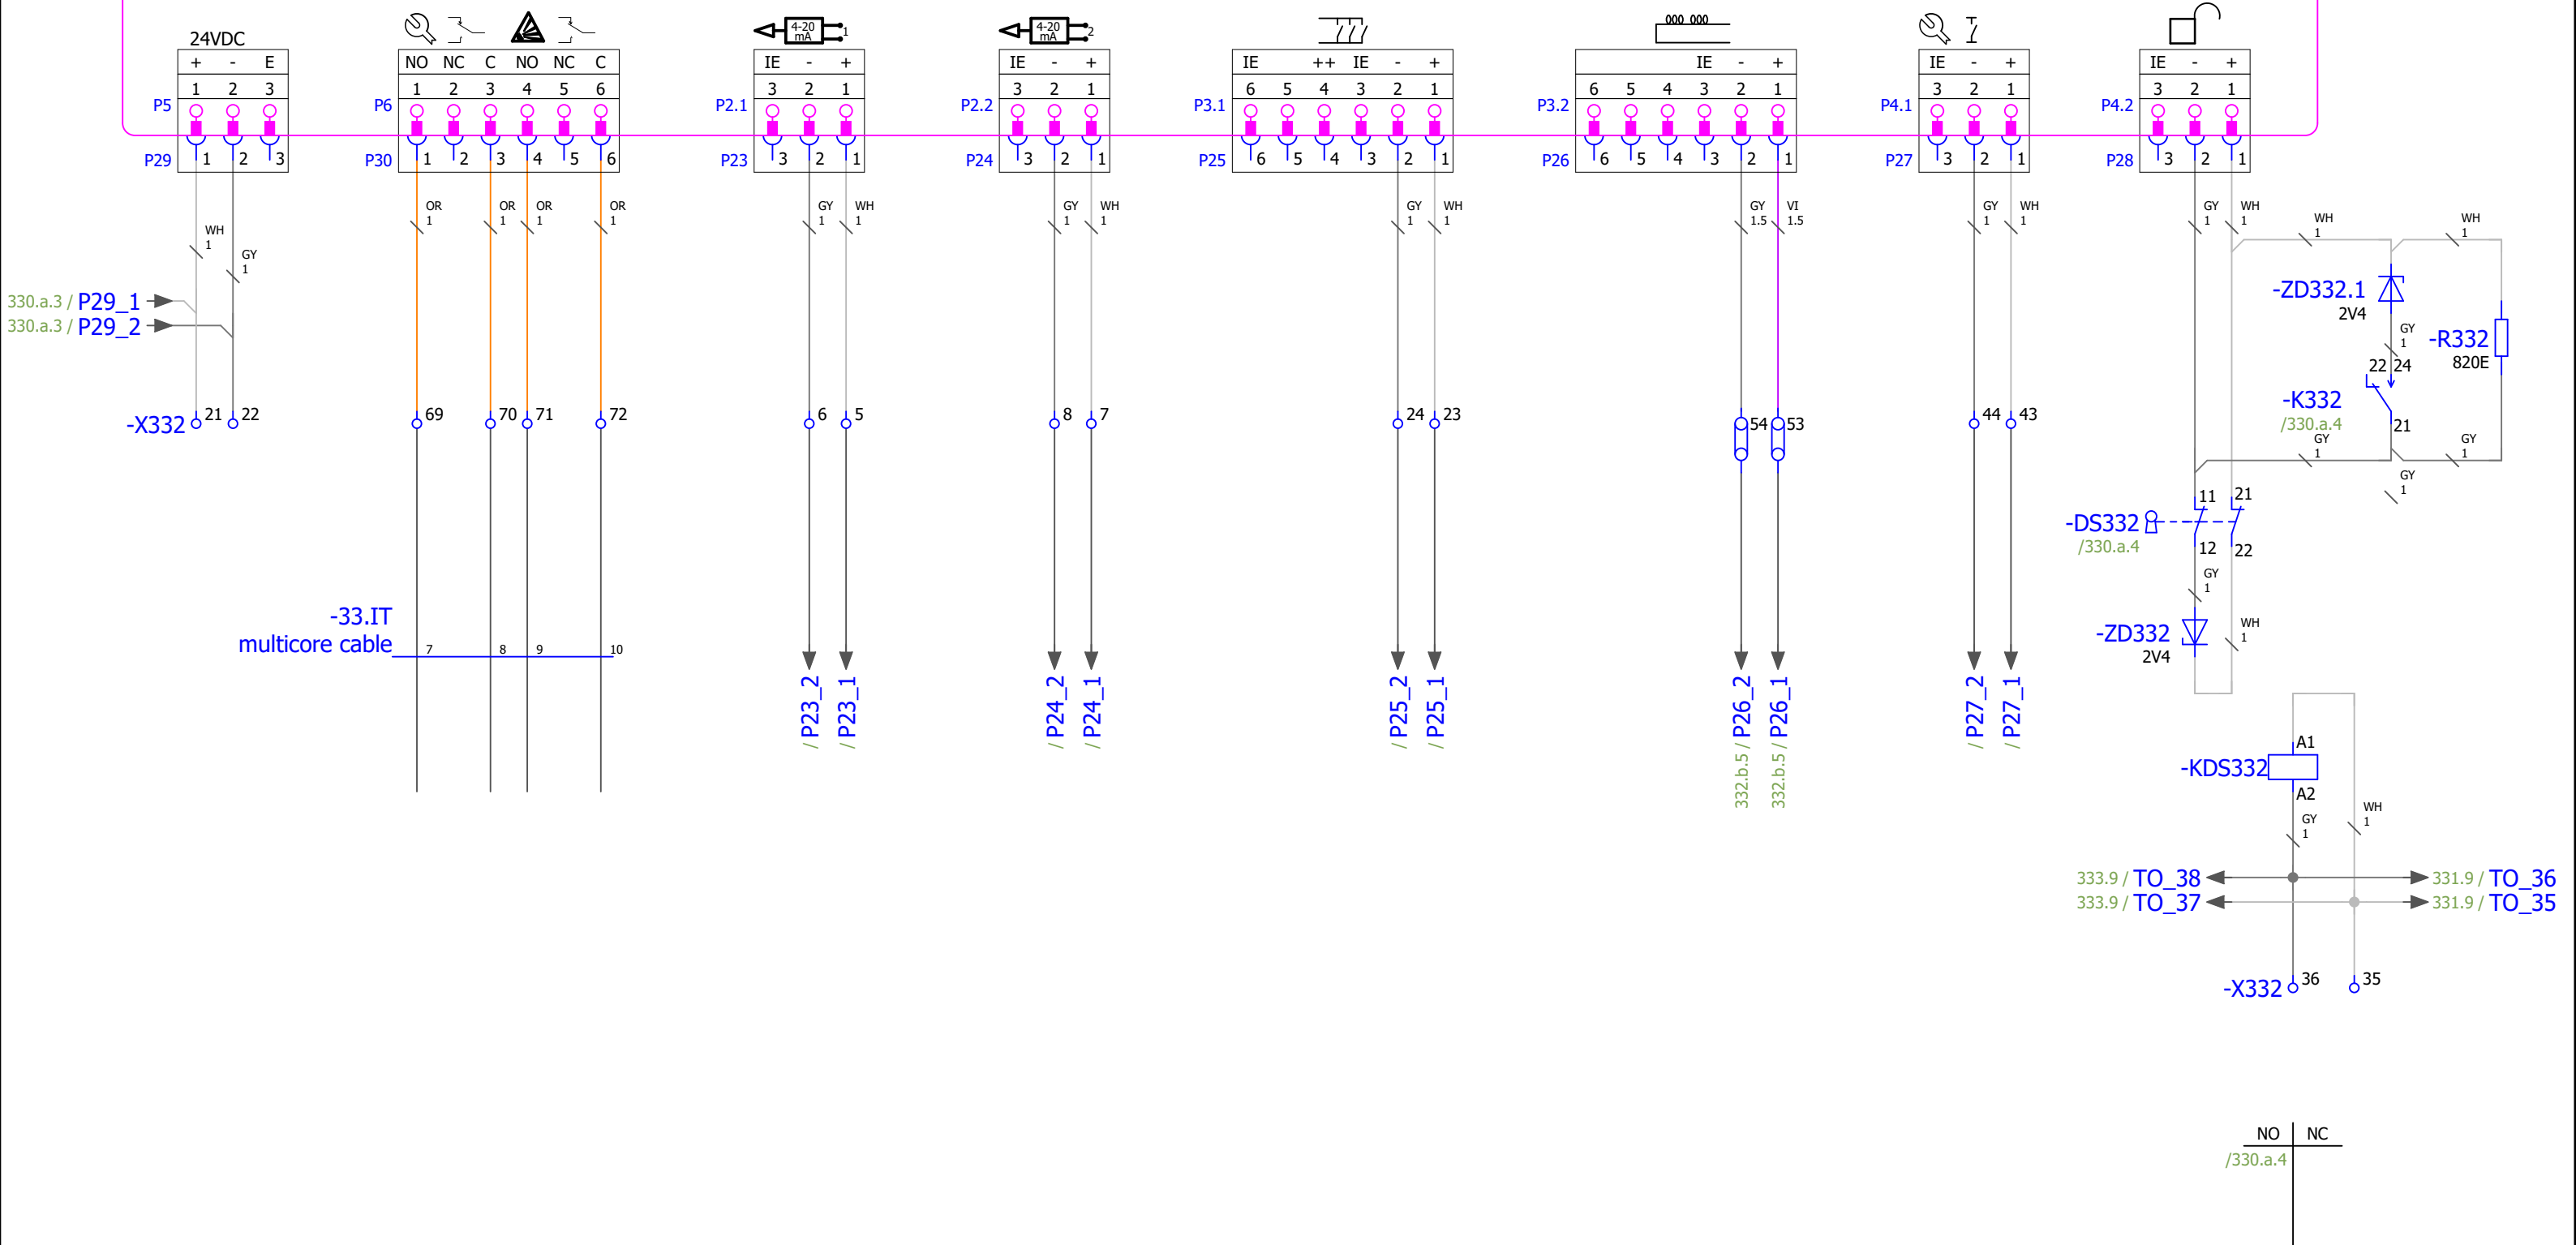


Previous:
331.b

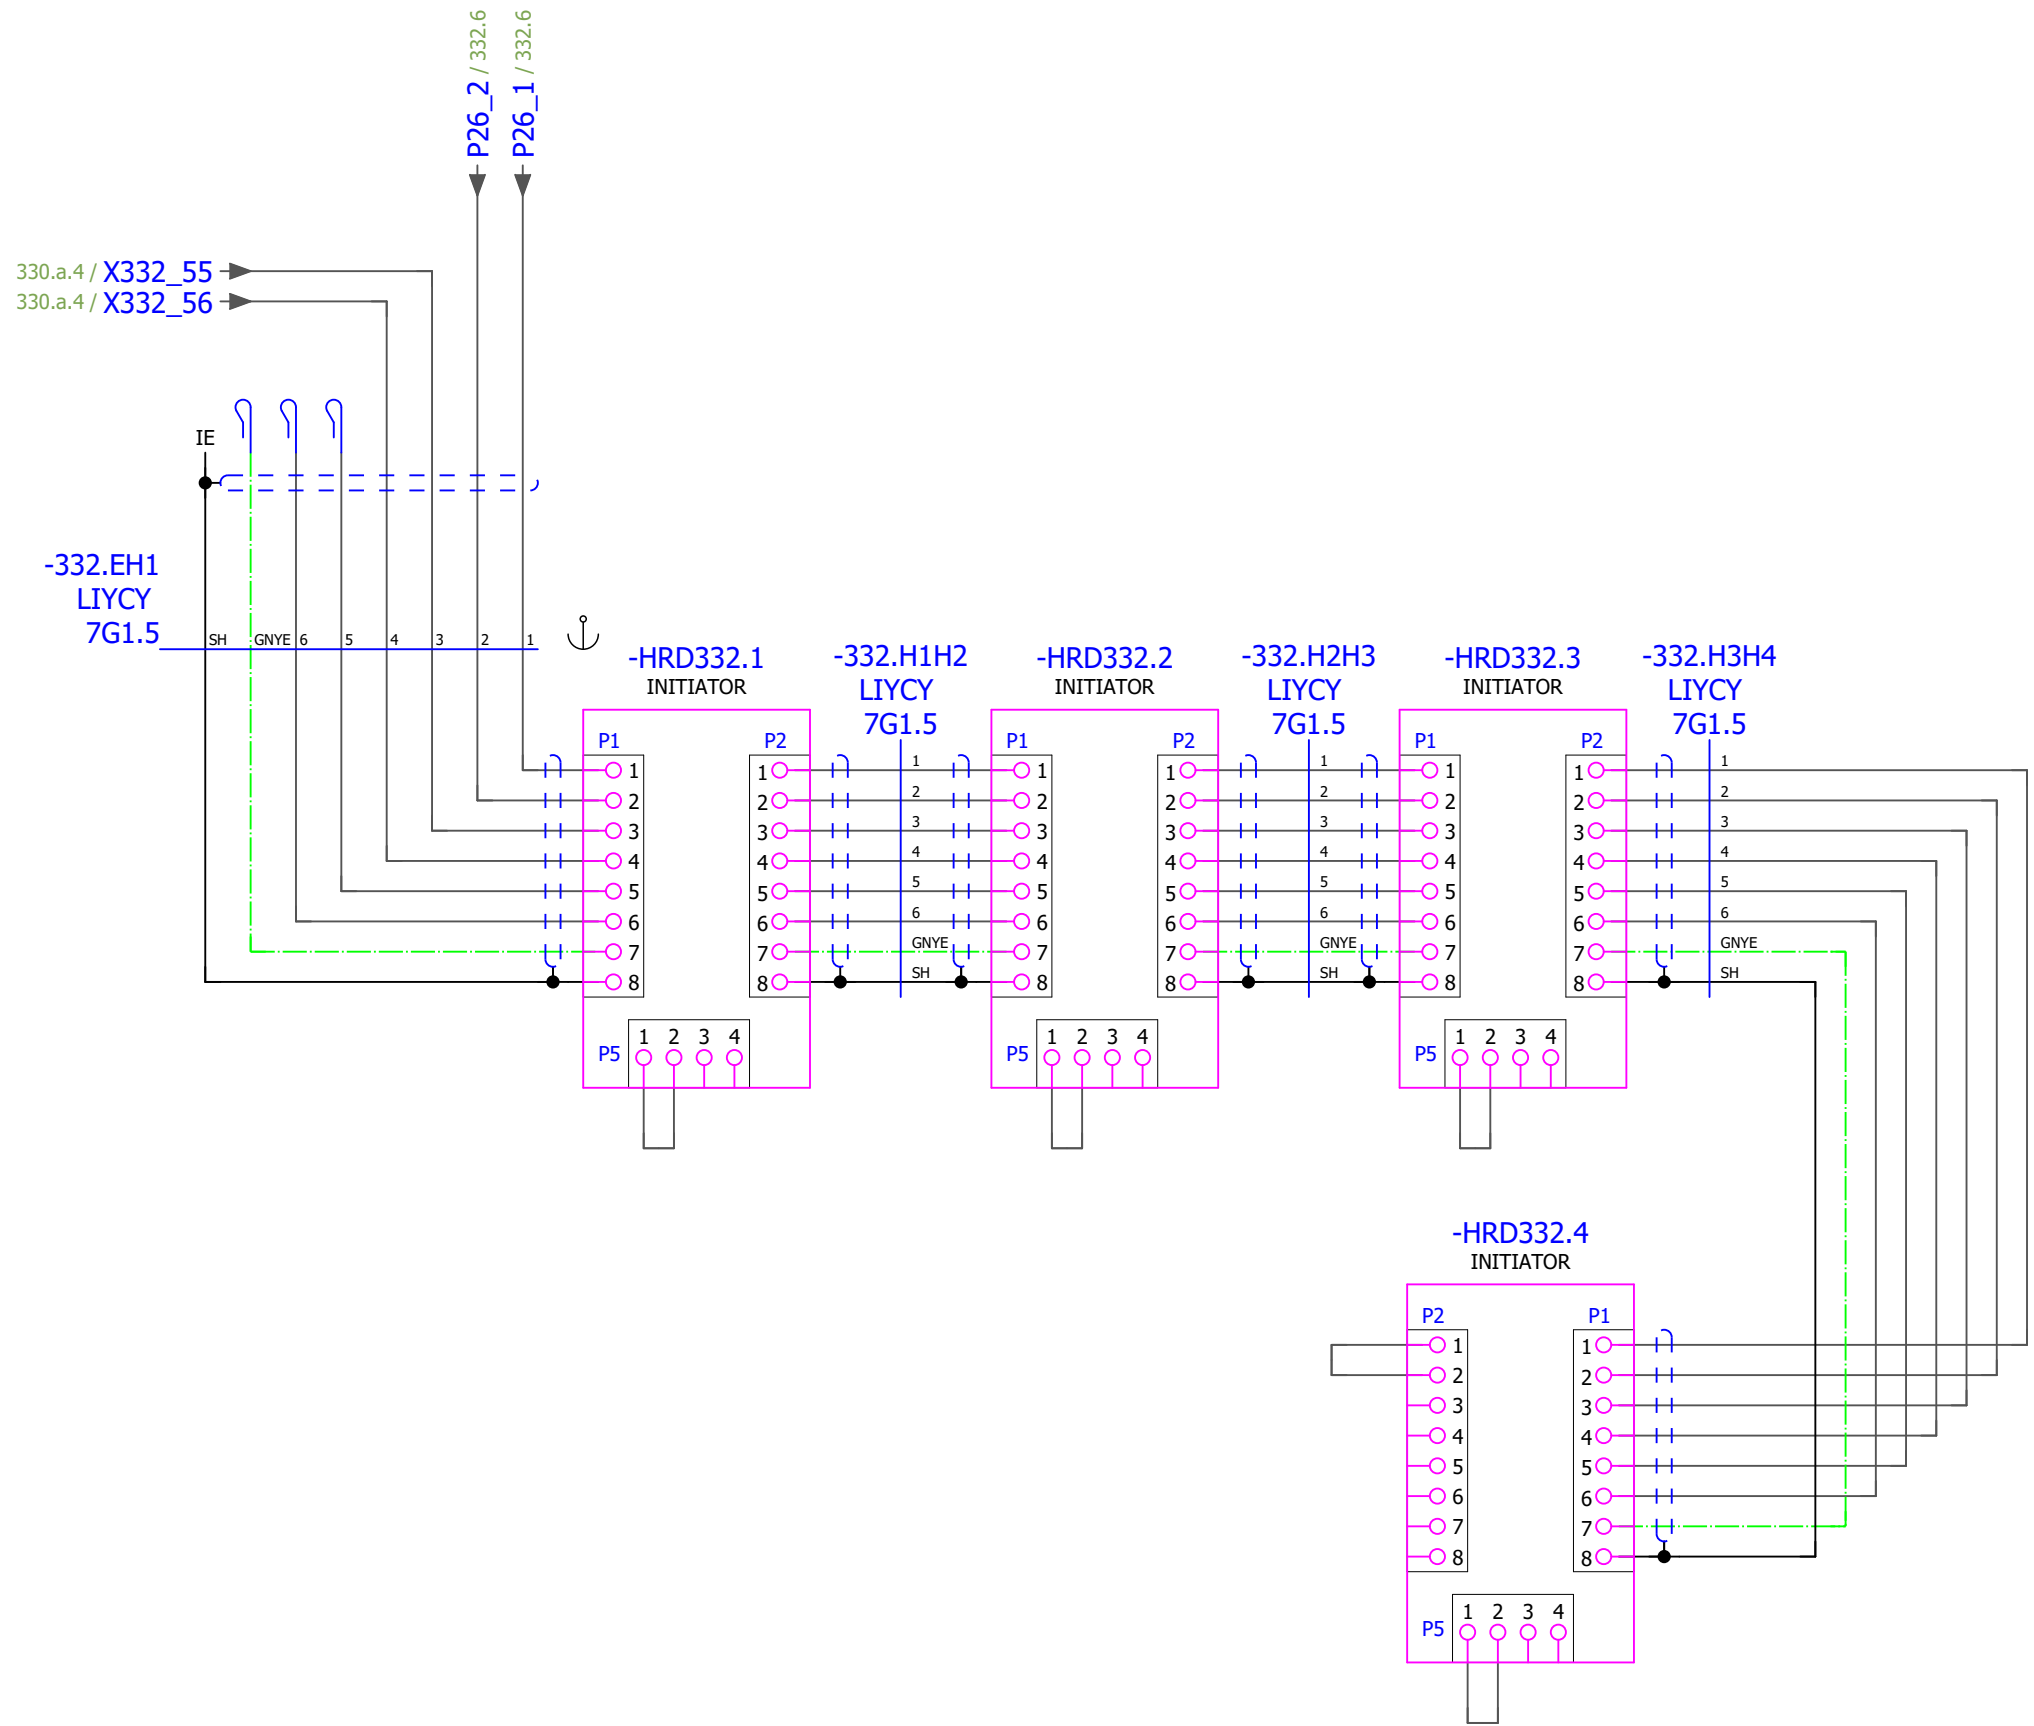


-EPC333
/338.4 /339.3

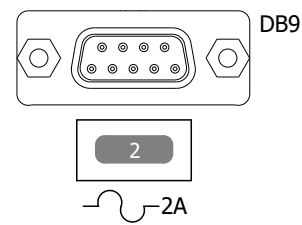


EPC Explosion Protection Controller


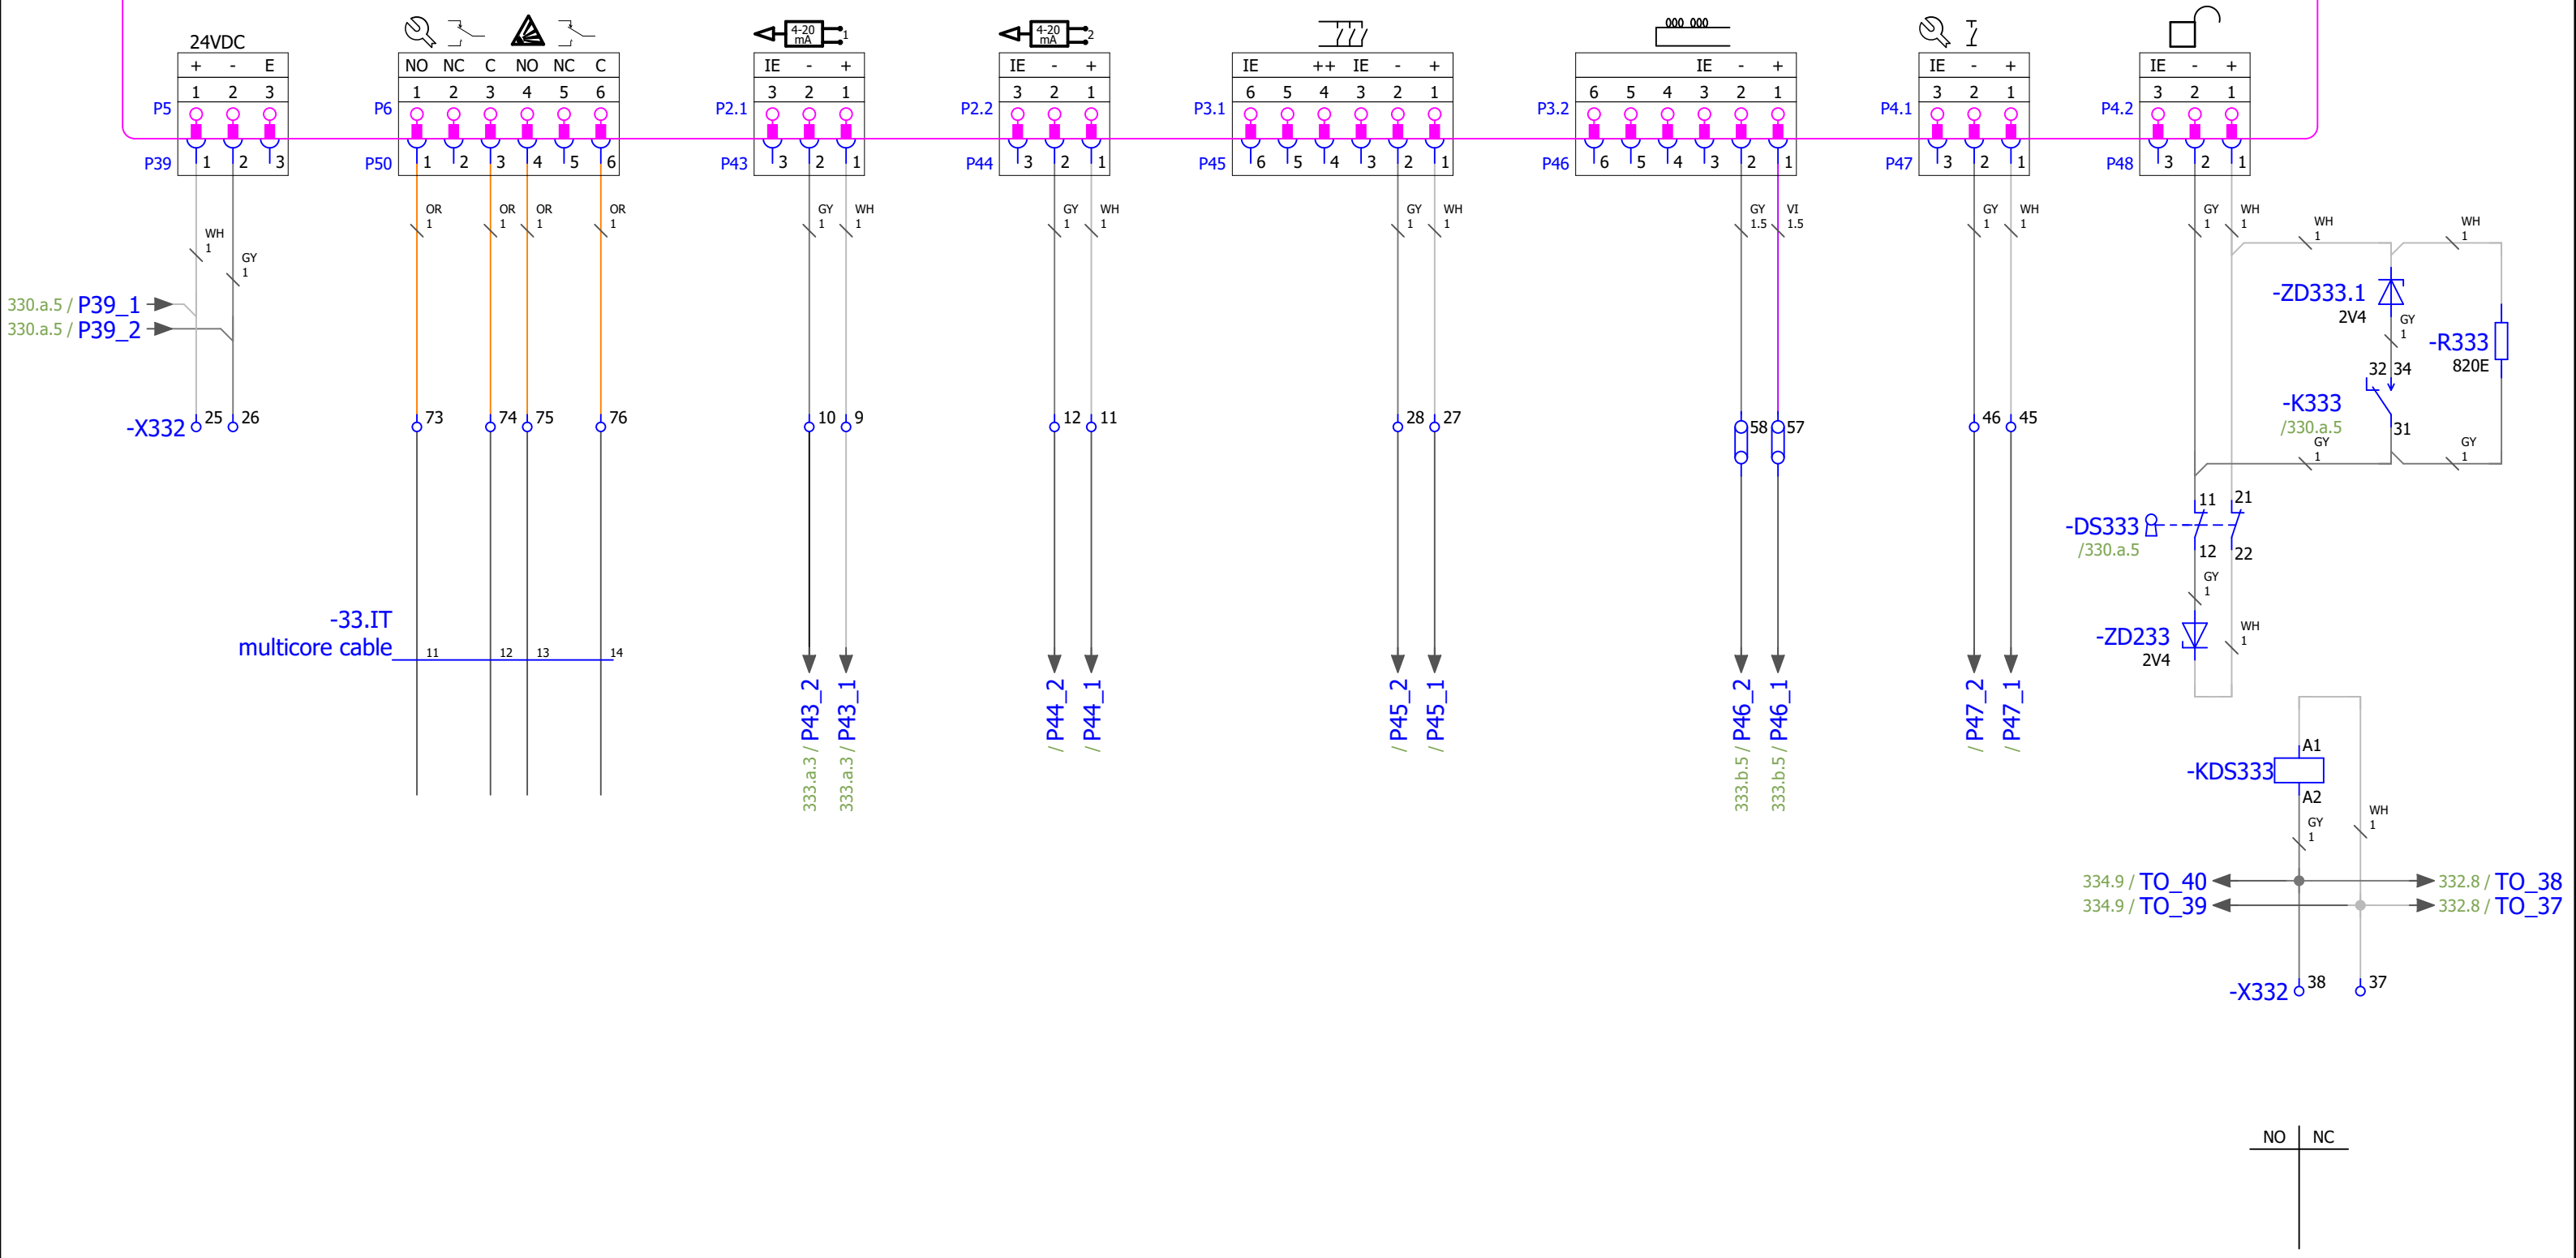


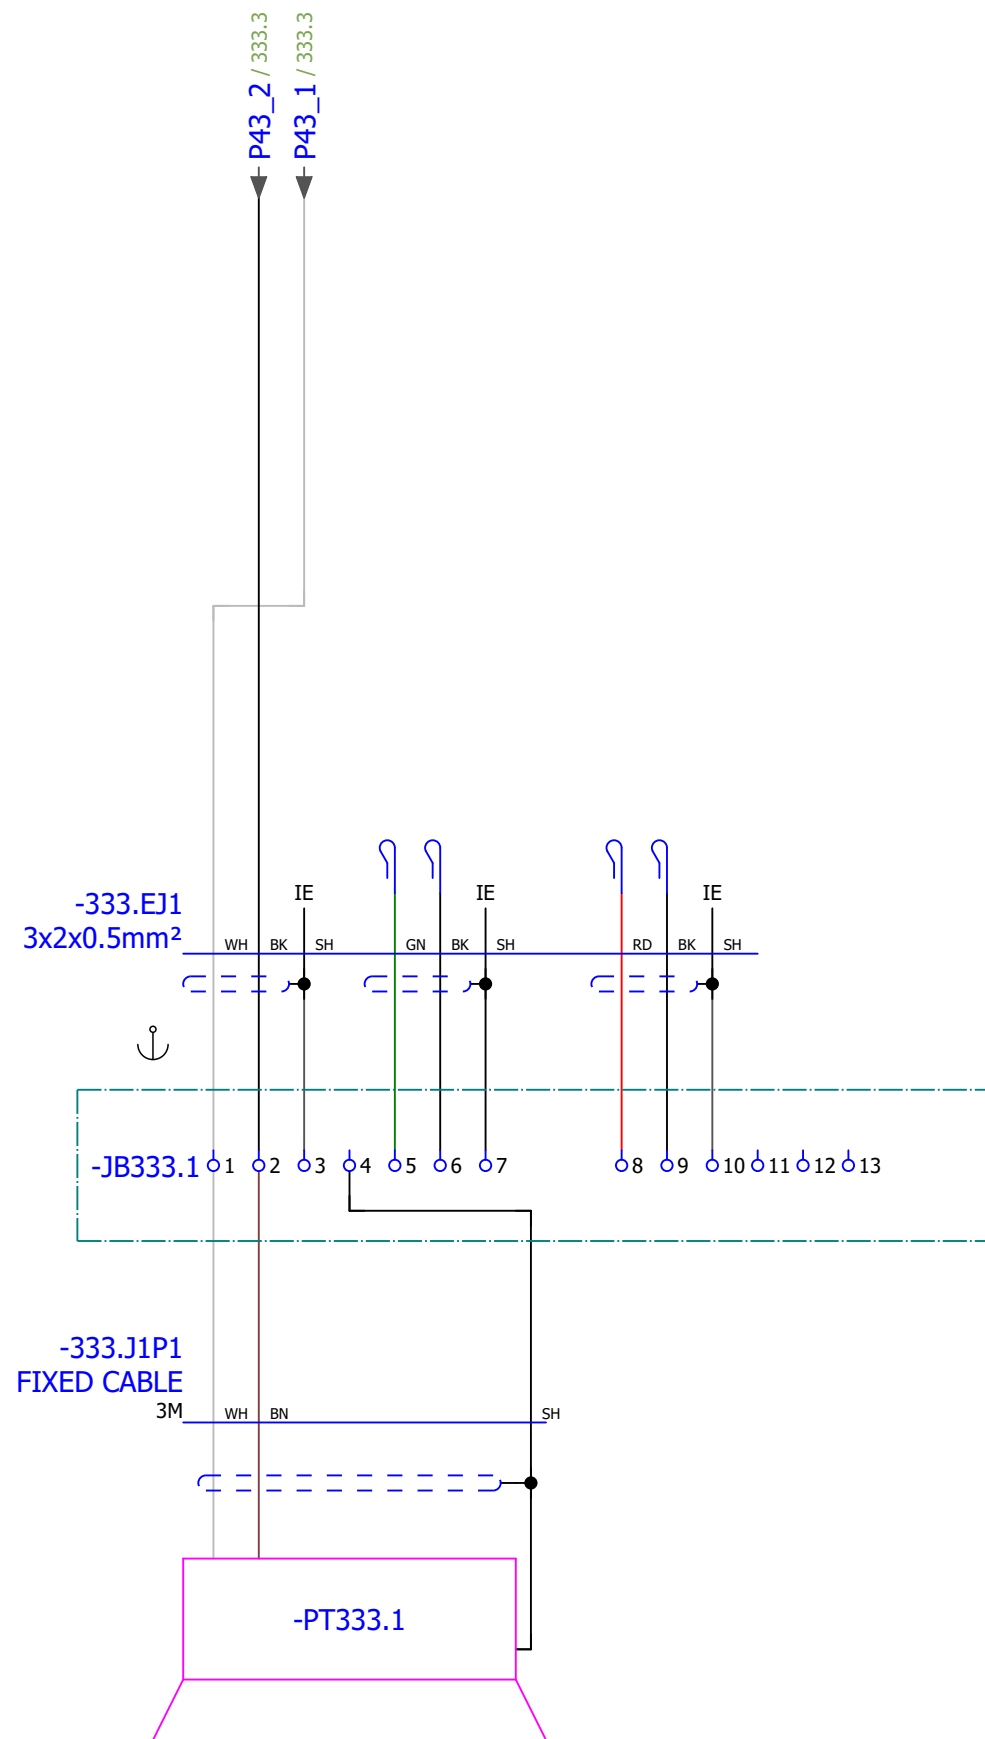


ATTENTION: Do not cut the breather tube from the detector(s) in the junction box

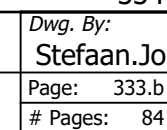

-EPC334
/338.3 /339.4

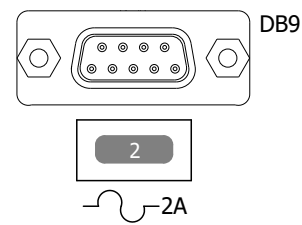


EPC Explosion Protection Controller

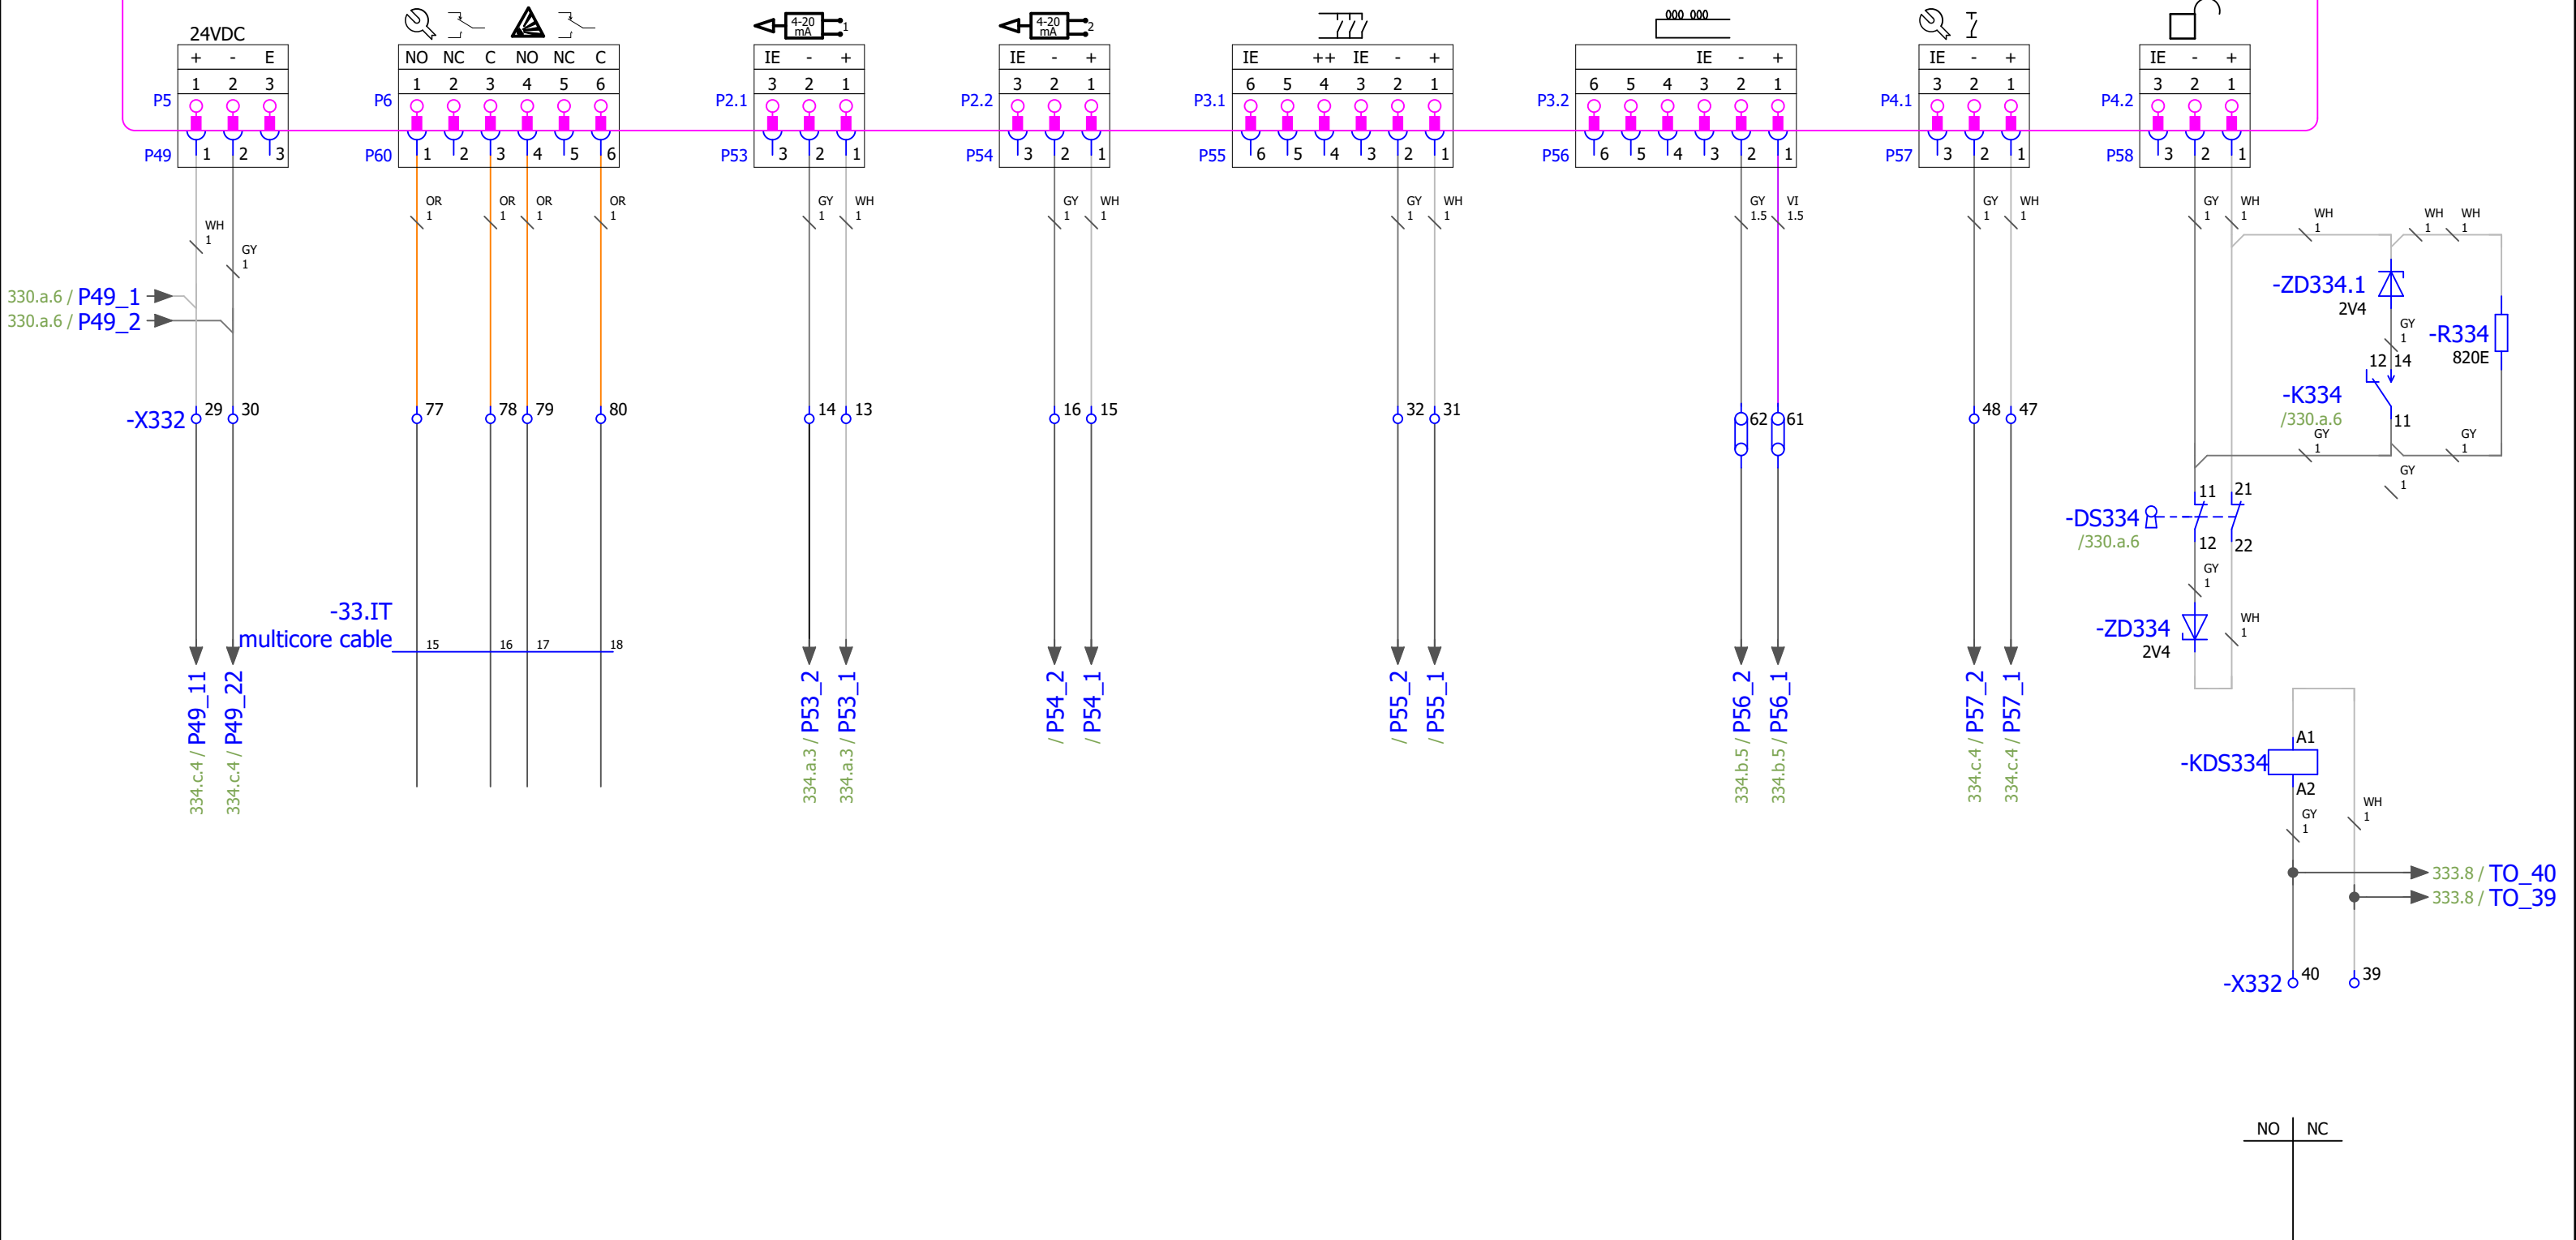



Previous:
333.b

Next:
334.a

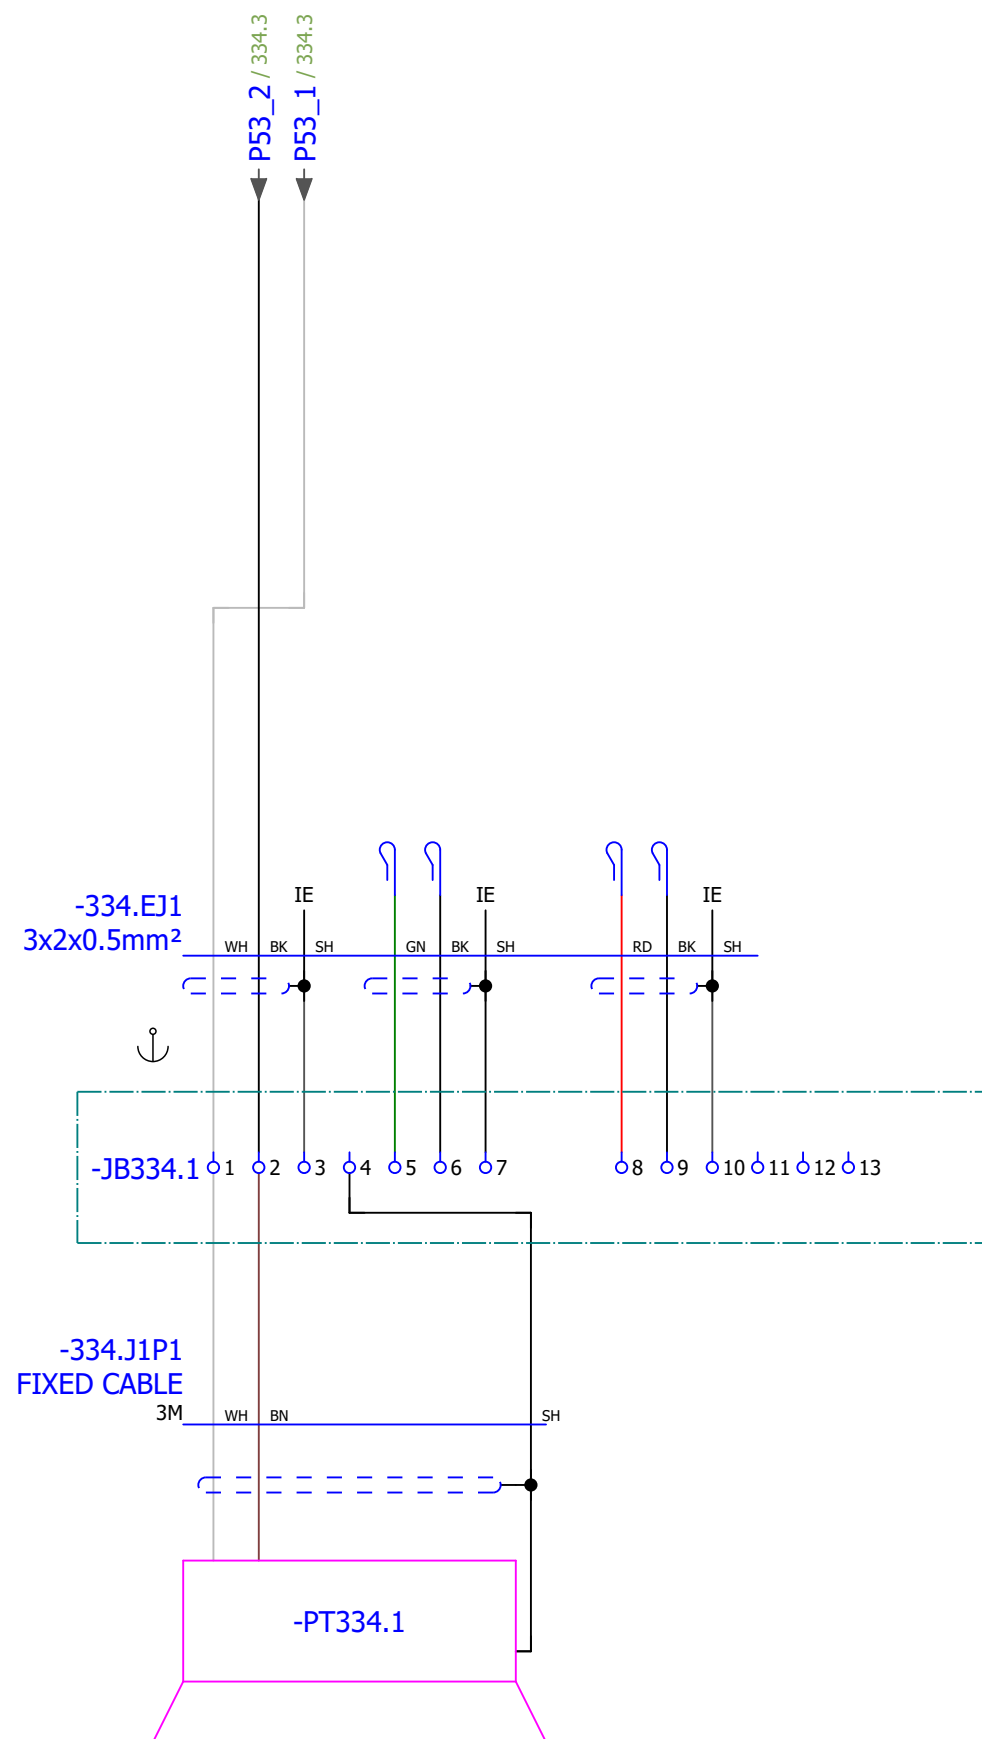

ATTENTION: Do not cut the breather tube from the detector(s) in the junction box

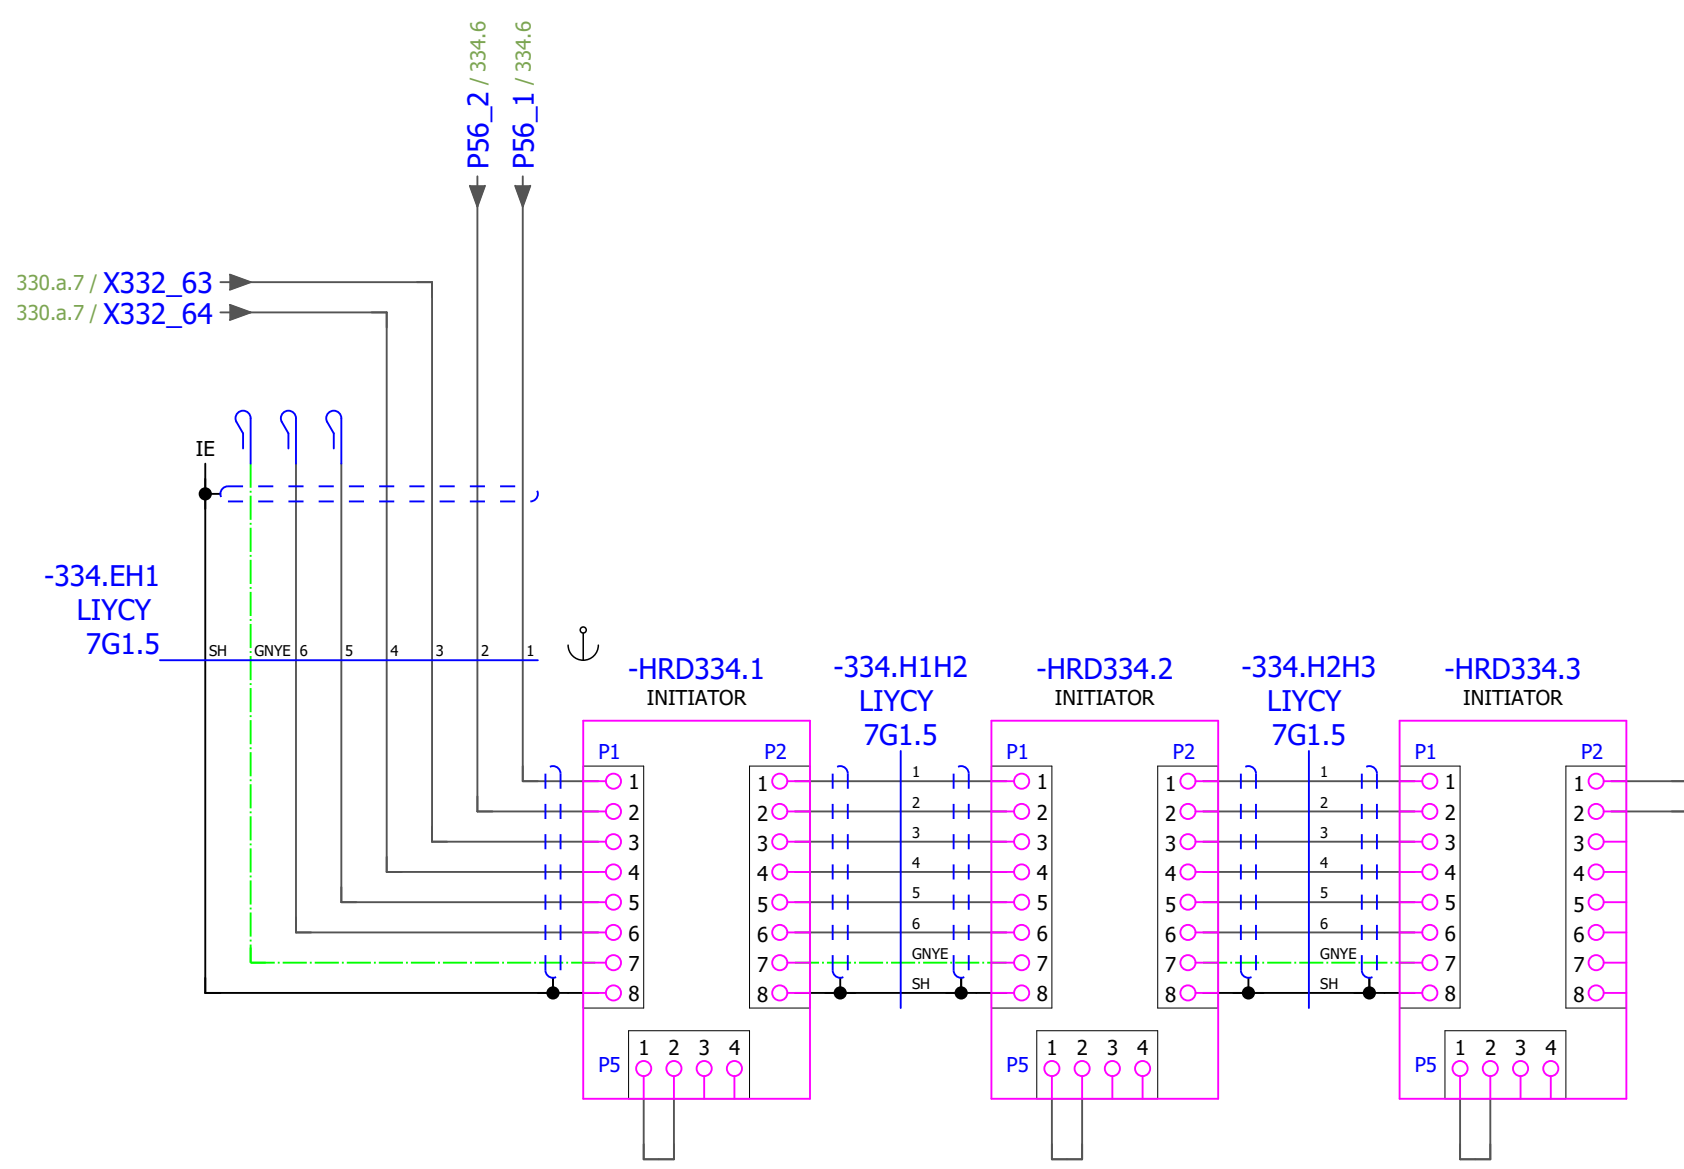






-RC833
/338.8




RC8 *Relay Contact module*

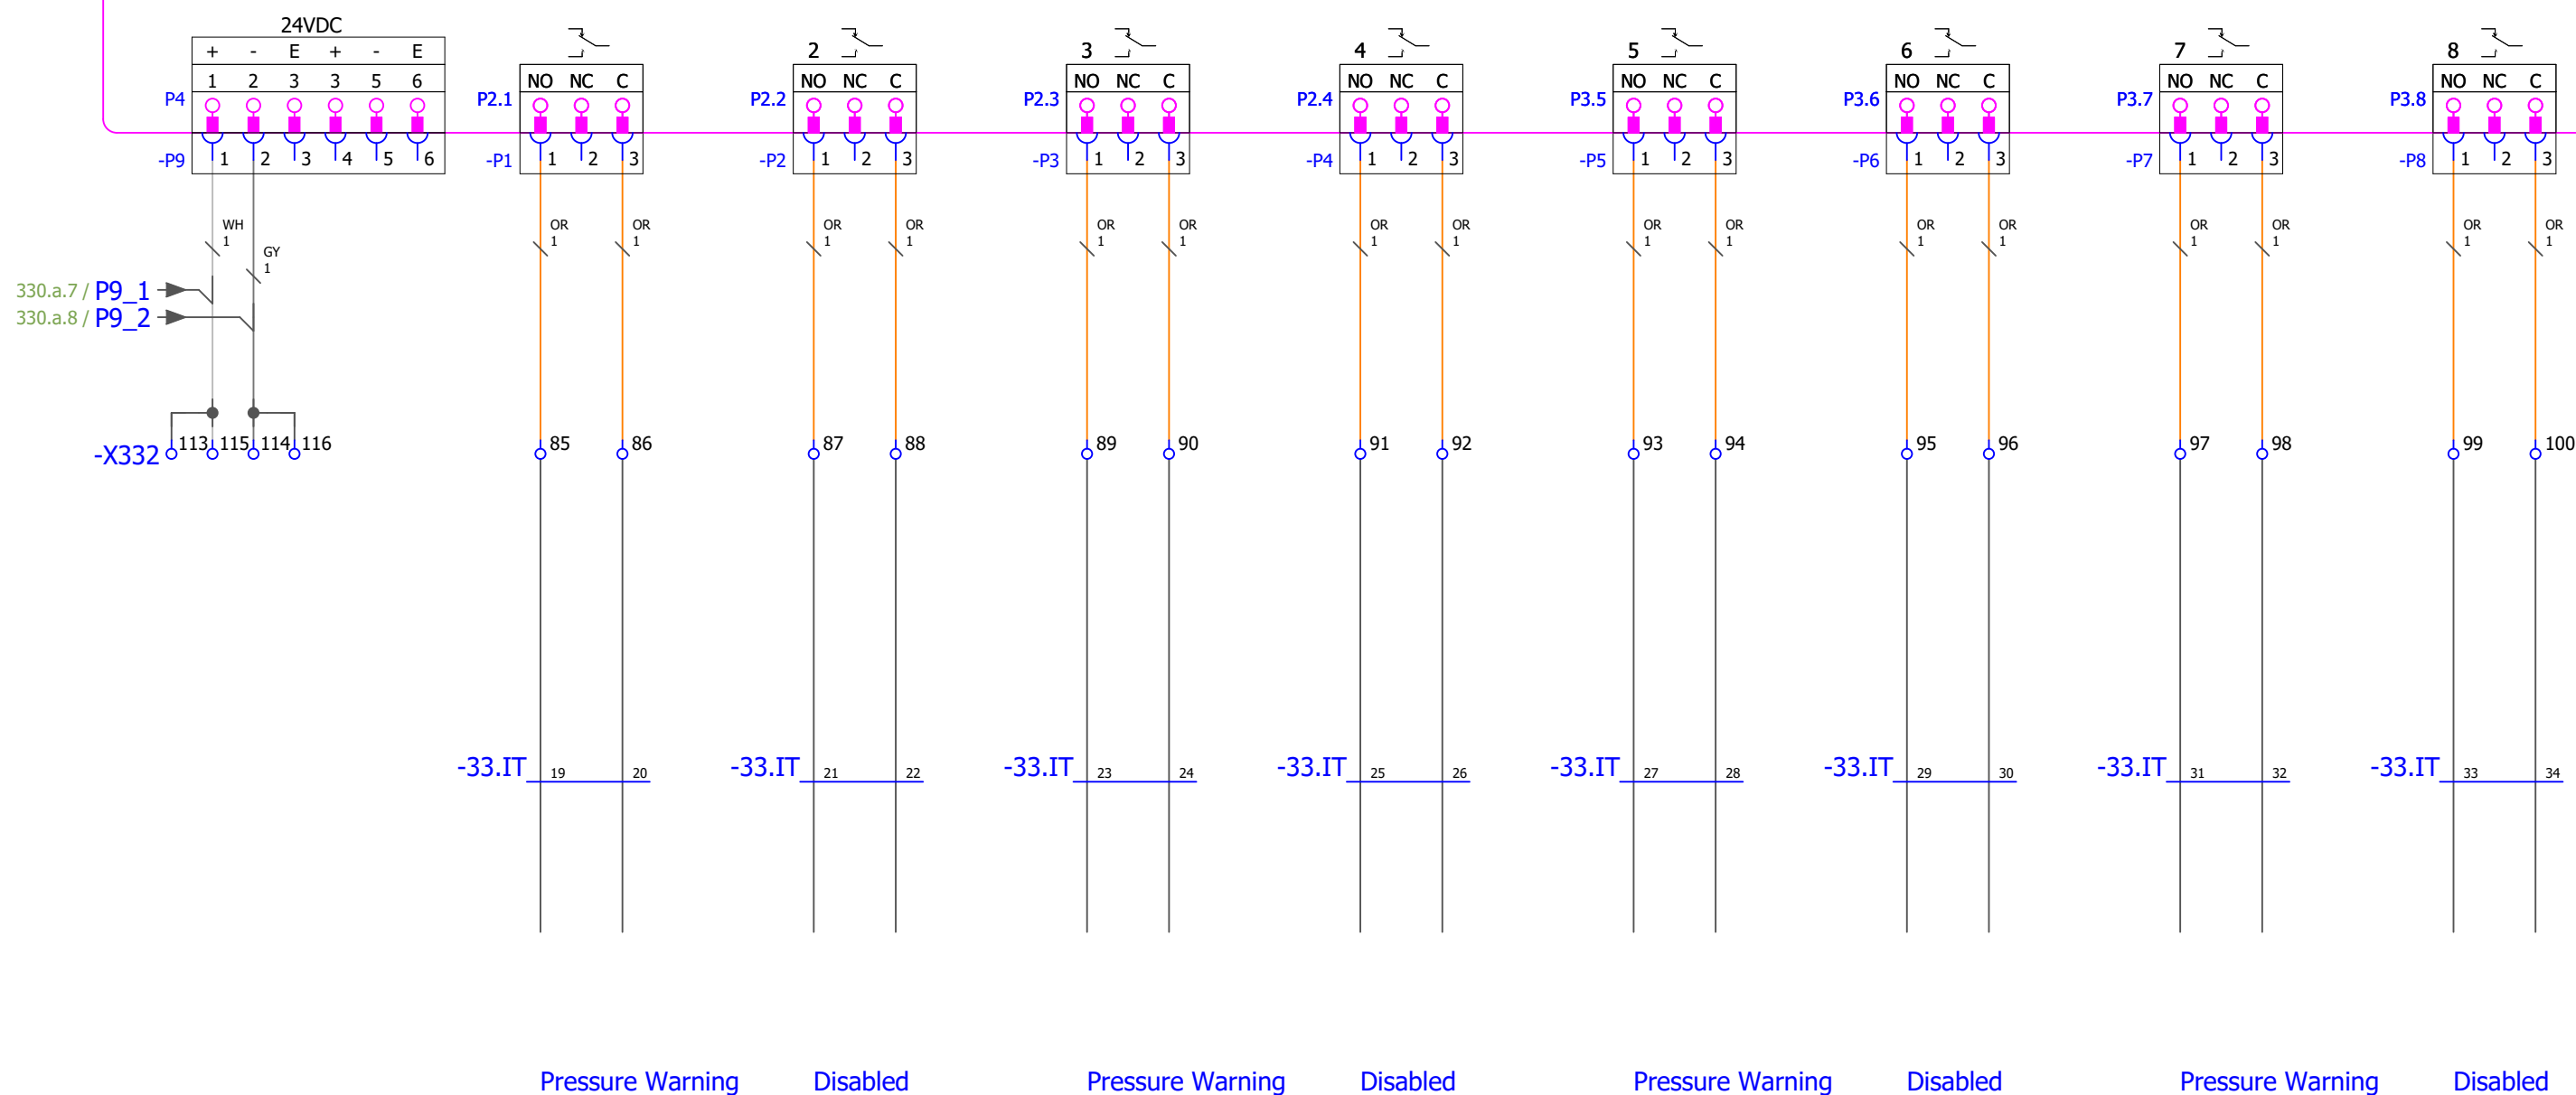


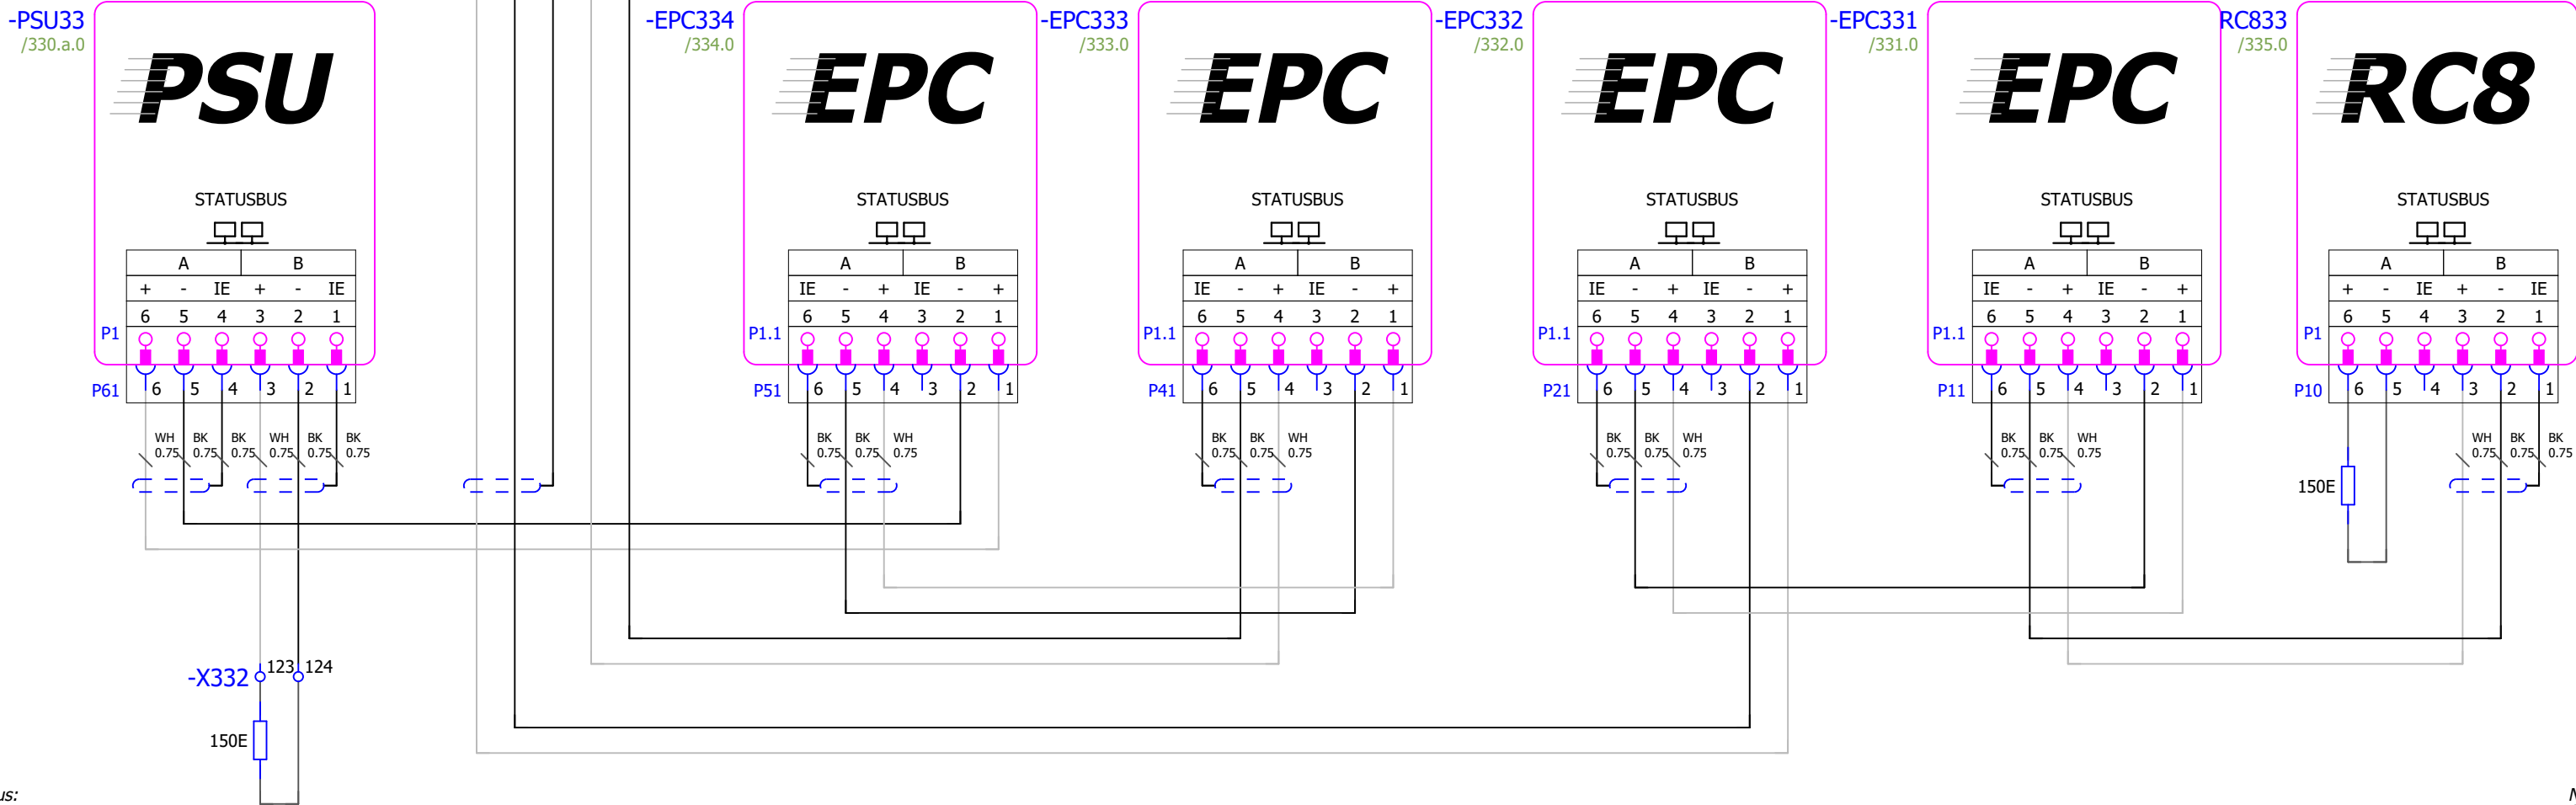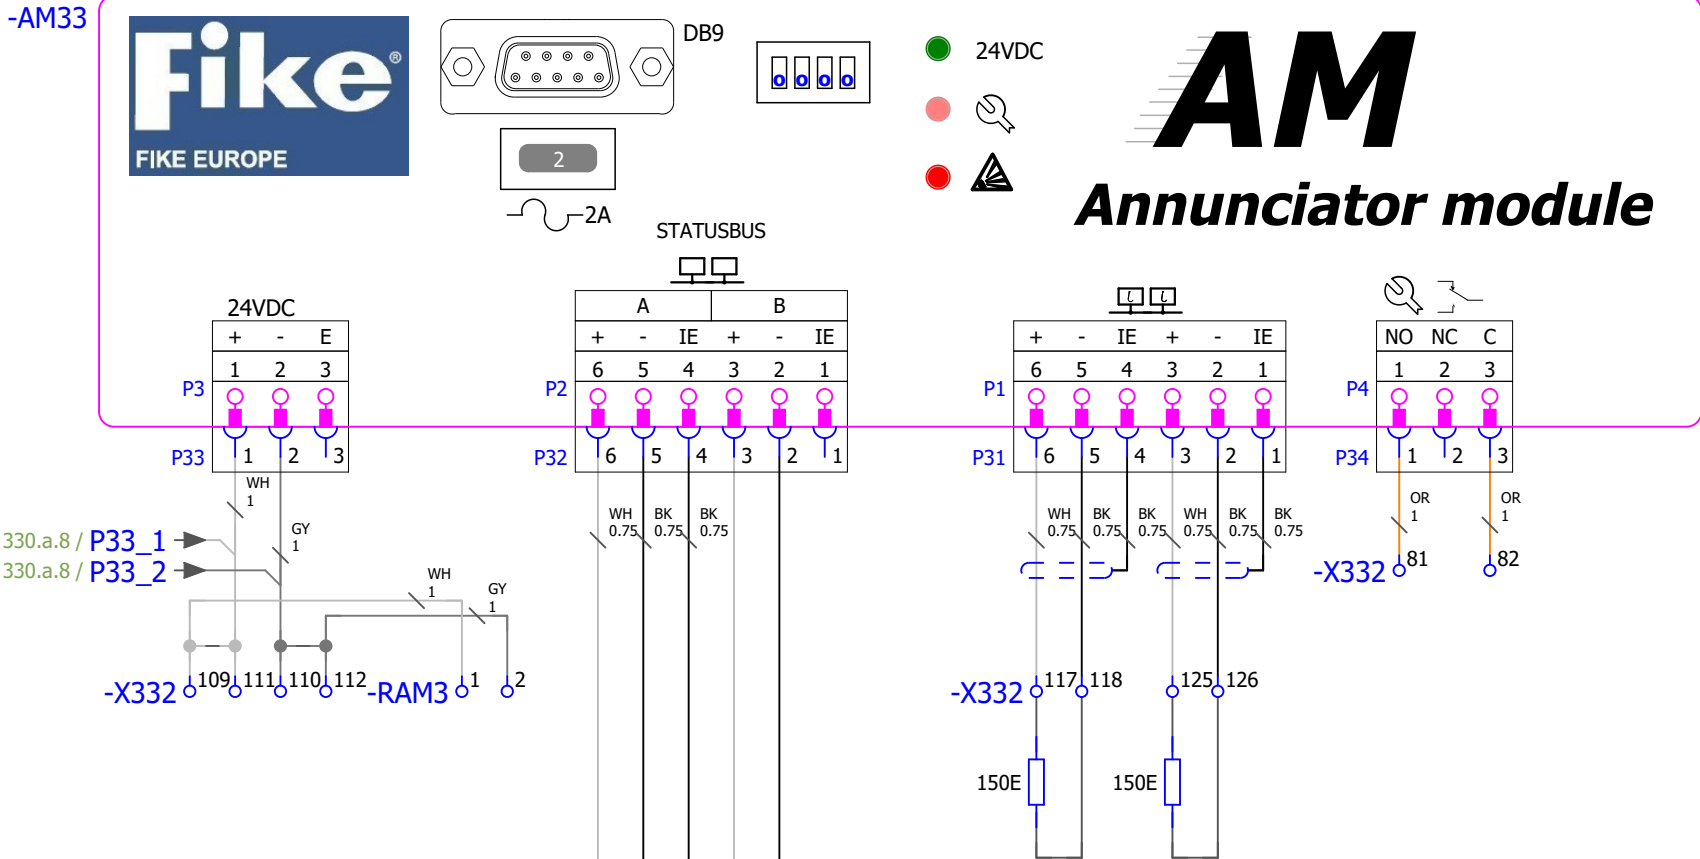



Previous:
337

Next:
339

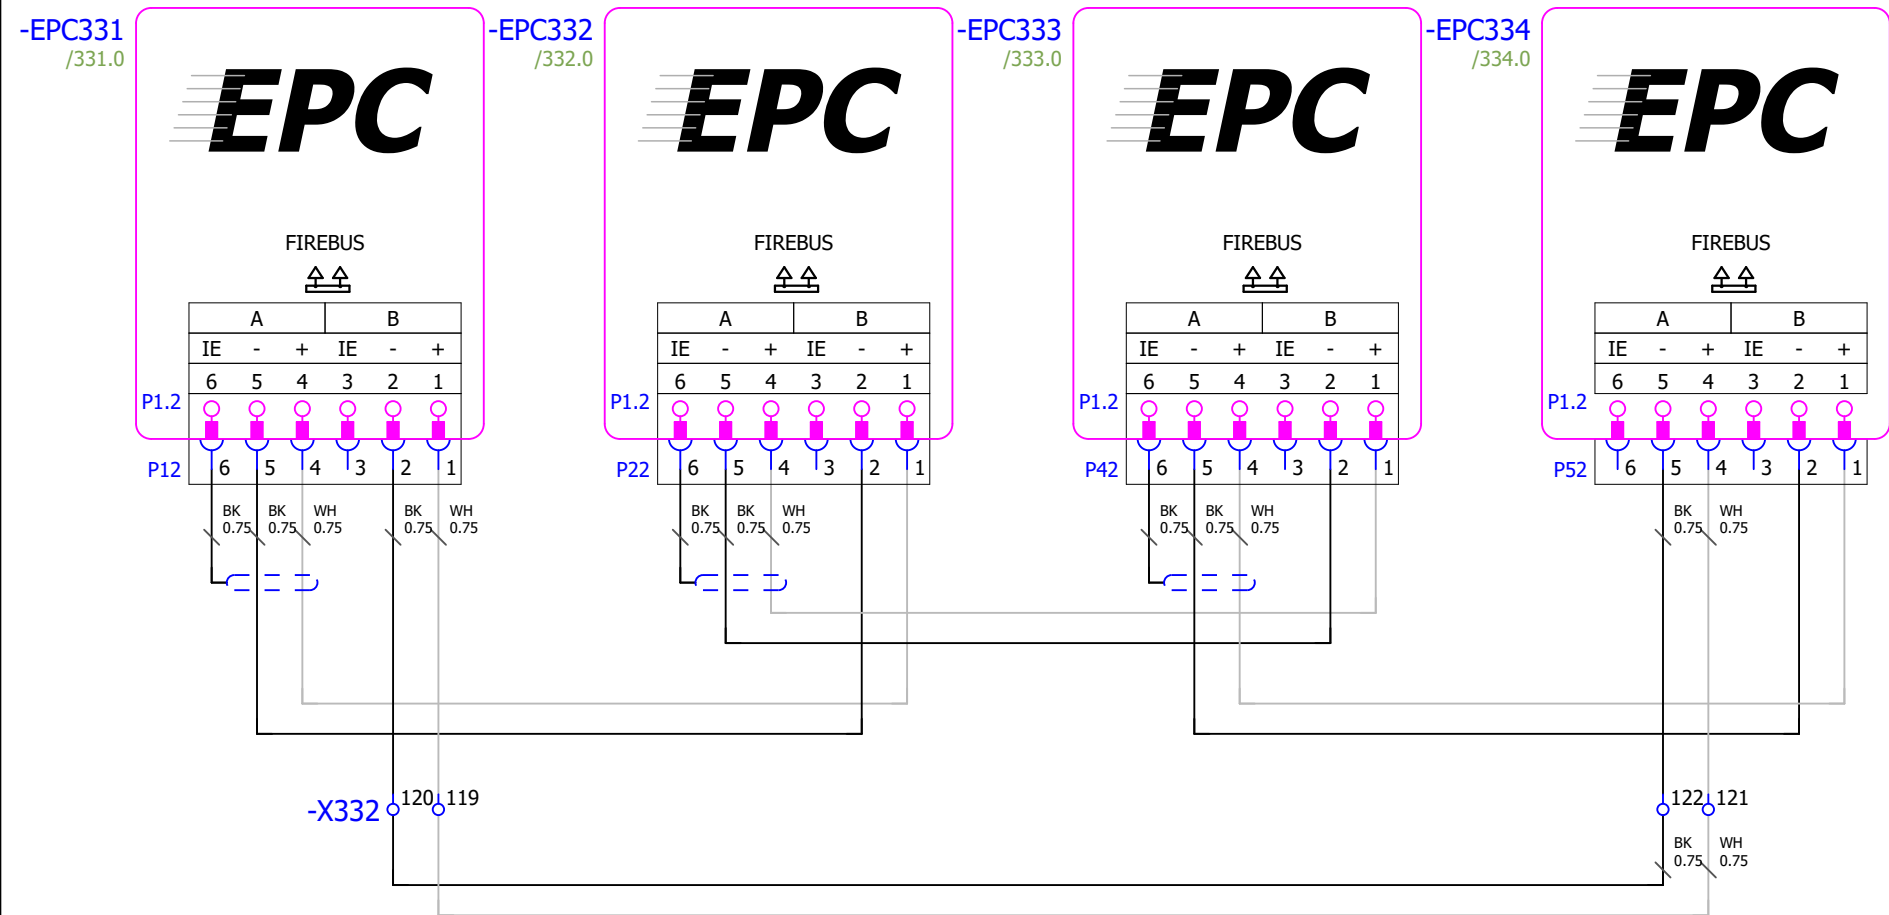




DB9





PSU


Power Supply unit

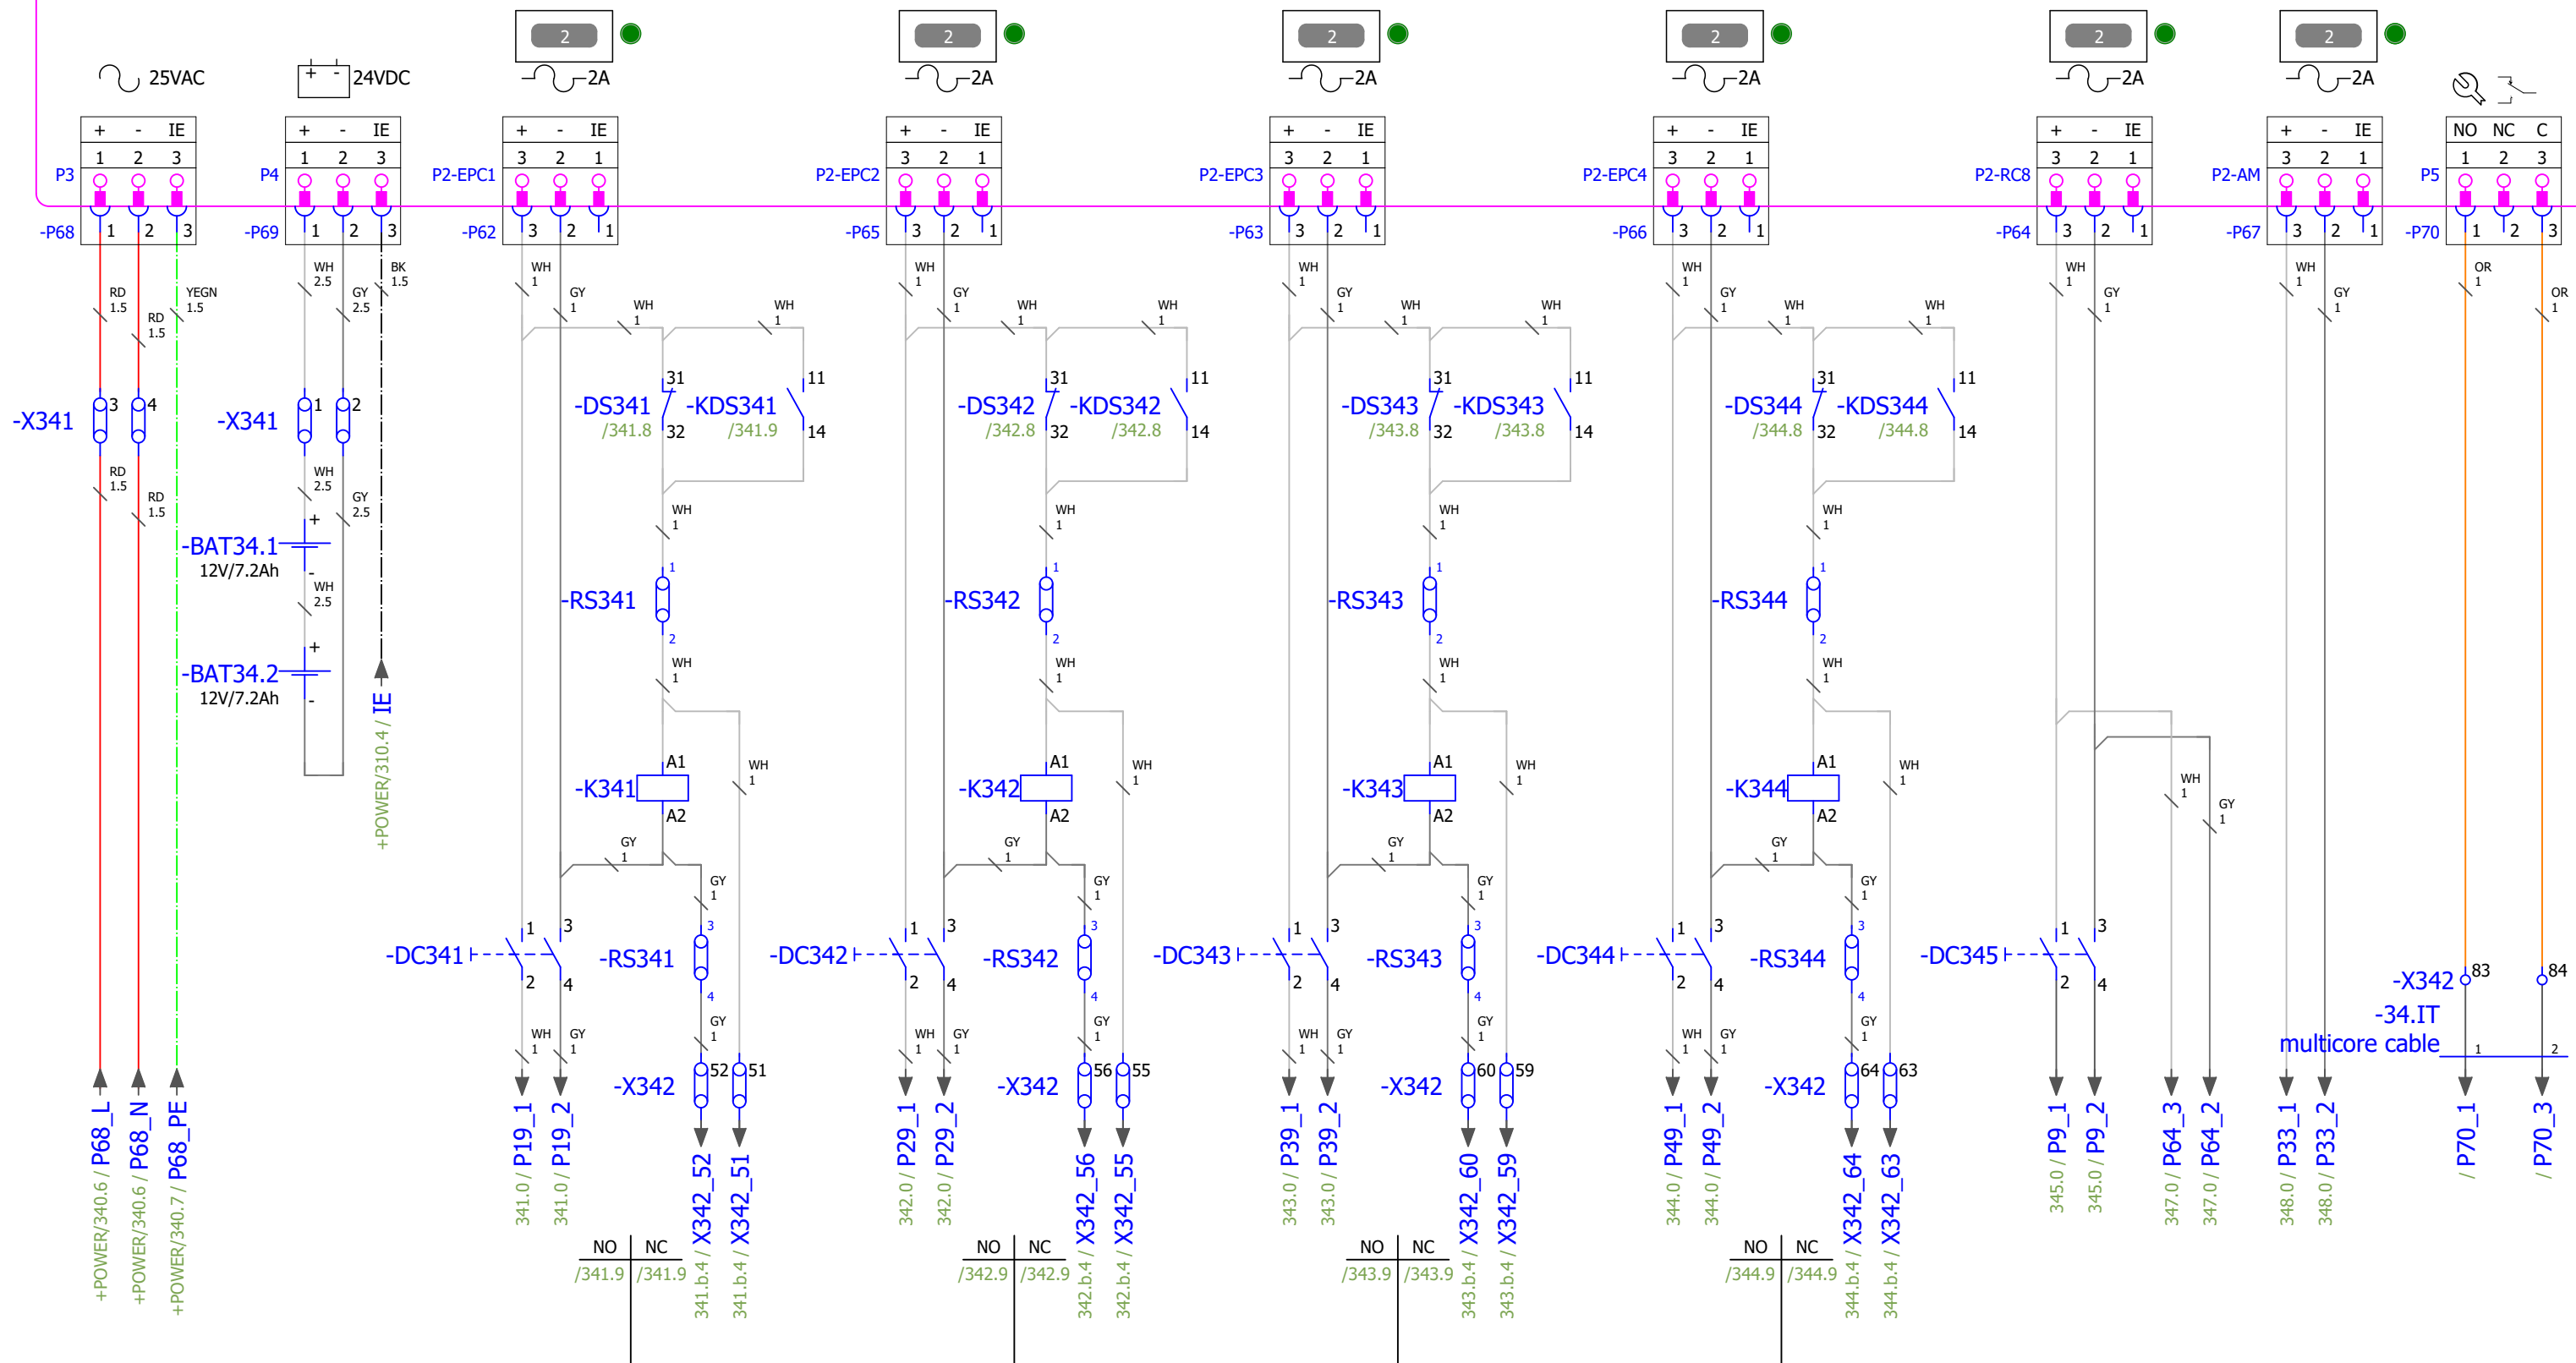


-EPC341
/348.7 /349.0

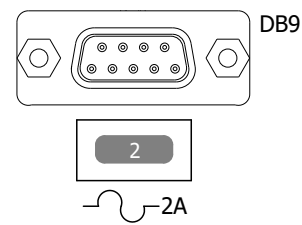


EPC Explosion Protection Controller


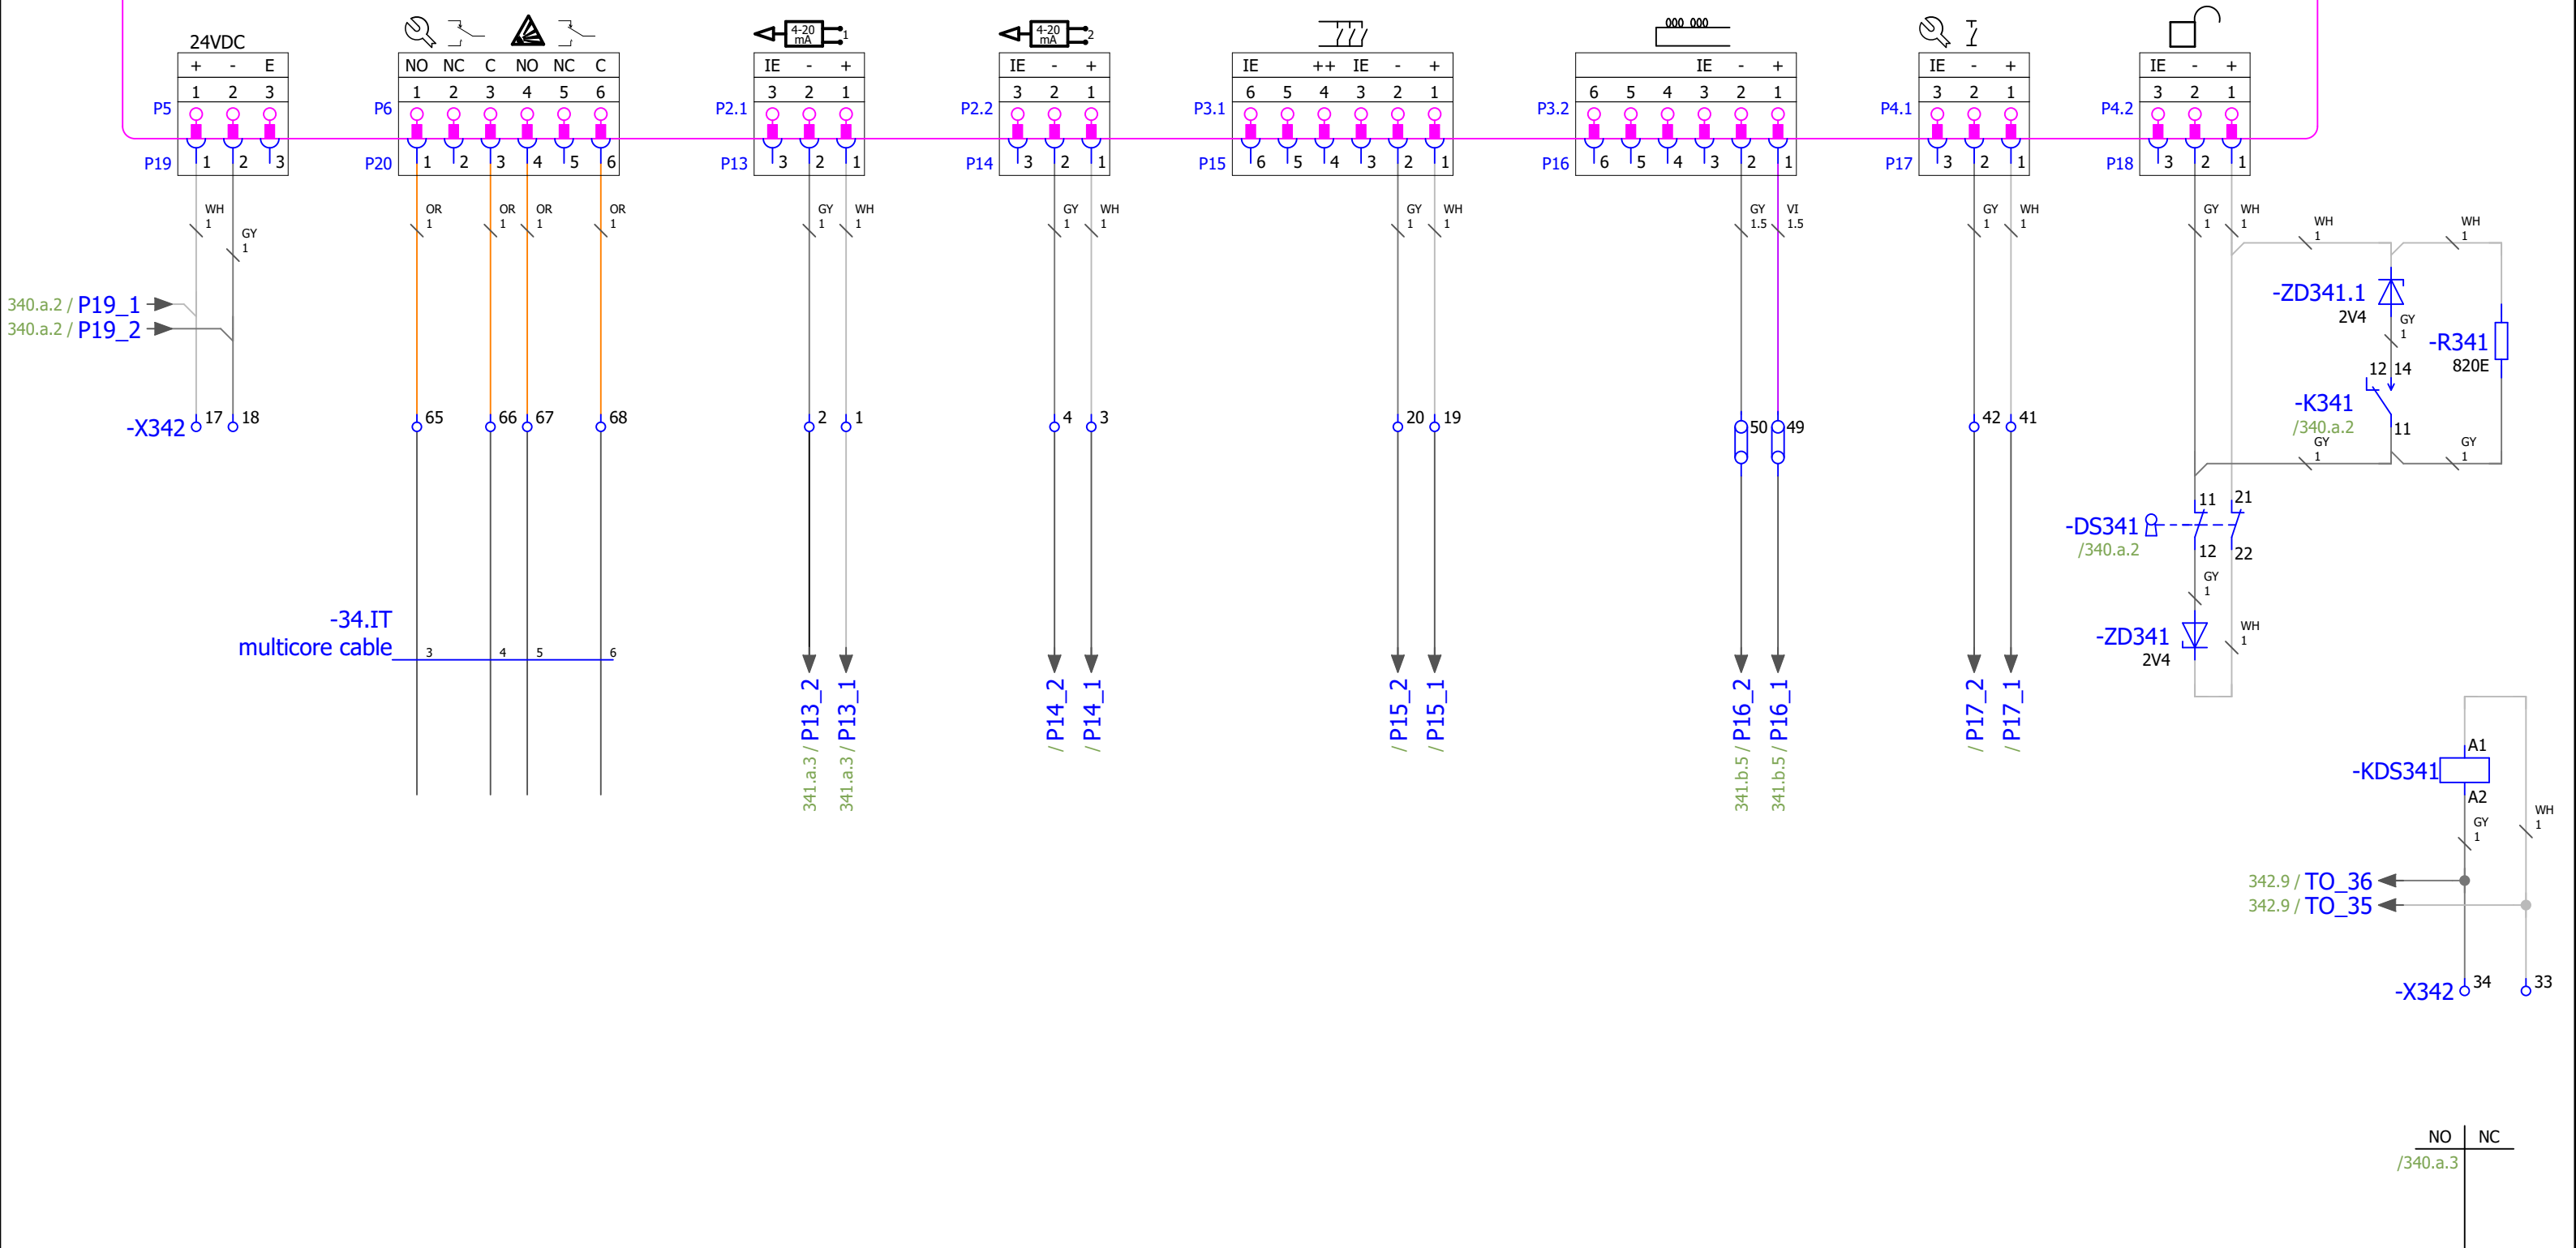


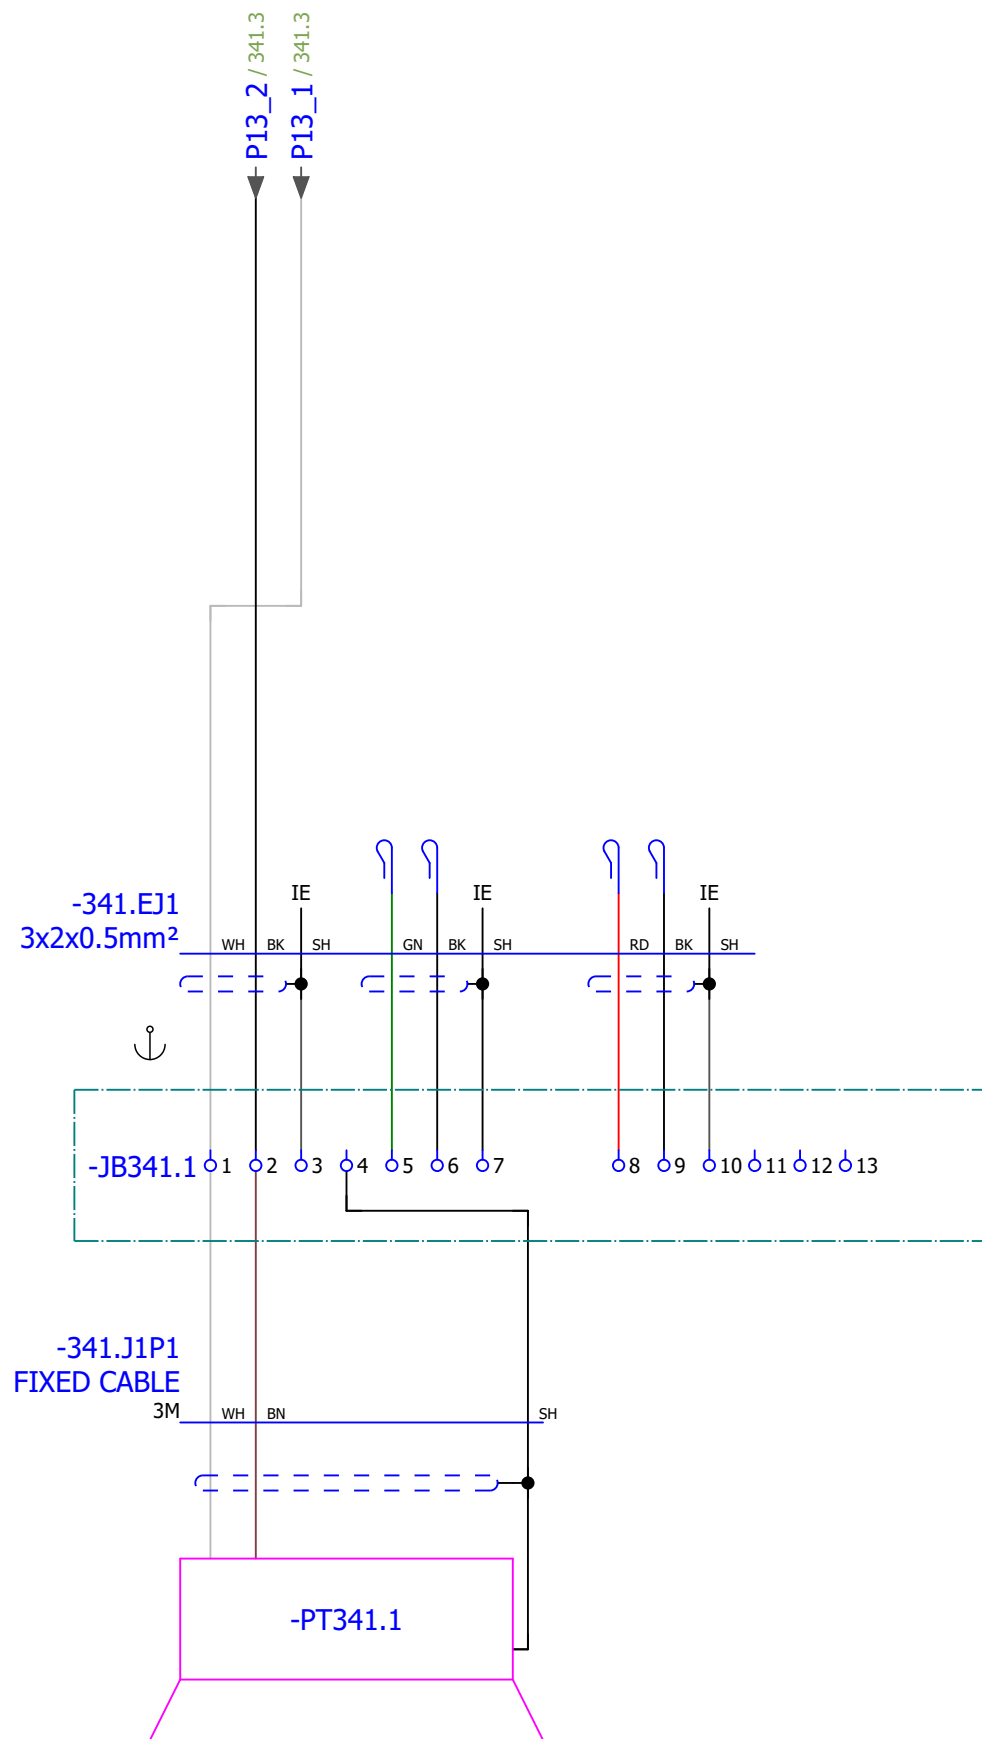


ATTENTION: Do not cut the breather tube from the detector(s) in the junction box

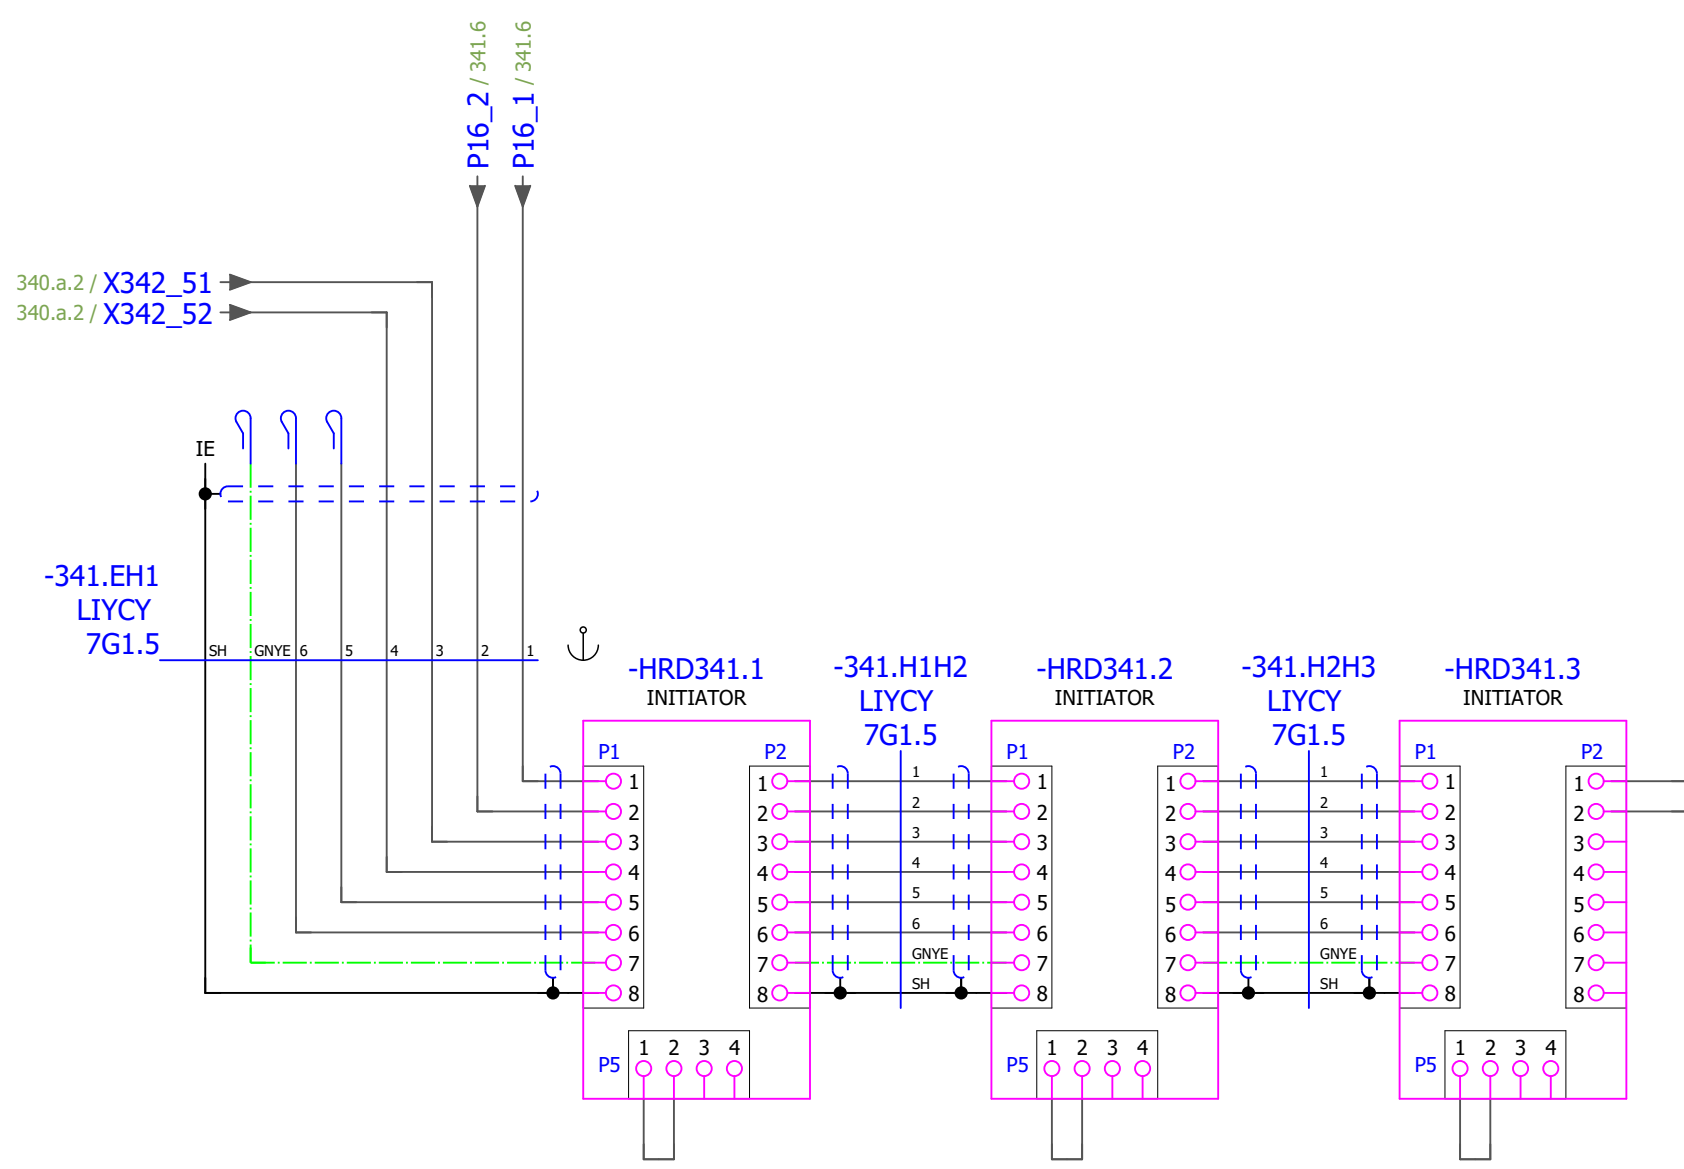


-EPC342
/348.5 /349.1

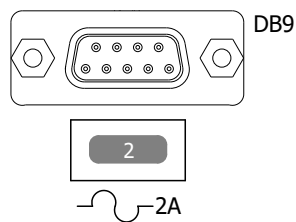



EPC Explosion Protection Controller

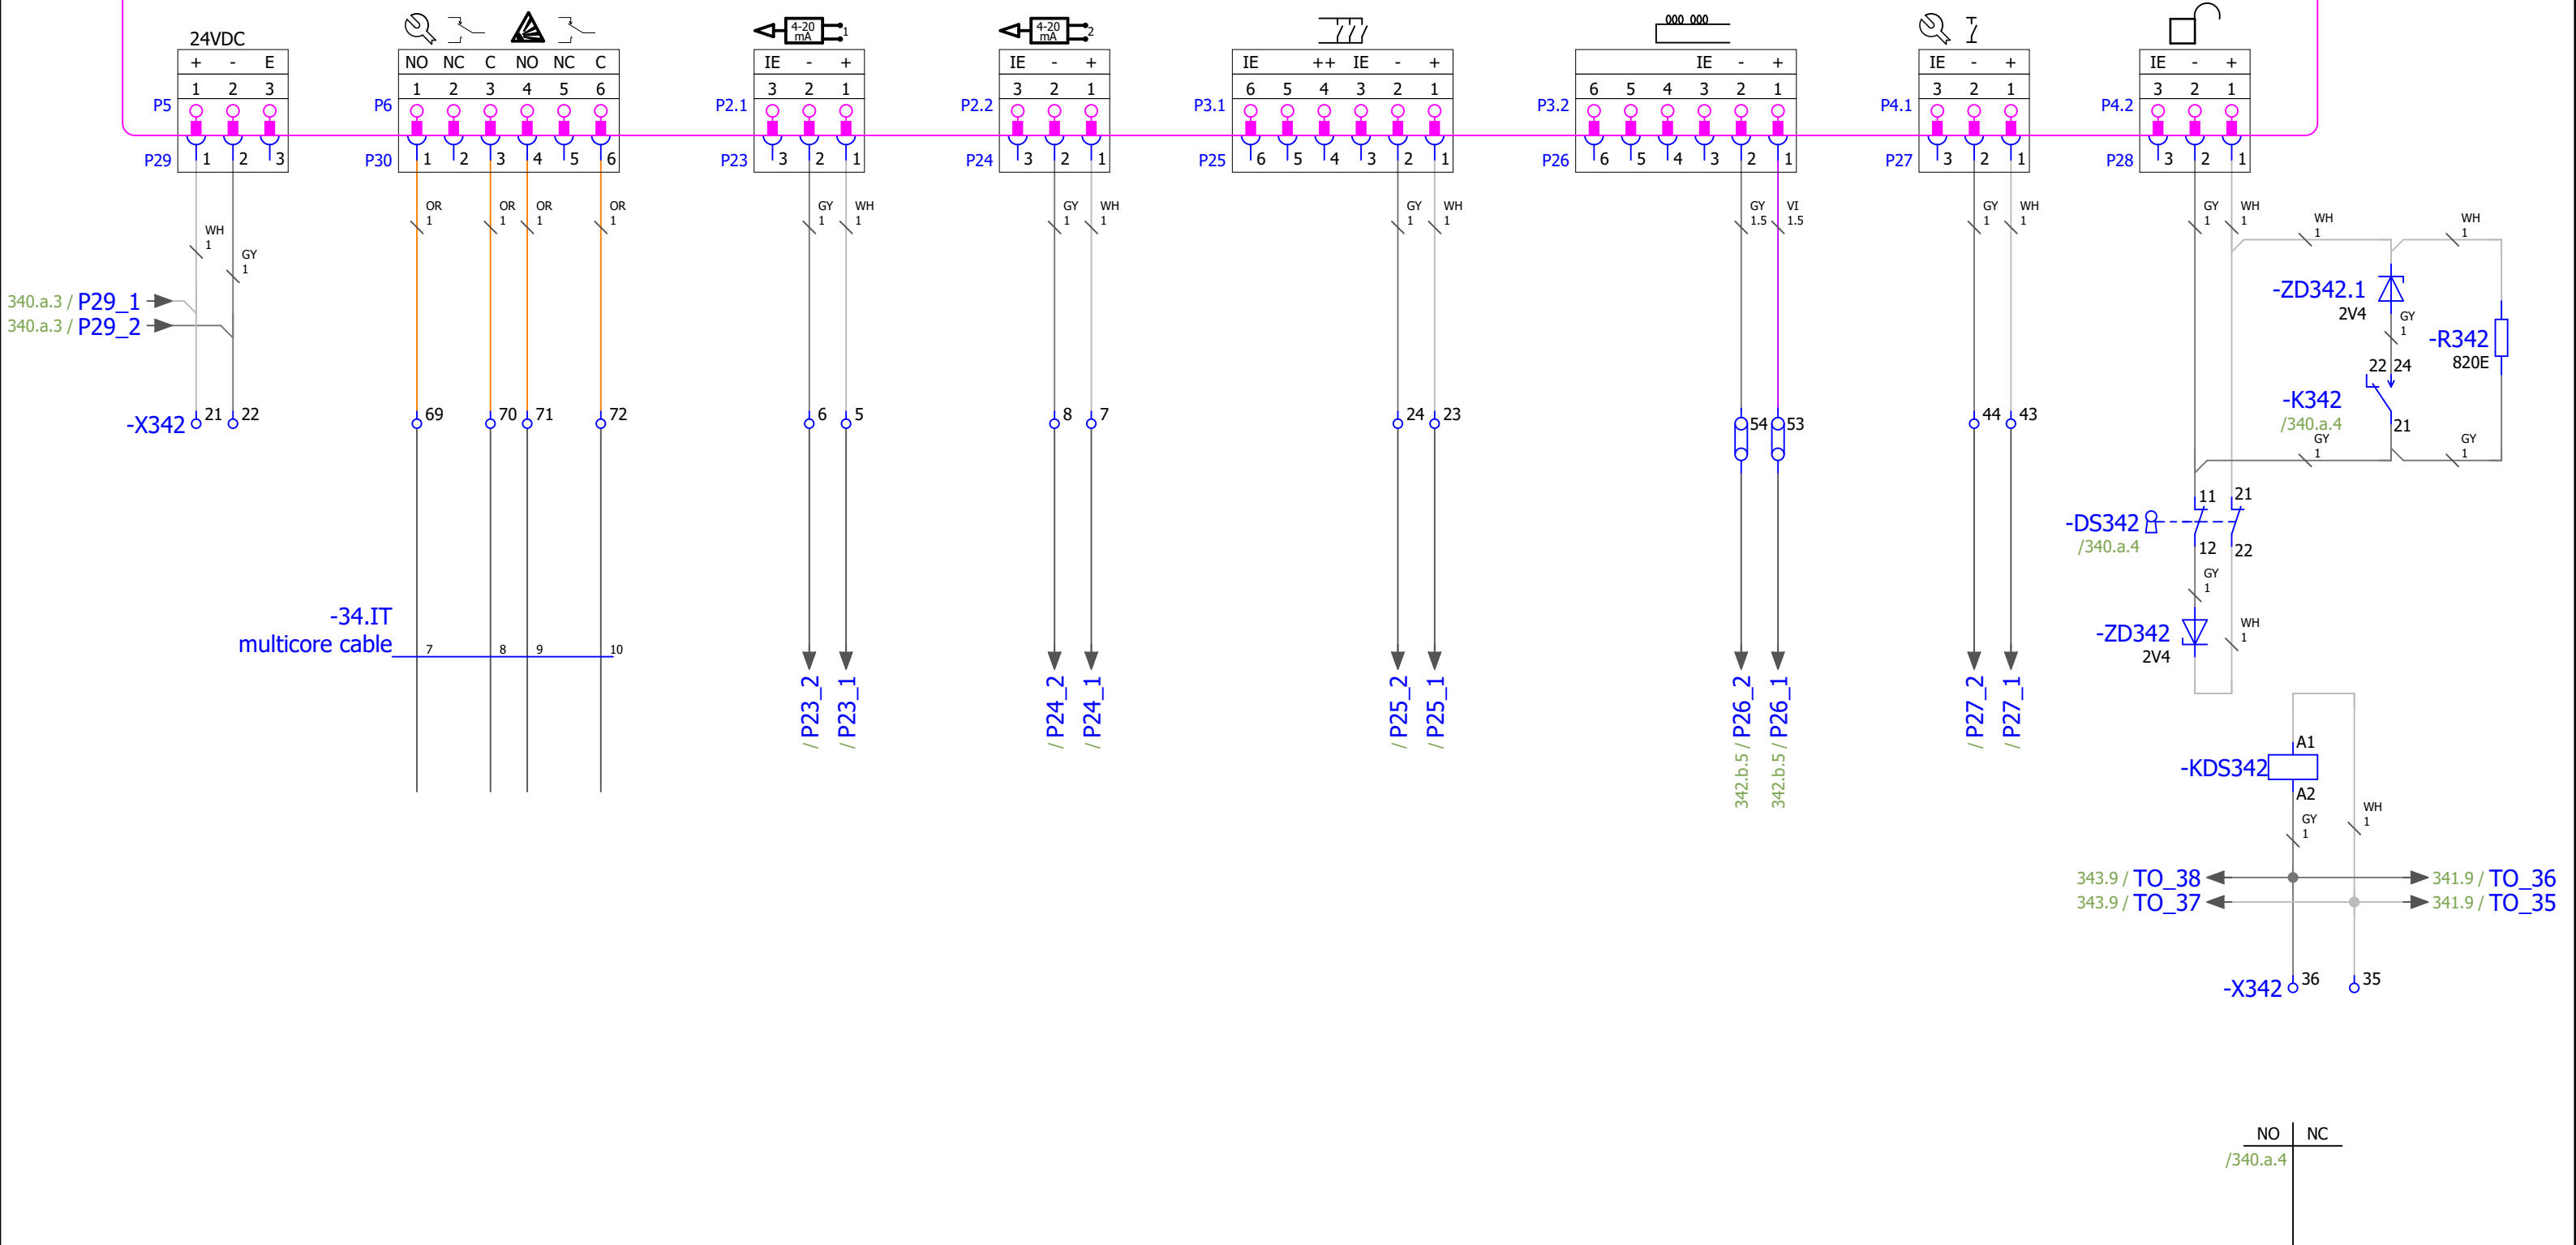


Previous:
341.b

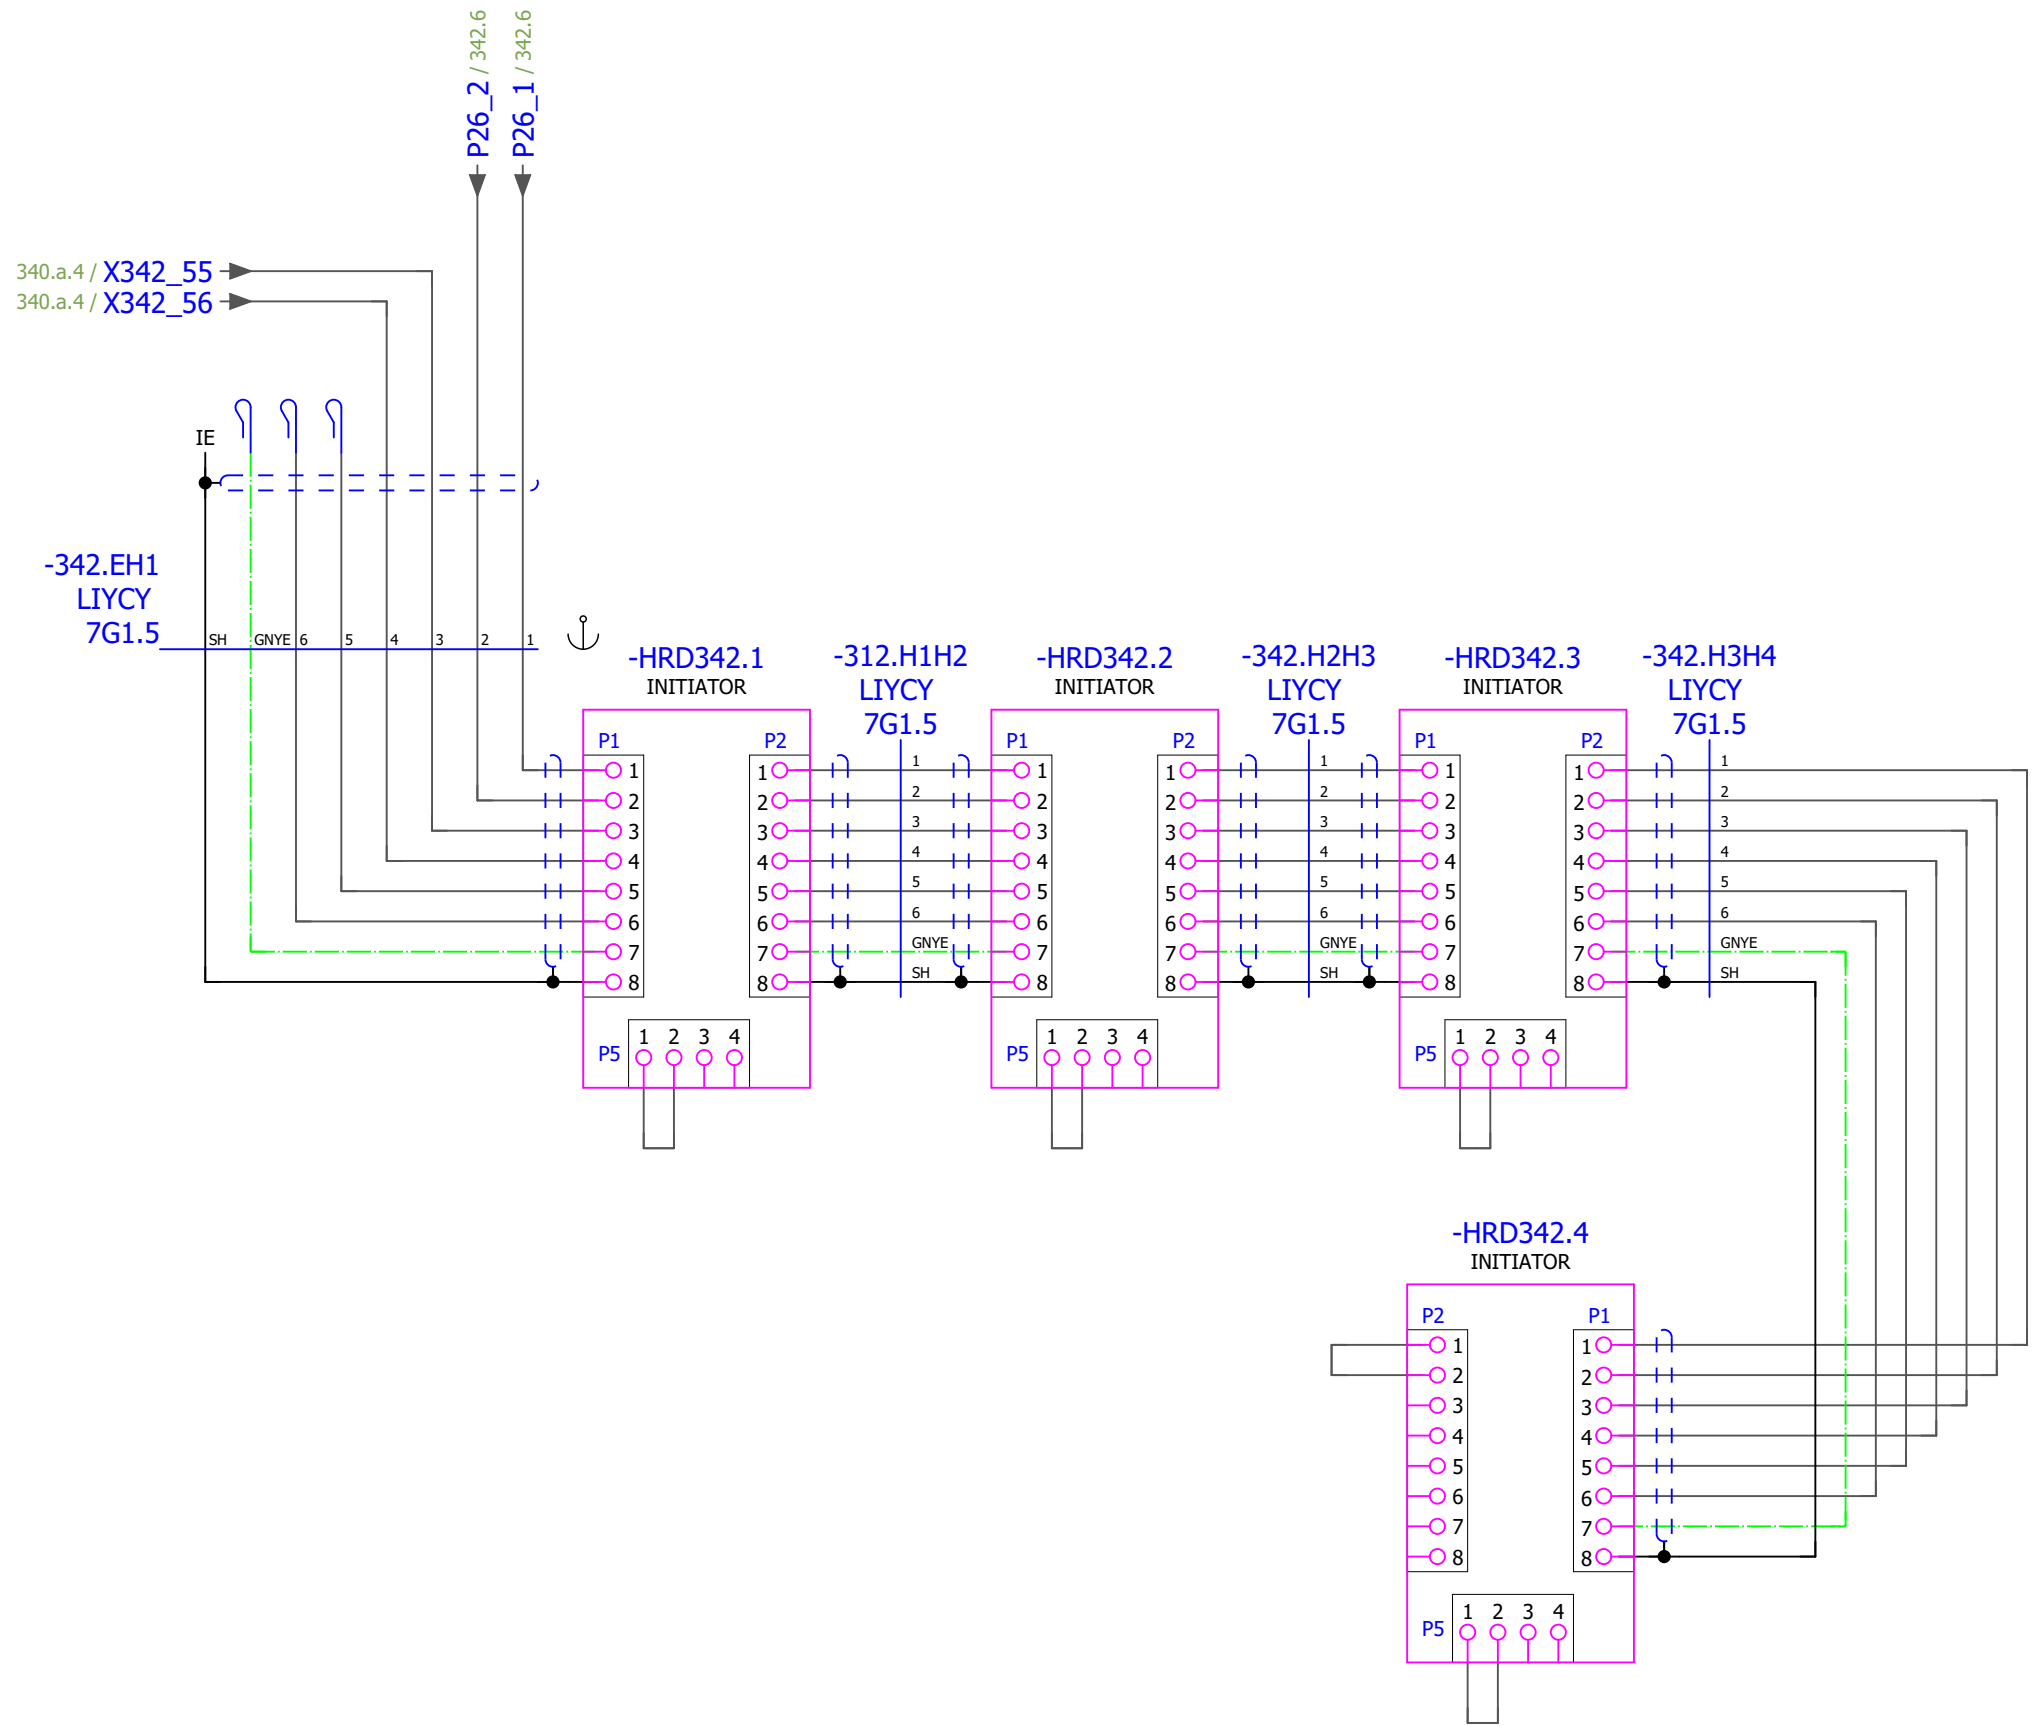


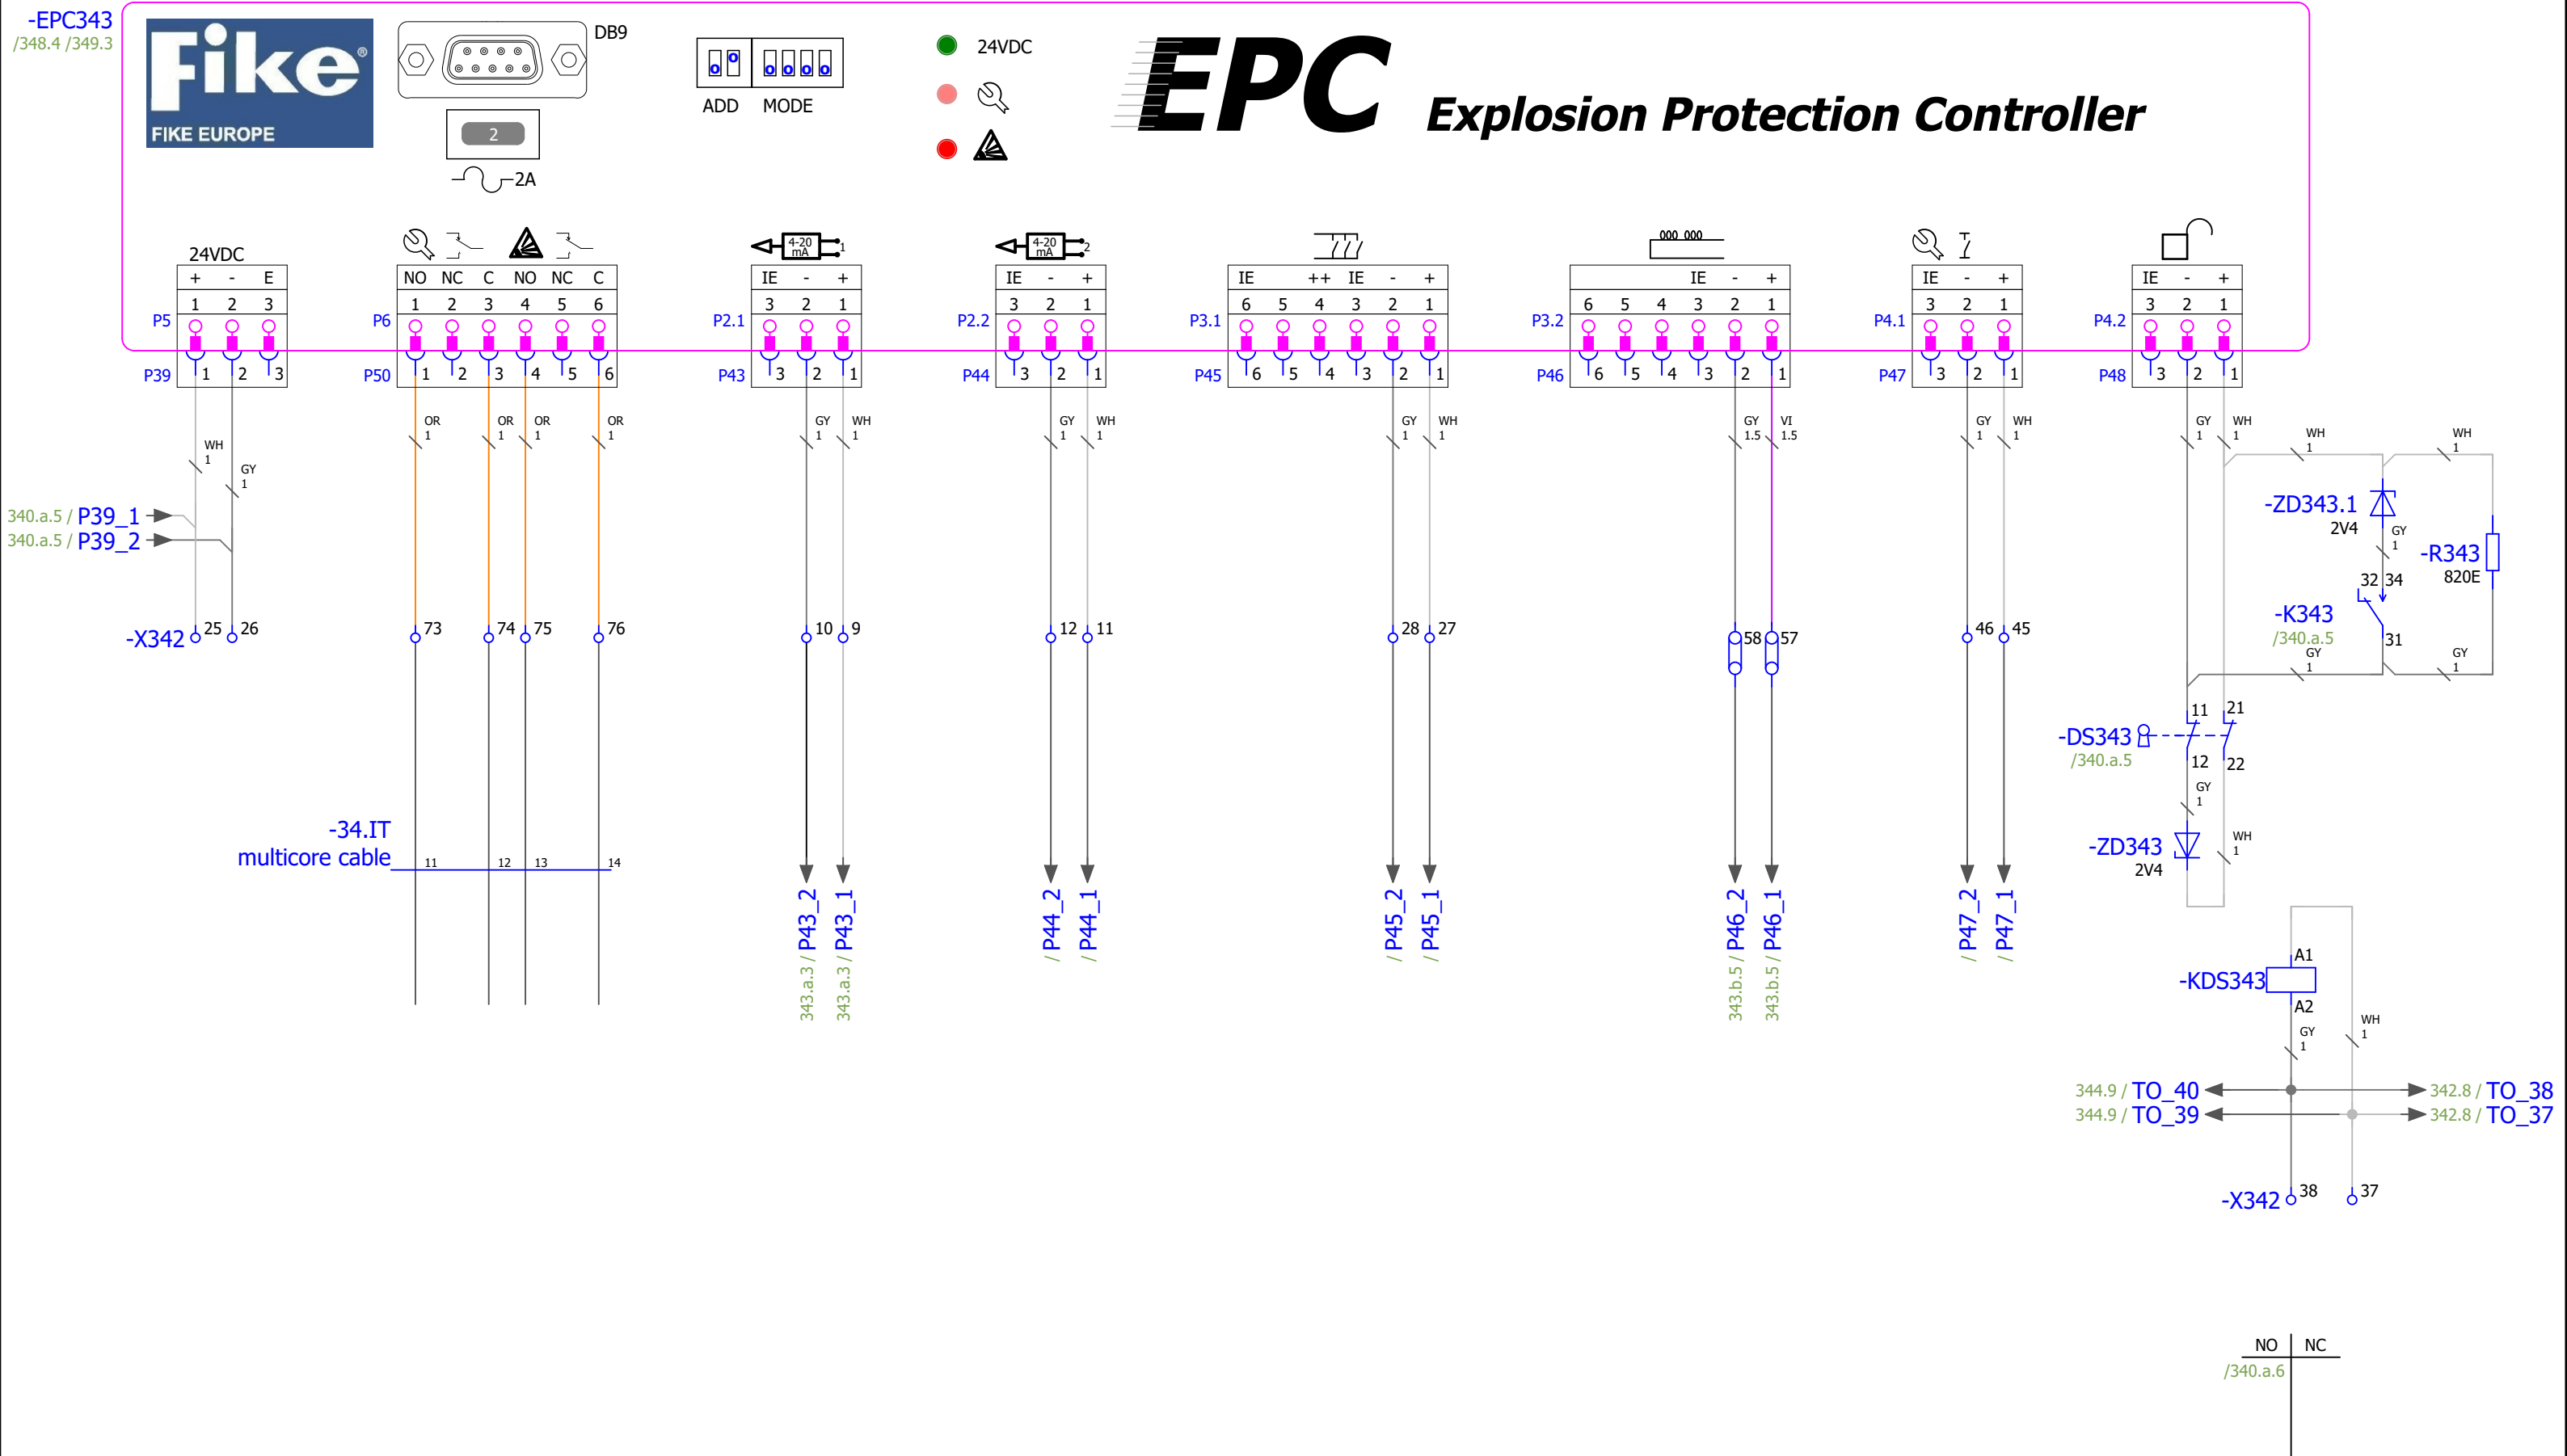


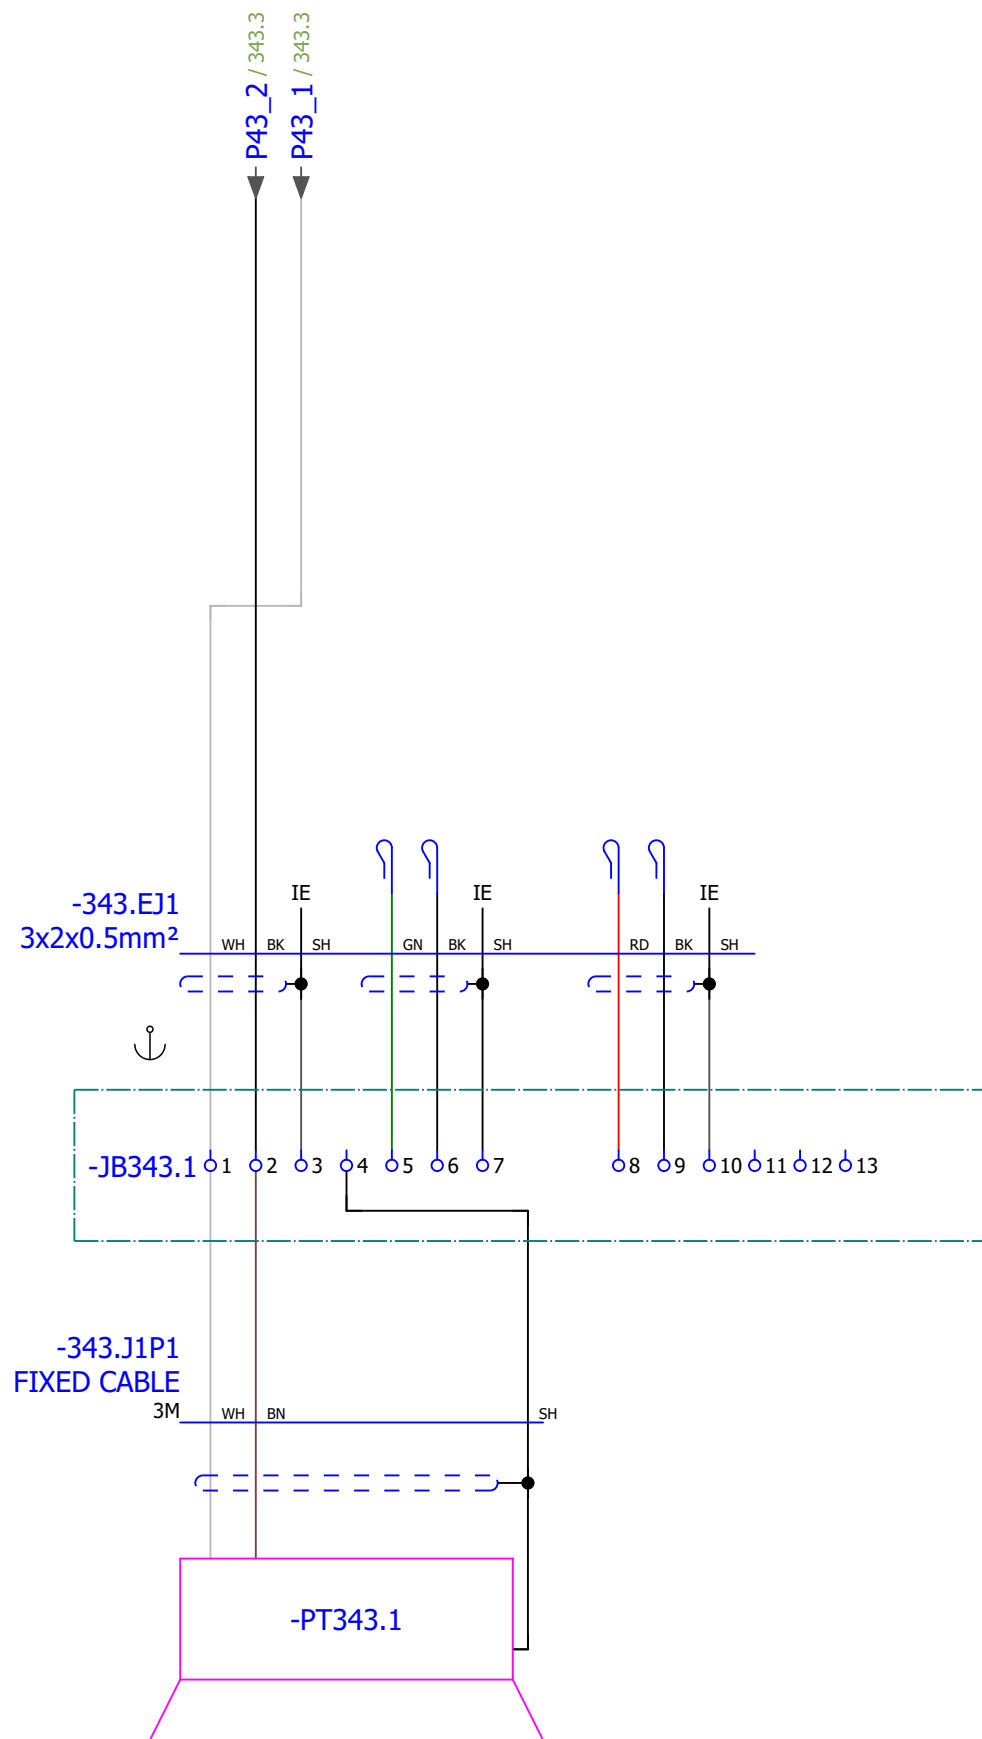


ATTENTION: Do not cut the breather tube from the detector(s) in the junction box

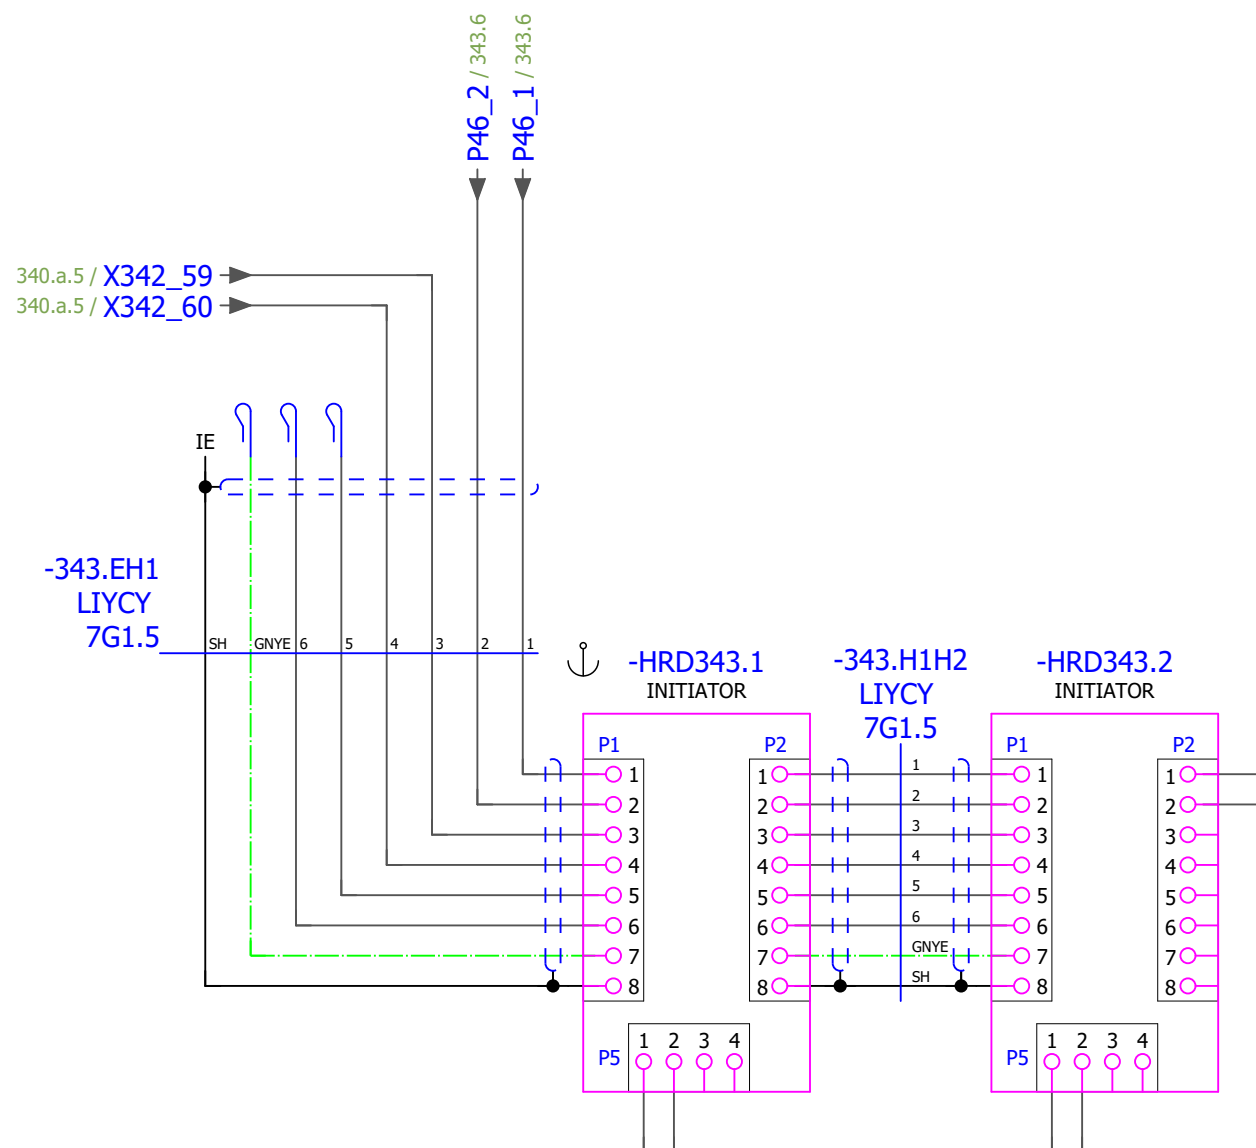

-EPC344
/348.3 /349.4

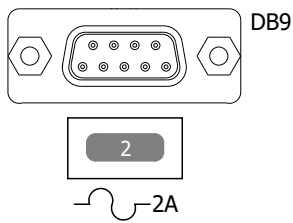


EPC Explosion Protection Controller

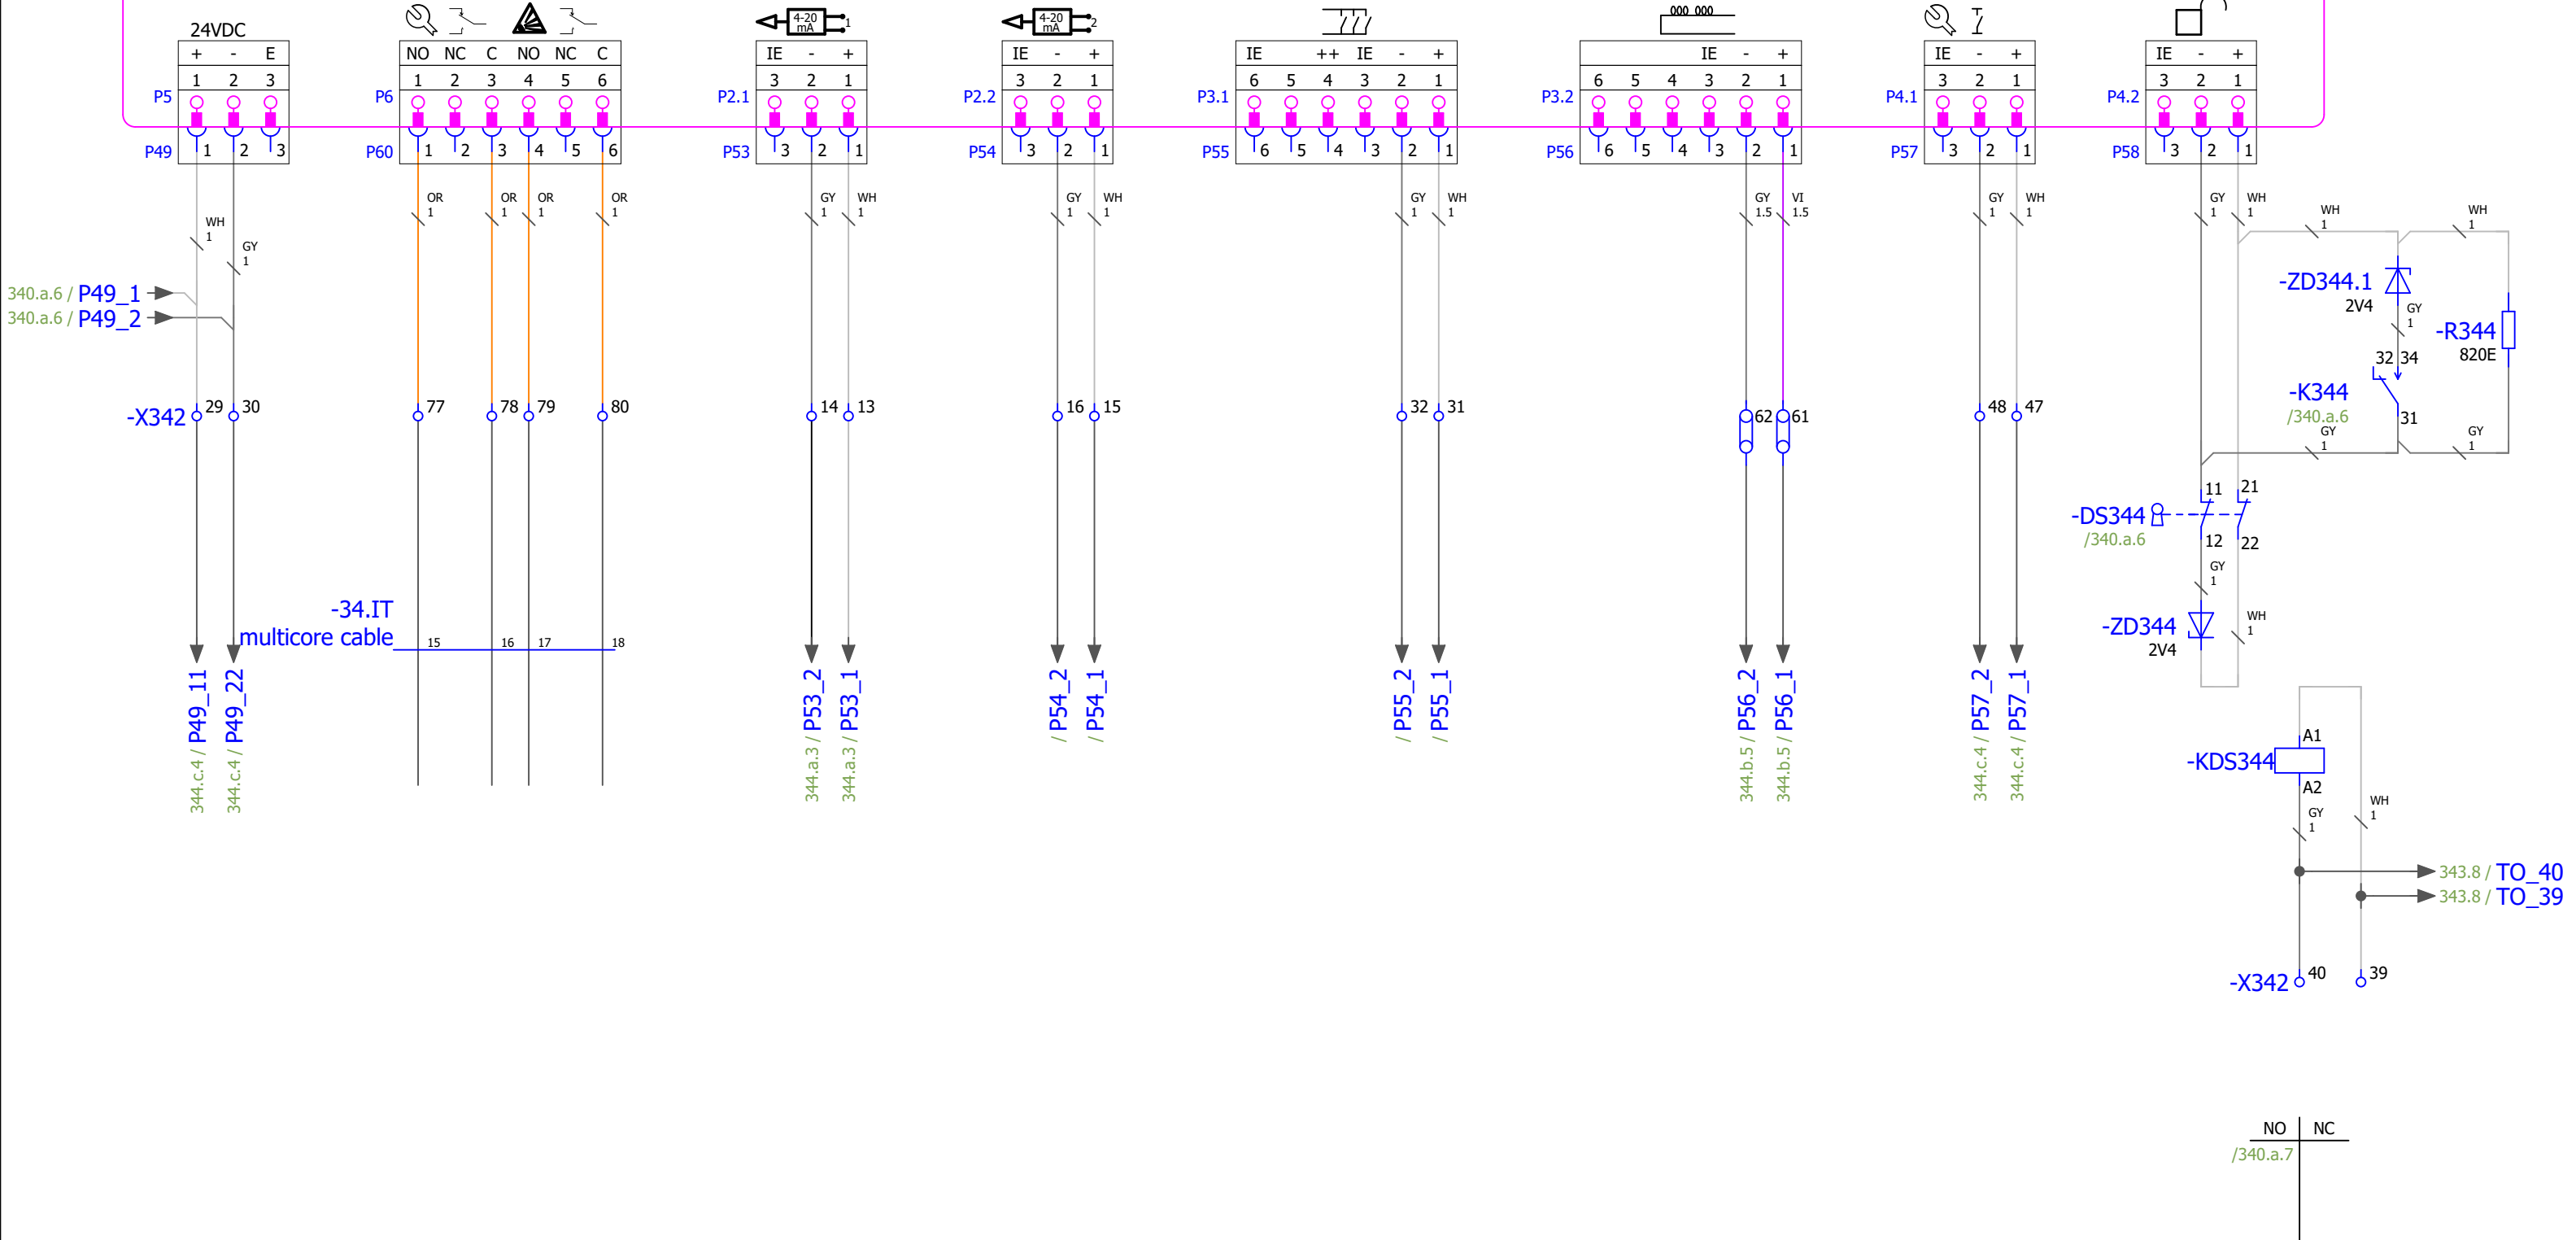



Previous:
343.b


Next:
344.a

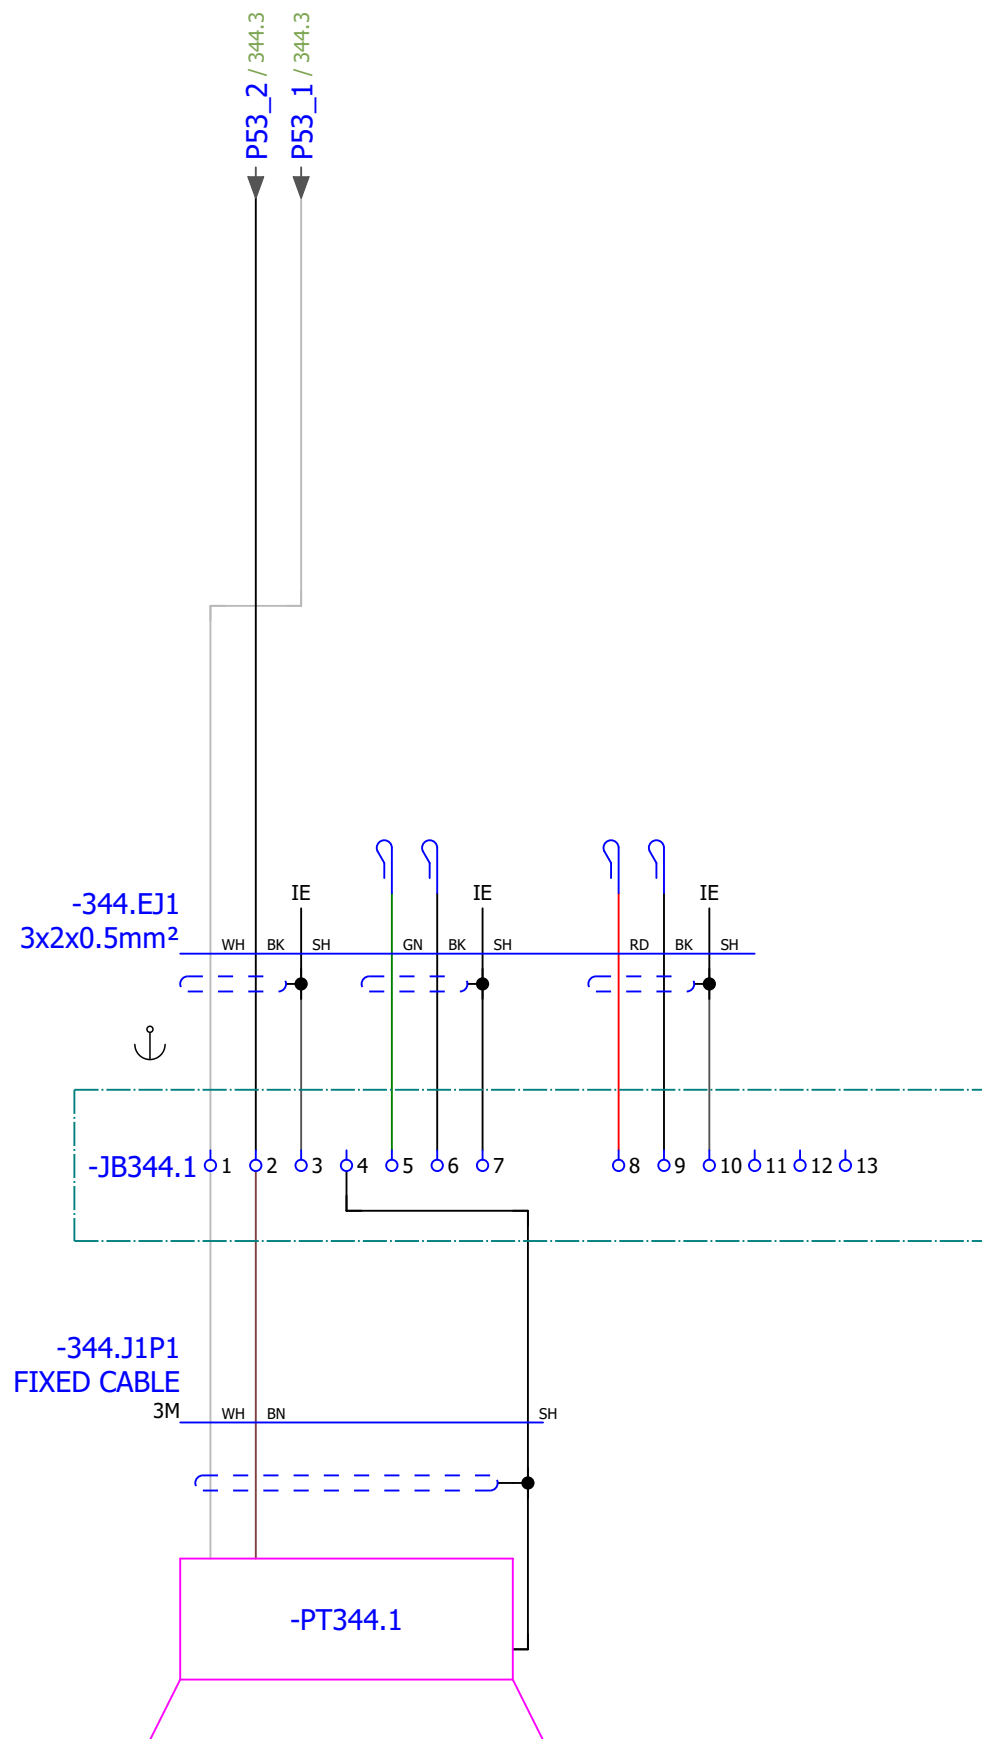

ATTENTION: Do not cut the breather tube from the detector(s) in the junction box

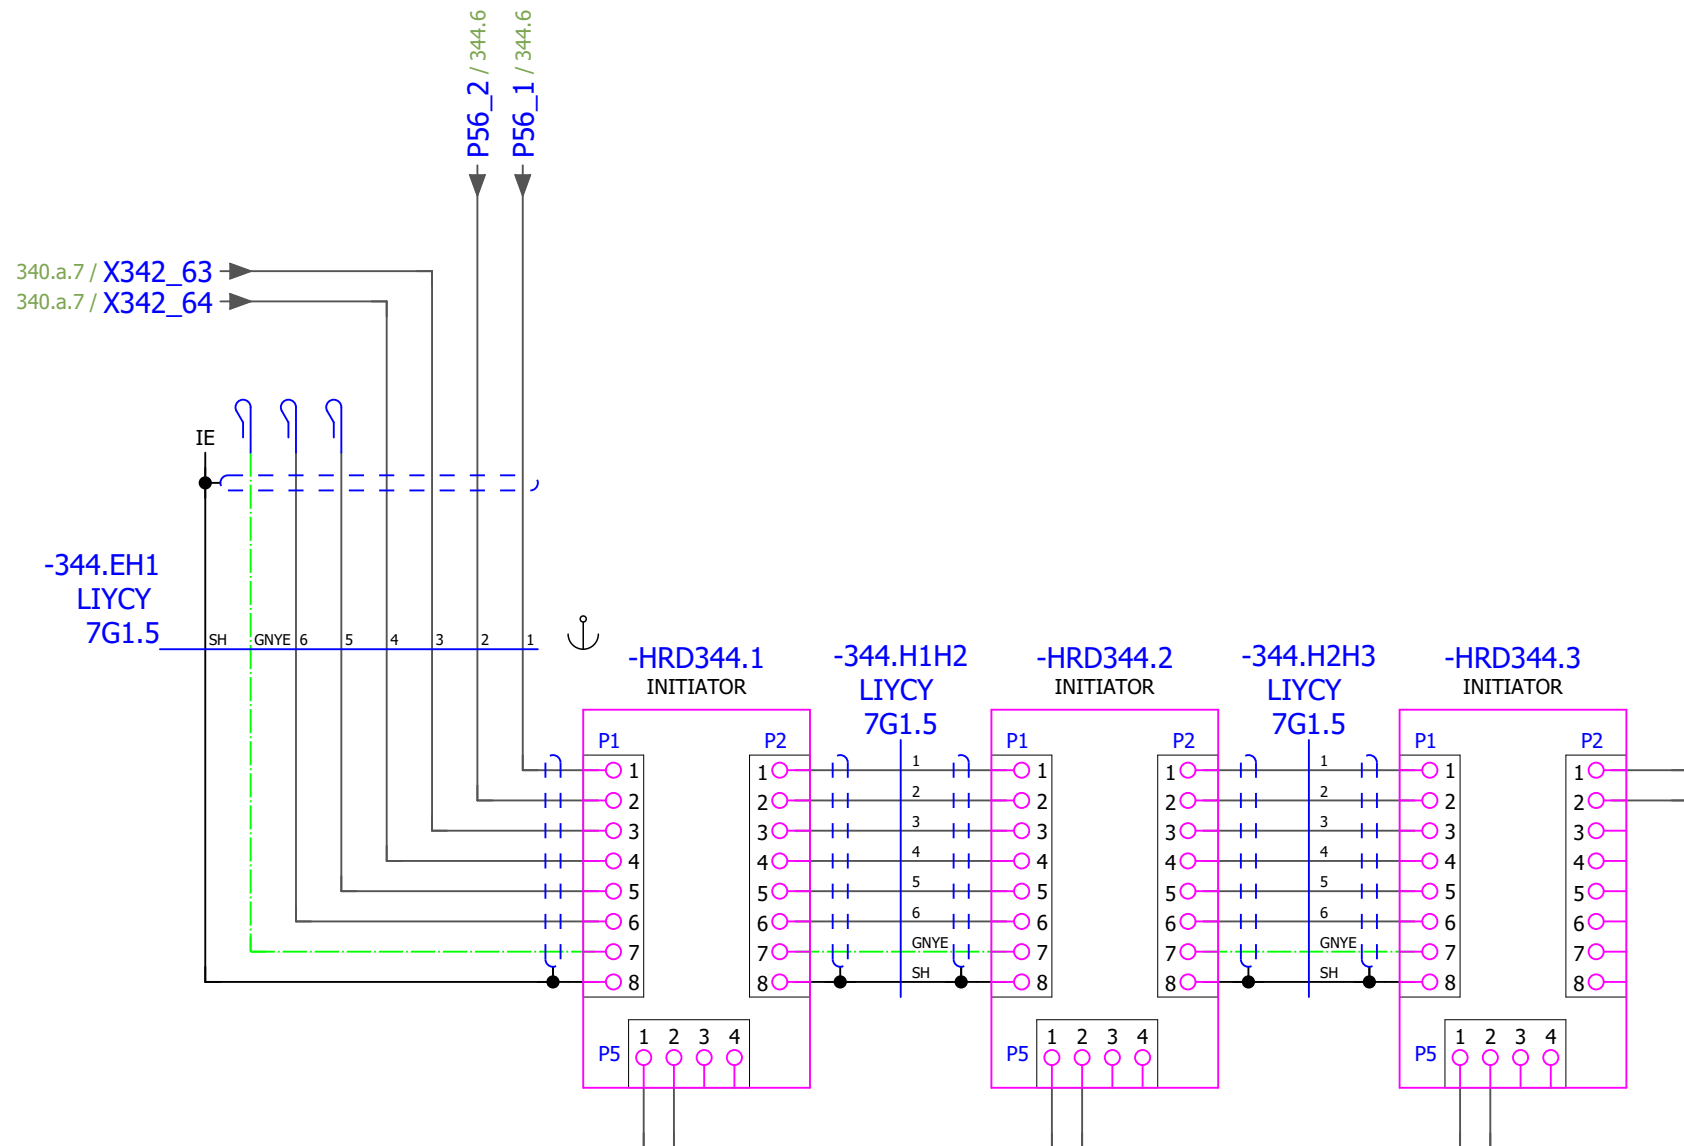




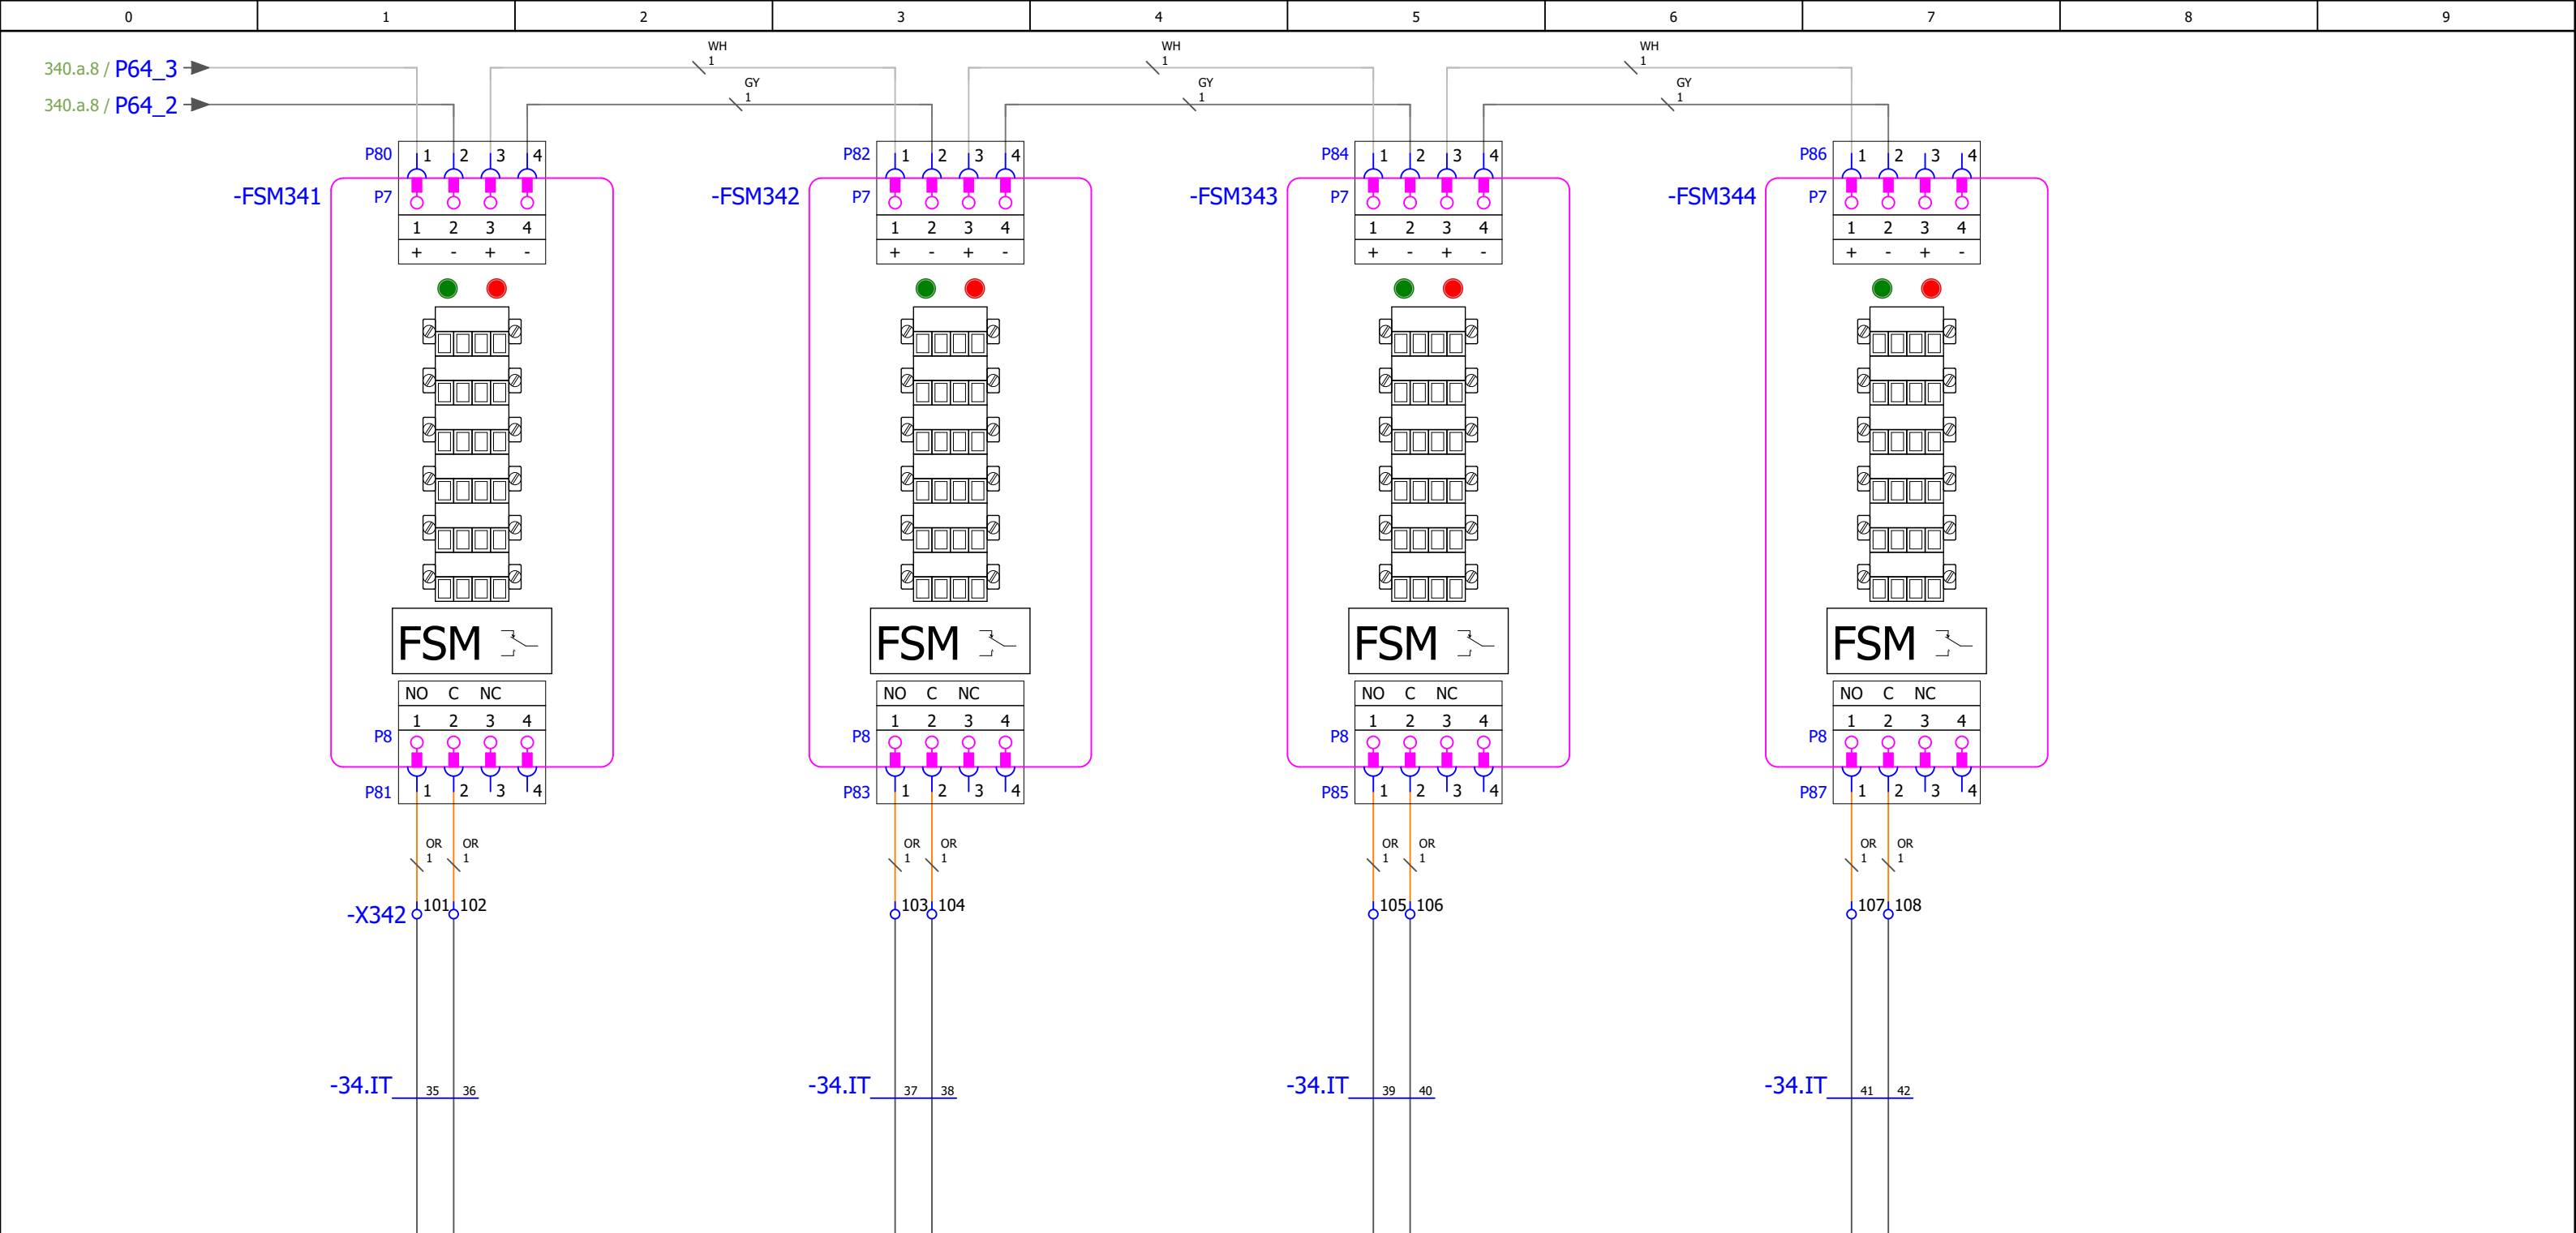

Previous:
345

Next:
348

-AM34




DB9



AM

Annunciator module



STATUSBUS



A			B		
+	-	IE	+	-	IE
6	5	4	3	2	1

P2

6	5	4	3	2	1
---	---	---	---	---	---

P32

WH	BK	BK
0.75	0.75	0.75

+	-	IE	+	-	IE
6	5	4	3	2	1

P1

6	5	4	3	2	1
---	---	---	---	---	---

WH	BK	BK	WH	BK	BK
0.75	0.75	0.75	0.75	0.75	0.75

-X342 117 118 125 126

150E




NO	NC	C
1	2	3

P4

1	2	3
---	---	---

OR	OR
1	1

-X342 81 82

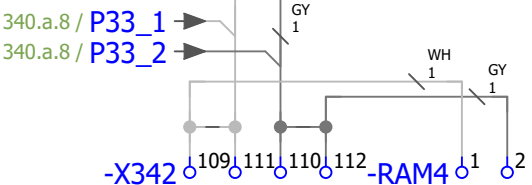

-PSU34

/340.a.0

PSU

STATUSBUS



A			B		
+	-	IE	+	-	IE
6	5	4	3	2	1

P1

6	5	4	3	2	1
---	---	---	---	---	---

P61

WH	BK	BK	WH	BK	BK
0.75	0.75	0.75	0.75	0.75	0.75

-X342 123 124

150E

-EPC344

/344.0

EPC

STATUSBUS



A			B		
IE	-	+	IE	-	+
6	5	4	3	2	1

P1.1

6	5	4	3	2	1
---	---	---	---	---	---

P51

BK	BK	WH
0.75	0.75	0.75

-EPC343

/343.0

EPC

STATUSBUS



A			B		
IE	-	+	IE	-	+
6	5	4	3	2	1

P1.1

6	5	4	3	2	1
---	---	---	---	---	---

P41

BK	BK	WH
0.75	0.75	0.75

-EPC342

/342.0

EPC

STATUSBUS



A			B		
IE	-	+	IE	-	+
6	5	4	3	2	1

P1.1

6	5	4	3	2	1
---	---	---	---	---	---

P21

BK	BK	WH
0.75	0.75	0.75

-EPC341

/341.0

EPC

STATUSBUS



A			B		
IE	-	+	IE	-	+
6	5	4	3	2	1

P1.1

6	5	4	3	2	1
---	---	---	---	---	---

P11

BK	BK	WH
0.75	0.75	0.75

RC834

/345.0

RC8

STATUSBUS



A			B		
+	-	IE	+	-	IE
6	5	4	3	2	1

P1

6	5	4	3	2	1
---	---	---	---	---	---

P10

WH	BK	BK
0.75	0.75	0.75

150E

Previous:
347

Next:
349

