


Teensy4.0

## Teensy4 digital in/outs:

OUT:
motor start: =16
Motor LED B =9
Motor LED G =6
Motor LED R =5
Beat B =4
Beat G =3
Beat R =2
IN:
Reed-switch =14
PotentMeter =17

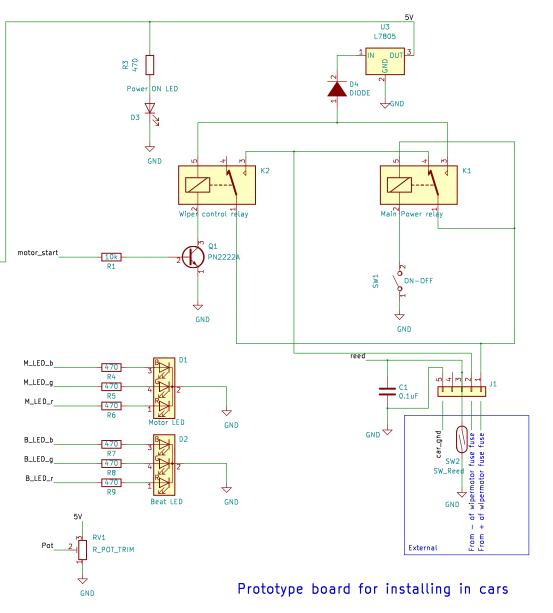

Notes: