



Tool Documentation

INDUSTRIAL ENERGY EFFICIENCY AND PRODUCTIVITY TOOLKIT

USER GUIDE FOR ELECTRIC LOAD PLANNING TOOL

Authored by: University of California, Davis and Lawrence Berkeley National Laboratory

Contact:

Prakash Rao, prao@lbl.gov

J. Kelly Kissock, jkissock@ucdavis.edu

Table of Contents

Introduction	3
How to Use the Tool	4
Step 1a: Select Your Load Profile Data Type & Date Range:	4
Custom Hourly Load Profile	4
12 Months Utility Bills	5
Green Button: 15-Minute or Hourly	6
Step 1b: Upload Load Profile	6
Step 2: Choose GHG Emission Parameters	6
Select GHG Emissions Forecast:	6
Step 3: Select Utility and Rate Plan	6
Select a Utility Company	7
Select a Rate Plan	7
Review the Rate Preview	7
How the App Applies the Rate	8
Step 4: Enter Load Management Inputs	8
Type of load management	8
Manage load over the weekends?	8
Enter Load Shifting Inputs or Enter Load Addition/Shedding Inputs	9
Output	11
Load Profile Plot	11
CO ₂ e Plots	11
Electric Grid CO ₂ e Emissions Factor	11
Facility Hourly CO ₂ e Emissions	12
Facility Monthly CO ₂ e Emissions	12
Cost Plots	12
Cost Plot Selected Dates	12
Cost Plot Annual	13
Abatement Cost Plot	13
Worked Example: For Green Button and Custom Hourly Load Profile Data Types	14
Step 1a: Select Your Load Profile Data Type & Date Range	14
Step 1b: Upload Load Profile Data	15

User Guide for Electric Load Planning Tool

Step 2: Choose GHG Emission Parameters	16
Facility Hourly CO ₂ e Emissions	17
Electric Grid CO ₂ e Emissions Factor	17
Step 3: Select Utility and Rate Plan	18
Cost Plot Selected Dates	19
Cost Plot Annual	19
Abatement Cost Plot	19
Step 4: Enter Load Management Inputs	20
Type of load management:	20
Manage load over the weekends:	20
Enter Load Addition/Shedding Inputs	20
Shift Load	21
Step 5: Interpret Results	22
Worked Example: For 12 Months Utility Bills Data Types	24
Step 1a: Select Your Load Profile Data Type & Date Range	24
Step 1b: Upload Load Profile	25
Step 2: Choose GHG Emission Parameters	26
Step 3: Select Utility and Rate Plan	28
Step 4: Enter your Load Management Inputs	29
Step 5: Interpret Results	30
References	34

Introduction

Load planning involves “strategic, long-term actions that affect the” electrical consumption profile of a facility’s normal operation (Miller, 2020, p.5). A facility can shape its electrical demand through load shifting, load shedding, or electrification (load addition). Load shifting refers to “the ability to move or time” when loads occur, essentially a temporal manipulation of electrical demand (Nandy et al., 2022, p.17). On the other hand, load shedding solely involves reducing electricity consumption during a specific period (Nandy et al., 2022). Collectively, load shifting and load shedding can be grouped under the umbrella term demand management, load management, or demand response (Summerbell et al., 2017).

Changing a facility's electricity consumption patterns through load management can affect its electricity costs and scope 2 CO₂e emissions. Both electricity costs and scope 2 emissions associated with electricity consumption vary spatiotemporally because both electricity rates that determine costs and grid electricity emissions factors that determine scope 2 emissions differ based on location and the time of day. This is because grid regions with a greater penetration of renewables in the mix, particularly solar are characterized periods of excess renewable output in the grid mix which typically lowers the wholesale electricity prices. The alignment of cheaper and cleaner electricity in the middle of the day is often reflected in lower retail prices and lower scope 2 emissions for consumers with a greater portion of their demand occurring during periods of surplus renewables output. On the cost side, Time-of-Use retail electricity rates make it cheaper for facilities to consume electricity during periods of surplus renewable generation. On the scope 2 side, the lower emissions associated with consuming electricity during surplus renewable generation periods can be captured in hourly emissions factors.

Therefore, load planning has the potential to yield both cost and carbon savings when a facility aligns the timing of its electricity consumption with periods of excess renewable generation. Nonetheless, the complexities of Time-of-Use (TOU) retail electricity tariffs and more granular scope 2 emissions accounting need to be analyzed with respect to a facility’s load profile to better understand and estimate the electricity cost and scope 2 emissions reductions that load planning can facilitate. The Electric Load Planning Tool (ELPT) is an R-Shiny based online web application to help a facility grasp the electricity bill and scope 2 emissions impacts of its electricity consumption, and the potential of load planning to help generate both cost and emissions savings. The tool requires inputs pertaining to a facility’s load profile, its location and year of analysis, and a utility rate plan selected from the local OpenEI URDB snapshot (NLR, 2026). The web application produces as its primary visuals illustrating the cost linked to a facility’s electricity consumption.

How to Use the Tool

This section explains how to use the Electric Load Planning Tool. Please follow the steps outlined below in the correct order to avoid errors. The tool's web app provides further guidance in the form of "?" symbol pop ups attached to the key steps and inputs in the tool's user interface. You can hover your cursor on these pop ups to receive hints and suggestions on how to proceed with each step.

Step 1a: Select Your Load Profile Data Type & Date Range:

First, select the source for your load profile data (Figure 1). The tool lets you derive and submit your load profile data through the following sources.

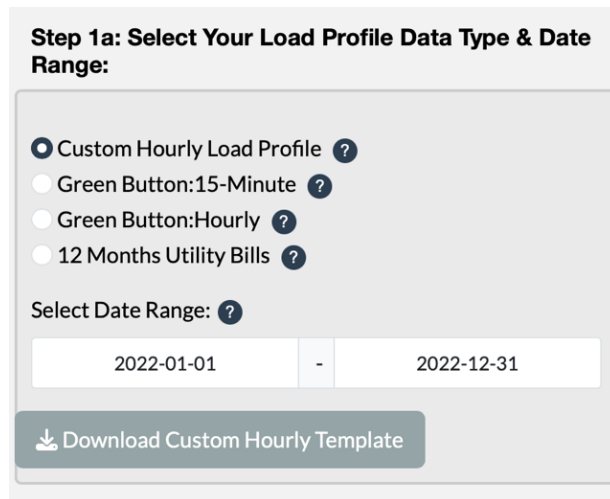


Figure 1: Selecting Load Profile Data Type & Date Range

Custom Hourly Load Profile

- An Excel input sheet to copy and paste your hourly load profile values.
- After selecting the Custom Hourly Load Profile Option, provide the date range corresponding to your hourly load profile values in the "Select Date Range" input boxes. Do not select a date range that spans more than one calendar year, as the tool's current version cannot analyze data for more than one calendar year. Please make sure that your entered start date (first box in the "Select Date Range" section) does not exceed your entered end date (second box in the "Select Date Range" section).
- Click the Download Custom Hourly Template button and open the downloaded Excel file (Figure 2). Copy and paste your load values in the **Load (in kW) column highlighted in yellow**. These values should correspond to the date and time stamps in the Date_Time column. The dates in the Date_Time column correspond to the date range selected in the previous step.

- Representative default load values have been provided for your convenience. You can overwrite these with your hourly load input values by pasting them in the Load (in kW) column
- After replacing the existing load values with your load values, save and close the Excel file.
- The load profile data is now ready to be uploaded to the tool.

Date_Time	Load (in kW)	hours	month	Day
2022-01-01 00:00:00	276.5069	1	January	1
2022-01-01 01:00:00	273.6742	2	January	1
2022-01-01 02:00:00	276.5669	3	January	1
2022-01-01 03:00:00	277.9939	4	January	1
2022-01-01 04:00:00	277.0734	5	January	1
2022-01-01 05:00:00	276.7004	6	January	1
2022-01-01 06:00:00	281.5253	7	January	1
2022-01-01 07:00:00	277.78435	8	January	1
2022-01-01 08:00:00	275.61605	9	January	1
2022-01-01 09:00:00	266.7784	10	January	1
2022-01-01 10:00:00	264.7216	11	January	1
2022-01-01 11:00:00	263.8083	12	January	1
2022-01-01 12:00:00	261.7266	13	January	1
2022-01-01 13:00:00	260.5731	14	January	1
2022-01-01 14:00:00	265.83075	15	January	1
2022-01-01 15:00:00	274.6743	16	January	1

Figure 2: Custom Hourly Load Profile Excel Template

12 Months Utility Bills

(see Worked Example: 12 Months Utility Bills for further details)

- An hourly load profile for all 8,760 hours of the year is computed based on data from your utility bill for the past 12 months.
- After selecting the 12-Month Utility Bill Option, click the Download 12-month bills template button to download an Excel sheet.
- Open the Excel sheet and fill in the values for Energy Usage (kWh) and Billed Demand (kW) in each month of the year of your analysis. Illustrative default values have been provided for your convenience —fill in your input values by overwriting these defaults.
- Scroll to the right and answer three simple questions about your facility’s operation.
- Save and close the file. The load profile data is now ready to be uploaded to the tool.
- The operation of the utility bills is based on its monthly energy usage (kWh), billed demand (kW), and hours of operation. Then, average daily energy usage is calculated by dividing monthly energy usage by the number of days. For each day, the user selected peak hour is chosen as the hour with the peak demand. The specific hour is, then, assigned to the monthly peak demand values. For the non-operational hours during weekdays and weekends, 25% of the peak demand is assigned as the baseload for the facility. The three hours before and after the peak demand are assigned as “mid-peak” hours, whereas the remaining operational hours are considered low-demand hours. The sum of hourly demand is equal to the estimated average daily energy usage.

Green Button: 15-Minute or Hourly

- This source of hourly sub-hourly load profile data (at the 15-minute interval) should be available for downloading from your utility website as a .XML format file. Please visit your utility's website to download your green button file.
- After selecting the Green Button: 15-Minute or Hourly option and downloading your green button file from your utility's website, provide the date range corresponding to the load profile data you downloaded in the previous step.
- Your downloaded green button load profile data is ready to be uploaded to the tool.

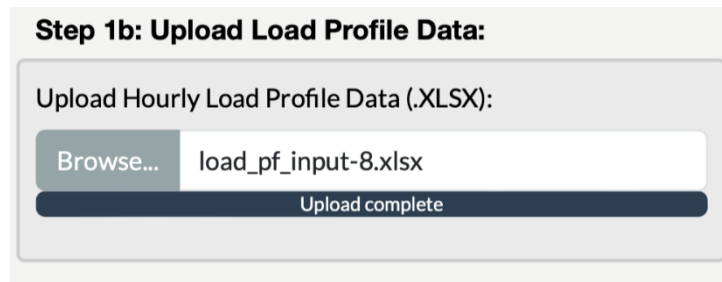


Figure 3: Uploading Load Profile Data

Step 1b: Upload Load Profile

Click the browse button to locate and upload the load profile data file you derived in step 1a.

Step 2: Choose GHG Emission Parameters

Select GHG Emissions Forecast:

- Select one of the following emissions factors:
 - Select the year for which you want to analyze your scope 2 emissions impacts using hourly average emissions factors (kg/MWh) sourced from the standard mid-case scenario of NREL's Cambium database (Gagnon et al., 2023).

OR

- Select the US EPA's 2022 static average annual emissions factor (kg/MWh) **[Not recommended for this tool]**¹

Step 3: Select Utility and Rate Plan

The Rate Input tab uses a local, precompiled snapshot of the National Renewable Energy Laboratory's OpenEI Utility Rate Database (URDB) (NLR, 2026). You no longer need to download, complete, or upload an Excel rate-input sheet, and the app does not query the live

¹ A static annual average emissions factor cannot analyze the impacts of changing load shapes at the hourly resolution.

OpenEI API during normal use. The curated snapshot contains more than 3,800 rate records assembled for 188 major utility providers that collectively account for more than 80% of U.S. industrial and commercial utility customers and their electricity use (MWh).

Select a Utility Company

- Open the Rate Input tab in the left sidebar.
- Under 1. Select Utility Company, choose the utility that serves your facility. The utility list is populated from the local database and displayed alphabetically (Figure 4).

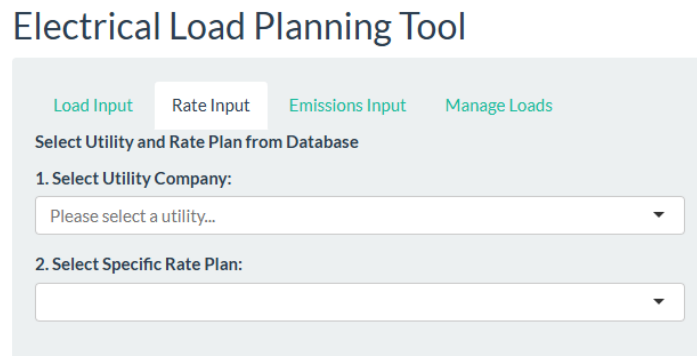


Figure 4: Selecting a Utility Company and Rate Plan

Select a Rate Plan

- After you select a utility, the app automatically filters the database and populates 2. Select Specific Rate Plan with only the plans associated with that utility.
- Select the plan that matches your facility's current tariff. The app filters the database to that utility-and-rate combination and loads it automatically

Review the Rate Preview

- Review the Energy Rates, TOU Demand Rates, and Seasonal Demand Rates shown beneath the selectors. Sections appear only when the selected tariff contains that type of charge (Figure 5).
- Use Download Rate Tables (xlsx) if you want a spreadsheet summary of the displayed rate periods and prices.
- Electricity tariffs can change. Before relying on the results, compare the displayed plan and charges with your current bill or the published utility tariff.

Electrical Load Planning Tool

[Load Input](#)
[Rate Input](#)
[Emissions Input](#)
[Manage Loads](#)

Select Utility and Rate Plan from Database

1. Select Utility Company:

Connecticut Light & Power Co

2. Select Specific Rate Plan:

Rate 55 - Intermediate Time-Of-Day Electric Service Manufacturers 500 to 1000kW

Rate Preview

Energy Rates	
Period	Rate (\$/kWh)
Wkdy: All Year (12am-12pm, 8pm-12am)	\$0.1859
Wkdy: All Year (12pm-8pm)	\$0.1859
Wknd: All Year (All Day)	\$0.1859

Seasonal/Monthly Demand	
Period	Rate (\$/kW)
All Year	\$6.6500

[Download Rate Tables \(.xlsx\)](#)

Figure 5: Reviewing the Automatically Loaded Rate Tables

How the App Applies the Rate

When a rate is selected, the app translates the URDB record into the schedules and values needed by ELPT. It reads the weekday and weekend energy and demand schedules, the prices assigned to each time-of-use period, any seasonal or monthly maximum-demand structure, and any fixed monthly charge. The billing engine then maps every hour in the facility's load profile to the applicable month, hour, weekday or weekend schedule, and rate period before calculating usage, demand, and fixed costs. This local translation and calculation replace the former Excel rate-input workflow.

Step 4: Enter Load Management Inputs

Type of load management

Select the type of load management you want to use to shape your load profile (Figure 6a). You can shift load from one period to another or add or shed load over a given period.

Manage load over the weekends?

Select 'Yes' if you want to execute your load shaping decisions over the weekdays and weekends and 'No' if you want only to shape your load during weekdays (Figure 6).

Step 4: Enter Load Management Inputs:

Type of load management

☐ Add/Shed Load ?
☒ Shift Load ?

Manage load over the weekends?

☐ Yes ?
☒ No ?

Enter Load Shifting Inputs

Figure 6: Enter Load Management Inputs

Enter Load Shifting Inputs or Enter Load Addition/Shedding Inputs

Select Input Method:

You can provide your load management inputs by either entering them manually or uploading an existing spreadsheet (Figure 7 and Figure 8).

- Manually Enter Shaped Load(s) or Manually Enter Added Load(s):** For load shifting, provide a positive numeric value for the flexible load (in kW) you want to shift and use the sliders to specify the hours of the day you want shift load from and to (Figure 7). For adding or shedding loads, specify a positive (for adding) or negative (for shedding) load value (in kW) and use the slider to specify the range of hours when you want to add or shed load (Figure 8).

Step 4: Enter Load Management Inputs:

Type of load management

☐ Add/Shed Load ?
☒ Shift Load ?

Manage load over the weekends?

☐ Yes ?
☒ No ?

Enter Load Shifting Inputs

Select Input Method:

☒ Manually Enter Shaped Load(s)
☐ Upload Existing Spreadsheet

Shaped Load 1

Flexible Load (kW)

100

Time Range From:

00:00 17:15 – 19:15

Time Range To:

00:00 12:30 – 14:30

Generate Plot
Add more Shaped Load(s)

Figure 7: Entering Load Addition/Shedding Inputs

Step 4: Enter Load Management Inputs:

Type of load management

☒ Add/Shed Load ?
 ☐ Shift Load ?

Manage load over the weekends?

☐ Yes ?
 ☒ No ?

Enter Load Addition/Shedding Inputs

Select Input Method:

☒ Manually Enter Added Load(s)
 ☐ Upload Existing Spreadsheet

New Load 1

Added Load (kW)

100

Time Range To Add Load

00:00

12:30 – 14:30

23:59

Generate Plot

Add more Load Input(s)

Figure 8: Entering Load Shifting Inputs

Upload Existing Spreadsheet: You can also enter the loads you want to shape from a spreadsheet (Figure 9). Scroll down to the end of the sidebar and click the Download Input Data button to download the "input_data" Excel sheet. Open the Excel sheet and overwrite the default entries with values of the load you want to shape and the range of hours you want to shift load from and add load to. Follow the entry format as set in the default values. Save and close the Excel sheet once you have entered your load management inputs. Select the "Upload Existing Spreadsheet" option if you have not done so already, and then click browse to find and upload the "input_data" Excel sheet you filled out before.

Enter Load Addition/Shedding Inputs

Select Input Method:

☐ Manually Enter Added Load(s)
 ☒ Upload Existing Spreadsheet

Generate Plot

Upload Input Sheet Excel File

Browse...

Cancel

Figure 9: Upload Inputs From Spreadsheet

Generate Plot Button: After you have provided your load management inputs, press the generate plot button to generate plots. These plots help visualize the impact of your load management decisions on your load profile, electricity costs, and scope 2 CO₂e emissions.

Output

Load Profile Plot

The first plot shows your load profile (Figure 10), starting with your baseline load shape when you upload your load profile file and followed by a modified load after you enter all the steps' inputs and press generate plot.

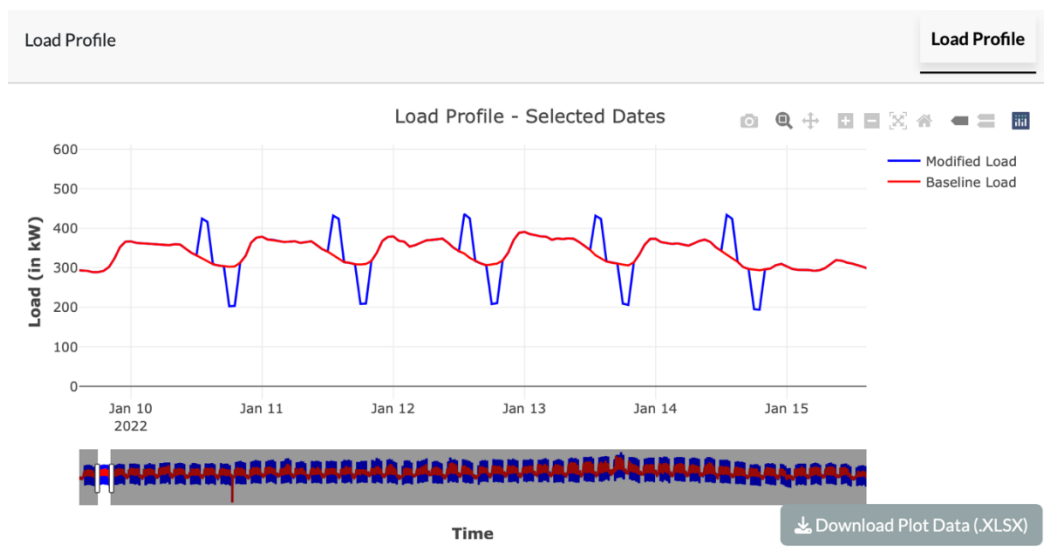


Figure 10: Load Profile Plot Output

CO₂e Plots

Electric Grid CO₂e Emissions Factor

In this panel, after you have selected your GHG emissions parameters in step 2, you can view a time series showing the hourly variation in the grid CO₂e emissions factor for your selected state and year (Figure 11).

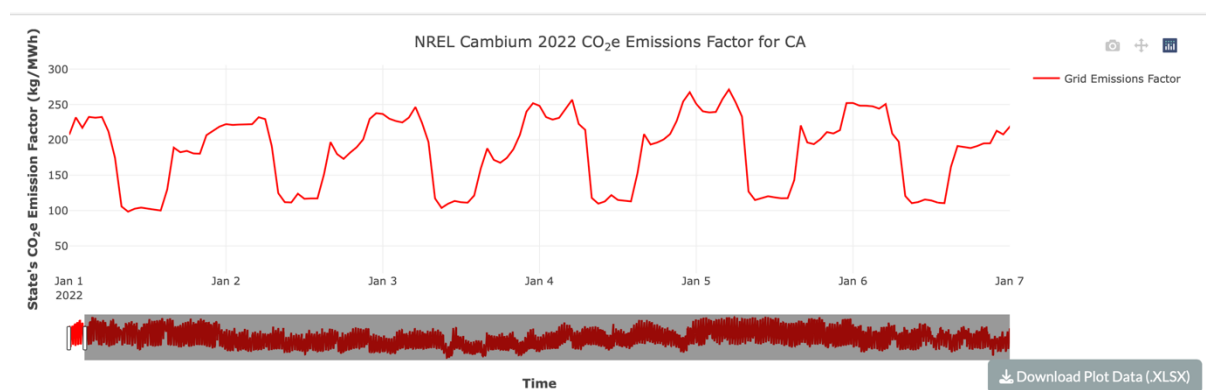


Figure 11: State Level Hourly Emission Factors

Facility Hourly CO₂e Emissions

If you have completed steps 1 and 2 of uploading your load profile and selecting your emissions parameters, respectively, you will be able to view this plot (Figure 12) showing the hourly or sub-hourly variation in your facility's scope 2 CO₂e emissions (i.e., your hourly or sub-hourly electric load multiplied by the grid emissions factor). After you have completed all the steps and executed your load management decisions, this plot will also show you the facility's modified emissions profile associated with its shaped load.

Facility Monthly CO₂e Emissions

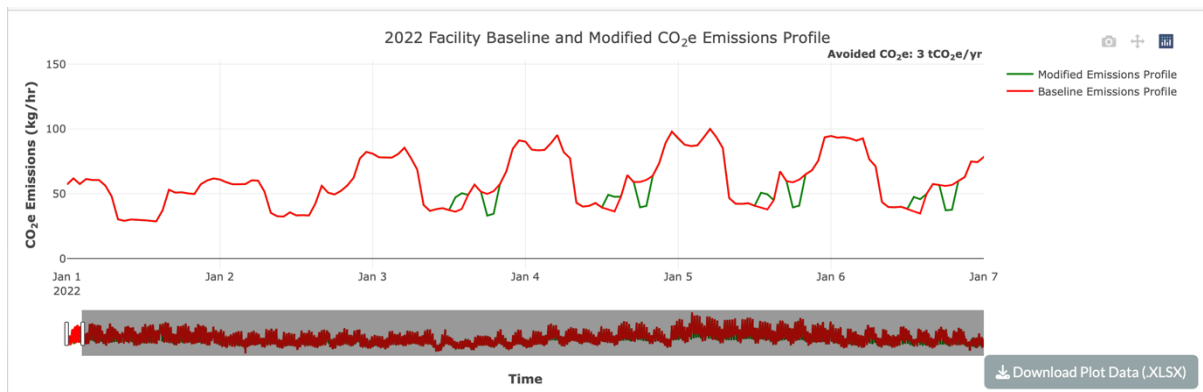


Figure 12: Facility Baseline and Modified Hourly Scope 2 Emissions Profile

If you have completed steps 1 and 2, this plot will show your facility's baseline monthly total scope 2 CO₂e emissions (Figure 13) and also modified emissions following the load shaping.

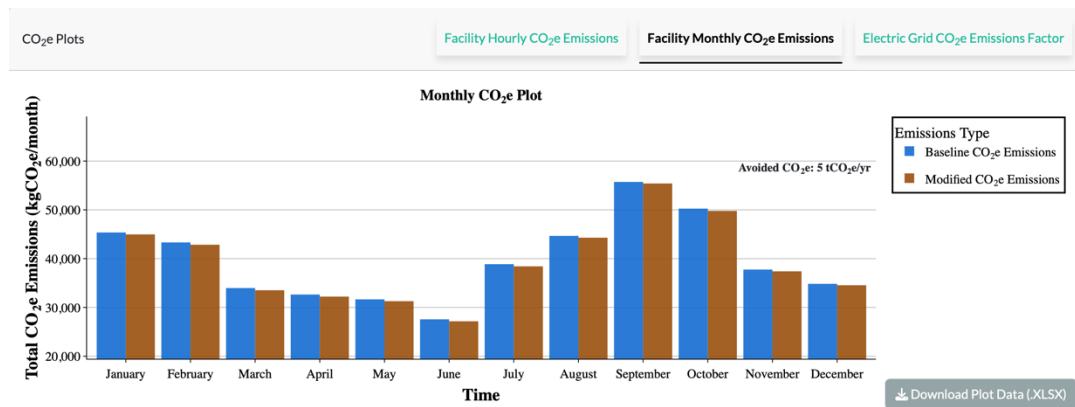


Figure 13: Facility's Monthly CO₂e Emissions

Cost Plots

Cost Plot Selected Dates

This plot (Figure 14) initially shows you your baseline load shape's monthly electricity costs (for the date range you selected in Step 1). You can modify the date range in Step 1 to update the time horizon for which this plot shows you your baseline monthly electricity costs. After you click the generate plot button to execute your load management decisions, this cost plot

will update to reflect the electricity costs of both your original and your modified load profile (obtained after executing load management action).

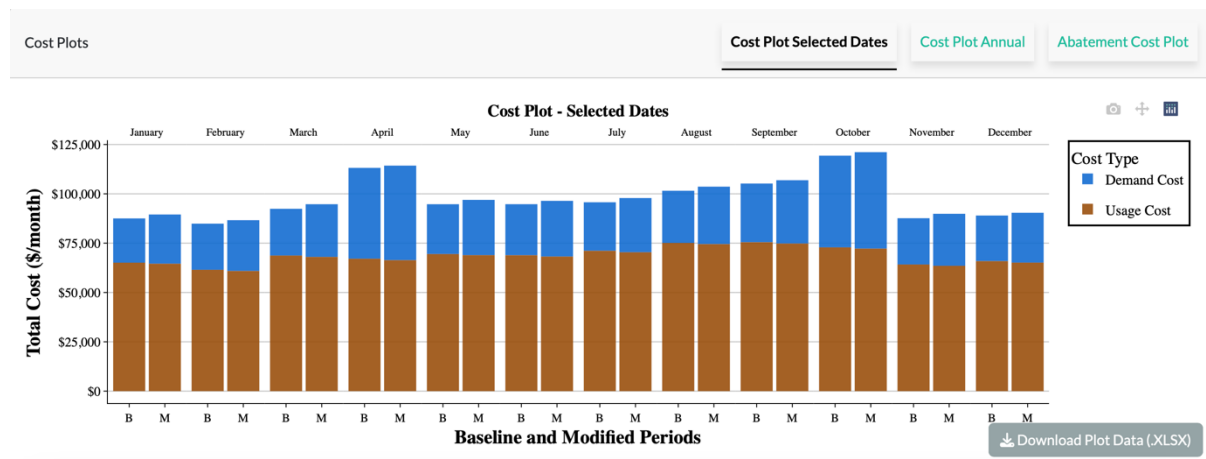


Figure 14: Facility Monthly Electricity Usage and Demand Costs

Cost Plot Annual

This plot shows an annual summary figure for the total electricity costs, split by usage and demand, for the baseline versus the modified load profile (Figure 15).

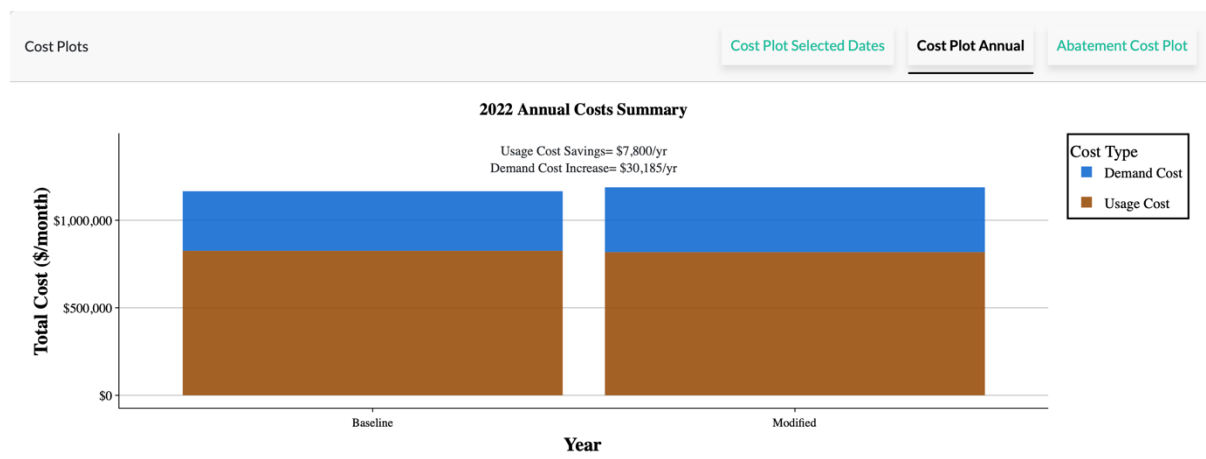


Figure 15: Annual Electricity Usage and Demand Costs

Abatement Cost Plot

This panel displays a bar chart to show the electricity cost increase or savings delivered with each tonne of scope 2 CO₂e emissions abated from your load management decisions (Figure 16). The metric shown on the Y axis is \$/mtCO₂e, indicating the \$ value of the costs or savings per metric tonne of scope 2 emissions abated. Each bar, highlighted with a different color, corresponds to a \$/mtCO₂e for each month in the date range that your load profile data contains. A bar in the negative quadrant below the X axis intercept indicates electricity cost savings associated with the scope 2 emissions abatement caused by your load shaping decisions. Conversely, a bar in the positive quadrant above the X-axis intercept indicates the

electricity cost increase associated with each tonne of scope 2 emissions abated. The width of each bar on the X axis corresponds to the quantity of scope 2 emissions that abated.

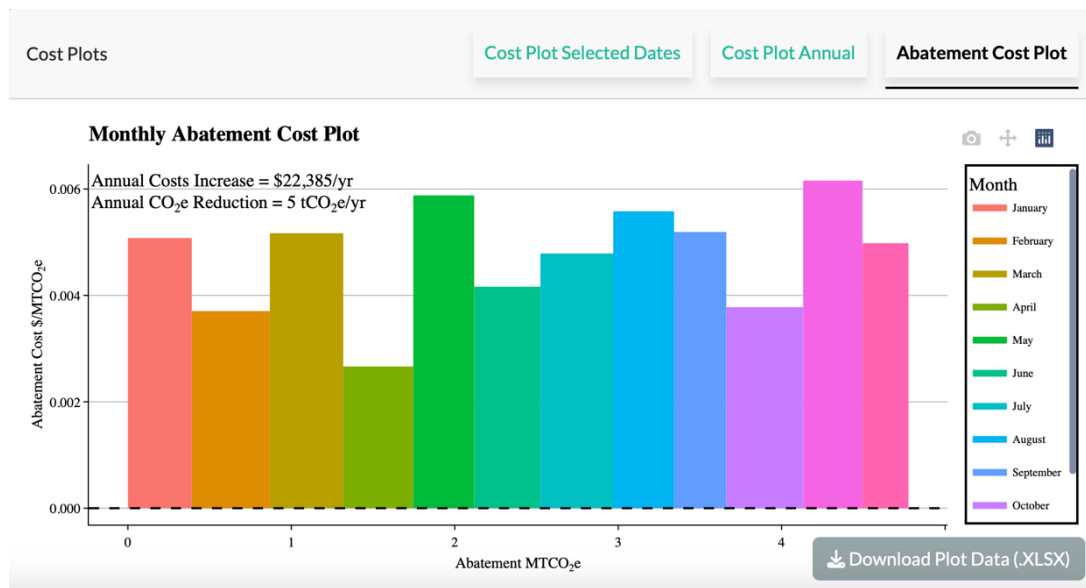


Figure 16: Abatement Cost Plot

Worked Example: For Green Button and Custom Hourly Load Profile Data Types

This section outlines how to use the Electric Load Planning Tool to execute load management decisions and analyze their impacts. The procedure can be split into three steps:

1. Uploading Load Profile Data
2. Selecting Emissions Parameters
3. Selecting a Utility Rate Plan
4. Executing Load Management Decisions

Step 1a: Select Your Load Profile Data Type & Date Range

Choose either the Custom Hourly Load Profile or one of the Green Button options based on your available profile data. Then, choose the date range (2022-01-01 to 2022-12-31 for this example) corresponding to the dates you have available load profile data. If you choose the Custom Hourly option, click the "Download Custom Hourly Template" button to download an Excel template to input your load values (Figure 17). This template comes pre-filled with the date range you previously selected; you only have to open the template file to enter or copy and paste your load values in the 'Load (in kW)' column (highlighted in yellow), corresponding to the date time stamp in the Date_Time column. All other columns, deriving from the date range provided before, are highlighted in grey and cannot be edited. For this example, we will only use the default pre-populated load values.

Date_Time	Load (in kW)	hours	month	Day
2022-01-01 00:00:00	276.5069	1	January	1
2022-01-01 01:00:00	273.6742	2	January	1
2022-01-01 02:00:00	276.5669	3	January	1
2022-01-01 03:00:00	277.9939	4	January	1
2022-01-01 04:00:00	277.0734	5	January	1
2022-01-01 05:00:00	276.7004	6	January	1
2022-01-01 06:00:00	281.5253	7	January	1
2022-01-01 07:00:00	277.78435	8	January	1
2022-01-01 08:00:00	275.61605	9	January	1
2022-01-01 09:00:00	266.7784	10	January	1
2022-01-01 10:00:00	264.7216	11	January	1
2022-01-01 11:00:00	263.8083	12	January	1
2022-01-01 12:00:00	261.7266	13	January	1
2022-01-01 13:00:00	260.5731	14	January	1
2022-01-01 14:00:00	265.83075	15	January	1
2022-01-01 15:00:00	274.6743	16	January	1

Figure 17: Pre-filled Default Values in Custom Hourly Load Profile Template

Choosing one of the Green Button data type options requires you to upload a .XML Green Button file containing your load profile data. You can typically download this file from your utility's website. Please make sure that the dates chosen in the date range input correspond to the dates for which you downloaded your Green Button .XML data.

Step 1b: Upload Load Profile Data

After you upload the load profile data prepared in Step 1a (Figure 18), the Load Profile panel will show you an initial view of your baseline load profile for the time range you selected in Step 1a. Hover your cursor over the red time series line indicating your baseline load to see the load values and their corresponding date and time stamps.

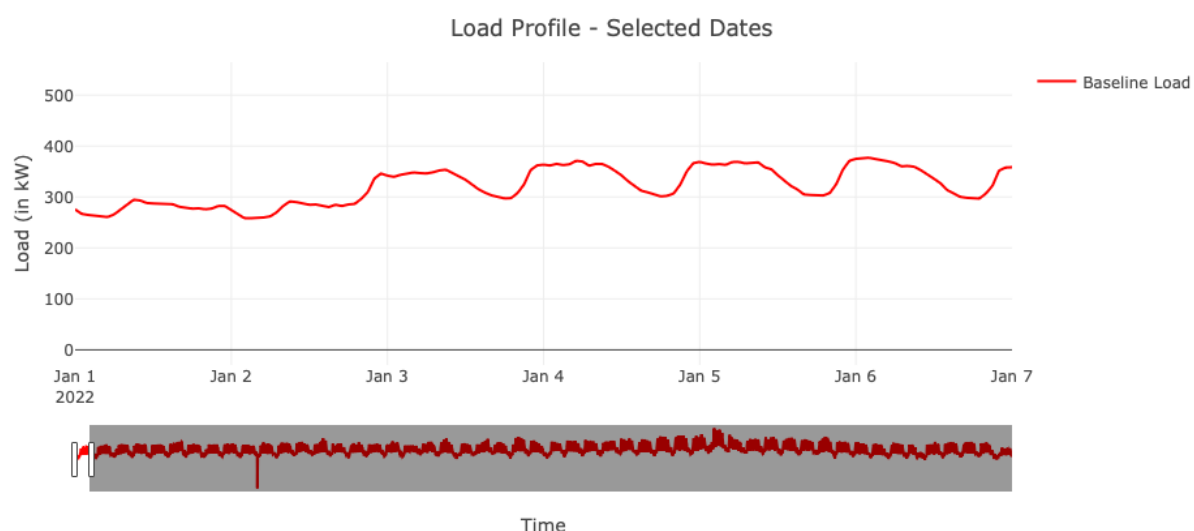


Figure 18: Baseline Load Profile Plot

If you move your cursor to the Time axis, you will notice that the plot shows you a week-long subset of your load data by default. You can adjust the temporal resolution of the plot's data using the dynamic scale on the Time axis to zoom in or out over specific periods. Simply hover

your cursor on the top of the small white window in the greyed-out space of the time axis, and a $\leftrightarrow$ icon will appear. Using your trackpad, drag the $\leftrightarrow$ icon across the Time axis to view load profile data throughout your data range. You can also move across the entire time span of your load data by clicking the $\leftrightarrow$ pan icon in the top right corner of the Load Profile panel. To zoom in or out on a particular month, week, day, or hour, drag the left and right sides of the white window in the greyed-out space to expand or collapse the time horizon visible on the plot. To download the Load Profile plot as an image, click the camera icon () on the top right corner of the Load Profile panel.

After step 1a and 1b, the rest of the steps are the same for Custom Hourly Load Profile data type and the Green Button data types. The remainder of this worked example will focus on the Custom Hourly Load Profile data type to illustrate the functioning of the tool (Figure 19).

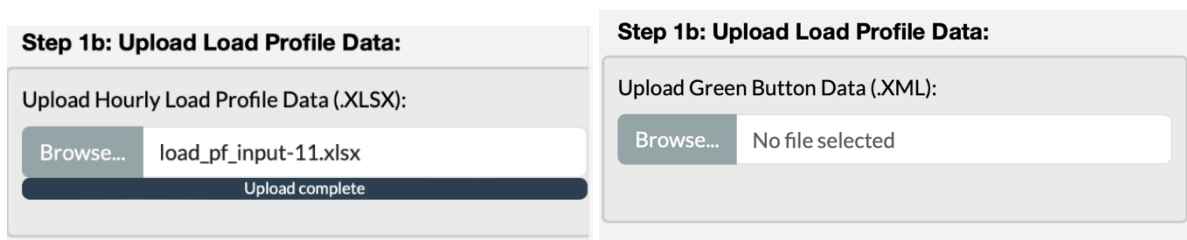


Figure 19: Inputs for Custom Hourly and Green Button Load Profile Data

Step 2: Choose GHG Emission Parameters

In this example, we will choose the default 2022 emissions scenario as it corresponds to the year of our load profile data (Figure 20). In the next dropdown box, select the state in which your facility is located. We will choose California for this worked example. Once you have uploaded your load profile data and selected your GHG emissions parameters, the following plots will appear.

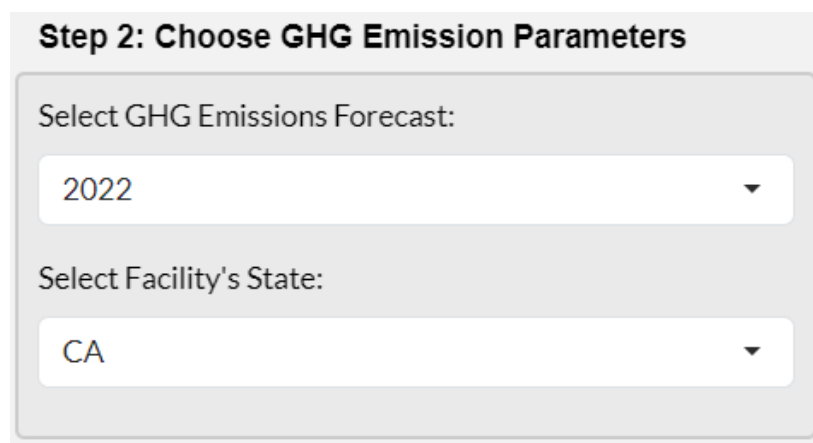


Figure 20: Choosing GHG Emissions Parameters

Facility Hourly CO₂e Emissions

This plot shows you your facility's baseline hourly scope 2 CO₂e emissions (Figure 21). The navigation of this interactive plot is similar to the Load Profile plot (see Step 1b). If you selected and uploaded the Green Button:15 Minute data in step 1, you can also zoom in and view your facility's scope 2 CO₂e emissions at the sub-hourly 15-minute interval (Figure 22).

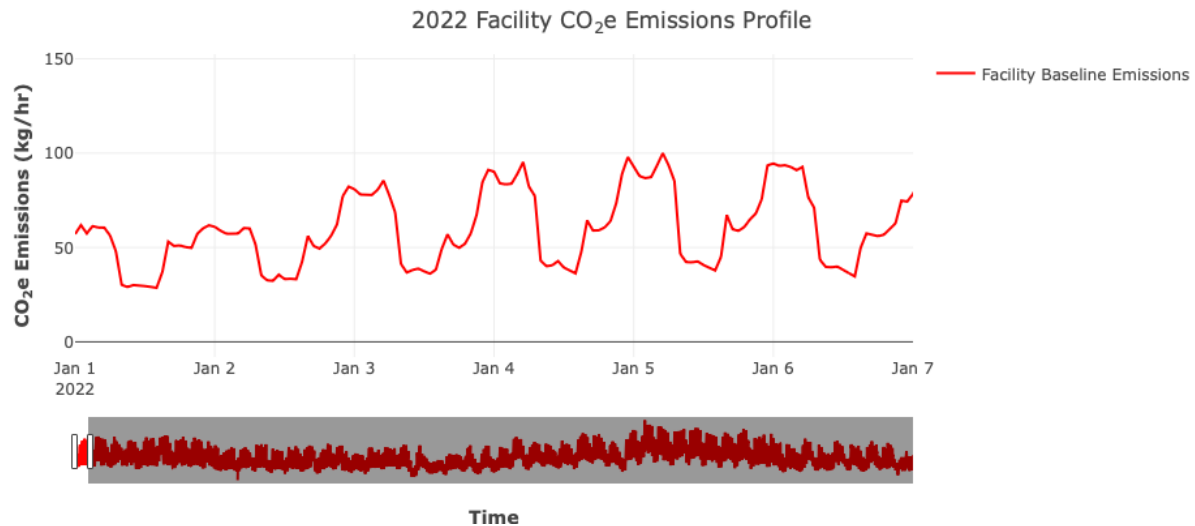


Figure 21: Facility Baseline Emissions

Electric Grid CO₂e Emissions Factor

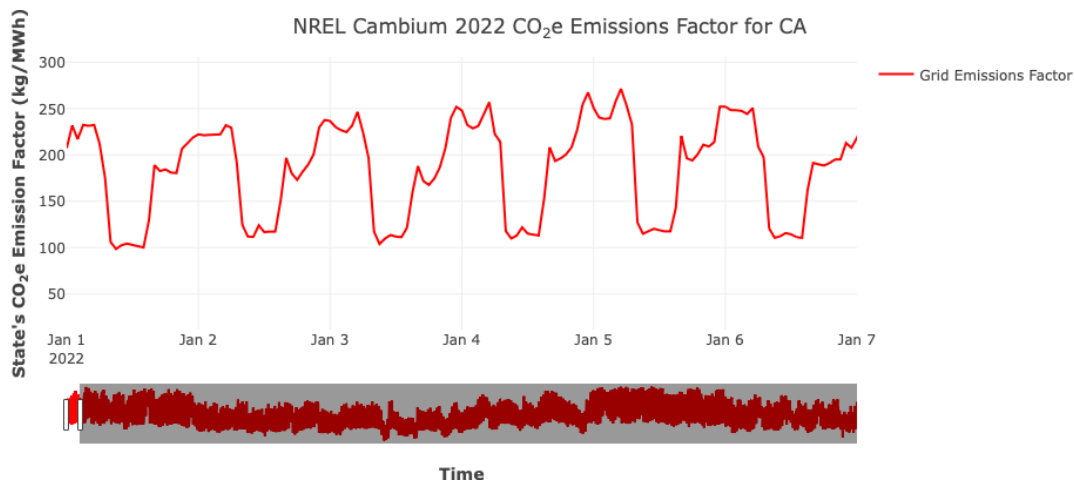


Figure 22: Hourly Grid Emissions Factor

The plot (Figure 22) displayed in this panel shows you the grid emissions factor for the state (California) and year (2022) selected in step 2. Depending on your choice of hourly or 15-minute data in step 1, you can view the grid emissions factor at an hourly or sub-hourly

resolution². This interactive plot's navigation is similar to that of the Load Profile plot and the Facility Hourly CO₂e Emission plot.

Step 3: Select Utility and Rate Plan

Open the Rate Input tab and select the utility company that serves the facility. For this California example, Pacific Gas & Electric Co can be used as an illustration. The second dropdown will then display only that utility's available plans; select the specific plan that matches the facility's current tariff (for example, the appropriate E-19 variant; Figure 23).

Electrical Load Planning Tool

Load Input
Rate Input
Emissions Input
Manage Loads

Select Utility and Rate Plan from Database

1. Select Utility Company:

Pacific Gas & Electric Co

2. Select Specific Rate Plan:

E-19 Medium General Demand TOU (Primary)

Rate Preview

Energy Rates

Period	Rate (\$/kWh)
Wkdy: Jan-Apr, Nov-Dec (12am-8am, 9pm-12am)	\$0.1117
Wknd: Jan-Apr, Nov-Dec (All Day)	\$0.1117
Wkdy: Jan-Apr, Nov-Dec (8am-9pm)	\$0.1124
Wkdy: May-Oct (12am-8am, 9pm-12am)	\$0.1147
Wknd: May-Oct (All Day)	\$0.1147
Wkdy: May-Oct (8am-12pm, 6pm-9pm)	\$0.1202
Wkdy: May-Oct (12pm-6pm)	\$0.1202

Time of Use Demand

Period	Rate (\$/kW)
Wkdy: May-Oct (8am-12pm, 6pm-9pm)	\$14.8600
Wkdy: May-Oct (12pm-6pm)	\$18.7100

Seasonal/Monthly Demand

Period	Rate (\$/kW)
Jan-Apr, Nov-Dec	\$33.1000
May-Oct	\$33.1000

[Download Rate Tables \(.xlsx\)](#)

Figure 23: Selecting the Utility Company and Rate Plan for Example

After the rate plan is selected, the app loads it automatically and displays a Rate Preview. Review the energy-rate periods, TOU demand charges, seasonal demand charges, and any fixed monthly charge represented by the plan. If needed, click Download Rate Tables (xlsx) to

² Please note that in the absence of sub-hourly emissions factor data, the 15-minute emissions rate values are linearly extrapolated by dividing the hourly emission rate by 4.

save a spreadsheet summary. Confirm the displayed information against the facility's current utility tariff before interpreting costs.

Once the load profile and rate plan are loaded, the Cost Plots panel can calculate the facility's monthly and annual baseline electricity costs. The same selected rate is applied to the modified load profile after load-management inputs are generated.

Cost Plot Selected Dates

This bar chart (Figure 24) shows the monthly electricity costs, split into usage and demand costs, associated with the facility's electricity consumption indicated in its baseline load profile. You can hover your cursor over each bar in the chart to see the value for monthly usage and demand costs underlying the electricity bill. Click the camera icon () on the top right corner to download the plot as an image.

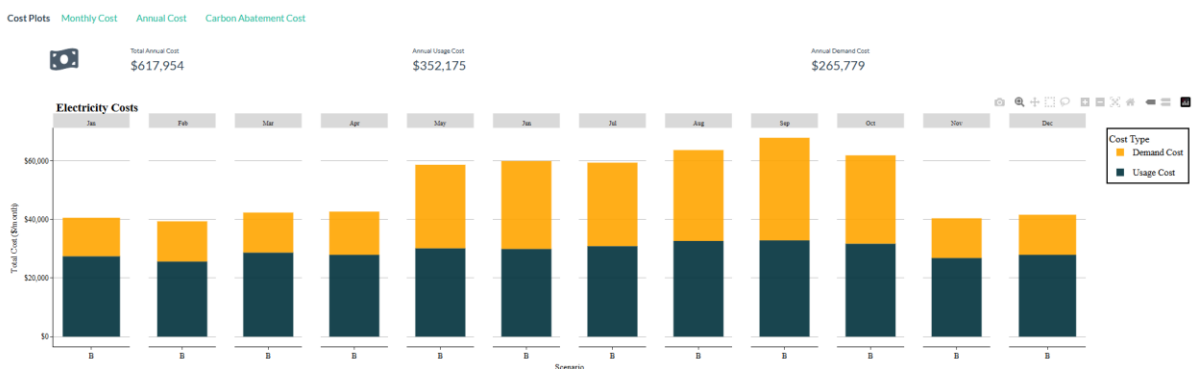


Figure 24: Monthly Cost Plot for Selected Dates

Cost Plot Annual

This plot (Figure 25) shows a single bar chart illustrating the total annual electricity costs, split into usage and demand, that are associated with the facility's baseline load. Navigating this bar chart to view bar values, download underlying data, and download the plot as an image is like the previous cost plot for selected dates.

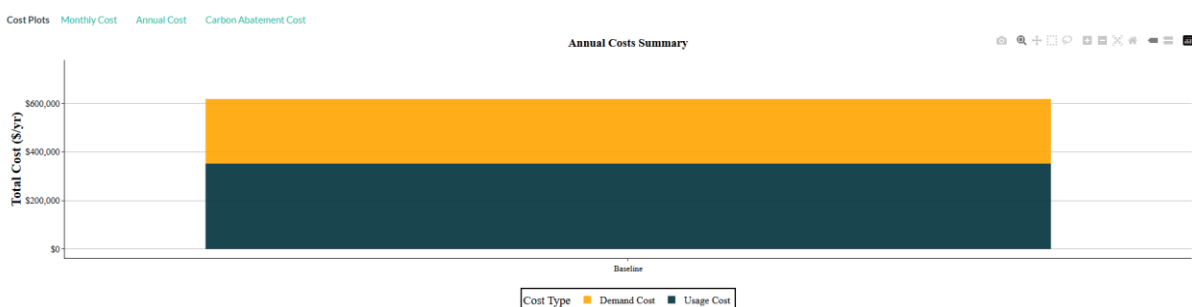


Figure 25: Annual Cost Plot

Abatement Cost Plot

The abatement cost plot uses a bar chart to show the electricity cost increase or savings associated with the scope 2 CO₂e emissions abated because of your load management

decisions. This plot does not appear when you initially upload your load profile and set your cost emissions parameters. Since load additions increase grid electricity consumption and the scope 2 emissions associated with it, there is no abatement cost plot displayed when load is added. This abatement cost plot will only activate when your load shifting, or load shedding actions yield a reduction in emissions. See Figure 11a for a visual of what the abatement cost plot might look like after load shifting decisions have been executed.

Step 4: Enter Load Management Inputs


In this example, we will start by adding load.

Type of load management:

Select the Add/Shed Load option (Figure 26).

Manage load over the weekends:

Select no for this example. We assume that no load management decisions will take place over the weekends (Figure 26).

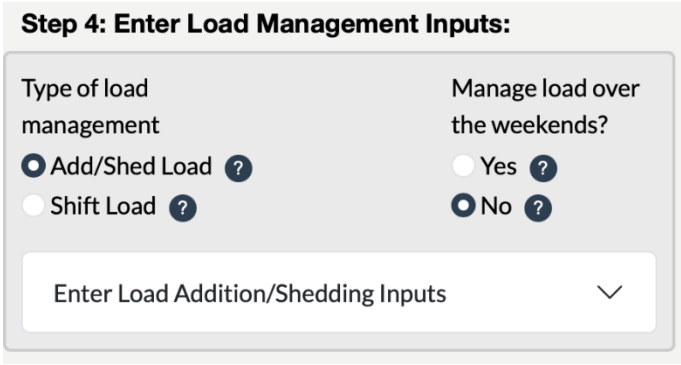

Step 4: Enter Load Management Inputs:

Type of load management	Manage load over the weekends?
☒ Add/Shed Load ?	☐ Yes ?
☐ Shift Load ?	☒ No ?

Enter Load Addition/Shedding Inputs ▾

Figure 26: Load Management Type: Add/shed/shape loads

Enter Load Addition/Shedding Inputs

We will first add load using the *Manually Enter Added Load(s)* option as our input method. After selecting this option (also the default choice), we will click the "Add more Load Input(s)" button to add a total of two load addition decisions (Figure 27). In the Added Load (kW), you can provide the load you want to add (positive value) and use the endpoints of the adjacent slider to define the time range to which the load will be added. See Figure 27 to see the total load values added and the time ranges they were added to as part of this load management decision. Click the generate plot button after you have specified your load management decisions and completed all the preceding steps. The load profile, CO₂e emissions, and cost plot outputs will all update to reflect the changes made to your load profile by your load management decisions. You can now compare what your load shape, scope 2 emissions, and electricity costs look like for your baseline load profile versus your modified load profile.

Enter Load Addition/Shedding Inputs

Select Input Method:

☒ Manually Enter Added Load(s)
 ☐ Upload Existing Spreadsheet

New Load 1

Added Load (kW)

50

Time Range To Add Load

00:00 14:00 – 16:00 23:59

New Load 2

Added Load (kW)

30

Time Range To Add Load

00:00 10:00 – 12:00 23:59

Generate Plot

Add more Load Input(s)

Figure 27: Load Addition/Shed Inputs

Shift Load

We will shift load using the *Manually Enter Added Load(s)* method and the *Upload Existing Spreadsheet* option. We enter 100 kW as the flexible load when specifying the load, we want to shift manually (Figure 28). Using the sliders, we can specify that this load is shifted from 5PM-7PM to 12PM-2PM. Click the generate plot button to update the load profile, CO₂e emissions, and cost plot outputs to reflect the changes made to the load profile by the load shifting decisions in this example. You can now compare the load shape, scope 2 emissions, and electricity costs for the baseline load profile versus the modified load profile.

Enter Load Shifting Inputs

Select Input Method:

☒ Manually Enter Shaped Load(s)
 ☐ Upload Existing Spreadsheet

Shaped Load 1

Flexible Load (kW)

100

Time Range From:

00:00 17:00 – 19:00 20:00

Time Range To:

00:00 12:00 – 14:00 20:00

Figure 28: Load Shifting Inputs

To use the *Upload Existing Spreadsheet*, we must first click the Download Input Data button to download the load management decision input sheet. Open this spreadsheet and fill in your load-shifting inputs by overriding the defaults provided. In this case, where we have already executed load shifting using the *Manually Enter Added Load(s)* method, the defaults

in the downloaded spreadsheet are the load management inputs we provided using the previous method. We will continue to use the same inputs to illustrate the *Upload Existing Spreadsheet* option. Figure 29 shows that the Excel sheet allows you to specify the flexible load you want to shift, the start and end hours of the time range you want to shift the load from, and the time range you want to shift the load to. Save and close the spreadsheet.

A	B	C	D	E
Flexible Load (in kW)	Time Range From Start	Time Range From End	Time Range To Start	Time Range To End
100	17:00:00	19:00:00	12:00:00	14:00:00

Figure 29: Load Management Inputs Spreadsheet for Load Shifting

If you have not already, select the *Upload Existing Spreadsheet* input method and click browse to find and upload the load management input spreadsheet you prepared in the previous step. Once the sheet has been uploaded, go ahead and click the Generate Plot button again to execute your load shifting decisions and update the load profile, emissions, and cost-related outputs.

Step 5: Interpret Results

Upon shifting load, we see an increase in the facility's electricity costs and a reduction in its scope 2 CO₂e emissions. The reduction in the scope 2 CO₂e emissions can be attributed to shifting electricity consumption to morning and daytime hours of surplus renewable electricity production on the grid. This is evident from the modified load shape highlighted in blue in the Load Profile plot (Figure 30) and a net reduction in emission visible in the modified emissions profile (Figure 31). The electricity costs rise because the usage cost savings linked to the shifting of consumption during hours of cheaper TOU electricity rates are offset by the increase in demand charge related payments (Figure 32). The increased costs but lowered emissions translate to positive abatement cost values on the Abatement cost plot (Figure 33).

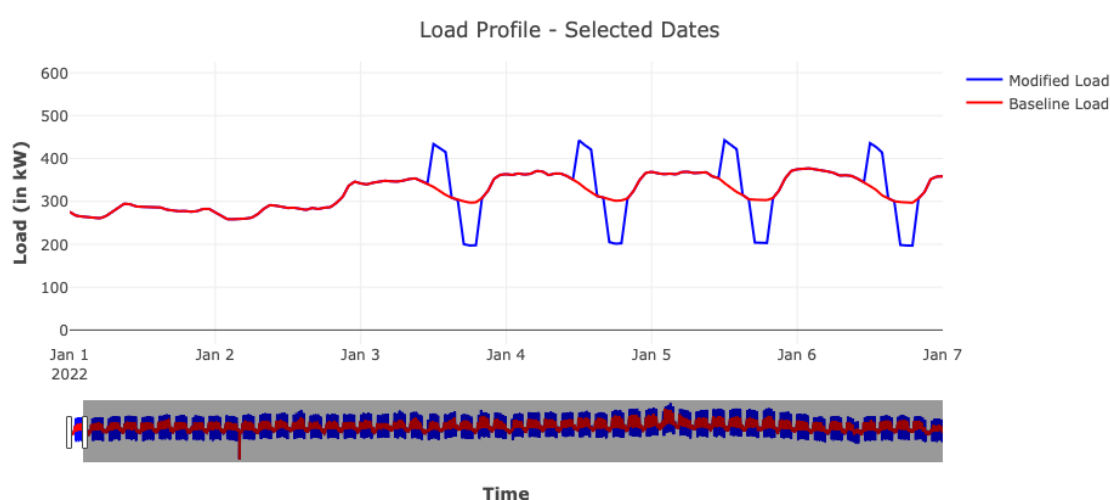


Figure 30: Baseline and Modified Load Profiles

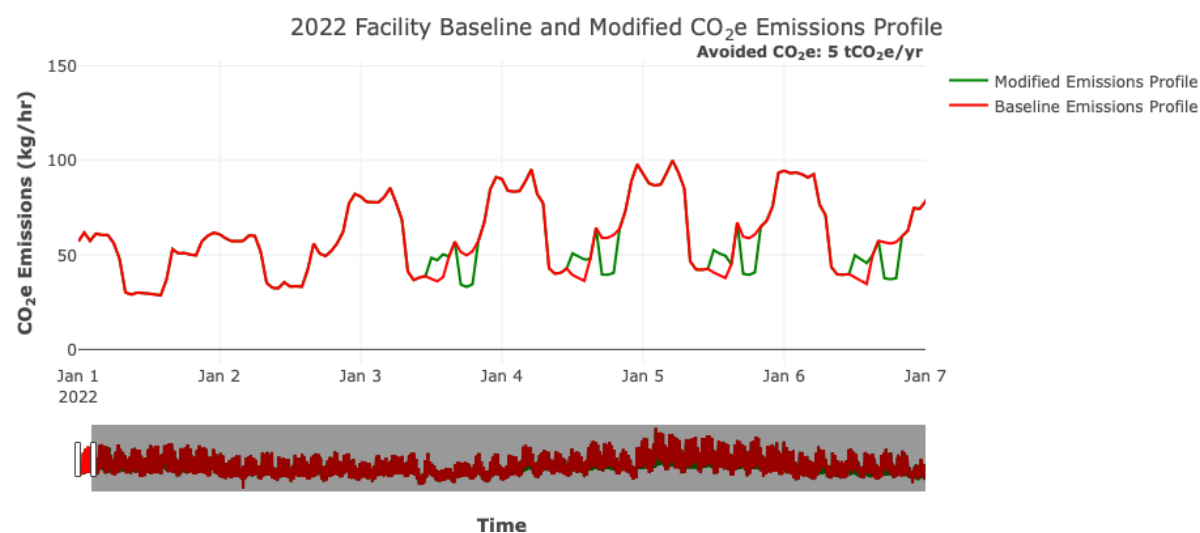


Figure 31: Baseline and Modified Emissions Profile

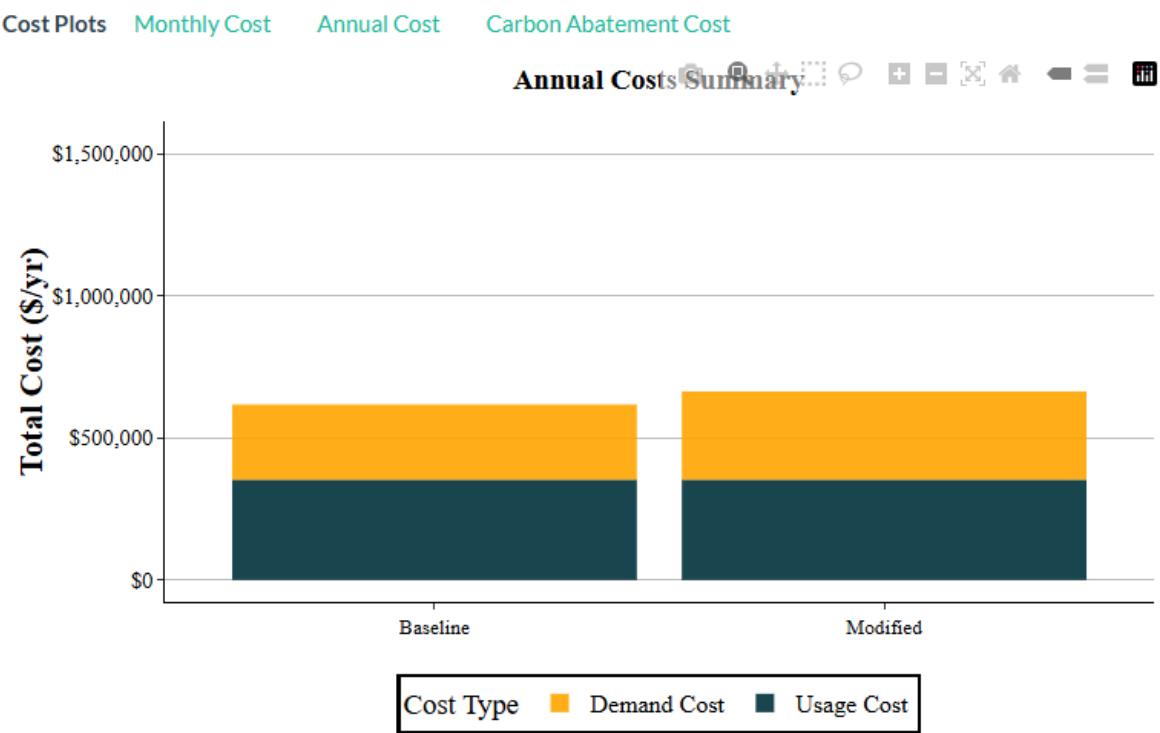


Figure 32: Annual Costs Summary for Baseline and Modified Scenarios

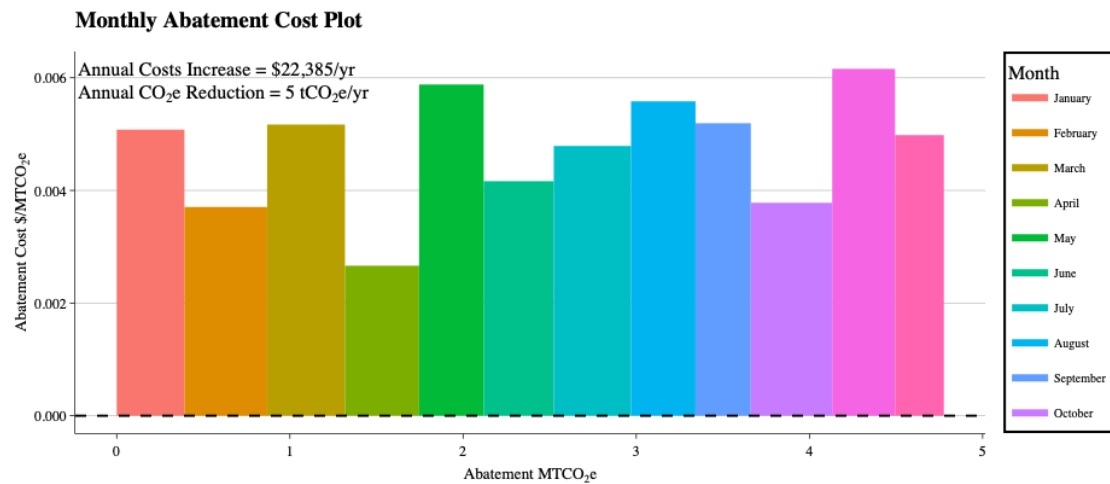


Figure 33: Monthly Abatement Cost Plot

Worked Example: For 12 Months Utility Bills Data Types

This section outlines how to use the Electric Load Planning Tool to execute load management decisions and analyze their impacts using 12 months' utility bills. The procedure can be split into the five steps shown below:

1. Select Your Load Profile Data Type & Date Range
2. Upload Load Profile
3. Select Utility and Rate Plan
4. Enter your Load Management Inputs
5. Interpret Results

Step 1a: Select Your Load Profile Data Type & Date Range

To input the data for the "12 Months Utility Bills" analysis, the user will need first to select the action button "12 months utility bills" and click on the button "Download 12 months Bills Template" (Figure 34). The required data to conduct load planning analysis with the choice as "12 months utility bills" Excel sheet includes entering your periods in the form of Year and Months, followed by energy parameters such as Energy Usage (kWh) and Billed Demand (kW). Users will also need to select whether they operate on weekends or not and their working hours per day (Figure 35).

Step 1a: Select Your Load Profile Data Type & Date Range:

☐ Custom Hourly Load Profile ?
☐ Green Button:15-Minute ?
☐ Green Button:Hourly ?
☒ 12 Months Utility Bills ?

Select Date Range: ?

2022-01-01 - 2022-12-31

[Download 12 months Bills Template](#)

Figure 34: Prepare your 12 Months Utility Bills Data

Year	Month	Energy Usage, (kWh)	Billed Demand, (kW)
2023	January	467,556	1243
2023	February	491,493	1271
2023	March	517,635	1200
2023	April	513,095	1254
2023	May	545,780	1200
2023	June	490,251	1294
2023	July	562,127	1407
2023	August	594,446	1398
2023	September	495,666	1337
2023	October	467,462	1277
2023	November	492,539	1233
2023	December	591,213	1232

Work on weekends?	N	From Dropdown, choose "Y" or "N"
Shift Start Time	5:00	From Dropdown, Choose your shift start hour
Shift End Time	23:00	From Dropdown, Choose your shift end hour
Please input values in these cells		

Figure 35: Input your utility bills data into the Excel template (the figure illustrates default data, which can be removed or overwritten for inputting user-specific data)

Step 1b: Upload Load Profile

Once the Excel template is filled out, it can be quickly loaded into the web tool by uploading through the interface shown in Figure 36.

Step 1b: Upload Load Profile Data:

Upload 12 Months Utility Bill Data (.XLSX):

Browse...

No file selected

Figure 36: Upload Load Profile Panel

Once the file has been loaded, an 8,760-hour load profile will be displayed in the right section of the tool (Load Profile tab). The image defaults to a limited number of days in the main panel to prevent the 8,760-hour load profile from getting squished in the image panel. If the user would like to view the load profile for the entire year in one panel, they could extend the panel under the main graph (Figure 37).

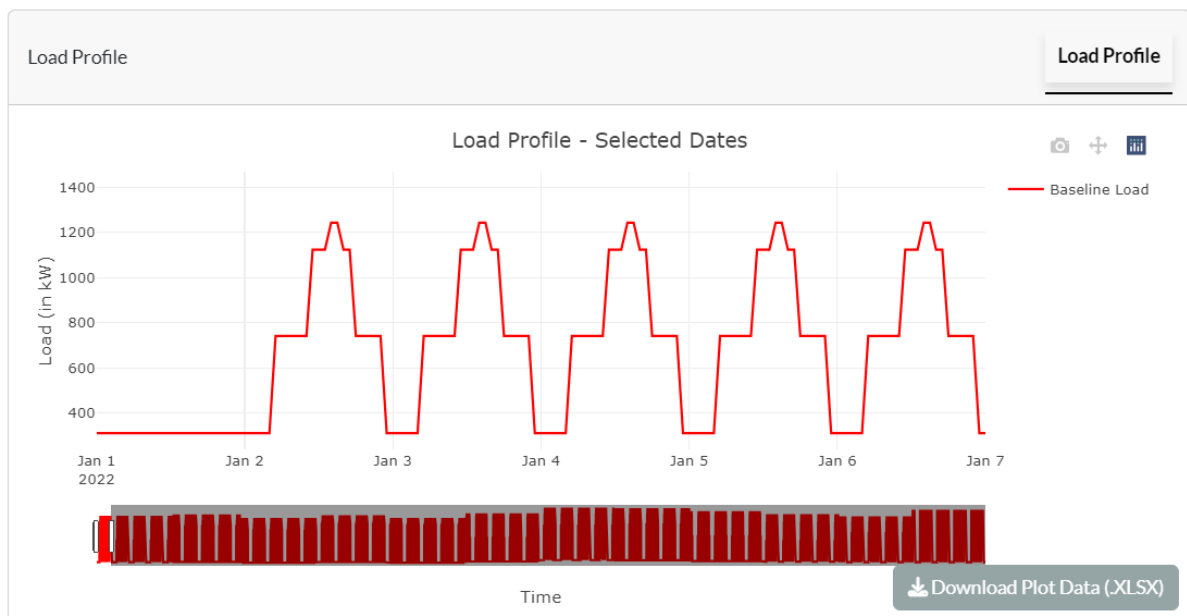


Figure 37: Load Profile Data for the Utility Bills Template

Step 2: Choose GHG Emission Parameters

Once the load profile has been loaded and displayed in the display panel, the user should select the year and the states for which they are performing their analysis. Users could either select the NREL Cambium Mid-Case Average Emission Factors Estimates or the U.S. EPA's eGRID 2022 estimates. For this exercise, we select NREL Cambium's 2022 data for the state of California.

Step 2: Choose GHG Emission Parameters

Select GHG Emissions Forecast:

2022

Select Facility's State:

CA

Figure 38: Choose GHG Emissions Parameters Panel

After both selections, the tool displays the hourly emissions for the facility based on their utility bills, location (state), and that particular year's emissions factors (Figure 39). The figure can be seen in the "CO₂e Plots" panel's "Facility Hourly CO₂e Emissions" tab. Under the chart, the window can be navigated to observe the emissions in various parts of the year. The window could also be expanded to display all hours in the corresponding year. Finally, the data can be downloaded using the "Download Plot Data (.xlsx)" button.

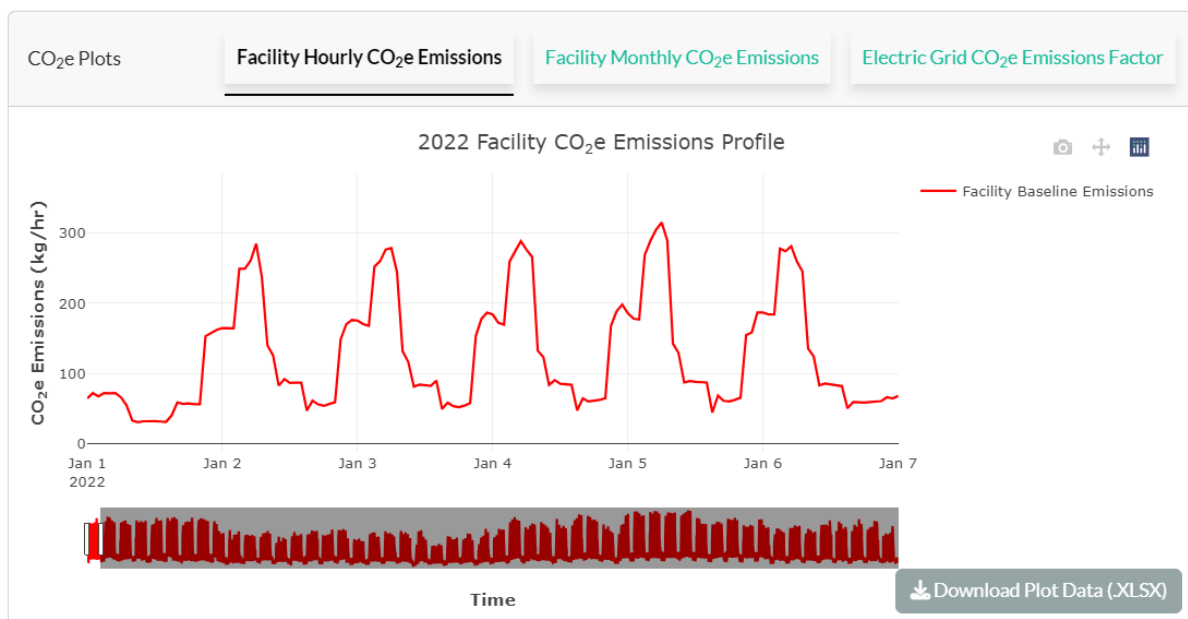


Figure 39: Facility Hourly CO₂e Emissions Plot

Annual emissions based on individual months can also be seen in the second tab named "Facility Monthly CO₂e Emissions" within the CO₂e emissions plots. Figure 40 summarizes the facility's scope 2 emissions each month.

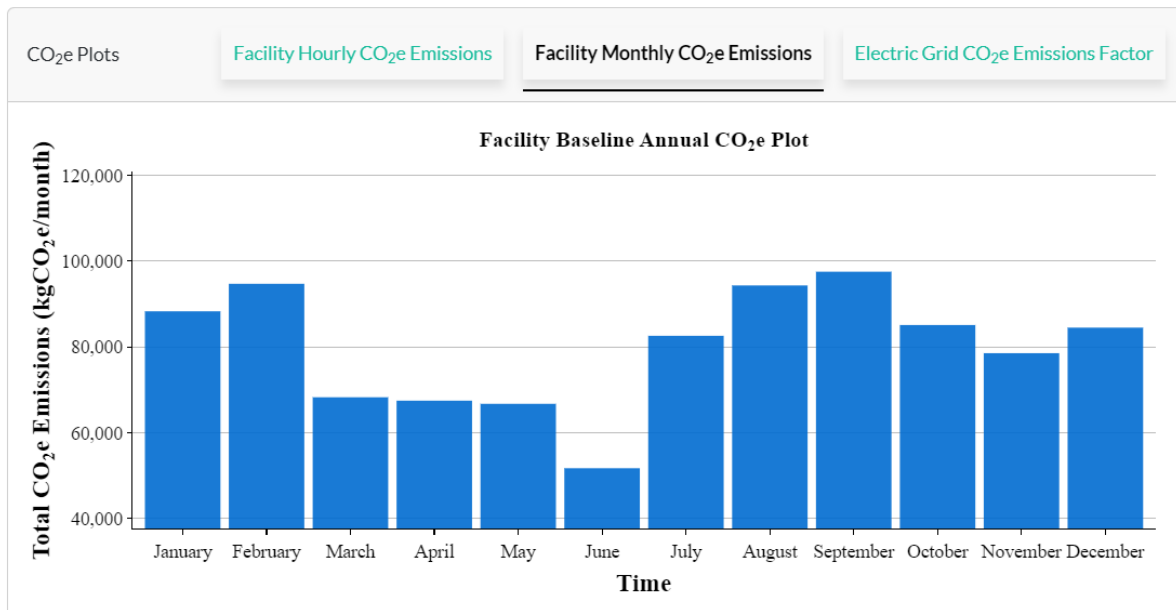


Figure 40: Baseline Monthly Emissions Plot

Step 3: Select Utility and Rate Plan

The 12 Months Utility Bills template is used only to construct the 8,760-hour load profile; it no longer supplies the electricity rate structure. After the load-profile file is uploaded, open the Rate Input tab, select the facility's utility company, and then select the exact rate plan from the utility-specific list.

Figure 41: Selecting a Utility Company and Rate Plan for the 12-Month-Bills Example

The app automatically translates the selected URDB record and displays the Rate Preview. Review the energy and demand tables, download the optional spreadsheet summary if useful, and compare the plan with the current tariff. The loaded schedules and charges are then applied to the reconstructed hourly load profile when the baseline and modified cost plots are calculated.

Electrical Load Planning Tool

[Load Input](#)
[Rate Input](#)
[Emissions Input](#)
[Manage Loads](#)

Select Utility and Rate Plan from Database

1. Select Utility Company:

Pacific Gas & Electric Co

2. Select Specific Rate Plan:

E-19 Medium General Demand TOU (Primary)

Rate Preview

Energy Rates	
Period	Rate (\$/kWh)
Wkdy: Jan-Apr, Nov-Dec (12am-8am, 9pm-12am)	\$0.1117
Wknd: Jan-Apr, Nov-Dec (All Day)	\$0.1117
Wkdy: Jan-Apr, Nov-Dec (8am-9pm)	\$0.1124
Wkdy: May-Oct (12am-8am, 9pm-12am)	\$0.1147
Wknd: May-Oct (All Day)	\$0.1147
Wkdy: May-Oct (8am-12pm, 6pm-9pm)	\$0.1202
Wkdy: May-Oct (12pm-6pm)	\$0.1202

Time of Use Demand	
Period	Rate (\$/kW)
Wkdy: May-Oct (8am-12pm, 6pm-9pm)	\$14.8600
Wkdy: May-Oct (12pm-6pm)	\$18.7100

Seasonal/Monthly Demand	
Period	Rate (\$/kW)
Jan-Apr, Nov-Dec	\$33.1000
May-Oct	\$33.1000

[Download Rate Tables \(.xlsx\)](#)

Figure 42: Reviewing the Loaded Rate for the 12-Month-Bills Example

Step 4: Enter your Load Management Inputs

Users could either add, shed, or shift their load. The options for adding and shedding the load are contained within the same radio button, while shifting load is in the second radio button. In the example, we add a new load of 50 kW between 12:30 PM and 2:30 PM. In order to shed the load, please enter the load with a negative value. Further, to shift the load, add the load data followed by periods to shift from and shift to. Click the generate plot button after entering the desired inputs (Figure 43). This furthers the tool operation by updating all the existing charts with baseline and modified load.

Step 4: Enter Load Management Inputs:

Type of load management

☒ Add/Shed Load ?

☐ Shift Load ?

Enter Load Addition/Shedding Inputs ^

Select Input Method:

☒ Manually Enter Added Load(s)

☐ Upload Existing Spreadsheet

New Load 1

Added Load (kW)

Time Range To Add Load

00:00

12:30 – 14:30

Generate Plot

Add more Load Input(s)

Step 4: Enter Load Management Inputs:

Type of load management

☐ Add/Shed Load ?

☒ Shift Load ?

Enter Load Shifting Inputs ^

Select Input Method:

☒ Manually Enter Shaped Load(s)

☐ Upload Existing Spreadsheet

Shaped Load 1

Flexible Load (kW)

Time Range From:

17:15 – 19:15

Time Range To:

12:30 – 14:30

Generate Plot

Add more Shaped Load(s)

Figure 43: Add or Shift Load Options based on the selection made in the radio buttons

Step 5: Interpret Results

The generated plots will have modified loads represented by red lines in Figure 44. On top of the existing information, there is a modified load and emissions line chart. Further, there is also a monthly baseline and modified emissions bar chart. Adding a load would increase energy consumption and GHG emissions. The new data can be downloaded using the "Download Plot Data (.xlsx)" below the corresponding graphs.

User Guide for Electric Load Planning Tool

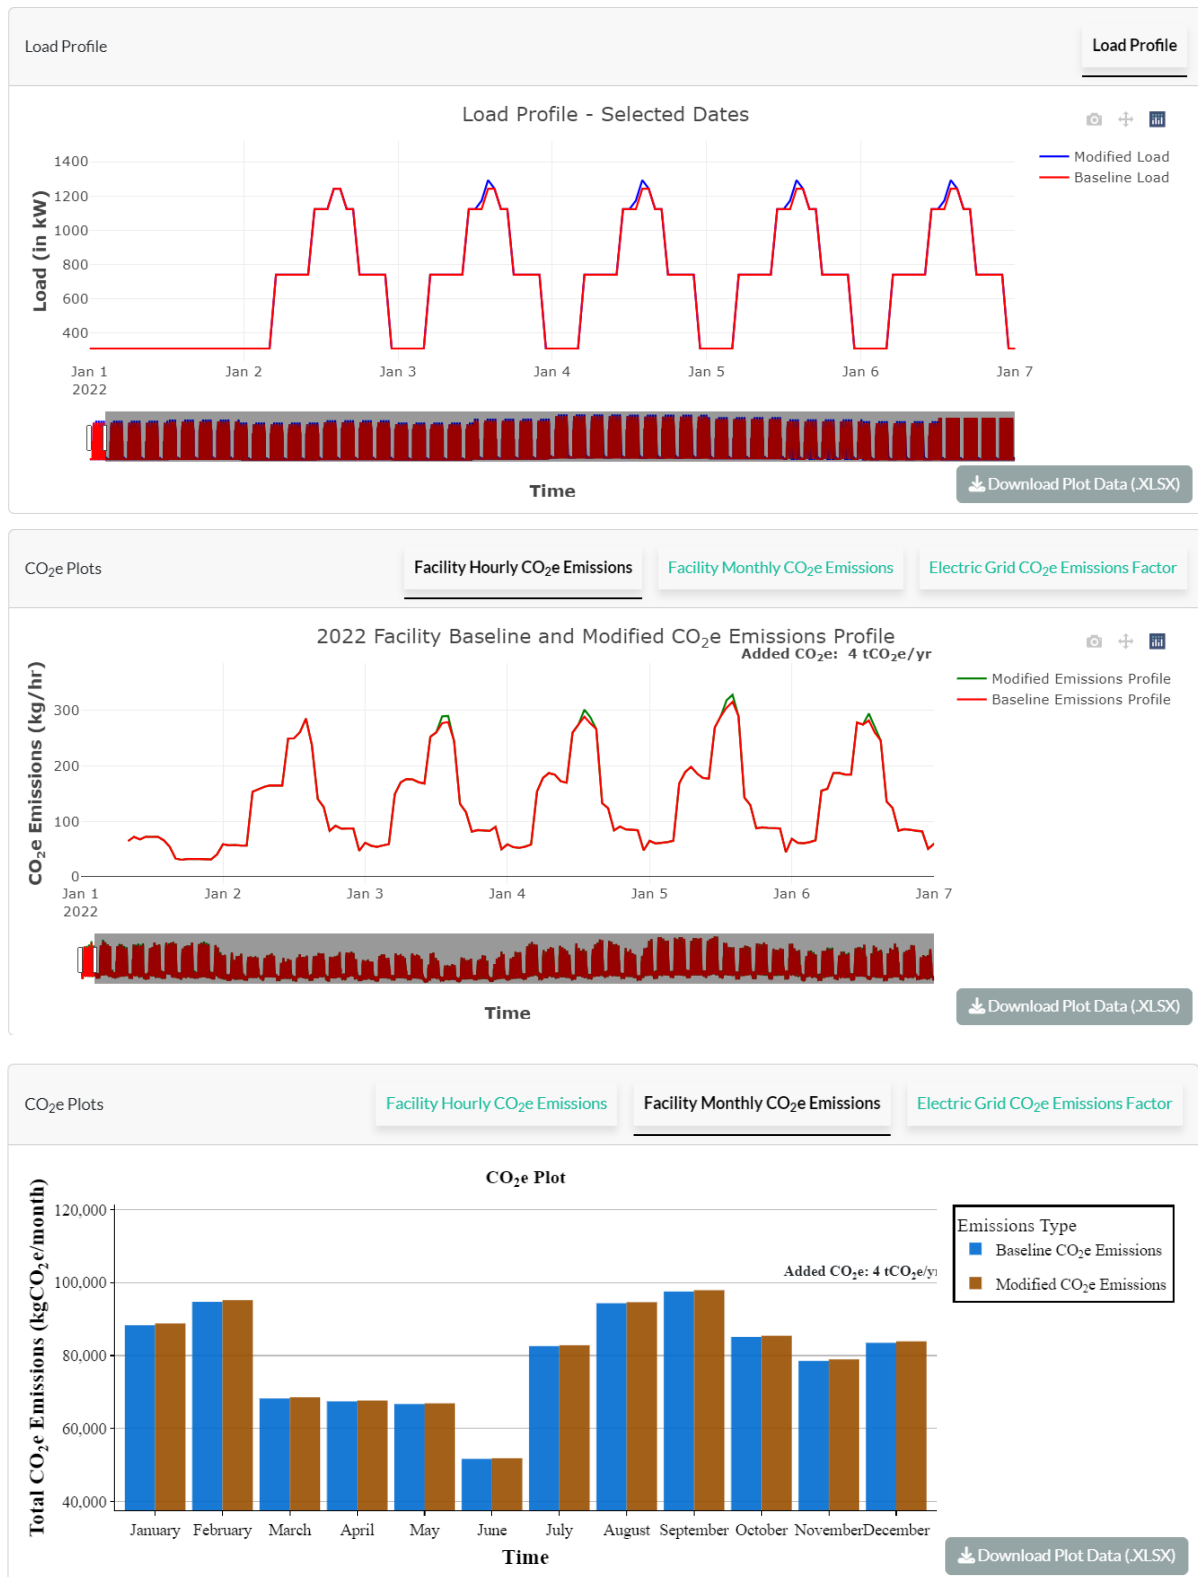


Figure 44: Added Load and CO₂e Charts

On the third row of the graphs, there are three tabs pertaining to the cost plots for the selected dates, calendar year, and LCAC plot based on each month. The costs will change depending on whether the load has been added or shifted. These plots help realize the cost

impacts of the added or shifted loads. The first chart refers to the baseline and modified usage and demand costs for the added load of 50 kW each month. In order to see the data, the user could hover around the bar charts or download the data through the “Download Plot Data (.xlsx)” button below.

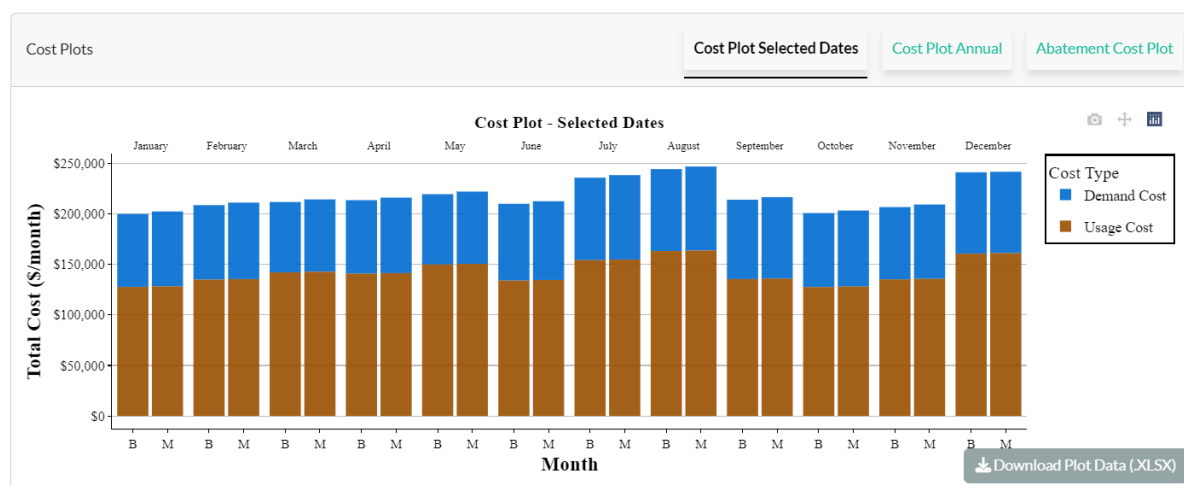


Figure 45: Selected Dates Cost Plot

The second plot is the annual cost savings plot for usage and demand costs. Based on the input selection of adding, shedding, or shifting loads, users will be provided with these bar charts with annotations that specify whether there is a cost savings or increment.

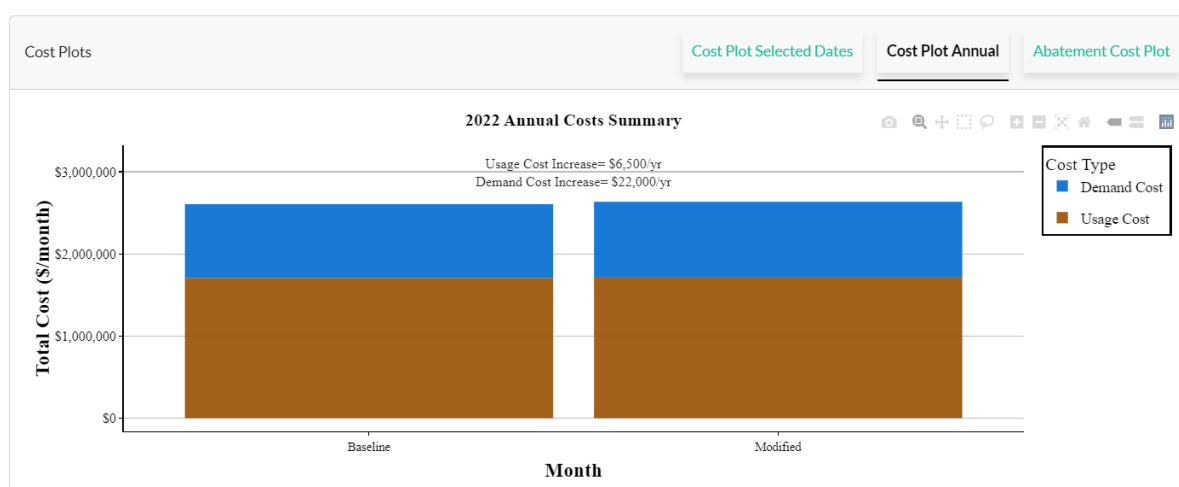


Figure 46: Annual Cost Plot

Finally, the user is provided with the abatement cost plot that pertains to the \$/ton value for all selected months in the calendar year. Please note that if you add a load, the cost curve graph will not display because adding a load would not reduce emissions. In the figure below, we shed a 50 kW load for the same period to obtain the results in Figure 47. The diagram also neatly states the annual CO₂e and cost implications.

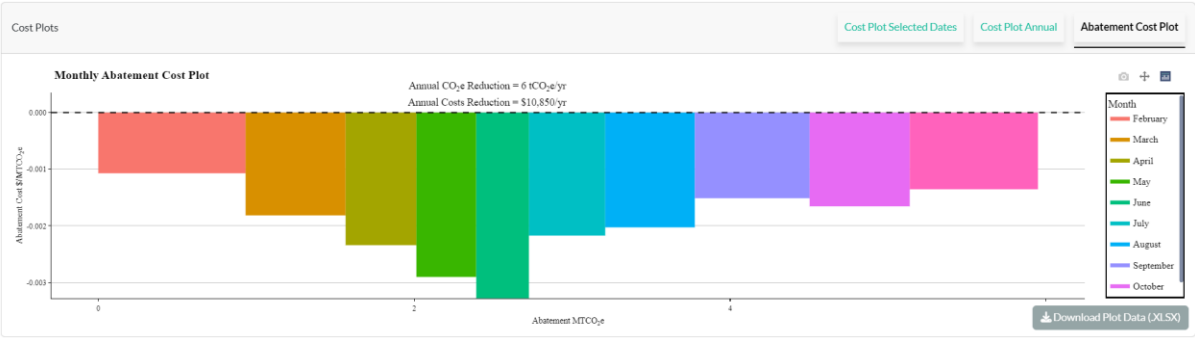


Figure 47: LCAC Plot for the Shed Load

References

1. Gagnon, Pieter; Cowiestoll, Brady; Schwarz, Marty (2023): Cambium 2022 Data. National Renewable Energy Laboratory. <https://scenarioviewer.nrel.gov>
2. Miller, G. J., Novan, K., & Jenn, A. (2022). Hourly accounting of carbon emissions from electricity consumption. *Environmental Research Letters*, 17(4), 044073. <https://doi.org/10.1088/1748-9326/ac6147>
3. Nandy, P., Botts, A., & Wenning, T. (2022). Demand Response in Industrial Facilities (ORNL/SPR-2021/2299; Better Buildings, Better Plants). Oak Ridge National Laboratory. <https://info.ornl.gov/sites/publications/Files/Pub184294.pdf>
4. Summerbell, D. L., Khripko, D., Barlow, C., & Hesselbach, J. (2017). Cost and carbon reductions from industrial demand-side management: Study of potential savings at a cement plant. *Applied Energy*, 197, 100–113. <https://doi.org/10.1016/j.apenergy.2017.03.083>
5. OpenEI. (n.d.). Utility Rate Database (URDB). National Renewable Energy Laboratory. https://openei.org/wiki/Utility_Rate_Database