IBM-ASSIGNMENT-4

TEAM ID: PNT2022TMID26608

NAME: SUBANANDHINI.G

ROLL NO: 212919104048

1.Write Code and connections in wokwi for ultrasonic sensor. whatever distance is less than 100 cms send "Alert" to ibm cloud aand display in device recent events.


```
Solution:
//Pins
const int TRIG_PIN = 7; const
int ECHO_PIN = 8;
//Anything over 400 cm (23200 us pulse) is "out of range" const
unsigned int MAX DIST = 23200;
void setup() {
// The Trigger pin will tell the sensor to range find
Pin Mode(TRIG PIN, OUTPUT); digital
Write(TRIG PIN, LOW);
//Set Echo pin as input to measure the duration of
//pulses coming back from the distance sensor
pinMode(ECHO PIN, INPUT);
```

```
// We'll use the serial monitor to view the sensor output
Serial.begin(9600);
}
void loop() { unsigned
long t1; unsigned
long t2; unsigned
long pulse width;
float cm; float
inches;
// Hold the trigger pin high for at least 10 us
digitalWrite(TRIG_PIN, HIGH);
delayMicroseconds(10);
digitalWrite(TRIG PIN, LOW);
// Wait for pulse on echo pin while (digitalRead( ECHO_PIN )==0 );
// Measure how long the echo pin was held high (pulse width)
// Note: the micros() counter will overflow after-70 min t1=
micros ();
 while (digitalRead(ECHO PIN) == 1);
t2= micros (); pulse_width = t2-t1;
// Calculate distance in centimeters and inches. The constants
//are found in the datasheet, and calculated from the assumed speed
```

```
// of sound in air at sea level (- 340m/s)
cm=pulse_Width / 58;
                             inches =
pulse_width/148.0;
//
     Print
                          if
            out
                 results
(pulse_width >MAX _ DIST ){
Serial.println("Out of range");
} else {
Serial.println("*******************************);
Serial.print("The Measured Distance in cm: ");
Serial.println(cm);
if( cm < 100){
   //while(true){
   Serial.println("Alert!!");
   //}
}
Serial.print("********************************);
}
//wait at least 1000ms before next measurement
Delay(1000);
}
```

Output:

1.If the distance is less than 100 cms, it alerts.

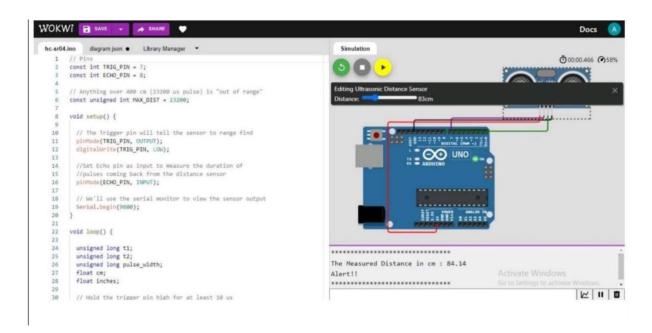

2.If the distance is more than 100 cms, it won't alert

```
WOKWI B SAVE
                                                                                                                                                                 Docs
 hc-sr04.ino
             diagram json ● Library Manager ▼
                                                                                          Simulation
                                                                                                                                                           ₫00:00.599 (%62%
         const int TRIG_PIN = 7;
         const int ECHO_PIN = 8;
         // Anything over 400 cm (23200 us pulse) is "out of range"
        const unsigned int MAX_DIST = 23200;
         void setup() {
           // The Trigger pin will tell the sensor to range find
                                                                                                              SERVICE CHE -) ES
           pinMode(TRIG_PIN, OUTPUT);
                                                                                                                  OO UNO
           digitalWrite(TRIG_PIN, LOW);
    12
   14
15
           //Set Echo pin as input to measure the duration of 
//pulses coming back from the distance sensor
           pinMode(ECHO_PIN, INPUT);
    17
18
           // We'll use the serial monitor to view the sensor output
   19
20
           Serial.begin(9600);
                                                                                                                  POWER AMALOS IN
   22
23
         void loop() {
           unsigned long t1;
   25
           unsigned long t2;
unsigned long pulse_width;
                                                                                       The Measured Distance in cm : 227.10
                                                                                       **********
                                                                                                                                         Activate Windows
           float inches;
                                                                                                                                         Go to Settings to activate Windows.
```

3. Simulation and code execution

