

Workshop StarterKit ez-Way® MQTT APIs with FT2J + LD6A

IDEC ez-Wheel
January 2026



■ Summary


- Workshop
- FT2J Interface
 - Initial Screen
 - LD6A Interface
 - Settings Screen
 - Go to Point Interface
 - ez-Way Missions Interface
 - Monitor errors & warnings



Workshop

■ A Loading Area is supplying 3 Kitting Stations

- Moving the goods from Loading Area to the Kitting Stations should be automated.
- An operator standing at the Loading Area can fill the robot and send it to one of the 3 Kitting Stations.
- Operators working at the Kitting Stations, retrieve the goods and send back the robot to the Loading Area.

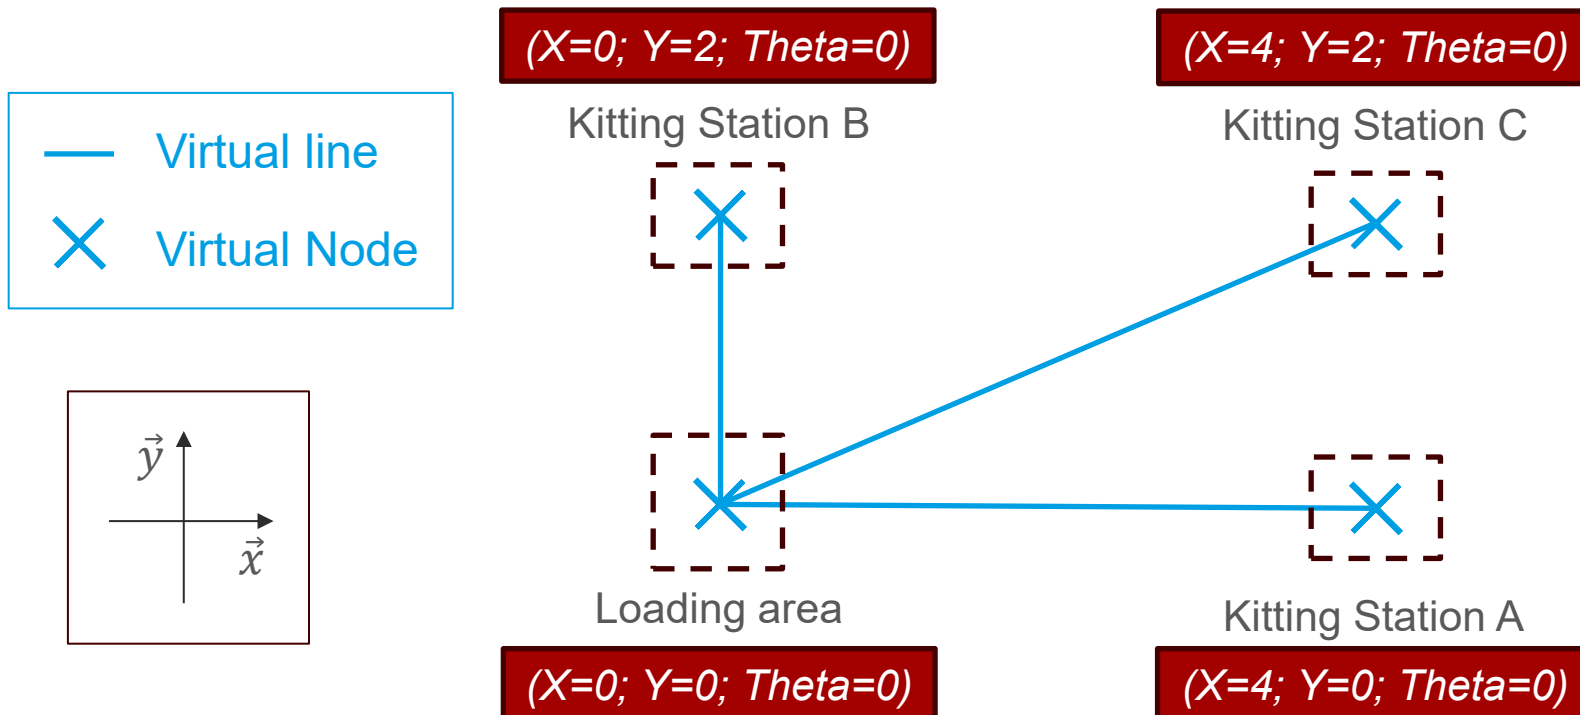


The “Go to Point Interface” can configure paths from the Loading Area to the Kitting Stations (A, B, C).

The orders are generated on the FT2J with the coordinates and speed of the Kitting Stations.

During those orders, the robot will only move forward in a straight line.

Workshop overview: Kitting scenario (ez-Way API)

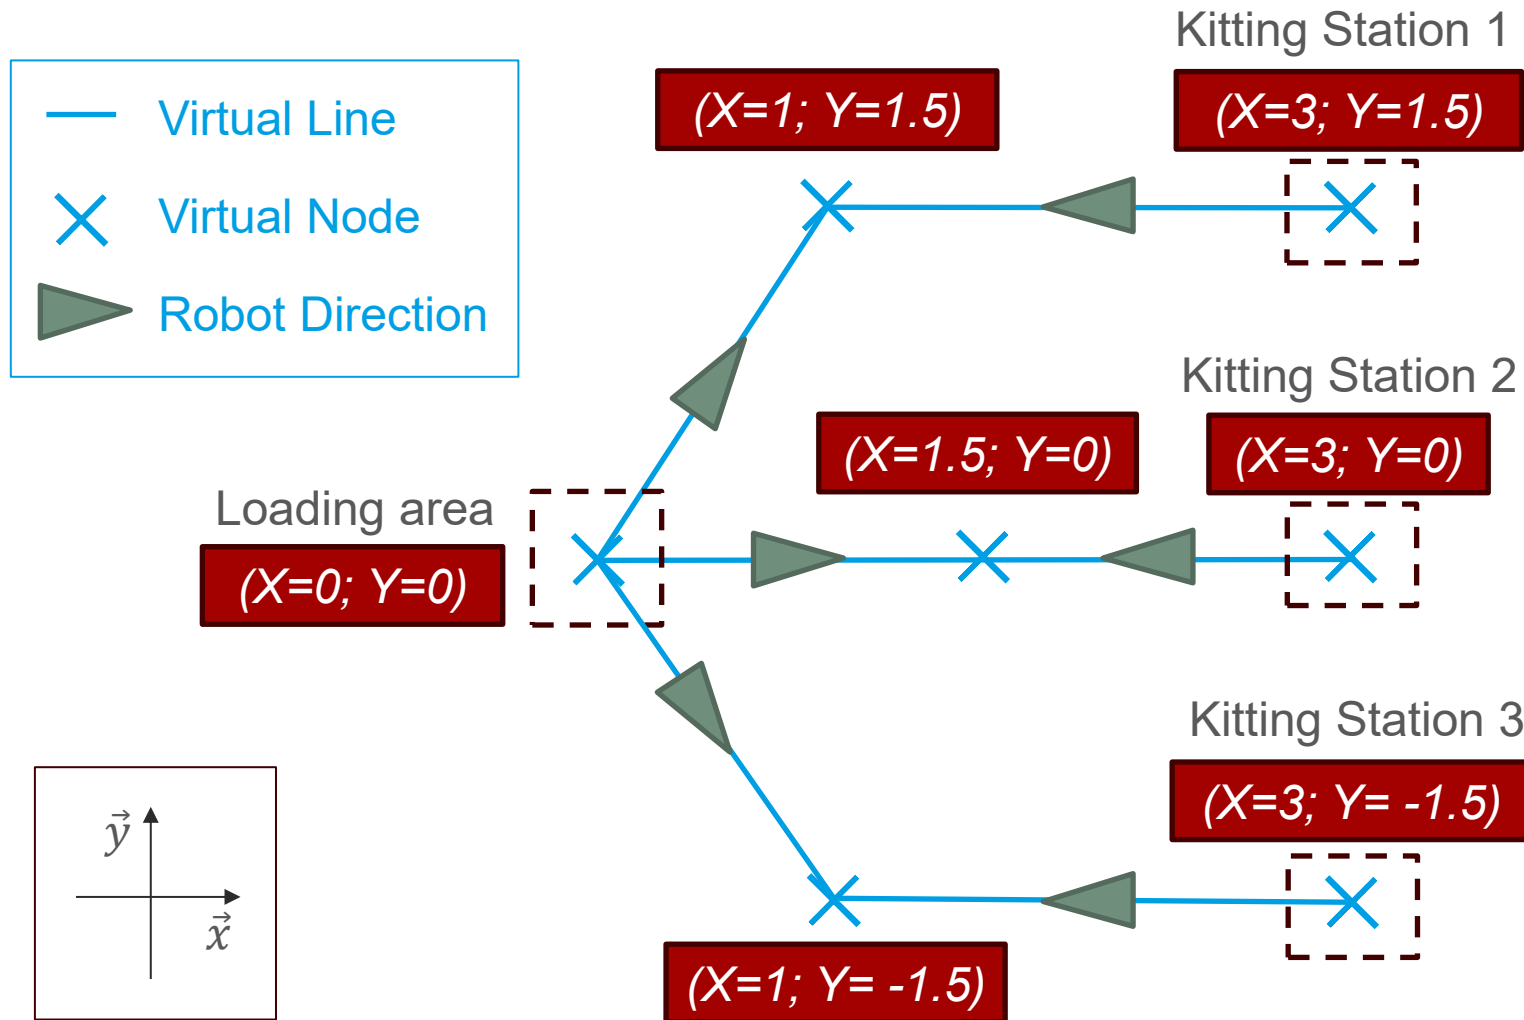

The “ez-Way Missions Interface” can trigger missions from the FT2J screen.

The missions are pre-configured in ez-Way Config and can include any actions available on ez-Way.

On this example the robot will move in both directions and rotate during the mission.




FT2J Interface




Initial Screen


Initial screen

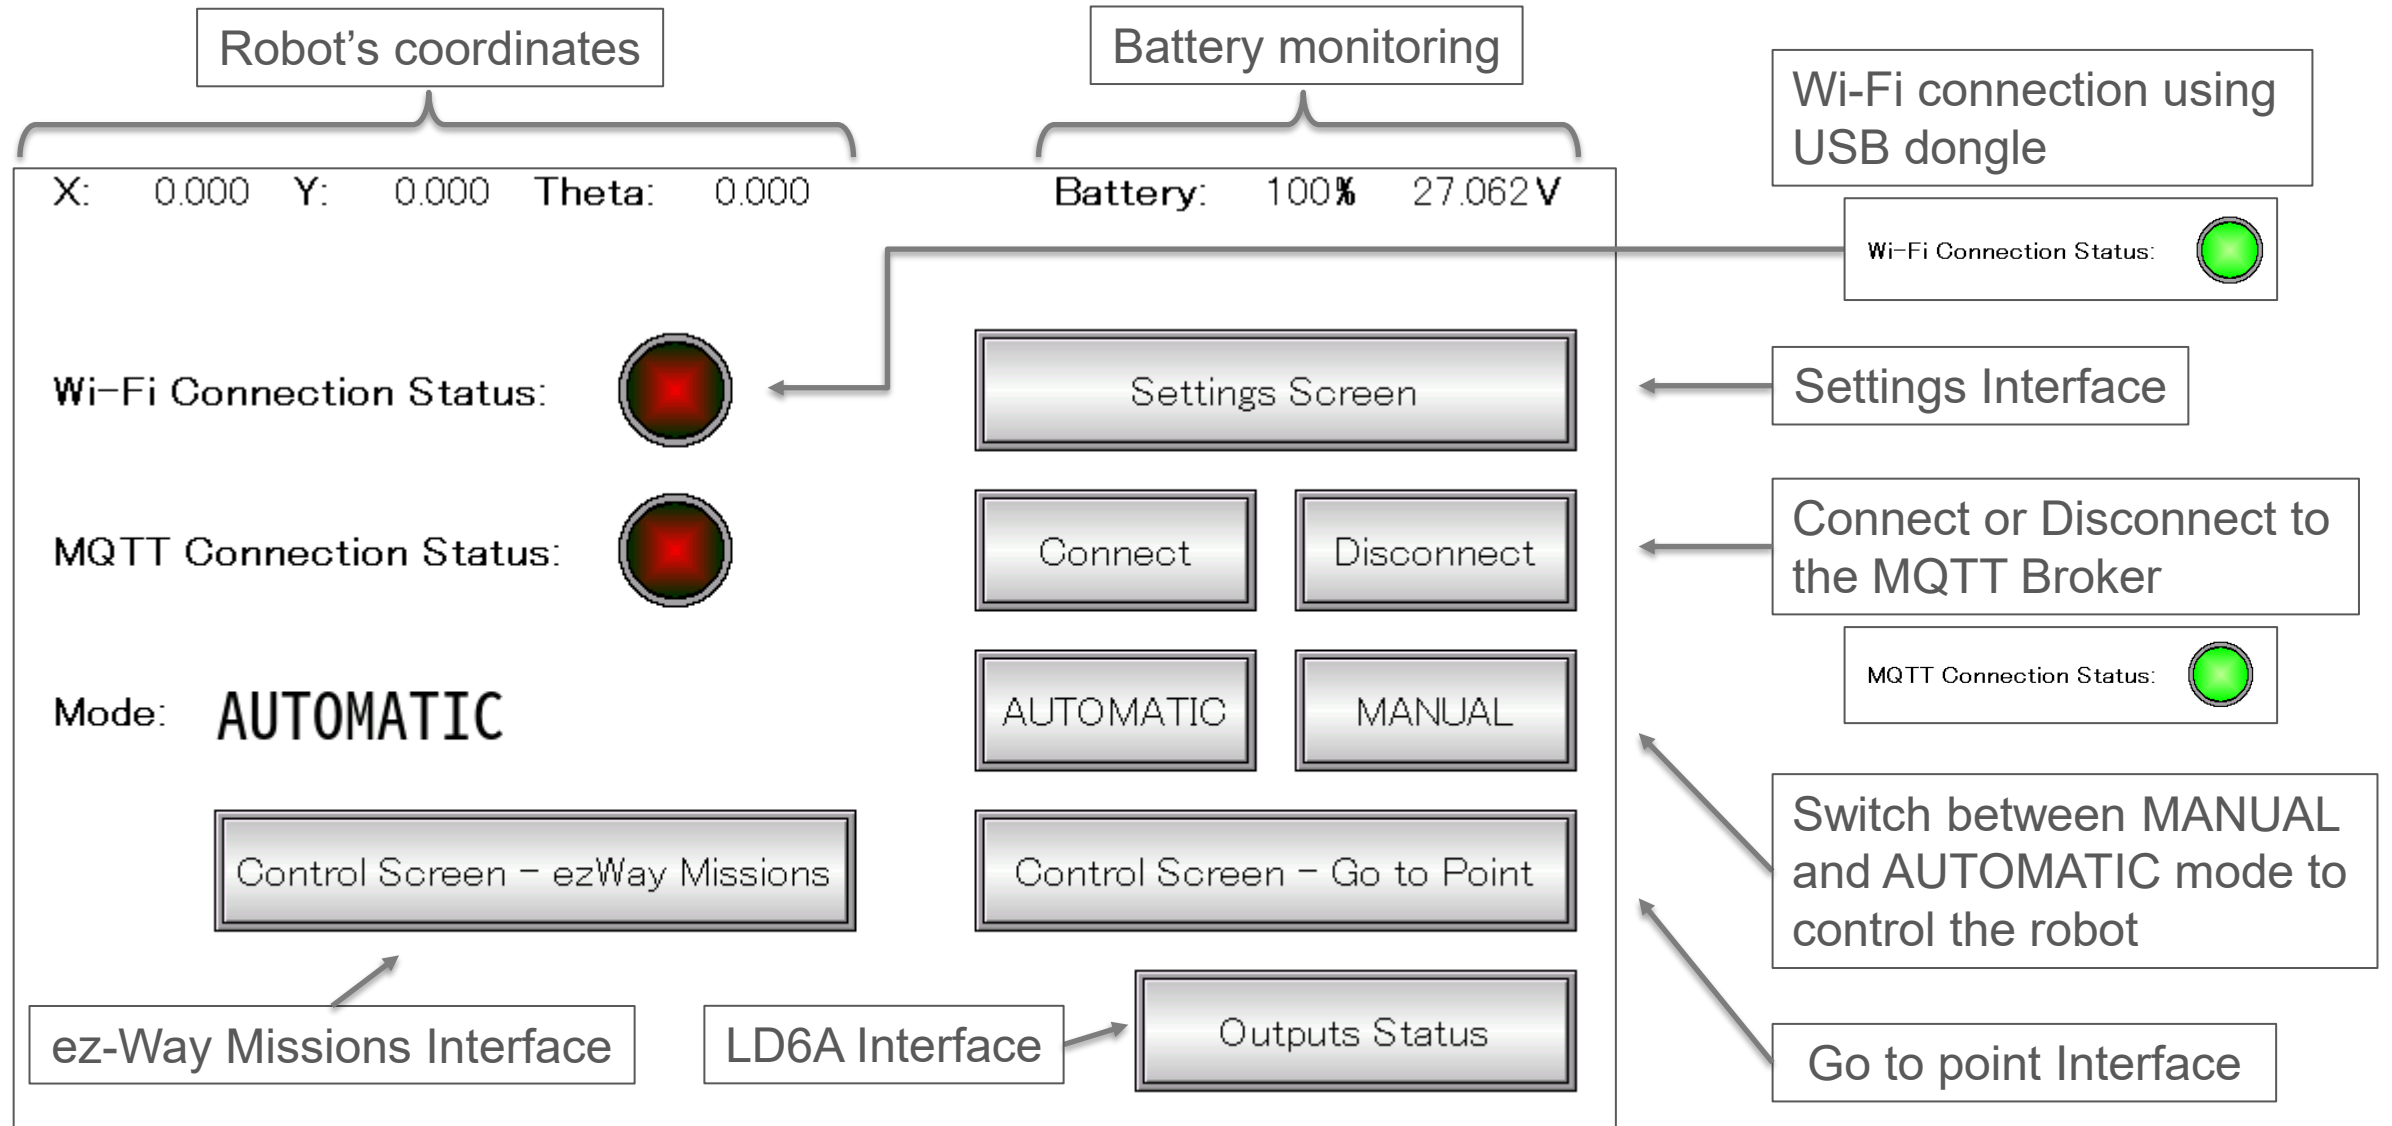

Monitor errors and acknowledge *(if necessary)*

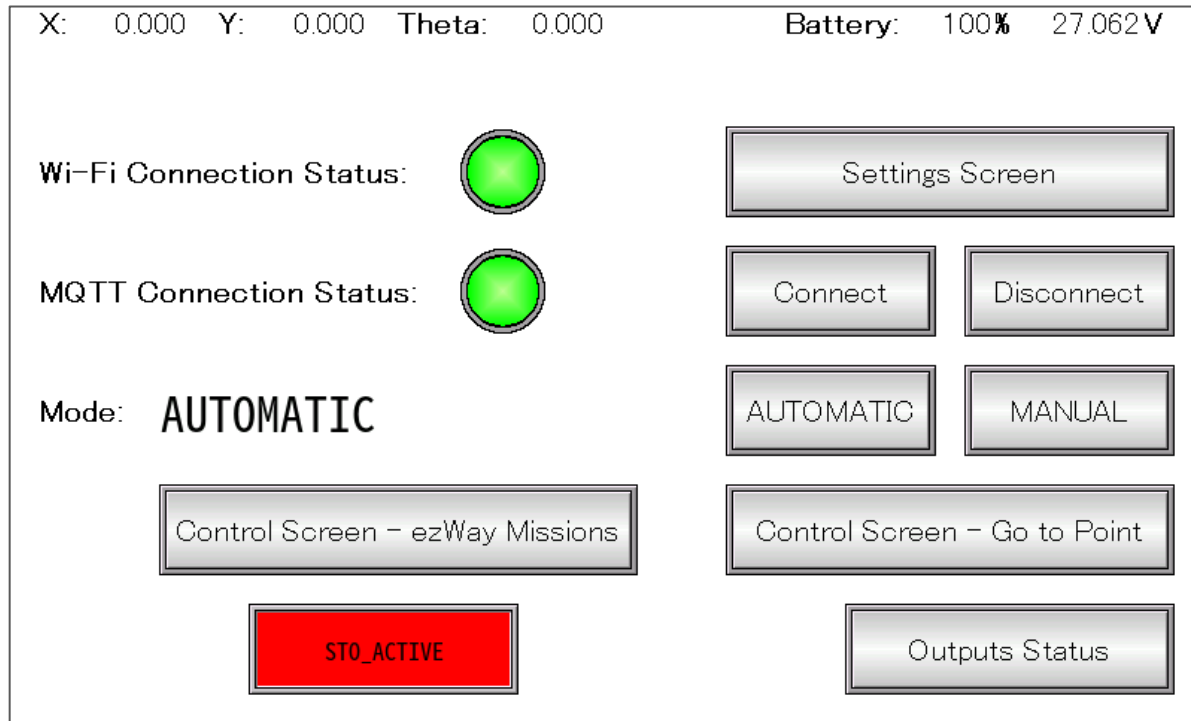


Name of the ongoing error

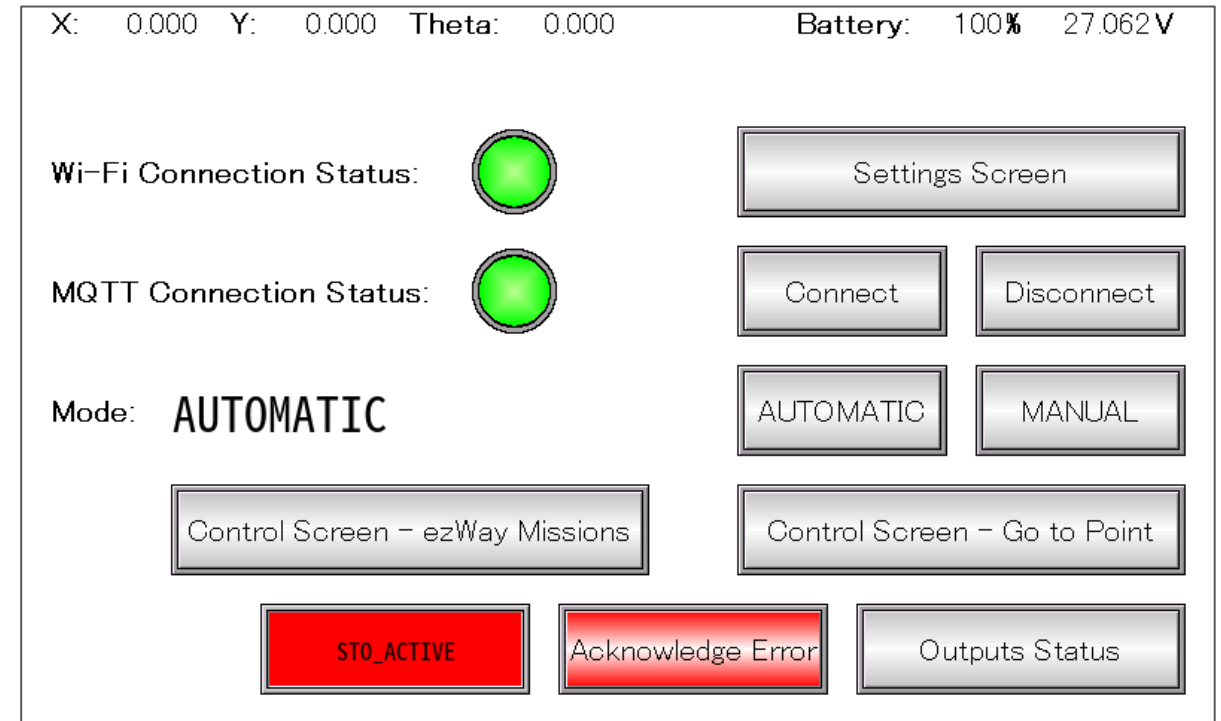

Acknowledge the error *(if necessary)*

LD6A Interface

■ Check LEDs and buzzer states

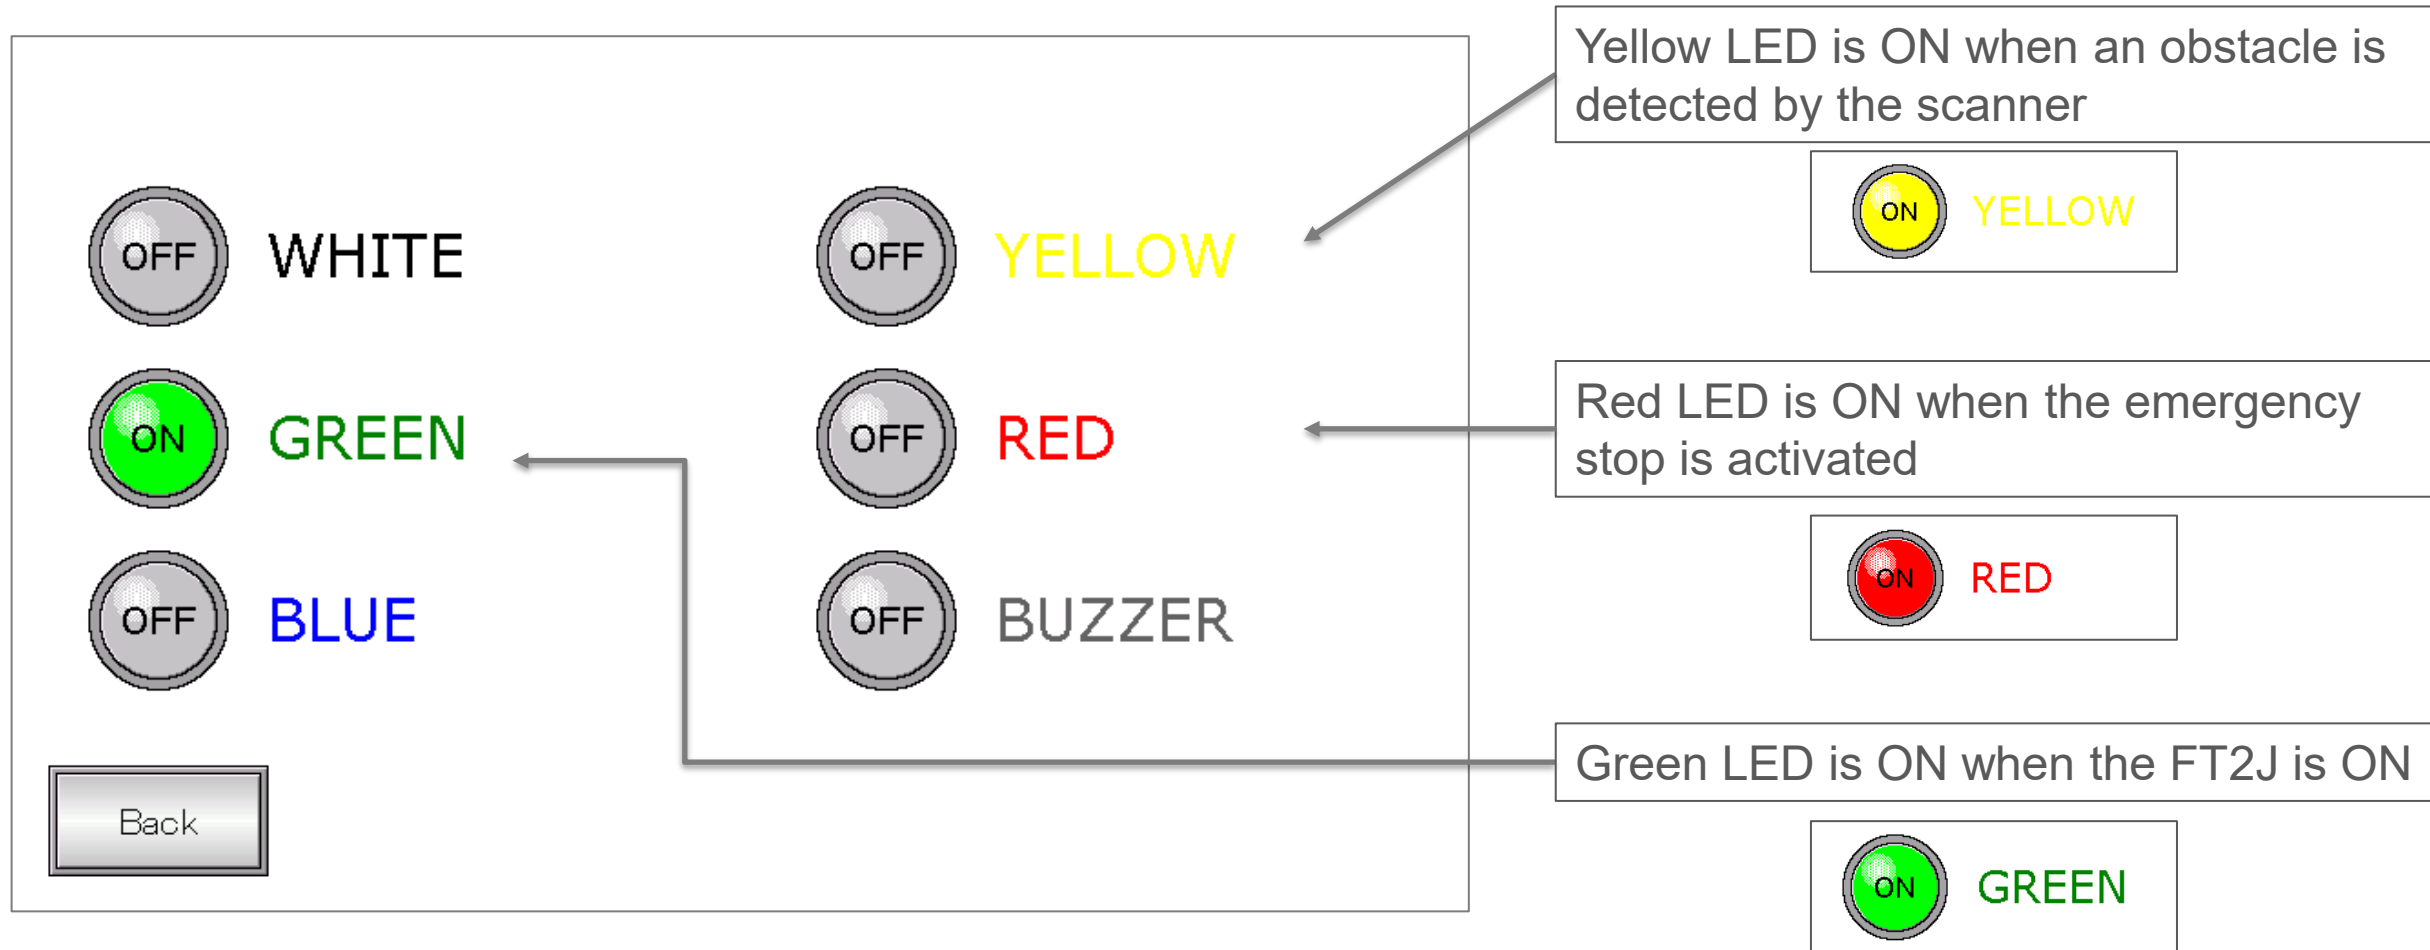

Settings Screen

Settings Screen



IP Address:

10

1

0

125

Write to FT2J

Clock Setting:

Configure

MAC adress:

3a68e8

Back

125

125

7	8	9	CLR
4	5	6	CAN
1	2	3	ENT
0	+/-	.	

Edit IP address of the PLC on the network

Clock SettingBack

Current Time2025 / 10 / 16 Thu.
14 : 43 : 54

New Time2025 / 10 / 16
14 : 43 : 49Write

Update your local time

MAC adress:

123456


Alphabet				CAN				CLR				BS			
1	2	3	4	5	6	7	8	9	0						
!	"	#	\$	%	&	'	(	)	+						
*	=	~	^		.	{	}	?	/						
←		→		SP				ENT							

Back


Update your robot ID

Go to Point Interface


Manual confirmation when loading is done

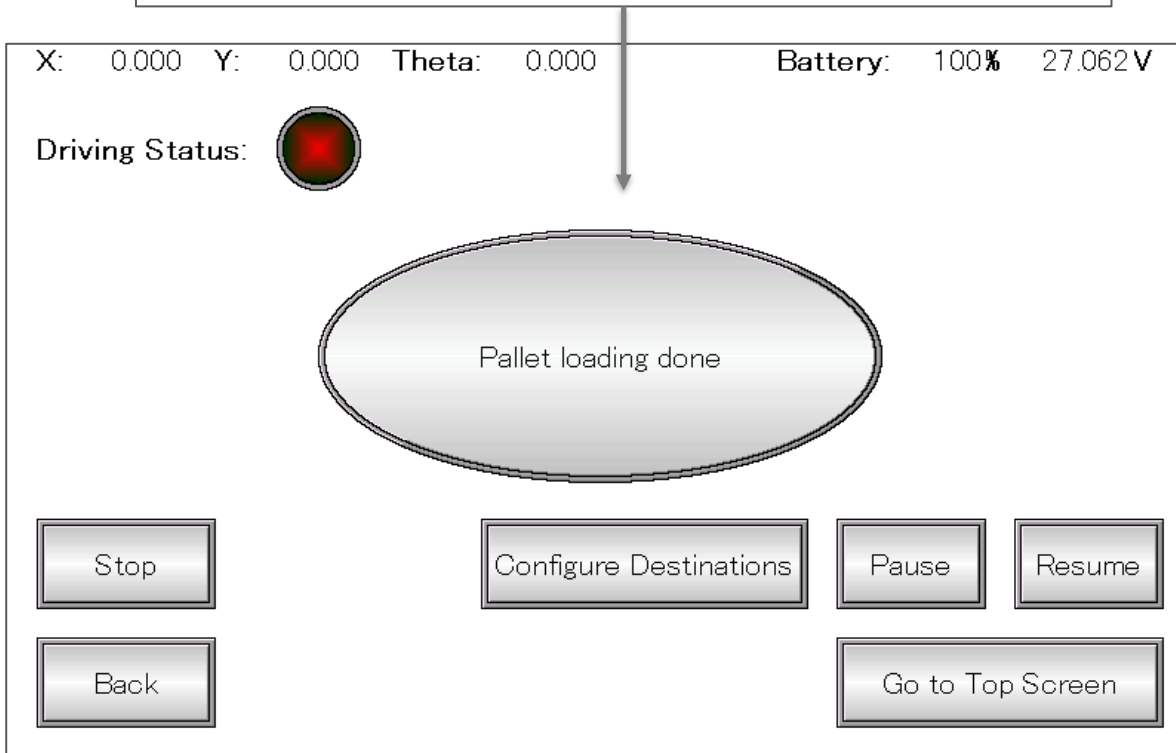

Manual trigger to send back the robot

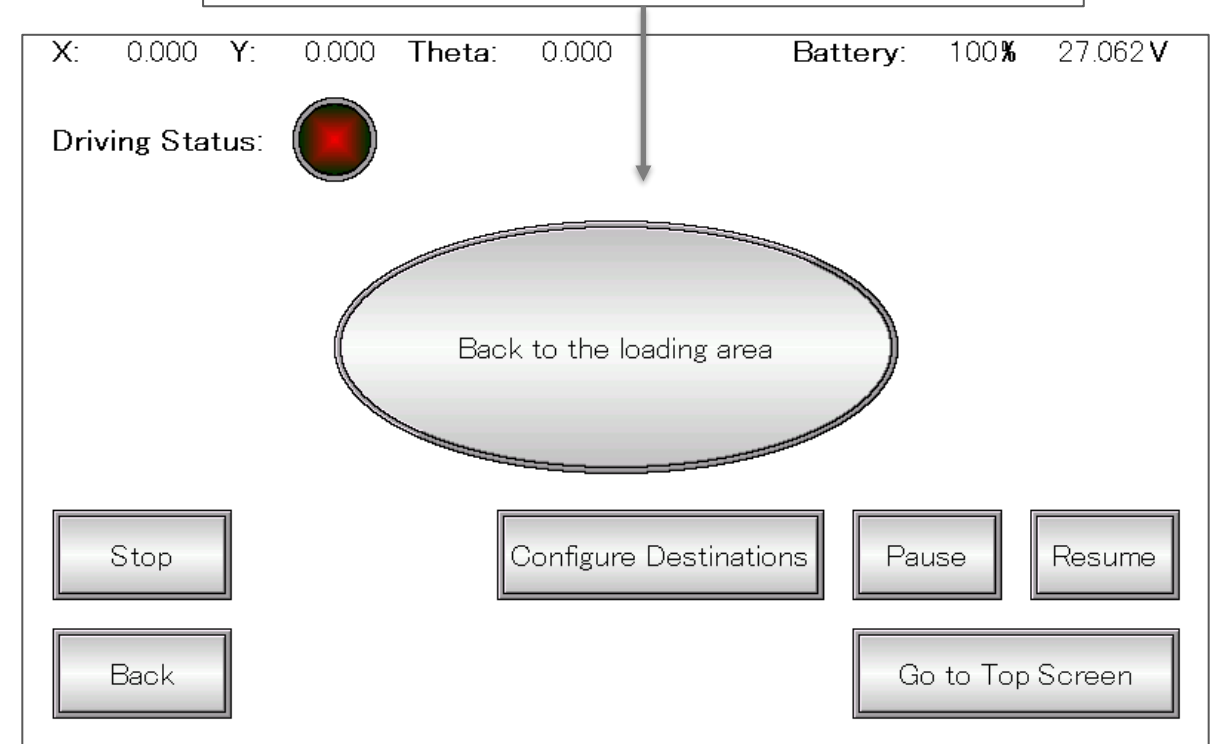


Send the robot to a Kitting Station

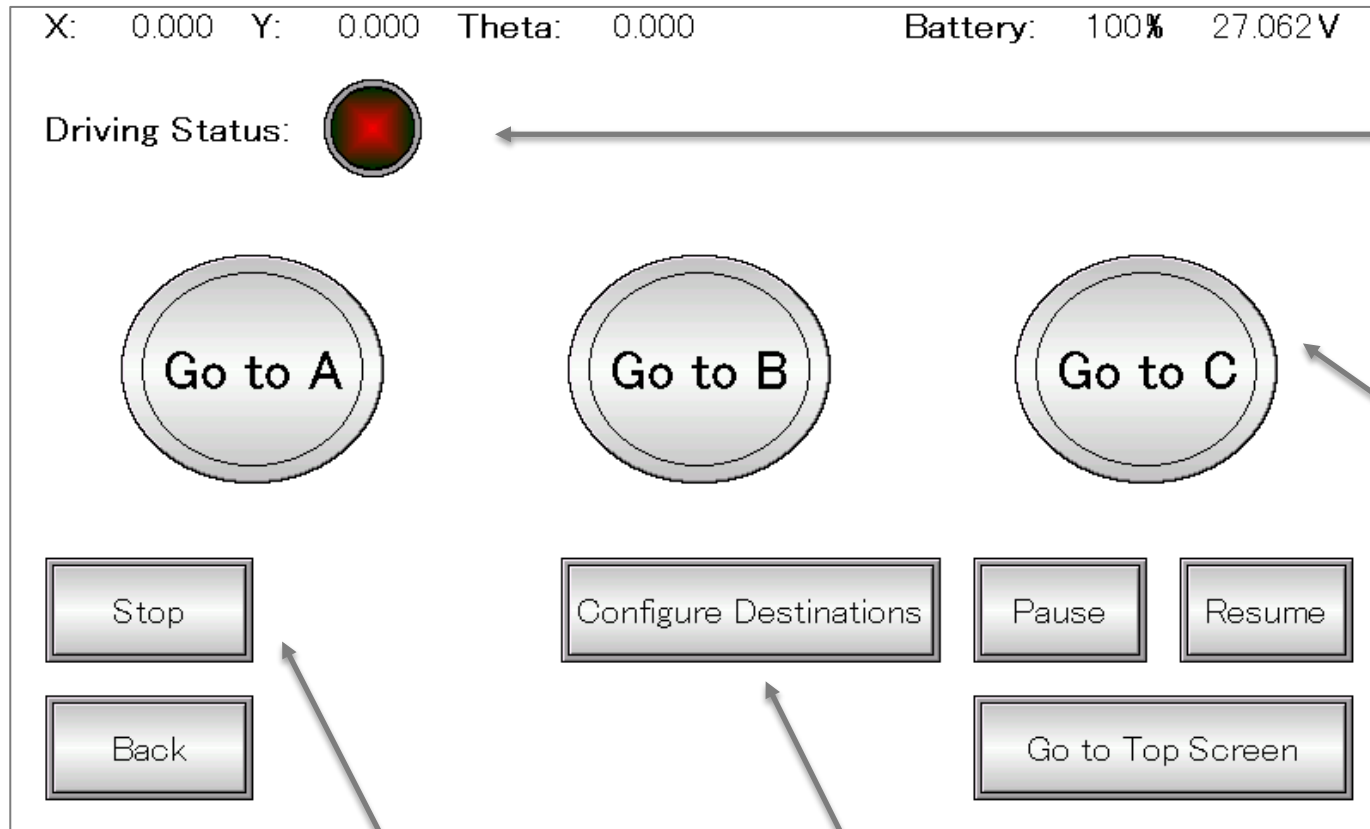

When the robot is moving, the driving status turn ON and the buttons that allow to move the robot are disabled

Driving Status:

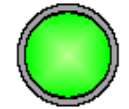

Choose which Kitting Station (A, B, C) to feed from the Loading Area.

Pause & Resume orders at any time

Stop the robot at any time.

Configure Kitting Stations (A, B, C) & Loading Area

■ Configure speed and coordinates of the Kitting Stations and the Loading Area

Coordinates in the map (X, Y) Angle/Orientation to reach at the Kitting Station

	X(m):	Y(m):	Theta(rad):	Speed(m/s):
Loading Area:	0.000	0.000	0.000	0.000
Position A:	0.000	0.000	0.000	0.000
Position B:	0.000	0.000	0.000	0.000
Position C:	0.000	0.000	0.000	0.000


Max speed when returning empty from the Kitting Stations

Max speed when going to refill the Kitting Stations


Set the current position of the robot to the Loading Area position

ez-Way Missions Interface


Manual confirmation when loading is done

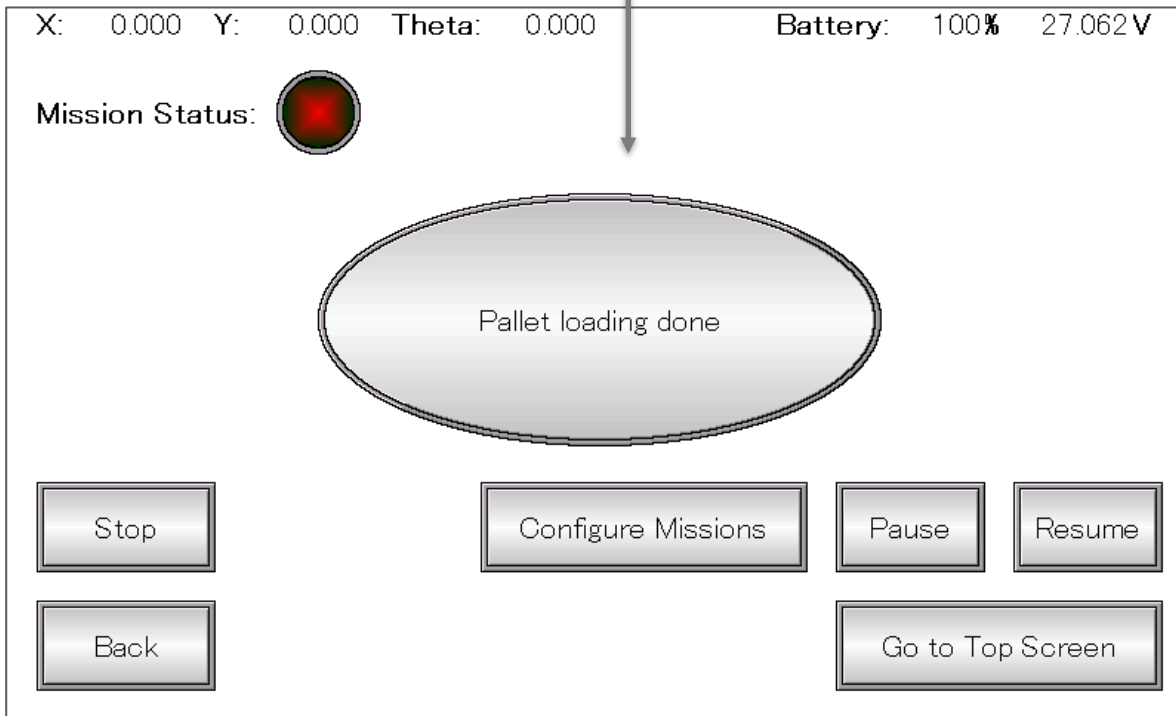

Manual trigger to send back the robot

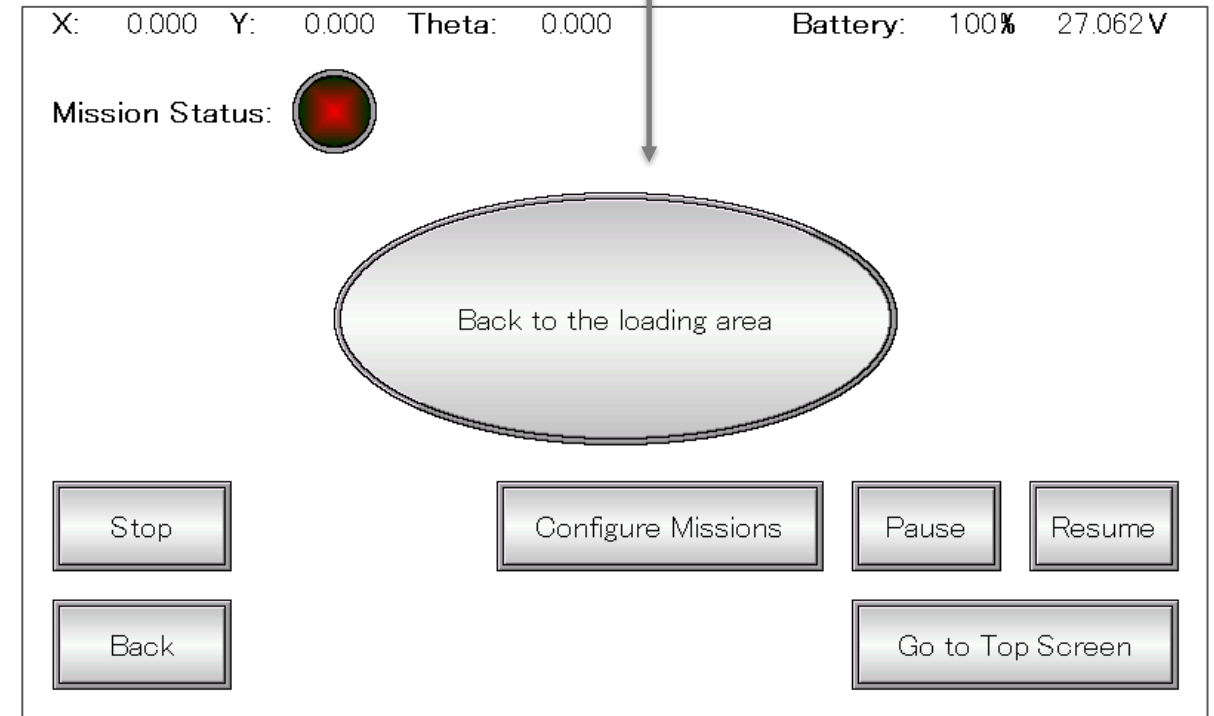

Send the robot to a Kitting Station

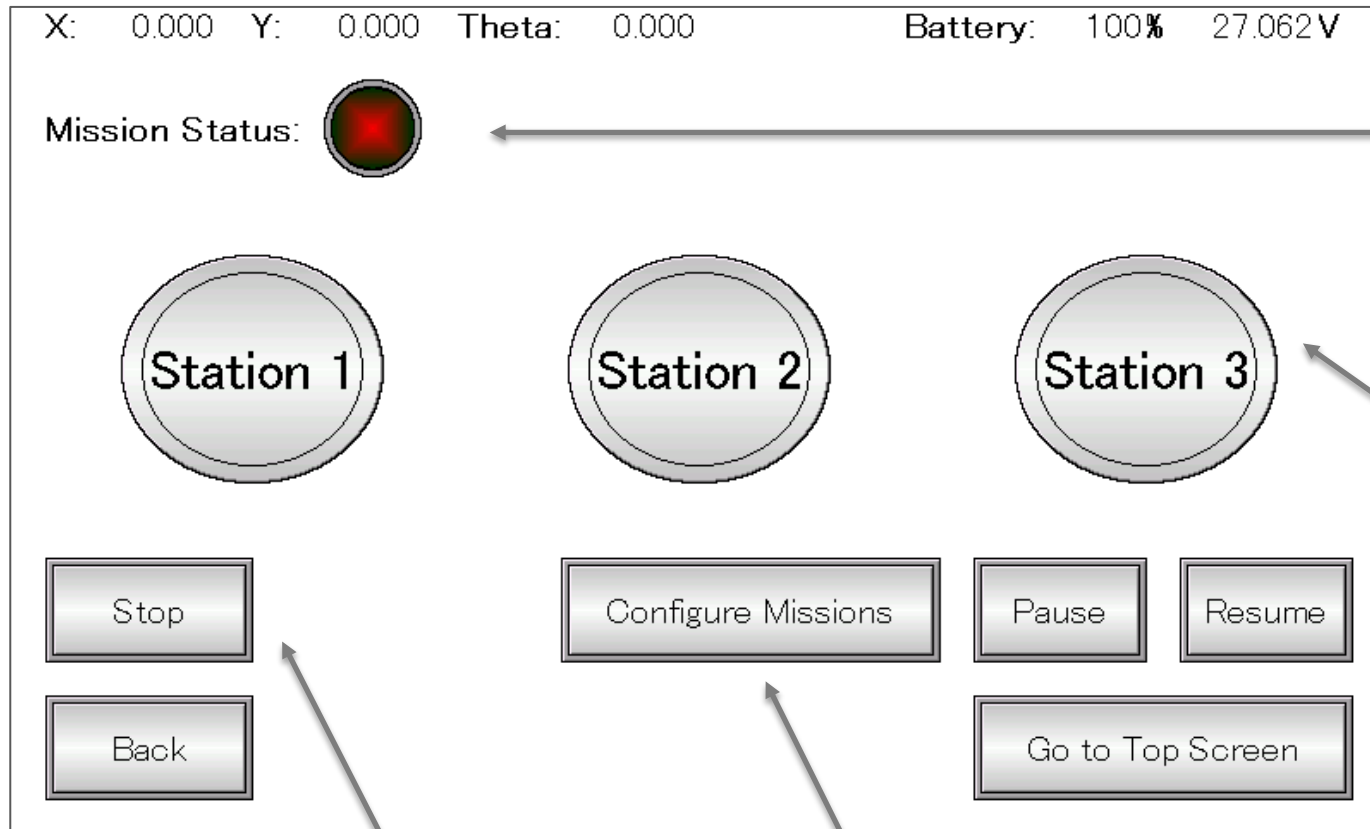

When the robot is processing a mission, the mission status turn ON and the buttons that start the missions are disabled



Choose which Kitting Station (1, 2, 3) to feed from the Loading Area.

Pause & Resume mission at any time

Stop the robot at any time

Configure mission names for going to Kitting Station (1, 2, 3) and coming back

- Edit mission names for going to Kitting Stations (1, 2, 3) and coming back

Mission names in
ez-Way Config.

Loading Area to Kitting Station 1:

Loading_Area_to_Kitting_Station_1

Loading Area to Kitting Station 2:

Loading_Area_to_Kitting_Station_2

Loading Area to Kitting Station 3:

Loading_Area_to_Kitting_Station_3

Kitting Station 1 to Loading Area:

Kitting_Station_1_to>Loading_Area

Kitting Station 2 to Loading Area:

Kitting_Station_2_to>Loading_Area

Kitting Station 3 to Loading Area:

Kitting_Station_3_to>Loading_Area


Back

Monitor errors & warnings


Monitor errors & warnings during the missions

If the robot is not in AUTOMATIC mode, a warning appears to inform the user that the robot will not execute the missions

When an obstacle is detected by the scanner, a SLS / SDI warning appears

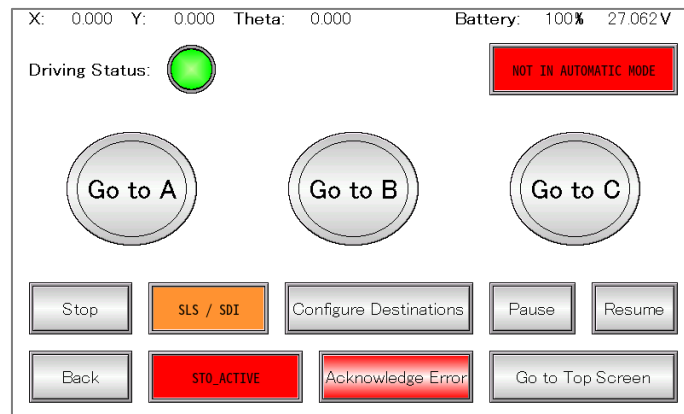

Same warning & errors are displayed in the Go to Point Interface

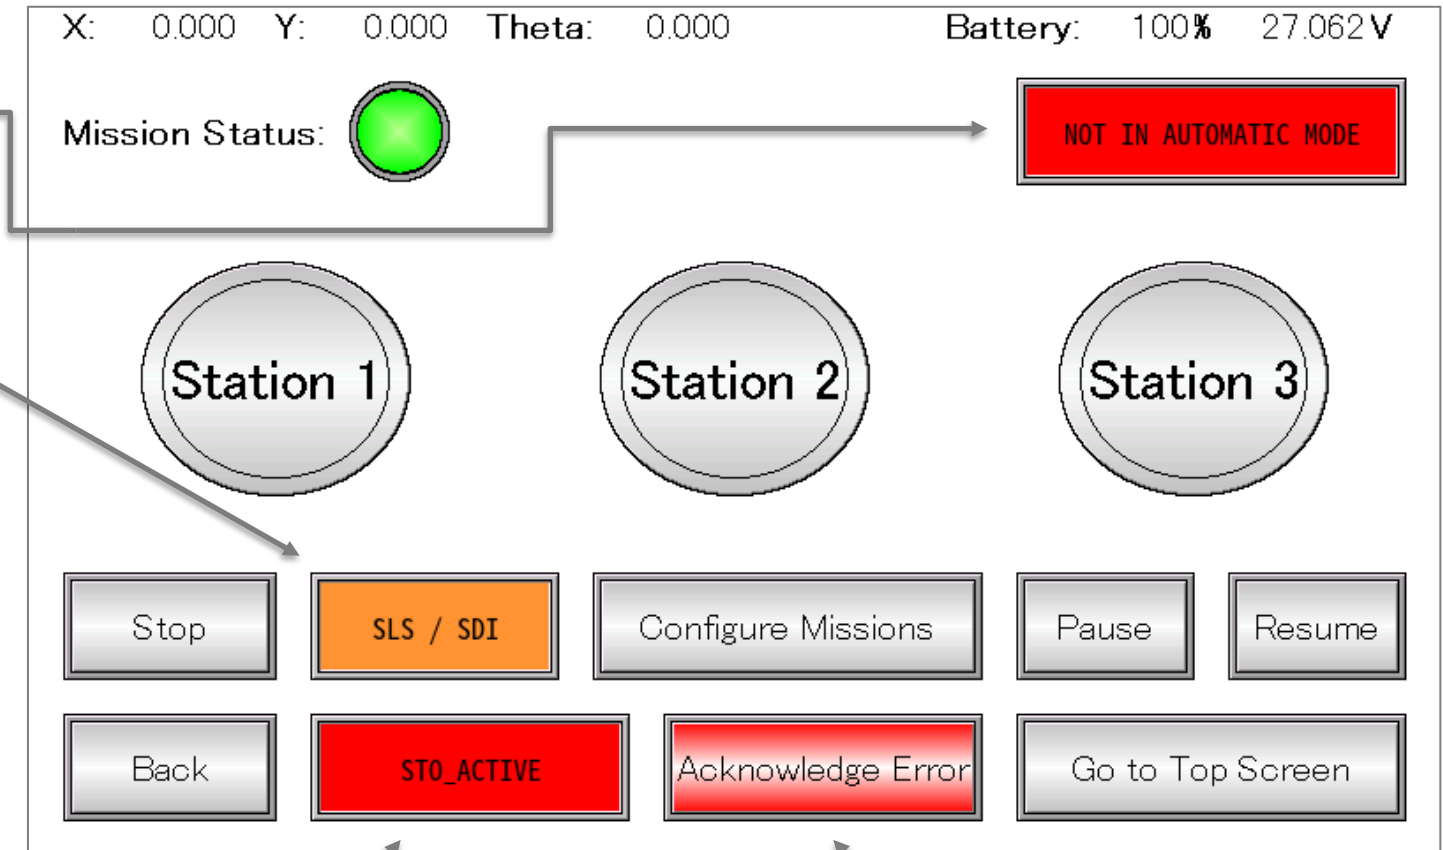

Name of the ongoing error

Acknowledge the error (*if necessary*)