Precitec Macro Documentation

04 Weld Figure from Input

Changelog

Date	Version	Autor	Tested on	Description
2022-04-13	A	Wre	5.16.0	New documentation
2022-06-09	B	Wre	5.16.16	UserLevels Bug fixed

Description

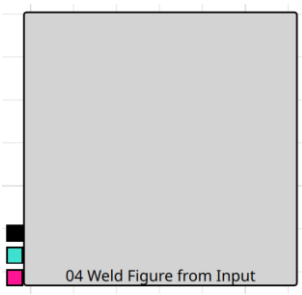

Welds the Figure which inputs as a contour.

I1: Image

I2: Position reached (Trigger Signal)

I3: Contour

© Precitec

- **Macro structure**

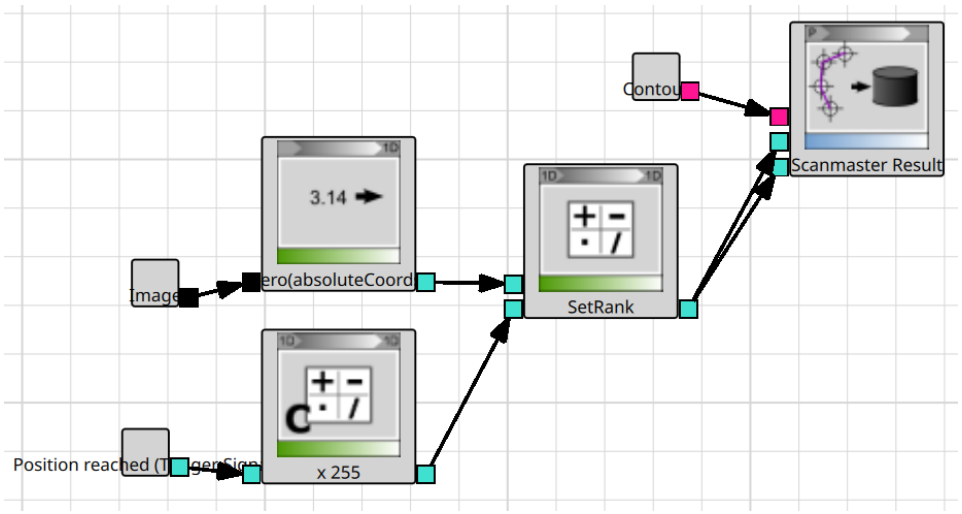

Welds the Figure which is connected to the contour input.

e.g. Figure from Buffer or generated Figure

- **Parameter**

NAME	VALUE	Description	UserLevel

© Precitec