


Precitec Macro Documentation

02 Manual Position - no detection

Changelog

Date	Version	Autor	Tested on	Description
2022-04-13	Α	Wre	5.16.0	New documentation
2022-06-09	В	Wre	5.16.16	UserLevels Bug fixed

Description

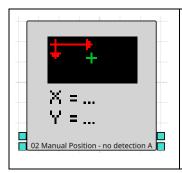

Displays manual position and calculates Scanner values.

I1: Position X in pixel


I2: Position Y in pixel

O1: Position X for Scanner

O2: Position Y for Scanner

© Precitec 1 von 2

Macro structure

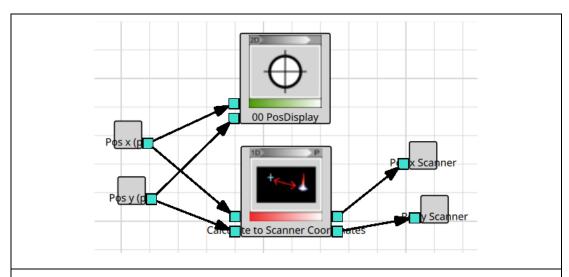

Displays the Input Position and calculates the Scanner Coordinates to drive the Scanner to this position (e.g. for IDM Measurement or Welding).

Position is set as an Input so that this Macro can also be used to do some calculations with multiple prior detections (e.g. centre point of 2 circles).

Parameter

NAME	VALUE	Description	UserLevel
00 PosDisplay → Verbosity	Low	Visibility of Position	Operator
00 PosDisplay → Rendering mode	Cross, Small	Style of Crosshair	Operator
00 PosDisplay → Red	0	Red color of Position	Operator
00 PosDisplay → Green	255	Green color of Position	Operator
00 PosDisplay → Blue	0	Blue color of Position	Operator