

# 6 - S22 Souvis2 - NH -no pores result interface


#### Description

Prepares and filters

- seam width
- concavity
- convexity
- mismatch

for the display, and transfers the results to the SOUVIS 6000 interface..

#### Icon



#### Parameters




There are no parameters to set!

## Measured values for plotter

113	0 xxx	S6K Seam width
114	-xxx +xxx	S6K Mismatch
115	0 xxx	S6K Concavity
116	0 xxx	S6K Convexity
118	0 xxx	S6K Surface size

# Subgraphs interface

# IN bridges OUT bridges

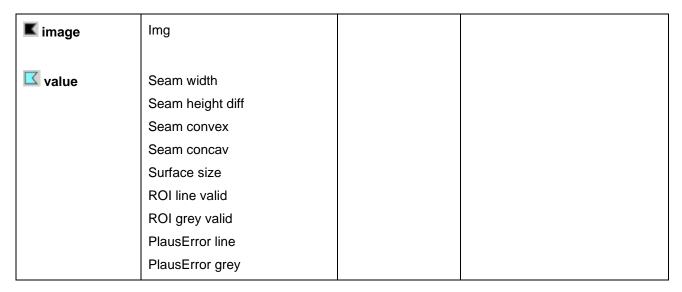

## ■ Graph block diagram

