Tutorial 4 — Controller FMU Export (Overture)

Overview

This INTO-CPS tutorial will show you how to:

1. Generate a new controller FMU in Overture

    (a) Import a model description into Overture
    (b) Complete the skeleton model to produce a working controller
    (c) Export the controller FMU

2. Associate the new controller FMU with a multi-model configuration
3. Execute a co-simulation using the new controller

Requirements

This tutorial requires the following tools from the INTO-CPS tool chain to be installed:

- INTO-CPS Application
- COE (Co-simulation Orchestration Engine) – accessible through the INTO-CPS App Download Manager
- Overture tool – accessible through the INTO-CPS App Download Manager
- Overture FMU Import/Exporter (No need for the CLI version) – accessible through the INTO-CPS App Download Manager

If you are following the tutorials for the first time at this point you need to install the Overture and the FMU through *Window > Show Download Manager* to your *into-cps-projects* install downloads directory (see the INTO-CPS Application *Window > Show Settings* menu). Please ask if you are unsure.

1 Creating a Project in Overture

The example in this tutorial is a small line-following robot with two infrared sensors. We will generate a controller FMU that reads these sensors and controls the wheels to follow the line. In the previous tutorials, this controller was already given as an FMU. First we will create a project.

Step 1. Open *Overture*. It will prompt you to select a location for its workspace. You may accept the default location by pressing *OK*, or press *Browse...* to select a different location. If you do not want to be prompted in future, check *Use this as the default and do not ask again*.
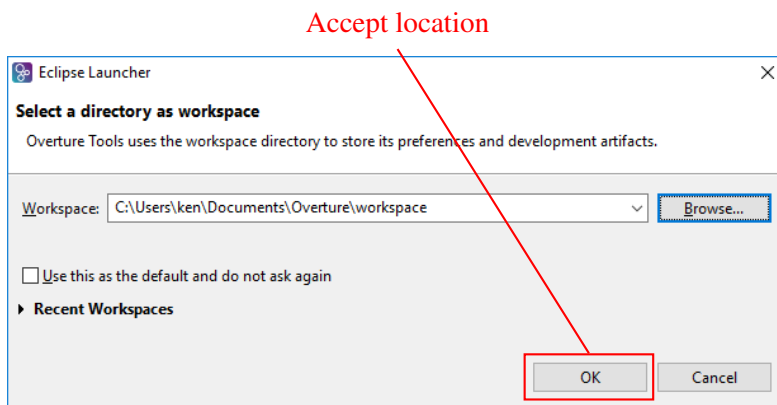
This is the *Overture* window, which includes a project list, file editor and a console.


Project list — File editor — Console and information
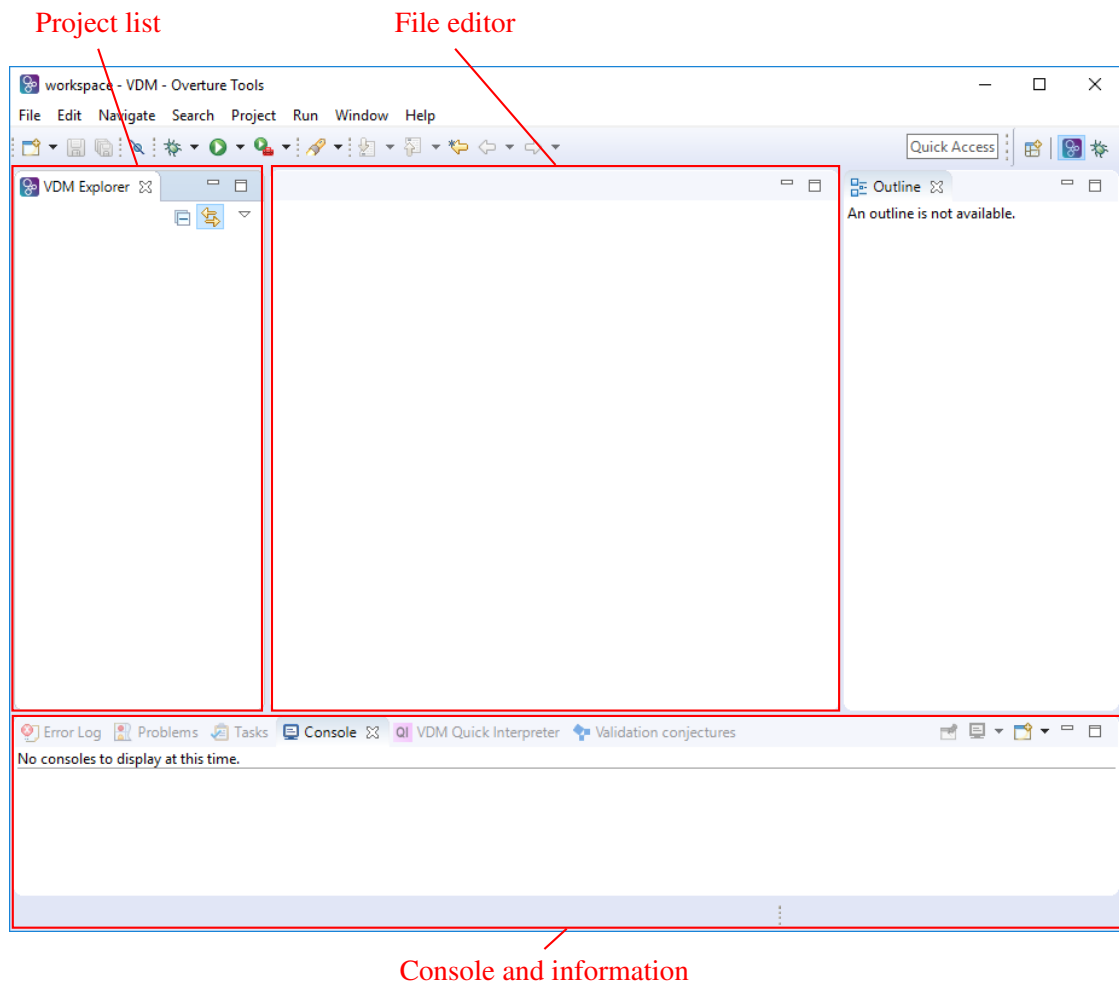
Remark. The INTO-CPS Application Download Manager will download Overture into the *Downloads Location* directory, and then will try to extract it to the *Downloads Installation Location*. Both these settings are in the INTO-CPS App *Window > Show Settings* menu. Sometimes, the operating system does not allow the INTO-CPS App to extract the downloaded archive, so you have to perform this action manually. If you encounter errors opening Overture, they could be caused by a partial extraction. In that case, remove Overture's installation folder and extract the files manually.

Step 2. First create a project that will hold the controller model. Select *File > New > Project....*
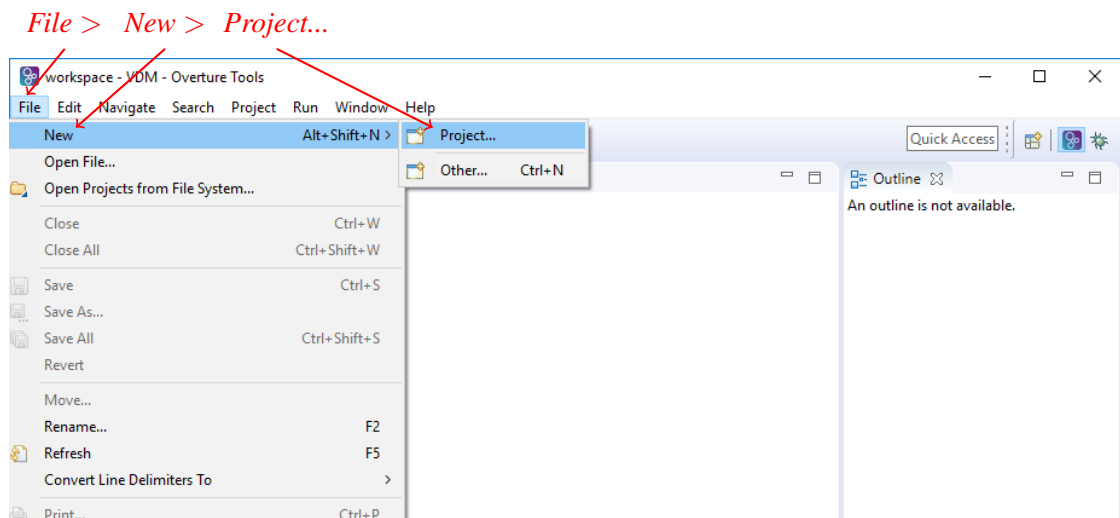
File > New > Project...

Step 3. In the *New Project* window, select *VDM-RT Project* and click *Next >* to go to the next step.
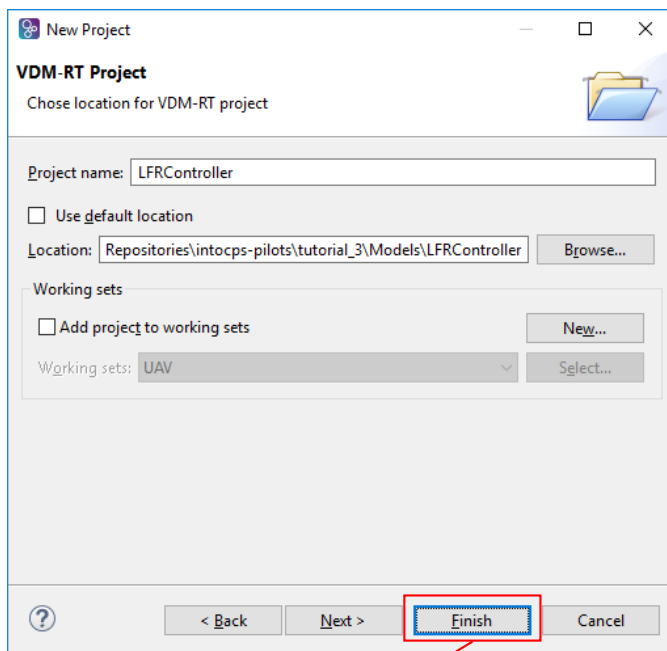

VDM-RT project type

Continue to next step
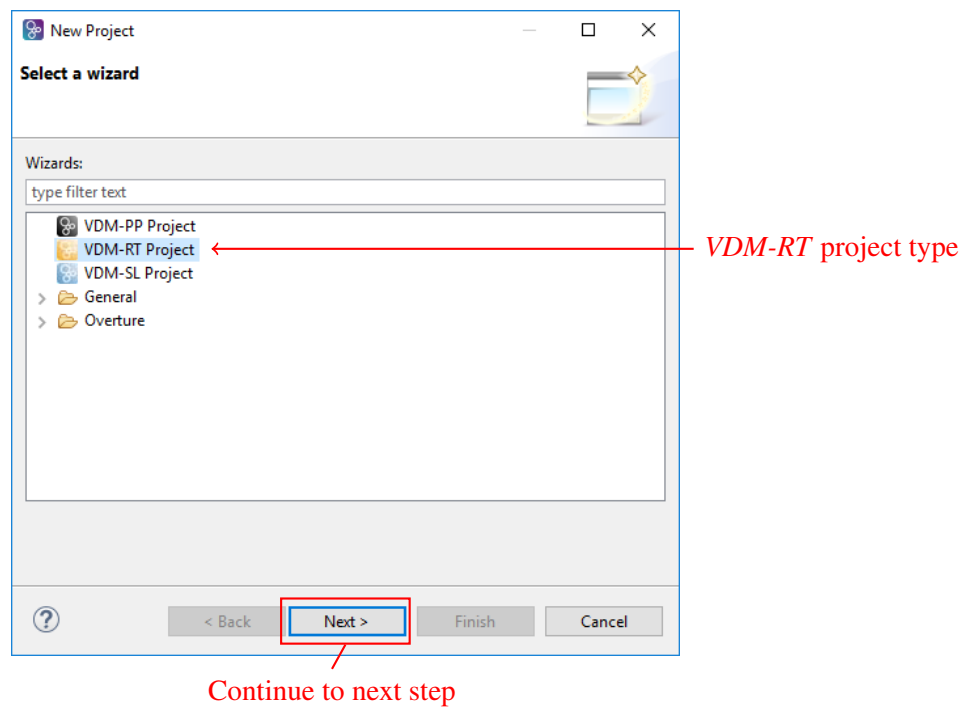
Step 4. The next screen asks for a name for the project. Call it *LFRController*. We will place the project in the *tutorial_4/Models* folder, so uncheck *Use default location* and click *Browse...*
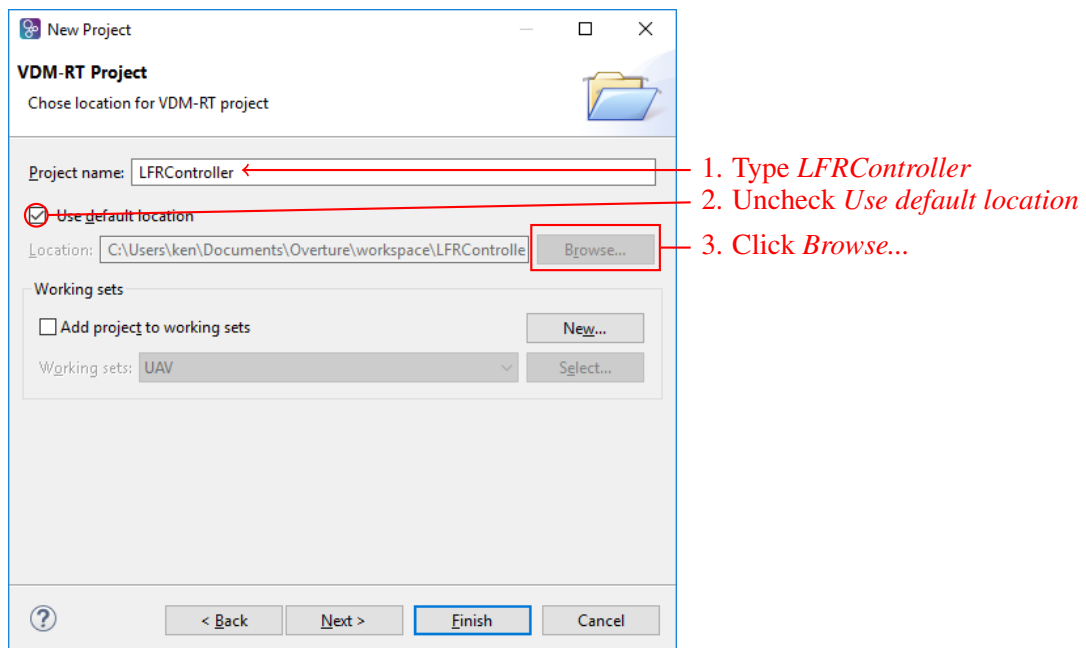
Step 5. Locate and select the folder *tutorial_4/Models/LFRController* and click *OK*.
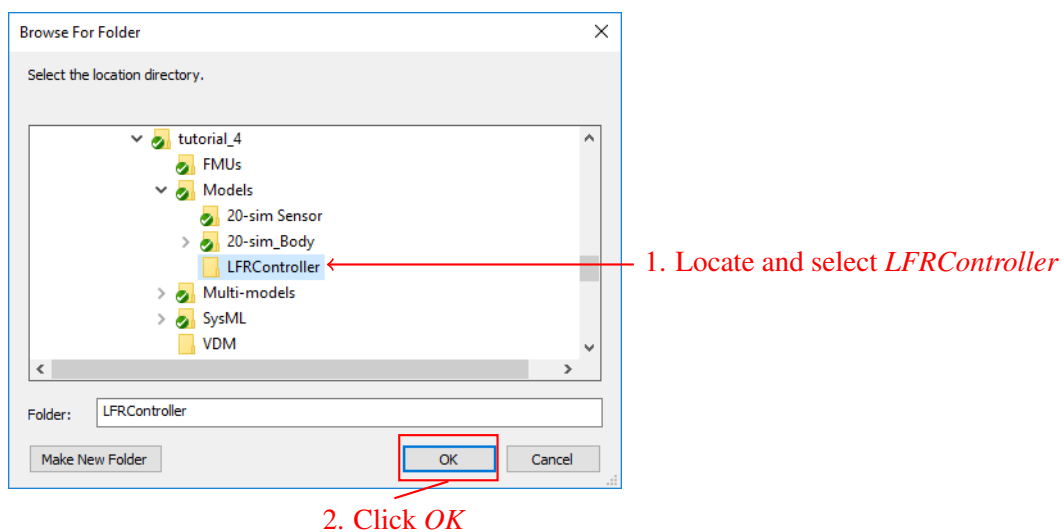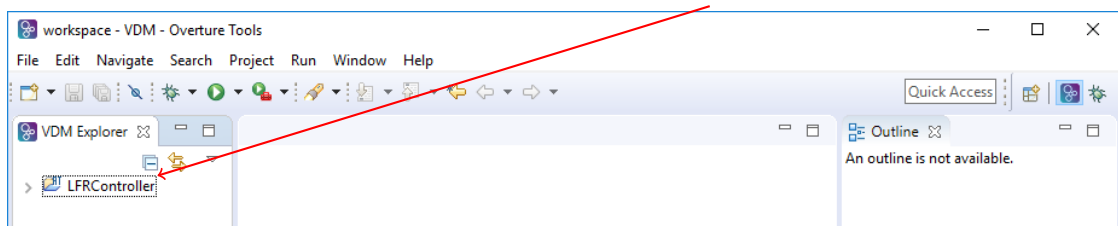
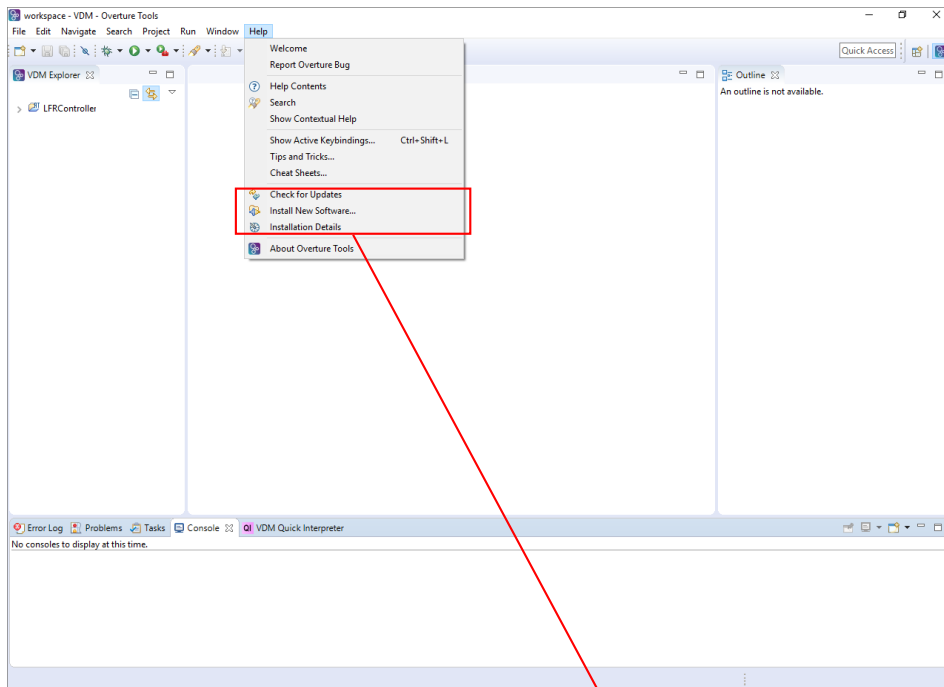Step 6. Finally click *Finish* to create the project.

2. Click *Finish*

You should see the new project in the project list.
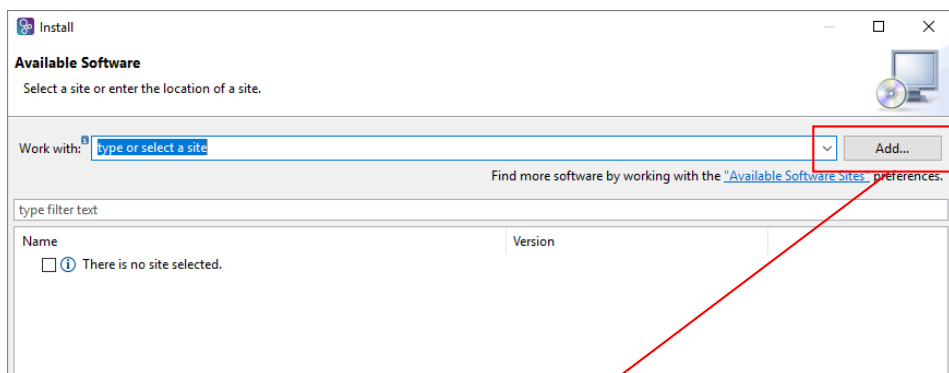

LFRController project

2 Installing the Overture FMU plug-in

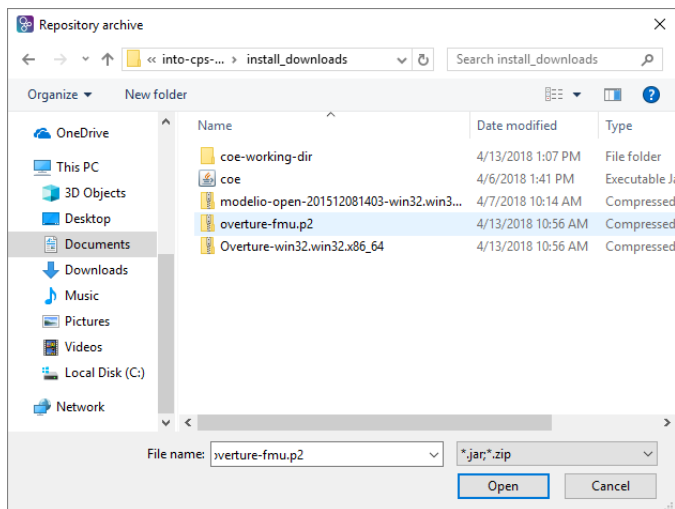Step 7. Select *Help* > *Install New Software...*

Click *Install New Software...*
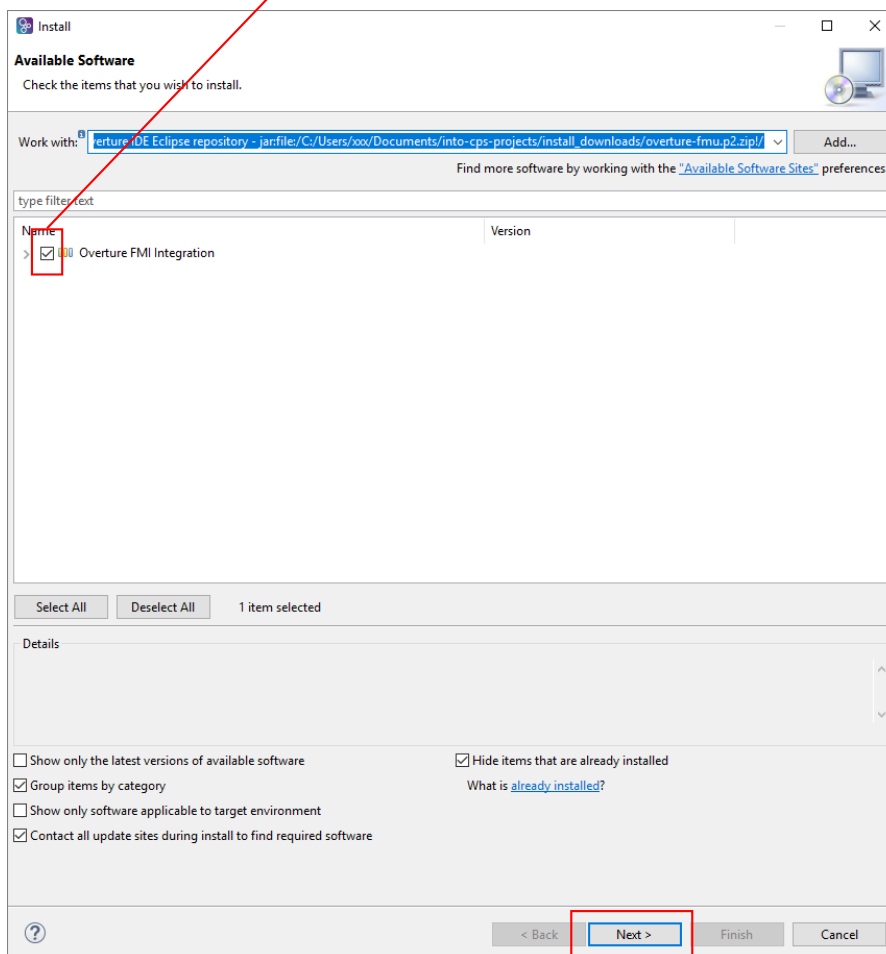
Step 8. Select *Add* and then *Archive...*

Click *Add ...*

Step 9. Open the `overture-fmu.p2` file inside your *into-cps-projects/install_downloads* folder.

Step 10. Select the plugin and click Next to continue the installation. When finished Overture restarts and you are ready to go to the next step.

3   Importing a Model Description into Overture

Overture can import model description files to create a skeleton project with the correct input, output and parameter ports, as well as standard boilerplate elements needed in a VDM-RT model.
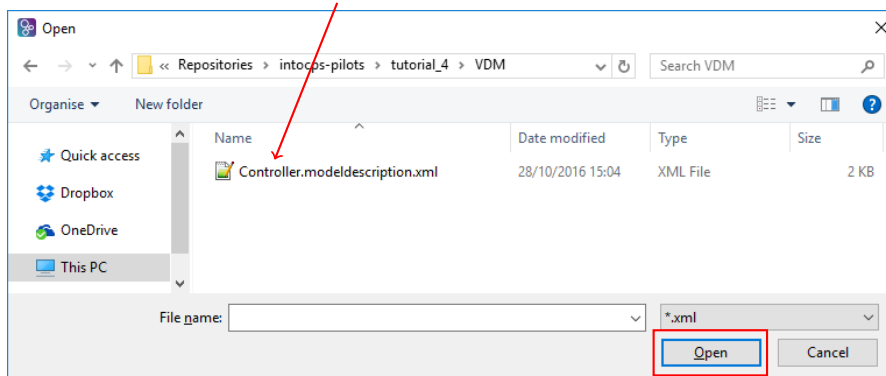
Step 11. To import a model description, right-click on the *LFRController* project and select *Overture FMU > Import Model Description*.
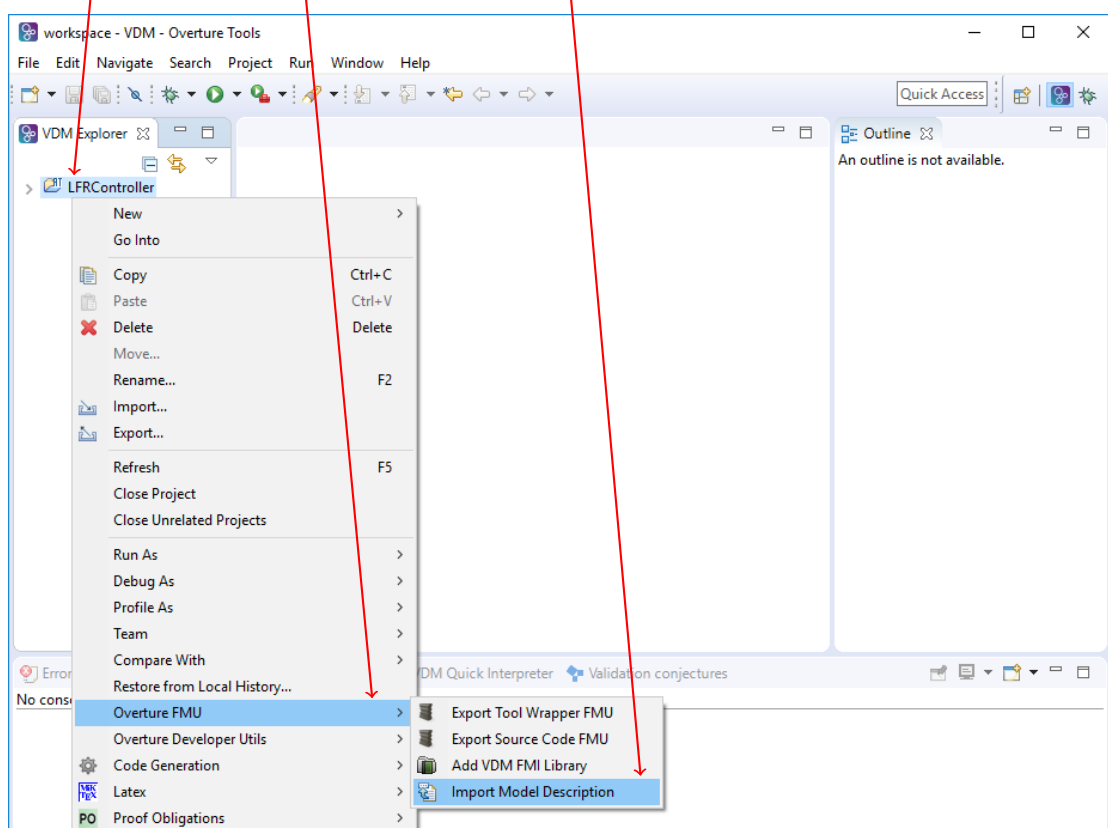
Step 12. Locate the file *tutorial_4/VDM/Controller.modeldescription.xml* that is included in the project and click *Open*.
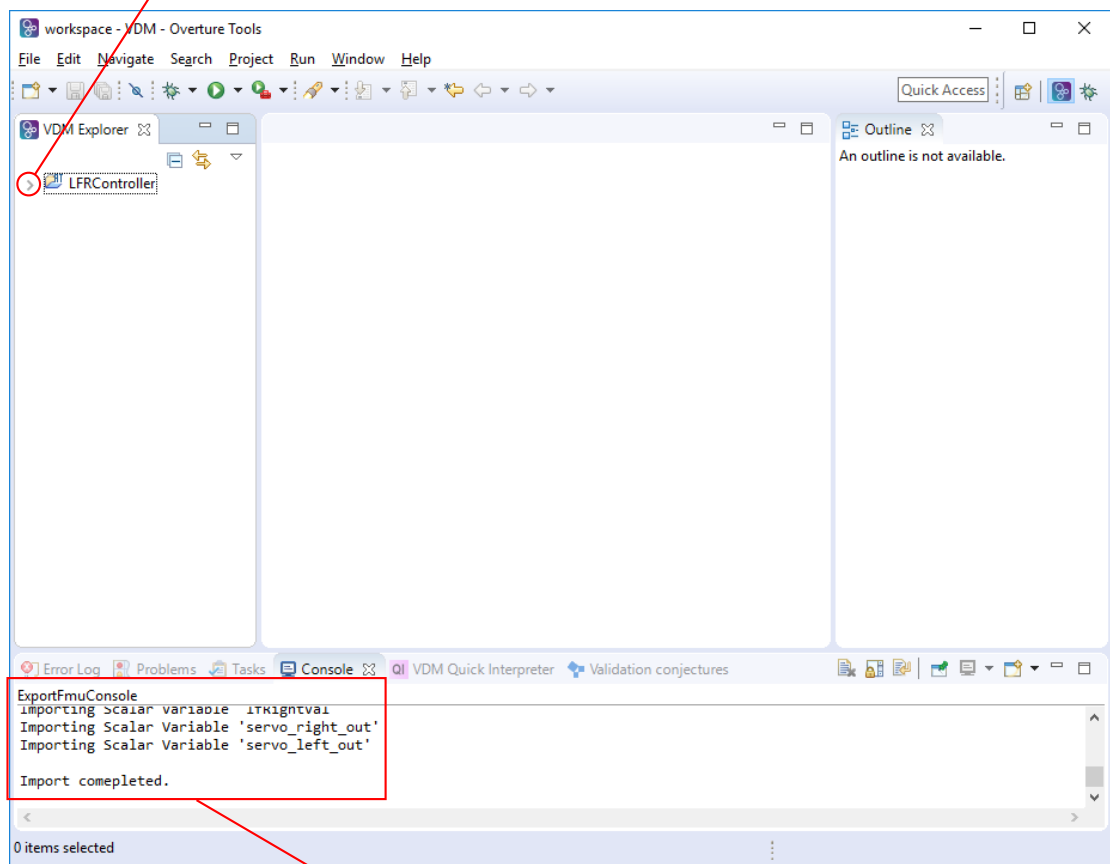
Step 13. Overture will parse the file and populate the project. You can see status messages from the import in the *Console*. Expand the *LFRController* project to see what was imported.
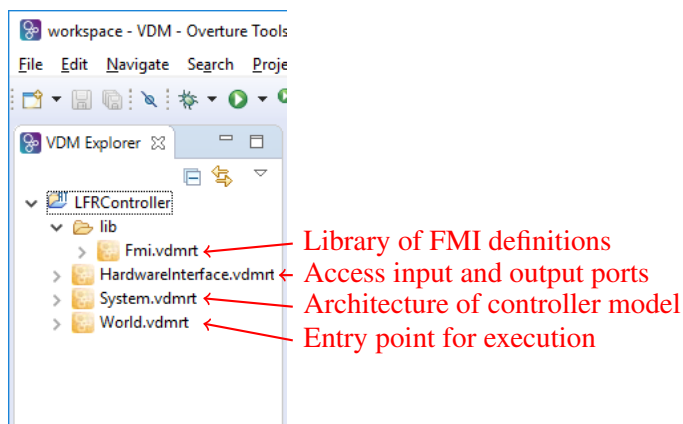
Expand *LFRController*

Import status

Remark. Sometimes this step fails. If you don't see the "Import comepleted" message, remove all imported files and retry the current step.

You should see the following structure:

Library of FMI definitions ← Fmi.vdmrt
Access input and output ports ← HardwareInterface.vdmrt
Architecture of controller model ← System.vdmrt
Entry point for execution ← World.vdmrt

4 Adding a Controller Class

To make a functional controller, we will add a *Controller* class and instantiate it as an object in the *System* class, and set the *World* to start the controller thread. A basic controller class is included in the *tutorial_4* project.
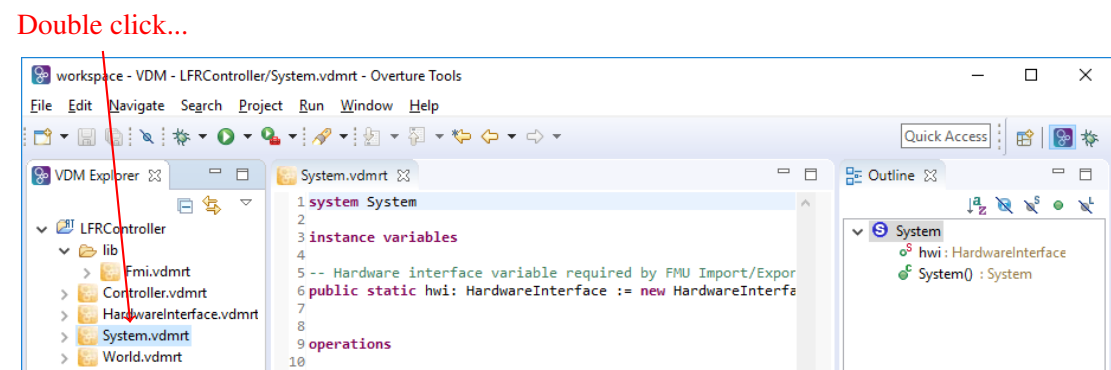
Step 14. Locate the file *tutorial_4/VDM/Controller.vdmrt* on on your file system and copy it.
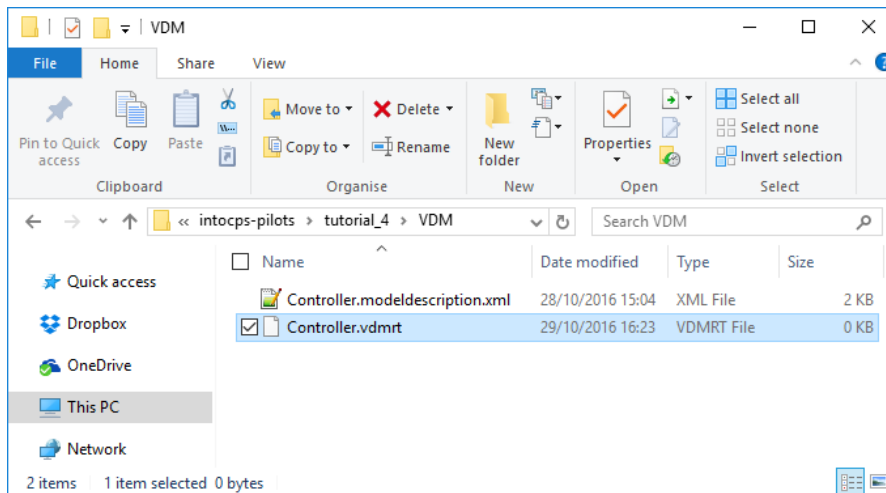
Step 15. Right-click on the *LFRController* project and select *Paste*.
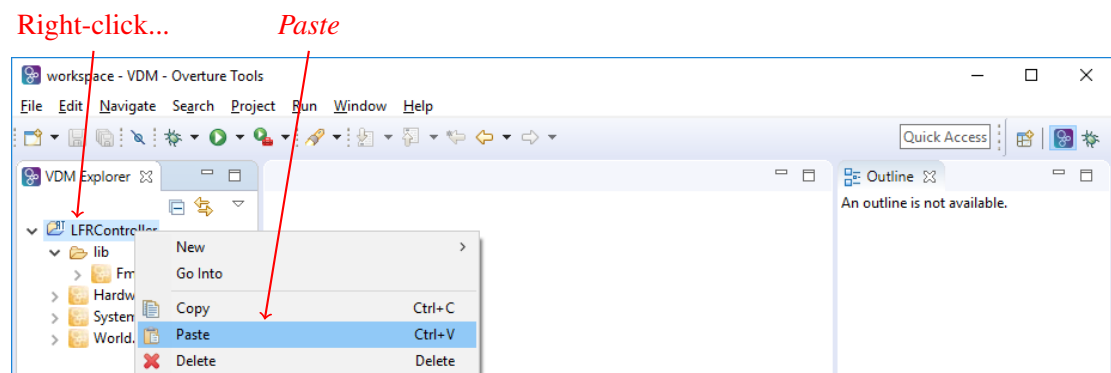
Step 16. Double-click *System.vdmrt* to open the System class.

Step 17. Add the highlighted lines to *System.vdmrt*. This will define a `controller` object of the `Controller` class and instantiate it.

```
system System

instance variables

-- Hardware interface variable required by FMU Import/Export
public static hwi: HardwareInterface := new HardwareInterface();

public static controller: Controller := new Controller(
  hwi.servoLeftVal, hwi.servoRightVal, hwi.lfRightVal, hwi.lfLeftVal);

cpu : CPU := new CPU(<FP>, 1E6);

operations

public System : () ==> System
System () ==
(
  cpu.deploy(controller);
);

end System
```

Step 18. Double-click *World.vdmrt* to open the `World` class. Uncomment the highlighted line to tell the controller thread to start at the beginning of co-simulation.

```
class World

operations

public run : () ==> ()
run() ==
  (
  start(System'controller);
  block();
  );

private block : () ==>()
block() ==
    skip;

sync

  per block => false;

end World
```
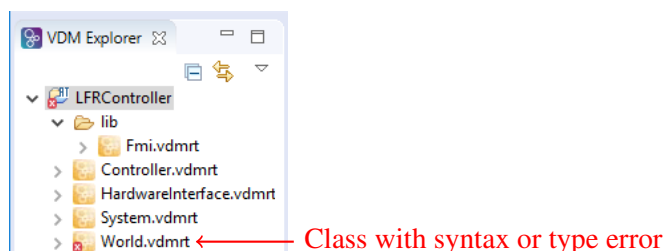
Step 19. Ensure that your model has no errors. If it does, a red cross will appear next to the file icon in the project browser. (You might have to refresh the project by right-clicking and selecting *Refresh* to see these.)

Class with syntax or type error

Check that you have correctly replicated the listings from Steps 13 and 14. Look at the *Problems* tab at the bottom for information, and double-click items to take you to the problem in the file editor.
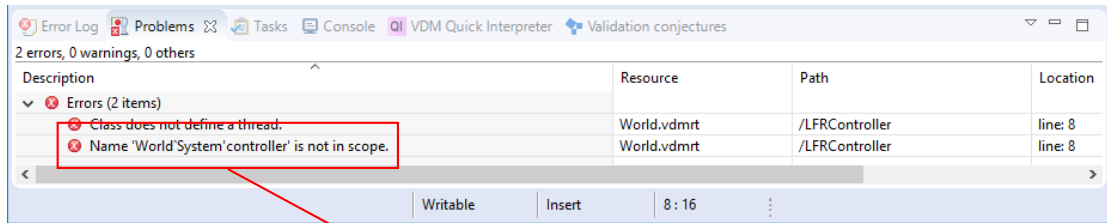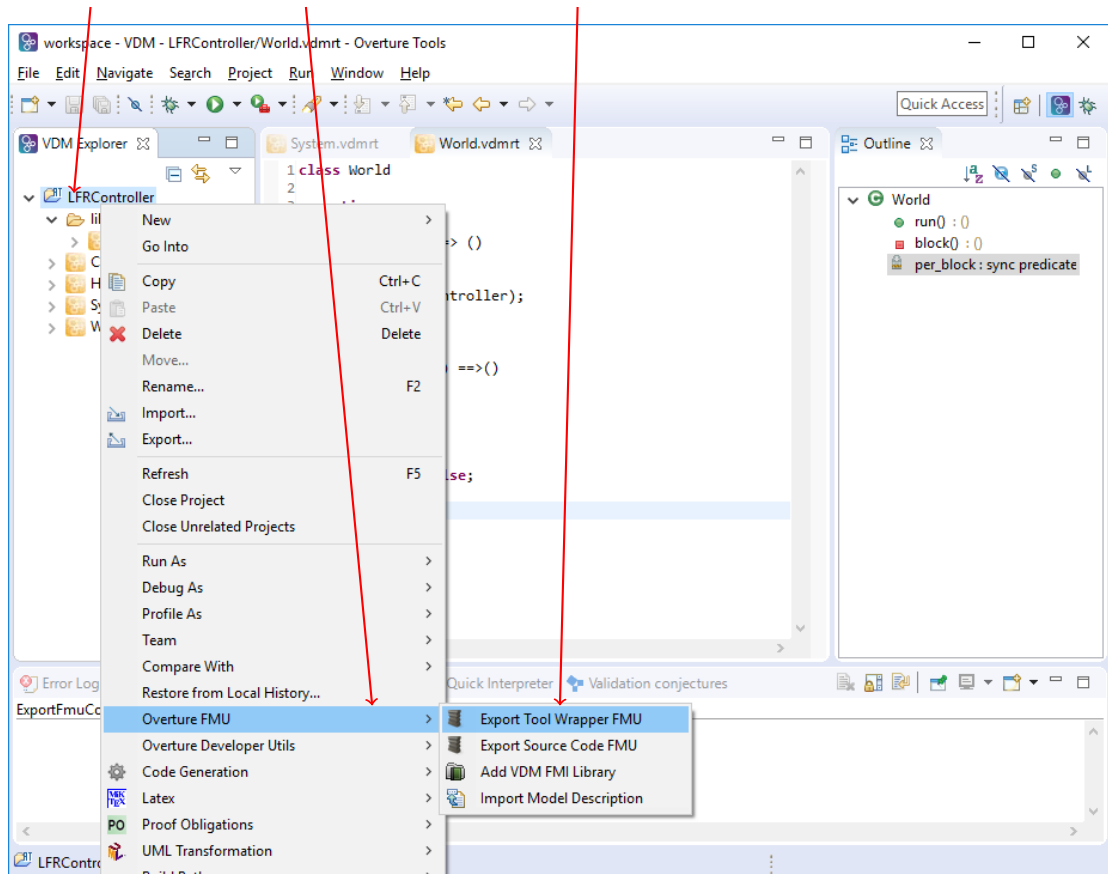

Double-click to go to the problem

5 Exporting an FMU and Adding it to a Multi-model

Now that the controller model is complete, we can export an FMU and place it in the *tutorial_4* where the INTO-CPS Application can see it.

Step 20. To export an FMU, right-click on the *LFRController* project and select *Overture FMU > Export Tool Wrapper FMU*.
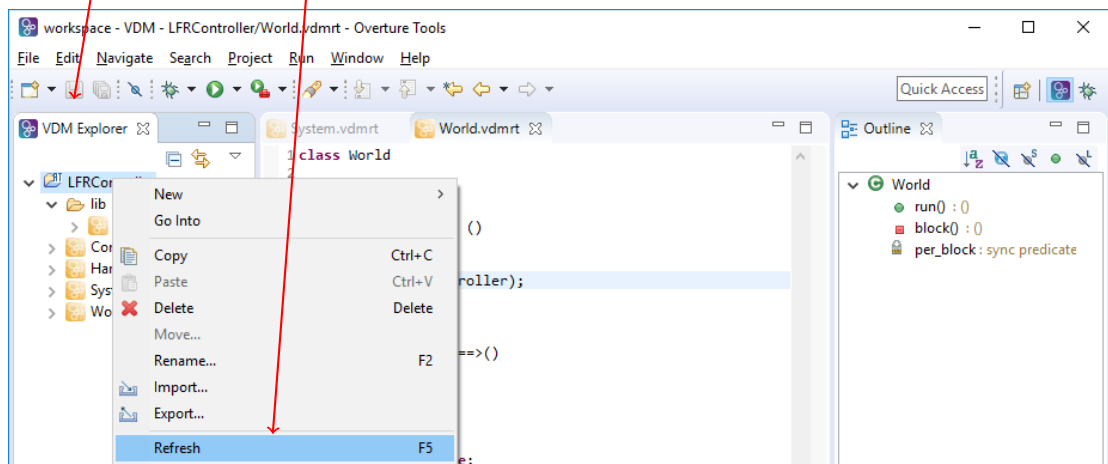
Step 21. Refresh the project so that the generated FMU appears. To do this, right-click on the project and select *Refresh*.
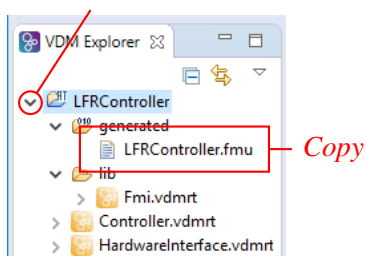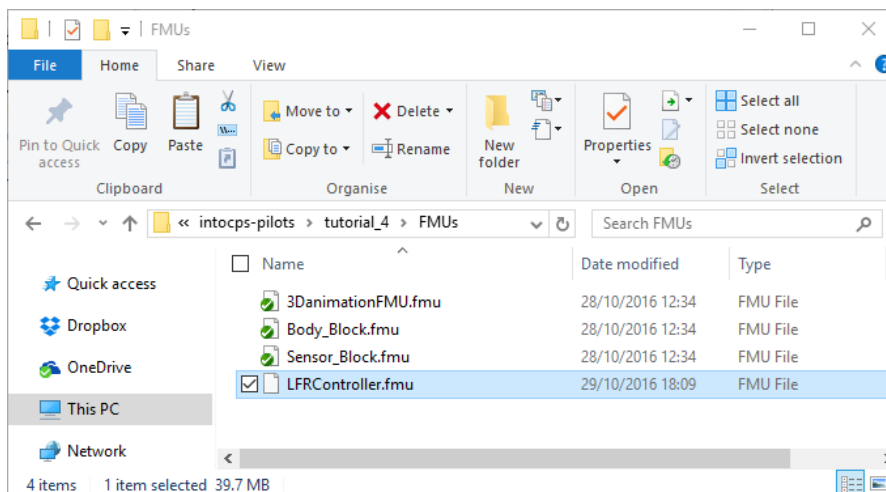
Right-click...   *Refresh*

Step 22. A new folder called *generated* will appear. Expand this to see *LFRController.fmu*. Select *LFRController.fmu* and copy it using *Ctrl+C* or right-clicking and selecting *Copy*.
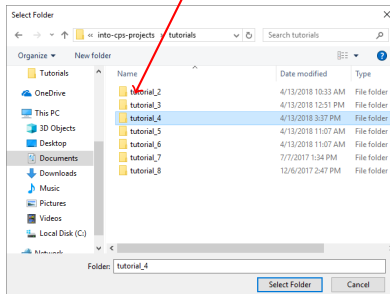
Right-click...

Step 23. Paste *LFRController.fmu* into the *tutorial_4/FMUs* folder on your file system.

6 Co-simulating with the New Controller

Step 24. Launch the *INTO-CPS Application* and select *File > Open Project*. Set the *Project root path* to the location of *Tutorials/tutorials_4* and click *Open*. You can browse using the *Folder* button.

Path to *Tutorials/tutorials_4*

You should see the newly export *LFRController* FMU in the list.

Newly created FMU →
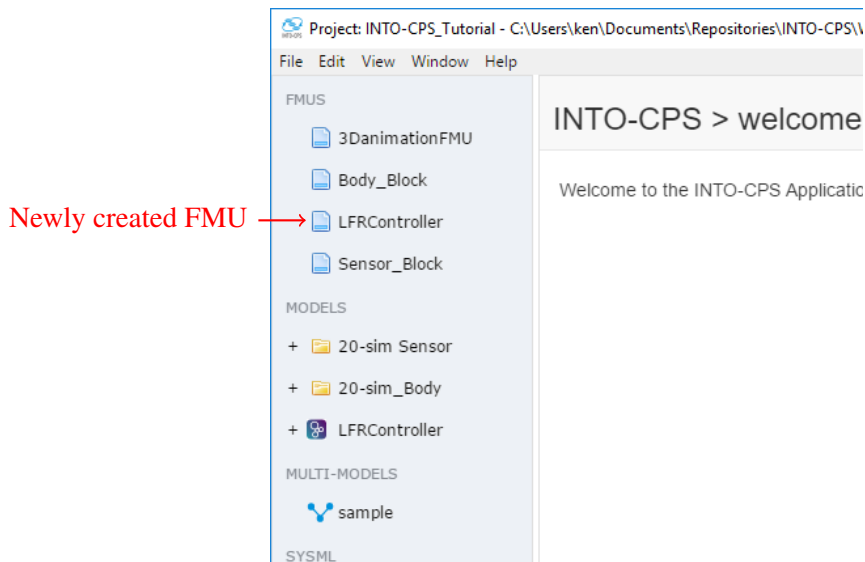
Step 25. In the SysML entry of the project browser, expand the *LineFollowRobot* folder, then *config* folders. Right-click on *3DRobot* and select *Create Multi-Model*.

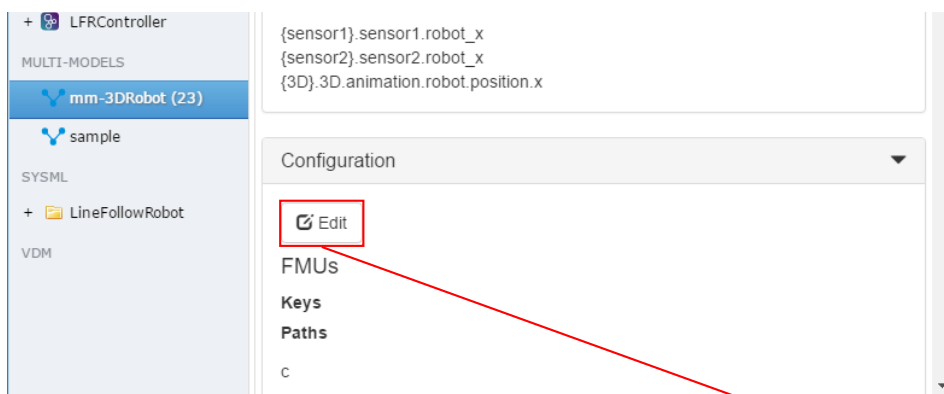Expand to locate *3DRobot*
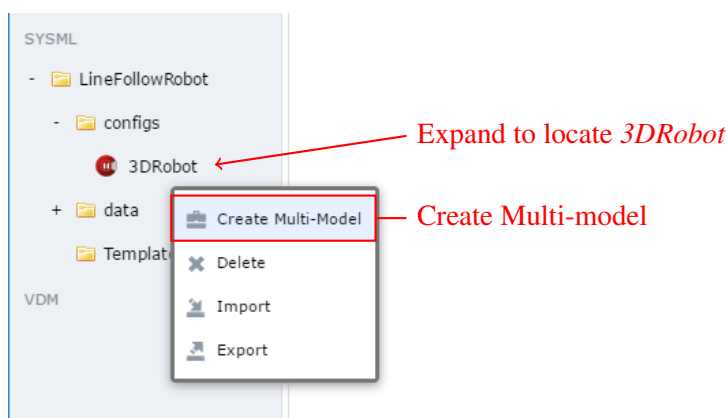
Create Multi-model

Step 26. We now need to associate FMUs to the multi-model as we did in *Tutorial 2*. Scroll down to find the *Configuration* panel and expand it by clicking the arrow.
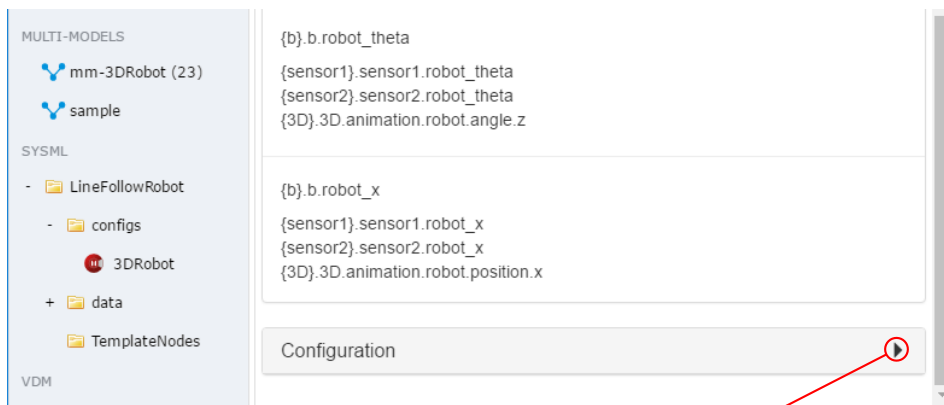
Expand *Configuration*

Remark. If you are not on Windows, delete the *3D* FMU from the multimodel.
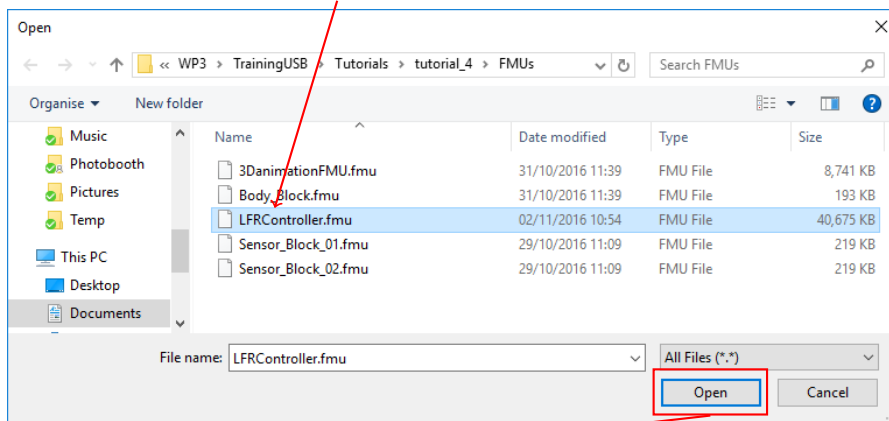
Step 27. Scroll down and click *Edit*.

Edit configuration

Step 28. As in *Tutorial 2*, in the FMUs section press *File* next to the Controller element, *c*. A file browser window will open and show five FMUs (if the file browser does not show the FMUs, navigate to *tutorials_4/FMUs*). Select *FMUController.fmu* and click *Open*.
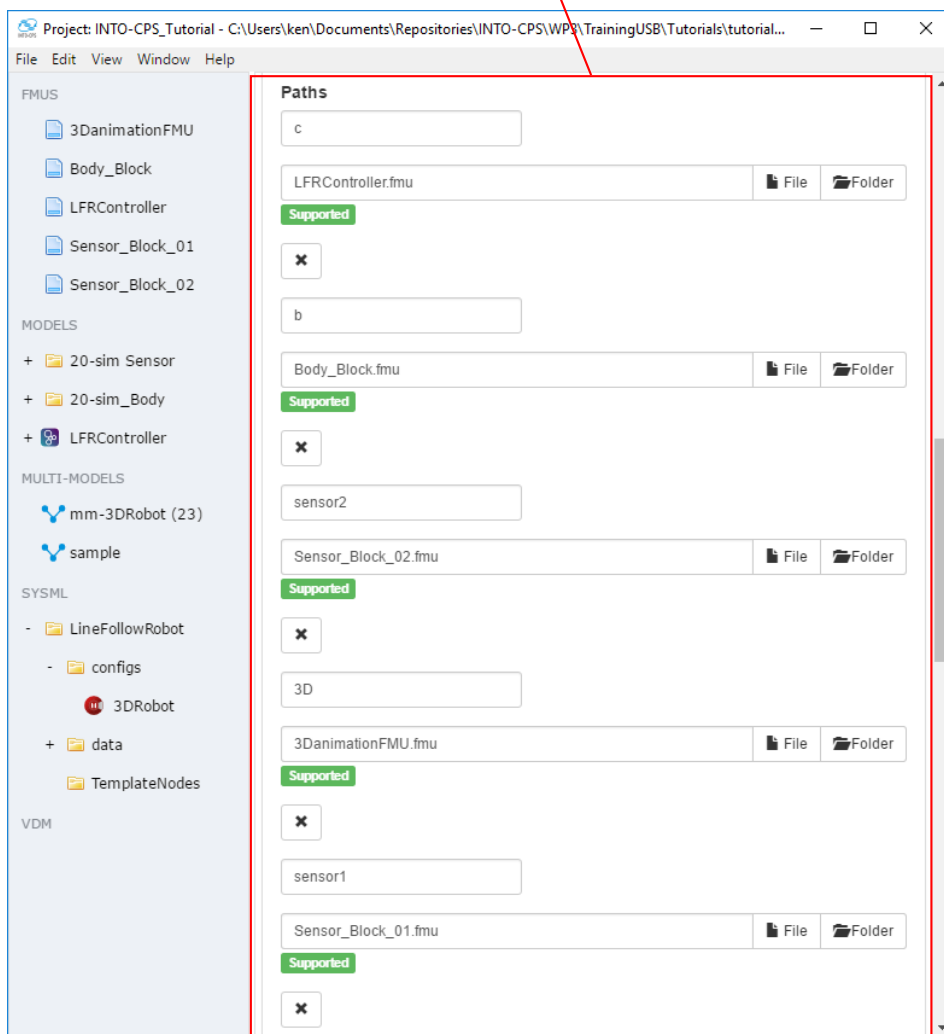
2. Click *Open*

Step 29. Repeat this for the remaining elements:

- *b* : *Body_Block.fmu*
- *3D* : *3DanimationFMU.fmu*
- *sensor1* : *Sensor_Block_01.fmu*
- *sensor2* : *Sensor_Block_02.fmu*

The complete set of FMUs will look like this:

Project: INTO-CPS_Tutorial - C:\Users\ken\Documents\Repositories\INTO-CPS\WP3\TrainingUSB\Tutorials\tutorial... — □ ×

File Edit View Window Help

FMUS
📄 3DanimationFMU
📄 Body_Block
📄 LFRController
📄 Sensor_Block_01
📄 Sensor_Block_02

MODELS
+ 📁 20-sim Sensor
+ 📁 20-sim_Body
+ 🔵 LFRController

MULTI-MODELS
🟢 mm-3DRobot (23)
🟢 sample

SYSML
- 📁 LineFollowRobot
  - 📁 configs
    🔴 3DRobot
  + 📁 data
    📁 TemplateNodes

VDM

Paths

c

| LFRController.fmu | 📄 File | 📁 Folder |

Supported

✖

b

| Body_Block.fmu | 📄 File | 📁 Folder |

Supported

✖

sensor2

| Sensor_Block_02.fmu | 📄 File | 📁 Folder |

Supported

✖

3D

| 3DanimationFMU.fmu | 📄 File | 📁 Folder |

Supported

✖

sensor1

| Sensor_Block_01.fmu | 📄 File | 📁 Folder |

Supported

✖

Step 30. Scroll down to the *Initial values of parameters section*, and click {*sensor1*}.*sensor1*. In the *Parameters* section, enter the following values:

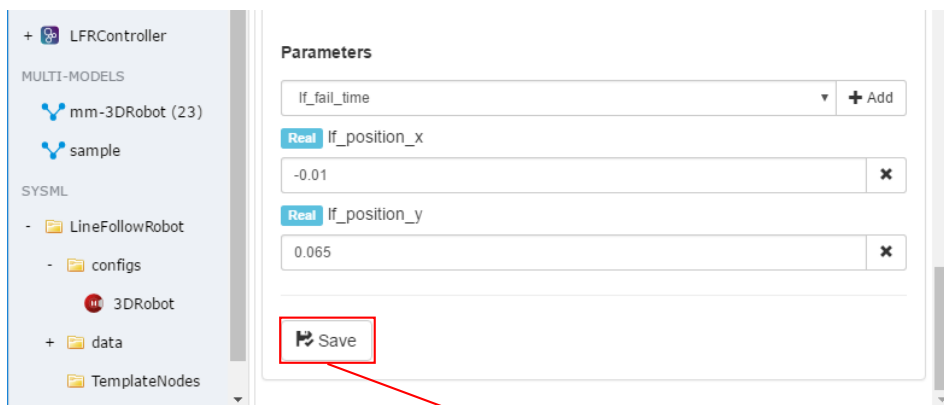- *lf_position_y* = 0.065
- *lf_position_x* = 0.01
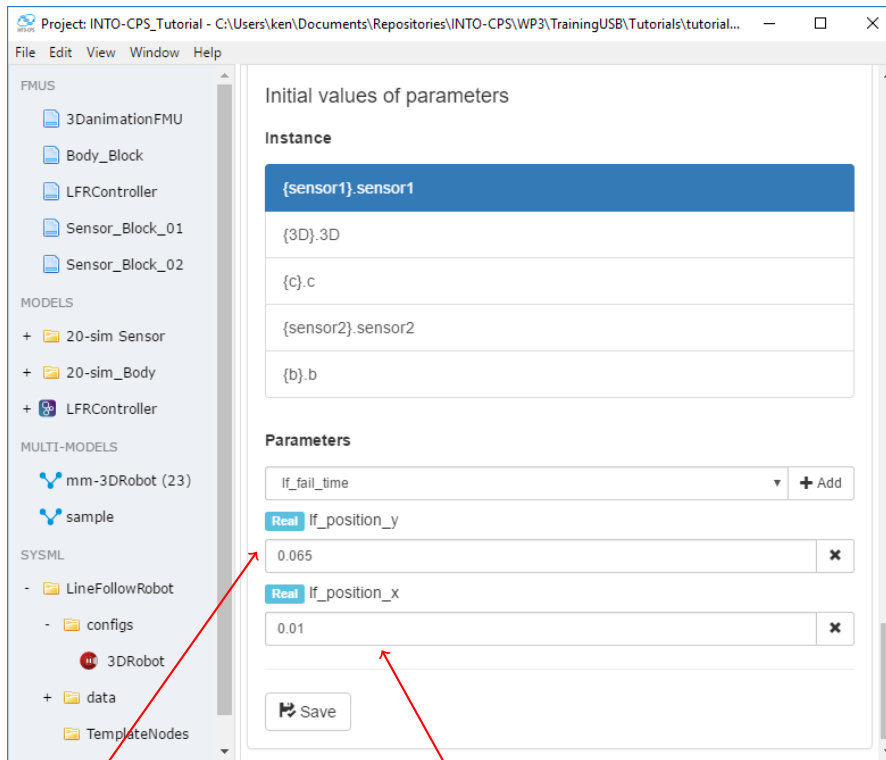
lf_position_y   *lf_position_x*

Step 31. Repeat the previous step for the second sensor, {*sensor2*}.*sensor2*, with the following values:
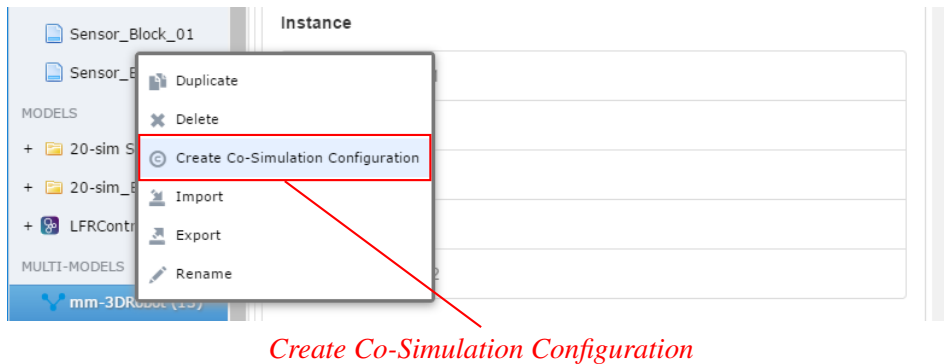
- *lf_position_x* = -0.01
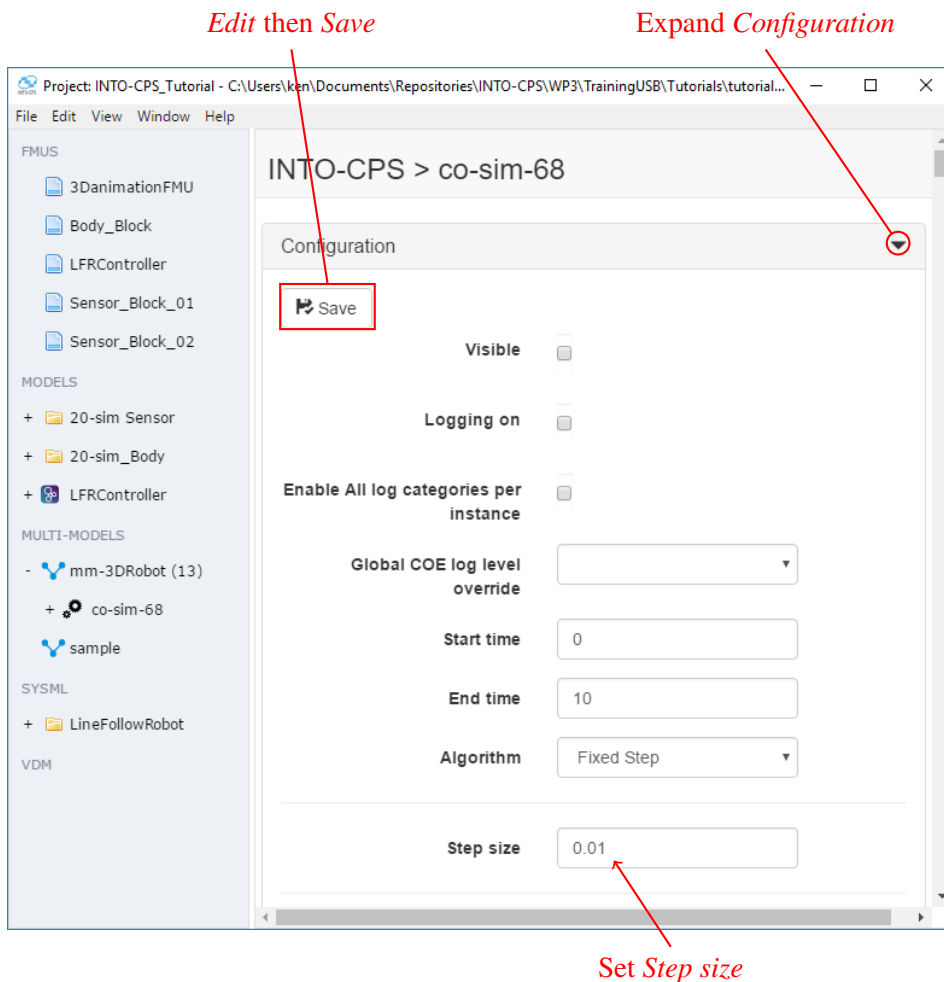- *lf_position_y* = 0.065

Step 32. *Save* the *Configuration*.

Save configuration

Step 33. Right-click on the new multi-model configuration and select *Create Co-simulation Configuration*.

Create Co-Simulation Configuration

Step 34. Set the *Step size* to 0.01. Don't forget to press *Edit* then *Save*.

Set Step size

Step 35. Check *lf_1_sensor_reading* from {*sensor1*}.*sensor1* and {*sensor2*}.*sensor2* to see the sensor values appear in the *Live Plotting*.

Step 36. Launch the COE if necessary (see *Tutorial 1 — First Co-simulation* for a reminder if needed).

Launch COE
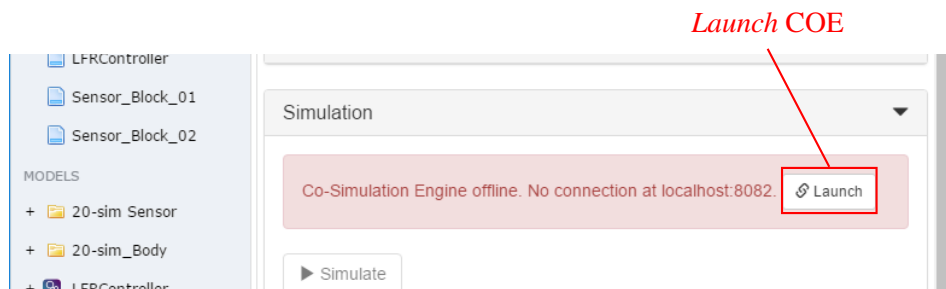
Step 37. When the COE is running, click the *Simulate* button. If you are on Windows, the *Animation Frame* should appear. You can click the *3D* button to see the 3D visualisation of the robot.

3D Button
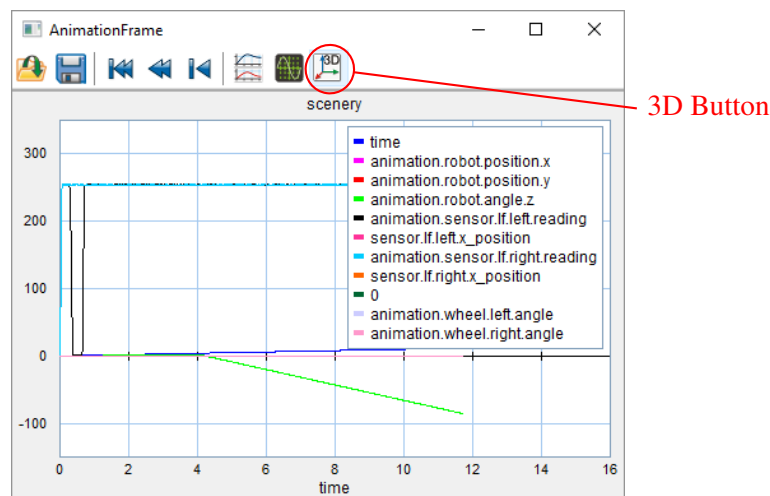
Step 38. If everything went well, the robot should follow the line as in *Tutorial 2 — Adding FMUs*.
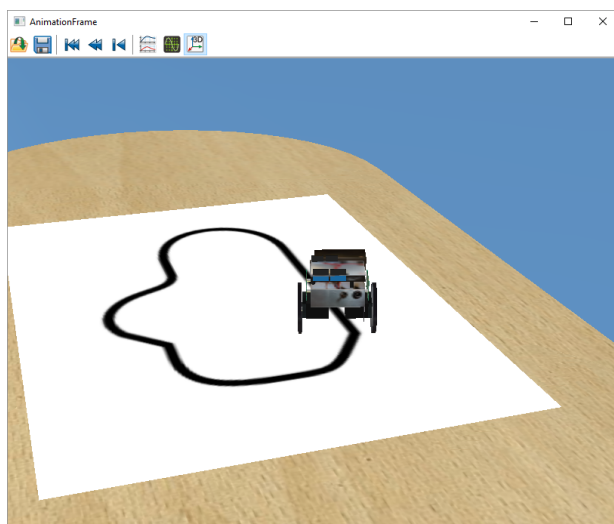
You can go back to *Overture* and look at the logic in `Controller.vdmrt`, and try to make some changes. Just repeat Step 20. to Step 23. to regenerate and copy the FMU, then press *Simulate*.

7 Additional Exercises

1. Run multiple co-simulations, each with a different step size (e.g., 0.01, 0.05, 0.1, 0.5, ...), and the same controller. Can you explain the differences in the results? Imagine that this controller gets deployed onto a real robot. What does the step size mean there?