

## UEFI & EDK II Training

**EDK II Modules: Libraries, Drivers & Applications** 

tianocore.org



## Lesson Objective



What is a EDK II Module



Use EDK II libraries to write UEFI apps/drivers



How to Define a UEFI application



Differences between UEFI App / Drivers INF file




## EDK II MODULES OVERVIEW

What are EDK II Modules



### MODULES

Smallest separate object compiled in EDK II

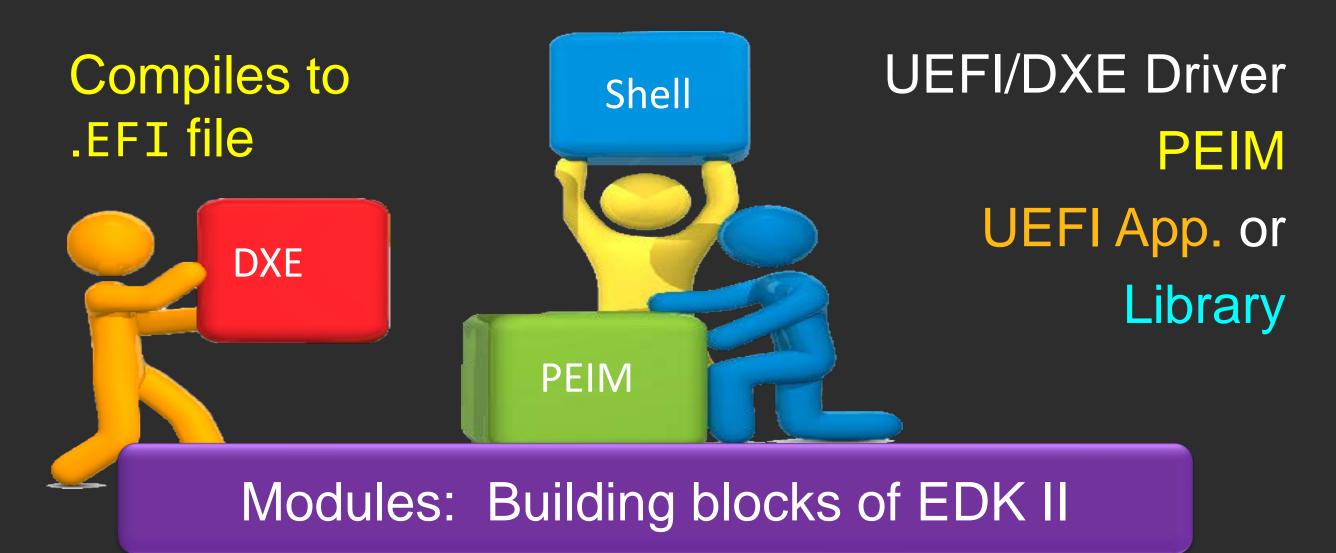



#### **MODULE TYPES**

### **Most Used Module Types**

PEI\_CORE ---> UEFI\_APPLICATION

DXE\_CORE

**BASE** 

DXE\_RUNTIME\_DRIVER

**PEIM** 

**UEFI DRIVER** 

DXE\_DRIVER

Syntax:

<ModuleTypes> ::= <ModuleType> [<Space> <ModuleType>]



## MODULE SOURCE CONTENTS - MINIMUM FILE

MODULE_TYPE	Example Source files
UEFI_APPLICATION	Foo.c, Foo.inf
UEFI_DRIVER	FooDriver.c, FooDriver.h, FooDriver.vfr, FooDriver.uni, FooDriver.inf

Complexity - Greater number of source files

.INF file - One file is required per module

.EFI file - Sources compiled to a single .EFI file



## EDK II LIBRARY MODULES



## Library Class

#### Syntax:

[LibraryClasses.common]
 <LibraryClassName>|<LibraryInstancePathToInf/Name.inf>

DebugLib MdePkg/Library/BaseDebugLibNull/BaseDebugLibNull.inf

Name

Implementation<sup>3</sup>

Consistent set of interfaces

Does not describe implementation of the interfaces



## Constructors

## "NULL" Library Class

## **Special Cases**

NOT ". . LibNull" instance

#### **Syntax**

```
Pkg/MyModule/MyModule.inf {
     <LibraryClasses>
         NULL | Pkg/Library/LibName/LibName.inf
         NULL | Pkg/Library/LibName2/LibName2.inf
}
```

## **Open Source Example**

DxeCrc32GuidedSectionExtractLib ShellPkg as used with Profiles

#### **UEFI Shell example:**



## **Locating Library Classes**

#### Library based upon

- 1. Industry specs (UEFI, etc.)
  MdePkg/MdeModulePkg
- 2. Features
  NetworkPkg/SecurityPkg

Use the package help files (.CHM) to find a library or function *Example*: MdePkg.chm

Search WorkSpace (.INF) "LIBRARY\_CLASS"



## Library Instance Hierarchy

## **Form**

a hierarchy similar to UEFI drivers

DebugLib

DebugLibSerialPort (Instance)

SerialPort (Class)

Link

your module to another

MdePkg (Specs)

Build error: Instance of Library class [Foo...Lib] is not found .... Consumed by module [My Module.inf]



## Commonly Used Base Library Classes


**UefiDriverEntryPoint** BaseLib DebugLib **UefiBootServicesTableLib UefiLib** UefiApplicationEntryPoint DxeCoreEntryPoint DevicePathLib IoLib CpuLib UefiUsbLib PciLib PrintLib PeimEntryPoint MemoryAllocationLib **UefiScsiLib** BaseMemoryLib PeiCoreEntryPoint **UefiRuntimeLib** SmmMemLib DxeSerivesLib SynchronizationLib PciExpressLib **UefiRuntimeServicesTableLib** DxePcdLib PciSegmentLibLib PeiServicesLib UefiFileHandleLib PeiPcdLib DxeHobLib



## MdePkg Library .CHM file Location

tianocore.org UDK2018 documentation on


- Latest UDK Release
- **UDK2018**

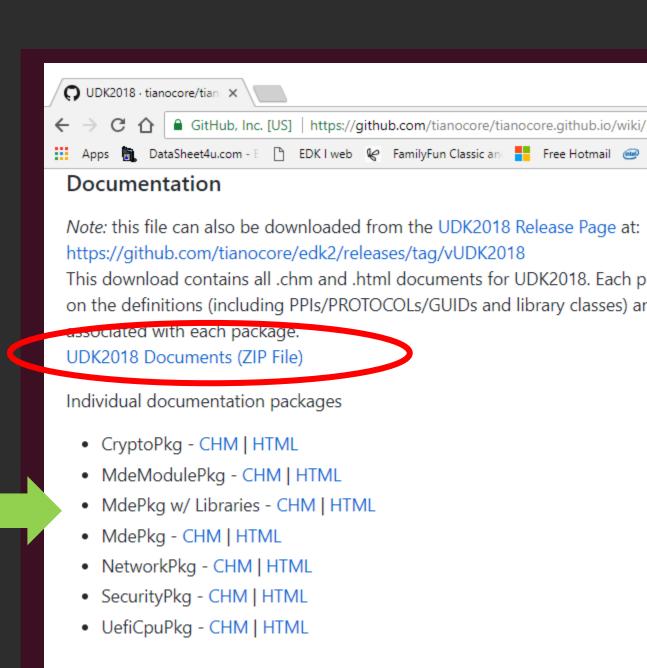



## Library Navigation Demonstration



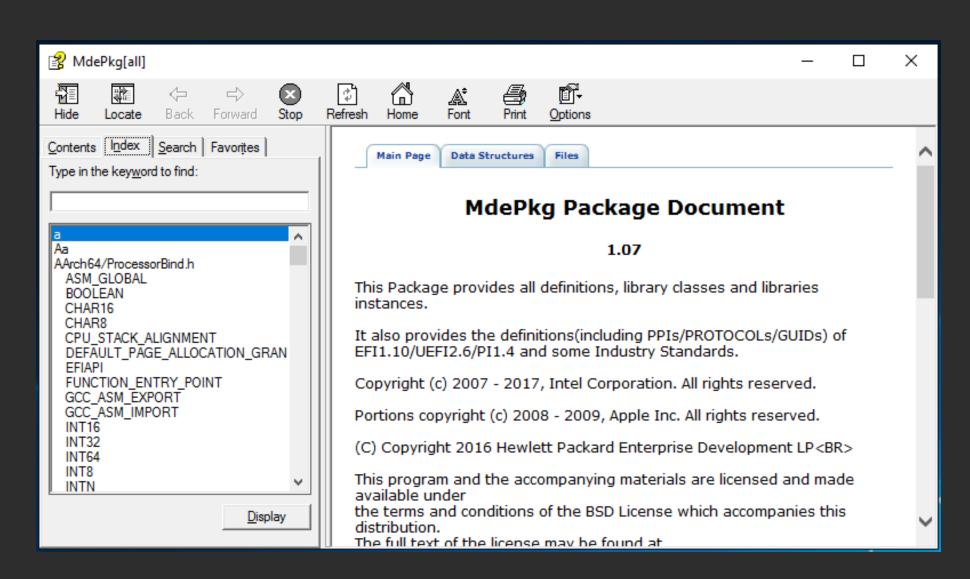


Open file: /FW/Documentation/"MdePkg Document With LibrariesMdePkg.chm"

NOTE: Install a CHM Viewer for Ubuntu

bash\$ sudo aptitude install kchmviewer



## Library Navigation Demonstration

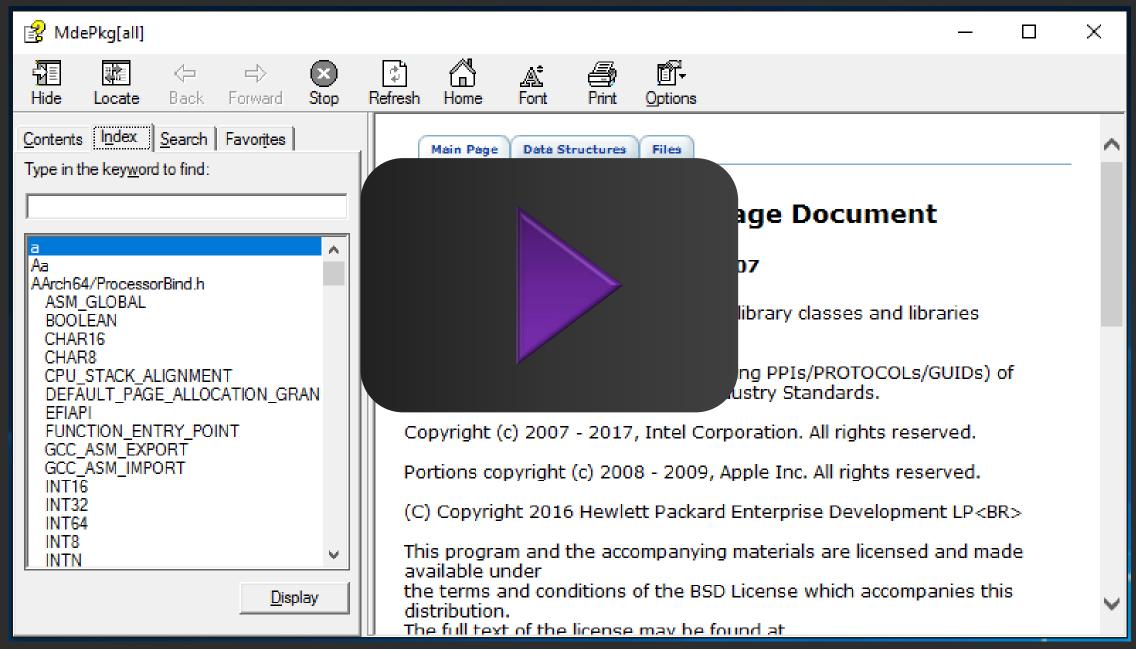

https://youtu.be/s8Zw1w1iQS4



## EDK II UEFI APPLICATION

16



## Defining a UEFI Application

### Characteristics of a UEFI Application

- Loaded by UEFI loader, just like drivers
- Does not register protocols
- Consumes protocols
- Typically exits when completed (user driven)
- Same set of interfaces as drivers available




## Defining a UEFI Application

## **UEFI** Application Usages

- Platform Diagnostics
- Factory Diagnostics
- **Utilities**
- Driver Prototyping
- "Platform" Applications
- Portable Across Platforms (IA32, X64, ARM, Itanium, etc.)





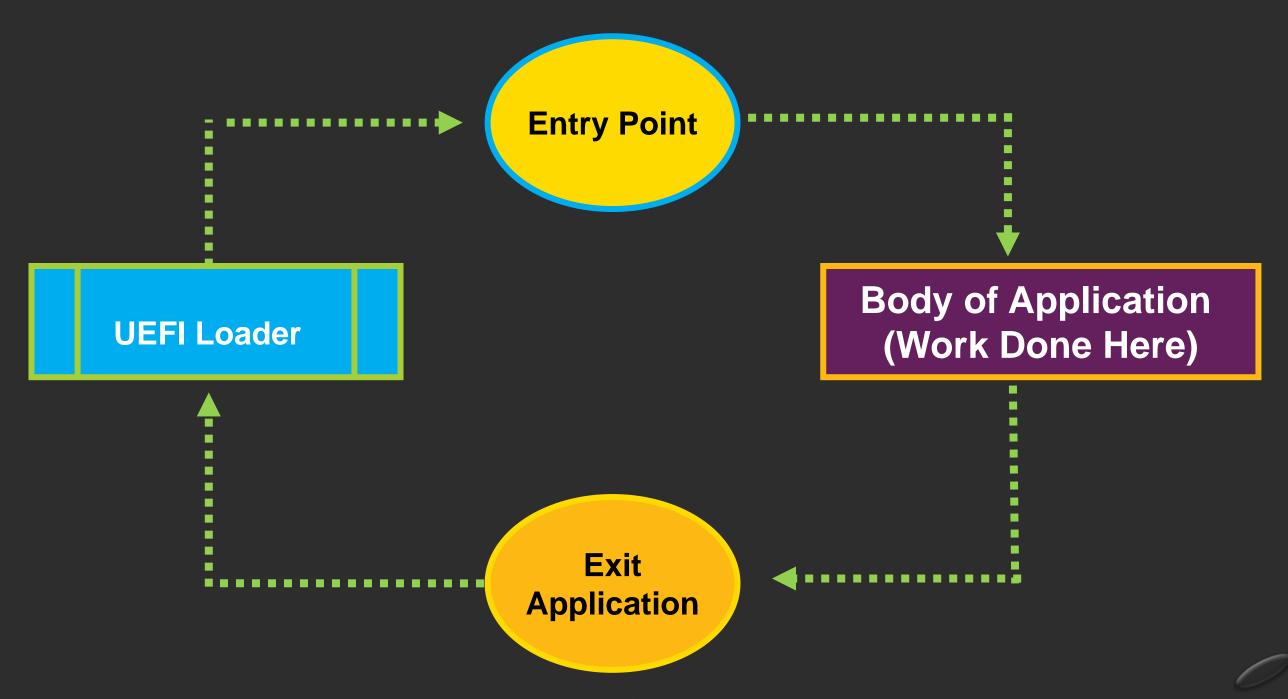




**UEFI** Loader






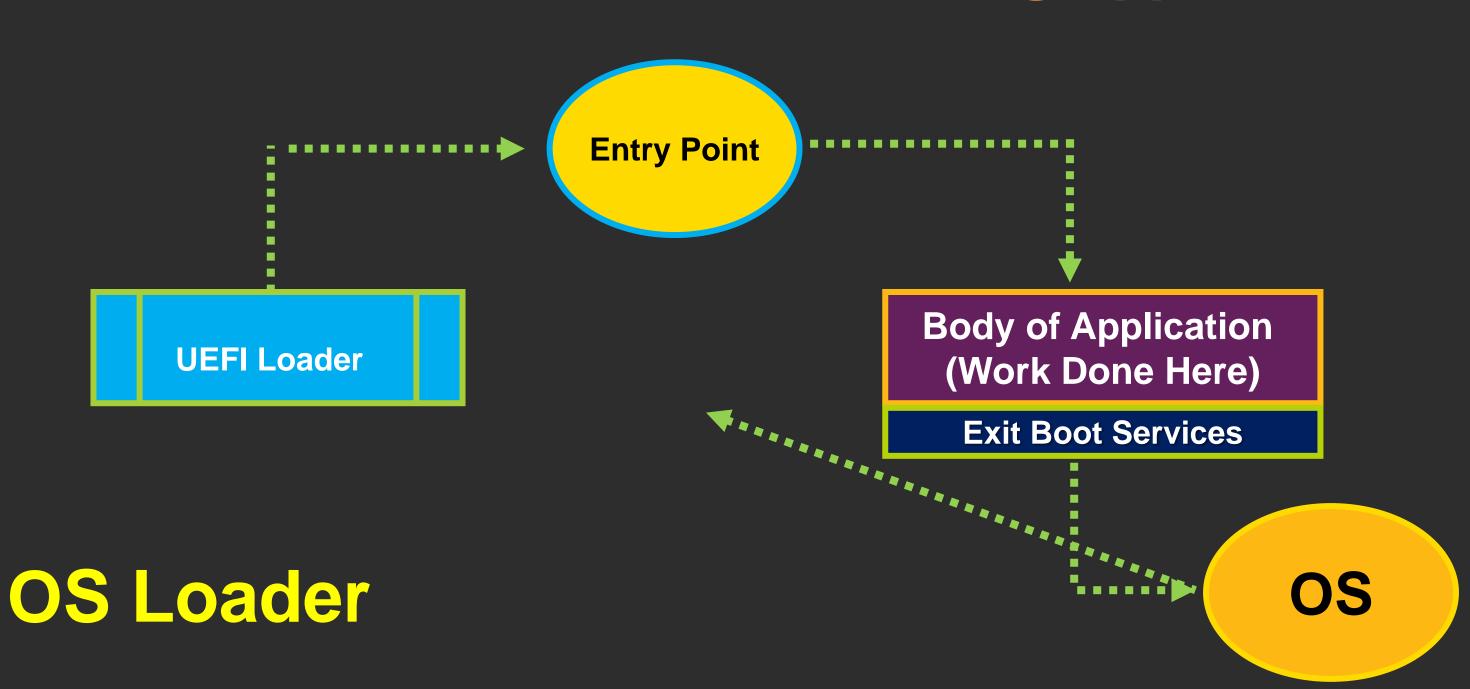





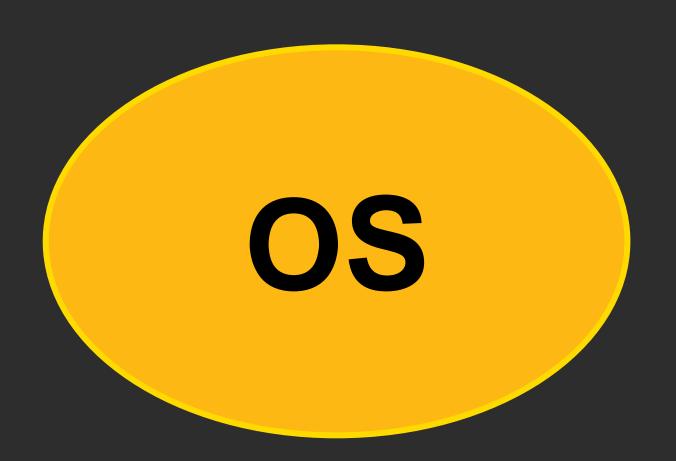

**OS Loader** 





## Driver Vs. Application

	Driver	Application
Loaded by:	UEFI Loader	UEFI Loader
Interfaces available:	ALL	ALL
Consume protocols?	YES	YES
Produce protocols?	YES	NO
Typically driven by?	System	User
Typical use	Support Hardware	Any



## EDKII UEFI APPLICATIONS

How to Write a EDK II UEFI Application



## **Application Files Placement**

- Application source files can be located anywhere in the EDK II workspace including PACKAGES\_PATH
- All code and include files go under a single directory containing the driver INF
- EDK II Sample Applications can be found here:
  - edk2/MdeModulePkg/Application
- Typically, modules reside within a package:

```
MyWorkSpace/
edk2/
MyPkg/
Application/
MyApp/
MyApp/

MyApp.inf
```



## Module File [INF]

```
Premake
Syntax
   INFfile ::=[<Header>]
                <Defines>
                 <BuildOptions>
                 <Sources>]
                 <Binaries>]
                 <Guids>]
                 <Protocols>]
                 <Ppis>]
                 <Packages>]
                 <LibraryClasses>]
                 <Pcds>]
                 <UserExtensions>]
```

INF text file example



## **Application INF Files [DEFINES]**

Field	Description
INF_VERSION	1.25* - Version of the INF spec.
BASE_NAME	What's the name of the application
FILE_GUID	Create a GUID for your module
MODULE_UNI_FILE	Meta-data - localization for Description & Abstract
VERSION_STRING	Version number
ENTRY_POINT	Name of the function to call
MODULE_TYPE	UEFI_APPLICATION

27

<sup>\*</sup> EDK II Specifications: <a href="https://github.com/tianocore/tianocore.github.io/wiki/EDK-II-Specifications">https://github.com/tianocore/tianocore.github.io/wiki/EDK-II-Specifications</a>



## Sample INF file

```
[Defines]
  INF_VERSION
 BASE NAME
 MODULE UNI FILE
 FILE GUID
 MODULE TYPE
 VERSION_STRING
  ENTRY POINT
[Sources]
 MyFile.c
[Packages]
 MdePkg/MdePkg.dec
[LibraryClasses]
 UefiApplicationEntryPoint
[Guids]
[Ppis]
[Protocols]
```

- = 0x00010005
- = MyApplication
- = MyFile.uni
- = 10C75C00-30 . . .
- = UEFI APPLICATION
- = 1.0
- = UefiMain



### Sample INF file

```
[Defines]
 INF_VERSION
                                             = 0 \times 00010005
 BASE NAME
                                             = MyApplication
 MODULE_UNI_FILE
                                             = MyFile.uni
 FILE GUID
                                             = 10C75C00-30 . . .
 MODULE TYPE
                                             = UEFI APPLICATION
 VERSION_STRING
                                             = 1.0
  ENTRY POINT
                                             = UefiMain
[Sources]
 MyFile.c
[Packages]
 MdePkg/MdePkg.dec
[LibraryClasses]
 UefiApplicationEntryPoint
[Guids]
[Ppis]
```



## **Building an Application**


Platform .DSC references .INF

#### Runs:

"Build" for the entire platform

OR

"Build" in the application's directory

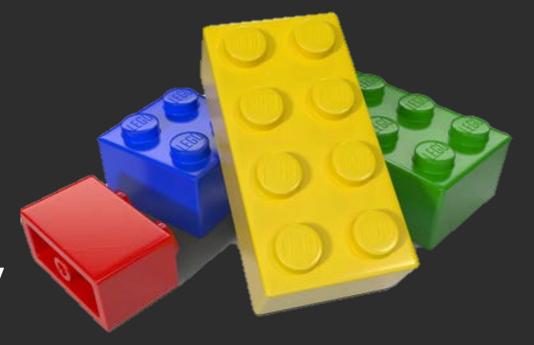



## Sample Application 'C' file

```
#include <Uefi.h>
#include <Library/UefiApplicationEntryPoint.h>
EFI_STATUS
EFIAPI
UefiMain (
                     ImageHandle,
  IN EFI_HANDLE
  IN EFI_SYSTEM_TABLE *SystemTable
  return EFI_SUCCESS;
```



## Sample Application 'C' file

```
#include <Uefi.h>
#include <Library/UefiApplicationEntryPoint.h>
EFI STATUS
UefiMain
                       ImageHandle,
  IN EFT HANDLE
  IN EFI_SYSTEM_TABLE
                       *SystemTable
  return EFI_SUCCESS;
```



# EDK II UEFI DRIVERS DXE Drivers, PEIM, Etc.

33



#### **Driver Files Placement**

- Driver source code can go anywhere in the EDK II workspace
- All code and include files go under a single directory containing
- Good example of UEFI Drivers can be found here: edk2/MdeModulePkg/Bus/ScsiDiskDxe
- Typically, Driver modules reside within a package:

```
MyWorkSpace/
  edk2/
    MyPkg/
                                                MyDriver.c
      Include/
                                                MyDriver.h
      MyDriver/
                                                MyDriver.inf
```



## Changes for a UEFI Driver Module

Applications can be converted to a driver

But ... It remains in memory after it runs

UEFI Driver Module requirements:

- Driver Binding Protocol
- Component Name2 Protocol (recommended)

DXE/PEIM/other Driver requirements










## Sample Driver INF file

```
[Defines]
 INF_VERSION
                                   = 0x00010005
 BASE NAME
                                   = MvDriver
  FILE GUID
                                   = 10C75C00-30
 MODULE TYPE
                                   = UEFI DRIVER
  VERSION_STRING
                                   = 1.0
  ENTRY POINT
                                   = UefiMain
[Sources]
 MyDriverFile.c
[Packages]
 MdePkg/MdePkg.dec
[LibraryClasses]
 UefiDriverEntryPoint
[Guids]
[Protocols]
```





https://github.com/tianocore/edk2/MdeModulePkg/Universal/Disk/DiskloDxe

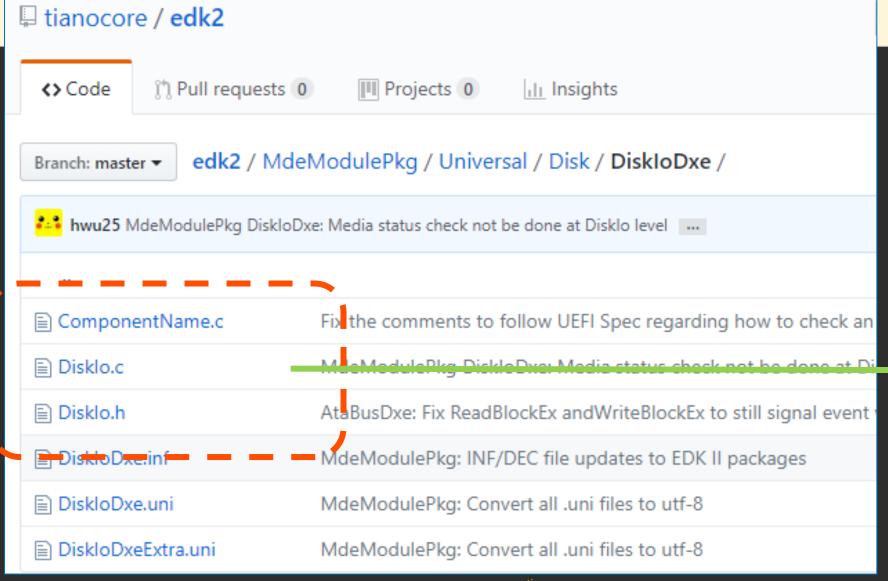

Driver Binding
Supported
Start
Stop





https://github.com/tianocore/edk2/.../Disk/DiskloDxe

**Entry Point** 

### "C" File

```
EFI STATUS
FETADT
InitializeDiskIo (
                          ImageHandle,
  IN EFT HANDLE
  IN EFI_SYSTEM_TABLE
                          *SystemTable
  Status = EfiLibInstallDriverBindingComponentName2
             ImageHandle,
             SystemTable,
             &gDiskIoDriverBinding,
             ImageHandle,
             &gDiskIoComponentName,
             &gDiskIoComponentName2
  ASSERT EFI ERROR (Status);
  return Status;
```

#### **INF** File

```
[Defines]

ENTRY_POINT = InitializeDiskIo
```





https://github.com/tianocore/edk2/.../Disk/DiskloDxe

### Supported

### "C" File

```
EFI_STATUS
DiskIoDriverBindingSupported
  IN EFI_DRIVER_BINDING_PROTOCOL
                                   *This.
  IN EFI HANDLE
                                  ControllerHandle,
  IN EFI_DEVICE_PATH_PROTOCOL
                                   *RemainingDevicePath
OPTIONAL
  Status = gBS->OpenProtocol (
    ControllerHandle,
      &gEfiBlockIoProtocolGuid,
      (VOID **) &BlockIo,
      This->DriverBindingHandle,
      ControllerHandle,
      EFI_OPEN_PROTOCOL_BY_DRIVER
    );
```

#### INF File

```
[Protocols]

gEfiBlockIoProtocolGuid ## TO_START
```





https://github.com/tianocore/edk2/.../Disk/DiskloDxe

Start

### "C" File

```
EFI_STATUS
DiskIoDriverBindingStart (
  IN EFI_DRIVER_BINDING_PROTOCOL
                                  *This,
  IN EFI HANDLE
                                  ControllerHandle,
  IN EFI_DEVICE_PATH_PROTOCOL
                                  *RemainingDevicePath
OPTIONAL
  if (Instance->BlockIo2 != NULL) {
    Status = gBS->InstallMultipleProtocolInterfaces (
    &ControllerHandle,
    &gEfiDiskIoProtocolGuid, &Instance->DiskIo,
    &gEfiDiskIo2ProtocolGuid, &Instance->DiskIo2,
    NULL
    );
```


#### **INF** File

[Protocols]

```
gEfiDiskIoProtocolGuid ## BY_START gEfiDiskIo2ProtocolGuid ## BY_START
```



## DXE Driver Example - PlatformInfoDxe

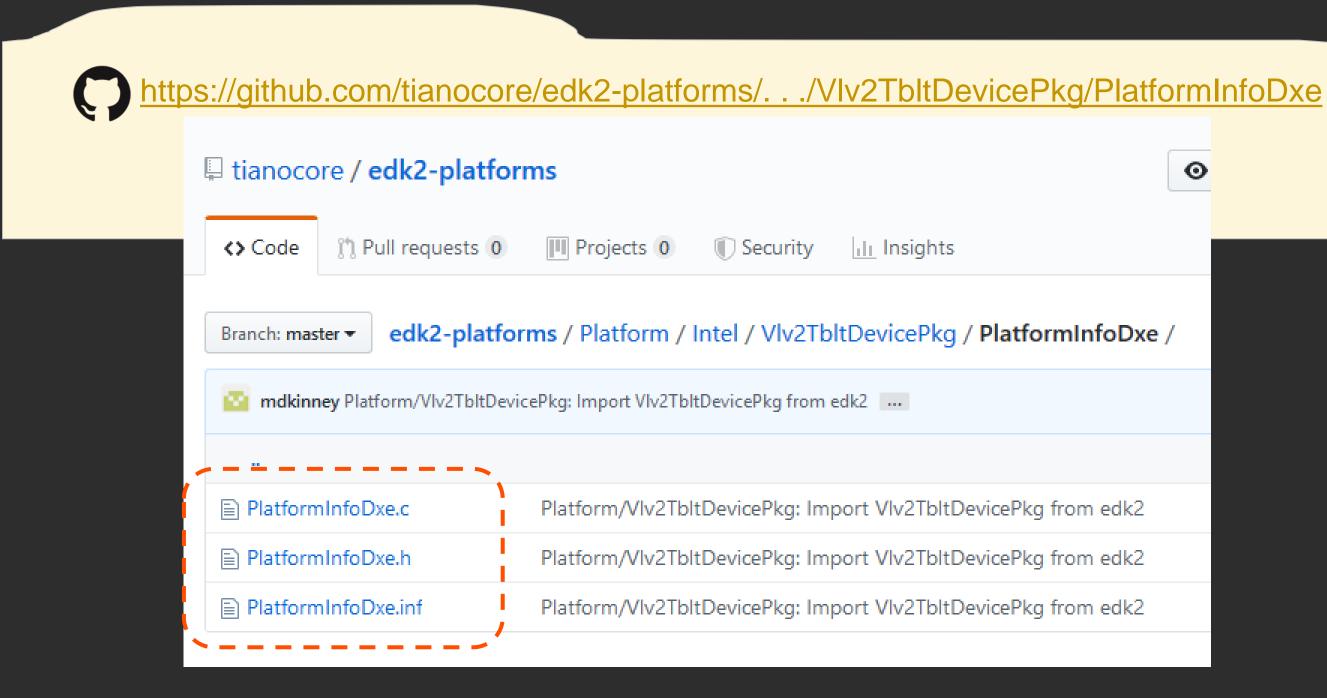

45



## DXE Driver Example – PlatformInfoDxe

https://github.com/tianocore/edk2-platforms/ PlatformInfoDxe

### **Entry Point**

### "C" File


```
#include "PlatformInfoDxe.h"
EFI STATUS
EFIAPI
PlatformInfoInit (
  IN EFI HANDLE
                       ImageHandle,
                       *SystemTable
  IN EFI SYSTEM TABLE
  return Status;
```

### **INF** File

Notice the MODULE TYPE, C function Entry point and the [Depex] differences in the INF file



## PEI Driver (PEIM) Example - CpuloPei

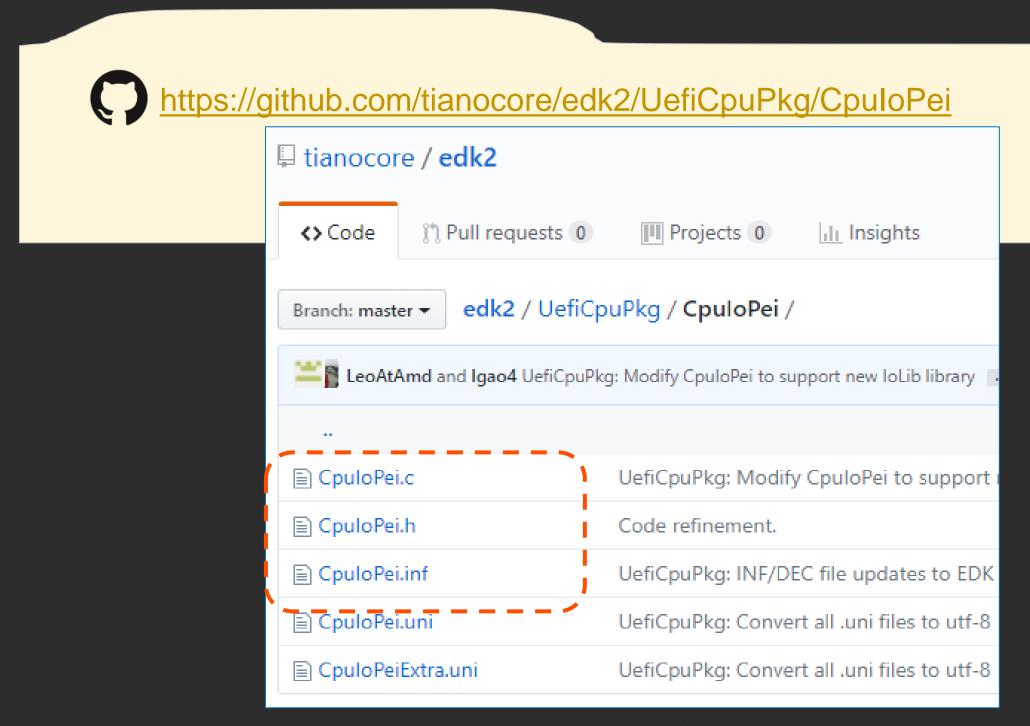

47



## PEI Driver (PEIM) Example – CpuloPei



https://github.com/tianocore/edk2/UefiCpuPkg/CpuIoPei

### **Entry Point**

### "C" File

### **INF** File

```
[Defines]
 MODULE TYPE
                    = PEIM
 VERSION_STRING
                    = 1.0
 ENTRY POINT
                    = CpuIoInitialize
[Depex]
  TRUE
```

"FileHandle" - Instead of the ImageHandle & NO EFI\_SYSTEM\_TABLE - because it has Not yet defined



## SUMMARY



What is a EDK II Module



Use EDK II libraries to write UEFI apps/drivers



How to Define a UEFI application



Differences between UEFI App / Drivers INF file







## Return to Main Training Page



Return to Training Table of contents for next presentation link





### **ACKNOWLEDGEMENTS**

Redistribution and use in source (original document form) and 'compiled' forms (converted to PDF, epub, HTML and other formats) with or without modification, are permitted provided that the following conditions are met:

Redistributions of source code (original document form) must retain the above copyright notice, this list of conditions and the following disclaimer as the first lines of this file unmodified.

Redistributions in compiled form (transformed to other DTDs, converted to PDF, epub, HTML and other formats) must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS DOCUMENTATION IS PROVIDED BY TIANOCORE PROJECT "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL TIANOCORE PROJECT BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS DOCUMENTATION, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 2021-2022, Intel Corporation. All rights reserved.



# BACK UP

54