

# UEFI & EDK II TRAINING UEFI SHELL APPLICATION

tianocore.org




# LESSON OBJECTIVE

- Explain UEFI, the shell, and how they work together
- Define the shell components
- Use the shell API in a UEFI application
- UEFI Shell command Library
- UEFI Shell scripts



# UEFI SHELL OVERVIEW

Components of the UEFI Shell

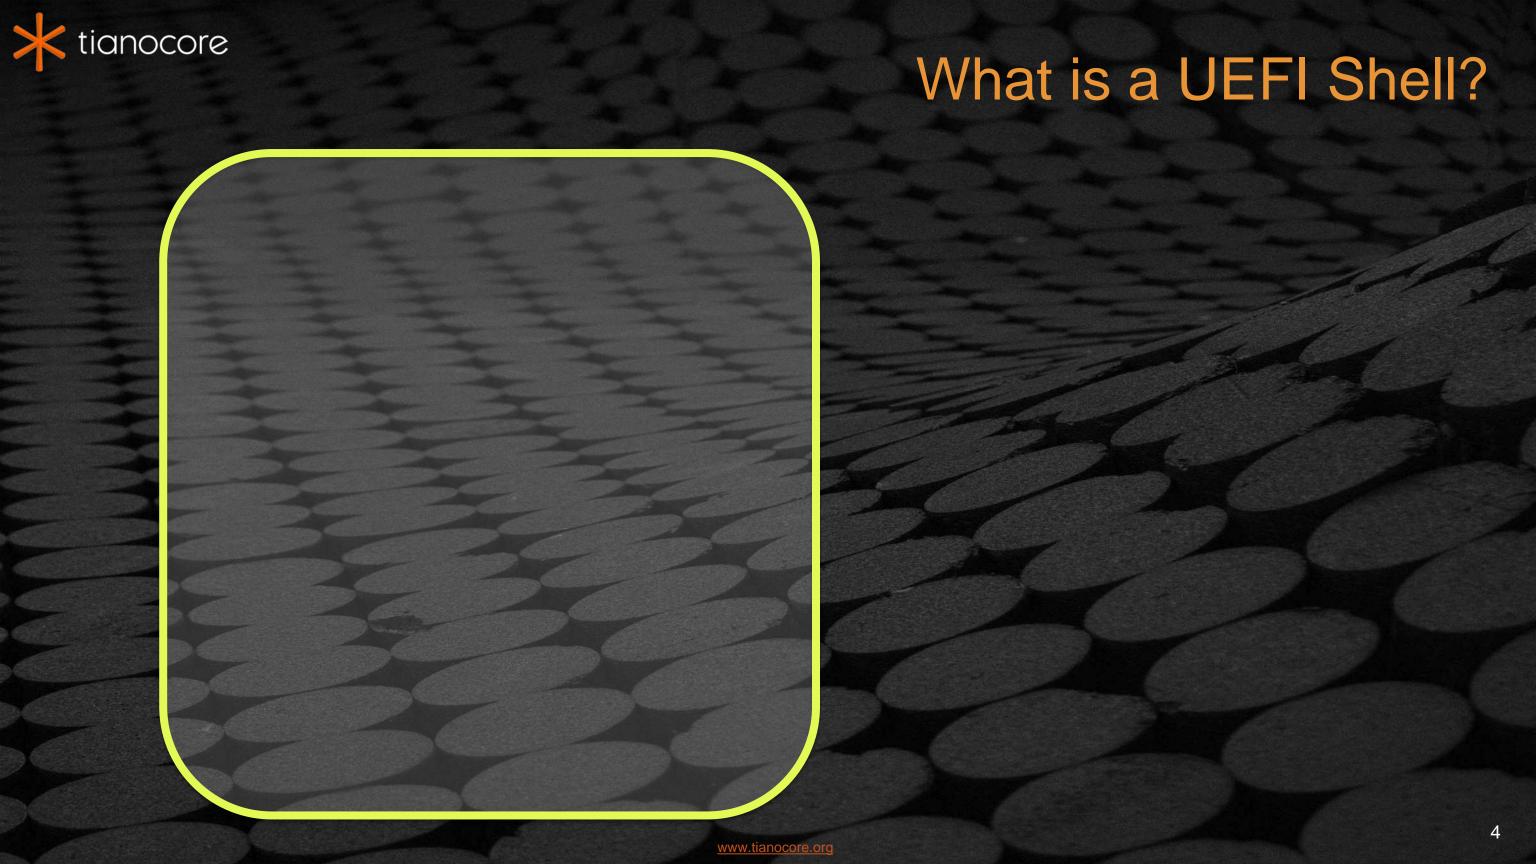













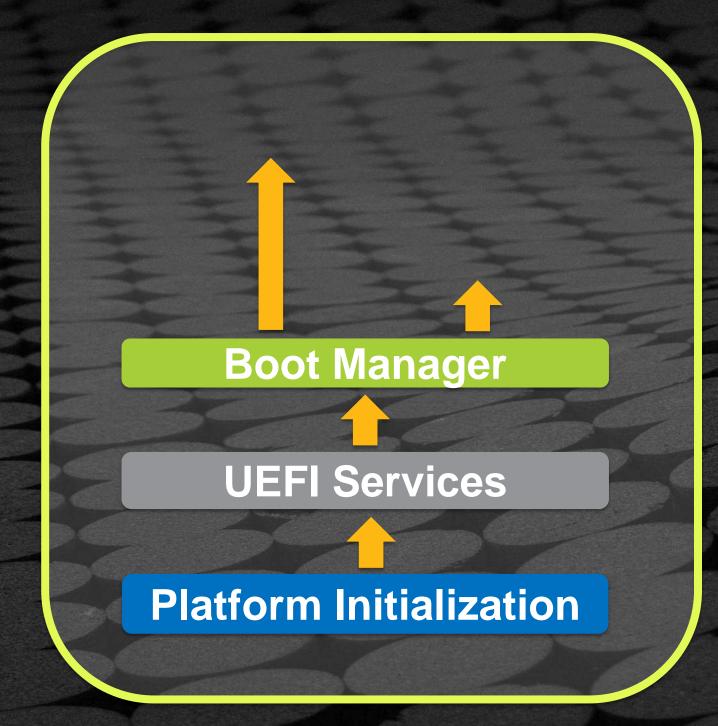



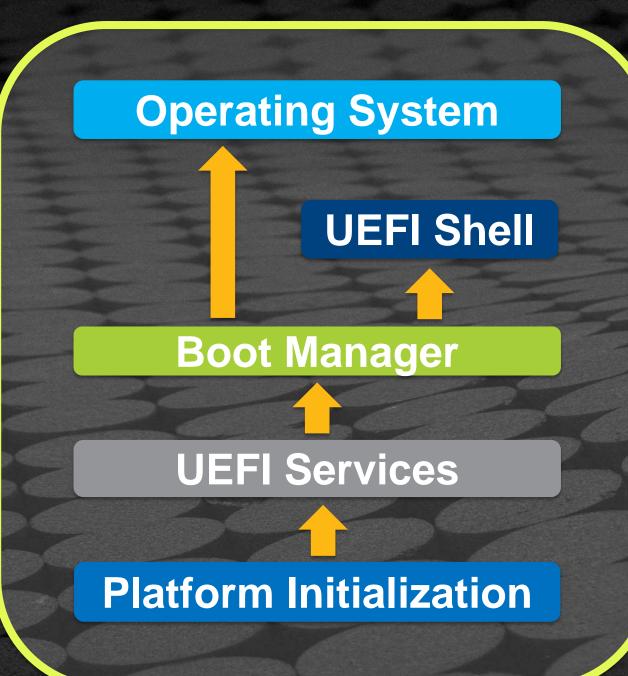



Extensive & Standardized Pre-OS UEFI Application



# **UEFI SHELL SPECIFICATION V. 2.2**

http://www.uefi.org/specsandtesttools



UEFI Shell v2.0 specification first released 2008 – Latest V2.2 Jan 2016



# **UEFI SHELL ELEMENTS**

Small Size Profiles

Shell Commands

New Shell API

Enhanced Scripting





# SMALL SIZE PROFILES

Level / Profile	Commands
Level 0	Shell API <b>Only</b>
Level 1	Basic scripting support
Level 2	File Support, cmds(cd, cp, mv)
Level 3	Adds interactive CLI + Profiles
UEFI Debug Profile	bcfg, comp, dblk, dmem, dmpstore, echo, edit,
<b>UEFI Network Profile</b>	ipconfig, ping
UEFI Driver Profile	drvdiag, openinfo, reconnect, load, unload

Choose the shell that best matches your product needs





# SHELL COMMANDS

# help -b

```
attrib
          -Displays or changes the attributes of files or directories.
          -Displays or changes the current directory.
cd
          -Copies one or more source files or directories to a destination.
ср
          -Loads a UEFI driver into memory.
load
          -Defines a mapping between a user-defined name and a device handle.
map
          -Creates one or more new directories.
mkdir
          -Moves one or more files to a destination within a file system.
mv
          -Command used to retrieve a value from a particular record which was output in a standard
parse
formatted output.
          -Resets the system.
reset
          -Displays, changes or deletes a UEFI Shell environment variables.
set
          -Lists a directory's contents or file information.
1s
          -Deletes one or more files or directories.
rm
          -Displays the volume information for the file system that is specified by fs.
vol
          -Displays and sets the current date for the system.
date
time
          -Displays or sets the current time for the system.
          -Displays or sets time zone information.
timezone
          -Stalls the operation for a specified number of microseconds.
stall
for
          -Starts a loop based on for syntax.
          -moves around the point of execution in a script.
goto
if
          -Controls which script commands will be executed based on provided conditional expressions.
shift
          -moves all in-script parameters down 1 number (allows access over 10).
Press ENTER to continue or 'Q' break:
```

14







# **NEW SHELL API**

# EFI\_SHELL\_PROTOCOL

Group	Functions
File Manipulation	OpenFileByName(), WriteFile(), etc
Mapping, Alias & Environmental Variables	<pre>GetMapFromDevicePath(), GetFilePathFromDevicePath(), etc</pre>
Launch Application or Script	<pre>Execute(), BatchIsActive(), IsRootShell(),etc</pre>
Miscellaneous	<pre>GetPageBreak(), EnablePageBreak(), etc</pre>

EFI\_SHELL\_PROTOCOL is installed on each application image handle

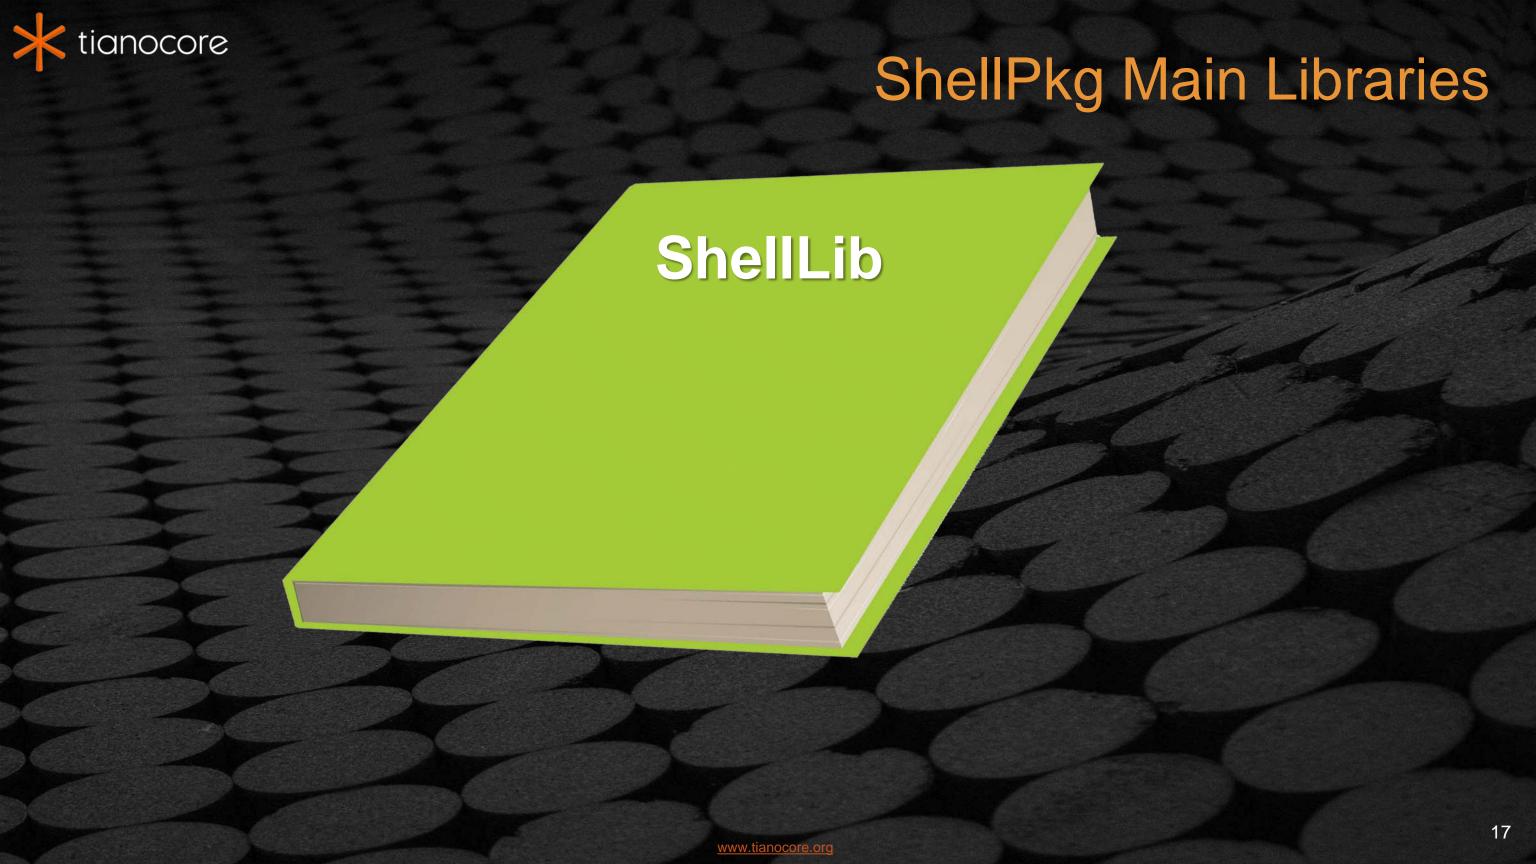

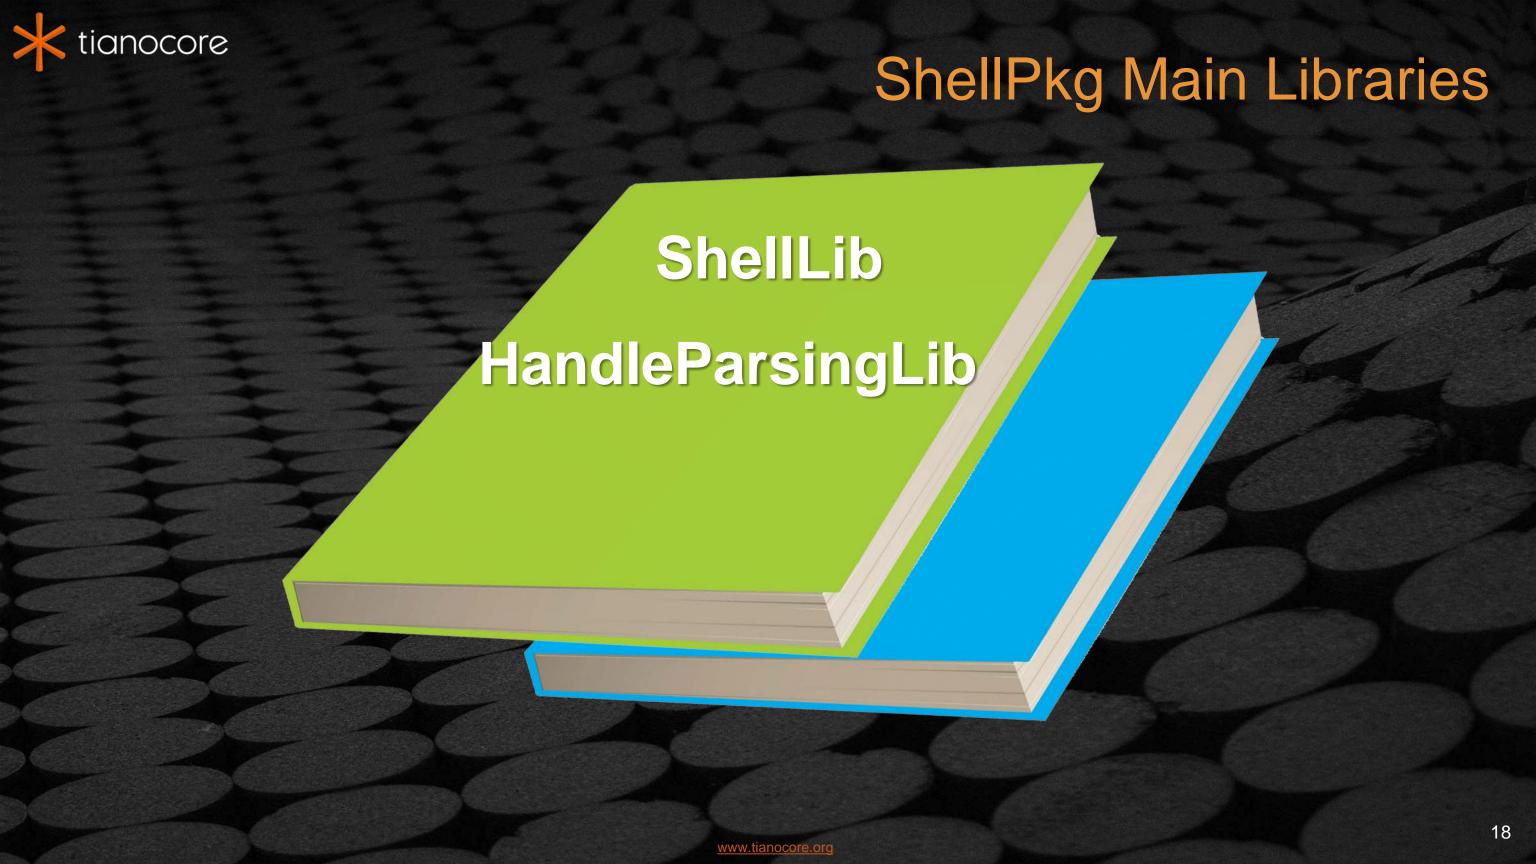





# **EDK II ShellPkg**

Supports binary portability

Shell protocols


# Shell parameters

#Include <Library/ShellLib.h>
gEfiShellParametersProtocol
gEfiShellProtocol



# Shell Call Example

```
use UEFI shell 2.x interface
if (gEfiShellParametersProtocol != NULL) {
    Argc = gEfiShellParametersProtocol->Argc;
    Argv = gEfiShellParametersProtocol->Argv;
//Create the file with Argv[1] with
       read/write/create
       Status = gEfiShellProtocol->OpenFileByName
           (Argv[1], &Handle, EFI_FILE_MODE_READ
            EFI_FILE_MODE_WRITE
            EFI FILE MODE CREATE);
```

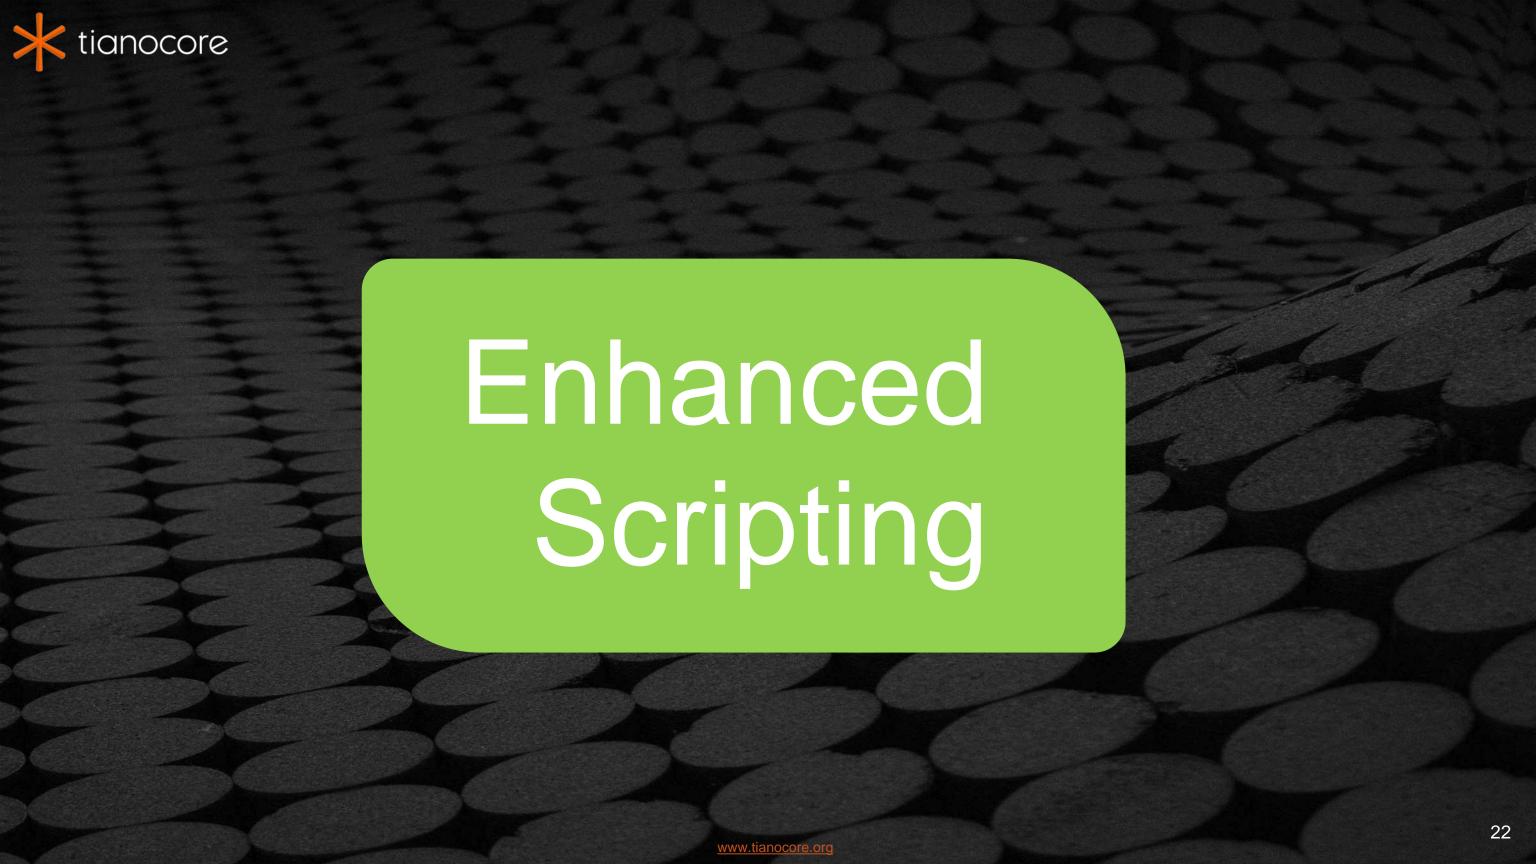



# **Enhanced Scripting**

- Contains .nsh extension
- "Startup.nsh" Runs first
- Supports:
  - ✓ Command-line arguments
  - ✓ Standard script commands
  - ✓ Input & output redirection & pipes



# Shell Scripts (Benefits)



Perform basic flow control

Allows branching/looping





Users can control input, output and script nesting



# Script that Detects Shell Capabilities

```
# check if Shell supports level 3 commands
# Exit on error
if %uefishellsupport% ult 3 then
   echo Must support UEFI Shell, Level 3
   exit /b 2
endif
# check that Shell supports Debug1 profile.
if profiles(Debug1)then
   echo UEFI Shell supports Debug1 profile
endif
```



# **UEFI Shell Script Example**


### Script1.nsh

### Script2.nsh

```
# Show nested scripts
time > Mytime.log
for %a run (3 1 -1)
    echo %a counting down
endfor
```



# Documentation for EDK II ShellPkg

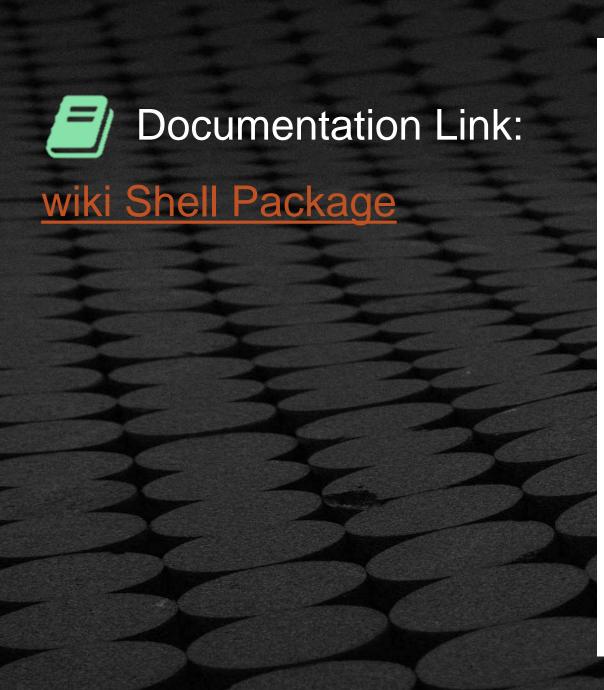

#### Getting the Shell 2.0

This provides a shell application, a set of NULL-named libraries that provide configurable command sets, and libraries for creating more Shell applications and shell commands. See the ReadMe for more info.

#### Source Repository

#### ShellPkg

This provides source code for the shell applications.

#### **Binary Repository**

#### ShellBinPkg

This provides the binary shell applications. There are a few versions for different usage models. See the ReadMe for more info.

#### **Shell 2.0 Engineering Resources**

- · Shell Execution Requirements
- Shell Library Primer
- Creating a Shell Application
- · Porting an EDK Shell Extension
- · Move a Shell Application to internal command
- Shell FAQ



### UEFI Shell 2.2 Vs. EFI Shell 1.0

UEFI Shell 2.x

- EFI\_SHELL\_PARAMETERS\_PROTOCOL

EFI Shell 1.0

- EFI\_SHELL\_INTERFACE

See example C file: MyShellApp.c



### UEFI Shell 2.x Vs. EFI Shell 1.0

```
//Check for UEFI Shell 2.x
   Status = gBS->OpenProtocol(ImageHandle,
                          gEfiShellParametersProtocolGuid,
                         VOID **)&mEfiShellParametersProtocol,
                         ImageHandle,
                          NULL
                          EFI_OPEN_PROTOCOL_GET_PROTOCOL
    if (!EFI_ERROR(Status)) {
  use UEFI Shell 2.x Parameter Protocol
         Argc = mEfiShellParametersProtocol->Argc;
         Argv = mEfiShellParametersProtocol->Argv;
     {// Check if EFI shell 1.0 interface
```

See example C file: MyShellApp.c



### **Legacy BIOS**

OS loaders

DOS

Legacy OS

Int 13 Int 16 Int 16

Hardware

# LEGACY VS. UEFI

### **UEFI**

UEFI apps MTA tests

UEFI OS loaders

UEFI Shell

Protocol 3
Protocol 2
Protocol 1

Protocol ...

Hardware



# SHELL USAGE



Execute preboot programs

Move files between devices



Load a preboot UEFI driver (.efi)




# ACCESSING THE SHELL

/EFI/boot/BOOTx64.efi

FAT partition
 /EFI
 /BOOT
 BOOTx64.efi

BOOTx64.efi = OS loader, UEFI application, or UEFI Shell

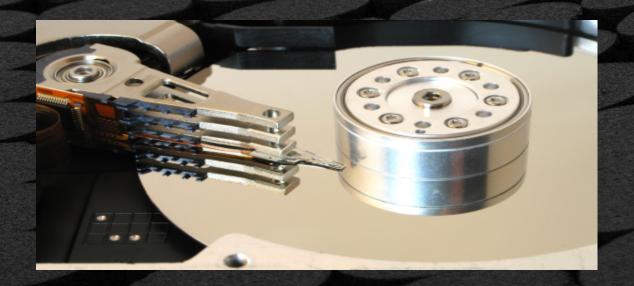





```
Shell> map
Device mapping table
fs0 : Acpi(PNP0A03,1)/Pci(1F|0)/Pci(2|0)/Scsi(Pun0,Lun0)/
HD(Part1, Sig8983DFE0-F474-01C2-507B-9E5F8078F531)
blk0 : Acpi(PNP0A03,0)/Pci(1F|1)/Ata(Primary,Slave)
blk1 : Acpi(PNP0A03,0)/Pci(1F|1)/Ata(Primary, Master)
blk2 : Acpi(PNP0A03,1)/Pci(1F|0)/Pci(2|0)/Scsi(Pun0,Lun0)
blk3 : Acpi(PNP0A03,1)/Pci(1F | 0)/Pci(2 | 0)/Scsi(Pun0, Lun0)/
HD(Part1, Sig8983DFE0-F474-01C2-507B-9E5F8078F531)
blk4 : Acpi(PNP0A03,1)/Pci(1F|0)/Pci(2|0)/Scsi(Pun0,Lun0)/
HD(Part2, Sig898D07A0-F474-01C2-F1B3-12714F758821)
blk5 : Acpi(PNP0A03,1)/Pci(1F|0)/Pci(2|0)/Scsi(Pun0,Lun0)/
HD(Part3, Sig89919B80-F474-01C2-D931-F8428177D974)
```

33



fs0 : Acpi(PNP0A03,1)/Pci(1F|0)/Pci(2|0)/ Scsi(Pun0,Lun0)/HD(Part1, Sig8983DFE0-F474 01C2-507B-9E5F8078F531)



```
fs0 : Acpi(PNP0A03,1)/Pci(1F|0)/Pci(2|0)/
Scsi(Pun0,Lun0)/HD(Part1, Sig8983DFE0-F474
01C2-507B-9E5F8078F531)
```

- fs0:
- Acpi(PNP0A03,1)
- Pci(1F|0)/Pci(2|0)
- Scsi(Pun0, Lun0)
- HD(Part1,Sig8983DFE0-F474-01C2-507B-9E5F8078F531)



```
fs0 : Acpi(PNP0A03,1)/Pci(1F|0)/Pci(2|0)/
Scsi(Pun0,Lun0)/HD(Part1, Sig8983DFE0-F474
01C2-507B-9E5F8078F531)
```

- fs0:
- Acpi(PNP0A03,1)
- Pci(1F|0)/Pci(2|0)
- Scsi(Pun0, Lun0)
- HD(Part1,Sig8983DFE0-F474-01C2-507B-9E5F8078F531)



```
fs0 : Acpi(PNP0A03,1)/Pci(1F|0)/Pci(2|0)/
Scsi(Pun0,Lun0)/HD(Part1, Sig8983DFE0-F474
01C2-507B-9E5F8078F531)
```

- fs0:
- Acpi(PNP0A03,1)
- Pci(1F|0)/Pci(2|0)
- Scsi(Pun0,Lun0)
- HD(Part1,Sig8983DFE0-F474-01C2-507B-9E5F8078F531)



```
fs0 : Acpi(PNP0A03,1)/Pci(1F|0)/Pci(2|0)/
Scsi(Pun0,Lun0)/HD(Part1, Sig8983DFE0-F474
01C2-507B-9E5F8078F531)
```

- fs0:
- Acpi(PNP0A03,1)
- Pci(1F|0)/Pci(2|0)
- Scsi(Pun0,Lun0)
- HD(Part1,Sig8983DFE0-F474-01C2-507B-9E5F8078F531)



```
fs0 : Acpi(PNP0A03,1)/Pci(1F|0)/Pci(2|0)/
Scsi(Pun0,Lun0)/HD(Part1, Sig8983DFE0-F474
01C2-507B-9E5F8078F531)
```

- fs0:
- Acpi(PNP0A03,1)
- Pci(1F|0)/Pci(2|0)
- Scsi(Pun0, Lun0)
- HD(Part1, Sig8983DFE0-F474-01C2-507B-9E5F8078F531)



```
fs0 : Acpi(PNP0A03,1)/Pci(1F|0)/Pci(2|0)/
Scsi(Pun0,Lun0)/HD(Part1, Sig8983DFE0-F474
01C2-507B-9E5F8078F531)
```

- fs0:
- Acpi(PNP0A03,1)
- Pci(1F|0)/Pci(2|0)
- Scsi(Pun0, Lun0)
- HD(Part1,Sig8983DFE0-F474-01C2-507B-9E5F8078F531)

EFI Variable BOOT0000 == Some Device Path



# SUMMARY

- Explain UEFI, the shell, and how they work together
- Define the shell components
- Use the shell API in a UEFI application
- UEFI Shell command Library
- UEFI Shell scripts







# RETURN TO MAIN TRAINING PAGE



Return to Training Table of contents for next presentation link





### **ACKNOWLEDGEMENTS**

Redistribution and use in source (original document form) and 'compiled' forms (converted to PDF, epub, HTML and other formats) with or without modification, are permitted provided that the following conditions are met:

Redistributions of source code (original document form) must retain the above copyright notice, this list of conditions and the following disclaimer as the first lines of this file unmodified.

Redistributions in compiled form (transformed to other DTDs, converted to PDF, epub, HTML and other formats) must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS DOCUMENTATION IS PROVIDED BY TIANOCORE PROJECT "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL TIANOCORE PROJECT BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS DOCUMENTATION, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 2020, Intel Corporation. All rights reserved.