

Control4 in 4 taps

Picture on the screens, sound on the surround system. That's all you need. Follow the steps in order.

Log in → 2nd icon on left → All One Main Screen → Audio Sources → Close

1

Wake the tablet & log in


Turn the tablet on, unlock it, and open the **Control4** app. Log in if it asks.

Hold the tablet sideways (landscape). The menu icons run down the left edge.

2

Tap the 2nd icon on the left

That's the room/home button. It opens **TV 1** with four big tiles.

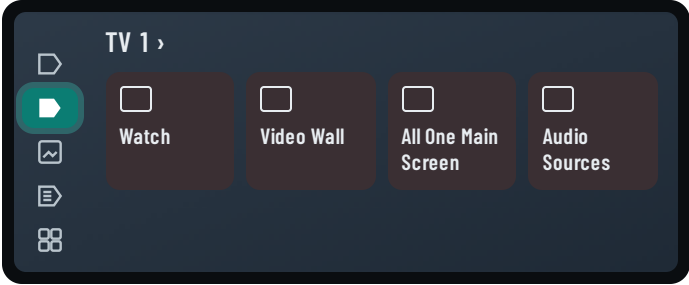


The highlighted icon (2nd from the top of the left bar) is the one to tap.

3

Pick what's on the screen


Tap **All One Main Screen**, then tap the device you want to show.

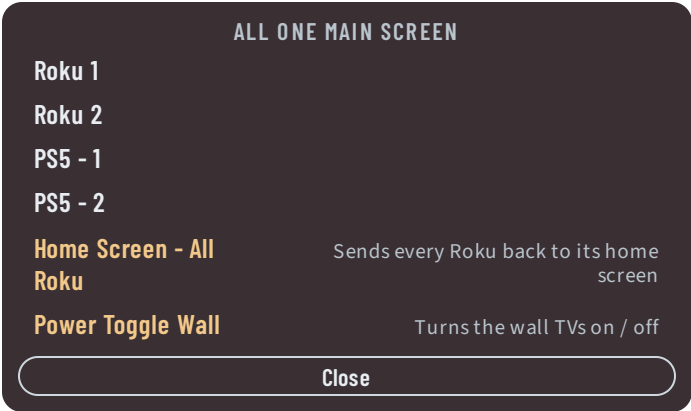

4

Pick what's on the surround sound

Tap **Audio Sources**, then tap the sound you want, and tap **Close**.

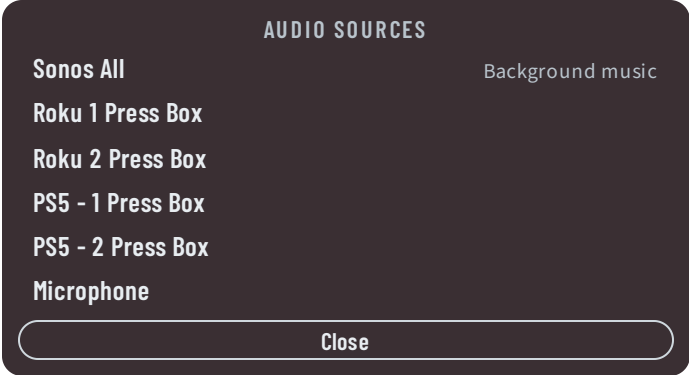

Match the sound to the picture

ON THE SCREEN (STEP 3)	AUDIO SOURCE (STEP 4)
Roku 1	Roku 1 Press Box
Roku 2	Roku 2 Press Box
PS5 - 1	PS5 - 1 Press Box
PS5 - 2	PS5 - 2 Press Box
Just want music	Sonos All
Announcements / speaking	Microphone

If something looks wrong

Screens are black
All One Main Screen → **Power Toggle Wall**. Give the TVs a few seconds.

Roku is stuck in an app
All One Main Screen → **Home Screen - All Roku**, then pick your Roku again.

Picture works, no sound
Audio Sources → pick the **Press Box** that matches what's on the screen (see the matching table).

Wrong sound playing
Audio Sources → pick the right one. The new choice replaces the old one.

Lost in the menus
Tap **Close**, then tap the **2nd icon on the left** to get back to TV 1.