

Control4 in 4 taps

Picture on the screens, sound on the surround system. That's all you need. Follow the steps in order.

Log in



2nd icon on left



All One Main Screen



Audio Sources



Close


1 Wake the tablet & log in

Turn the tablet on, unlock it, and open the **Control4** app. Log in if it asks.

Hold the tablet sideways (landscape). The menu icons run down the left edge.

2 Tap the 2nd icon on the left


That's the room/home button. It opens **TV 1** with four big tiles.

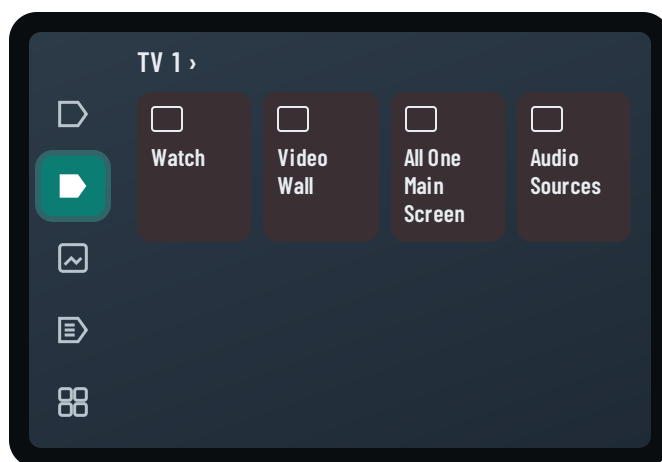

The highlighted icon (2nd from the top of the left bar) is the one to tap.


3 Pick what's on the screen

Tap **All One Main Screen**, then tap the device you want to show.

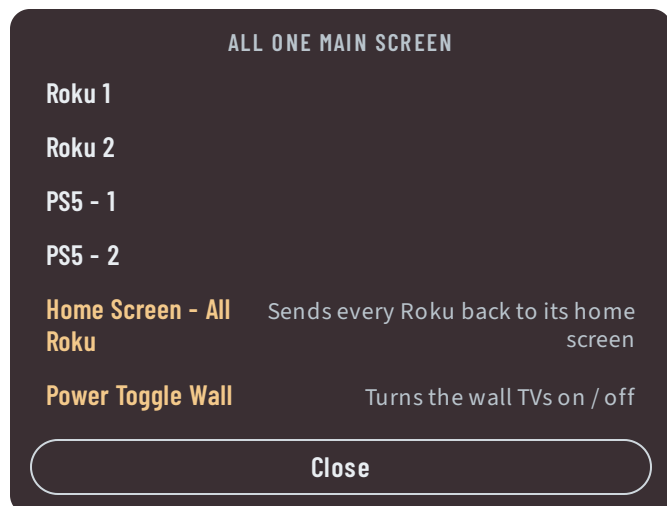

4 Pick what's on the surround sound

Tap **Audio Sources**, then tap the sound you want, and tap **Close**.

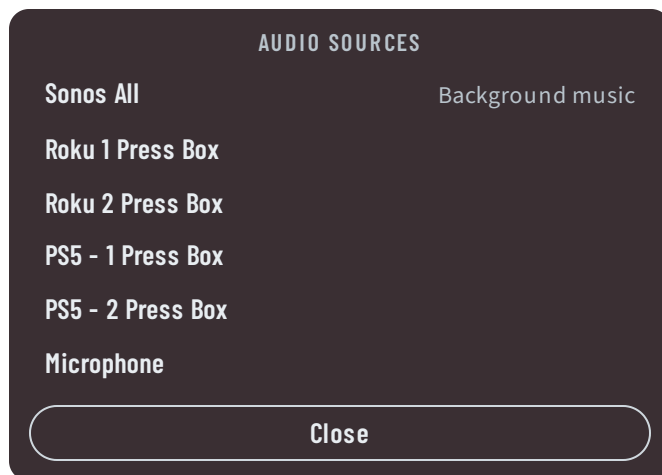

Match the sound to the picture

Whatever you put on the screen in step 3, pick the audio with the same name in step 4.

ON THE SCREEN (STEP 3)	AUDIO SOURCE (STEP 4)
Roku 1	Roku 1 Press Box
Roku 2	Roku 2 Press Box
PS5 - 1	PS5 - 1 Press Box
PS5 - 2	PS5 - 2 Press Box
Just want music	Sonos All
Announcements / speaking	Microphone

If something looks wrong

Screens are black

All One Main Screen → **Power Toggle Wall**. Give the TVs a few seconds.

Roku is stuck in an app

All One Main Screen → **Home Screen - All Roku**, then pick your Roku again.

Picture works, no sound

Audio Sources → pick the **Press Box** that matches what's on the screen (see table above).

Wrong sound playing

Audio Sources → pick the right one. The new choice replaces the old one.

Lost in the menus

Tap **Close**, then tap the **2nd icon on the left** to get back to TV 1.

Watch and **Video Wall** aren't needed for everyday use. Still stuck? Ask a manager.