Event Variables

© 2019 Digifort - IP Surveillance System

Index

Part I Introduction 4

Part II History 4

Part III Event Variables 4

1 Examples of Usage 4

Send E-mail 4

Send Message to Operator 5

Create Bookmark 6

Part IV Events 6

1 Communication events 7

2 I/O Input event 7

3 Device Video Loss 7

4 Device Disk Failure 8

5 Device Intercom Button 8

6 Recording Failure 8

7 Motion Detection 8

8 Audio Level Detection 9

9 Global Event 9

10 Manual Event 9

11 Scheduled Event 9

12 Analytics 10

13 LPR Event 10

14 Failover 11

15 Timer 11

Index 0

© 2019 Digifort - IP Surveillance System

1 Introduction



This document describes text variables that can be used within event actions

2 History

Date	Revision	Comments
2018-Oct-26	Éric Fleming Bonilha	First version

3 Event Variables

Digifort allows the use of dynamic values from event variables within event actions.

The value of Event Variables can be accessible by referencing the variable name by using a special identificators around the variable name: $(VARIABLE_NAME)

Each event from Digifort introduces different variables whose values can be used in event actions.

The following event actions support the use of variables:


- Send Email
- Send Message to the Operator
- Send HTTP Request
- Create Bookmark

3.1 Examples of Usage


3.1.1 Send E-mail

In the following example, an e-mail will be sent with specific data from an LPR event which includes the License Plate number and the Driver Name in a case that the recognized plate is flagged robbery.

© 2019 Digifort - IP Surveillance System

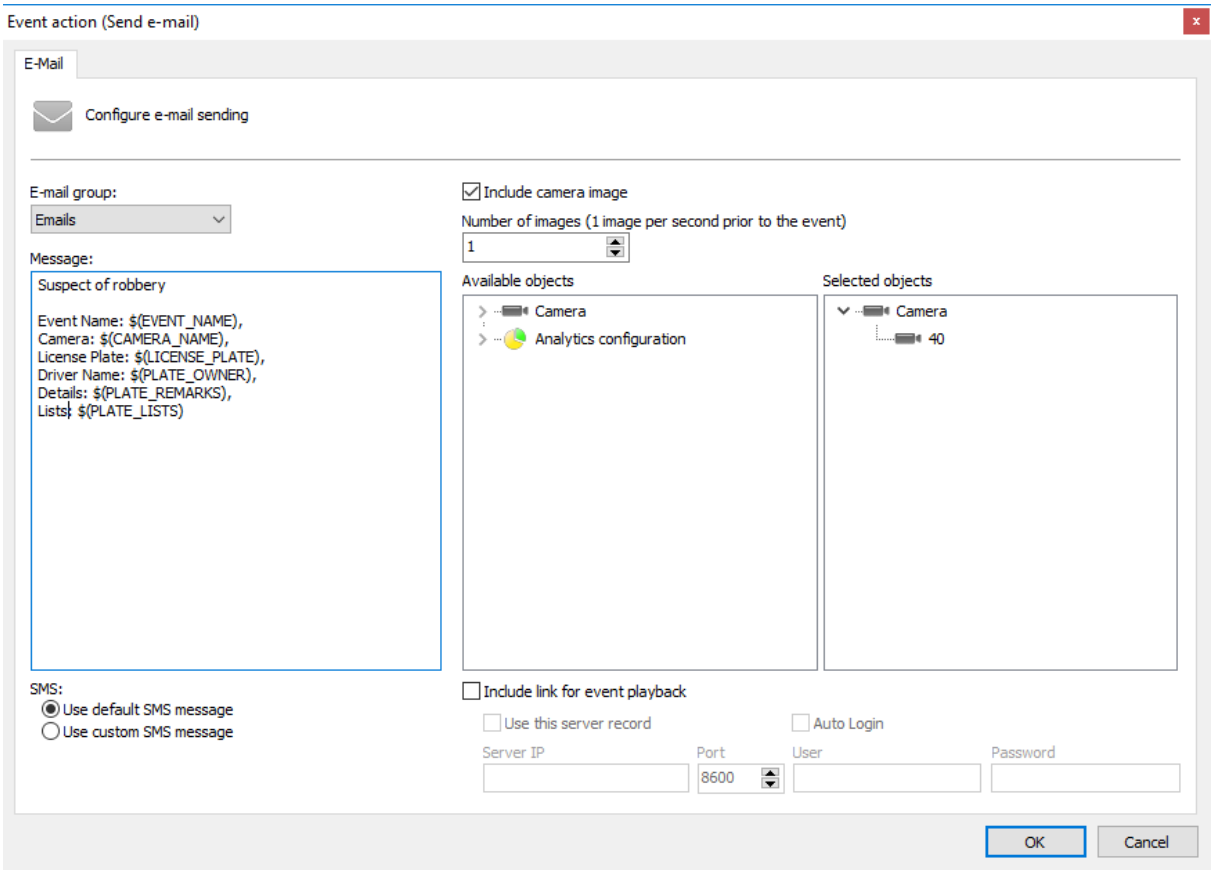


3.1.2 Send Message to Operator

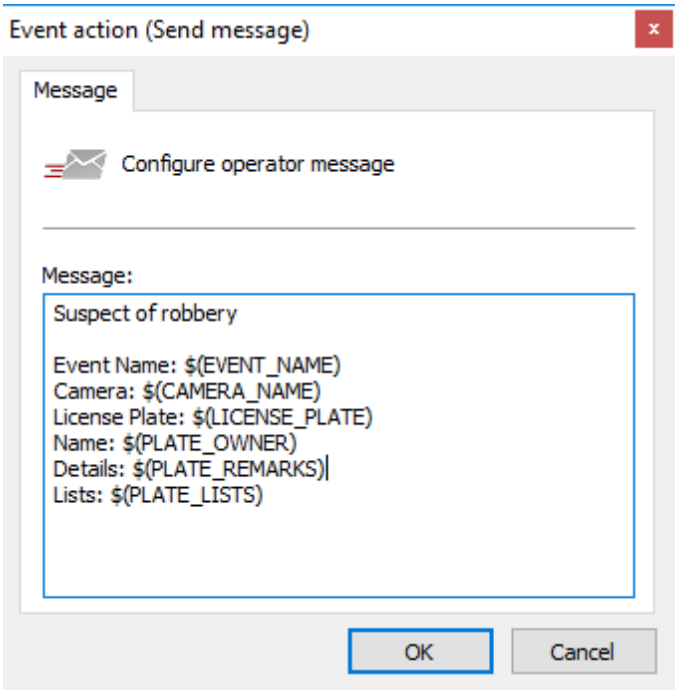

3.1.3 Create Bookmark

In this example, we can register the license plate number as a bookmark

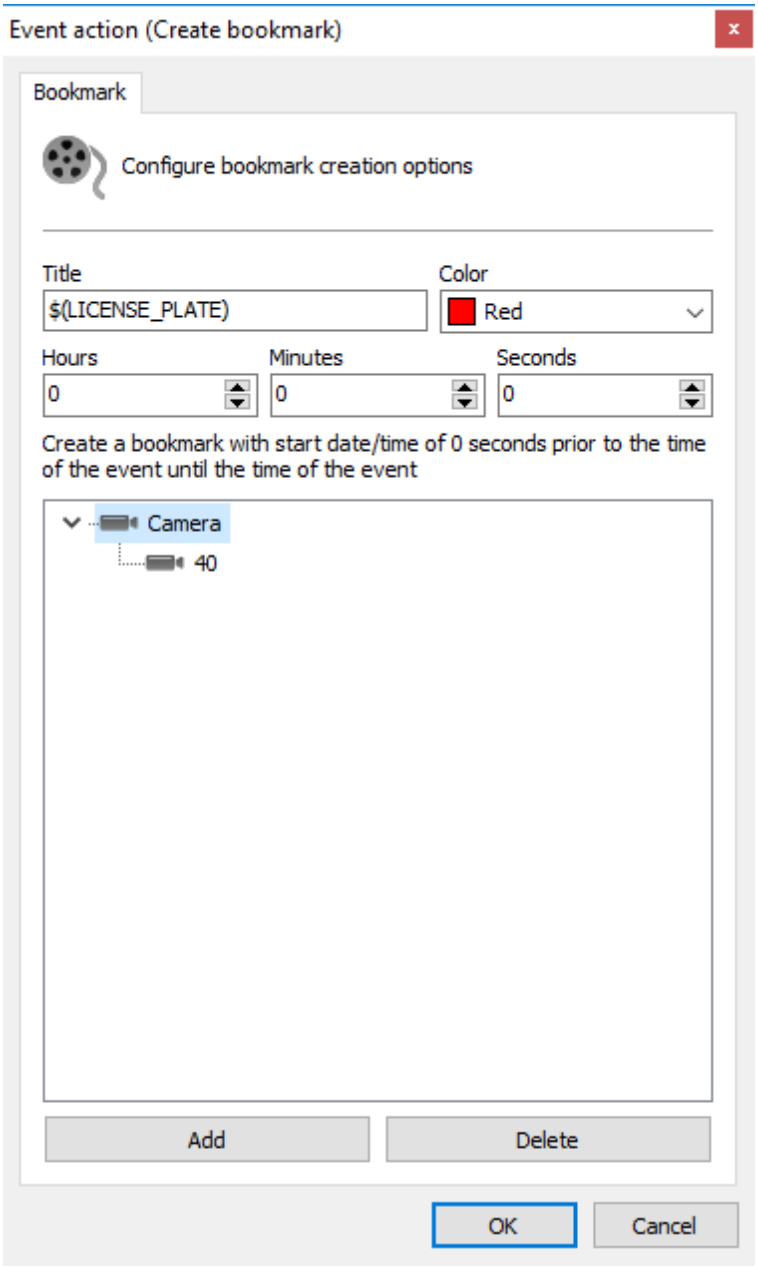

4 Events

Each event can have a different set of variables, the following section describes the variables of each event.

4.1 Communication events

Variable Name	Description
DEVICE_TYPE	Type of device that triggered the event Device Type: CAMERA, IO_DEVICE
DEVICE_NAME	Name of the device that triggered the event
EVENT_TYPE	Event Type: COMMUNICATION_FAILURE, COMMUNICATION_RESTORED
LATITUDE	Latitude of the device that triggered the event
LONGITUDE	Longitude of the device that triggered the event
INACTIVITY_TIME	Number of seconds that the device is / was offline

4.2 I/O Input event

Variable Name	Description
DEVICE_TYPE	Type of device that triggered the event Device Type: CAMERA, IO_DEVICE
DEVICE_NAME	Name of the device that triggered the event
EVENT_TYPE	Identifies the type of event, value is always ALARM_INPUT
EVENT_NAME	Name of the event
LATITUDE	Latitude from the input event
LONGITUDE	Longitude from the input event

4.3 Device Video Loss

Variable Name	Description
DEVICE_TYPE	Type of device that triggered the event Device Type: CAMERA
DEVICE_NAME	Name of the device that triggered the event
EVENT_TYPE	Identifies the type of event, value is always DEVICE_VIDEO_LOSS
LATITUDE	Latitude of the device that triggered the event
LONGITUDE	Longitude of the device that triggered the event

© 2019 Digifort - IP Surveillance System

4.4 Device Disk Failure

Variable Name	Description
DEVICE_TYPE	Type of device that triggered the event Device Type: CAMERA
DEVICE_NAME	Name of the device that triggered the event
EVENT_TYPE	Identifies the type of event, value is always DEVICE_DISK_FAILURE
LATITUDE	Latitude of the device that triggered the event
LONGITUDE	Longitude of the device that triggered the event

4.5 Device Intercom Button

Variable Name	Description
DEVICE_TYPE	Type of device that triggered the event Device Type: CAMERA
DEVICE_NAME	Name of the device that triggered the event
EVENT_TYPE	Identifies the type of event, value is always DEVICE_INTERCOM_BUTTON
LATITUDE	Latitude of the device that triggered the event
LONGITUDE	Longitude of the device that triggered the event

4.6 Recording Failure

Variable Name	Description
DEVICE_TYPE	Type of device that triggered the event Device Type: CAMERA
DEVICE_NAME	Name of the device that triggered the event
EVENT_TYPE	Identifies the type of event, value is always RECORDING_FAILURE
LATITUDE	Latitude of the device that triggered the event
LONGITUDE	Longitude of the device that triggered the event

4.7 Motion Detection

Variable Name	Description
DEVICE_TYPE	Type of device that triggered the event Device Type: CAMERA
DEVICE_NAME	Name of the device that triggered the event
EVENT_TYPE	Identifies the type of event, value is always MOTION
LATITUDE	Latitude of the device that triggered event
LONGITUDE	Longitude of the device that triggered event

© 2019 Digifort - IP Surveillance System

4.8 Audio Level Detection

Variable Name	Description
DEVICE_TYPE	Type of device that triggered the event Device Type: CAMERA
DEVICE_NAME	Name of the device that triggered the event
EVENT_TYPE	Event Type: AUDIO_LEVEL_LOW, AUDIO_LEVEL_HIGH
LATITUDE	Latitude of the device that triggered the event
LONGITUDE	Longitude of the device that triggered the event

4.9 Global Event

Variable Name	Description
EVENT_TYPE	Identifies the type of event, value is always GLOBAL
EVENT_NAME	Name of the Global event
USERNAME	User account that triggered the event
USER_IP	IP of the user that triggered the event
MESSAGE	Event message
LATITUDE	Latitude of the global event
LONGITUDE	Longitude of the global event

4.10 Manual Event

Variable Name	Description
DEVICE_TYPE	Type of device that triggered the event Device Type: CAMERA
DEVICE_NAME	Name of the device that triggered the event
EVENT_TYPE	Identifies the type of event, value is always MANUAL
EVENT_NAME	Name of the Manual event
USERNAME	User account that triggered the event
USER_IP	IP of the user that triggered the event
LATITUDE	Latitude of the device that owns the manual event
LONGITUDE	Longitude of the device that owns the manual event

4.11 Scheduled Event

Variable Name	Description
EVENT_TYPE	Identifies the type of event, value is always SCHEDULED
EVENT_NAME	Name of the Scheduled Event
LATITUDE	Latitude of the Scheduled Event
LONGITUDE	Longitude of the Scheduled Event

© 2019 Digifort - IP Surveillance System

4.12 Analytics

Variable Name	Description
EVENT_TYPE	<table><tr><th>Event Type</th></tr><tr><td>ANALYTICS_PRESENCE</td></tr><tr><td>ANALYTICS_ENTER</td></tr><tr><td>ANALYTICS_EXIT</td></tr><tr><td>ANALYTICS_APPEAR</td></tr><tr><td>ANALYTICS_DISAPPEAR</td></tr><tr><td>ANALYTICS_STOP</td></tr><tr><td>ANALYTICS_LOITER</td></tr><tr><td>ANALYTICS_DIRECTION</td></tr><tr><td>ANALYTICS_SPEED</td></tr><tr><td>ANALYTICS_TAILGATING</td></tr><tr><td>ANALYTICS_COUNTING_LINE_A</td></tr><tr><td>ANALYTICS_COUNTING_LINE_B</td></tr><tr><td>ANALYTICS_TAMPER</td></tr><tr><td>ANALYTICS_ABANDONED_OBJECT</td></tr><tr><td>ANALYTICS_REMOVED_OBJECT</td></tr><tr><td>ANALYTICS_SMOKE</td></tr><tr><td>ANALYTICS_FIRE</td></tr><tr><td>ANALYTICS_FACE_DETECTION</td></tr></table>
CAMERA_NAME	Name of the camera assigned to the analytics configuration
CONFIGURATION_NAME	Name of the analytics configuration
ZONE_NAME	Name of the zone that triggered the event
OBJECT_CLASS	Class of the object that triggered the event
LATITUDE	Latitude of the camera assigned to the analytics configuration
LONGITUDE	Longitude of the camera assigned to the analytics configuration

4.13 LPR Event

Variable Name	Description
CAMERA_NAME	Name of the camera that triggered the LPR event (Which camera the plate was recognized)
EVENT_TYPE	Identifies the type of event, value is always LPR_EVENT
EVENT_NAME	Name of the LPR event
CONFIGURATION_NAME	Name of the LPR configuration that detected the plate
LICENSE_PLATE	License plate number
PLATE_COUNTRY	License plate country (If available)
PLATE_OWNER	License plate owner
PLATE_REMARKS	Remarks of the license plate (Registered in admin client)
PLATE_RELIABILITY	Reliability information of each character
PLATE_LISTS	Comma-separated list of lists that the recognized plate belongs to
VEHICLE_SPEED	Vehicle speed (If value was provided by the LPR engine or edge LPR)
LPR_MIDDLEWARE_DATA	External data retrieved by the middleware
LATITUDE	Latitude of the camera assigned to the LPR configuration
LONGITUDE	Longitude of the camera assigned to the LPR configuration

© 2019 Digifort - IP Surveillance System

4.14 Failover

Variable Name	Description
EVENT_TYPE	<table><tr><th>Event Type</th></tr><tr><td>FAILOVER</td></tr><tr><td>FAILBACK</td></tr></table>
MONITOR_NAME	Name of the failover monitor
SERVER_IP	IP address of the server being monitored
LATITUDE	Latitude of the failover monitor
LONGITUDE	Longitude of the failover monitor

4.15 Timer

Variable Name	Description
EVENT_TYPE	Identifies the type of event, value is always TIMER
EVENT_NAME	Name of the Timer event

© 2019 Digifort - IP Surveillance System