



# HP Pavilion dv6 Notebook PC

Maintenance and Service Guide

© Copyright 2011 Hewlett-Packard  
Development Company, L.P.

AMD, the AMD Arrow logo, Athlon,  
Phenom, and Turion combinations thereof,  
are trademarks of Advanced Micro Devices,  
Inc. Bluetooth is a trademark owned by its  
proprietor and used by Hewlett-Packard  
Company under license. Intel and Core are  
trademarks of Intel Corporation in the U.S.  
and other countries. Microsoft and Windows  
are U.S. registered trademarks of Microsoft  
Corporation. SD Logo is a trademark of  
its proprietor.

The information contained herein is subject  
to change without notice. The only  
warranties for HP products and services are  
set forth in the express warranty statements  
accompanying such products and services.  
Nothing herein should be construed as  
constituting an additional warranty. HP shall  
not be liable for technical or editorial errors  
or omissions contained herein.

Second Edition: May 2011

First Edition: March 2011

Document Part Number: 635489-002

## Safety warning notice

**⚠️ WARNING!** To reduce the possibility of heat-related injuries or of overheating the device, do not place the device directly on your lap or obstruct the device air vents. Use the device only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The device and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).

---



---

# Table of contents

<b>1 Product description .....</b>	<b>1</b>
<b>2 External component identification .....</b>	<b>11</b>
Display .....	11
Buttons, speakers, and fingerprint reader (select models only) .....	12
Keys .....	13
Lights .....	14
TouchPad .....	15
Front .....	16
Rear .....	16
Left side .....	17
Right side .....	18
Bottom .....	19
<b>3 Illustrated parts catalog .....</b>	<b>20</b>
Service tag .....	20
Computer major components .....	22
Cable Kit .....	32
Display assembly subcomponents .....	34
Mass storage devices .....	36
Miscellaneous parts .....	37
Sequential part number listing .....	38
<b>4 Removal and replacement procedures .....</b>	<b>52</b>
Preliminary replacement requirements .....	52
Tools required .....	52
Service considerations .....	52
Plastic parts .....	52
Cables and connectors .....	52
Drive handling .....	53
Grounding guidelines .....	53

Electrostatic discharge damage .....	53
Packaging and transporting guidelines .....	55
Component replacement procedures .....	57
Service tag .....	57
Computer feet .....	58
Battery .....	59
Optical drive .....	60
Hard drive .....	62
RTC battery .....	65
Memory module .....	66
WLAN module .....	67
Keyboard .....	70
Top cover .....	74
Power button board .....	77
Fingerprint reader board .....	78
Bluetooth module .....	79
USB board .....	82
Power connector cable .....	83
System board .....	85
Fan/heat sink assembly .....	90
Processor .....	95
Speakers .....	99
Optical drive connector cable .....	102
Display assembly .....	103
<b>5 Setup Utility (BIOS) and System Diagnostics .....</b>	<b>112</b>
Using Setup Utility .....	112
Starting Setup Utility .....	112
Changing the language of Setup Utility .....	112
Navigating and selecting in Setup Utility .....	113
Displaying system information .....	113
Restoring factory settings in Setup Utility .....	114
Exiting Setup Utility .....	114
Updating the BIOS .....	114
Determining the BIOS version .....	115
Downloading a BIOS update .....	115
Using System Diagnostics .....	116
<b>6 Specifications .....</b>	<b>117</b>
Computer specifications .....	117
15.6-inch display specifications .....	118

Hard drive specifications .....	119
Hard drive specifications (continued) .....	120
<b>7 Backup and recovery .....</b>	<b>121</b>
Restore .....	121
Creating restore media .....	122
Performing a system restore .....	123
Restoring using the dedicated recovery partition (select models only) .....	123
Restoring using the restore media .....	124
Changing the computer boot order .....	124
Backing up and recovering your information .....	125
Using Windows Backup and Restore .....	126
Using Windows system restore points .....	126
When to create restore points .....	126
Create a system restore point .....	127
Restore to a previous date and time .....	127
<b>8 Power cord set requirements .....</b>	<b>128</b>
Requirements for all countries .....	128
Requirements for specific countries and regions .....	129
<b>9 Recycling .....</b>	<b>130</b>
Battery .....	130
Display .....	130
<b>Index .....</b>	<b>136</b>



# 1 Product description

Category	Description	Computer models equipped with an AMD processor	Computer models equipped with an Intel processor
<b>Product Name</b>	HP Pavilion dv6 Notebook PC	√	√
<b>Processors</b>	AMD A8-3530MX 2.60-GHz processor, (1.90-GHz FSB, 4.0-MB L2 cache, quad core, 45 W)	√	
	AMD A8-3510MX 2.50-GHz processor (1.50-GHz FSB, 4.0-MB L2 cache, quad core, 45 W)	√	
	AMD A8-3500M 2.40-GHz processor (1.5-GHz FSB, 4.0-MB L2 cache, quad core, 35 W)	√	
	AMD A6-3410MX 2.30-GHz processor (1.60-GHz FSB, 2.0-MB L2 cache, quad core, 45 W)	√	
	AMD A6-3400M 2.30-GHz processor (1.4-GHz FSB, 4.0-MB L2 cache, quad core, 35 W)	√	
	AMD A4-3310MX 2.50-GHz processor (2.10-GHz FSB, 2.0-MB L2 cache, dual core, 45 W)	√	
	AMD A4-3300M 2.50-GHz processor (1.9-GHz FSB, 4.0-MB L2 cache, dual core, 35 W)	√	
	AMD E2-3000M 2.40-GHz processor (1.8-GHz FSB, 4.0-MB L2 cache, quad core, 35 W)	√	
	AMD Athlon II N370 2.50-GHz processor (1.0-MB L2 cache, 1066-MHz, 3.2GT/sec, dual core, 35 W)	√	
	AMD Athlon II P360 2.30-GHz processor (1.0-MB L2 cache, 1066-MHz, 3.2GT/sec, dual core, 25 W)	√	
	AMD Athlon II P340 2.20-GHz processor (1.0-MB L2 cache, 1066-MHz, 3.2GT/sec, dual core, 25 W)	√	
	AMD Phenom II N970 2.20-GHz processor (2.0-MB L2 cache, 1333-MHz, 3.6GT/sec, quad core, 35 W)	√	
	AMD Phenom II N870 2.30-GHz processor (1.5-MB L2 cache, 1333-MHz, 3.6GT/sec, triple core, 35 W)	√	
	AMD Phenom II N850 2.20-GHz processor (1.5-MB L2 cache, 1333-MHz, 3.6GT/sec, triple core, 35 W)	√	

<b>Category</b>	<b>Description</b>	<b>Computer models equipped with an AMD processor</b>	<b>Computer models equipped with an Intel processor</b>
	AMD Phenom II N660 3.00-GHz processor (2.0-MB L2 cache, 1333-MHz, 3.6GT/sec, dual core, 35 W)	✓	
	AMD Phenom II P960 1.80-GHz processor (2.0-MB L2 cache, 1066-MHz, 3.6GT/sec, quad core, 25 W)	✓	
	AMD Phenom II P860 2.00-GHz processor (1.5-MB L2 cache, 1333-MHz, 3.6GT/sec, triple core, 25 W)	✓	
	AMD Phenom II P650 2.60-GHz processor (2.0-MB L2 cache, 1066-MHz, 3.6GT/sec, triple core, 25 W)	✓	
	AMD Turion II P570 2.70-GHz processor (2.0-MB L2 cache, 1066-MHz, 3.6GT/sec, dual core, 35 W)	✓	
	AMD Turion II P560 2.50-GHz processor (2.0-MB L2 cache, 1066-MHz, 3.6GT/sec, dual core, 25 W)	✓	
	Intel Core i7-2820QM 2.30-GHz (SC turbo up to 3.10-GHz) processor (8.0-MB L3 cache, quad core, 45 W)		✓
	Intel Core i7-2720QM 2.20-GHz (SC turbo up to 3.00-GHz) processor (6.0-MB L3 cache, quad core, 45 W)	✓	
	Intel Core i7-2630QM 2.00-GHz (SC turbo up to 2.90-GHz) processor (6.0-MB L3 cache, quad core, 45 W)	✓	
	Intel Core i7-2620M 2.70-GHz (SC turbo up to 3.40-GHz) processor (4.0-MB L3 cache, dual core, 35 W)	✓	
	Intel Core i5-2540M 2.60-GHz (SC turbo up to 3.30-GHz) processor (3.0-MB L3 cache, dual core, 35 W)	✓	
	Intel Core i5-2520M 2.50-GHz (SC turbo up to 3.20-GHz) processor (3.0-MB L3 cache, dual core, 35 W)	✓	
	Intel Core i5-2430M 2.40-GHz (SC turbo up to 3.00-GHz) processor (3.0-MB L3 cache, dual core, 35 W)	✓	
	Intel Core i5-2410M 2.30-GHz (SC turbo up to 2.90-GHz) processor (3.0-MB L3 cache, dual core, 35 W)	✓	
	Intel Core i3-2350M 2.30-GHz processor (3.0-MB L3 cache, dual core, 35 W)	✓	
	Intel Core i3-2330M 2.20-GHz processor (3.0-MB L3 cache, dual core, 35 W)	✓	
	Intel Core i3-2310M 2.10-GHz processor (3.0-MB L3 cache, dual core, 35 W)	✓	
	Intel Pentium B950 TJ85 2.10-GHz processor (2.0-MB L3 cache, dual core, 35 W)	✓	
	Intel Pentium B940 TJ85 2.00-GHz processor (2.0-MB L3 cache, dual core, 35 W)	✓	

<b>Category</b>	<b>Description</b>	<b>Computer models equipped with an AMD processor</b>	<b>Computer models equipped with an Intel processor</b>
<b>Chipset</b>	Northbridge: AMD A70M Fusion controller hub (FCH)  Northbridge: AMD A60M FCH +NEC USB 3.0  Northbridge: AMD A60M FCH  Northbridge: ATI RS880M - AMD M880G with ATI Mobility Radeon HD 4250  Northbridge: AMD RS880MD  Southbridge: AMD SB820M		✓
	Intel® HM65 Express chipset with NEC USB 3.0		✓

Category	Description	Computer models equipped with an AMD processor	Computer models equipped with an Intel processor
<b>Graphics</b>	<b>Internal graphics:</b> <ul style="list-style-type: none"> <li>AMD Radeon™ HD 6620G graphics on computer models equipped with an AMD A8 processor</li> <li>AMD Radeon HD 6520G graphics on computer models equipped with an AMD A6 processor</li> <li>AMD Radeon HD 6480G graphics on computer models equipped with an AMD A4 processor</li> <li>ATi Mobility Radeon HD 4250 graphics supporting DX10.1 on computer models equipped with an AMD Athlon, Phenom, and Turion processor</li> </ul> <b>Switchable discrete graphics:</b> <ul style="list-style-type: none"> <li>AMD RadeonT HD 6755G2 graphics on computer models equipped with an AMD A8 or A6 processor; supports bus alive/chip off (BACO), dual graphics, HD decode, DX11, and HDMI</li> <li>AMD RadeonT HD 6645G2 graphics on computer models equipped with an AMD A8 processor; supports BACO, dual graphics, HD decode, DX11, and HDMI</li> <li>AMD RadeonT HD 6545G2 graphics on computer models equipped with an AMD A6 processor; supports BACO, dual graphics, HD decode, DX11, and HDMI</li> <li>AMD RadeonT HD 6515G2 graphics on computer models equipped with an AMD A4 processor; supports BACO, dual graphics, HD decode, DX11, and HDMI</li> <li>ATi XT Radeon HD 6650M M2 package with 1024-MB of graphics subsystem discrete memory (64-MB × 16 DDR3 @ 900MHz × 8 PCs), 128-bit muxless; supports HD decode, DX11, and HDMI</li> <li>ATi XT Radeon HD 6470M M2 package with 512-MB of graphics subsystem discrete memory (64-MB × 16 DDR3 @ 900MHz × 4 PCs), 64-bit muxless; supports HD decode, DX11, and HDMI</li> </ul>	✓	

<b>Category</b>	<b>Description</b>	<b>Computer models equipped with an AMD processor</b>	<b>Computer models equipped with an Intel processor</b>
	<b>Internal graphics:</b> Intel HD Graphics 3000  <b>Switchable discrete graphics:</b>		✓
	<ul style="list-style-type: none"> <li>• ATI XT Radeon HD 6770M M2 package with 1024-MB of graphics subsystem discrete memory (32-MB × 32 GDDR5 × 8 PCs, 5GBPS), muxless, with reserve space for 2-GB graphics subsystem memory</li> <li>• ATI XT Radeon HD 6490M M2 package with 1024-MB of graphics subsystem discrete memory (64-MB × 32 GDDR5 × 4 PCs, 5GBPS), with a maximum of 1-GB of graphics subsystem memory, muxless</li> </ul>		
	Support DX11, HD decode, and HDMI	✓	✓
<b>Panel</b>	15.6-in, full high-definition (FHD), light-emitting diode (LED), low-voltage differential signalling (LVDS), WVA AntiGlare (1080p, 1900×1080) display; typical brightness: 220 nits  15.6-in, HD, LED, LVDS, SVA BrightView (1366×768) display; typical brightness: 200 nits  All display assemblies include 2 wireless local area network (WLAN) antenna cables  Supports 16:9 ultra wide aspect ratio  Lighted logo on top bezel	✓	✓
<b>Memory</b>	2 customer-accessible/upgradable memory module slots	✓	✓
	Supports dual-channel memory	✓	✓
	Supports up to 8192 GB of system RAM	✓	
	Supports up to 16384 GB of system RAM		✓
	DDR3/1333-MHz	✓	✓

Category	Description	Computer models equipped with an AMD processor	Computer models equipped with an Intel processor
	<p>Supports the following configurations:</p> <ul style="list-style-type: none"> <li>• 8192-MB total system memory (4096×2)</li> <li>• 6144-MB total system memory (4096×1 + 2048×1)</li> <li>• 4096-MB total system memory (4096×1 or 2048×2)</li> <li>• 3072-MB total system memory (2048×1 + 1024×1)</li> <li>• 2048-MB total system memory (2048×1 or 1024×2)</li> <li>• 1024-MB total system memory (1024×1; not supported on computer models equipped with an AMD processor)</li> </ul>	√	
	<p>Supports the following configurations:</p> <ul style="list-style-type: none"> <li>• 16384-MB total system memory (8192×2)</li> <li>• 12288-MB total system memory (8192×1 + 4096×1)</li> <li>• 8192-MB total system memory (8192×1 or 4096×2)</li> <li>• 6144-MB total system memory (4096×1 + 2048×1)</li> <li>• 4096-MB total system memory (4096×1 or 2048×2)</li> <li>• 3072-MB total system memory (2048×1 + 1024×1)</li> <li>• 2048-MB total system memory (2048×1 or 1024×2)</li> <li>• 1024-MB total system memory (1024×1)</li> </ul>	√	
<b>Hard drives</b>	Supports <b>6.35-cm</b> (2.5-in) hard drives in <b>12.7-mm</b> (.50-in), <b>9.5-mm</b> (.37-in), and <b>7.0-mm</b> (.28-in) thicknesses	√	√
	Customer-accessible	√	√
	Accelerometer / HDD protection support	√	√
	Serial ATA	√	√

<b>Category</b>	<b>Description</b>	<b>Computer models equipped with an AMD processor</b>	<b>Computer models equipped with an Intel processor</b>
	Supports the following configurations:	√	√
	<ul style="list-style-type: none"> <li>• 1 TB, 5400 rpm (12.7 mm)</li> <li>• 750 GB, 7200 and 5400 rpm (9.5 mm)</li> <li>• 640 GB, 7200 and 5400 rpm (9.5 mm)</li> <li>• 500 GB, 7200 and 5400 rpm (9.5 mm)</li> <li>• 320 GB, 7200 (7.0 mm) and 5400 rpm (9.5 mm)</li> <li>• 250 GB, 7200 rpm (7.0 mm)</li> </ul>		
	Supports 160-GB solid-state drive	√	
<b>Optical drive</b>	Fixed	√	√
	Serial ATA	√	√
	12.7-mm tray load	√	√
	Blu-ray ROM with LightScribe DVD ±R/RW Super Multi Double-Layer Drive	√	√
	Blu-ray Disc R/RW with SuperMulti Double-Layer Drive	√	
	DVD±RW and CD-RW Super Multi Double-Layer Combo Drive with LightScribe	√	√
	Supports zero-power optical drive	√	
<b>Audio and video</b>	Dual array digital microphones with appropriate beam-forming, echo-cancellation, noise-suppression software	√	√
	HD audio	√	√
	HP-branded Altec/Lansing quad Beats Audio speakers (select models only)	√	√
	HP TrueVision HD webcam	√	√
<b>Ethernet</b>	Integrated 10/100/1000 network interface card (NIC)	√	√
<b>Wireless</b>	Integrated wireless local area network (WLAN) options by way of wireless module	√	√
	Two WLAN antennas built into display assembly	√	√

Category	Description	Computer models equipped with an AMD processor	Computer models equipped with an Intel processor
	Support for the following WLAN formats:	√	√
	<ul style="list-style-type: none"> <li>• Broadcom 4313 802.11b/g/n 1×1 WiFi and 2070 Bluetooth 2.1+EDR Combo adapter (BT3.0+HS ready)</li> <li>• Broadcom 4313 802.11b/g/n 1×1 WiFi Adapter</li> <li>• Ralink RT3090BC4 802.11b/g/n 1×1 WiFi and Bluetooth 2.1+EDR Combo Adapter (BT3.0+HS ready)</li> <li>• Ralink 5390GN 802.11b/g/n 1×1 WiFi Adapter</li> </ul>		
	Support for the following WLAN formats:	√	
	<ul style="list-style-type: none"> <li>• Atheros 9285G 802.11b/g/n 1×1 WiFi Adapter</li> <li>• Atheros AR8002WB-1NGB 802.11b/g/n 1×1 WiFi and Bluetooth 2.1+EDR Combo Adapter (BT3.0+HS ready)</li> <li>• Realtek RTL8191SE 802.11b/g/n 1×1 WiFi Adapter</li> <li>• Realtek 8188BC8 802.11a/b/g/n 2×2 WiFi and Bluetooth 3.0+HS Combo Adapter</li> </ul>		
	Support for the following WLAN formats:	√	
	<ul style="list-style-type: none"> <li>• Intel Centrino Advanced-N 6230</li> <li>• Intel Centrino Wireless-N 1000</li> <li>• Intel Centrino Wireless-N + WiMAX 6150</li> </ul>	√	
<b>External media card</b>	HP Multi-Format Digital Media Reader supports the following digital card formats:	√	√
	<ul style="list-style-type: none"> <li>• Secure Digital (SD) Memory Card</li> <li>• Secure Digital Extended Capacity (SDxC) Memory Card</li> <li>• Secure Digital High Capacity (SDHC) Memory Card</li> <li>• Ultra High Speed MultiMediaCard (UHS/MMC)</li> </ul>		

Category	Description	Computer models equipped with an AMD processor	Computer models equipped with an Intel processor
<b>Ports</b>	<ul style="list-style-type: none"> <li>• 3-pin AC power</li> <li>• Audio-in (mono microphone)</li> <li>• Audio-out (stereo headphone)</li> <li>• HDMI version 1.4 supporting up to 1920 × 1200 @ 60Hz</li> <li>• RJ-45 (Ethernet, includes link and activity lights)</li> <li>• USB 2.0 (3 ports)</li> <li>• VGA (Dsub 15 pin) supporting 2048×1536 external resolution @ 85 Hz (on computer models equipped with an AMD Athlon, Phenom, or Turion processor) or 1920×1600 external resolution @ 60 Hz (on computer models equipped with an AMD A8, A6, A4, or E2 processor), hot plug and unplug and auto-detection for correct output to wide-aspect vs. standard aspect video</li> </ul>	√	√
<b>Keyboard/ pointing devices</b>	Full-size, textured, pocket, keyboard with numeric keypad	√	√
	TouchPad with multi-touch gestures, 2-finger scrolling, and pinch-zoom enabled	√	√
	Dura-coat, island-style keyboard	√	√
	Multitouch gestures (2-finger scrolling and pinch-zoom) enabled by default	√	√
	Taps enabled by default	√	√
<b>Power requirements</b>	<b>Support for the following 3-wire plug with ground pin AC adapters (supports 3-pin DC connector):</b>	√	√
	<ul style="list-style-type: none"> <li>• 120W AC adapter with localized cable plug support</li> <li>• 90W EM AC adapter with localized cable plug support</li> <li>• 90W AC adapter with localized cable plug support</li> <li>• 65W EM AC adapter with localized cable plug support</li> <li>• 65W AC adapter with localized cable plug support</li> </ul>		

Category	Description	Computer models equipped with an AMD processor	Computer models equipped with an Intel processor
	<b>Support for the following batteries:</b>	√	√
	<ul style="list-style-type: none"> <li>• 9-cell, 100-Whr, 3.00-Ah Li-ion battery</li> <li>• 6-cell, 62-Whr, 2.80-Ah Li-ion battery</li> <li>• 6-cell, 55-Whr, 2.55-Ah Li-ion battery</li> </ul>		
<b>Security</b>	Security cable slot	√	√
	Fingerprint reader with Digital Persona software support (select models only)		√
	Supports Intel AT-p Ready		√
<b>Operating system</b>	<b>Preinstalled:</b>	√	
	<ul style="list-style-type: none"> <li>• Windows 7 Home Basic (select models only)</li> <li>• Windows 7 Home Premium 64-bit (select models only)</li> <li>• Windows 7 Professional 64-bit (select models only)</li> </ul>		
	<b>Preinstalled:</b>		√
	<ul style="list-style-type: none"> <li>• Windows 7 Home Basic (64- and 32-bit; select models only)</li> <li>• Windows 7 Home Premium (64- and 32-bit; select models only)</li> <li>• Windows 7 Professional (64- and 32-bit; select models only)</li> <li>• Windows 7 Starter (32-bit; select models only)</li> <li>• Windows 7 Ultimate (64-bit; select models only)</li> <li>• FreeDOS</li> <li>• RedFlag</li> </ul>		
<b>Serviceability</b>	<b>End-user replaceable parts:</b>	√	√
	<ul style="list-style-type: none"> <li>• AC adapter</li> <li>• Battery</li> <li>• Hard drive</li> <li>• Memory modules (2)</li> <li>• Optical drive</li> <li>• WLAN module</li> </ul>		

## 2 External component identification


### Display



Item	Component	Description
(1)	WLAN antennas (2)*	Send and receive wireless signals to communicate with WLANs.
(2)	Internal microphones (2)	Record sound.
(3)	Webcam light	On: The webcam is in use.
(4)	Webcam	Records video and captures still photographs.  To use the webcam, select <b>Start &gt; All Programs &gt; CyberLink YouCam &gt; CyberLink YouCam</b> .


\*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions. To see wireless regulatory notices, refer to the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region. These notices are located in Help and Support.

## Buttons, speakers, and fingerprint reader (select models only)

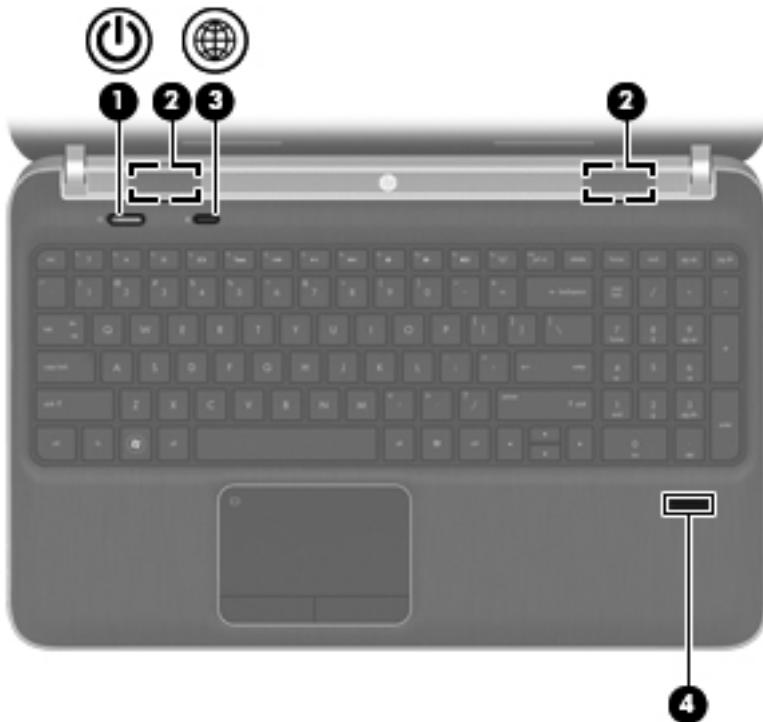

Item	Component	Description
(1)	Power button	<ul style="list-style-type: none"><li>When the computer is off, press the button to turn on the computer.</li><li>When the computer is on, press the button briefly to initiate Sleep.</li><li>When the computer is in the Sleep state, press the button briefly to exit Sleep.</li><li>When the computer is in Hibernation, press the button briefly to exit Hibernation.</li></ul> <p>If the computer has stopped responding and Windows shutdown procedures are ineffective, press and hold the power button for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings, select <b>Start &gt; Control Panel &gt; System and Security &gt; Power Options</b>, or refer to the <i>HP Notebook Reference Guide</i>.</p>
(2)	Speakers (2)	Produce sound.
(3)	Web browser button	Opens the default Web browser.
(4)	Fingerprint reader (select models only)	Allows a fingerprint logon to Windows, instead of a password logon.


# Keys

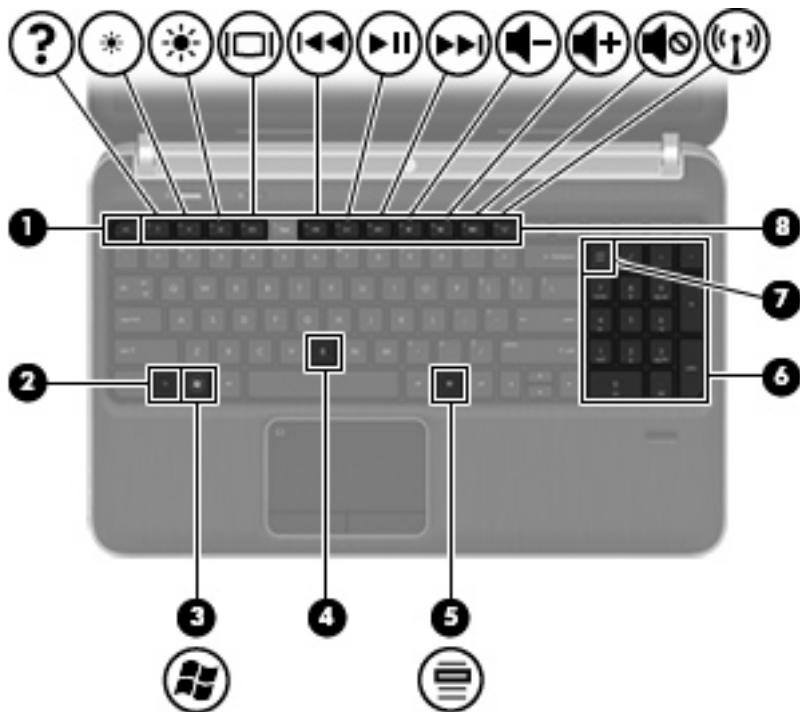

Item	Component	Description
(1)	esc key	Displays system information when pressed in combination with the <b>fn</b> key.
(2)	fn key	Executes frequently used system functions when pressed in combination with the <b>num lk</b> key, the <b>b</b> key, or the <b>esc</b> key.
(3)	Windows logo key	Displays the Windows Start menu.
(4)	<b>b</b> key	Increases or decreases the Beats Audio bass settings (select models only). Beats Audio is an enhanced audio profile that provides a deep, controlled bass while maintaining a clear sound. Beats Audio is enabled by default.  You can also view and control the bass settings through the Windows operating system. To view and control the bass properties: <ul style="list-style-type: none"><li>• Select <b>Start &gt; All Programs &gt; Beats Audio Control Panel &gt; Listening Experience</b>.</li><li>– or –</li><li>• Select <b>Start &gt; Control Panel &gt; Hardware and Sound &gt; Beats Audio Control Panel &gt; Listening Experience</b>.</li></ul>
(5)	Windows applications key	Displays a shortcut menu for items beneath the pointer.

Item	Component	Description
(6)	Integrated numeric keypad	When the keypad has been enabled, the keys can be used like an external numeric keypad.
(7)	num lk key	Enables/disables the integrated numeric keypad when pressed in combination with the <b>Fn</b> key.
(8)	Action keys	Execute frequently used system functions.


## Lights

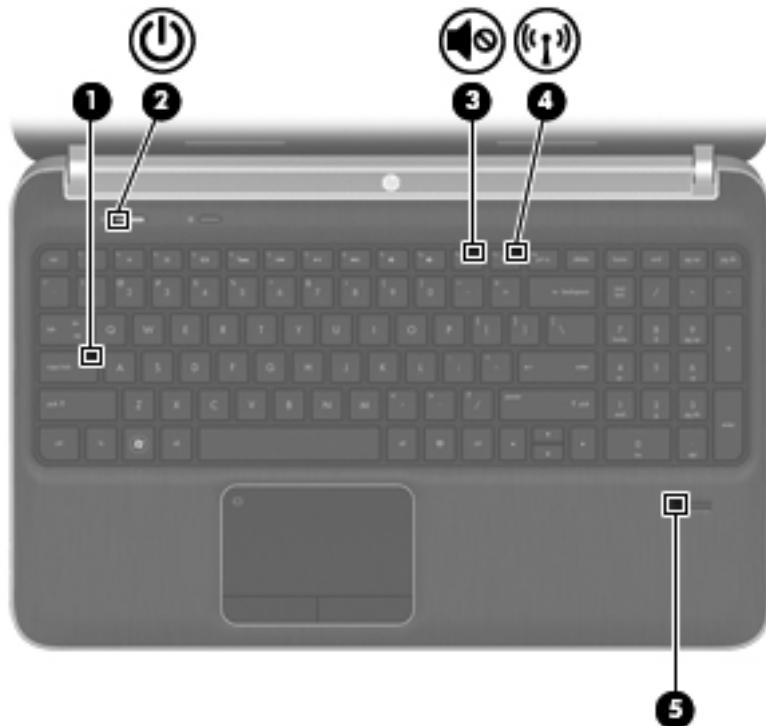

Item	Component	Description
(1)	Caps lock light	On: Caps lock is on.
(2)	Power light	<ul style="list-style-type: none"> <li>White: the computer is on.</li> <li>Blinking white: the computer is in the Sleep state.</li> <li>Off: the computer is off or in Hibernation.</li> </ul>
(3)	Mute light	<ul style="list-style-type: none"> <li>Amber: Computer sound is off.</li> <li>Off: Computer sound is on.</li> </ul>

Item	Component	Description
(4)	Wireless light	<ul style="list-style-type: none"> <li>White: An integrated wireless device, such as a WLAN device and/or a Bluetooth device, is on.</li> <li>Amber: All wireless devices are off.</li> </ul>
(5)	Fingerprint reader light (select models only)	<ul style="list-style-type: none"> <li>White: The fingerprint was read.</li> <li>Amber: The fingerprint was not read.</li> </ul>

## TouchPad

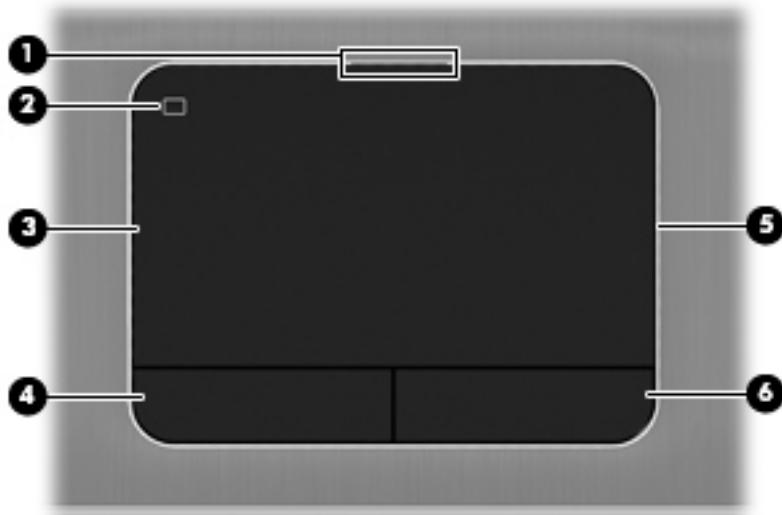

Item	Component	Description
(1)	TouchPad off light	<ul style="list-style-type: none"> <li>On: The TouchPad is off.</li> <li>Off: The TouchPad is on.</li> </ul>
(2)	TouchPad on/off button	Turns the TouchPad on and off.
(3)	TouchPad zone	Moves the pointer and selects or activates items on the screen.
(4)	Left TouchPad button	Functions like the left button on an external mouse.
(5)	TouchPad on light	<ul style="list-style-type: none"> <li>On: The TouchPad is on.</li> <li>Off: The TouchPad is off.</li> </ul>
(6)	Right TouchPad button	Functions like the right button on an external mouse.

## Front




Item	Component	Description
(1)	Digital Media Slot	Supports the following digital card formats: <ul style="list-style-type: none"><li>• Secure Digital (SD) Memory Card</li><li>• Secure Digital Extended Capacity (SDxC) Memory Card</li><li>• Secure Digital High Capacity (SDHC) Memory Card</li><li>• Ultra High Speed MultiMediaCard (UHS/MMC)</li></ul>
(2)	Speakers (2) (select models only)	Produce sound.

## Rear




Component	Description
Vent	Enables airflow to cool internal components.  <b>NOTE:</b> the computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.

## Left side

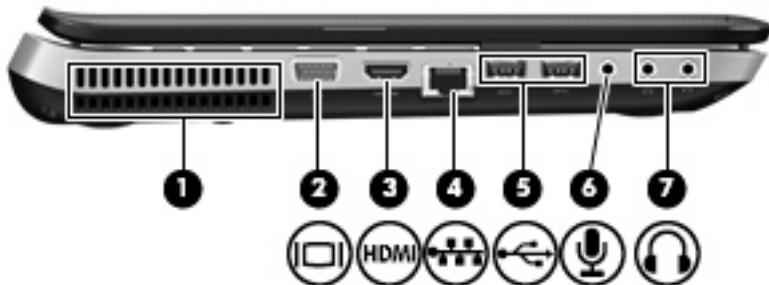


Item	Component	Description
(1)	Vent	Enables airflow to cool internal components.  <b>NOTE:</b> the computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(2)	External monitor port	Connects an external VGA monitor or projector.
(3)	HDMI port	Connects an optional video or audio device, such as a high-definition television, or any compatible digital or audio component.
(4)	RJ-45 (network) jack	Connects a network cable.
(5)	SuperSpeed USB ports (2)	Connect optional USB 3.0 devices (select models only) and provide enhanced USB power performance.  <b>NOTE:</b> The SuperSpeed USB ports are also compatible with USB 1.0 and USB 2.0 devices.
(6)	Audio-in (microphone) jack	Connects an optional computer headset microphone, stereo array microphone, or monaural microphone.
(7)	Audio-out (headphone) jacks (2)	Produce sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio.  <b>WARNING!</b> To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, refer to the <i>Regulatory, Safety, and Environmental Notices</i> .  <b>NOTE:</b> When a device is connected to a headphone jack, the computer speakers are disabled.

## Right side

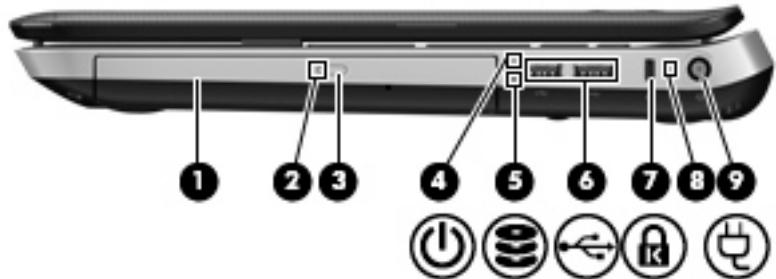

Item	Component	Description
(1)	Optical drive	Reads and writes (select models only) to an optical disc.
(2)	Optical drive light	<ul style="list-style-type: none"> <li>Green: The optical drive is being accessed.</li> <li>Off: The optical drive is off.</li> </ul>
(3)	Optical drive eject button	Ejects the optical drive.
(4)	Power light	<ul style="list-style-type: none"> <li>White: the computer is on.</li> <li>Blinking white: the computer is in the Sleep state.</li> <li>Off: the computer is off or in Hibernation.</li> </ul>
(5)	Drive light	<ul style="list-style-type: none"> <li>Blinking white: The hard drive is being accessed.</li> <li>Amber: HP ProtectSmart Hard Drive Protection has temporarily parked the hard drive.</li> </ul> <p><b>NOTE:</b> For information on HP ProtectSmart Hard Drive Protection, refer to the <i>HP Notebook Reference Guide</i>.</p>
(6)	USB ports (2)	Connect optional USB devices.
(7)	Security cable slot	Attaches an optional security cable to the computer.
		<p><b>NOTE:</b> The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.</p>
(8)	Battery light	<ul style="list-style-type: none"> <li>White: the computer is connected to external power and the battery is fully charged.</li> <li>Amber: A battery is charging.</li> <li>Blinking amber: The battery has reached a low battery level, or there is a battery error. When a battery reaches a critical battery level, the battery light begins blinking rapidly.</li> </ul>
(9)	Power connector	Connects an AC adapter.

## Bottom

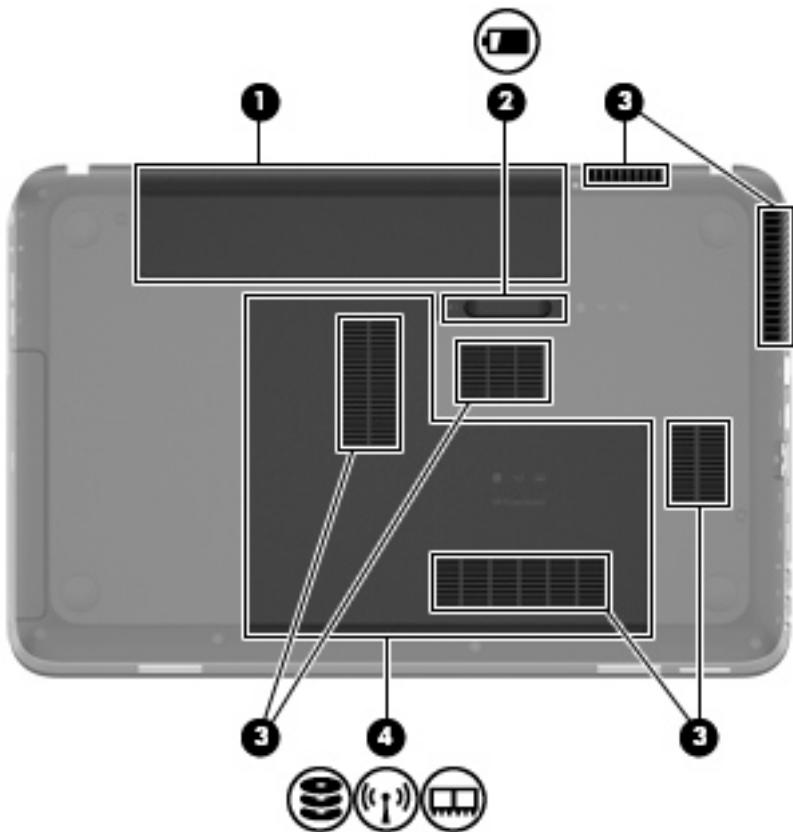


Item	Component	Description
(1)	Battery bay	Holds the battery.
(2)	Battery release latch	Releases the battery from the battery bay.
(3)	Vents (6)	Enable airflow to cool internal components.  <b>NOTE:</b> the computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(4)	Hard drive bay	Contains the hard drive, the WLAN device, and the memory module slots.  <b>CAUTION:</b> To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore computer functionality, and then contact technical support through Help and Support.

### 3 Illustrated parts catalog

#### Service tag


When ordering parts or requesting information, provide the computer serial number and model number provided on the service tag.

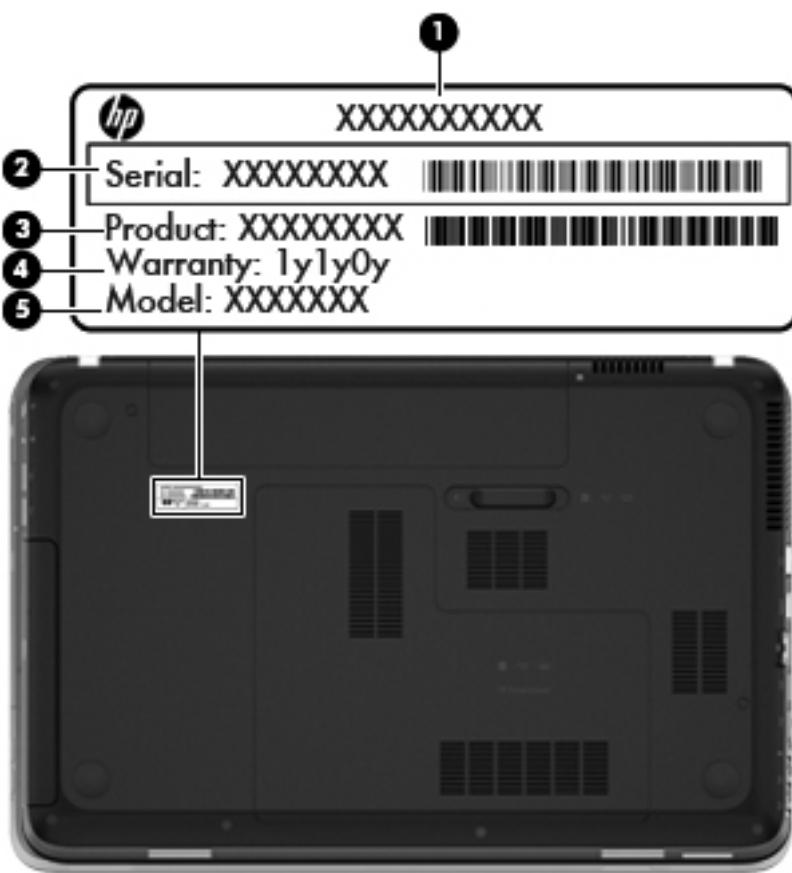

Item	Component	Description
(1)	Product name	This is the product name affixed to the front of the computer.
(2)	Serial number (s/n)	This is an alphanumeric identifier that is unique to each product.

<b>Item</b>	<b>Component</b>	<b>Description</b>
<b>(3)</b>	Part number/Product number (p/n)	This number provides specific information about the product's hardware components. The part number helps a service technician determine what components and parts are needed.
<b>(4)</b>	Warranty period	This number describes the duration of the warranty period for the computer.
<b>(5)</b>	Model description	This is the alphanumeric identifier used to locate documents, drivers, and support for the computer.

## Computer major components

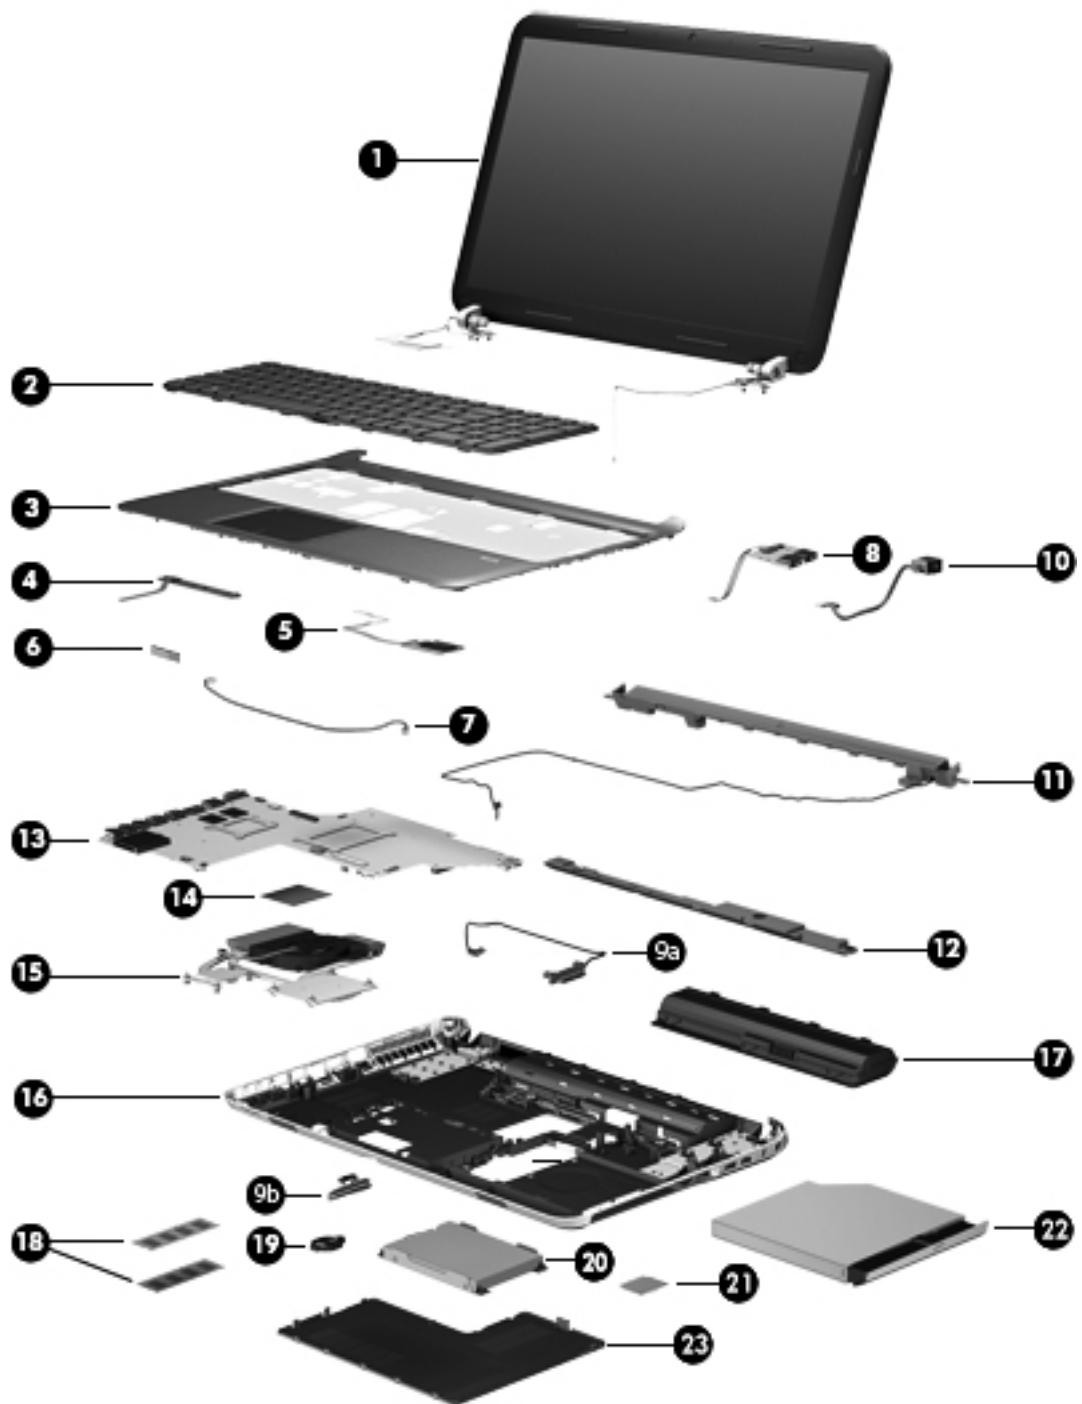

Item	Component	Spare part number
(1)	<b>Display assembly</b> (includes webcam, two microphones, and wireless antenna transceivers and cables):  15.6-in, full high-definition (FHD), light-emitting diode (LED), AntiGlare display assembly in dark umber finish	654103-001

<b>Item</b>	<b>Component</b>	<b>Spare part number</b>
	15.6-in, FHD, LED, AntiGlare display assembly in steel gray finish	654110-001
	15.6-in, HD, LED, BrightView display assembly:	
	In butter gold finish	641482-001
	In dark umber finish	640431-001
	In espresso black finish	640430-001
	In linen white finish	640433-001
	In Pacific blue finish	641479-001
	In pearl pink finish	641481-001
	In ruby red finish	640434-001
	In Sonoma red finish	641480-001
	In steel gray finish	650798-001
	<b>NOTE:</b> For more display assembly spare part information, see <a href="#">Display assembly subcomponents on page 34</a> .	
<b>(2)</b>	<b>Keyboard</b> (includes keyboard cable):	
	Keyboard in black finish:	
	For use only with computer models equipped with an AMD processor in Brazil	640436-201
	For use only with computer models equipped with an AMD processor in Bulgaria	640436-261
	For use only with computer models equipped with an Intel processor in India	640436-D61
	For use only with computer models equipped with an Intel processor in Israel	640436-BB1
	For use only with computer models equipped with an Intel processor in Japan	640436-291
	For use only with computer models equipped with an Intel processor in South Korea	640436-AD1
	For use only with computer models equipped with an Intel processor in Taiwan	640436-AB1
	For use only with computer models equipped with an Intel processor in Thailand	640436-281
	For use with all computer models:	
	For use in Belgium	640436-A41
	For use in Canada	640436-121
	For use in the Czech Republic and Slovakia	640436-221
	For use in Denmark, Finland, and Norway	640436-DH1
	For use in France	640436-051
	For use in Germany	640436-041
	For use in Greece	640436-DJ1
	For use in Hungary	640436-211
	For use in Italy	640436-061

<b>Item</b>	<b>Component</b>	<b>Spare part number</b>
	For use in Latin America	640436-161
	For use in the Netherlands	640436-B31
	For use in Portugal	640436-131
	For use in Russia	640436-251
	For use in Saudi Arabia	640436-171
	For use in Slovenia	640436-BA1
	For use in Spain	640436-071
	For use in Switzerland	640436-BG1
	For use in Turkey	640436-141
	For use in the United Kingdom	640436-031
	For use in the United States	640436-001
	Keyboard in silver finish:	
	For use only with computer models equipped with an AMD processor in Brazil	644363-201
	For use only with computer models equipped with an AMD processor in Bulgaria	644363-261
	For use only with computer models equipped with an Intel processor in India	644363-D61
	For use only with computer models equipped with an Intel processor in Israel	644363-BB1
	For use only with computer models equipped with an Intel processor in Japan	644363-291
	For use only with computer models equipped with an Intel processor in South Korea	644363-AD1
	For use only with computer models equipped with an Intel processor in Taiwan	644363-AB1
	For use only with computer models equipped with an Intel processor in Thailand	644363-281
	For use with all computer models:	
	For use in Belgium	644363-A41
	For use in Canada	644363-121
	For use in the Czech Republic and Slovakia	644363-221
	For use in Denmark, Finland, and Norway	644363-DH1
	For use in France	644363-051
	For use in Germany	644363-041
	For use in Greece	644363-DJ1
	For use in Hungary	644363-211
	For use in Italy	644363-061
	For use in Latin America	644363-161
	For use in the Netherlands	644363-B31

<b>Item</b>	<b>Component</b>	<b>Spare part number</b>
	For use in Portugal	644363-131
	For use in Russia	644363-251
	For use in Saudi Arabia	644363-171
	For use in Slovenia	644363-BA1
	For use in Spain	644363-071
	For use in Switzerland	644363-BG1
	For use in Turkey	644363-141
	For use in the United Kingdom	644363-031
	For use in the United States	644363-001
<b>(3)</b>	<b>Top cover</b> (includes TouchPad and TouchPad button board, but does not include TouchPad cable or TouchPad button board cable):	
	<b>NOTE:</b> The TouchPad cable and TouchPad button board cable are included in the Cable Kit, spare part number 640422-001.	
	In butter gold finish	641497-001
	In dark umber finish	640463-001
	In espresso black finish	640458-001
	In linen white finish	640460-001
	In Pacific blue finish	641494-001
	In pearl pink finish	641496-001
	In ruby red finish	640461-001
	In Sonoma red finish	641495-001
	In steel gray finish	650802-001
<b>(4)</b>	<b>Power button board</b> (does not include cable)	640439-001
	<b>NOTE:</b> The power button board cable is not included in the power button board spare part kit. The power button board cable is included in the Cable Kit, spare part number 640422-001.	
<b>(5)</b>	<b>Fingerprint reader board</b> (select models only, includes bracket, but does not include cable)	640427-001
	<b>NOTE:</b> The fingerprint reader board cable is not included in the fingerprint reader board spare part kit. The fingerprint reader board cable is included in the Cable Kit, spare part number 640422-001.	
<b>(6)</b>	<b>Bluetooth module</b> (for use only with computer models equipped with an Intel processor)	
	<b>NOTE:</b> The Bluetooth module spare part kit does not include the Bluetooth module cable. The Bluetooth module cable is available in the Cable Kit, spare part number 641478-001.	
	EDR v.4.0	655792-001
	EDR v.3.0	537921-001

<b>Item</b>	<b>Component</b>	<b>Spare part number</b>
(7)	<b>Bluetooth module cable</b> (for use only with computer models equipped with an Intel processor)	641478-001
(8)	<b>USB board</b> (does not include cable)	640441-001
	<b>NOTE:</b> The USB board cable is not included in the USB board spare part kit. The USB board cable is included in the Cable Kit, spare part number 640422-001.	
	<b>Cable Kit</b> , includes:	640422-001
(9a)	Optical drive connector cable	
(9b)	Hard drive connector cable	
	Not illustrated:	
	Power button board cable	
	Fingerprint reader board cable	
	TouchPad cable	
	TouchPad button board cable	
	USB board cable	
	<b>NOTE:</b> See <a href="#">Cable Kit on page 32</a> for more Cable Kit spare part information.	
(10)	<b>Power connector cable</b>	640424-001
(11)	<b>Speaker cover:</b>	
	For use only with computer models in dark umber and steel gray finish	641438-001
	For use only with computer models in butter gold, espresso black, linen white, Pacific blue, pearl pink, ruby red, and Sonoma red finish	640443-001
(12)	<b>Speaker Kit</b> (includes left and right speakers and cable)	640449-001
(13)	<b>System board</b> (includes replacement thermal material):	
	For use only with computer models equipped with an AMD processor:	
	Equipped with the A70M chipset, HD6750 graphics subsystem chipset, and 1024-MB of graphics subsystem discrete memory	650854-001
	Equipped with the A70M chipset, HD6490 graphics subsystem chipset, and 512-MB of graphics subsystem discrete memory	650853-001
	Equipped with the A70M chipset and a graphics subsystem with UMA memory	650852-001
	Equipped with the A60M chipset, HD6750 graphics subsystem chipset, and 1024-MB of graphics subsystem discrete memory	650851-001
	Equipped with the A60M chipset, HD6490 graphics subsystem chipset, and 512-MB of graphics subsystem discrete memory	650850-001
	Equipped with the A60M chipset and a graphics subsystem with UMA memory	650849-001
	Equipped with the RS880MD chipset, the HD6650 graphics subsystem chipset, and 1024-MB of graphics subsystem discrete memory	659127-001

<b>Item</b>	<b>Component</b>	<b>Spare part number</b>
	Equipped with the RS880MD chipset, the HD6470 graphics subsystem chipset, and 512-MB of graphics subsystem discrete memory	659126-001
	Equipped with the RS880M chipset, and a graphics subsystem with UMA memory	659125-001
	Equipped with the RS880MD chipset, HD6650 graphics subsystem chipset, 1024-MB of graphics subsystem discrete memory, and USB version 3.0	640454-001
	Equipped with the RS880MD chipset, HD6650 graphics subsystem chipset, 1024-MB of graphics subsystem discrete memory, and USB version 2.0	640452-001
	Equipped with the RS880MD chipset, HD6470 graphics subsystem chipset, 512-MB of graphics subsystem discrete memory, and USB version 3.0	640453-001
	Equipped with the RS880MD chipset, HD6470 graphics subsystem chipset, 512-MB of graphics subsystem discrete memory, and USB version 2.0	640451-001
	Equipped with the RS880M chipset, a graphics subsystem with UMA memory, and USB version 3.0	640455-001
	Equipped with the RS880M chipset, a graphics subsystem with UMA memory, and USB version 2.0	640450-001
	For use only with computer models equipped with an Intel processor:	
	Equipped with an Intel dual core processor, the HD6770 chipset, a graphics subsystem with 1024-MB of discrete memory, and supports bus alive/chip off (BACO) and USB version 3.0	659151-001
	Equipped with an Intel dual core processor, the HD6490 chipset, a graphics subsystem with 1024-MB of discrete memory, and supports bus alive/chip off (BACO) and USB version 3.0	659150-001
	Equipped with an Intel quad core processor, the HD6490 chipset, a graphics subsystem with 1024-MB of discrete memory, and supports bus alive/chip off (BACO) and USB version 3.0	659149-001
	Equipped with an Intel quad core processor, the HD6770 chipset, a graphics subsystem with 1024-MB of discrete memory, and supports bus alive/chip off (BACO) and USB version 3.0	659148-001
	Equipped with an Intel dual core processor, the HD6490 chipset, a graphics subsystem with 1024-MB of discrete memory, and supports bus alive/chip off (BACO) and USB version 2.0	659147-001
	Equipped with an Intel quad core processor, the HM65 chipset, and the HD6490 graphics subsystem with 1024-MB of discrete memory	659998-001
	Equipped with an Intel quad core processor, the HM65 chipset, and a graphics subsystem with UMA memory	659999-001
	For use only with computer models equipped with a quad core processor, the Intel HD6770 graphics subsystem, and 2048-MB of discrete memory	650799-001
	For use only with computer models equipped with a dual core processor, the Intel HD6770 graphics subsystem, and 2048-MB of discrete memory	650800-001
	For use only with computer models equipped with a quad core processor, the Intel HD6770 graphics subsystem, and 1024-MB of discrete memory	641488-001

<b>Item</b>	<b>Component</b>	<b>Spare part number</b>
	For use only with computer models equipped with a dual core processor, the Intel HD6770 graphics subsystem, and 1024-MB of discrete memory	641489-001
	For use only with computer models equipped with a quad core processor, the Intel HD6490 graphics subsystem, and 1024-MB of discrete memory	641486-001
	For use only with computer models equipped with a dual core processor, the Intel HD6490 graphics subsystem, 1024-MB of discrete memory, and USB version 3.0	641484-001
	For use only with computer models equipped with a dual core processor, the Intel HD6490 graphics subsystem, 1024-MB of discrete memory, and USB version 2.0	641487-001
	For use only with computer models equipped with a quad core processor, a graphics subsystem with UMA memory, and USB version 3.0	641491-001
	For use only with computer models equipped with a dual core processor, a graphics subsystem with UMA memory, and USB version 3.0	641485-001
	For use only with computer models equipped with a dual core processor, a graphics subsystem with UMA memory, and USB version 2.0	641490-001
<b>Thermal Material Kit</b> (not illustrated, includes replacement thermal paste and pads)		
	For use only with computer models equipped with an AMD A8, A6, A4, or E2 processor and a graphics subsystem with discrete memory	654111-001
	For use only with computer models equipped with an AMD A8, A6, A4, or E2 processor and a graphics subsystem with UMA memory	654112-001
	For use only with computer models equipped with an AMD Athlon, Phenom, or Turion processor and a graphics subsystem with discrete memory	640457-001
	For use only with computer models equipped with an AMD Athlon, Phenom, or Turion AMD processor and a graphics subsystem with UMA memory	640456-001
	For use only with computer models equipped with an Intel processor and a graphics subsystem with 2048-MB of discrete memory	650801-001
	For use only with computer models equipped with an Intel processor and a graphics subsystem with 1024-MB of discrete memory	641493-001
	For use only with computer models equipped with an Intel processor and a graphics subsystem with UMA memory	641492-001
<b>(14)</b>	<b>Processor</b> (includes replacement thermal material)	
	AMD A8-3530MX 2.60-GHz processor, (1.90-GHz FSB, 4.0-MB L2 cache, quad core, 45 W)	653364-001
	AMD A8-3510MX 2.50-GHz processor (1.50-GHz FSB, 4.0-MB L2 cache, quad core, 45 W)	653358-001
	AMD A8-3500M 2.40-GHz processor (1.5-GHz FSB, 4.0-MB L2 cache, quad core, 35 W)	653350-001
	AMD A6-3410MX 2.30-GHz processor (1.60-GHz FSB, 2.0-MB L2 cache, quad core, 45 W)	653357-001
	AMD A6-3400M 2.30-GHz processor (1.4-GHz FSB, 4.0-MB L2 cache, quad core, 35 W)	653349-001

<b>Item</b>	<b>Component</b>	<b>Spare part number</b>
	AMD A4-3310MX 2.50-GHz processor (2.10-GHz FSB, 2.0-MB L2 cache, dual core, 45 W)	653356-001
	AMD A4-3300M 2.50-GHz processor (1.9-GHz FSB, 4.0-MB L2 cache, dual core, 35 W)	653348-001
	AMD E2-3000M 2.40-GHz processor (1.8-GHz FSB, 4.0-MB L2 cache, quad core, 35 W)	653351-001
	AMD Athlon II N370 2.50-GHz processor (1.0-MB L2 cache, 1066-MHz, 3.2GT/sec, dual core, 35 W)	634686-001
	AMD Athlon II P360 2.30-GHz processor (1.0-MB L2 cache, 1066-MHz, 3.2GT/sec, dual core, 25 W)	636635-001
	AMD Athlon II P340 2.20-GHz processor (1.0-MB L2 cache, 1066-MHz, 3.2GT/sec, dual core, 25 W)	616343-001
	AMD Phenom II N970 2.20-GHz processor (2.0-MB L2 cache, 1333-MHz, 3.6GT/sec, quad core, 35 W)	635496-001
	AMD Phenom II N870 2.30-GHz processor (1.5-MB L2 cache, 1333-MHz, 3.6GT/sec, triple core, 35 W)	635495-001
	AMD Phenom II N850 2.20-GHz processor (1.5-MB L2 cache, 1333-MHz, 3.6GT/sec, triple core, 35 W)	616345-001
	AMD Phenom II N660 3.00-GHz processor (2.0-MB L2 cache, 1333-MHz, 3.6GT/sec, dual core, 35 W)	635494-001
	AMD Phenom II P960 1.80-GHz processor (2.0-MB L2 cache, 1066-MHz, 3.6GT/sec, quad core, 25 W)	634689-001
	AMD Phenom II P860 2.00-GHz processor (1.5-MB L2 cache, 1333-MHz, 3.6GT/sec, triple core, 25 W)	634688-001
	AMD Phenom II P650 2.60-GHz processor (2.0-MB L2 cache, 1066-MHz, 3.6GT/sec, triple core, 25 W)	634687-001
	AMD Turion II P570 2.70-GHz processor (2.0-MB L2 cache, 1066-MHz, 3.6GT/sec, dual core, 35 W)	634690-001
	AMD Turion II P560 2.50-GHz processor (2.0-MB L2 cache, 1066-MHz, 3.6GT/sec, dual core, 25 W)	634691-001
	Intel Core i7-2820QM 2.30-GHz (SC turbo up to 3.10-GHz) processor (8.0-MB L3 cache, quad core, 45 W)	634694-001
	Intel Core i7-2720QM 2.20-GHz (SC turbo up to 3.00-GHz) processor (6.0-MB L3 cache, quad core, 45 W)	631254-001
	Intel Core i7-2630QM 2.00-GHz (SC turbo up to 2.90-GHz) processor (6.0-MB L3 cache, quad core, 45 W)	635501-001
	Intel Core i7-2620M 2.70-GHz (SC turbo up to 3.40-GHz) processor (4.0-MB L3 cache, dual core, 35 W)	631252-001
	Intel Core i5-2540M 2.60-GHz (SC turbo up to 3.30-GHz) processor (3.0-MB L3 cache, dual core, 35 W)	631255-001

<b>Item</b>	<b>Component</b>	<b>Spare part number</b>
	Intel Core i5-2520M 2.50-GHz (SC turbo up to 3.20-GHz) processor (3.0-MB L3 cache, dual core, 35 W)	631253-001
	Intel Core i5-2430M 2.40-GHz (SC turbo up to 3.00-GHz) processor (3.0-MB L3 cache, dual core, 35 W)	653341-001
	Intel Core i5-2410M 2.30-GHz (SC turbo up to 2.90-GHz) processor (3.0-MB L3 cache, dual core, 35 W)	638039-001
	Intel Core i3-2350M 2.30-GHz processor (3.0-MB L3 cache, dual core, 35 W)	653340-001
	Intel Core i3-2330M 2.20-GHz processor (3.0-MB L3 cache, dual core, 35 W)	653339-001
	Intel Core i3-2310M 2.10-GHz processor (3.0-MB L3 cache, dual core, 35 W)	638037-001
	Intel Pentium B950 TJ85 2.10-GHz processor (2.0-MB L3 cache, dual core, 35 W)	653338-001
	Intel Pentium B940 TJ85 2.00-GHz processor (2.0-MB L3 cache, dual core, 35 W)	653337-001
<b>(15)</b>	<b>Fan/heat sink assembly</b> (includes replacement thermal material):	
	For use only with computer models equipped with an AMD processor:	
	For use only with computer models equipped with an AMD A8, A6, or A4 processor and a graphics subsystem with discrete memory	650848-001
	For use only with computer models equipped with an AMD A8, A6, or A4 processor and a graphics subsystem with UMA memory	650847-001
	For use only with computer models equipped with an AMD Athlon, Phenom, or Turion processor and a graphics subsystem with discrete memory	640426-001
	For use only with computer models equipped with an AMD Athlon, Phenom, or Turion processor and a graphics subsystem with UMA memory	640425-001
	For use only with computer models equipped with an Intel processor:	
	For use only with computer models equipped with a graphics subsystem with 2048-MB discrete memory	650797-001
	For use only with computer models equipped with a graphics subsystem with 1024-MB discrete memory	641477-001
	For use only with computer models equipped with a graphics subsystem with UMA memory	641476-001
<b>(16)</b>	<b>Base enclosure</b> (includes battery release latch and 4 rubber feet)	
	In aluminum finish for use only with computer models equipped with an AMD processor	640440-001
	For use only with computer models in dark umber and steel gray finish	640419-001
	For use only with computer models in butter gold, espresso black, linen white, Pacific blue, pearl pink, ruby red, and Sonoma red finish	640418-001
<b>(17)</b>	<b>Battery:</b>	
	9-cell, 100-Whr, 3.00-Ah Li-ion battery	636631-001
	6-cell, 62-Whr, 2.80-Ah Li-ion battery	593562-001

<b>Item</b>	<b>Component</b>	<b>Spare part number</b>
	6-cell, 55-Whr, 2.55-Ah Li-ion battery	593554-001
<b>(18)</b>	<b>Memory modules</b> (2, DDR3, 10600, 1333-MHz):	
	8 GB	634091-001
	4 GB	621569-001
	2 GB	621565-001
	1 GB	639736-001
<b>(19)</b>	<b>RTC battery</b>	608771-001
<b>(20)</b>	<b>Hard drive</b> (2.5-in, SATA, does not include hard drive bracket, hard drive connector cable, or screws):	
	1-TB, 5400-rpm, 12.7 mm	638974-001
	750-GB, 7200-rpm, 9.5 mm	633252-001
	750-GB, 5400-rpm, 9.5 mm	634250-001
	640-GB, 7200-rpm, 9.5 mm	621046-001
	500-GB, 7200-rpm, 9.5 mm	608218-001
	320-GB, 7200-rpm, 7.0 mm	641672-001 and 634862-001
	250-GB, 7200-rpm, 7.0 mm	635225-001 and 634861-001
	<b>160-GB solid-state drive</b> (not illustrated, for use only with computer models equipped with an Intel processor)	641825-001
	<b>Hard Drive Hardware Kit</b> (not illustrated, includes hard drive bracket and screws)	640428-001
<b>(21)</b>	<b>WLAN module:</b>	
	For use on all computer models:	
	Atheros 9485GN 802.11b/g/n 1×1 WiFi and 3012 Bluetooth 4.0 Combo Adapter	655795-001
	Broadcom 4313 802.11b/g/n 1×1 WiFi and 2070 Bluetooth 2.1+EDR Combo adapter (BT3.0+HS ready)	600370-001
	Broadcom 4313 802.11b/g/n 1×1 WiFi Adapter	593836-001
	Broadcom 4313GN 802.11b/g/n 1×1 WiFi and 20702 Bluetooth 4.0 Combo Adapter	657325-001
	Ralink RT3090BC4 802.11b/g/n 1×1 WiFi and Bluetooth 2.1+EDR Combo Adapter (BT3.0+HS ready)	630705-001
	Ralink 5390GN 802.11b/g/n 1×1 WiFi Adapter	630703-001
	For use only with computer models equipped with an AMD processor:	
	Atheros 9285G 802.11b/g/n 1×1 WiFi Adapter	605560-005
	Atheros AR8002WB-1NGB 802.11b/g/n 1×1 WiFi and Bluetooth 2.1+EDR Combo Adapter (BT3.0+HS ready)	593127-001

<b>Item</b>	<b>Component</b>	<b>Spare part number</b>
	Realtek RTL8191SE 802.11b/g/n 1x1 WiFi Adapter	640926-001
	Realtek 8188BC8 802.11a/b/g/n 2x2 WiFi and Bluetooth 3.0+HS Combo Adapter	602993-001
For use only with computer models equipped with an Intel processor:		
	Intel Centrino Advanced-N 6230	631956-001
	Intel Centrino Wireless-N 1000	593530-001
	Intel Centrino Wireless-N + WiMAX 6150	633817-001
<b>(22)</b>	<b>Optical drive</b> (includes bezel and bracket):	
	DVD±RW and CD-RW Super Multi Double-Layer FX Combo Drive with LightScribe	641808-001
	DVD±RW and CD-RW FX Combo Drive	659966-001
	DVD±RW and CD-RW Super Multi Double-Layer FX Combo Drive with LightScribe	659967-001
	Blu-ray ROM with LightScribe DVD ±R/RW Super Multi Double-Layer Drive for use only with computer models equipped with an Intel processor	641824-001
	DVD±RW and CD-RW Super Multi Double-Layer Combo Drive with LightScribe	641809-001
	<b>Optical drive bay space saver</b> (not illustrated)	659965-001
<b>(23)</b>	<b>Service cover</b> — available in the Plastics Kit, spare part number 640444-001	


## Cable Kit



<b>Item</b>	<b>Component</b>	<b>Spare part number</b>
<b>Cable Kit</b> , includes:		
<b>(1)</b>	Optical drive connector cable	640422-001
<b>(2)</b>	Hard drive connector cable	

<b>Item</b>	<b>Component</b>	<b>Spare part number</b>
(3)	Fingerprint reader board cable	
(4)	USB board cable	
(5)	TouchPad cable	
(6)	TouchPad button board cable	
(7)	Power button board cable	


# Display assembly subcomponents

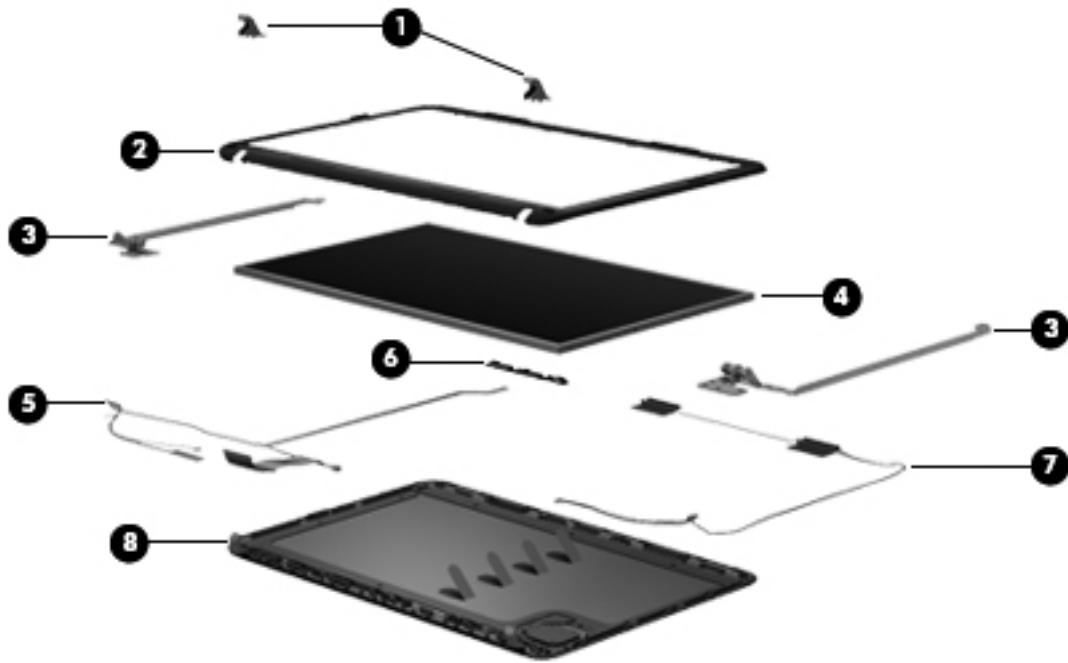

Item	Component	Spare part number
(1)	<b>Display hinge covers (2)</b>	641807-001
(2)	<b>Display bezel:</b>	
	For use only with computer models in dark umber and steel gray finish	640421-001
	For use only with computer models in butter gold, espresso black, linen white, Pacific blue, pearl pink, ruby red, and Sonoma red finish	640420-001
(3)	<b>Display Hinge Kit</b> (includes left and right display hinges and brackets)	640429-001
(4)	<b>Display panel:</b>	
	15.6-in, FHD, LED, AntiGlare display panel	653378-001
	15.6-in, HD, LED, BrightView display panel	640445-001
(5)	<b>Display Cable Kit</b> (includes display panel cable and webcam/microphone module cable)	
	For use only with computer models equipped with a FHD display assembly	656805-001
	For use only with computer models in dark umber and steel gray finish	644362-001
	For use only with computer models in butter gold, espresso black, linen white, Pacific blue, pearl pink, ruby red, and Sonoma red finish	640423-001
(6)	<b>Webcam/microphone module</b>	639387-001
(7)	<b>Antenna Kit</b> (includes left and right wireless antenna cables and transceivers)	640411-001
(8)	<b>Display enclosure:</b>	
	In butter gold finish	641475-001

<b>Item</b>	<b>Component</b>	<b>Spare part number</b>
	In dark umber finish	640417-001
	In espresso black finish	640412-001
	In linen white finish	640414-001
	In Pacific blue finish	641472-001
	In pearl pink finish	641474-001
	In ruby red finish	640415-001
	In Sonoma red finish	641473-001
	In steel gray finish	650796-001
	<b>Display Rubber Kit</b> (not illustrated)	641810-001
	<b>Display Screw Kit</b> (not illustrated)	640448-001

## Mass storage devices

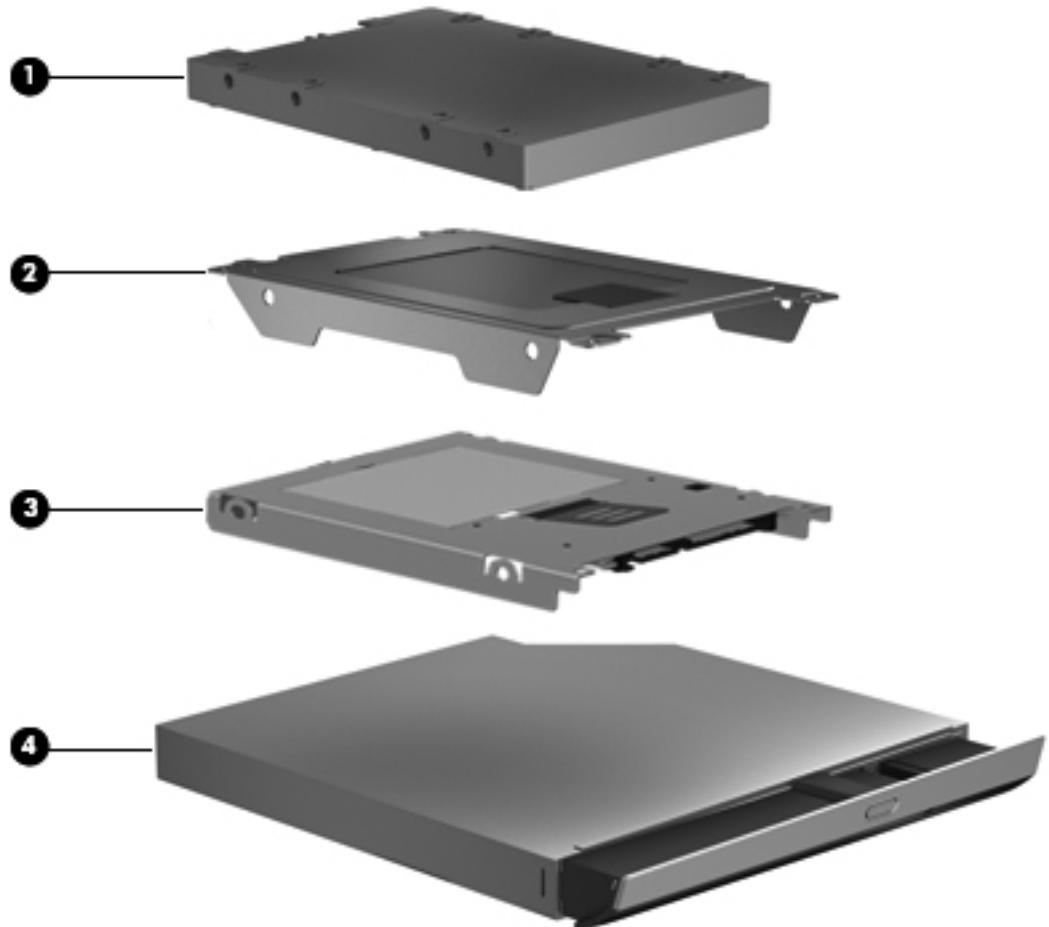

Item	Component	Spare part number
(1)	<b>Hard drive</b> (2.5-in, SATA, does not include hard drive bracket, hard drive connector cable, or screws):	
	1-TB, 5400-rpm, 12.7 mm	638974-001
	750-GB, 7200-rpm, 9.5 mm	633252-001
	750-GB, 5400-rpm, 9.5 mm	634250-001
	640-GB, 7200-rpm, 9.5 mm	621046-001
	500-GB, 7200-rpm, 9.5 mm	608218-001
	320-GB, 7200-rpm, 7.0 mm	641672-001 and 634862-001
	250-GB, 7200-rpm, 7.0 mm	635225-001 and 634861-001
	<b>Hard Drive Hardware Kit</b> , includes:	640428-001
(2)	Hard drive bracket	

<b>Item</b>	<b>Component</b>	<b>Spare part number</b>
	Hard drive screws (not illustrated)	
(3)	<b>160-GB solid-state drive</b> (for use only with computer models equipped with an Intel processor)	641825-001
(4)	<b>Optical drive</b> (includes bezel and bracket):	
	DVD±RW and CD-RW Super Multi Double-Layer FX Combo Drive with LightScribe	641808-001
	DVD±RW and CD-RW FX Combo Drive	659966-001
	DVD±RW and CD-RW Super Multi Double-Layer FX Combo Drive with LightScribe	659967-001
	Blu-ray ROM with LightScribe DVD ±R/RW Super Multi Double-Layer Drive for use only with computer models equipped with an Intel processor	641824-001
	DVD±RW and CD-RW Super Multi Double-Layer Combo Drive with LightScribe	641809-001
	<b>Optical drive bay space saver</b> (not illustrated)	659965-001

## Miscellaneous parts

<b>Component</b>	<b>Spare part number</b>
<b>HP Smart AC adapter:</b>	
For use with all computer models:	
120-W PFC RC V HP Smart AC adapter	609941-001
90-W PFC RC V HP Smart AC adapter	609940-001
65-W RC V HP Smart AC adapter	609939-001
For use only with computer models equipped with an Intel processor:	
90-W PFC RC V EM HP Smart AC adapter	609947-001
65-W RC V EM HP Smart AC adapter	609948-001
<b>Power cord</b> (3-pin, black, 1.83-m):	
For use with all computer models:	
For use in Argentina	490371-D01
For use in Denmark	490371-081
For use in Europe	490371-021
For use in Italy	490371-061
For use in North America	490371-001
For use in South Africa	490371-AR1
For use in Switzerland	490371-111
For use in the United Kingdom and Singapore	490371-031

<b>Component</b>	<b>Spare part number</b>
For use only with computer models equipped with AMD processors in Brazil	490371-202
For use only with computer models equipped with Intel processors:	
For use in Australia	490371-111
For use in India	490371-D61
For use in Israel	490371-BB1
For use in Japan	490371-291
For use in the People's Republic of China	490371-AA1
For use in South Korea	490371-AD1
For use in Taiwan	490371-AB1
For use in Thailand	490371-281
<b>Remote control</b> (full-function, with teletext)	465541-004
<b>USB DVD-T antenna</b>	581223-001
<b>USB DVB-T TV tuner</b>	581222-001
<b>Screw Kit</b>	640447-001

## Sequential part number listing

<b>Spare part number</b>	<b>Description</b>
465541-004	Remote control (full-function, with teletext)
490371-001	Power cord for use with all computer models in North America (3-pin, black, 1.83-m)
490371-011	Power cord for use only with computer models equipped with an Intel processor in Australia (3-pin, black, 1.83-m)
490371-021	Power cord for use with all computer models in Europe (3-pin, black, 1.83-m)
490371-031	Power cord for use with all computer models in the United Kingdom and Singapore (3-pin, black, 1.83-m)
490371-061	Power cord for use with all computer models in Italy (3-pin, black, 1.83-m)
490371-081	Power cord for use with all computer models in Denmark (3-pin, black, 1.83-m)
490371-111	Power cord for use with all computer models in Switzerland (3-pin, black, 1.83-m)
490371-201	Power cord for use only with computer models equipped with an Intel processor in Thailand (3-pin, black, 1.83-m)
490371-202	Power cord for use only with computer models equipped with an AMD processor in Brazil (3-pin, black, 1.83-m)
490371-291	Power cord for use only with computer models equipped with an Intel processor in Japan (3-pin, black, 1.83-m)

<b>Spare part number</b>	<b>Description</b>
490371-AA1	Power cord for use only with computer models equipped with an Intel processor in the People's Republic of China (3-pin, black, 1.83-m)
490371-AB1	Power cord for use only with computer models equipped with an Intel processor in Taiwan (3-pin, black, 1.83-m)
490371-AD1	Power cord for use only with computer models equipped with an Intel processor in South Korea (3-pin, black, 1.83-m)
490371-AR1	Power cord for use with all computer models in South Africa (3-pin, black, 1.83-m)
490371-BB1	Power cord for use only with computer models equipped with an Intel processor in Israel (3-pin, black, 1.83-m)
490371-D01	Power cord for use with all computer models in Argentina (3-pin, black, 1.83-m)
490371-D61	Power cord for use only with computer models equipped with an Intel processor in India (3-pin, black, 1.83-m)
537921-001	Bluetooth module (for use only with computer models equipped with an Intel processor)  <b>NOTE:</b> The Bluetooth module spare part kit does not include a Bluetooth module cable. The Bluetooth module cable is included in the Cable Kit, spare part number 640206-001.
581222-001	USB DVB-T TV tuner
581223-001	USB DVD-T antenna
593127-001	Atheros AR8002WB-1NGB 802.11b/g/n 1×1 WiFi and Bluetooth 2.1+EDR Combo Adapter (BT3.0+HS ready) for use only with computer models equipped with an AMD processor
593530-001	Intel Centrino Wireless-N 1000 WLAN module for use only on computer models equipped with an Intel processor
593554-001	6-cell, 55-Whr, 2.55-Ah Li-ion battery
593562-001	6-cell, 62-Whr, 2.80-Ah Li-ion battery
593836-001	Broadcom 4313 802.11b/g/n 1×1 WiFi Adapter for use with all computer models
600370-001	Broadcom 4313 802.11b/g/n 1×1 WiFi and 2070 Bluetooth 2.1+EDR Combo Adapter (Bluetooth 3.0+HS ready) for use with all computer models
602993-001	Realtek 8188BC8 802.11a/b/g/n 2×2 WiFi and Bluetooth 3.0+HS Combo Adapter for use only with computer models equipped with an AMD processor
605560-005	Atheros 9285G 802.11b/g/n 1×1 WiFi Adapter for use only with computer models equipped with an AMD processor
608218-001	500-GB, 7200-rpm, 9.5 mm hard drive for use with all computer models (2.5-in, SATA, does not include hard drive bracket, hard drive connector cable, or screws)
608771-001	RTC battery (includes cable and double-sided tape)
609939-001	65-W RC V HP Smart AC adapter for use with all computer models
609940-001	90-W PFC RC V HP Smart AC adapter for use with all computer models
609941-001	120-W PFC RC V HP Smart AC adapter for use with all computer models
609947-001	90-W PFC RC V EM HP Smart AC adapter for use only with computer models equipped with an Intel processor

<b>Spare part number</b>	<b>Description</b>
609948-001	65-W PFC RC V EM HP Smart AC adapter for use only with computer models equipped with an Intel processor
616343-001	AMD Athlon II P340 2.20-GHz processor (1.0-MB L2 cache, 1066-MHz, 3.2GT/sec, dual core, 25 W; includes replacement thermal material)
616345-001	AMD Phenom II N850 2.20-GHz processor (1.5-MB L2 cache, 1333-MHz, 3.6GT/sec, triple core, 35 W; includes replacement thermal material)
621046-001	640-GB, 7200-rpm, 9.5 mm hard drive for use with all computer models (2.5-in, SATA, does not include hard drive bracket, hard drive connector cable, or screws)
621565-001	2-GB memory module (DDR3, 10600, 1333-MHz)
621569-001	4-GB memory module (DDR3, 10600, 1333-MHz)
630703-001	Ralink 5390GN 802.11b/g/n 1×1 WiFi Adapter for use with all computer models
630705-001	Ralink RT3090BC4 802.11b/g/n 1×1 WiFi and Bluetooth 2.1+EDR Combo Adapter (Bluetooth 3.0+HS ready) for use with all computer models
631252-001	Intel Core i7-2620M 2.70-GHz (SC turbo up to 3.40-GHz) processor (4-MB L3 cache, dual core, 35 W; includes replacement thermal material)
631253-001	Intel Core i5-2520M 2.50-GHz (SC turbo up to 3.20-GHz) processor (3.0-MB L3 cache, dual core, 35 W; includes replacement thermal material)
631254-001	Intel Core i7-2720QM 2.20-GHz (SC turbo up to 3.00-GHz) processor (6.0-MB L3 cache, quad core, 45 W; includes replacement thermal material)
631255-001	Intel Core i5-2540M 2.60-GHz (SC turbo up to 3.30-GHz) processor (3.0-MB L3 cache, dual core, 35 W; includes replacement thermal material)
631956-001	Intel Centrino Advanced-N 6230 WLAN module for use only on computer models equipped with an Intel processor
633252-001	750-GB, 7200-rpm, 9.5 mm hard drive for use with all computer models (2.5-in, SATA, does not include hard drive bracket, hard drive connector cable, or screws)
633817-001	Intel Centrino Wireless-N + WiMAX 6150 WLAN module for use only with computer models equipped with an Intel processor
634091-001	8-GB memory module (DDR3, 10600, 1333-MHz)
634250-001	750-GB, 5400-rpm, 9.5 mm hard drive for use with all computer models (2.5-in, SATA, does not include hard drive bracket, hard drive connector cable, or screws)
634686-001	AMD Athlon II N370 2.50-GHz processor (1.0-MB L2 cache, 1066-MHz, 3.2GT/sec, dual core, 35 W; includes replacement thermal material)
634687-001	AMD Phenom II P650 2.60-GHz processor (2.0-MB L2 cache, 1066-MHz, 3.6GT/sec, triple core, 25 W; includes replacement thermal material)
634688-001	AMD Phenom II P860 2.00-GHz processor (1.5-MB L2 cache, 1333-MHz, 3.6GT/sec, triple core, 25 W; includes replacement thermal material)
634689-001	AMD Phenom II P960 1.80-GHz processor (2.0-MB L2 cache, 1066-MHz, 3.6GT/sec, quad core, 25 W; includes replacement thermal material)
634690-001	AMD Turion II P570 2.70-GHz processor (2.0-MB L2 cache, 1066-MHz, 3.6GT/sec, dual core, 35 W; includes replacement thermal material)

<b>Spare part number</b>	<b>Description</b>
634691-001	AMD Turion II P560 2.50-GHz processor (2.0-MB L2 cache, 1066-MHz, 3.6GT/sec, dual core, 25 W; includes replacement thermal material)
634694-001	Intel Core i7-2820QM 2.30-GHz (SC turbo up to 3.20-GHz) processor (8.0-MB L3 cache, quad core, 45 W; includes replacement thermal material)
634861-001	250-GB, 7200-rpm, 7.0 mm hard drive (2.5-in, SATA, does not include hard drive bracket, hard drive connector cable, or screws)
634862-001	320-GB, 7200-rpm, 7.0 mm hard drive (2.5-in, SATA, does not include hard drive bracket, hard drive connector cable, or screws)
635225-001	250-GB, 7200-rpm, 7.0 mm hard drive (2.5-in, SATA, does not include hard drive bracket, hard drive connector cable, or screws)
635494-001	AMD Phenom II N660 3.00-GHz processor (2.0-MB L2 cache, 1333-MHz, 3.6GT/sec, dual core, 35 W; includes replacement thermal material)
635495-001	AMD Phenom II N870 2.30-GHz processor (1.5-MB L2 cache, 1333-MHz, 3.6GT/sec, triple core, 35 W; includes replacement thermal material)
635496-001	AMD Phenom II N970 2.20-GHz processor (2.0-MB L2 cache, 1333-MHz, 3.6GT/sec, quad core, 35 W; includes replacement thermal material)
635501-001	Intel Core i7-2630QM 2.00-GHz (SC turbo up to 2.90-GHz) processor (6.0-MB L3 cache, quad core, 45 W; includes replacement thermal material)
636631-001	9-cell, 100-Whr, 3.00-Ah Li-ion battery
636635-001	AMD Athlon II P360 2.30-GHz processor (1.0-MB L2 cache, 1066-MHz, 3.2GT/sec, dual core, 25 W; includes replacement thermal material)
638037-001	Intel Core i3-2310M 2.10-GHz processor (3.0-MB L3 cache, dual core, 35 W; includes replacement thermal material)
638039-001	Intel Core i5-2410M 2.30-GHz (SC turbo up to 2.90-GHz) processor (3.0-MB L3 cache, dual core, 35 W; includes replacement thermal material)
638974-001	1-TB, 5400-rpm, 12.7 mm hard drive (2.5-in, SATA, does not include hard drive bracket, hard drive connector cable, or screws)
639387-001	Webcam/microphone module
639736-001	1-GB memory module (DDR3, 10600, 1333-MHz)
640411-001	Antenna Kit (includes left and right wireless antenna cables and transceivers)
640412-001	Display enclosure in espresso black finish
640414-001	Display enclosure in linen white finish
640415-001	Display enclosure in ruby red finish
640417-001	Display enclosure in dark umber finish
640418-001	Base enclosure for use only with computer models in butter gold, espresso black, linen white, Pacific blue, pearl pink, ruby red, and Sonoma red finish (includes battery release latch and 4 rubber feet)
640419-001	Base enclosure for use only with computer models in dark umber and steel gray finish (includes battery release latch and 4 rubber feet)

<b>Spare part number</b>	<b>Description</b>
640420-001	Display bezel for use only with computer models in butter gold, espresso black, linen white, Pacific blue, pearl pink, ruby red, and Sonoma red finish
640421-001	Display bezel for use only with computer models in dark umber and steel gray finish
640422-001	Cable Kit (includes the optical drive connector cable, hard drive connector cable, power button board cable, fingerprint reader board cable, TouchPad cable, TouchPad button board cable, and USB board cable)
	<b>NOTE:</b> See <a href="#">Cable Kit on page 32</a> for more Cable Kit spare part information.
640423-001	Display Cable Kit for use only with computer models in butter gold, espresso black, linen white, Pacific blue, pearl pink, ruby red, and Sonoma red finish (includes display panel cable and webcam/microphone module cable)
640424-001	Power connector cable
640425-001	Fan/heat sink assembly for use only with computer models equipped with an AMD Athlon, Phenom, or Turion processor and a graphics subsystem with UMA memory (includes replacement thermal material)
640426-001	Fan/heat sink assembly for use only with computer models equipped with an AMD Athlon, Phenom, or Turion processor and a graphics subsystem with discrete memory (includes replacement thermal material)
640427-001	Fingerprint reader board (select models only, includes bracket, but does not include cable)
	<b>NOTE:</b> The fingerprint reader board cable is not included in the fingerprint reader board spare part kit. The fingerprint reader board cable is included in the Cable Kit, spare part number 640422-001.
640428-001	Hard Drive Hardware Kit (includes hard drive bracket and screws)
640429-001	Display Hinge Kit (includes left and right display hinges and brackets)
640430-001	15.6-in, HD, LED, BrightView display assembly in espresso black finish (includes webcam, two microphones, and wireless antenna transceivers and cables)
640431-001	15.6-in, HD, LED, BrightView display assembly in dark umber finish (includes webcam, two microphones, and wireless antenna transceivers and cables)
640433-001	15.6-in, HD, LED, BrightView display assembly in linen white finish (includes webcam, two microphones, and wireless antenna transceivers and cables)
640434-001	15.6-in, HD, LED, BrightView display assembly in ruby red finish (includes webcam, two microphones, and wireless antenna transceivers and cables)
640436-001	Keyboard in black finish for use with all computer models in the United States (includes keyboard cable)
640436-031	Keyboard in black finish for use with all computer models in the United Kingdom and Singapore (includes keyboard cable)
640436-041	Keyboard in black finish for use with all computer models in Germany (includes keyboard cable)
640436-051	Keyboard in black finish for use with all computer models in France (includes keyboard cable)
640436-061	Keyboard in black finish for use with all computer models in Italy (includes keyboard cable)
640436-071	Keyboard in black finish for use with all computer models in Spain (includes keyboard cable)
640436-121	Keyboard in black finish for use with all computer models in Canada (includes keyboard cable)

<b>Spare part number</b>	<b>Description</b>
640436-131	Keyboard in black finish for use with all computer models in Portugal (includes keyboard cable)
640436-141	Keyboard in black finish for use with all computer models in Turkey (includes keyboard cable)
640436-161	Keyboard in black finish for use with all computer models in Latin America (includes keyboard cable)
640436-171	Keyboard in black finish for use with all computer models in Saudi Arabia (includes keyboard cable)
640436-201	Keyboard in black finish for use only with computer models equipped with an AMD processor in Brazil (includes keyboard cable)
640436-211	Keyboard in black finish for use with all computer models in Hungary (includes keyboard cable)
640436-221	Keyboard in black finish for use with all computer models in the Czech Republic and Slovakia (includes keyboard cable)
640436-251	Keyboard in black finish for use with all computer models in Russia (includes keyboard cable)
640436-261	Keyboard in black finish for use only with computer models equipped with an AMD processor in Bulgaria (includes keyboard cable)
640436-281	Keyboard in black finish for use only with computer models equipped with an Intel processor in Thailand (includes keyboard cable)
640436-291	Keyboard in black finish for use only with computer models equipped with an Intel processor in Japan (includes keyboard cable)
640436-A41	Keyboard in black finish for use with all computer models in Belgium (includes keyboard cable)
640436-AB1	Keyboard in black finish for use only with computer models equipped with an Intel processor in Taiwan (includes keyboard cable)
640436-AD1	Keyboard in black finish for use only with computer models equipped with an Intel processor in South Korea (includes keyboard cable)
640436-B31	Keyboard in black finish for use with all computer models in the Netherlands (includes keyboard cable)
640436-BA1	Keyboard in black finish for use with all computer models in Slovenia (includes keyboard cable)
640436-BB1	Keyboard in black finish for use only with computer models equipped with an Intel processor in Israel (includes keyboard cable)
640436-BG1	Keyboard in black finish for use with all computer models in Switzerland (includes keyboard cable)
640436-D61	Keyboard in black finish for use only with computer models equipped with an Intel processor in India (includes keyboard cable)
640436-DH1	Keyboard in black finish for use with all computer models in Denmark, Finland, and Norway (includes keyboard cable)
640436-DJ1	Keyboard in black finish for use with all computer models in Greece (includes keyboard cable)
640439-001	Power button board (does not include cable)

**NOTE:** The power button board cable is not included in the power button board spare part kit. The power button board cable is included in the Cable Kit, spare part number 640422-001.

Spare part number	Description
640440-001	Base enclosure for use only with computer models in aluminum finish (includes battery release latch and 4 rubber feet)
640441-001	USB board (does not include cable)
	<b>NOTE:</b> The USB board cable is not included in the USB board spare part kit. The USB board cable is included in the Cable Kit, spare part number 640422-001.
640443-001	Speaker cover for use only with computer models in butter gold, espresso black, linen white, Pacific blue, pearl pink, ruby red, and Sonoma red finish
640444-001	Plastics Kit (includes the service cover)
640445-001	15.6-in, HD, LED, BrightView display panel
640447-001	Screw Kit
640448-001	Display Screw Kit
640449-001	Speaker Kit (includes left and right speakers and cable)
640450-001	System board for use only with computer models equipped with an AMD processor, the RS880M chipset, a graphics subsystem with UMA memory, and USB version 2.0 (includes replacement thermal material)
640451-001	System board for use only with computer models equipped with an AMD processor, the RS880MD chipset, the HD6470 graphics subsystem chipset, 512-MB of graphics subsystem discrete memory, and USB version 2.0 (includes replacement thermal material)
640452-001	System board for use only with computer models equipped with an AMD processor, the RS880MD chipset, HD6650 graphics subsystem chipset, 1024-MB of graphics subsystem discrete memory, and USB version 2.0 (includes replacement thermal material)
640453-001	System board for use only with computer models equipped with an AMD processor, the RS880MD chipset, the HD6470 graphics subsystem chipset, 512-MB of graphics subsystem discrete memory, and USB version 3.0 (includes replacement thermal material)
640454-001	System board for use only with computer models equipped with an AMD processor, the RS880MD chipset, HD6650 graphics subsystem chipset, 1024-MB of graphics subsystem discrete memory, and USB version 3.0 (includes replacement thermal material)
640455-001	System board for use only with computer models equipped with an AMD processor, the RS880M chipset, a graphics subsystem with UMA memory, and USB version 3.0 (includes replacement thermal material)
640456-001	Thermal Material Kit for use only with computer models equipped with an AMD Athlon, Phenom, or Turion processor and a graphics subsystem with UMA memory (includes replacement thermal paste and pads)
640457-001	Thermal Material Kit for use only with computer models equipped with an AMD Athlon, Phenom, or Turion processor and a graphics subsystem with discrete memory (includes replacement thermal paste and pads)
640458-001	Top cover in espresso black finish (includes TouchPad and TouchPad button board, but does not include TouchPad cable or TouchPad button board cable)
	<b>NOTE:</b> The TouchPad cable and TouchPad button board cable are included in the Cable Kit, spare part number 640422-001.

Spare part number	Description
640460-001	Top cover in linen white finish (includes TouchPad and TouchPad button board, but does not include TouchPad cable or TouchPad button board cable)
	<b>NOTE:</b> The TouchPad cable and TouchPad button board cable are included in the Cable Kit, spare part number 640422-001.
640461-001	Top cover in ruby red finish (includes TouchPad and TouchPad button board, but does not include TouchPad cable or TouchPad button board cable)
	<b>NOTE:</b> The TouchPad cable and TouchPad button board cable are included in the Cable Kit, spare part number 640422-001.
640463-001	Top cover in dark umber finish (includes TouchPad and TouchPad button board, but does not include TouchPad cable or TouchPad button board cable)
	<b>NOTE:</b> The TouchPad cable and TouchPad button board cable are included in the Cable Kit, spare part number 640422-001.
640926-001	Realtek RTL8191SE 802.11b/g/n 1x1 WiFi Adapter for use only with computer models equipped with an AMD processor
641438-001	Speaker cover for use only with computer models in dark umber and steel gray finish
641472-001	Display enclosure in Pacific blue finish
641473-001	Display enclosure in Sonoma red finish
641474-001	Display enclosure in pearl pink finish
641475-001	Display enclosure in butter gold finish
641476-001	Fan/heat sink assembly for use only with computer models equipped with an Intel processor and a graphics subsystem with UMA memory (includes replacement thermal material)
641477-001	Fan/heat sink assembly for use only with computer models equipped with an Intel processor and a graphics subsystem with 1024-MB discrete memory (includes replacement thermal material)
641478-001	Bluetooth module cable (for use only with computer models equipped with an Intel processor)
641479-001	15.6-in, HD, LED, BrightView display assembly in Pacific blue finish (includes webcam, two microphones, and wireless antenna transceivers and cables)
641480-001	15.6-in, HD, LED, BrightView display assembly in Sonoma red finish (includes webcam, two microphones, and wireless antenna transceivers and cables)
641481-001	15.6-in, HD, LED, BrightView display assembly in pearl pink finish (includes webcam, two microphones, and wireless antenna transceivers and cables)
641482-001	15.6-in, HD, LED, BrightView display assembly in butter gold finish (includes webcam, two microphones, and wireless antenna transceivers and cables)
641484-001	System board for use only with computer models equipped with an Intel dual core processor, the Intel HD6490 graphics subsystem, 1024-MB of discrete memory, and USB version 3.0 (includes replacement thermal material)
641485-001	System board for use only with computer models equipped with an Intel dual core processor, a graphics subsystem with UMA memory, and USB version 3.0 (includes replacement thermal material)

Spare part number	Description
641486-001	System board for use only with computer models equipped with an Intel quad core processor, the Intel HD6490 graphics subsystem, and 1024-MB of discrete memory (includes replacement thermal material)
641487-001	System board for use only with computer models equipped with an Intel dual core processor, the Intel HD6490 graphics subsystem, 1024-MB of discrete memory, and USB version 2.0 (includes replacement thermal material)
641488-001	System board for use only with computer models equipped with an Intel quad core processor, the Intel HD6770 graphics subsystem, and 1024-MB of discrete memory (includes replacement thermal material)
641489-001	System board for use only with computer models equipped with an Intel dual core processor, the Intel HD6770 graphics subsystem, and 1024-MB of discrete memory (includes replacement thermal material)
641490-001	System board for use only with computer models equipped with an Intel dual core processor, a graphics subsystem with UMA memory, and USB version 2.0 (includes replacement thermal material)
641491-001	System board for use only with computer models equipped with an Intel quad core processor and a graphics subsystem with UMA memory (includes replacement thermal material)
641492-001	Thermal Material Kit for use only with computer models equipped with an Intel processor and a graphics subsystem with UMA memory (includes replacement thermal paste and pads)
641493-001	Thermal Material Kit for use only with computer models equipped with an Intel processor and a graphics subsystem with 1024-MB of discrete memory (includes replacement thermal paste and pads)
641494-001	Top cover in Pacific blue finish (includes TouchPad and TouchPad button board, but does not include TouchPad cable or TouchPad button board cable)
	<b>NOTE:</b> The TouchPad cable and TouchPad button board cable are included in the Cable Kit, spare part number 640422-001.
641495-001	Top cover in Sonoma red finish (includes TouchPad and TouchPad button board, but does not include TouchPad cable or TouchPad button board cable)
	<b>NOTE:</b> The TouchPad cable and TouchPad button board cable are included in the Cable Kit, spare part number 640422-001.
641496-001	Top cover in pearl pink finish (includes TouchPad and TouchPad button board, but does not include TouchPad cable or TouchPad button board cable)
	<b>NOTE:</b> The TouchPad cable and TouchPad button board cable are included in the Cable Kit, spare part number 640422-001.
641497-001	Top cover in butter gold finish (includes TouchPad and TouchPad button board, but does not include TouchPad cable or TouchPad button board cable)
	<b>NOTE:</b> The TouchPad cable and TouchPad button board cable are included in the Cable Kit, spare part number 640422-001.
641672-001	320-GB, 7200-rpm, 7.0 mm hard drive (2.5-in, SATA, does not include hard drive bracket, hard drive connector cable, or screws)
641807-001	Display hinge covers
641808-001	DVD±RW and CD-RW Super Multi Double-Layer FX Combo Drive with LightScribe

<b>Spare part number</b>	<b>Description</b>
641809-001	DVD±RW and CD-RW Super Multi Double-Layer Combo Drive with LightScribe
641810-001	Display Rubber Kit
641824-001	Blu-ray ROM with LightScribe DVD ±R/RW Super Multi Double-Layer Drive (for use only with computer models equipped with an Intel processor)
641825-001	160-GB solid-state drive (for use only with computer models equipped with an Intel processor)
644362-001	Display Cable Kit for use only with computer models in dark umber and steel gray finish (includes display panel cable and webcam/microphone module cable)
644363-001	Keyboard in silver finish for use with all computer models in the United States (includes keyboard cable)
644363-031	Keyboard in silver finish for use with all computer models in the United Kingdom and Singapore (includes keyboard cable)
644363-041	Keyboard in silver finish for use with all computer models in Germany (includes keyboard cable)
644363-051	Keyboard in silver finish for use with all computer models in France (includes keyboard cable)
644363-061	Keyboard in silver finish for use with all computer models in Italy (includes keyboard cable)
644363-071	Keyboard in silver finish for use with all computer models in Spain (includes keyboard cable)
644363-121	Keyboard in silver finish for use with all computer models in Canada (includes keyboard cable)
644363-131	Keyboard in silver finish for use with all computer models in Portugal (includes keyboard cable)
644363-141	Keyboard in silver finish for use with all computer models in Turkey (includes keyboard cable)
644363-161	Keyboard in silver finish for use with all computer models in Latin America (includes keyboard cable)
644363-171	Keyboard in silver finish for use with all computer models in Saudi Arabia (includes keyboard cable)
644363-201	Keyboard in silver finish for use only with computer models equipped with an AMD processor in Brazil (includes keyboard cable)
644363-211	Keyboard in silver finish for use with all computer models in Hungary (includes keyboard cable)
644363-221	Keyboard in silver finish for use with all computer models in the Czech Republic and Slovakia (includes keyboard cable)
644363-251	Keyboard in silver finish for use with all computer models in Russia (includes keyboard cable)
644363-261	Keyboard in silver finish for use only with computer models equipped with an AMD processor in Bulgaria (includes keyboard cable)
644363-281	Keyboard in silver finish for use only with computer models equipped with an Intel processor in Thailand (includes keyboard cable)
644363-291	Keyboard in silver finish for use only with computer models equipped with an Intel processor in Japan (includes keyboard cable)
644363-A41	Keyboard in silver finish for use with all computer models in Belgium (includes keyboard cable)
644363-AB1	Keyboard in silver finish for use only with computer models equipped with an Intel processor in Taiwan (includes keyboard cable)

<b>Spare part number</b>	<b>Description</b>
644363-AD1	Keyboard in silver finish for use only with computer models equipped with an Intel processor in South Korea (includes keyboard cable)
644363-B31	Keyboard in silver finish for use with all computer models in the Netherlands (includes keyboard cable)
644363-BA1	Keyboard in silver finish for use with all computer models in Slovenia (includes keyboard cable)
644363-BB1	Keyboard in silver finish for use only with computer models equipped with an Intel processor in Israel (includes keyboard cable)
644363-BG1	Keyboard in silver finish for use with all computer models in Switzerland (includes keyboard cable)
644363-D61	Keyboard in silver finish for use only with computer models equipped with an Intel processor in India (includes keyboard cable)
644363-DH1	Keyboard in silver finish for use with all computer models in Denmark, Finland, and Norway (includes keyboard cable)
644363-DJ1	Keyboard in silver finish for use with all computer models in Greece (includes keyboard cable)
650796-001	Display enclosure in steel gray finish
650797-001	Fan/heat sink assembly for use only with computer models equipped with an Intel processor and a graphics subsystem with 2048-MB discrete memory (includes replacement thermal material)
650798-001	15.6-in, HD, LED, BrightView display assembly in steel gray finish (includes webcam, two microphones, and wireless antenna transceivers and cables)
650799-001	System board for use only with computer models equipped with an Intel quad core processor and the Intel HD6770 graphics subsystem with 2048-MB of discrete memory (includes replacement thermal material)
650800-001	System board for use only with computer models equipped with an Intel dual core processor and the Intel HD6770 graphics subsystem with 2048-MB of discrete memory (includes replacement thermal material)
650801-001	Thermal Material Kit for use only with computer models equipped with an Intel processor and a graphics subsystem with 2048-MB of discrete memory (includes replacement thermal paste and pads)
650802-001	Top cover in steel gray finish (includes TouchPad and TouchPad button board, but does not include TouchPad cable or TouchPad button board cable)
<b>NOTE:</b> The TouchPad cable and TouchPad button board cable are included in the Cable Kit, spare part number 640422-001.	
650847-001	Fan/heat sink assembly for use only with computer models equipped with an AMD A8, A6, or A4 processor and a graphics subsystem with UMA memory (includes replacement thermal material)
650848-001	Fan/heat sink assembly for use only with computer models equipped with an AMD A8, A6, or A4 processor and a graphics subsystem with discrete memory (includes replacement thermal material)
650849-001	System board for use only with computer models equipped with an AMD processor, the A60M chipset, and a graphics subsystem with UMA memory (includes replacement thermal material)

<b>Spare part number</b>	<b>Description</b>
650850-001	System board for use only with computer models equipped with an AMD processor, the A60M chipset, the HD6490 graphics subsystem chipset, and 512-MB of graphics subsystem discrete memory (includes replacement thermal material)
650851-001	System board for use only with computer models equipped with an AMD processor, the A60M chipset, the HD6750 graphics subsystem chipset, and 1024-MB of graphics subsystem discrete memory (includes replacement thermal material)
650852-001	System board for use only with computer models equipped with an AMD processor, the A70M chipset, and a graphics subsystem with UMA memory (includes replacement thermal material)
650853-001	System board for use only with computer models equipped with an AMD processor, the A70M chipset, the HD6490 graphics subsystem chipset, and 512-MB of graphics subsystem discrete memory (includes replacement thermal material)
650854-001	System board for use only with computer models equipped with an AMD processor, the A70M chipset, the HD6750 graphics subsystem chipset, and 1024-MB of graphics subsystem discrete memory (includes replacement thermal material)
653337-001	Intel Pentium B950 TJ85 2.10-GHz processor (2.0-MB L3 cache, dual core, 35 W; includes replacement thermal material)
653338-001	Intel Pentium B940 TJ85 2.00-GHz processor (2.0-MB L3 cache, dual core, 35 W; includes replacement thermal material)
653339-001	Intel Dual Core i3-2330M 2.20-GHz processor (3.0-MB L3 cache, 35 W; includes replacement thermal material)
653340-001	Intel Dual Core i3-2350M 2.30-GHz processor (3.0-MB L3 cache, 35 W; includes replacement thermal material)
653341-001	Intel Dual Core i5-2430M 2.40-GHz (SC turbo up to 3.00-GHz) processor (3.0-MB L3 cache, 35 W; includes replacement thermal material)
653348-001	AMD A4-3300M 2.50-GHz processor (1.9-GHz FSB, 4.0-MB L2 cache, dual core, 35 W; includes replacement thermal material)
653349-001	AMD A6-3400M 2.30-GHz processor (1.4-GHz FSB, 4.0-MB L2 cache, quad core, 35 W; includes replacement thermal material)
653350-001	AMD A8-3500M 2.40-GHz processor (1.5-GHz FSB, 4.0-MB L2 cache, quad core, 35 W; includes replacement thermal material)
653351-001	AMD E2-3000M 2.40-GHz processor (1.8-GHz FSB, 4.0-MB L2 cache, quad core, 35 W; includes replacement thermal material)
653356-001	AMD A4-3310MX 2.50-GHz processor (2.10-GHz FSB, 2.0-MB L2 cache, dual core, 45 W; includes replacement thermal material)
653357-001	AMD A6-3410MX 2.30-GHz processor (1.60-GHz FSB, 2.0-MB L2 cache, quad core, 45 W; includes replacement thermal material)
653358-001	AMD A8-3510MX 2.50-GHz processor (1.50-GHz FSB, 4.0-MB L2 cache, quad core, 45 W; includes replacement thermal material)
653364-001	AMD A8-3530MX 2.60-GHz processor, (1.90-GHz FSB, 4.0-MB L2 cache, quad core, 45 W; includes replacement thermal material)
653378-001	15.6-in, FHD, LED, AntiGlare display panel

<b>Spare part number</b>	<b>Description</b>
654103-001	15.6-in, FHD, LED, AntiGlare display assembly in dark umber finish (includes webcam, two microphones, and wireless antenna transceivers and cables)
654110-001	15.6-in, FHD, LED, AntiGlare display assembly in steel gray finish (includes webcam, two microphones, and wireless antenna transceivers and cables)
654111-001	Thermal Material Kit for use only with computer models equipped with an AMD A8, A6, A4, or E2 processor and a graphics subsystem with discrete memory (includes replacement thermal pads and paste)
654112-001	Thermal Material Kit for use only with computer models equipped with an AMD A8, A6, A4, or E2 processor and a graphics subsystem with UMA memory (includes replacement thermal pads and paste)
655792-001	Bluetooth module EDR v.4.0 (for use only with computer models equipped with an Intel processor, does not include cable)
655795-001	Atheros 9485GN 802.11b/g/n 1x1 WiFi and 3012 Bluetooth 4.0 Combo Adapter
656805-001	Display Cable Kit for use only with computer models equipped with a FHD display assembly (includes display panel cable and webcam/microphone module cable)
657325-001	Broadcom 4313GN 802.11b/g/n 1x1 WiFi and 20702 Bluetooth 4.0 Combo Adapter
659125-001	System board for use only with computer models equipped with an AMD processor, the RS880M chipset, and a graphics subsystem with UMA memory (includes replacement thermal material)
659126-001	System board for use only with computer models equipped with an AMD processor, the RS880MD chipset, the HD6470 graphics subsystem chipset, and 512-MB of graphics subsystem discrete memory (includes replacement thermal material)
659127-001	System board for use only with computer models equipped with an AMD processor, the RS880MD chipset, the HD6650 graphics subsystem chipset, and 1024-MB of graphics subsystem discrete memory (includes replacement thermal material)
659147-001	System board for use only with computer models equipped with an Intel dual core processor, the HD6490 chipset, a graphics subsystem with 1024-MB of discrete memory, and supports bus alive/chip off (BACO) and USB version 2.0 (includes replacement thermal material)
659148-001	System board for use only with computer models equipped with an Intel quad core processor, the HD6770 chipset, a graphics subsystem with 1024-MB of discrete memory, and supports bus alive/chip off (BACO) and USB version 3.0 (includes replacement thermal material)
659149-001	System board for use only with computer models equipped with an Intel quad core processor, the HD6490 chipset, a graphics subsystem with 1024-MB of discrete memory, and supports bus alive/chip off (BACO) and USB version 3.0 (includes replacement thermal material)
659150-001	System board for use only with computer models equipped with an Intel dual core processor, the HD6490 chipset, a graphics subsystem with 1024-MB of discrete memory, and supports bus alive/chip off (BACO) and USB version 3.0 (includes replacement thermal material)
659151-001	System board for use only with computer models equipped with an Intel dual core processor, the HD6770 chipset, a graphics subsystem with 1024-MB of discrete memory, and supports bus alive/chip off (BACO) and USB version 3.0 (includes replacement thermal material)
659965-001	Optical drive bay space saver
659966-001	DVD±RW and CD-RW FX Combo Drive
659967-001	DVD±RW and CD-RW Super Multi Double-Layer FX Combo Drive with LightScribe

<b>Spare part number</b>	<b>Description</b>
659998-001	System board for use only with computer models equipped with an Intel quad core processor, the HM65 chipset, and the HD6490 graphics subsystem with 1024-MB of discrete memory (includes replacement thermal material)
659999-001	System board for use only with computer models equipped with an Intel quad core processor, the HM65 chipset, and a graphics subsystem with UMA memory (includes replacement thermal material)

# 4 Removal and replacement procedures

## Preliminary replacement requirements

### Tools required

You will need the following tools to complete the removal and replacement procedures:

- Flat-bladed screwdriver
- Magnetic screwdriver
- Phillips P0 and P1 screwdrivers

### Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.

 **NOTE:** As you remove each subassembly from the computer, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

### Plastic parts

 **CAUTION:** Using excessive force during disassembly and reassembly can damage plastic parts. Use care when handling the plastic parts. Apply pressure only at the points designated in the maintenance instructions.

### Cables and connectors

 **CAUTION:** When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

Cables must be handled with extreme care to avoid damage. Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed in such a way that they cannot be caught or snagged by parts being removed or replaced. Handle flex cables with extreme care; these cables tear easily.

## Drive handling

**⚠ CAUTION:** Drives are fragile components that must be handled with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.

Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.

Before removing a diskette drive or optical drive, be sure that a diskette or disc is not in the drive and be sure that the optical drive tray is closed.

Handle drives on surfaces covered with at least one inch of shock-proof foam.

Avoid dropping drives from any height onto any surface.

After removing a hard drive, an optical drive, or a diskette drive, place it in a static-proof bag.

Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.

Avoid exposing a drive to temperature extremes or liquids.

If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging and label the package "FRAGILE."

## Grounding guidelines

### Electrostatic discharge damage

Electronic components are sensitive to electrostatic discharge (ESD). Circuitry design and structure determine the degree of sensitivity. Networks built into many integrated circuits provide some protection, but in many cases, ESD contains enough power to alter device parameters or melt silicon junctions.

A discharge of static electricity from a finger or other conductor can destroy static-sensitive devices or microcircuitry. Even if the spark is neither felt nor heard, damage may have occurred.

An electronic device exposed to ESD may not be affected at all and can work perfectly throughout a normal cycle. Or the device may function normally for a while, then degrade in the internal layers, reducing its life expectancy.

**⚠ CAUTION:** To prevent damage to the computer when you are removing or installing internal components, observe these precautions:

Keep components in their electrostatic-safe containers until you are ready to install them.

Before touching an electronic component, discharge static electricity by using the guidelines described in this section.

Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.

If you remove a component, place it in an electrostatic-safe container.

The following table shows how humidity affects the electrostatic voltage levels generated by different activities.

**⚠ CAUTION:** A product can be degraded by as little as 700 V.

**Typical electrostatic voltage levels**

Event	10%	40%	55%
Walking across carpet	35,000 V	15,000 V	7,500 V
Walking across vinyl floor	12,000 V	5,000 V	3,000 V
Motions of bench worker	6,000 V	800 V	400 V
Removing DIPS from plastic tube	2,000 V	700 V	400 V
Removing DIPS from vinyl tray	11,500 V	4,000 V	2,000 V
Removing DIPS from Styrofoam	14,500 V	5,000 V	3,500 V
Removing bubble pack from PCB	26,500 V	20,000 V	7,000 V
Packing PCBs in foam-lined box	21,000 V	11,000 V	5,000 V

## Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

## Workstation guidelines

Follow these grounding workstation guidelines:

- Cover the workstation with approved static-shielding material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use conductive field service tools, such as cutters, screwdrivers, and vacuums.
- When fixtures must directly contact dissipative surfaces, use fixtures made only of static-safe materials.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and Styrofoam.
- Handle ESD-sensitive components, parts, and assemblies by the case or PCM laminate. Handle these items only at static-free workstations.
- Avoid contact with pins, leads, or circuitry.
- Turn off power and input signals before inserting or removing connectors or test equipment.

## Equipment guidelines

Grounding equipment must include either a wrist strap or a foot strap at a grounded workstation.

- When seated, wear a wrist strap connected to a grounded system. Wrist straps are flexible straps with a minimum of one megohm  $\pm 10\%$  resistance in the ground cords. To provide proper ground, wear a strap snugly against the skin at all times. On grounded mats with banana-plug connectors, use alligator clips to connect a wrist strap.
- When standing, use foot straps and a grounded floor mat. Foot straps (heel, toe, or boot straps) can be used at standing workstations and are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use foot straps on both feet with a minimum of one megohm resistance between the operator and ground. To be effective, the conductive must be worn in contact with the skin.

The following grounding equipment is recommended to prevent electrostatic damage:

- Antistatic tape
- Antistatic smocks, aprons, and sleeve protectors
- Conductive bins and other assembly or soldering aids
- Nonconductive foam
- Conductive tabletop workstations with ground cords of one megohm resistance
- Static-dissipative tables or floor mats with hard ties to the ground
- Field service kits
- Static awareness labels
- Material-handling packages
- Nonconductive plastic bags, tubes, or boxes
- Metal tote boxes
- Electrostatic voltage levels and protective materials

The following table lists the shielding protection provided by antistatic bags and floor mats.

Material	Use	Voltage protection level
Antistatic plastics	Bags	1,500 V
Carbon-loaded plastic	Floor mats	7,500 V
Metallized laminate	Floor mats	5,000 V


# Component replacement procedures

This chapter provides removal and replacement procedures.

There are as many as 88 screws that must be removed, replaced, or loosened when servicing the computer. Make special note of each screw and screw lock size and location during removal and replacement.

## Service tag

When ordering parts or requesting information, provide the computer serial number and model number provided on the service tag.

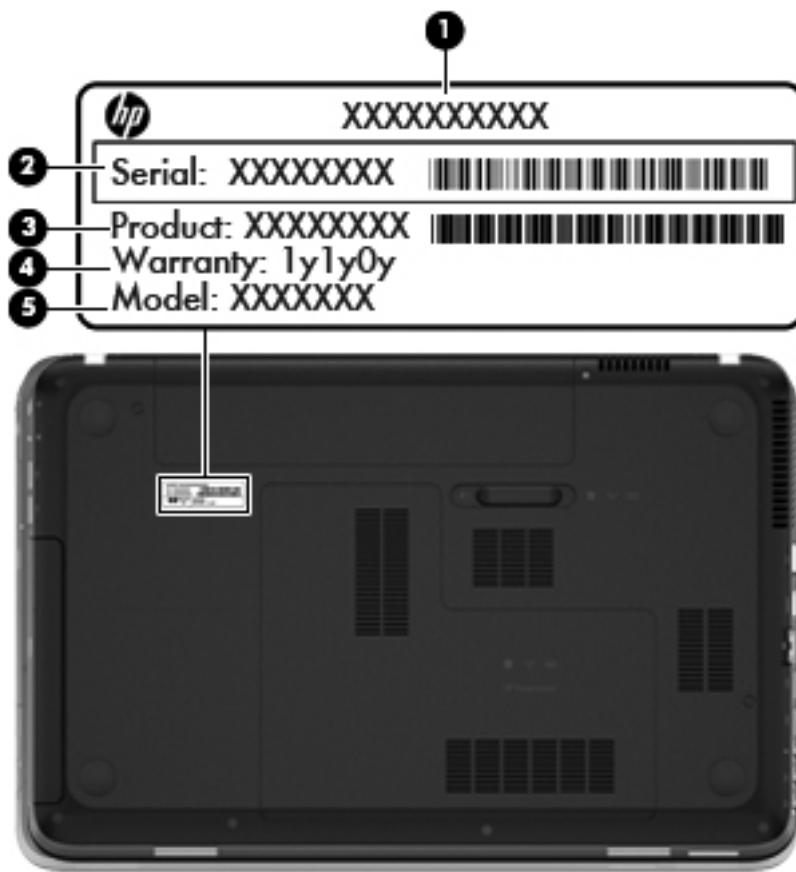


Item	Component	Description
(1)	Product name	This is the product name affixed to the front of the computer.
(2)	Serial number (s/n)	This is an alphanumeric identifier that is unique to each product.
(3)	Part number/Product number (p/n)	This number provides specific information about the product's hardware components. The part number helps a service technician determine what components and parts are needed.

<b>Item</b>	<b>Component</b>	<b>Description</b>
(4)	Warranty period	This number describes the duration of the warranty period for the computer.
(5)	Model description	This is the alphanumeric identifier used to locate documents, drivers, and support for the computer.

## Computer feet

the computer feet are adhesive-backed rubber pads. There are 4 rubber feet that attach to the base enclosure in the locations illustrated below.

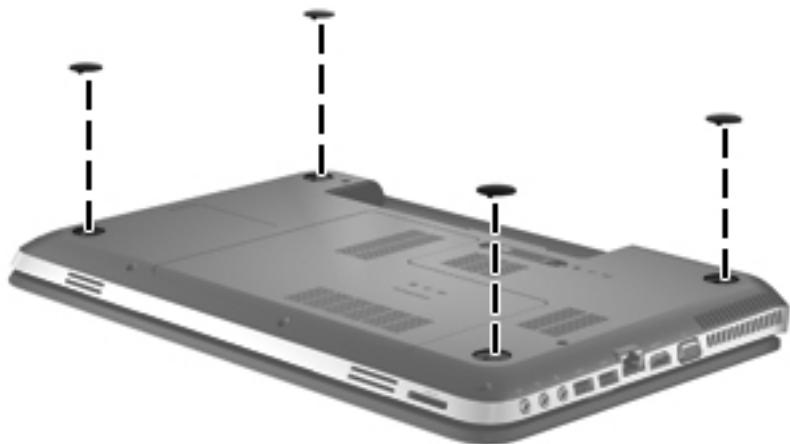

## Battery


Description	Spare part number
9-cell, 100-Whr, 3.00-Ah Li-ion battery	636631-001
6-cell, 62-Whr, 2.80-Ah Li-ion battery	593562-001
6-cell, 55-Whr, 2.55-Ah Li-ion battery	593554-001

Before disassembling the computer, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.

Remove the battery:

1. Slide the battery release latch **(1)** to release the battery.
2. Pivot the front edge of the battery **(2)** up and back.
3. Remove the battery **(3)** from the computer.

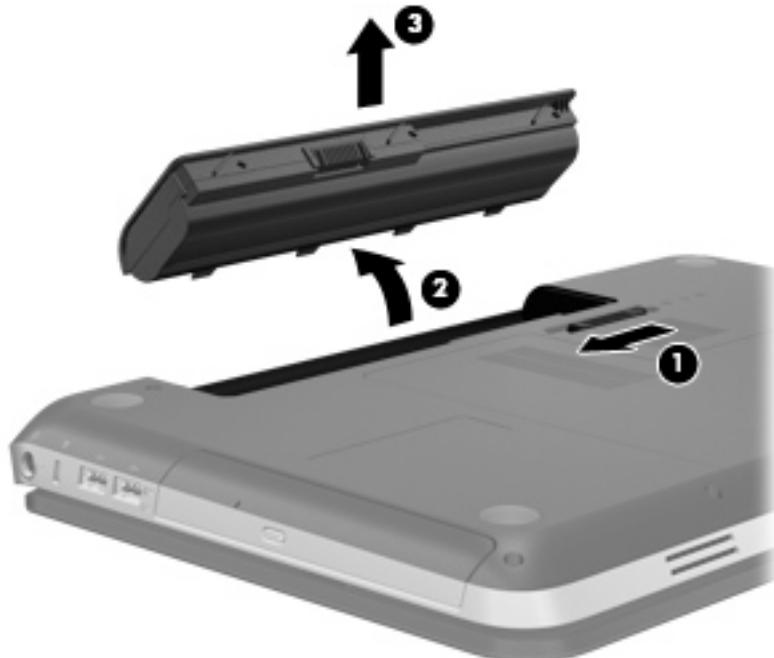

To insert the battery:

1. Align the tabs on the rear edge of the battery with the notches on the rear edge of the battery bay.
2. Pivot the front edge of the battery down into the battery bay until it is seated. (The battery release latch will automatically lock into place.)

## Optical drive



**NOTE:** The optical drive spare part kit includes a bezel and bracket.

Description	Spare part number
DVD±RW and CD-RW Super Multi Double-Layer FX Combo Drive with LightScribe	641808-001
DVD±RW and CD-RW FX Combo Drive	659966-001
DVD±RW and CD-RW Super Multi Double-Layer FX Combo Drive with LightScribe	659967-001
Blu-ray ROM with LightScribe DVD ±R/RW Super Multi Double-Layer Drive for use only with computer models equipped with an Intel processor	641824-001
DVD±RW and CD-RW Super Multi Double-Layer Combo Drive with LightScribe	641809-001
<b>Optical drive bay space saver</b> (not illustrated)	659965-001

Before removing the optical drive, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 59](#)).

Remove the optical drive:


1. Slide the service cover release latch to release the service cover.




2. Lift the rear edge of the service cover up and forward until it rests at an angle.



3. Remove the service cover. The service cover is available in the Plastics Kit, spare part number 640444-001.
4. Remove the Phillips PM2.5x4.0 screw that secures the optical drive to the computer.

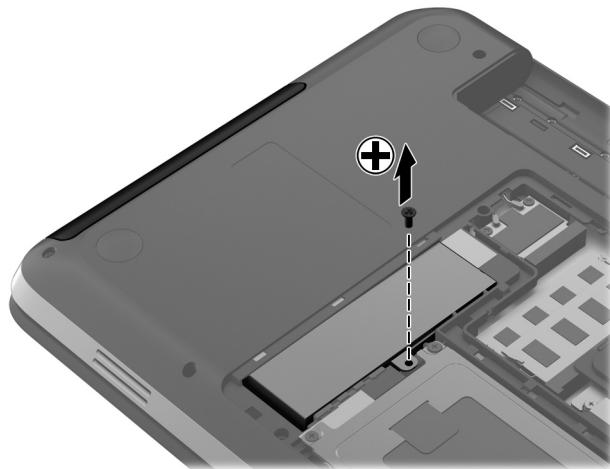


5. Remove the optical drive by sliding it out of the optical drive bay.

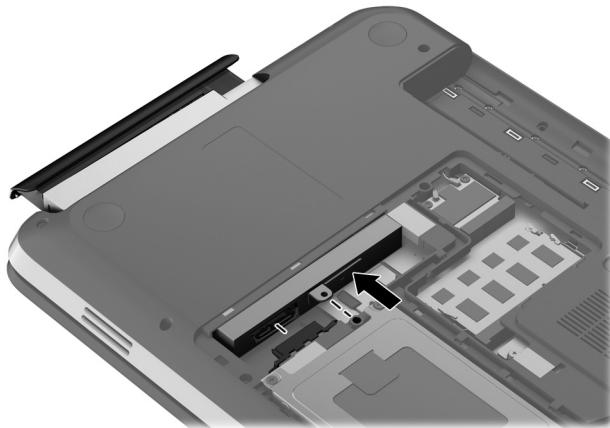

6. If it is necessary to replace the optical drive bracket, position the optical drive with the rear panel toward you.

- 7.** Remove the two Phillips PM2.0x4.0 screws **(1)** that secure the bracket to the optical drive.
- 8.** Remove the optical drive bracket **(2)**.

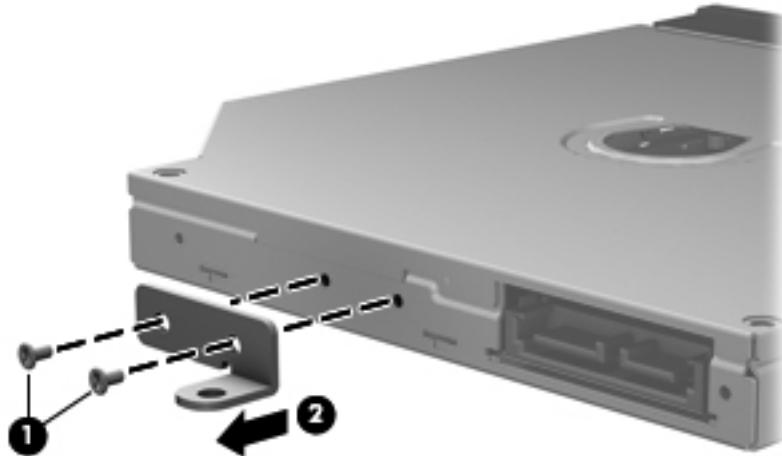

Reverse this procedure to reassemble and install the optical drive.

## Hard drive

**NOTE:** The hard drive and solid-state drive spare part kit does not include the bracket, connector cable, or screws. The bracket and screws are included in the Hard Drive Hardware Kit, spare part number 640428-001. The connector cable is included in the Cable Kit, spare part number 640422-001.

Description	Spare part number
1-TB, 5400-rpm, 12.7 mm	638974-001
750-GB, 7200-rpm, 9.5 mm	633252-001
750-GB, 5400-rpm, 9.5 mm	634250-001
640-GB, 7200-rpm, 9.5 mm	621046-001
500-GB, 7200-rpm, 9.5 mm	608218-001
320-GB, 7200-rpm, 7.0 mm	641672-001 and 634862-001
250-GB, 7200-rpm, 7.0 mm	635225-001 and 634861-001
160-GB solid-state drive (for use only with computer models equipped with an Intel processor)	641825-001


Before removing the hard drive, follow these steps:

- 1.** Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
- 2.** Disconnect all external devices connected to the computer.

- 3.** Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
- 4.** Remove the battery (see [Battery on page 59](#)).
- 5.** Remove the service cover (see [Optical drive on page 60](#)).


Remove the hard drive:

- 1.** Disconnect the hard drive connector cable **(1)** from the system board.
- 2.** Remove the four Phillips PM2.5×4.0 screws **(2)** that secure the hard drive to the computer.
- 3.** Use the Mylar tab built into the hard drive bracket to lift and remove the hard drive **(3)** from the computer.

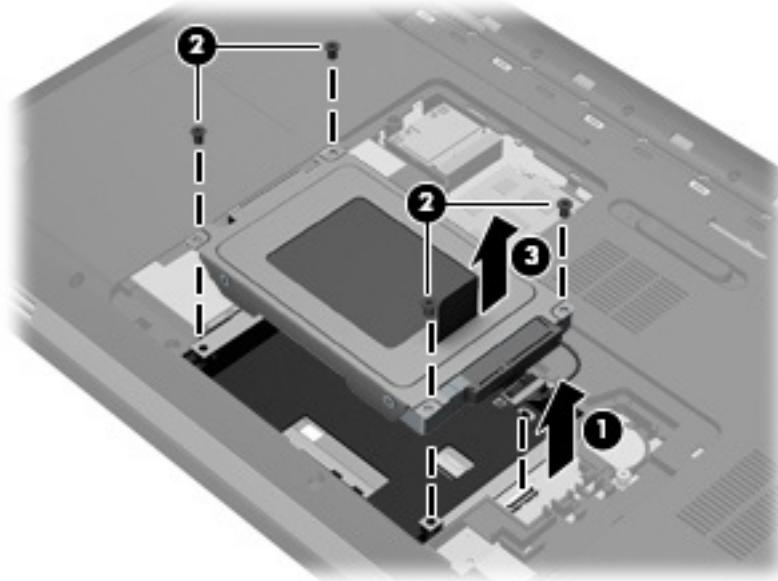

- 4.** If it is necessary to replace the hard drive connector cable or hard drive bracket:
  - a.** Remove the four Phillips PM3.0×4.0 screws **(1)** that secure the hard drive bracket to the hard drive.
  - b.** Remove the hard drive bracket **(2)** from the hard drive.

- c. Disconnect the hard drive connector cable (3) from the hard drive.

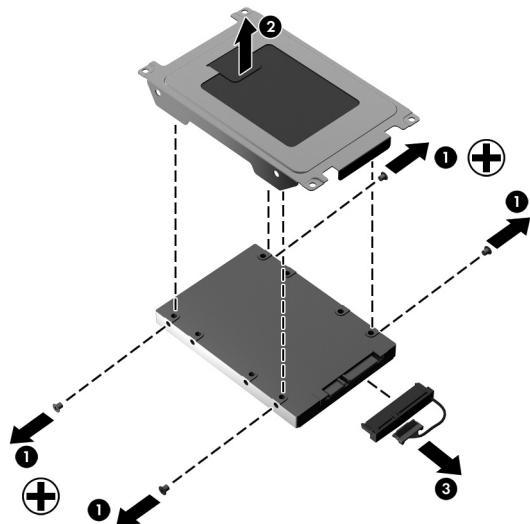

Reverse this procedure to reassemble and install the hard drive.

## RTC battery


Description	Spare part number
RTC battery	608771-001

Before removing the RTC battery, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 59](#)).
5. Remove the service cover (see [Optical drive on page 60](#)).

Remove the RTC battery:

- ▲ Remove the RTC battery from the socket on the system board.

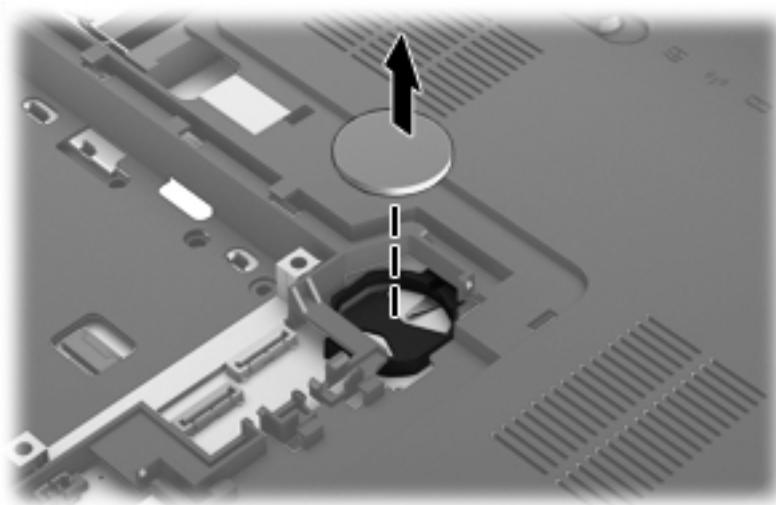

Reverse this procedure to install the RTC battery.

## Memory module


Description	Spare part number
8-GB (DDR3, 10600, 1333-MHz)	634091-001
4-GB (DDR3, 10600, 1333-MHz)	621569-001
2-GB (DDR3, 10600, 1333-MHz)	621565-001
1-GB (DDR3, 10600, 1333-MHz)	639736-001

Before removing a memory module, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 59](#)).
5. Remove the service cover (see [Optical drive on page 60](#)).

Remove the memory module:

1. Spread the retaining tabs **(1)** on each side of the memory module slot to release the memory module. (The memory module tilts up.)
2. Remove the memory module **(2)** by pulling it away from the slot at an angle.

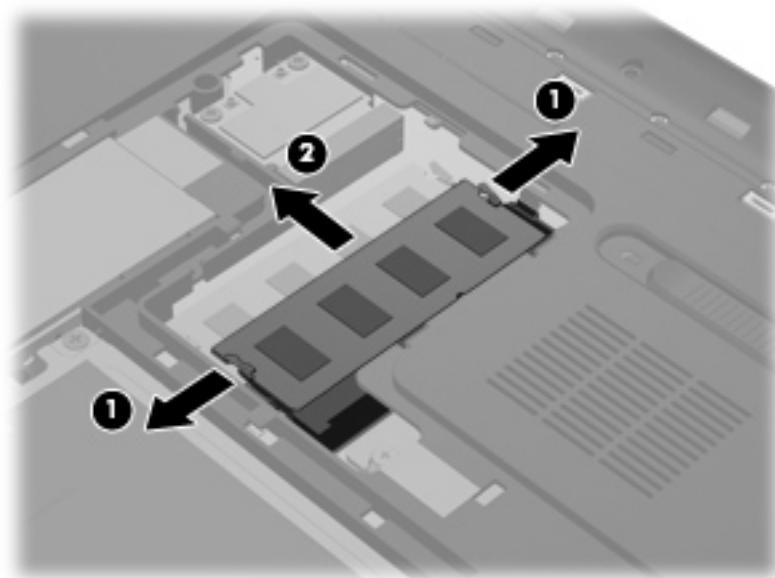

Reverse this procedure to install a memory module.

## WLAN module

Description	Spare part number
For use on all computer models:	
Atheros 9485GN 802.11b/g/n 1x1 WiFi and 3012 Bluetooth 4.0 Combo Adapter	655795-001
Broadcom 4313 802.11b/g/n 1x1 WiFi and 2070 Bluetooth 2.1+EDR Combo adapter (BT3.0+HS ready)	600370-001
Broadcom 4313 802.11b/g/n 1x1 WiFi Adapter	593836-001
Broadcom 4313GN 802.11b/g/n 1x1 WiFi and 20702 Bluetooth 4.0 Combo Adapter	657325-001
Ralink RT3090BC4 802.11b/g/n 1x1 WiFi and Bluetooth 2.1+EDR Combo Adapter (BT3.0+HS ready)	630705-001
Ralink 5390GN 802.11b/g/n 1x1 WiFi Adapter	630703-001
For use only with computer models equipped with an AMD processor:	
Atheros 9285G 802.11b/g/n 1x1 WiFi Adapter	605560-005
Atheros AR8002WB-1NGB 802.11b/g/n 1x1 WiFi and Bluetooth 2.1+EDR Combo Adapter (BT3.0+HS ready)	593127-001
Realtek RTL8191SE 802.11b/g/n 1x1 WiFi Adapter	640926-001
Realtek 8188BC8 802.11a/b/g/n 2x2 WiFi and Bluetooth 3.0+HS Combo Adapter	602993-001
For use only with computer models equipped with an Intel processor:	
Intel Centrino Advanced-N 6230	631956-001
Intel Centrino Wireless-N 1000	593530-001
Intel Centrino Wireless-N + WiMAX 6150	633817-001

**CAUTION:** To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.


Before removing the WLAN module, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 59](#)).
5. Remove the service cover (see [Optical drive on page 60](#)).


Remove the WLAN module:

1. Disconnect the WLAN antenna cables from the terminals on the WLAN module.


** NOTE:** The #1/black WLAN antenna cable is connected to the WLAN module Main terminal. The #2/gray WLAN antenna cable is connected to the WLAN module Aux terminal.

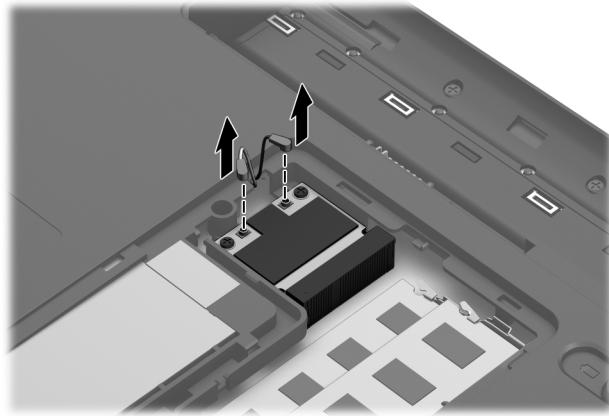


2. Remove the two Phillips PM2.0x4.0 screws that secure the WLAN module to the system board. (The WLAN module tilts up.)

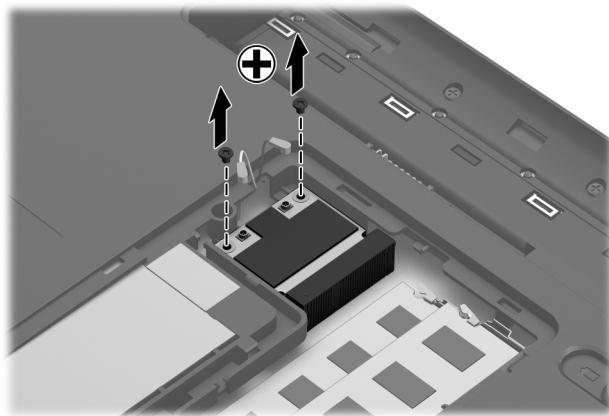

3. Remove the WLAN module by pulling the module away from the slot at an angle.

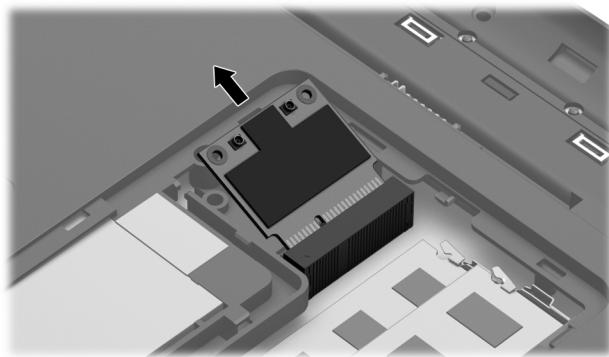

 **NOTE:** If the WLAN antennas are not connected to the terminals on the WLAN module, the protective sleeves must be installed on the antenna connectors, as shown in the following illustration.

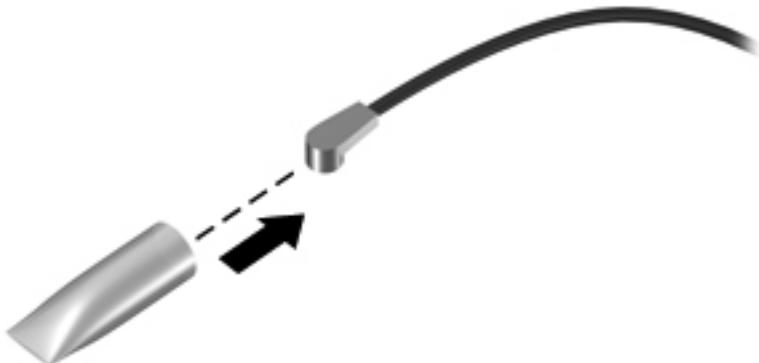

Reverse this procedure to install the WLAN module.

## Keyboard

 **NOTE:** The keyboard spare part kit includes a keyboard cable.

Description	Spare part number	Description	Spare part number
Keyboard in black finish:			
For use only with computer models equipped with an AMD processor in Brazil	640436-201	For use only with computer models equipped with an Intel processor in Latin America	640436-161
For use only with computer models equipped with an AMD processor in Bulgaria	640436-261	For use only with computer models equipped with an Intel processor in South Korea	640436-AD1
For use only with computer models equipped with an Intel processor in India	640436-D61	For use only with computer models equipped with an Intel processor in Taiwan	640436-AB1
For use only with computer models equipped with an Intel processor in Israel	640436-BB1	For use only with computer models equipped with an Intel processor in Thailand	640436-281
For use only with computer models equipped with an Intel processor in Japan	640436-291	For use with all computer models in the Netherlands	640436-B31
For use with all computer models in Belgium	640436-A41	For use with all computer models in Portugal	640436-131
For use with all computer models in Canada	640436-121	For use with all computer models in Russia	640436-251
For use with all computer models in the Czech Republic and Slovakia	640436-221	For use with all computer models in Saudi Arabia	640436-171
For use with all computer models in Denmark, Finland, and Norway	640436-DH1	For use with all computer models in Slovenia	640436-BA1
For use with all computer models in France	640436-051	For use with all computer models in Spain	640436-071
For use with all computer models in Germany	640436-041	For use with all computer models in Switzerland	640436-BG1
For use with all computer models in Greece	640436-DJ1	For use with all computer models in Turkey	640436-141
For use with all computer models in Hungary	640436-211	For use with all computer models in the United Kingdom and Singapore	640436-031
For use with all computer models in Italy	640436-061	For use with all computer models in the United States	640436-001
Keyboard in silver finish:			
For use only with computer models equipped with an AMD processor in Brazil	644363-201	For use only with computer models equipped with an Intel processor in Latin America	644363-161


<b>Description</b>	<b>Spare part number</b>	<b>Description</b>	<b>Spare part number</b>
For use only with computer models equipped with an AMD processor in Bulgaria	644363-261	For use only with computer models equipped with an Intel processor in South Korea	644363-AD1
For use only with computer models equipped with an Intel processor in India	644363-D61	For use only with computer models equipped with an Intel processor in Taiwan	644363-AB1
For use only with computer models equipped with an Intel processor in Israel	644363-BB1	For use only with computer models equipped with an Intel processor in Thailand	644363-281
For use only with computer models equipped with an Intel processor in Japan	644363-291	For use with all computer models in the Netherlands	644363-B31
For use with all computer models in Belgium	644363-A41	For use with all computer models in Portugal	644363-131
For use with all computer models in Canada	644363-121	For use with all computer models in Russia	644363-251
For use with all computer models in the Czech Republic and Slovakia	644363-221	For use with all computer models in Saudi Arabia	644363-171
For use with all computer models in Denmark, Finland, and Norway	644363-DH1	For use with all computer models in Slovenia	644363-BA1
For use with all computer models in France	644363-051	For use with all computer models in Spain	644363-071
For use with all computer models in Germany	644363-041	For use with all computer models in Switzerland	644363-BG1
For use with all computer models in Greece	644363-DJ1	For use with all computer models in Turkey	644363-141
For use with all computer models in Hungary	644363-211	For use with all computer models in the United Kingdom and Singapore	644363-031
For use with all computer models in Italy	644363-061	For use with all computer models in the United States	644363-001

Before removing the keyboard, follow these steps:


- 1.** Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
- 2.** Disconnect all external devices connected to the computer.
- 3.** Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
- 4.** Remove the battery (see [Battery on page 59](#)).
- 5.** Remove the service cover (see [Optical drive on page 60](#)).

Remove the keyboard:

1. Remove the Phillips PM2.5×4.0 screw that secures the keyboard to the computer.

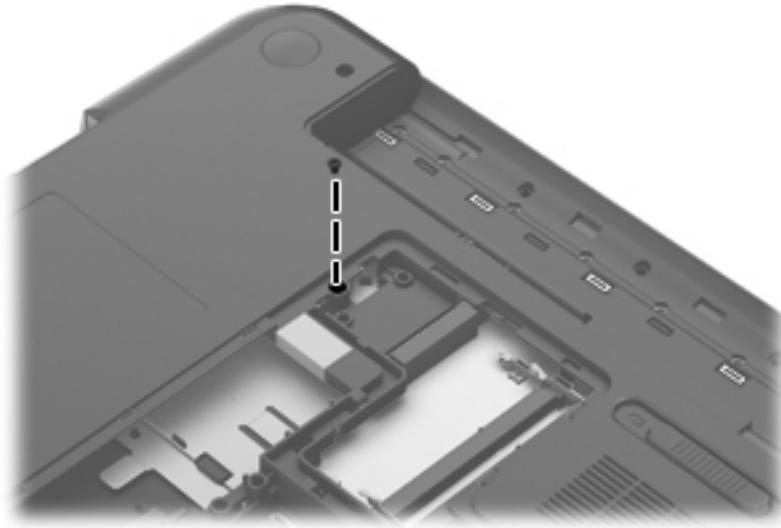

2. Rest the computer on its left side.
3. Open the computer.
4. Insert a screw driver or similar thin tool into the keyboard screw hole, and then press on the back of the keyboard until the keyboard disengages from the computer.

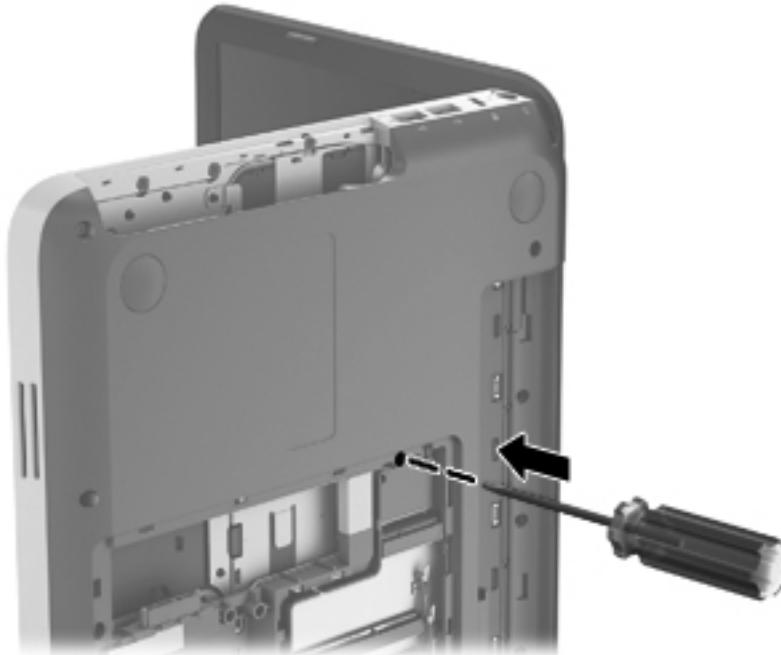


5. Turn the computer right-side up with the front toward you.

6. Lift the rear edge (1) of the keyboard, and then slide the keyboard (2) back until the keyboard cable is accessible.



7. Release the zero insertion force (ZIF) connector (1) to which the keyboard cable is attached, and then disconnect the keyboard cable (2) from the system board.

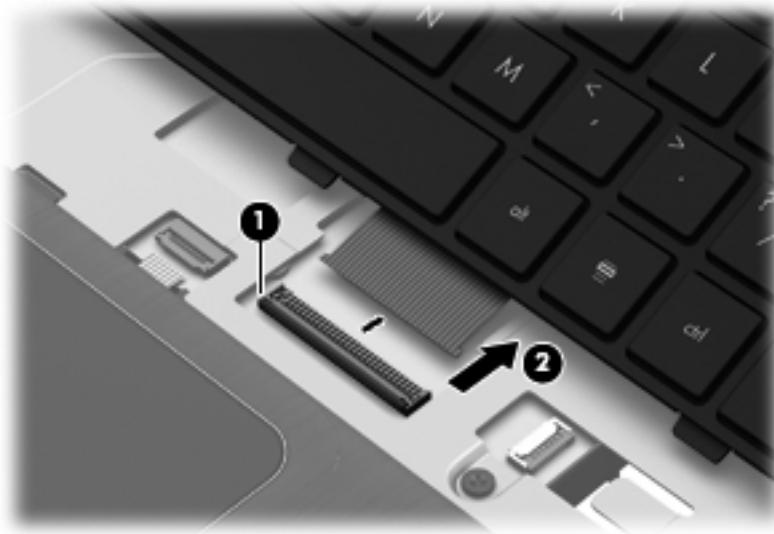

8. Remove the keyboard.

Reverse this procedure to install the keyboard.

## Top cover

 **NOTE:** The top cover spare part kit includes the TouchPad and TouchPad button board, but does not include the TouchPad cable or TouchPad button board cable. The TouchPad cable and TouchPad button board cable are included in the Cable Kit, spare part number 640422-001.

Description	Spare part number
In butter gold finish	641497-001
In dark umber finish	640463-001
In espresso black finish	640458-001
In linen white finish	640460-001
In Pacific blue finish	641494-001
In pearl pink finish	641496-001
In ruby red finish	640461-001
In Sonoma red finish	641495-001
In steel gray finish	650802-001

Before removing the top cover, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 59](#)), and then remove the following components:
  - Optical drive (see [Optical drive on page 60](#))
  - Hard drive (see [Hard drive on page 62](#))
  - Keyboard (see [Keyboard on page 70](#))

 **NOTE:** When replacing the top cover, be sure that the power button board and cable (see [Power button board on page 77](#)) and fingerprint reader board and cable (see [Fingerprint reader board on page 78](#)) are removed from the defective top cover and installed on the replacement top cover.

Remove the top cover:


1. Close the computer.
2. Turn the computer upside down, with the front toward you.

3. Remove the seven Phillips PM2.5×10.0 screws that secure the top cover to the computer.

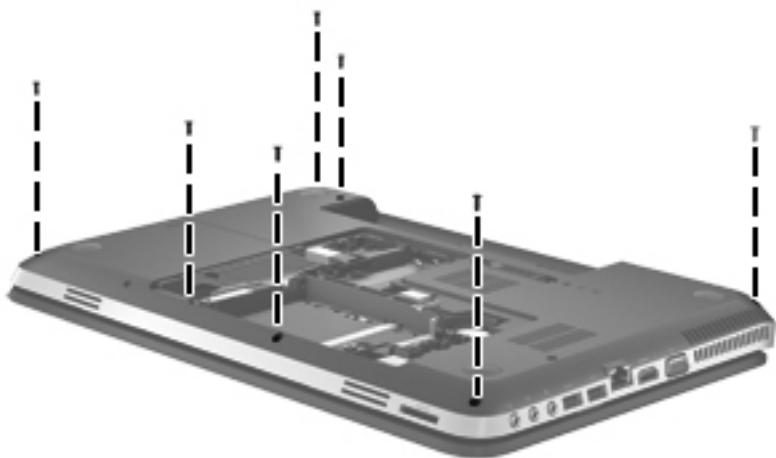

4. Remove the following screws that secure the top cover to the computer:

- Three Phillips PM2.0×3.0 screws **(1)** in the optical drive bay
- Three Phillips PM2.5×6.0 screws **(2)**
- One Phillips PM2.0×4.0 screw **(3)** in the hard drive bay

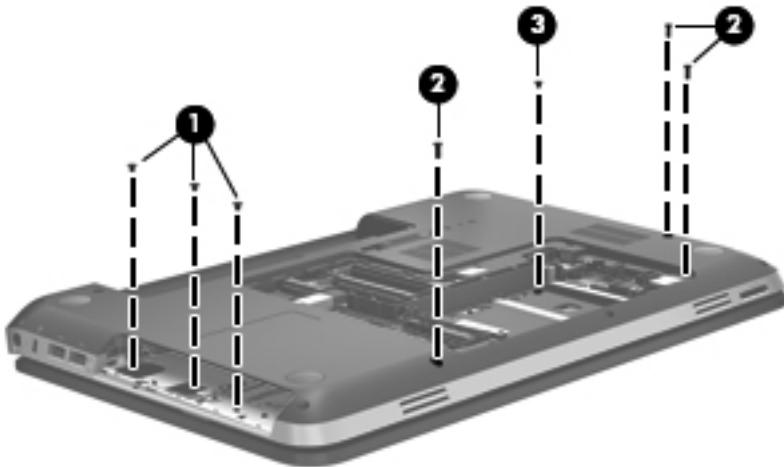


5. Turn the computer right-side up, with the front toward you.
6. Open the computer.


- 7.** Release the ZIF connectors to which the following cables are attached, and then disconnect the cables from the system board:

 **NOTE:** The power button board cable, TouchPad button board cable, and fingerprint reader board cable are included in the Cable Kit, spare part number 640422-001.

- Power button board cable **(1)**
- TouchPad button board cable **(2)**
- Fingerprint reader board cable **(3)** (select models only)

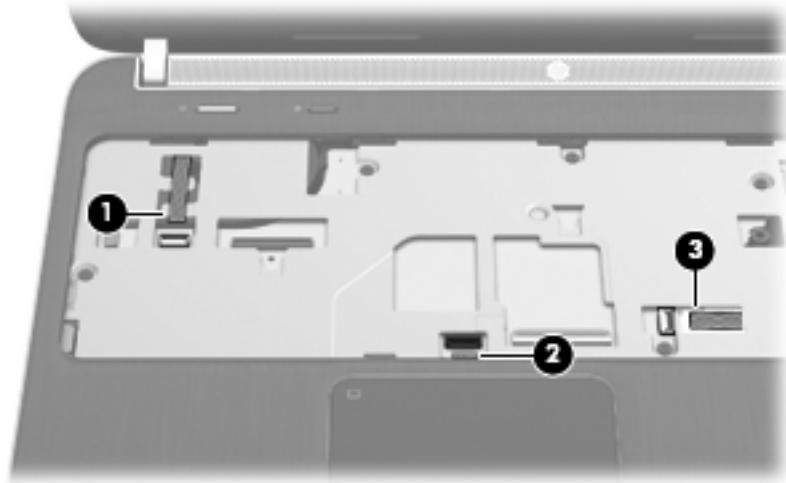


- 8.** Remove the seven Phillips PM2.5×6.0 screws that secure the top cover to the computer.

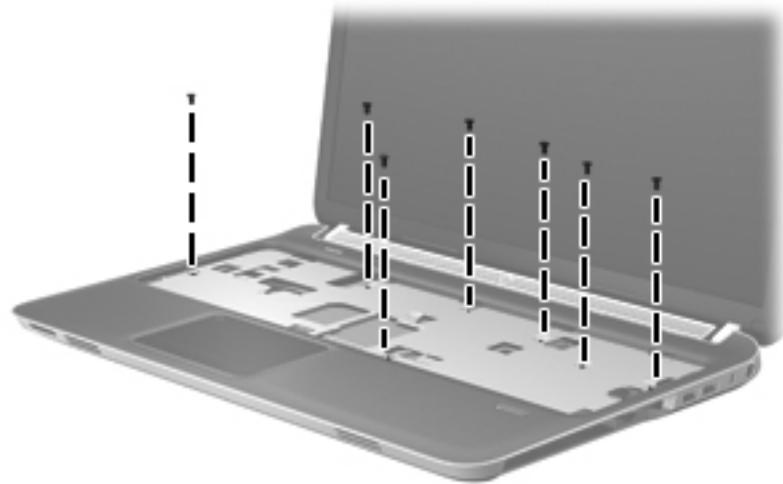

- 9.** Lift the rear edge of the top cover **(1)** until the left and right sides disengage from the base enclosure.

- 10.** Remove the top cover **(2)**.

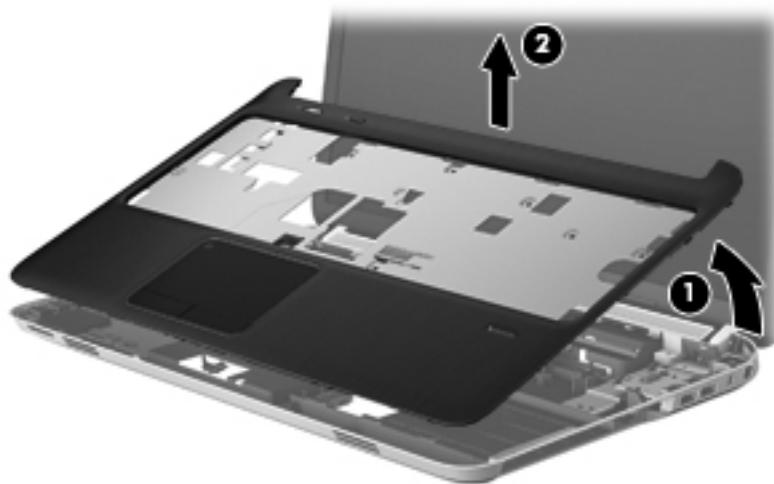

Reverse this procedure to install the top cover.

## Power button board

Description	Spare part number
Power button board (does not include cable)	640439-001

**NOTE:** The power button board cable is not included in the power button board spare part kit. The power button board cable is included in the Cable Kit, spare part number 640422-001.


Before removing the power button board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 59](#)), and then remove the following components:
  - Optical drive (see [Optical drive on page 60](#))
  - Hard drive (see [Hard drive on page 62](#))
  - Keyboard (see [Keyboard on page 70](#))
  - Top cover (see [Top cover on page 74](#))

Remove the power button board:

1. Turn the top cover upside down, with the front toward you.
2. Release the power button board cable from the clip **(1)** built into the top cover.

3. Remove the three Phillips PM2.0×4.0 screws **(2)** that secure the power button board to the top cover.
4. Remove the power button board and cable **(3)**.

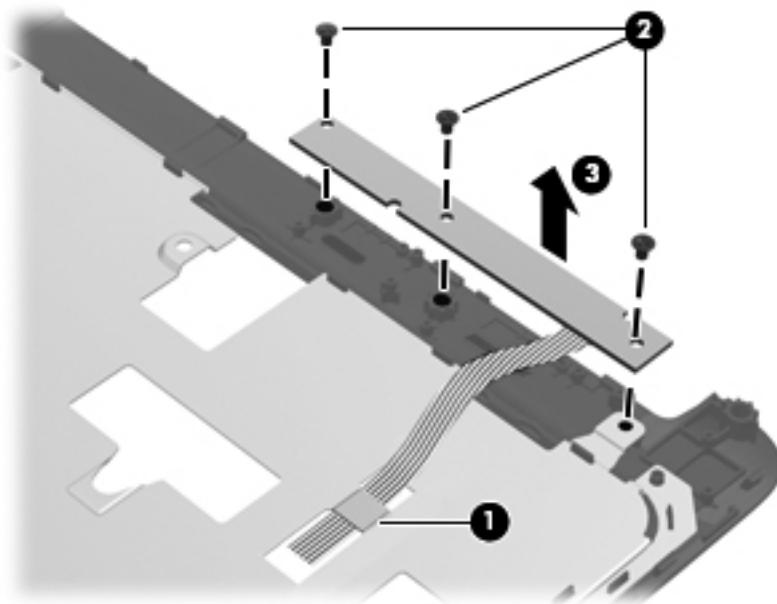

Reverse this procedure to install the power button board and cable.

## Fingerprint reader board

Description	Spare part number
Fingerprint reader board (select models only, includes bracket, but does not include cable)	640427-001

**NOTE:** The fingerprint reader board cable is not included in the fingerprint reader board spare part kit. The fingerprint reader board cable is included in the Cable Kit, spare part number 640422-001.


Before removing the fingerprint reader board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 59](#)), and then remove the following components:
  - Optical drive (see [Optical drive on page 60](#))
  - Hard drive (see [Hard drive on page 62](#))

- Keyboard (see [Keyboard on page 70](#))
- Top cover (see [Top cover on page 74](#))

Remove the fingerprint reader board and cable:

1. Turn the top cover upside down, with the front toward you.
2. Release the fingerprint reader board cable **(1)** from the clips **(2)** built into the top cover.
3. Remove the two Phillips PM2.0x4.0 screws **(3)** that secure the fingerprint reader board and bracket to the top cover.
4. Remove the fingerprint reader board bracket **(4)** and the fingerprint reader board **(5)**.

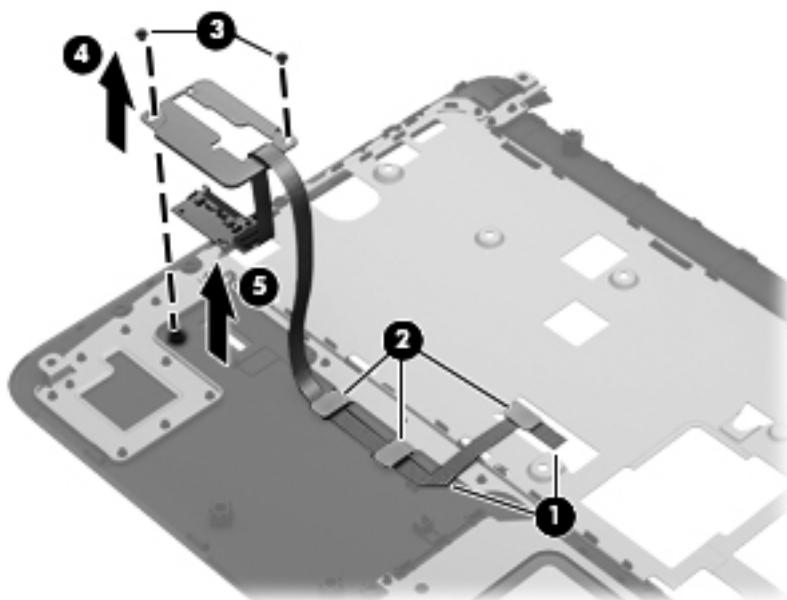

Reverse this procedure to install the fingerprint reader board and cable.

## Bluetooth module

 **NOTE:** This section applies only to computer models equipped with an Intel processor.


Description	Spare part number
EDR v.4.0	655792-001
EDR v.3.0	537921-001
<b>NOTE:</b> The Bluetooth module spare part kit does not include a Bluetooth module cable. The Bluetooth module cable is available in the Cable Kit, spare part number 640422-001.	

Before removing the Bluetooth module and cable, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 59](#)), and then remove the following components:
  - Optical drive (see [Optical drive on page 60](#))
  - Hard drive (see [Hard drive on page 62](#))
  - Keyboard (see [Keyboard on page 70](#))
  - Top cover (see [Top cover on page 74](#))


Remove the Bluetooth module and cable:

1. Disconnect the Bluetooth module cable **(1)** from the system board.
2. Release the Bluetooth module cable from the clips **(2)** and the routing channel built into the front speaker assembly.
3. Release the Bluetooth module **(3)** from the clip built into the front speaker assembly.

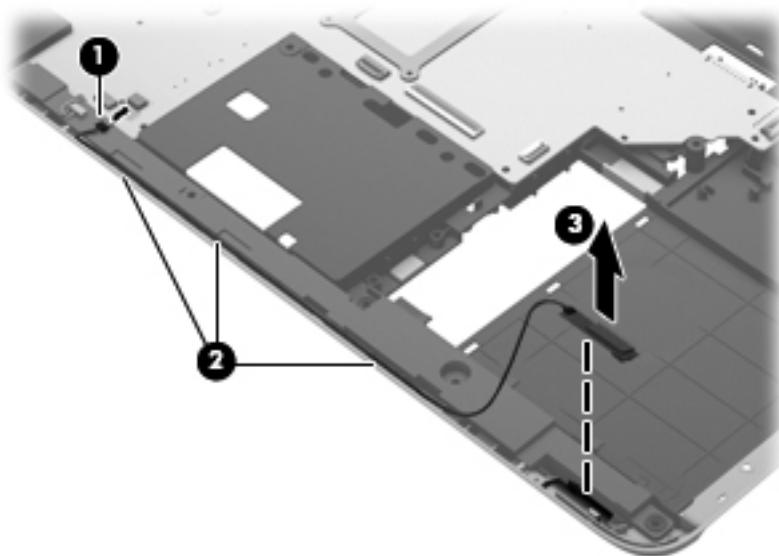

4. Remove the Bluetooth module and the Bluetooth module cable.

5. If it is necessary to replace the Bluetooth module cable, disconnect the cable from the Bluetooth module and replace it.

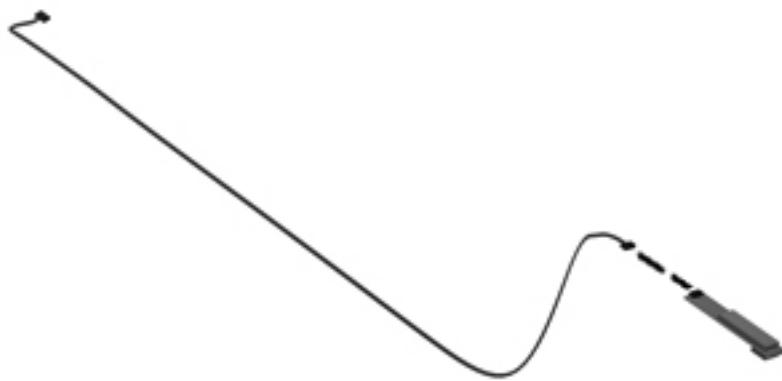

Reverse this procedure to install the Bluetooth module and cable.

## USB board


Description	Spare part number
USB board (does not include cable)  <b>NOTE:</b> The USB board cable is not included in the USB board spare part kit. The USB board cable is included in the Cable Kit, spare part number 640422-001.	640441-001

Before removing the USB board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 59](#)), and then remove the following components:
  - Optical drive (see [Optical drive on page 60](#))
  - Hard drive (see [Hard drive on page 62](#))
  - Keyboard (see [Keyboard on page 70](#))
  - Top cover (see [Top cover on page 74](#))

Remove the USB board and cable:

1. Release the ZIF connector to which the USB board cable is connected, and then disconnect the USB board cable **(1)** from the system board.
2. Remove the Phillips PM2.5×5.0 screw **(2)** that secures the USB board to the base enclosure.
3. Remove the USB board **(3)** and cable.

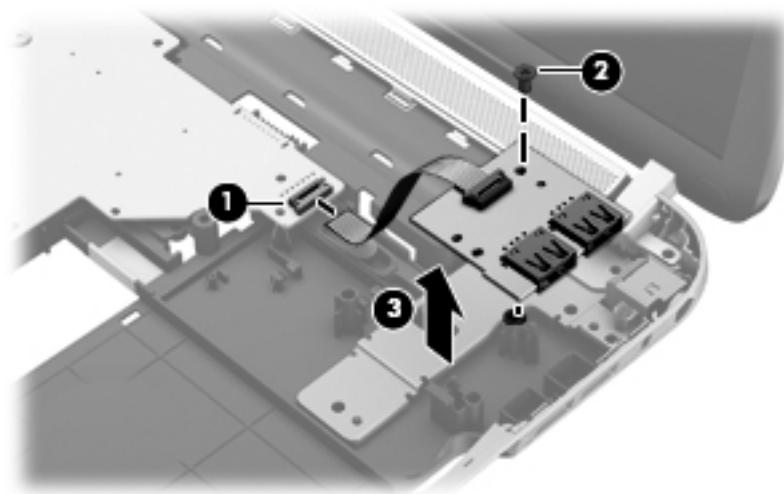

Reverse this procedure to install the USB board.

## Power connector cable

Description	Spare part number
Power connector cable	640424-001


Before removing the power connector cable, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 59](#)), and then remove the following components:
  - Optical drive (see [Optical drive on page 60](#))
  - Hard drive (see [Hard drive on page 62](#))
  - Keyboard (see [Keyboard on page 70](#))
  - Top cover (see [Top cover on page 74](#))
  - USB board (see [USB board on page 82](#))

Remove the power connector cable:

1. Disconnect the power connector cable **(1)** from the system board.
2. Release the power connector cable from the clips **(2)** built into the base enclosure.
3. Remove the two Phillips PM2.0×2.0 screws **(3)** that secure the power connector to the base enclosure.

4. Remove the power connector **(4)** from the base enclosure.

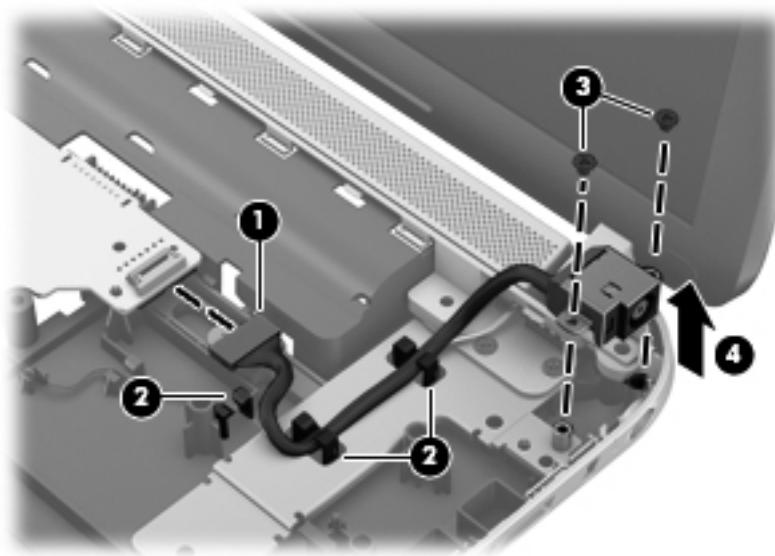

Reverse this procedure to install the power connector cable.

## System board



**NOTE:** The system board spare part kit includes replacement thermal material.

Replacement thermal material is also available in the Thermal Material Kit, using the following spare part numbers:

- 654111-001 — For use only with computer models equipped with an AMD A8, A6, A4, or E2 processor and a graphics subsystem with discrete memory
- 654112-001 — For use only with computer models equipped with an AMD A8, A6, A4, or E2 processor and a graphics subsystem with UMA memory
- 640457-001 — For use only with computer models equipped with an AMD processor and a graphics subsystem with discrete memory
- 640456-001 — For use only with computer models equipped with an AMD processor and a graphics subsystem with UMA memory
- 650801-001 — For use only with computer models equipped with an Intel processor and a graphics subsystem with 2048-MB of discrete memory
- 641493-001 — For use only with computer models equipped with an Intel processor and a graphics subsystem with 1024-MB of discrete memory
- 641492-001 — For use only with computer models equipped with an Intel processor and a graphics subsystem with UMA memory

Description	Spare part number
For use only with computer models equipped with an AMD processor:	
Equipped with the A70M chipset, HD6750 graphics subsystem chipset, and 1024-MB of graphics subsystem discrete memory	650854-001
Equipped with the A70M chipset, HD6490 graphics subsystem chipset, and 512-MB of graphics subsystem discrete memory	650853-001
Equipped with the A70M chipset and a graphics subsystem with UMA memory	650852-001
Equipped with the A60M chipset, HD6750 graphics subsystem chipset, and 1024-MB of graphics subsystem discrete memory	650851-001
Equipped with the A60M chipset, HD6490 graphics subsystem chipset, and 512-MB of graphics subsystem discrete memory	650850-001
Equipped with the A60M chipset and a graphics subsystem with UMA memory	650849-001
Equipped with the RS880MD chipset, the HD6650 graphics subsystem chipset, and 1024-MB of graphics subsystem discrete memory	659127-001
Equipped with the RS880MD chipset, the HD6470 graphics subsystem chipset, and 512-MB of graphics subsystem discrete memory	659126-001
Equipped with the RS880M chipset, and a graphics subsystem with UMA memory	659125-001
Equipped with the RS880MD chipset, HD6650 graphics subsystem chipset, 1024-MB of graphics subsystem discrete memory, and USB version 3.0	640454-001

<b>Description</b>	<b>Spare part number</b>
Equipped with the RS880MD chipset, HD6650 graphics subsystem chipset, 1024-MB of graphics subsystem discrete memory, and USB version 2.0	640452-001
Equipped with the RS880MD chipset, HD6470 graphics subsystem chipset, 512-MB of graphics subsystem discrete memory, and USB version 3.0	640453-001
Equipped with the RS880MD chipset, HD6470 graphics subsystem chipset, 512-MB of graphics subsystem discrete memory, and USB version 2.0	640451-001
Equipped with the RS880M chipset, a graphics subsystem with UMA memory, and USB version 3.0	640455-001
Equipped with the RS880M chipset, a graphics subsystem with UMA memory, and USB version 2.0	640450-001
For use only with computer models equipped with an Intel processor:	
Equipped with an Intel dual core processor, the HD6770 chipset, a graphics subsystem with 1024-MB of discrete memory, and supports bus alive/chip off (BACO) and USB version 3.0	659151-001
Equipped with an Intel dual core processor, the HD6490 chipset, a graphics subsystem with 1024-MB of discrete memory, and supports bus alive/chip off (BACO) and USB version 3.0	659150-001
Equipped with an Intel quad core processor, the HD6490 chipset, a graphics subsystem with 1024-MB of discrete memory, and supports bus alive/chip off (BACO) and USB version 3.0	659149-001
Equipped with an Intel quad core processor, the HD6770 chipset, a graphics subsystem with 1024-MB of discrete memory, and supports bus alive/chip off (BACO) and USB version 3.0	659148-001
Equipped with an Intel dual core processor, the HD6490 chipset, a graphics subsystem with 1024-MB of discrete memory, and supports bus alive/chip off (BACO) and USB version 2.0	659147-001
Equipped with an Intel quad core processor, the HM65 chipset, and the HD6490 graphics subsystem with 1024-MB of discrete memory	659998-001
Equipped with an Intel quad core processor, the HM65 chipset, and a graphics subsystem with UMA memory	659999-001
For use only with computer models equipped with a quad core processor, the Intel HD6770 graphics subsystem, and 2048-MB of discrete memory	650799-001
For use only with computer models equipped with a dual core processor, the Intel HD6770 graphics subsystem, and 2048-MB of discrete memory	650800-001
For use only with computer models equipped with a quad core processor, the Intel HD6770 graphics subsystem, and 1024-MB of discrete memory	641488-001
For use only with computer models equipped with a dual core processor, the Intel HD6770 graphics subsystem, and 1024-MB of discrete memory	641489-001
For use only with computer models equipped with a quad core processor, the Intel HD6490 graphics subsystem, and 1024-MB of discrete memory	641486-001
For use only with computer models equipped with a dual core processor, the Intel HD6490 graphics subsystem, 1024-MB of discrete memory, and USB version 3.0	641484-001
For use only with computer models equipped with a dual core processor, the Intel HD6490 graphics subsystem, 1024-MB of discrete memory, and USB version 2.0	641487-001
For use only with computer models equipped with a quad core processor, a graphics subsystem with UMA memory, and USB version 3.0	641491-001

Description	Spare part number
For use only with computer models equipped with a dual core processor, a graphics subsystem with UMA memory, and USB version 3.0	641485-001
For use only with computer models equipped with a dual core processor, a graphics subsystem with UMA memory, and USB version 2.0	641490-001

Before removing the system board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 59](#)), and then remove the following components:
  - Optical drive (see [Optical drive on page 60](#))
  - Hard drive (see [Hard drive on page 62](#))
  - WLAN module (see [WLAN module on page 67](#))
  - Keyboard (see [Keyboard on page 70](#))
  - Top cover (see [Top cover on page 74](#))


When replacing the system board, be sure that the following components are removed from the defective system board and installed on the replacement system board:

- RTC battery (see [RTC battery on page 65](#))
- Memory module (see [Memory module on page 66](#))
- Fan and heat sink (see [Fan/heat sink assembly on page 90](#))
- Processor (see [Processor on page 95](#))


Remove the system board:

1. Close the computer.
2. Turn the computer upside down, with the font toward you.


- 3.** Disconnect the speaker cable **(1)** and the optical drive connector cable **(2)** from the system board.

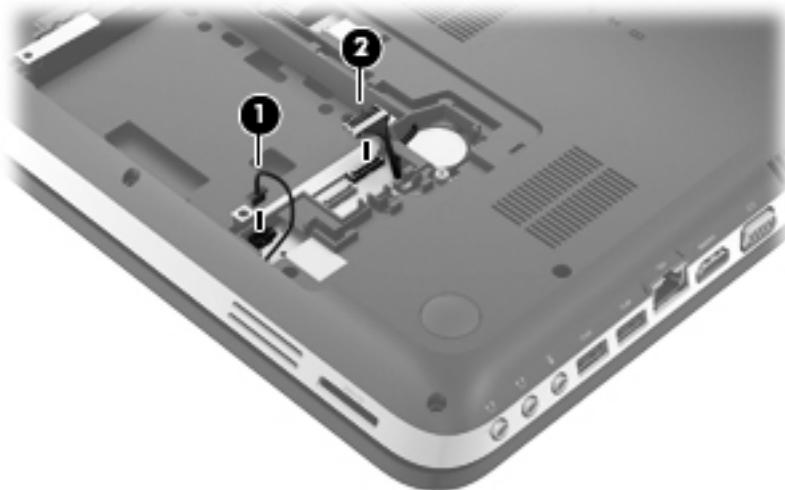


- 4.** Turn the computer right side up, with the front toward you.
- 5.** Open the computer.
- 6.** Disconnect the following cables from the system board:
  - Display panel cable **(1)**
  - Webcam/microphone cable **(2)**
  - Bluetooth module cable **(3)**
  - USB board cable **(4)**
  - Power connector cable **(5)**

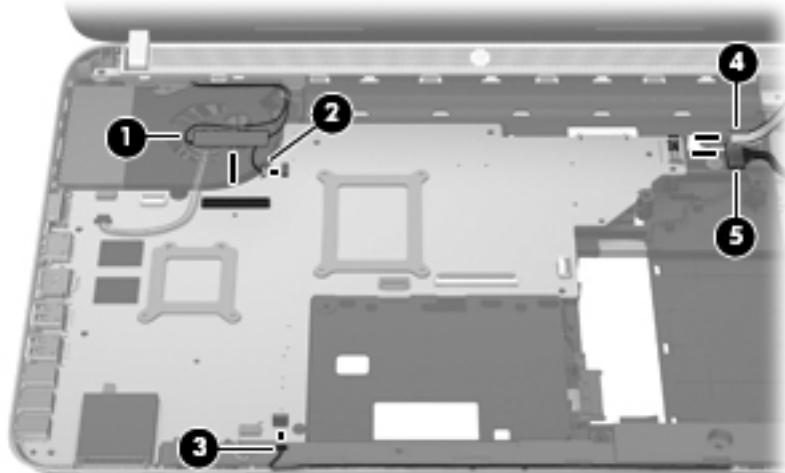

7. Remove the Phillips PM2.5×4.0 screw **(1)** and the two Phillips PM2.5×5.0 screws **(2)** that secure the system board to the base enclosure.

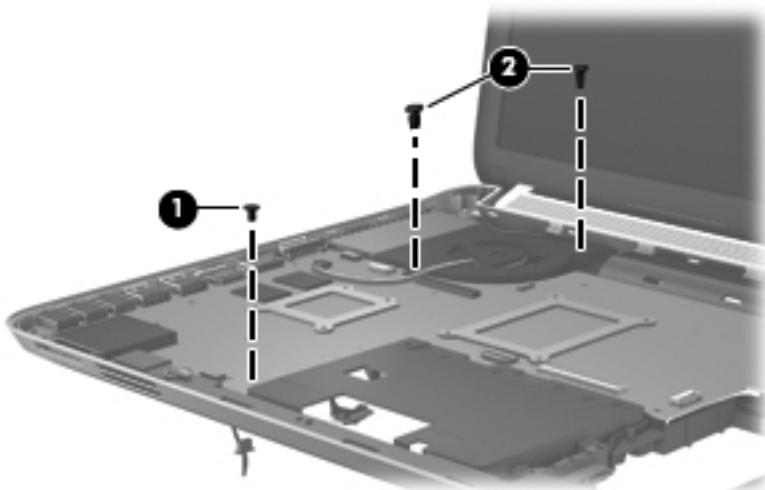

8. Flex the left side of the base enclosure **(1)** outward to provide clearance for the audio connectors **(2)** and the other connectors on the left side of the system board.
9. Lift the front edge of the system board **(3)** until it rests at an angle.
10. Remove the system board **(4)** by sliding it up and forward at an angle.

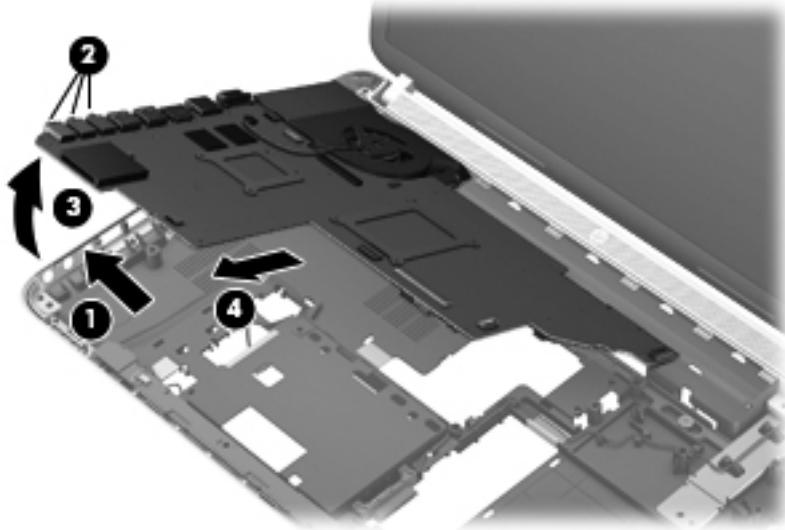

Reverse this procedure to install the system board.

## Fan/heat sink assembly



**NOTE:** The system board spare part kit includes replacement thermal material.

Replacement thermal material is also available in the Thermal Material Kit, using the following spare part numbers:

- 654111-001 — For use only with computer models equipped with an AMD A8, A6, A4, or E2 processor and a graphics subsystem with discrete memory
- 654112-001 — For use only with computer models equipped with an AMD A8, A6, A4, or E2 processor and a graphics subsystem with UMA memory
- 640457-001 — For use only with computer models equipped with an AMD processor and a graphics subsystem with discrete memory
- 640456-001 — For use only with computer models equipped with an AMD processor and a graphics subsystem with UMA memory
- 650801-001 — For use only with computer models equipped with an Intel processor and a graphics subsystem with 2048-MB of discrete memory
- 641493-001 — For use only with computer models equipped with an Intel processor and a graphics subsystem with 1024-MB of discrete memory
- 641492-001 — For use only with computer models equipped with an Intel processor and a graphics subsystem with UMA memory

Description	Spare part number
For use only with computer models equipped with an AMD processor:	
For use only with computer models equipped with an AMD A8, A6, or A4 processor and a graphics subsystem with discrete memory	650848-001
For use only with computer models equipped with an AMD A8, A6, or A4 processor and a graphics subsystem with UMA memory	650847-001
For use only with computer models equipped with an AMD Athlon, Phenom, or Turion processor and a graphics subsystem with discrete memory	640426-001
For use only with computer models equipped with an AMD Athlon, Phenom, or Turion processor and a graphics subsystem with UMA memory	640425-001
For use only with computer models equipped with an Intel processor:	
For use only with computer models equipped with a graphics subsystem with 2048-MB discrete memory	650797-001
For use only with computer models equipped with a graphics subsystem with 1024-MB discrete memory	641477-001
For use only with computer models equipped with a graphics subsystem with UMA memory	641476-001


 **NOTE:** To properly ventilate the computer, allow at least 7.6 cm (3 in) of clearance on the left side of the computer. The computer uses an electric fan for ventilation. The fan is controlled by a temperature sensor and is designed to turn on automatically when high temperature conditions exist. These conditions are affected by high external temperatures, system power consumption, power management/battery conservation configurations, battery fast charging, and software requirements. Exhaust air is displaced through the ventilation grill located on the left side of the computer.

Before removing the fan/heat sink assembly, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 59](#)), and then remove the following components:
  - Optical drive (see [Optical drive on page 60](#))
  - Hard drive (see [Hard drive on page 62](#))
  - WLAN module (see [WLAN module on page 67](#))
  - Keyboard (see [Keyboard on page 70](#))
  - Top cover (see [Top cover on page 74](#))
  - System board (see [System board on page 85](#))

Remove the fan/heat sink assembly:

1. Disconnect the fan cable from the system board.

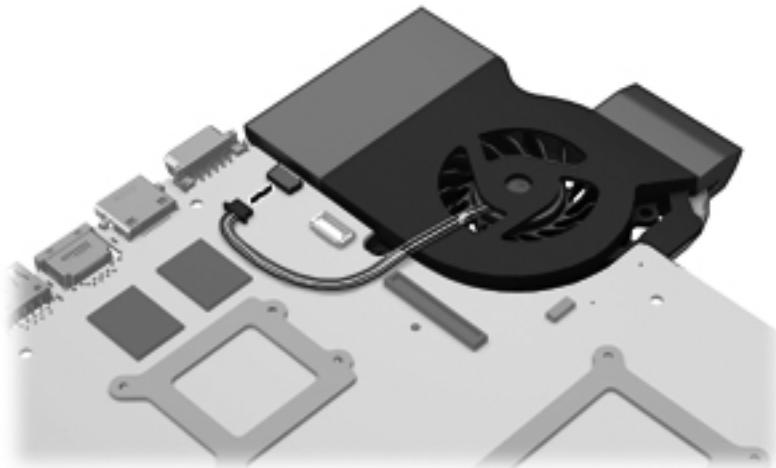

2. Turn the system board upside down, with the fan away from you.

3. Loosen the captive screws **(1)** that secure the fan/heat sink assembly to the system board.

---

 **NOTE:** The number of screws used to secure the fan/heat sink assembly to the system board varies by computer model.


---

 **NOTE:** Due to the adhesive quality of the thermal material located between the heat sink and system board components, it may be necessary to move the heat sink from side to side to detach it.


---

**4.** Remove the fan/heat sink assembly **(2)**.

 **NOTE:** The following illustration shows the fan/heat sink assembly being removed from a computer model equipped with an AMD processor and a graphics subsystem with discrete memory. A computer model equipped with an AMD processor and a graphics subsystem with UMA memory has only four screws.

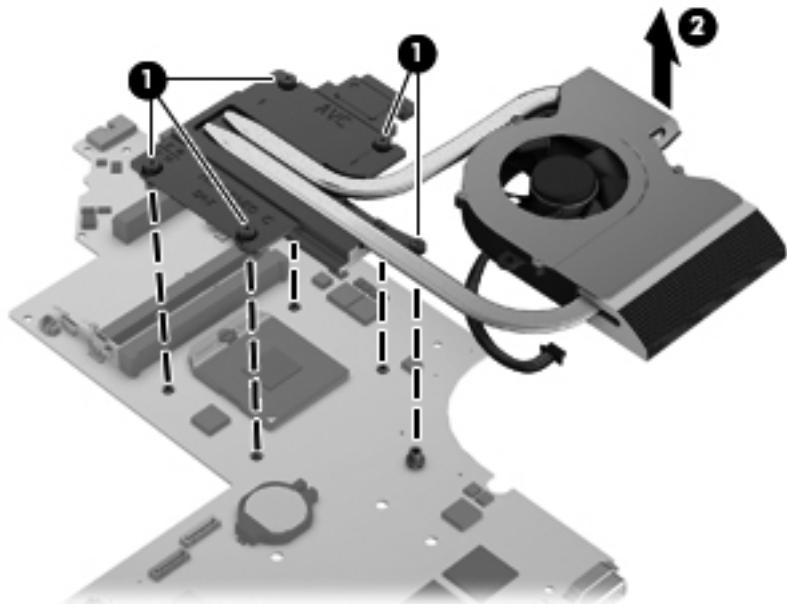


 **NOTE:** The following illustration shows the fan/heat sink assembly being removed from a computer model equipped with an Intel processor and a graphics subsystem with discrete memory. A computer model equipped with an Intel processor and a graphics subsystem with UMA memory has only four screws.

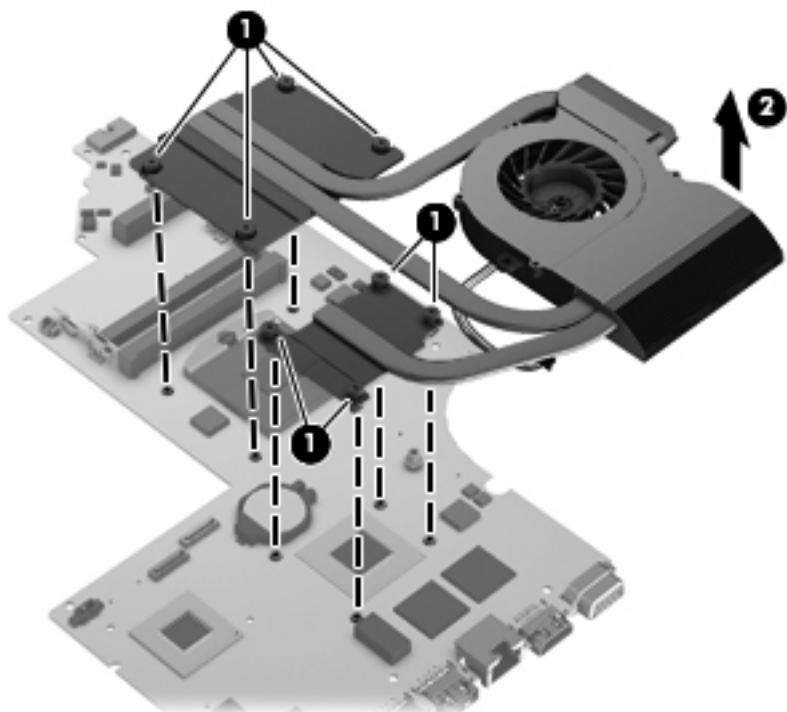

The thermal material must be thoroughly cleaned from the surfaces of the heat sink and the system board components each time the fan/heat sink assembly is removed. Replacement thermal material is included with the fan/heat sink assembly, processor, and system board spare part kits. Replacement thermal material is also available in the Thermal Material Kit.


 **NOTE:** The following illustration shows the replacement thermal material locations on a computer model equipped with an AMD processor and a graphics subsystem with discrete memory.

- Thermal paste is used on the processor **(1)** and the heat sink section **(2)** that services it
- A thermal pad is used on the graphics subsystem chip **(3)** and the heat sink section **(4)** that services it (only on computer models equipped with a graphics subsystem with discrete memory)
- A thermal pad is used on the Northbridge chip **(5)** and the heat sink section **(6)** that services it

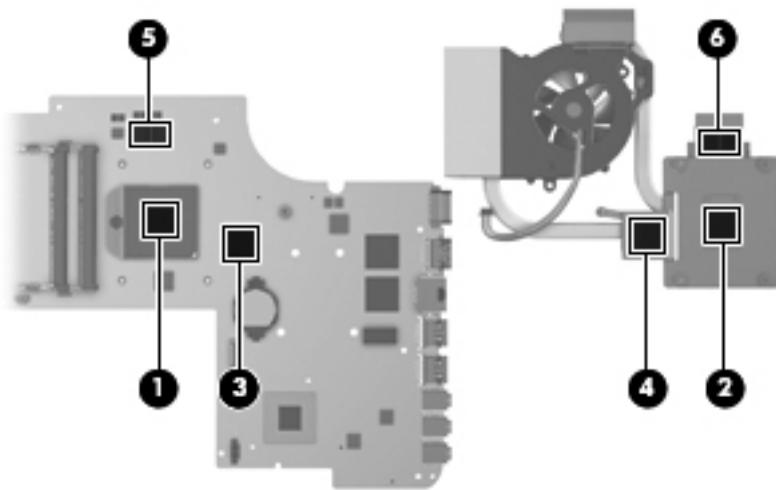

 **NOTE:** The following illustration shows the replacement thermal material locations on a computer model equipped with an Intel processor and a graphics subsystem with discrete memory.

- Thermal paste is used on the processor **(1)** and the heat sink section **(2)** that services it
- A thermal pad is used on the graphics subsystem chip **(3)** and the heat sink section **(4)** that services it (only on computer models equipped with a graphics subsystem with discrete memory)
- A thermal pad is used on the Northbridge chip **(5)** and the heat sink section **(6)** that services it

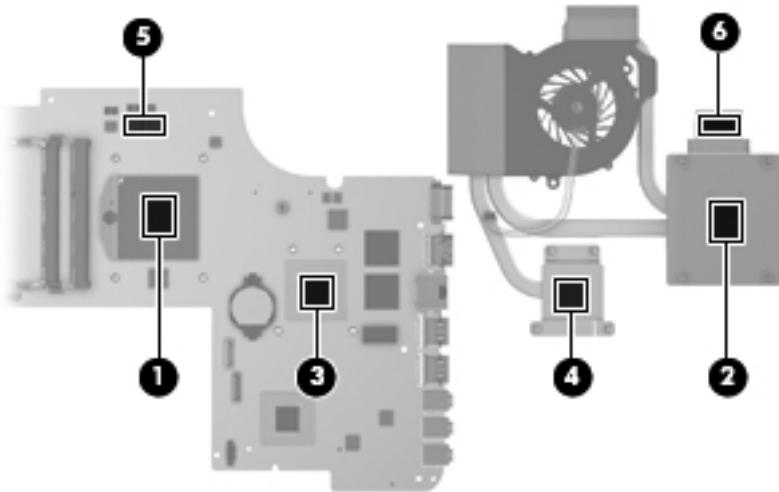

Reverse this procedure to reassemble and install the fan/heat sink assembly.

## Processor



**NOTE:** The system board spare part kit includes replacement thermal material.

Replacement thermal material is also available in the Thermal Material Kit, using the following spare part numbers:

- 654111-001 — For use only with computer models equipped with an AMD A8, A6, A4, or E2 processor and a graphics subsystem with discrete memory
- 654112-001 — For use only with computer models equipped with an AMD A8, A6, A4, or E2 processor and a graphics subsystem with UMA memory
- 640457-001 — For use only with computer models equipped with an AMD processor and a graphics subsystem with discrete memory
- 640456-001 — For use only with computer models equipped with an AMD processor and a graphics subsystem with UMA memory
- 650801-001 — For use only with computer models equipped with an Intel processor and a graphics subsystem with 2048-MB of discrete memory
- 641493-001 — For use only with computer models equipped with an Intel processor and a graphics subsystem with 1024-MB of discrete memory
- 641492-001 — For use only with computer models equipped with an Intel processor and a graphics subsystem with UMA memory

Description	Spare part number
AMD A8-3530MX 2.60-GHz processor, (1.90-GHz FSB, 4.0-MB L2 cache, quad core, 45 W)	653364-001
AMD A8-3510MX 2.50-GHz processor (1.50-GHz FSB, 4.0-MB L2 cache, quad core, 45 W)	653358-001
AMD A8-3500M 2.40-GHz processor (1.5-GHz FSB, 4.0-MB L2 cache, quad core, 35 W)	653350-001
AMD A6-3410MX 2.30-GHz processor (1.60-GHz FSB, 2.0-MB L2 cache, quad core, 45 W)	653357-001

<b>Description</b>	<b>Spare part number</b>
AMD A6-3400M 2.30-GHz processor (1.4-GHz FSB, 4.0-MB L2 cache, quad core, 35 W)	653349-001
AMD A4-3310MX 2.50-GHz processor (2.10-GHz FSB, 2.0-MB L2 cache, dual core, 45 W)	653356-001
AMD A4-3300M 2.50-GHz processor (1.9-GHz FSB, 4.0-MB L2 cache, dual core, 35 W)	653348-001
AMD E2-3000M 2.40-GHz processor (1.8-GHz FSB, 4.0-MB L2 cache, quad core, 35 W)	653351-001
AMD Athlon II N370 2.50-GHz processor (1.0-MB L2 cache, 1066-MHz, 3.2GT/sec, dual core, 35 W)	634686-001
AMD Athlon II P360 2.30-GHz processor (1.0-MB L2 cache, 1066-MHz, 3.2GT/sec, dual core, 25 W)	636635-001
AMD Athlon II P340 2.20-GHz processor (1.0-MB L2 cache, 1066-MHz, 3.2GT/sec, dual core, 25 W)	616343-001
AMD Phenom II N970 2.20-GHz processor (2.0-MB L2 cache, 1333-MHz, 3.6GT/sec, quad core, 35 W)	635496-001
AMD Phenom II N870 2.30-GHz processor (1.5-MB L2 cache, 1333-MHz, 3.6GT/sec, triple core, 35 W)	635495-001
AMD Phenom II N850 2.20-GHz processor (1.5-MB L2 cache, 1333-MHz, 3.6GT/sec, triple core, 35 W)	616345-001
AMD Phenom II N660 3.00-GHz processor (2.0-MB L2 cache, 1333-MHz, 3.6GT/sec, dual core, 35 W)	635494-001
AMD Phenom II P960 1.80-GHz processor (2.0-MB L2 cache, 1066-MHz, 3.6GT/sec, quad core, 25 W)	634689-001
AMD Phenom II P860 2.00-GHz processor (1.5-MB L2 cache, 1333-MHz, 3.6GT/sec, triple core, 25 W)	634688-001
AMD Phenom II P650 2.60-GHz processor (2.0-MB L2 cache, 1066-MHz, 3.6GT/sec, triple core, 25 W)	634687-001
AMD Turion II P570 2.70-GHz processor (2.0-MB L2 cache, 1066-MHz, 3.6GT/sec, dual core, 35 W)	634690-001
AMD Turion II P560 2.50-GHz processor (2.0-MB L2 cache, 1066-MHz, 3.6GT/sec, dual core, 25 W)	634691-001
Intel Core i7-2820QM 2.30-GHz (SC turbo up to 3.10-GHz) processor (8.0-MB L3 cache, quad core, 45 W)	634694-001
Intel Core i7-2720QM 2.20-GHz (SC turbo up to 3.00-GHz) processor (6.0-MB L3 cache, quad core, 45 W)	631254-001
Intel Core i7-2630QM 2.00-GHz (SC turbo up to 2.90-GHz) processor (6.0-MB L3 cache, quad core, 45 W)	635501-001
Intel Core i7-2620M 2.70-GHz (SC turbo up to 3.40-GHz) processor (4.0-MB L3 cache, dual core, 35 W)	631252-001
Intel Core i5-2540M 2.60-GHz (SC turbo up to 3.30-GHz) processor (3.0-MB L3 cache, dual core, 35 W)	631255-001
Intel Core i5-2520M 2.50-GHz (SC turbo up to 3.20-GHz) processor (3.0-MB L3 cache, dual core, 35 W)	631253-001

Description	Spare part number
Intel Core i5-2430M 2.40-GHz (SC turbo up to 3.00-GHz) processor (3.0-MB L3 cache, dual core, 35 W)	653341-001
Intel Core i5-2410M 2.30-GHz (SC turbo up to 2.90-GHz) processor (3.0-MB L3 cache, dual core, 35 W)	638039-001
Intel Core i3-2350M 2.30-GHz processor (3.0-MB L3 cache, dual core, 35 W)	653340-001
Intel Core i3-2330M 2.20-GHz processor (3.0-MB L3 cache, dual core, 35 W)	653339-001
Intel Core i3-2310M 2.10-GHz processor (3.0-MB L3 cache, dual core, 35 W)	638037-001
Intel Pentium B950 TJ85 2.10-GHz processor (2.0-MB L3 cache, dual core, 35 W)	653338-001
Intel Pentium B940 TJ85 2.00-GHz processor (2.0-MB L3 cache, dual core, 35 W)	653337-001

Before removing the processor, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 59](#)), and then remove the following components:
  - Optical drive (see [Optical drive on page 60](#))
  - Hard drive (see [Hard drive on page 62](#))
  - WLAN module (see [WLAN module on page 67](#))
  - Keyboard (see [Keyboard on page 70](#))
  - Top cover (see [Top cover on page 74](#))
  - System board (see [System board on page 85](#))
  - Fan/heat sink assembly (see [Fan/heat sink assembly on page 90](#))


Remove the processor:

1. Use a flat-bladed screw driver to turn the processor locking screw one-half turn counterclockwise **(1)**, until you hear a click.


2. Lift the processor (2) straight up, and remove it.

 **NOTE:** The gold triangle (3) on the processor must be aligned with the triangle icon embossed on the processor socket when you install the processor.

 **NOTE:** The following illustration shows the processor removal process on a computer model equipped with an AMD processor.

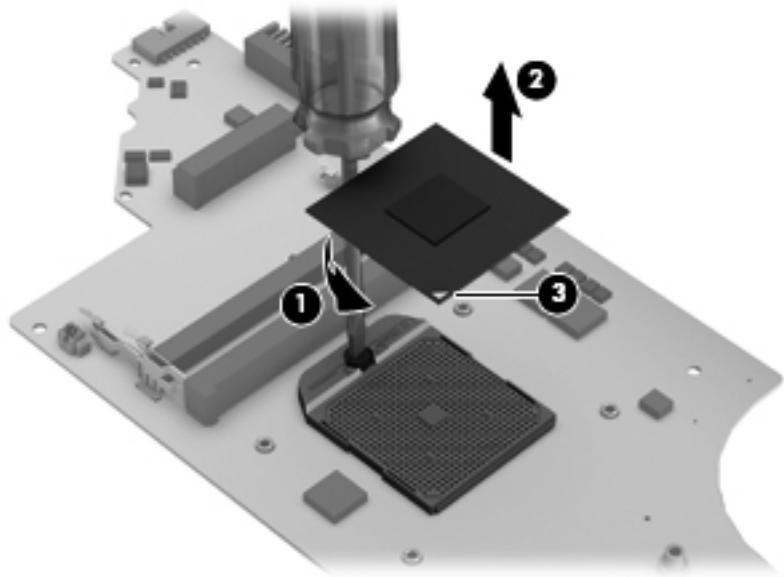

 **NOTE:** The following illustration shows the processor removal process on a computer model equipped with an Intel processor.

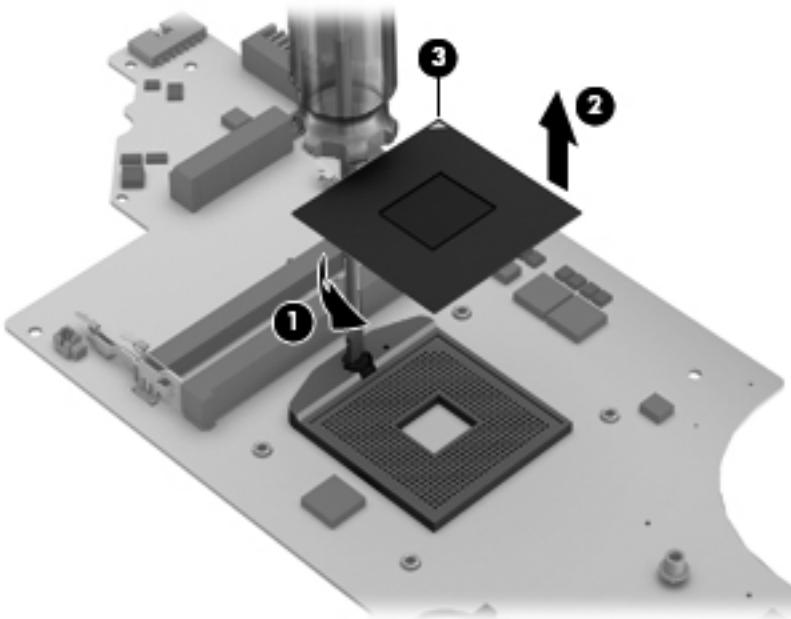

Reverse this procedure to install the processor.

## Speakers

Description	Spare part number
Speaker cover:	
For use only with computer models in dark umber and steel gray finish	641438-001
For use only with computer models in butter gold, espresso black, linen white, Pacific blue, pearl pink, ruby red, and Sonoma red finish	640443-001
Speaker Kit (includes left and right speakers and cable)	640449-001


Before removing the speakers, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 59](#)), and then remove the following components:
  - Optical drive (see [Optical drive on page 60](#))
  - Hard drive (see [Hard drive on page 62](#))
  - Keyboard (see [Keyboard on page 70](#))
  - Top cover (see [Top cover on page 74](#))
  - System board (see [System board on page 85](#))


Remove the speakers:

1. Close the computer.
2. Turn the computer upside down, with the front toward you.

3. Release the rear speaker cable **(1)** from the clips **(2)** and routing channel built into the base enclosure.

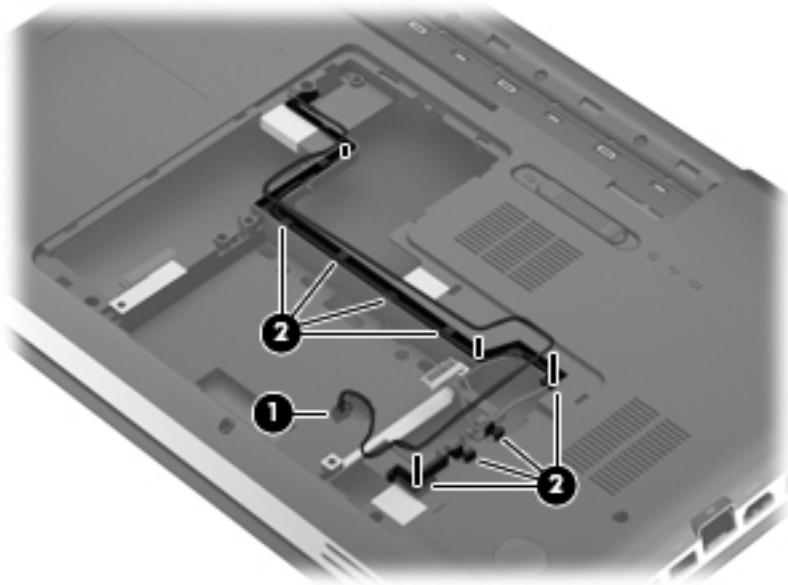


4. Remove the four Phillips PM2.5×4.0 screws **(1)** and the PM2.5×10.0 screw **(2)** that secure the rear speaker to the computer.

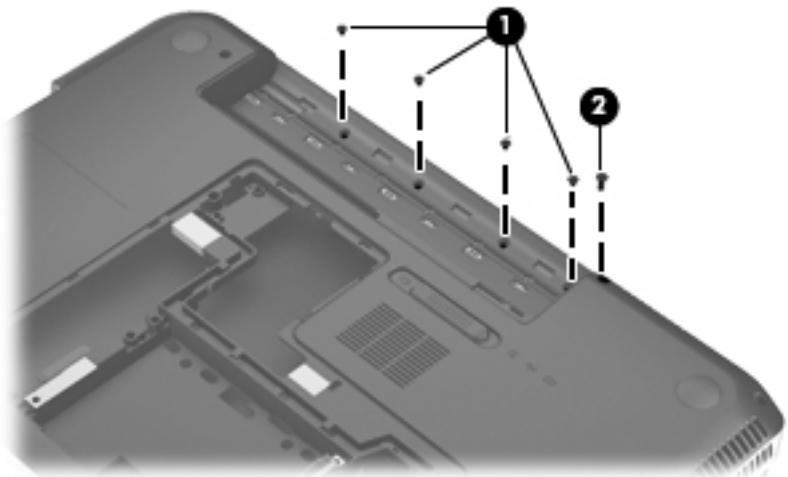

5. Turn the computer right side up, with the front toward you.
6. Open the computer.
7. Release the rear speaker cable **(1)** from the opening in the base enclosure and the clips **(2)** and **(3)** built into the base enclosure.


8. Remove the rear speaker **(4)** and cable.

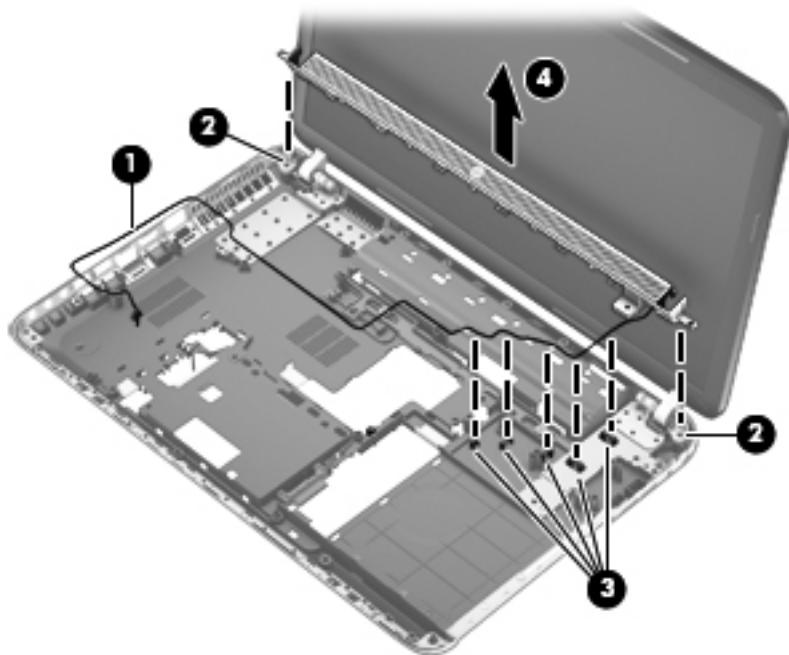

9. Remove the Phillips PM2.5×4.0 screw **(1)** that secures the front speaker to the base enclosure.

10. Remove the front speaker **(2)**.

 **NOTE:** When removing the front speaker, note the installation locations of two isolators **(3)**.

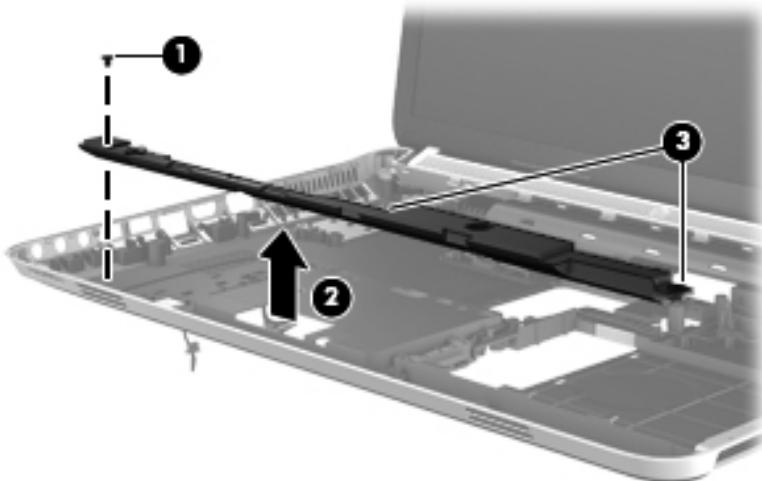

Reverse this procedure to install the speakers.

## Optical drive connector cable


 **NOTE:** The optical drive connector cable is included in the Cable Kit, spare part number 640422-001. The optical drive connector cable includes the optical drive connector.

Before removing the optical drive connector cable, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 59](#)), and then remove the following components:
  - Optical drive (see [Optical drive on page 60](#))
  - Hard drive (see [Hard drive on page 62](#))
  - Keyboard (see [Keyboard on page 70](#))
  - Top cover (see [Top cover on page 74](#))
  - System board (see [System board on page 85](#))

Remove the optical drive connector cable:

1. Close the computer.
2. Turn the computer upside down, with the front toward you.
3. Release the optical drive connector cable **(1)** from the clips **(2)** and routing channel built into the base enclosure.

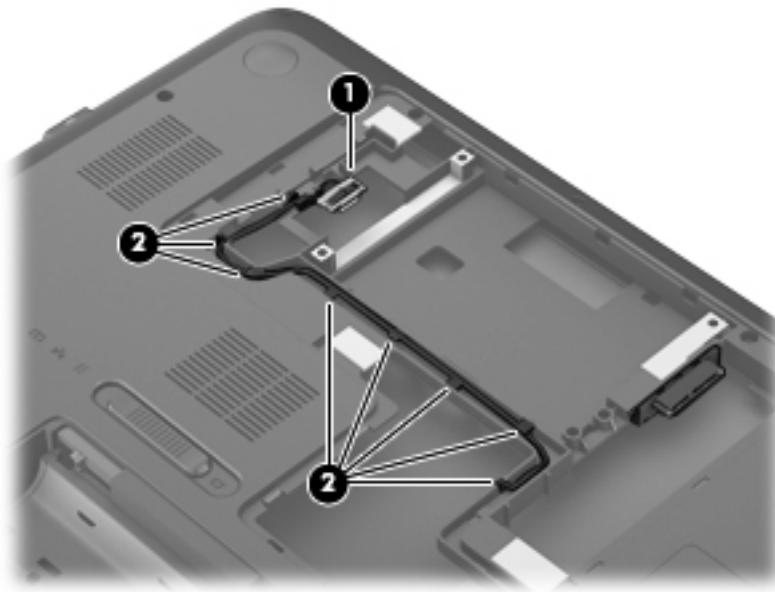

4. Turn the computer right side up, with the front toward you.
5. Open the computer.
6. Release the optical drive connector cable from the clips **(1)** built into the base enclosure.
7. Remove the two Phillips PM2.0×7.0 screws **(1)** that secure the optical drive connector to the base enclosure.
8. Remove the optical drive connector cable **(3)**.

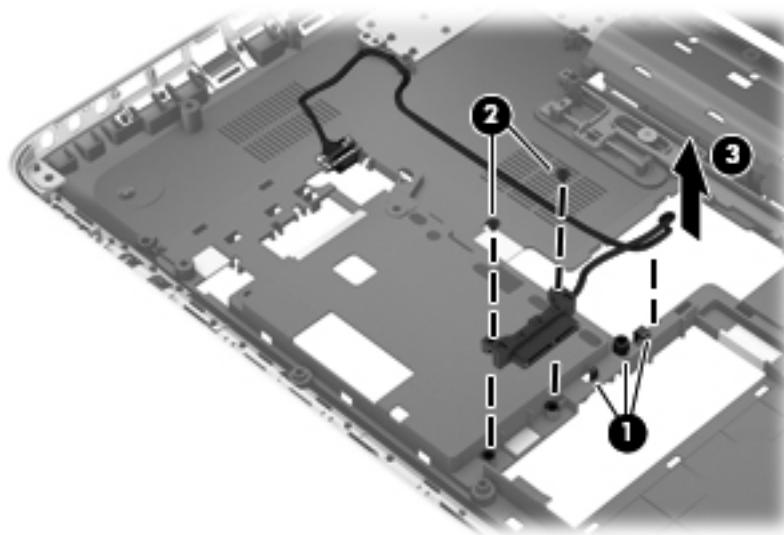

Reverse this procedure to install the optical drive connector cable.

## Display assembly

 **NOTE:** The display assembly includes a webcam, two microphones, and wireless antenna transceivers and cables.

Description	Spare part number
15.6-in, full high-definition (FHD), light-emitting diode (LED), AntiGlare display assembly in dark umber finish	654103-001
15.6-in, FHD, LED, AntiGlare display assembly in steel gray finish	654110-001
15.6-in, HD, LED, BrightView display assembly	
In butter gold finish	641482-001
In dark umber finish	640431-001
In espresso black finish	640430-001
In linen white finish	640433-001
In Pacific blue finish	641479-001
In pearl pink finish	641481-001
In ruby red finish	640434-001

Description	Spare part number
In Sonoma red finish	641480-001
In steel gray finish	650798-001


Before removing the display assembly, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 59](#)), and then remove the following components:
  - Optical drive (see [Optical drive on page 60](#))
  - Hard drive (see [Hard drive on page 62](#))
  - WLAN module (see [WLAN module on page 67](#))
  - Keyboard (see [Keyboard on page 70](#))
  - Top cover (see [Top cover on page 74](#))
  - System board (see [System board on page 85](#))

Remove the display assembly:


1. Release the wireless antenna cables from the clips **(1)** and the opening in the base enclosure.
- 
- ⚠ CAUTION:** Support the display assembly when removing the following screws. Failure to support the display assembly can result in damage to the display assembly and other computer components.
- 
2. Remove the six Phillips PM2.5×5.0 screws **(2)** that secure the display assembly to the computer.
- 
- >Note:** The left-most screw on the left hinge secures a display panel cable ground loop **(3)**.
-

**3.** Remove the display assembly **(4)**.

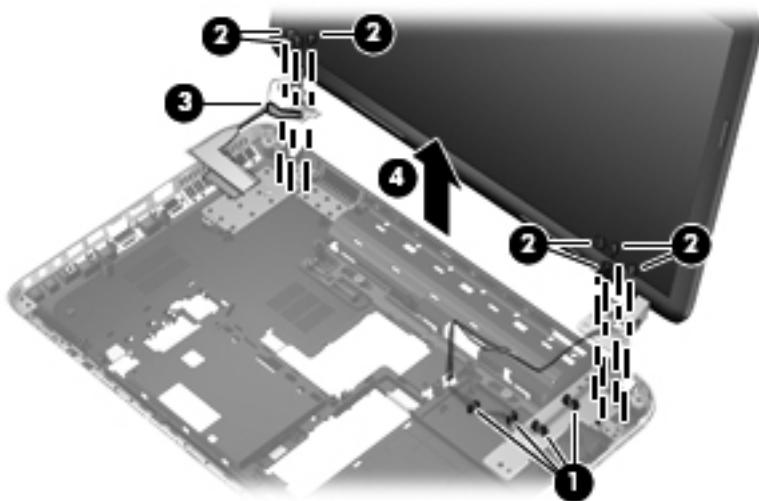


**4.** If it is necessary to replace the display bezel or any of the display assembly subcomponents:

- a.** Remove the two screw covers **(1)** and the two Phillips PM2.5×5.0 screws **(2)** that secure the display bezel to the display assembly. (The screw covers are available in the Display Rubber Kit, spare part number 641810-001.)

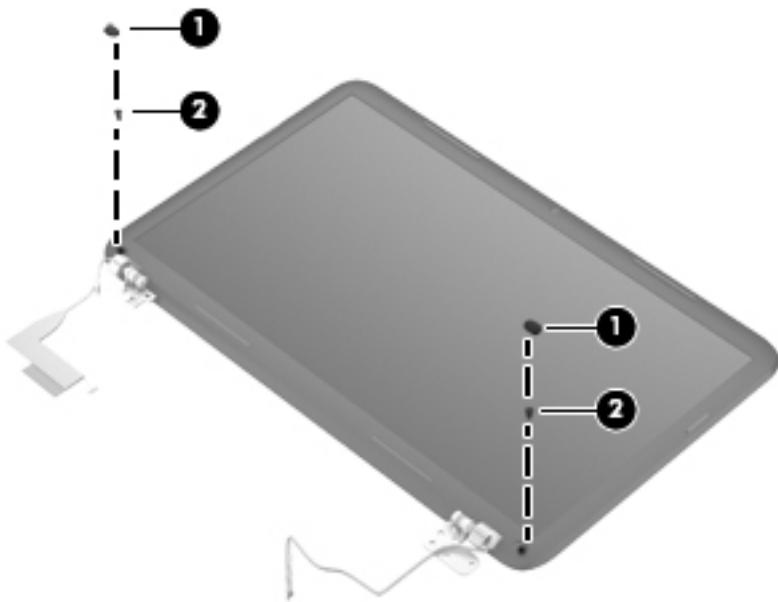


- b.** Flex the inside edges of the top edge **(1)**, the left and right sides **(2)**, and the bottom edge **(3)** of the display bezel until the bezel disengages from the display enclosure.

- c. Remove the display bezel **(4)**. The display bezel is available using spare part numbers 640421-001 (for use only with computer models in dark umber and steel gray finish) and 640420-001 (for use only with computer models in butter gold, espresso black, linen white, Pacific blue, pearl pink, ruby red, and Sonoma red finish).

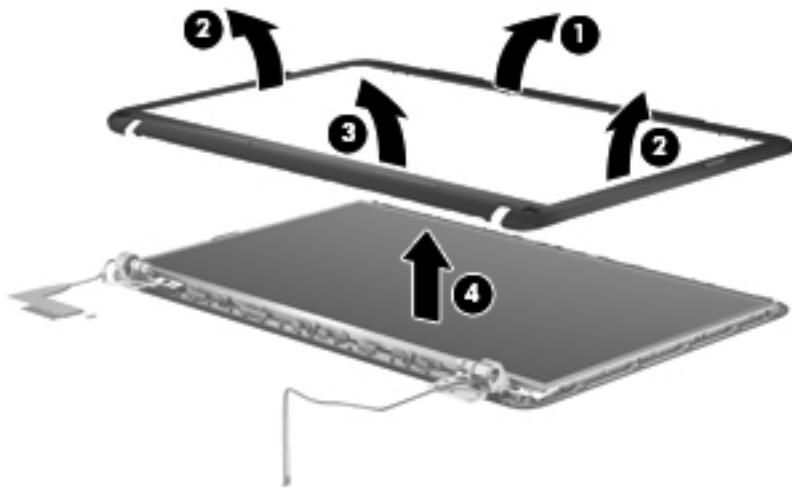


- 5. If it is necessary to replace the webcam/microphone module:
  - a. Detach and release the webcam/microphone module **(1)** as far as the webcam/microphone module cable allows. (The webcam/microphone module is attached to the display enclosure with double-sided tape.)
  - b. Disconnect the webcam/microphone module **(2)** from the webcam/microphone module.
  - c. Remove the webcam/microphone module **(3)**. The webcam/microphone module is available using spare part number 639387-001.

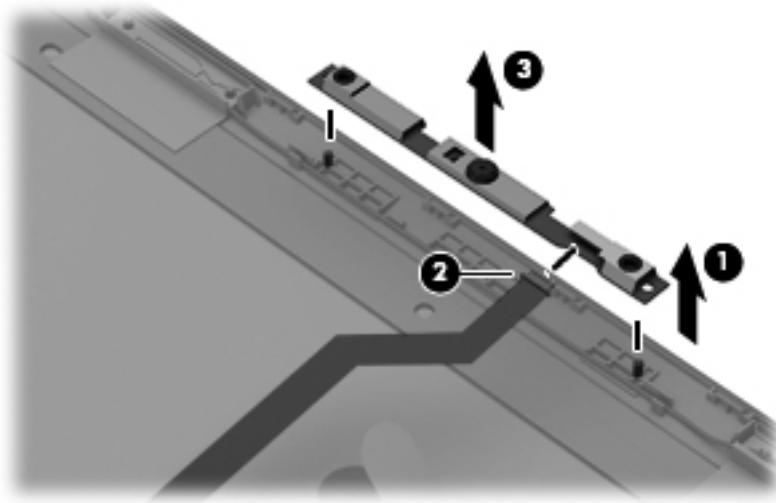


- 6. If it is necessary to replace the hinge covers:
  - a. Remove the two Phillips PM2.0x3.0 **(1)** screws that secure the hinge covers to the display enclosure.

- b.** Remove the hinge covers **(2)**. The hinge covers are available using spare part number 641807-001.

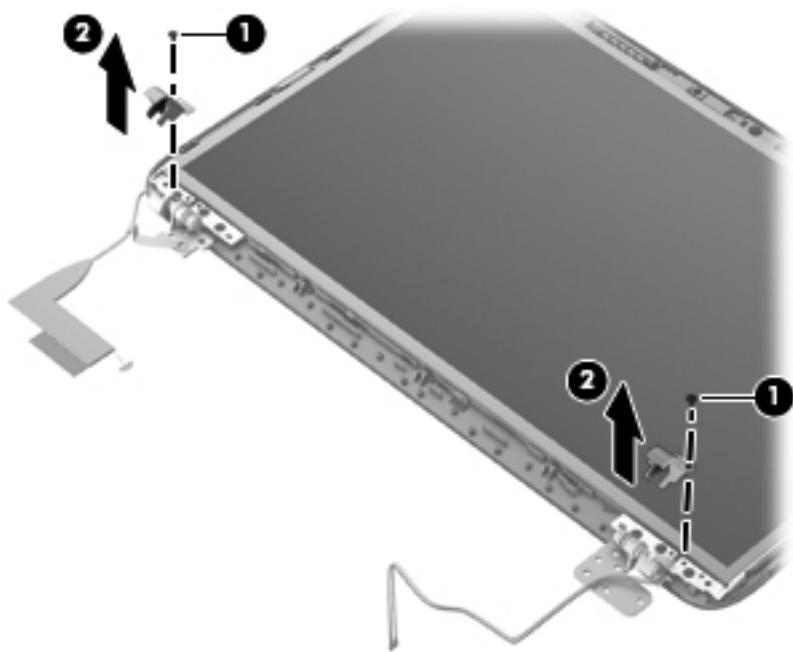


- 7.** If it is necessary to replace the display panel:


- a.** Remove the two Phillips PM2.5×3.5 **(1)** screws and the six Phillips PM2.5×5.0 screws **(2)** that secure the display panel to the display enclosure.

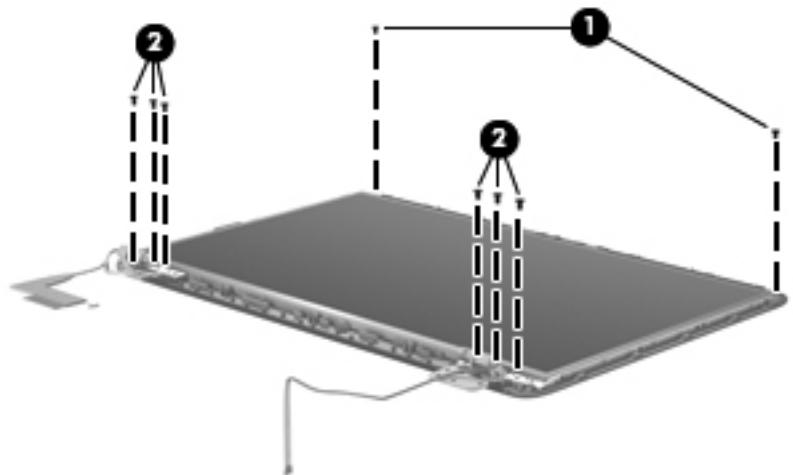

- b.** Lift the top edge of the display panel **(1)**, and then swing it forward **(2)** until it rests upside down in front of the display enclosure.

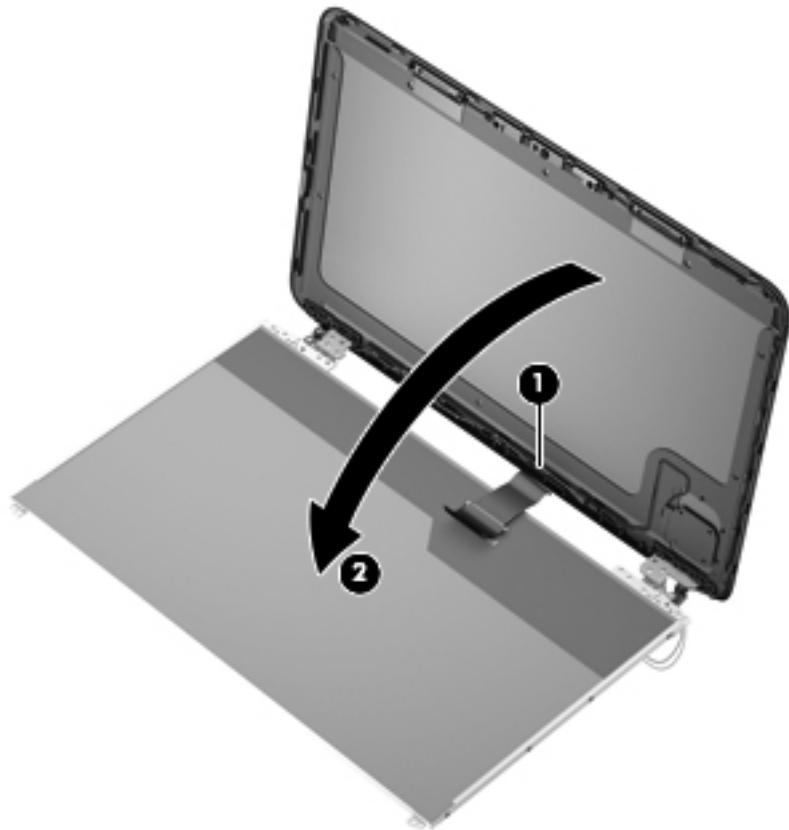


- c.** Release the adhesive strips **(1)** and **(2)** that secure the display panel cable to the display panel, and then disconnect the display panel cable **(3)** from the display panel.

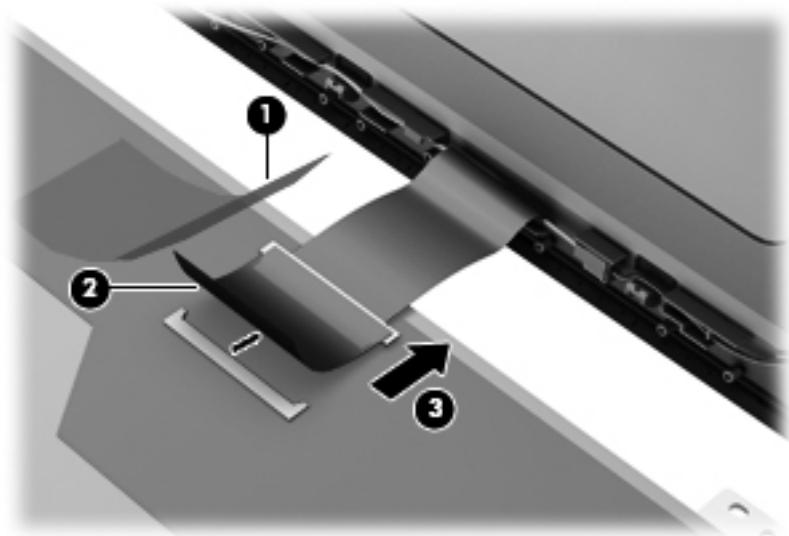

- d.** Remove the display panel. The display panel is available using spare part numbers 653378-001 (for use with computer models equipped with a 15.6-in, FHD, LED, AntiGlare


display panel) and 640445-001 (for use with computer models equipped with a 15.6-in, HD, LED, BrightView display panel).

8. If it is necessary to replace the display hinges:
  - a. Remove the eight Phillips PM2.0x2.0 screws **(1)** that secure the display hinges to the display panel.
  - b. Remove the display hinges **(2)**. The display hinges include the display hinges and brackets and are available using spare part number 640429-001.

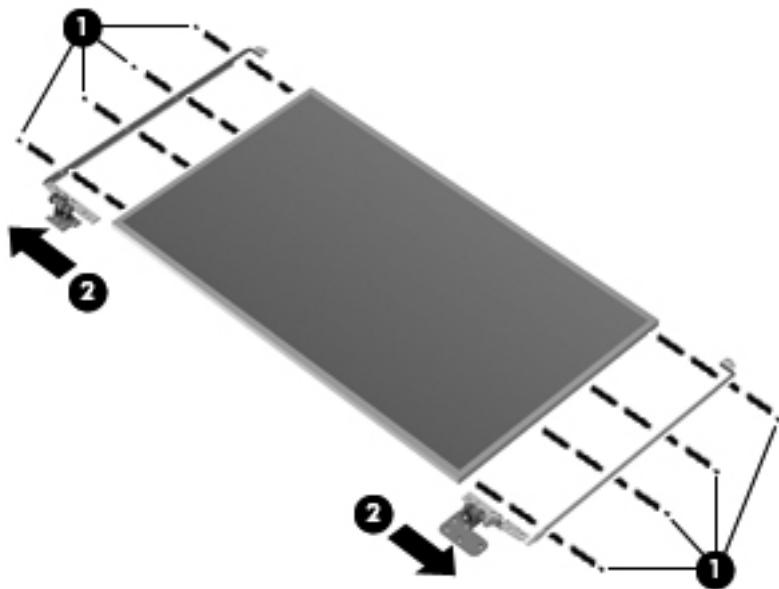

9. If it is necessary to replace the display panel cable:
  - a. Release the tabs **(1)** built into the display enclosure shielding that secure the display panel cable to the display enclosure.

- b.** Release the display panel cable from the clips **(2)** built into the display enclosure.

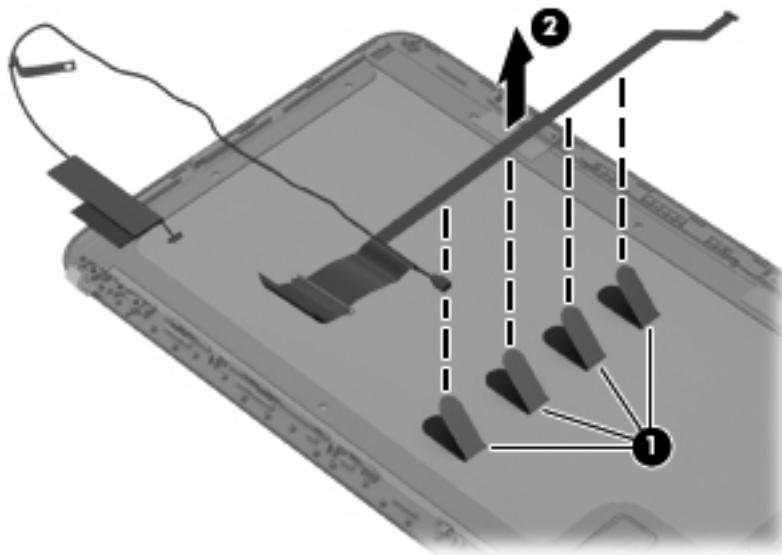


- c.** Remove the display panel cable. The display panel cable includes the webcam/microphone module cable and is available in the Display Cable Kit, using the following spare part numbers:
- 656805-001 — For use only with computer models equipped with a FHD display assembly
  - 644362-001 — For use only with computer models in dark umber and steel gray finish
  - 640423-001 — For use only with computer models in butter gold, espresso black, linen white, Pacific blue, pearl pink, ruby red, and Sonoma red finish

**10.** If it is necessary to replace the wireless antenna cables and transceivers:

- a.** Release the wireless antenna transceivers **(1)** from the display enclosure. (The wireless antenna transceivers are attached to the display enclosure with double-sided tape.)
- b.** Release the wireless antenna cables from the clips **(2)** built into the display enclosure.

- c. Remove the wireless antenna cables and transceivers **(3)**. The wireless antenna cables and transceivers are available in the Antenna Kit, spare part number 640411-001.

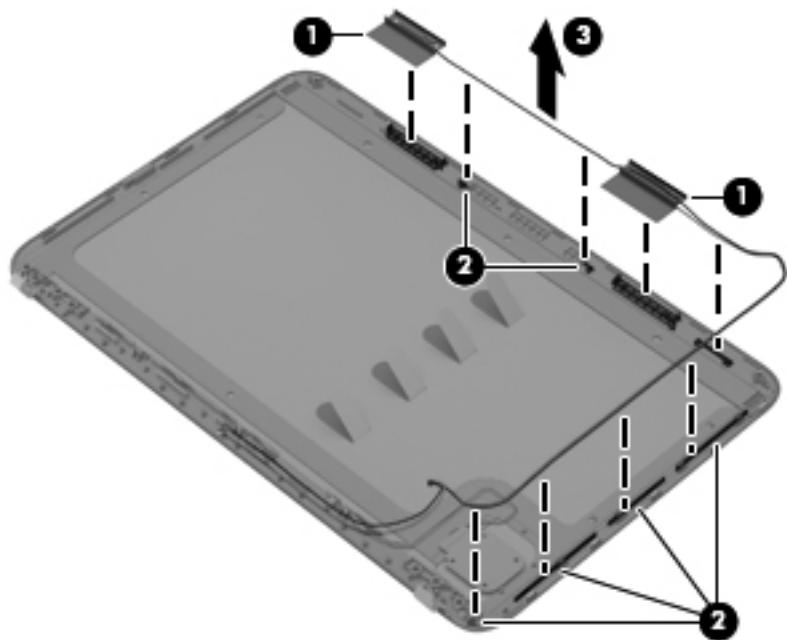

Reverse this procedure to reassemble and install the display assembly.

# 5 Setup Utility (BIOS) and System Diagnostics

## Using Setup Utility

Setup Utility, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Setup Utility includes settings for the types of peripherals installed, the startup sequence of the computer, and the amount of system and extended memory.

 **NOTE:** Use extreme care when making changes in Setup Utility. Errors can prevent the computer from operating properly.

### Starting Setup Utility

 **NOTE:** An external keyboard or mouse connected to a USB port can be used with Setup Utility only if USB legacy support is enabled.

To start Setup Utility, follow these steps:

1. Turn on or restart the computer, and then press `esc` while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.
2. Press `f10` to enter Setup Utility.

### Changing the language of Setup Utility

1. Start Setup Utility.
2. Use the arrow keys to select **System Configuration > Language**, and then press `enter`.
3. Use the arrow keys to select a language, and then press `enter`.
4. When a confirmation prompt with your language selected is displayed, press `enter`.
5. To save your change and exit Setup Utility, use the arrow keys to select **Exit > Exit Saving Changes**, and then press `enter`.

Your change takes effect immediately.

## Navigating and selecting in Setup Utility

To navigate and select in Setup Utility, follow these steps:

1. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
  - To select a menu or a menu item, use the tab key and the keyboard arrow keys and then press **enter**, or use a pointing device to click the item.
  - To scroll up and down, click the up arrow or the down arrow in the upper-right corner of the screen, or use the up arrow key or the down arrow key.
  - To close open dialog boxes and return to the main Setup Utility screen, press **esc**, and then follow the on-screen instructions.

 **NOTE:** You can use either a pointing device (TouchPad, pointing stick, or USB mouse) or the keyboard to navigate and make selections in Setup Utility.

2. Press **f10** to enter Setup Utility.

To exit Setup Utility menus, choose one of the following methods:

- To exit Setup Utility menus without saving your changes, click the **Exit** icon in the lower-left corner of the screen, and then follow the on-screen instructions.

– or –

Use the tab key and the arrow keys to select **File > Ignore Changes and Exit**, and then press **enter**.
- To save your changes and exit Setup Utility menus, click the **Save** icon in the lower-left corner of the screen, and then follow the on-screen instructions.

– or –

Use the tab key and the arrow keys to select **File > Save Changes and Exit**, and then press **enter**.

Your changes go into effect when the computer restarts.

## Displaying system information

1. Start Setup Utility.
2. Select the **Main** menu. System information such as the system time and date, and identification information about the computer is displayed.
3. To exit Setup Utility without changing any settings, use the arrow keys to select **Exit > Exit Discarding Changes**, and then press **enter**.

## Restoring factory settings in Setup Utility

 **NOTE:** Restoring defaults will not change the hard drive mode.

To return all settings in Setup Utility to the values that were set at the factory, follow these steps:

1. Turn on or restart the computer, and then press `esc` while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
2. Press `f10` to enter Setup Utility.
3. Use a pointing device or the arrow keys to select **File > Restore Defaults**.
4. Follow the on-screen instructions.
5. To save your changes and exit, click the **Save** icon in the lower-left corner of the screen, and then follow the on-screen instructions.

– or –

Use the arrow keys to select **File > Save Changes and Exit**, and then press `enter`.

Your changes go into effect when the computer restarts.

 **NOTE:** Your password settings and security settings are not changed when you restore the factory settings.

## Exiting Setup Utility

- To exit Setup Utility and save your changes from the current session:  
If the Setup Utility menus are not visible, press `esc` to return to the menu display. Then use the arrow keys to select **Exit > Exit Saving Changes**, and then press `enter`.
- To exit Setup Utility without saving your changes from the current session:  
If the Setup Utility menus are not visible, press `esc` to return to the menu display. Then use the arrow keys to select **Exit > Exit Discarding Changes**, and then press `enter`.

## Updating the BIOS

Updated versions of the BIOS may be available on the HP Web site.

Most BIOS updates on the HP Web site are packaged in compressed files called *SoftPqxs*.

Some download packages contain a file named *Readme.txt*, which contains information regarding installing and troubleshooting the file.

## Determining the BIOS version

To determine whether available BIOS updates contain later BIOS versions than those currently installed on the computer, you need to know the version of the system BIOS currently installed.

BIOS version information (also known as ROM date and System BIOS) can be displayed by pressing **Fn + esc** (if you are already in Windows) or by using Setup Utility.

1. Start Setup Utility.
2. Use a pointing device or the arrow keys to select **File > System Information**.
3. To exit Setup Utility without saving your changes, click the **Exit** icon in the lower-left corner of the screen, and then follow the on-screen instructions.

– or –

Use the tab key and the arrow keys to select **File > Ignore Changes and Exit**, and then press **enter**.

## Downloading a BIOS update

**⚠ CAUTION:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:

Do not disconnect power from the computer by unplugging the power cord from the AC outlet.

Do not shut down the computer or initiate Sleep or Hibernation.

Do not insert, remove, connect, or disconnect any device, cable, or cord.

1. **Windows 7**—Select **Start > Help and Support > Maintain**.

**Windows XP**—Select **Start > Help and Support**, and then select the software and drivers update.

2. Follow the on-screen instructions to identify your computer and access the BIOS update you want to download.
3. At the download area, follow these steps:
  - a. Identify the BIOS update that is later than the BIOS version currently installed on your computer. Make a note of the date, name, or other identifier. You may need this information to locate the update later, after it has been downloaded to your hard drive.
  - b. Follow the on-screen instructions to download your selection to the hard drive. Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

**>Note:** If you connect your computer to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

BIOS installation procedures vary. Follow any instructions that are displayed on the screen after the download is complete. If no instructions are displayed, follow these steps:

1. **Windows 7**—Open Windows Explorer by selecting **Start > Computer**.  
**Windows XP**—Open Windows Explorer by selecting **Start > My Computer**.
2. Double-click your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder on your hard drive that contains the update.
4. Double-click the file that has an .exe extension (for example, *filename.exe*).  
The BIOS installation begins.
5. Complete the installation by following the on-screen instructions.

---

 **NOTE:** After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

---

## Using System Diagnostics

System Diagnostics allows you to run diagnostic tests to determine if the computer hardware is functioning properly. The following diagnostic tests are available in System Diagnostics:

- Start-up test—This test analyzes the main computer components that are required to start the computer.
- Run-in test—This test repeats the start-up test and checks for intermittent problems that the start-up test does not detect.
- Hard disk test—This test analyzes the physical condition of the hard drive, and then checks all data in every sector of the hard drive. If the test detects a damaged sector, it attempts to move the data to a good sector.
- Memory test—This test analyzes the physical condition of the memory modules. If it reports an error, replace the memory modules immediately.
- Battery test—This test analyzes the condition of the battery. If the battery fails the test, contact HP support to report the issue and purchase a replacement battery.

You can also view system information and error logs in the System Diagnostics window.

To start System Diagnostics:

1. Turn on or restart the computer. While the “Press the ESC key for Startup Menu” message is displayed in the lower-left corner of the screen, press **esc**. When the Startup Menu is displayed, press **f2**.
2. Click the diagnostic test you want to run, and then follow the on-screen instructions.

---

 **NOTE:** If you need to stop a diagnostics test while it is running, press **esc**.

---

# 6 Specifications

## Computer specifications

	Metric	U.S.
<b>Dimensions</b>		
Depth	<b>24.7 cm</b>	9.72 in
Width	<b>37.8 cm</b>	14.88 in
Height (front to back)	<b>3.1 to 3.5 cm</b>	1.23 to 1.39 in
<b>Weight</b>	<b>2.91 kg</b>	6.42 lb
<b>Input power</b>		
Operating voltage	18.5 V dc @ 3.5 A – 65 W; 19 V dc @ 4.74 A – 90 W; or 18.5 V dc @ 6.5 A – 120 W	
Operating current	3.5, 4.74, or 6.5 A	
<b>Temperature</b>		
Operating	<b>5°C to 35°C</b>	41°F to 95°F
Nonoperating	<b>-20°C to 60°C</b>	-4°F to 140°F
<b>Relative humidity</b> (noncondensing)		
Operating	10% to 90%	
Nonoperating	5% to 95%	
<b>Maximum altitude</b> (unpressurized)		
Operating	<b>-15 m to 3,048 m</b>	-50 ft to 10,000 ft
Nonoperating	<b>-15 m to 12,192 m</b>	-50 ft to 40,000 ft
<b>NOTE:</b> Applicable product safety standards specify thermal limits for plastic surfaces. The device operates well within this range of temperatures.		

# 15.6-inch display specifications

	Metric	U.S.
<b>Dimensions</b>		
Height	<b>19.6 cm</b>	7.72 in
Width	<b>34.7 cm</b>	13.66 in
Diagonal	<b>39.8 cm</b>	15.67 in
<b>Number of colors</b>		
<b>Contrast ratio</b>		
<b>Brightness</b>		
<b>Pixel resolution</b>		
Pitch	<b>0.197 × 0.197 mm</b>	
Format	1366 × 768	
Configuration	RGB vertical stripe	
<b>Backlight</b>		
<b>Character display</b>		
<b>Total power consumption</b>		
<b>Viewing angle</b>		
	±65° horizontal, ±50° vertical (typical)	

# Hard drive specifications

	<b>1-TB*</b>	<b>750-GB**</b>	<b>640-GB**</b>			
<b>Dimensions</b>						
Height	12.7 mm	9.5 mm	9.5 mm			
Length	100.2 mm	100.2 mm	100.2 mm			
Width	69.9 mm	69.9 mm	69.9 mm			
Weight	152 g	110 g	98 g			
<b>Interface type</b>						
	SATA (3 GB/sec)	SATA (3 GB/sec)	SATA			
<b>Transfer rate</b>						
Synchronous (maximum)	97 MB/sec	97 MB/sec	106 MB/sec			
Security	ATA security	ATA security	ATA security			
<b>Seek times</b> (typical read, including setting)						
Single track	2.0 ms	2.0 ms	1.5 ms			
Average (read/write)	12/16 ms	12/16 ms	12/13 ms			
Maximum	21 ms	21 ms	24 ms			
<b>Logical blocks</b>						
	1,953,525,168	1,465,149,168	1,250,263,728			
<b>Disk rotational speed</b>						
	5400 RPM	7200 and 5400 rpm	7200 rpm			
<b>Operating temperature</b>						
	0°C to 60°C (32°F to 140°F)					
*1 TB = 1 trillion bytes when referring to hard drive storage capacity. Actual accessible capacity is less.						
**1 GB = 1 billion bytes when referring to hard drive storage capacity. Actual accessible capacity is less.						
<b>NOTE:</b> Certain restrictions and exclusions apply. Contact technical support for details.						

## Hard drive specifications (continued)

	500-GB*	320-GB*	250-GB*
<b>Dimensions</b>			
Height	9.5 mm	7.0 mm	7.0 mm
Length	100.4 mm	100.4 mm	100.4 mm
Width	69.9 mm	69.9 mm	69.9 mm
Weight	110 g	110 g	105 g
<b>Interface type</b>			
<b>Transfer rate</b>			
Synchronous (maximum)	1.1 GB/sec	1.1 GB/sec	1.1 GB/sec
Security	ATA security	ATA security	ATA security
<b>Seek times</b> (typical read, including settling)			
Single track	1.5 ms	1.5 ms	1.5 ms
Average (read/write)	11/13 ms	11/13 ms	11/13 ms
Maximum	22 ms	22 ms	22 ms
<b>Logical blocks</b>			
<b>Disk rotational speed</b>			
<b>Operating temperature</b>			
* 1 GB = 1 billion bytes when referring to hard drive storage capacity. Actual accessible capacity is less.			
<b>NOTE:</b> Certain restrictions and exclusions apply. Contact technical support for details.			

---

# 7 Backup and recovery

Your computer includes tools provided by the operating system and HP to help you safeguard your information and restore it if ever needed.

This chapter provides information on the following topics:

- Creating a set of recovery discs or a recovery flash drive (Recovery Manager software feature)
- Performing a system restore (from the partition, recovery discs, or a recovery flash drive)
- Backing up your information
- Recovering a program or driver

## Restore

In the event of hard drive failure, to restore your system to its factory image you will need a set of recovery discs or a recovery flash drive that you can create using HP Recovery Manager. HP recommends that you use this software to create either a set of recovery discs or a recovery flash drive immediately after software setup.

If for some other reason you need to restore your system, this can be achieved using the HP Recovery partition (select models only), without the need for recovery discs or a recovery flash drive. To check for the presence of a recovery partition, click **Start**, right-click **Computer**, click **Manage**, and then click **Disk Management**. If the recovery partition is present, a Recovery drive is listed in the window.

 **CAUTION:** HP Recovery Manager (partition, or discs/flash drive) restores only software that was preinstalled at the factory. Software not provided with this computer must be reinstalled manually.

 **NOTE:** Recovery discs have been included if your computer does not have a recovery partition.

# Creating restore media

HP recommends that you create either a set of recovery discs or a recovery flash drive to be sure that you can restore your computer to its original factory state if the hard drive fails, or if for any reason you cannot restore using the recovery partition tools. Create these discs or the flash drive after setting up the computer for the first time.

 **NOTE:** HP Recovery Manager allows the creation of only one set of recovery discs or one recovery flash drive. Handle these discs or flash drive carefully and keep them in a safe place.

 **NOTE:** If your computer does not include an integrated optical drive, you can use an optional external optical drive (purchased separately) to create recovery discs, or you can purchase recovery discs for your computer from the HP Web site. If you use an external optical drive, it must be connected directly to a USB port on the computer, not to a USB port on an external device, such as a USB hub.

Guidelines:

- Purchase high-quality DVD-R, DVD+R, DVD-R DL, or DVD+R DL discs.

 **NOTE:** Read-write discs, such as CD-RW, DVD±RW, double-layer DVD±RW, and BD-RE (rewritable Blu-ray) discs, are not compatible with the Recovery Manager software.

- the computer must be connected to AC power during this process.
- Only one set of recovery discs or one recovery flash drive can be created per computer.

 **NOTE:** If you are creating recovery discs, number each disc before inserting into the optical drive.

- If necessary, you can exit the program before you have finished creating the recovery discs or recovery flash drive. The next time you open Recovery Manager, you will be prompted to continue the backup creation process.

To create a set of recovery discs or a recovery flash drive:

1. Select **Start > All Programs > Recovery Manager > Recovery Media Creation**.
2. Follow the on-screen instructions.

# Performing a system restore

Recovery Manager software allows you to repair or restore the computer to its original factory state. Recovery Manager works from recovery discs, a recovery flash drive, or from a dedicated recovery partition (select models only) on the hard drive.

 **NOTE:** A system restore needs to be performed if the computer hard drive has failed or if all attempts to correct any functional computer issues fail.

A system restore should be used as a final attempt to correct computer issues. Note the following when performing a system restore:

- You can restore only the system that you have previously backed up. HP recommends that you use HP Recovery Manager to create either a set of recovery discs or a recovery flash drive as soon as you set up the computer.
- Windows has its own built-in repair features, such as System Restore. If you have not already tried these features, try them before using Recovery Manager.
- Recovery Manager restores only software that was preinstalled at the factory. Software not provided with this computer must be downloaded from the manufacturer's Web site or reinstalled from the disc provided by the manufacturer.

## Restoring using the dedicated recovery partition (select models only)

When using the dedicated recovery partition, there is an option to back up pictures, music and other audio, videos and movies, recorded TV shows, documents, spreadsheets and presentations, e-mails, Internet favorites and settings during this process.

To restore the computer from the recovery partition, follow these steps:

1. Access Recovery Manager in either of the following ways:
  - Select **Start > All Programs > Recovery Manager > Recovery Manager**.  
– or –
  - Turn on or restart the computer, and then press **esc** while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen. Then, press **f11** while the "F11 (System Recovery)" message is displayed on the screen.
2. Click **System Recovery** in the **Recovery Manager** window.
3. Follow the on-screen instructions.

## Restoring using the restore media

1. If possible, back up all personal files.
2. Insert the first recovery disc into the optical drive on your computer or an optional external optical drive, and then restart the computer.

– or –

Insert the recovery flash drive into a USB port on your computer, and then restart the computer.

---

 **NOTE:** If the computer does not automatically restart in the Recovery Manager, the computer boot order needs to be changed.

---

3. Press **f9** at system bootup.
4. Select the optical drive or the flash drive.
5. Follow the on-screen instructions.

## Changing the computer boot order

To change the boot order for recovery discs:

1. Restart the computer.
2. Press **esc** while the computer is restarting, and then press **f9** for boot options.
3. Select **Internal CD/DVD ROM Drive** from the boot options window.

To change the boot order for recovery flash drive:

1. Insert the flash drive into a USB port.
2. Restart the computer.
3. Press **esc** while the computer is restarting, and then press **f9** for boot options.
4. Select the flash drive from the boot options window.

# Backing up and recovering your information

It is very important to back up your files and keep any new software in a safe place. As you add new software and data files, continue to create backups on a regular basis.

How completely you are able to recover your system depends on how recent your backup is.

---

 **NOTE:** A recovery from your most recent backup needs to be performed if the computer has a virus attack or if any major system components fail. In order to correct computer issues, a recovery should first be attempted before a system restore is attempted.

---

You can back up your information to an optional external hard drive, a network drive, or discs. Back up your system at the following times:

- At regularly scheduled times
-  **TIP:** Set reminders to back up your information periodically.
- Before the computer is repaired or restored
- Before you add or modify hardware or software

Guidelines:

- Create system restore points using the Windows System Restore feature, and periodically copy them to an optical disc or an external hard drive. For more information on using system restore points, refer to **Using Windows system restore points**.
- Store personal files in the Documents library and back up this folder periodically.
- Save customized settings in a window, toolbar, or menu bar by taking a screen shot of your settings. the screen shot can be a time-saver if you have to re-enter your preferences.

To create a screen shot:

1. Display the screen you want to save.
2. Copy the screen image:

To copy only the active window, press **alt+fn+prt sc**.

To copy the entire screen, press **fn+prt sc**.

3. Open a word-processing document, and then select **Edit > Paste**. the screen image is added to the document.
4. Save and print the document.

## Using Windows Backup and Restore

Guidelines:

- Be sure that the computer is connected to AC power before you start the backup process.
- Allow enough time to complete the backup process. Depending on file sizes, it may take over an hour.

To create a backup:

1. Select **Start > Control Panel > System and Security > Backup and Restore**.
2. Follow the on-screen instructions to schedule and create a backup.



**NOTE:** Windows includes the User Account Control feature to improve the security of the computer. You may be prompted for your permission or password for tasks such as installing software, running utilities, or changing Windows settings. Refer to Help and Support for more information.

## Using Windows system restore points

A system restore point allows you to save and name a snapshot of your hard drive at a specific point in time. You can then recover back to that point if you want to reverse subsequent changes.



**NOTE:** Recovering to an earlier restore point does not affect data files saved or e-mails created since the last restore point.

You also can create additional restore points to provide increased protection for your files and settings.

### When to create restore points

- Before you add or modify software or hardware
- Periodically, whenever the computer is functioning optimally



**NOTE:** If you revert to a restore point and then change your mind, you can reverse the restoration.

## Create a system restore point

1. Select **Start > Control Panel > System and Security > System**.
2. In the left pane, click **System Protection**.
3. Click the **System Protection** tab.
4. Follow the on-screen instructions.

## Restore to a previous date and time

To revert to a restore point (created at a previous date and time), when the computer was functioning optimally, follow these steps:

1. Select **Start > Control Panel > System and Security > System**.
2. In the left pane, click **System Protection**.
3. Click the **System Protection** tab.
4. Click **System Restore**.
5. Follow the on-screen instructions.

---

## 8 Power cord set requirements

The wide-range input feature of the computer permits it to operate from any line voltage from 100 to 120 volts AC, or from 220 to 240 volts AC.

The 3-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries and regions must meet the requirements of the country or region where the computer is used.

### Requirements for all countries

The following requirements are applicable to all countries and regions:

- The length of the power cord set must be at least **1.5 m** (5.0 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 amps and a nominal voltage rating of 125 or 250 V AC, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

# Requirements for specific countries and regions

Country/region	Accredited agency	Applicable note number
Australia	EANSW	1
Austria	OVE	1
Belgium	CEBC	1
Canada	CSA	2
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1
Germany	VDE	1
Italy	IMQ	1
Japan	METI	3
The Netherlands	KEMA	1
Norway	NEMKO	1
The People's Republic of China	COC	5
South Korea	EK	4
Sweden	SEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	4
The United Kingdom	BSI	1
The United States	UL	2

1. The flexible cord must be Type HO5VV-F, 3-conductor, 1.0-mm<sup>2</sup> conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
2. The flexible cord must be Type SPT-3 or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V) or NEMA 6-15P (15 A, 250 V) configuration.
3. The appliance coupler, flexible cord, and wall plug must bear a "T" mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCT or VCTF, 3-conductor, 1.00-mm<sup>2</sup> conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V) configuration.
4. The flexible cord must be Type RVV, 3-conductor, 0.75-mm<sup>2</sup> conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
5. The flexible cord must be Type VCTF, 3-conductor, 0.75-mm<sup>2</sup> conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.

# 9 Recycling

## Battery

When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for computer battery disposal.

## Display

**⚠ WARNING!** The backlight contains mercury. Caution must be exercised when removing and handling the backlight to avoid damaging this component and causing exposure to the mercury.

**⚠ CAUTION:** The procedures in this chapter can result in damage to display components. The only components intended for recycling purposes are the liquid crystal display (LCD) panel and the backlight. When you remove these components, handle them carefully.

**📝 NOTE:** Materials Disposal. This HP product contains mercury in the backlight in the display assembly that might require special handling at end-of-life. Disposal of mercury may be regulated because of environmental considerations. For disposal or recycling information, contact your local authorities, or see the Electronic Industries Alliance (EIA) Web site at <http://www.eiae.org>.


This section provides disassembly instructions for the display assembly. The display assembly must be disassembled to gain access to the backlight **(1)** and the liquid crystal display (LCD) panel **(2)**.



**📝 NOTE:** The procedures provided in this chapter are general disassembly instructions. Specific details, such as screw sizes, quantities, and locations, and component shapes and sizes, can vary from one computer model to another.

Perform the following steps:


1. Remove all screw covers (1) and screws (2) that secure the display bezel to the display assembly.

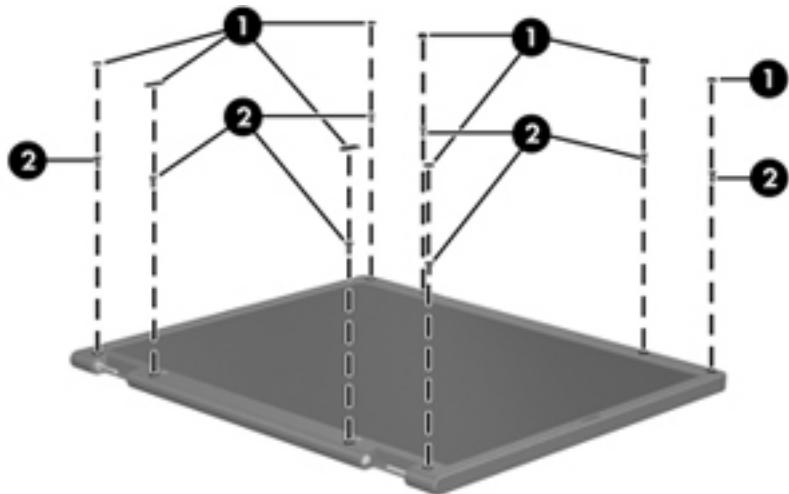


2. Lift up and out on the left and right inside edges (1) and the top and bottom inside edges (2) of the display bezel until the bezel disengages from the display assembly.
3. Remove the display bezel (3).




4. Disconnect all display panel cables **(1)** from the display inverter and remove the inverter **(2)**.

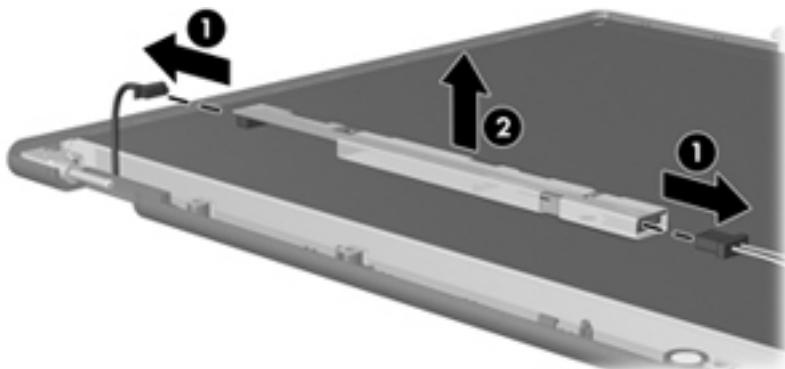

5. Remove all screws **(1)** that secure the display panel assembly to the display enclosure.
6. Remove the display panel assembly **(2)** from the display enclosure.

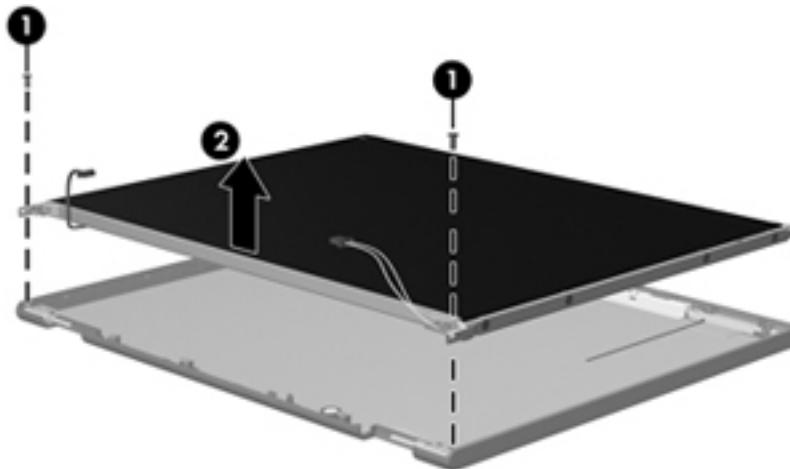


7. Turn the display panel assembly upside down.
8. Remove all screws that secure the display panel frame to the display panel.

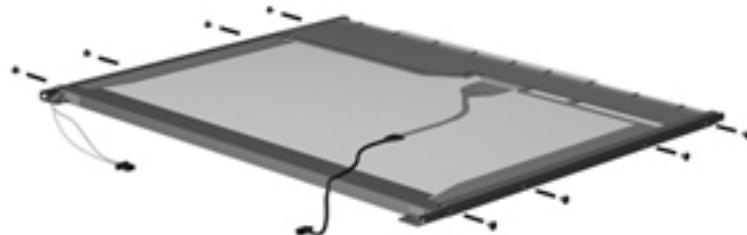


9. Use a sharp-edged tool to cut the tape **(1)** that secures the sides of the display panel to the display panel frame.

**10.** Remove the display panel frame **(2)** from the display panel.

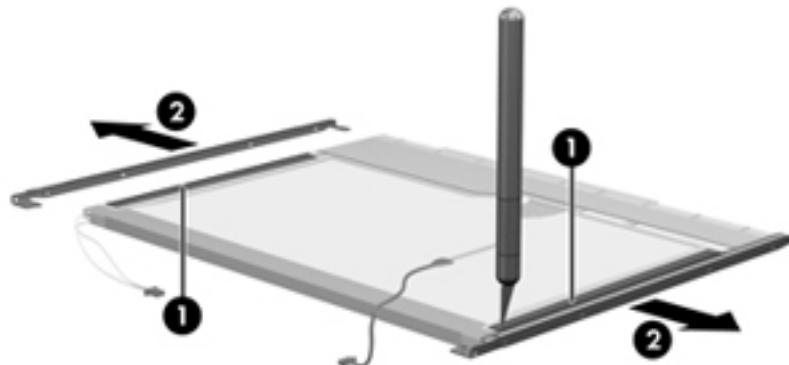

**11.** Remove the screws **(1)** that secure the backlight cover to the display panel.


**12.** Lift the top edge of the backlight cover **(2)** and swing it outward.

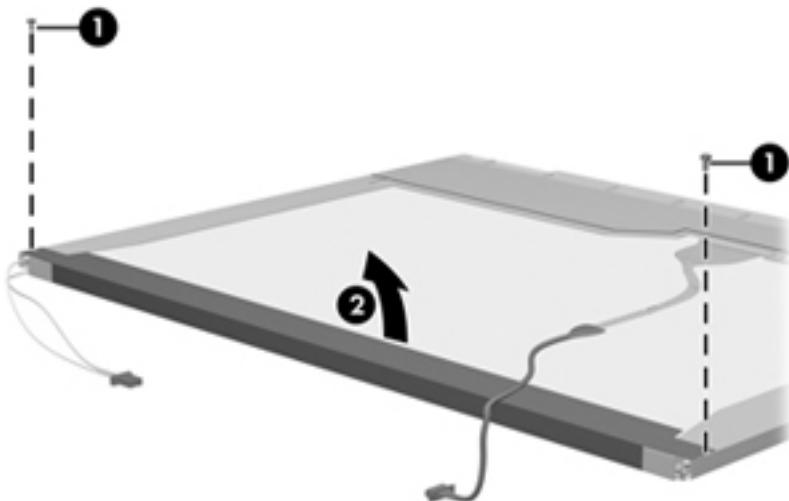

**13.** Remove the backlight cover.


**14.** Turn the display panel right-side up.

- 15.** Remove the backlight cables **(1)** from the clip **(2)** in the display panel.

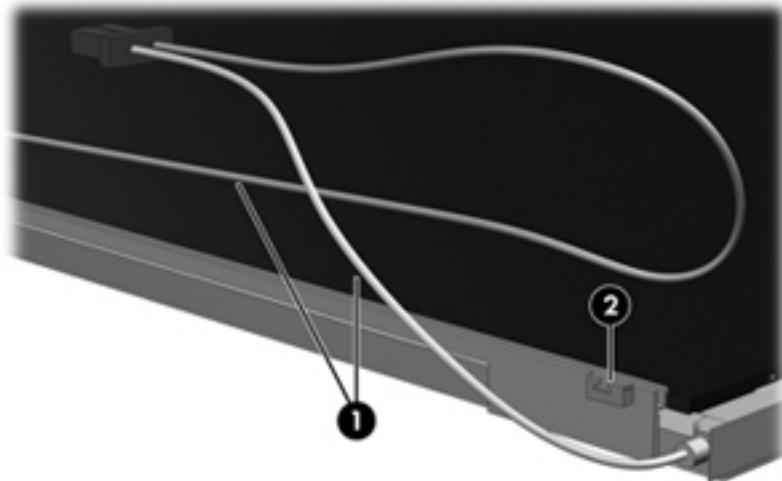


- 16.** Turn the display panel upside down.

- 17.** Remove the backlight frame from the display panel.

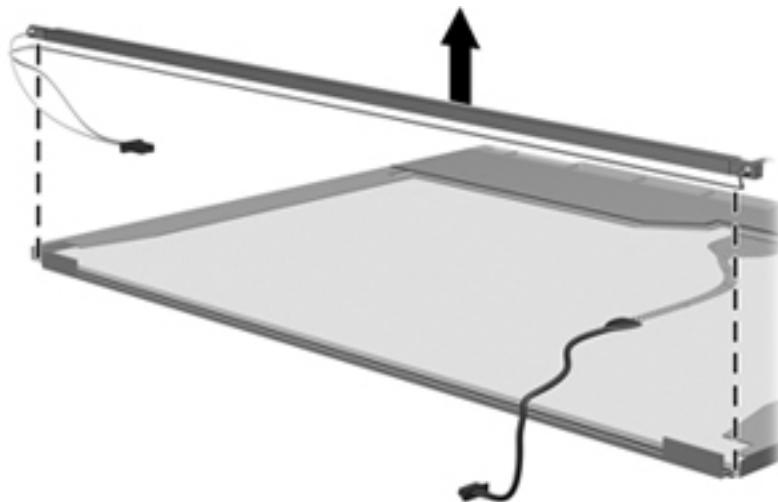

**⚠️ WARNING!** The backlight contains mercury. Exercise caution when removing and handling the backlight to avoid damaging this component and causing exposure to the mercury.

**18.** Remove the backlight from the backlight frame.

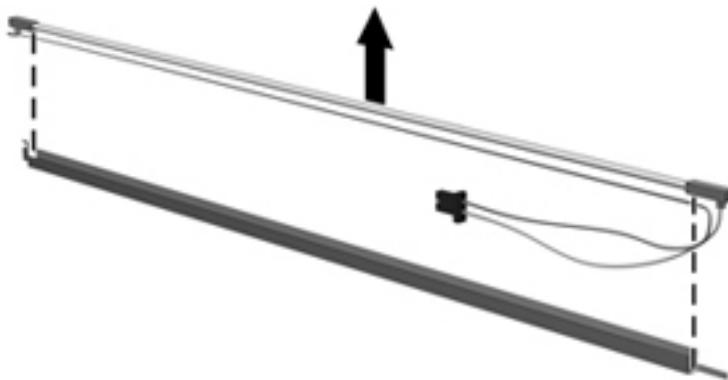


**19.** Disconnect the display cable **(1)** from the LCD panel.


**20.** Remove the screws **(2)** that secure the LCD panel to the display rear panel.

**21.** Release the LCD panel **(3)** from the display rear panel.

**22.** Release the tape **(4)** that secures the LCD panel to the display rear panel.

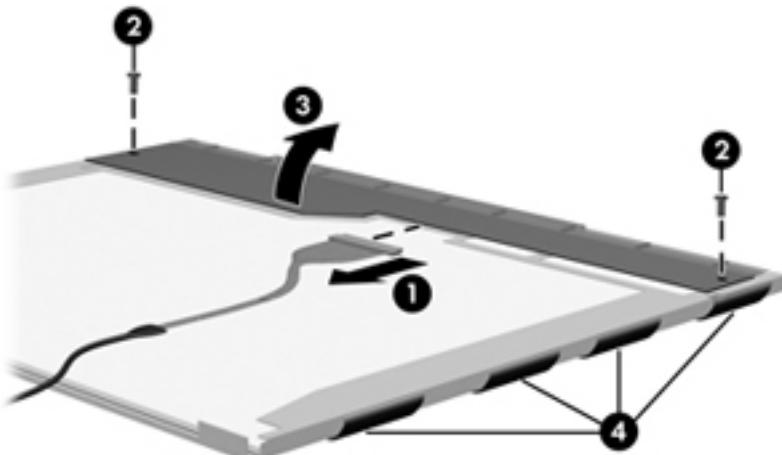

**23.** Remove the LCD panel.

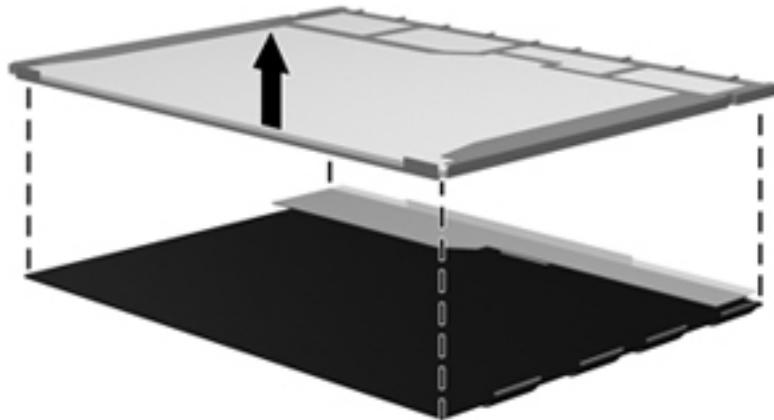

**24.** Recycle the LCD panel and backlight.

# Index

## A

AC adapter, spare part numbers 37, 39, 40  
Action keys 14  
antenna  
    locations 11  
    removal 110  
    spare part number 34, 41, 111  
Antenna Kit, spare part number 34, 41, 111  
audio, product description 7  
audio-in jack 17  
audio-out jack 17

## B

b key 13  
base enclosure, spare part numbers 30, 41, 44  
battery  
    removal 59  
    spare part numbers 30, 39, 41, 59  
battery bay 19  
battery light 18  
battery release latch 19  
Blu-ray ROM with LightScribe DVD ±R/RW Super Multi Double-Layer Drive  
    precautions 53  
    spare part number 32, 37, 47, 60  
Bluetooth module  
    removal 79  
    spare part numbers 25, 39, 50, 79  
Bluetooth module cable  
    removal 81  
    spare part number 26, 45

bottom components 19  
button components 12  
buttons  
    optical drive eject 18  
    power 12  
    TouchPad 15  
    TouchPad on/off 15  
    Web browser 12

## C

Cable Kit  
    contents 32  
    spare part number 26, 32, 42  
cables, service considerations 52  
caps lock light 14  
chipset, product description 3  
components  
    bottom 19  
    button 12  
    display 11  
    fingerprint reader 12  
    front 16  
    keys 13  
    left-side 17  
    lights 14  
    rear 16  
    right-side 18  
    speaker 12  
    TouchPad 15  
computer feet, locations 58  
computer major components 22  
computer part number 21, 57  
computer specifications 117  
connectors, service  
    considerations 52

## D

display  
    specifications 118  
    subcomponents 34  
display assembly  
    removal 103  
    spare part numbers 22, 42, 45, 48, 50, 103  
display bezel  
    removal 105  
    spare part numbers 34, 42  
Display Cable Kit  
    spare part numbers 50  
Display Cable Kit, spare part numbers 34, 42, 47, 110  
display components 11  
display enclosure, spare part numbers 34, 41, 45, 48, 106  
Display Hinge Kit, spare part number 34, 42, 109  
display panel  
    product description 5  
    removal 107  
    spare part numbers 34, 44, 49, 109  
display panel cable  
    removal 109  
    spare part numbers 34, 110  
Display Rubber Kit, spare part number 35, 47  
Display Screw Kit, spare part number 35, 44  
drive light 18  
drives, preventing damage 53  
DVD±RW and CD-RW FX Combo Drive  
    spare part number 32, 37, 50, 60

DVD±RW and CD-RW Super Multi Double-Layer Combo Drive with LightScribe  
precautions 53  
spare part number 32, 37, 47, 60  
DVD±RW and CD-RW Super Multi Double-Layer FX Combo Drive  
spare part number 32, 37, 46, 50, 60

**E**  
electrostatic discharge 53  
equipment guidelines 56  
esc key 13  
Ethernet, product description 7  
external media cards, product description 8  
external monitor port 17

**F**  
fan/heat sink assembly  
removal 90  
spare part numbers 30, 42, 45, 48, 90  
feet, locations 58  
fingerprint reader 12  
fingerprint reader board  
removal 78  
spare part number 25, 42, 78  
fingerprint reader board cable  
disconnection 76  
illustrated 33  
fingerprint reader components 12  
fn key 13  
front component 16

**G**  
graphics, product description 4  
grounding guidelines 53  
guidelines  
equipment 56  
grounding 53  
packaging 55  
transporting 55  
workstation 55

**H**  
hard drive  
precautions 53  
product description 6

removal 62  
spare part numbers 31, 36, 39, 40, 41, 46, 62  
specifications 119, 120

hard drive bay 19  
hard drive bracket  
illustrated 36  
removal 63  
hard drive connector cable  
illustrated 32  
removal 63

Hard Drive Hardware Kit, spare part number 31, 36, 42, 62  
HDMI port 17  
headphone jack 17  
hinge

removal 109  
spare part number 34, 42, 109

hinge cover  
removal 106  
spare part number 34, 46, 107

**J**  
jacks  
audio-in 17  
audio-out 17  
headphone 17  
microphone 17  
network 17  
RJ-45 17

**K**  
key components 13  
keyboard  
product description 9  
removal 70  
spare part numbers 23, 42, 43, 47, 48, 70

keys  
Action 14  
b 13  
esc 13  
fn 13  
num lk 14  
numeric keypad 14  
Windows applications 13  
Windows logo 13

**L**  
left-side components 17  
light components 14  
lights  
battery 18  
caps lock 14  
drive 18  
fingerprint reader 15  
mute 14  
optical drive 18  
power 14, 18  
TouchPad off 15  
TouchPad on 15  
webcam 11  
wireless 15

**M**  
mass storage device  
precautions 53  
removal 62  
spare part numbers 36, 62  
memory module  
product description 5  
removal 66  
spare part numbers 31, 40, 41, 66  
microphone  
locations 11  
product description 7  
microphone jack 17  
model description 21, 58  
model name 1  
monitor port 17  
mute light 14

**N**  
network jack 17  
num lk key 14  
numeric keypad 14

**O**  
operating system, product description 10  
optical drive  
location 18  
precautions 53  
product description 7  
removal 60  
spare part numbers 32, 37, 46, 47, 50, 60

- optical drive bay space saver  
spare part number 32, 37, 50, 60
- optical drive bracket, removal 61
- optical drive connector cable  
illustrated 32  
removal 102
- optical drive eject button 18
- optical drive light 18
- P**
- packaging guidelines 55
- plastic parts, service  
considerations 52
- Plastics Kit, spare part number 32, 44, 61
- pointing device, product  
description 9
- ports  
external monitor 17  
HDMI 17  
monitor port 17  
product description 9  
USB 17, 18
- power button 12
- power button board  
removal 77  
spare part number 25, 43, 77
- power button board cable  
disconnection 76  
illustrated 33
- power connector 18
- power connector cable  
removal 83  
spare part number 26, 42
- power cord  
set requirements 128  
spare part numbers 37, 38, 39
- power light 14, 18
- power requirements, product  
description 9
- processor  
product description 1  
removal 95  
spare part numbers 28, 40, 41, 49, 95
- product description  
audio 7  
chipset 3
- display panel 5  
Ethernet 7  
external media cards 8  
graphics 4  
hard drives 6  
keyboard 9  
memory module 5  
microphone 7  
operating system 10  
optical drive 7  
pointing device 9  
ports 9  
power requirements 9  
processors 1  
product name 1  
security 10  
serviceability 10  
video 7  
wireless 7
- product name 1, 20, 57  
product number 21, 57
- R**
- rear component 16
- remote control, spare part  
number 38
- removal/replacement  
preliminaries 52  
procedures 57
- right-side components 18
- RJ-45 jack 17
- RTC battery  
removal 65  
spare part number 31, 39, 65
- S**
- Screw Kit, spare part number 38, 44
- security cable slot 18
- security, product description 10
- serial number 20, 57
- service considerations  
cables 52  
connectors 52  
plastic parts 52
- service cover  
removal 61  
spare part number 32, 44, 61
- service tag 20, 57
- serviceability, product description 10
- Setup Utility (BIOS) 112
- solid-state drive  
illustrated 37  
precautions 53  
removal 62  
spare part number 31, 37, 47, 62
- speaker components 12
- speaker cover, spare part  
numbers 26, 44, 45, 99
- Speaker Kit, spare part number 26, 44, 99
- speakers  
locations 12, 16  
removal 99  
spare part number 26, 44, 99
- specifications  
computer 117  
display 118  
hard drive 119, 120
- system board  
removal 85  
spare part numbers 26, 44, 45, 46, 48, 49, 50, 51, 85
- System Diagnostics 112
- T**
- Thermal Material Kit  
spare part numbers 50
- Thermal Material Kit, spare part  
numbers 28, 44, 46, 48, 85, 90, 95
- tools required 52
- top cover  
removal 74  
spare part numbers 25, 44, 45, 46, 48, 74
- TouchPad button 15
- TouchPad button board cable  
disconnection 76  
illustrated 33
- TouchPad cable, illustrated 33
- TouchPad components 15
- TouchPad off light 15
- TouchPad on light 15
- TouchPad on/off button 15
- TouchPad zone 15

transporting guidelines 55

## **U**

USB board  
removal 82  
spare part number 26, 44  
USB board cable, illustrated 33  
USB DVB-T TV tuner, spare part  
number 38, 39  
USB DVD-T antenna, spare part  
number 38, 39  
USB port 17, 18

## **V**

vent 16  
vents 17, 19  
video, product description 7

## **W**

warranty period 21, 58  
Web browser button 12  
webcam 11  
webcam light 11  
webcam/microphone module  
removal 106  
spare part number 34, 41,  
106  
Windows applications key 13  
Windows logo key 13  
wireless antenna  
locations 11  
removal 110  
spare part number 34, 41,  
111  
wireless light 15  
wireless, product description 7  
WLAN module  
removal 67  
spare part numbers 31, 39,  
40, 45, 50, 67  
workstation guidelines 55

