ModusToolbox™ Software Training Level 3 - Bluetooth® Type1



Chapter 7: Beacons

In this chapter, you will learn about the different uses for a Bluetooth® LE advertising packet. Furthermore, you will learn about Bluetooth® LE beacons which are devices that use advertising packets to broadcast useful information without requiring (or even allowing) a connection.

Table of contents

7.1	Advertising Packets	
7.1.1	Using the Advertising Packet to Get Connected	
7.1.2	Beacons	
7.1.3	Bluetooth® LE mesh	∠
7.2	Creating Advertising Packets Manually	5
7.3	Multi-advertisement	6
7.3.1	Multi-advertisement API	
7.3.2	Multi-advertisement callback events	.
7.4	iBeacon	7
7.5	Eddystone	
7.6	Exercises	
Exercise	e 1: Eddystone URL beacon	
	e 2: Eddystone URL, UID, and TLM beacon using multi-advertising	

Document conventions

Convention	Usage	Example
Courier New	Displays code and text commands	<pre>CY_ISR_PROTO(MyISR); make build</pre>
Italics	Displays file names and paths	sourcefile.hex
[bracketed, bold]	Displays keyboard commands in procedures	[Enter] or [Ctrl] [C]
Menu > Selection	Represents menu paths	File > New Project > Clone
Bold	Displays GUI commands, menu paths and selections, and icon names in procedures	Click the Debugger icon, and then click Next .



7.1 Advertising Packets


There are three main uses for advertising packets:

- Identifying a peripheral with some recognizable data so that a central knows it can connect to it.
- Sending out data (e.g. beacon data).
- Implementing a Bluetooth mesh network (which uses advertising packets to send and receive data).

Up until now, we have only been using advertising to allow a central to identify a peripheral. In this chapter, we will use advertising to send out beacon data. The third use - Bluetooth® mesh - is covered in a separate class.

7.1.1 Using the Advertising Packet to Get Connected

If you turn on the AIROC™ Connect scanner, you will find that there are likely a bunch of unknown devices that are advertising around you. For instance, in the figure below you can see that there are quite a few Bluetooth® LE devices around me.

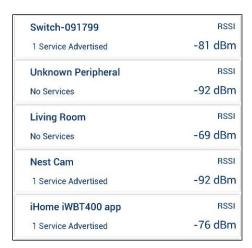


When a central wants to connect to a peripheral, how does it know which peripheral to talk to? There are two common ways to address that question.

The first way is to advertise a service that the central knows about (because it is defined by the Bluetooth® SIG or is custom to your company). In the picture above, you can see that some of the devices are advertising that they support 1 service.

You can advertise a complete list of services (if it fits in the packet) or just a subset of services. The services themselves are specified by including the service UUID which can be 128 bits, 32 bits, or 16 bits depending on the service.



The Bluetooth® configurator can be used to advertise one or more services – just check the box for **Enable Service UUID** and then check the box next to each service that you want to advertise. Remember that the packet can only be 31 bytes total so you can't advertise many services before you run out of space.

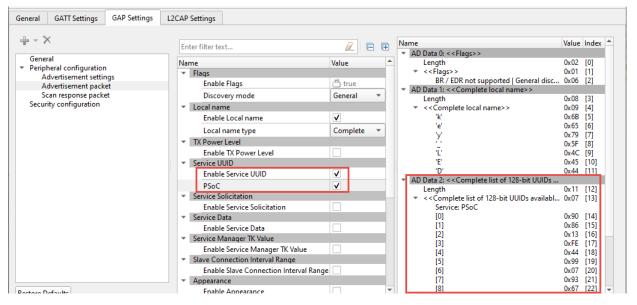

The advertising flag will depend on how many and what type of services you advertise and it indicates whether all services are being advertised or not. The possibilities are:

```
BTM_BLE_ADVERT_TYPE_16SRV_PARTIAL
BTM_BLE_ADVERT_TYPE_16SRV_COMPLETE
BTM_BLE_ADVERT_TYPE_32SRV_PARTIAL
BTM_BLE_ADVERT_TYPE_32SRV_COMPLETE
BTM_BLE_ADVERT_TYPE_128SRV_PARTIAL
BTM_BLE_ADVERT_TYPE_128SRV_COMPLETE
```

Note: The advertising data types can be found in btstack/version/wiced_include/wiced_bt_ble.h.


The second way that is commonly used is to advertise "Manufacturer's Specific Data". The data has two parts:

- A two-byte manufacturer code as specified by the Bluetooth SIG (e.g. Infineon = 0x0009).
- The actual data which is typically a product ID that is unique for each product that the company makes.

The way that this works is that you would write a central application that has a table of known peripheral product IDs that it knows how to talk to. Each peripheral advertises its manufacturer code and product ID in the manufacturers data field. When a central sees something that it knows how to talk to, it can make a connection.



The Bluetooth® configurator can also be used to setup the manufacturer specific data.

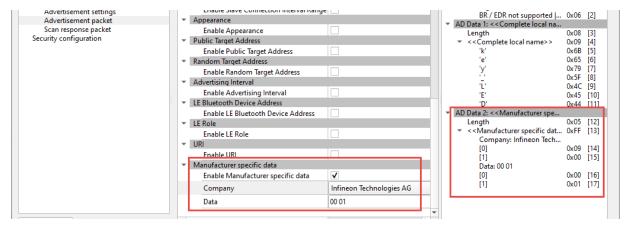

Note: Multiple bytes in the **Data** field must be separated with spaces.

7.1.2 Beacons

Bluetooth LE Beacons are devices that are intended to send out data using advertising packets. Often, they will allow connections for configuration of the beacon but not for normal use.

Beacons can be used for lots of different purposes such as providing location (especially in large indoor spaces without GPS coverage (like Shinjuku station in Tokyo - https://allabout-japan.com/en/article/2074), or links to web sites with geographically relevant information (like a website with sale information for a store that you are currently standing in).

There are (of course) two popular types of beacon: iBeacon, which is defined by Apple, and Eddystone which is defined by Google. Each of these will be discussed later in this chapter.

Typically beacons should not send out an advertising packet more often than every 100 ms.

7.1.3 Bluetooth® LE mesh

The third and final common use of advertising packets is for Bluetooth® LE mesh networks. In those networks, advertising packets are used to both send and receive information. Some devices will even provide a bridge between a mesh network and a traditional GATT connection. Bluetooth® LE mesh is a very detailed topic that is covered in a separate training class.



7.2 Creating Advertising Packets Manually

So far, we have been using the Bluetooth® configurator to create the data arrays for advertising packets which is by far the easiest way to do it. However, the configurator does not allow the data to be changed on the fly. Since beacons commonly want to periodically change their advertising data, we will setup the advertising arrays manually in the firmware.

As you learned earlier, an advertising packet is made up of fields where each field has up to 3 parts:

- Length in bytes (not including the Length byte)
- Type
- Optional Data

There is a datatype called wiced_bt_ble_advert_elem_t which is a structure that holds the information for one advertising field. It is defined as:

Note:

The len parameter used here is the length of just the data. It does NOT include the 1-byte for the advertising field type so it is not the same value that will go in the advertising packet itself.

To create the complete advertising packet, you just create an array of the advertising field structures. For example, the following will setup the advertising packet for a BLE only device that is discoverable and that advertises a name of "my_ble".

```
#define NUM FIELDS (2)
uint8 t adv data 0[] = { BTM BLE GENERAL DISCOVERABLE FLAG |
     BTM BLE BREDR NOT SUPPORTED };
uint8 t adv data 1[] = { "my ble" };
wiced bt ble advert elem t adv packet data[] =
{
    /* Flags */
        .advert type = BTM BLE ADVERT TYPE FLAG,
        .len = sizeof(adv data 0),
        .p data = adv data 0
    },
    /* Complete local name */
        .advert type = BTM BLE ADVERT TYPE NAME COMPLETE,
        .len = strlen(adv data 1),
        .p_data = adv data 1
    },
};
```

Once the packet is created in that format, the advertising data can be set using this function:



7.3 Multi-advertisement

Beacons can send out multiple advertisement packets to provide different types of data simultaneously. For example, a beacon may send out both iBeacon and Eddystone advertisement packets so that it will appear as both types of beacon. Each advertising instance can have unique parameters if desired.

7.3.1 Multi-advertisement API

There are three functions we will use to setup and use multi-advertising packets (there are two others that we won't use here but are available if needed). Each one uses a parameter called adv_instance. This is just an integer from 1 to 16 to uniquely identify each advertising instance that you want to have. The functions are:

wiced_set_multi_advertisment_params

This function sets advertisement parameters for each instance such as the advertising type, advertising interval, advertising address (if a unique address is desired), etc. Its arguments are:

•	advertising_interval_min	Same as for standard advertising
•	advertising_interval_max	Same as for standard advertising
•	advertising_type	Same as for standard advertising
•	own_address_type	Type of address for this advertising instance – see wiced_bt_ble_address_type_t
•	own_address	Address if unique for this instance (otherwise use 0)
•	peer_address_type	Type of address for the peer (only for directed adv)
•	peer_address	Address if unique for this instance (otherwise use 0)
•	advertising_channel_map	List of advertising channels to use (can use 37, 38, 39, or a combination)
•	advertising_filter_policy	Filter policy - see wiced_bt_ble_advert_filter_policy_e
•	adv_instance	A unique number for this advertisement instance
•	transmit_power	Transmit power in dB - can use one of MULTI_ADV_TX_POWER_MIN_INDEX MULTI_ADV_TX_POWER_MAX_INDEX

Note:

You can look in the GeneratedSource/cycfg_gap.h file to see the definitions that the Bluetooth® configurator creates for the parameters above. You can use these definitions when you setup multi-advertisement parameters if appropriate.

wiced_set_multi_advertisement_data

This function sets advertisement data for multi-advertisement packets. It is analogous to wiced_bt_ble_set_raw_advertisment_data but the advertising data is sent as a flat array instead of a structure of advertising elements. Therefore, the procedure to setup the advertising packet will be a bit different as you will see in the exercises. Its arguments are:

•	p_data	Pointer to an advertising data array
•	data_len	Length of the advertising data array
•	adv_instance	Number of the instance specified above



wiced_start_multi_advertisements

This function starts advertisements using the parameters specified above. It is analogous to wiced bt start advertisments. Its arguments are:

advertising_enable MULTI_ADVERT_START or MULTI_ADVERT_STOP
 adv instance Number of the instance specified above

7.3.2 Multi-advertisement callback events

The Bluetooth® stack callback function will be called for multi-advertisement events. The event name is BTM_MULTI_ADVERT_RESP_EVENT. The event data will indicate the reason for the event. The possible values are:

SET_ADVT_PARAM_MULTI caused by calling
wiced_set_multi_advertisement_params

SET_ADVT_DATA_MULTI caused by calling wiced_set_multi_advertisement_data

SET_SCAN_RESP_DATA_MULTI caused by calling
wiced_set_multi_advertisement_scan_response_data

SET_RANDOM_ADDR_MULTI caused by calling
wiced_set_multi_advertisements_random_address

SET_ADVT_ENABLE_MULTI caused by calling wiced start multi_advertisements

7.4 iBeacon

iBeacon is an Advertising Packet format defined by Apple. The iBeacon information is embedded in the Manufacturer section of the advertising packet. It simply contains:

- Apple's manufacturing ID
- Beacon type (2-bytes)
- Proximity UUID (16-bytes)
- Major number (2-bytes)
- Minor number (2-bytes)
- Measured Power (1-bytes)

Because the packet uses the Apple company ID you need to register with Apple to use iBeacon.

The measured power allows you to calibrate each iBeacon as you install it so that it can be used for indoor location measurement.

7.5 Eddystone

<u>Eddystone</u> is a Google protocol specification that defines a Bluetooth low energy (Bluetooth LE) Advertising message format for proximity beacon messages. It describes several different frame types that may be used individually or in combinations to create beacons that can be used for a variety of applications.

There are four types of Eddystone Frames:

UID – A unique beacon ID for use in mapping functions



- URL An HTTP URL in a compressed format
- TLM Telemetry information about the beacon such as battery voltage, device temperature, counts of packet broadcasts
- EID Ephemeral ID packets which broadcast a randomly changing number

TLM frames do not show up as a separate beacon but rather are associated with other frames from the same device. For example, you may have a beacon that broadcasts UID frames, URL frames, and TLM frames. In a beacon scanner, that will appear as a UID&TLM beacon and a URL&TLM beacon.

The Eddystone Advertising Packet has the following fields:

- Flags
 - Type: BTM_BLE_ADVERT_TYPE_FLAG (0x01)
 - Value: BTM_BLE_GENERAL_DISCOVERABLE_FLAG | BTM_BLE_BREDR_NOT_SUPPORTED
- 16-bit Eddystone Service UUID
 - Type: BTM_BLE_ADVERT_TYPE_16SRV_COMPLETE (0x03)
 - Value: 0xFEAA
- Service Data
 - Type: BTM_BLE_ADVERT_TYPE_SERVICE_DATA (0x16)
 - Value: The Eddystone Service UUID (0xFEAA), the Eddystone frame type, then the actual data. Frame types are:
 - UID 0x00
 - URL 0x10
 - TLM 0x20
 - EID 0x30

The data required depends on the frame type. For example, a UID frame has: 1 byte of Tx power of the beacon at 0 m and a 16-byte beacon ID consisting of 10-byte namespace, and 6-byte instance.

In the application BLE-20819EVB02.beacon there is an example of a beacon that acts as both an Eddystone and iBeacon at the same time. The example uses 5 advertising instances - one for each of the four Eddystone frame types and one for iBeacon.

If you are using Eddystone to send a URL, it is limited to 15 characters excluding a prefix (http://, https://, http://www., or https://www.) and a suffix (.com, .com/, .org, .org/, .edu, .edu/, etc.). If you need to create a shorter URL for a site, there are sites that will allow you to create a short URL alias such as www.tinyurl.com.

You can find the detailed Eddystone spec at https://github.com/google/eddystone.

There is also an Eddystone GATT configuration service that can be used to configure and register Eddystone-EID beacons and enable interoperability between hardware manufacturers and developers. That service is not covered in this chapter.



7.6 Exercises

Exercise 1: Eddystone URL beacon

In this exercise, you will create an Eddystone beacon that will advertise the URL for https://www.infineon.com. From your phone you will be able to scan for the beacon (using a beacon scanner app) and then directly connect to the advertised website.

۱q	olicatio	n Creation	
	1.	Create a new ModusToolbox™ application for the CY8CKIT-062S2-43012 BSP.	
		On the application template page, use the Browse button to use the template application from the class files under <i>Templates/ch07_ex01_eddy</i> .	
	Note:	This is a very simple application with no GATT support. All it does is advertise as a non-connectable device.	
	2.	Open the Bluetooth® configurator.	
	3.	On the General tab, disable the GATT database.	
	4.	On the GAP Settings > General tab, set the device name to <inits>_eddy</inits> . Check the box for MAC-based 'Company assigned' part of address .	
	5.	On the GAP Settings > Advertisement settings tab, uncheck Enable high duty non-connectable advertising timeout so that advertising will continue forever. Verify that the High duty non-connectable advertising interval minimum and High duty non-connectable advertising interval maximum values are 100.	
	6.	Save edits and close the configurator.	
	7.	7. Complete the app_set_advertisement_data function provided in the template to create an advertisin packet with the following 3 fields:	
		a. BTM_BLE_ADVERT_TYPE_FLAG	
		Set this to the same value used previously. That is: BTM_BLE_GENERAL_DISCOVERABLE_FLAG BTM_BLE_BREDR_NOT_SUPPORTED	
		b. BTM_BLE_ADVERT_TYPE_16_SRV_COMPLETE	
		This is the 2-byte Eddystone service UUID of 0xFEAA. Note that Bluetooth® uses little-endian so the LSB must be the first element in the array.	
		c. BTM_BLE_ADVERT_TYPE_SERVICE_DATA	
		This is the Eddystone URL frame it must contain:	
		 The Eddystone service UUID again (in little-endian) The Eddystone frame type for a URL frame (0x10) Transmit power (use 0xF0) 	
		The Eddystone URL scheme prefix for https://www.	

The URL as a list of characters – 'i', 'n', 'f', 'i', 'n', 'e', 'o', 'n'

The Eddystone URL suffix for .com



	Note:	See the Eddystone website for a list of frame types, URL prefixes, and URL suffixes along with other useful information about Eddystone.
	Note:	Look for TODO in main.c to find the places that need to be completed.
Test	ing	
	•	
Щ	1.	Program the application to your kit.
Ш	2.	Open a beacon scanner app on your phone and start scanning.
	Note:	Most beacon scanner apps don't show the device address or the device name so if there is more than one beacon running you may not be able to tell which one is yours from the beacon scanner. If this is the case, you can change the URL to something other than https://infineon.com.
	3.	Open the URL for https://www.infineon.com from the beacon app by tapping on the link.
	Note:	If you don't see your device in the beacon app it most likely means your packet isn't correct, so it isn't identifying your device as an Eddystone beacon.
Exe	rcise	2: Eddystone URL, UID, and TLM beacon using multi-advertising
In th	is exer	cise you will use multi-advertising to send UID, URL and TLM frames to the listening devices.
	1.	Create a new ModusToolbox™ application for the CY8CKIT-062S2-43012 BSP.
		the application template page, use the Browse button to use the template application from the class files der <i>Templates/ch07_ex01_eddy_multi.</i>
	2.	Open the Bluetooth® configurator.
	3.	On the General tab, disable the GATT database.
	4.	On the GAP Settings > General tab, set the device name to <inits>_eddy_multi</inits> . Check the box for MAC-based 'Company assigned' part of address .
	5.	On the GAP Settings > Advertisement settings tab, uncheck Enable high duty non connectable advertising timeout so that advertising will continue forever. Verify that the High duty non connectable advertising interval minimum and High duty non connectable advertising interval maximum values are 100.
	6.	Save edits and close the configurator
	7.	Open <i>main.c</i> . Look for TODO to find places that need to be completed. These are detailed in the steps below.
	8.	Enter the advertising parameters in adv_parameters to be used for multi-advertising packets. The same values will be used for all advertising instances.
		For the advertising min and max, use the values that were generated by the configurator.



Note: The definitions can be found in GeneratedSource/cycfg_gap.h.

Note: The values are in units of 0.625 ms so the value should be 160 (160 * 0.625 = 100 ms)

For the advertising type, use the macro for non-connectable multi-advertising.

Note: You can find the possible values in wiced_bt_ble.h in the enumeration for

wiced bt multi advert tyep e.

Advertise on all channels:

BTM BLE ADVERT CHNL 37 | BTM BLE ADVERT CHNL 38 | BTM BLE ADVERT CHNL 39

For the filter policy, allow all requests.

Note: You can find the possible values in wiced_bt_ble.h in the enumeration for

wiced_bt_ble_advert_filter_policy_e.

For TX power, use the max power:

MULTI ADV TX POWER MAX INDEX

We will not use unique addresses for each advertising instance, so the peer and own addresses are 0.

- 9. In the BTM_ENABLED_EVT, the function to setup and start URL frames is already done for you. Use that as an example to do the same for UID and TLM frames.
 - 10. The function app_set_advertisement_data_url has been done for you. Use that as a template to complete app set advertisement data uid.

Note: Refer to the Eddystone website to find details of UID frames. Each frame type has its own subdirectory with its own README.md file.

Use 0xF0 for the ranging data.

Note: Use your initials for the first few bytes of the namespace. Use any characters you wish for the remaining

values in the packet.

11. Complete the function app_set_advertisement_data_tlm.

Note: Refer to the Eddystone website to find details of TLM frames. Each packet type has its own subdirectory

with its own README.md file. Use unencrypted TLM frames.

Note: The template includes a timer that fires every 100 ms and increments the variable uptime. Use that as

the value for SEC_CNT in the TLM packet. The value in this case is big-endian. Values for VBATT, TEMP, and

ADV_CNT can be set to 0.

Note: The timer also calls the app set advertisement data tlm function so it will update the TLM

packet's data every 100 ms.

12. Examine the Bluetooth® stack callback hander to see the new event for

BTM MULTI ADVERT RESP EVENT.

Note:



Testing

1.	Program the application to your kit.
2.	Open a beacon scanner app on your phone and start scanning.

Note:

Most beacon scanner apps don't show the device address or the device name so if there is more than one beacon running you may not be able to tell which one is yours from the beacon scanner. If this is the case, you can change the URL to something other than https://infineon.com.

You should see two beacons:

- one that shows URL and TLM information the Uptime displayed should increment
- one that shows UID and TLM information the Uptime displayed should increment

Note: Some beacon scanner apps mistakenly show the uptime value in ms but indicate that it is seconds. This is an issue with the scanner app, not the beacon itself.

Note: If you don't see your device in the beacon app it most likely means your packet isn't correct, so it isn't identifying your device as an Eddystone beacon.

Trademarks

All referenced product or service names and trademarks are the property of their respective owners.

Published by Infineon Technologies AG 81726 Munich, Germany

© 2022 Infineon Technologies AG. All Rights Reserved.

IMPORTANT NOTICE

The information given in this document shall in no event be regarded as a guarantee of conditions or characteristics ("Beschaffenheitsgarantie").

With respect to any examples, hints or any typical values stated herein and/or any information regarding the application of the product, Infineon Technologies hereby disclaims any and all warranties and liabilities of any kind, including without limitation warranties of non-infringement of intellectual property rights of any third party.

In addition, any information given in this document is subject to customer's compliance with its obligations stated in this document and any applicable legal requirements, norms and standards concerning customer's products and any use of the product of Infineon Technologies in customer's applications.

The data contained in this document is exclusively intended for technically trained staff. It is the responsibility of customer's technical departments to evaluate the suitability of the product for the intended application and the completeness of the product information given in this document with respect to such application.

For further information on the product, technology, delivery terms and conditions and prices please contact your nearest Infineon Technologies office (www.infineon.com).

WARNINGS

Due to technical requirements products may contain dangerous substances. For information on the types in question please contact your nearest Infineon Technologies office.

Except as otherwise explicitly approved by Infineon Technologies in a written document signed by authorized representatives of Infineon Technologies, Infineon Technologies' products may not be used in any applications where a failure of the product or any consequences of the use thereof can reasonably be expected to result in personal injury.