

# **Software Solutions User Guide**

# Contents

|                                                              |          |
|--------------------------------------------------------------|----------|
| <b>Software Solutions User Guide.....</b>                    | <b>4</b> |
| About this edition.....                                      | 4        |
| Drivers.....                                                 | 4        |
| Introduction.....                                            | 4        |
| Setup and installation.....                                  | 5        |
| How to check the driver version under Windows and macOS..... | 15       |
| How to set up a print server.....                            | 18       |
| Troubleshooting.....                                         | 26       |
| Support elevation.....                                       | 28       |
| HP Click driver.....                                         | 29       |
| Introduction.....                                            | 29       |
| Setup and installation.....                                  | 31       |
| Printing process.....                                        | 36       |
| Deployment procedures.....                                   | 40       |
| Troubleshooting.....                                         | 41       |
| HP Click printing software.....                              | 46       |
| Introduction.....                                            | 46       |
| Installation.....                                            | 49       |
| Licensing.....                                               | 51       |
| Preferences.....                                             | 52       |
| Job preparation.....                                         | 55       |
| Nesting.....                                                 | 58       |
| Printing.....                                                | 58       |
| Troubleshooting.....                                         | 59       |
| Enable SNMP.....                                             | 60       |
| HP SmartStream.....                                          | 61       |
| What is it for?.....                                         | 61       |
| Getting started.....                                         | 62       |
| Introduction.....                                            | 62       |
| Printers.....                                                | 65       |
| Set preferences.....                                         | 71       |
| Job preparation.....                                         | 77       |
| Print preview.....                                           | 101      |
| Printing.....                                                | 106      |
| Color management.....                                        | 110      |
| History.....                                                 | 110      |
| Folding.....                                                 | 111      |
| Scanning.....                                                | 113      |
| Accounting.....                                              | 119      |
| Submission driver.....                                       | 122      |
| Troubleshooting.....                                         | 124      |
| Optional modules for advanced users.....                     | 126      |
| How to use non-HP printers with HP SmartStream.....          | 135      |
| Shortcut keys.....                                           | 140      |
| HP SmartTracker.....                                         | 144      |
| Launching HP SmartTracker the first time.....                | 144      |
| Connectivity.....                                            | 145      |
| Printers.....                                                | 150      |
| Permissions.....                                             | 156      |

|                                                              |            |
|--------------------------------------------------------------|------------|
| Options.....                                                 | 158        |
| Costs.....                                                   | 159        |
| Prices.....                                                  | 160        |
| About the home screen.....                                   | 161        |
| Configuring users of printers and printer groups.....        | 162        |
| Marking a job as billable.....                               | 164        |
| Filtering.....                                               | 165        |
| Removing a filter.....                                       | 166        |
| Projects.....                                                | 166        |
| Departments.....                                             | 166        |
| Import/export CSV.....                                       | 166        |
| Generating reports.....                                      | 169        |
| Summary.....                                                 | 169        |
| Reports.....                                                 | 173        |
| Custom.....                                                  | 176        |
| Custom jobs/pages (raw data).....                            | 178        |
| Custom logo.....                                             | 179        |
| Scheduling and emailing reports.....                         | 180        |
| Schedule and email user, project, or department reports..... | 181        |
| Printing workflow authentication.....                        | 181        |
| Database management.....                                     | 184        |
| Support tool.....                                            | 186        |
| Manual update.....                                           | 188        |
| Logging out.....                                             | 188        |
| <b>Index.....</b>                                            | <b>189</b> |

# Software Solutions User Guide

---

These software solutions are available for use with HP printers.

## About this edition

---

Edition 1, April 2025

© 2023–2025 HP Development Company, L.P.

### Legal notices

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of HP.

### Warranty

The information contained in this document is subject to change without notice.

HP makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

HP shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

## Drivers

---

This is the User Guide for SW Solutions Drivers.

## Introduction

The following is a summary of the compatibility matrix for the driver software.

**Table 1: Compatibility matrix**

| OS                       | Driver                     |
|--------------------------|----------------------------|
| Windows 10, 11           | PCL3 v4 for design         |
| Windows Server 2012–2022 | PDF v4 for design          |
| Windows 11               | HP Click driver            |
| macOS 13                 | Generic raster             |
| macOS 14                 | PostScript<br>(+12 m p.I.) |
| macOS 15                 |                            |



**Table 2: Recommendation Matrix**


|    |                                                          | Priority                              |                     |
|----|----------------------------------------------------------|---------------------------------------|---------------------|
|    |                                                          | Fidelity and transparency             | Line accuracy       |
| OS | <b>Windows 10, 11</b><br><b>Windows Server 2012–2023</b> | PDF                                   | PCL3 v4             |
|    | <b>macOS</b>                                             | macOS PostScript driver               | macOS raster driver |
|    |                                                          | <b>Graphic and color applications</b> | <b>CAD</b>          |

## Setup and installation


### How to install a driver (assisted) under Windows

Follow the steps in the order presented.

1. Select **Add additional printer or printer driver**.

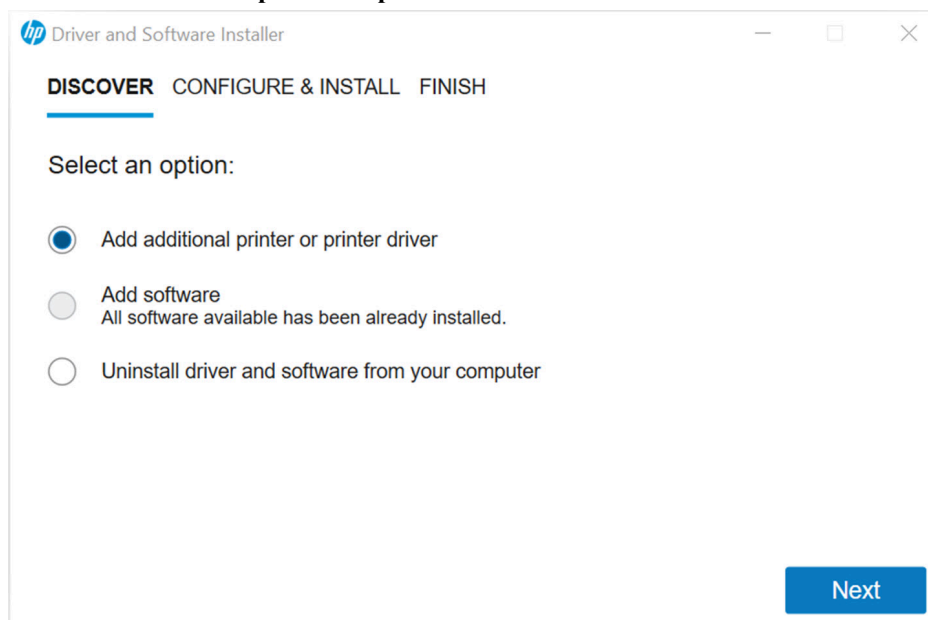

2. Add the IP or select the model name.

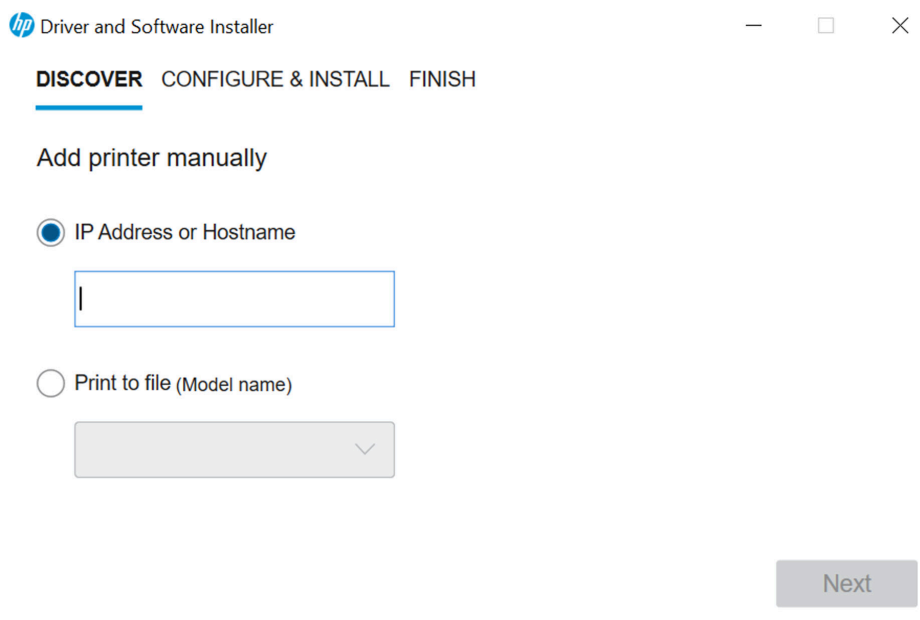

hp Driver and Software Installer

**DISCOVER** CONFIGURE & INSTALL FINISH


Add printer manually

☒ IP Address or Hostname

☐ Print to file (Model name)

Next

3. Select the printer that you want to add.

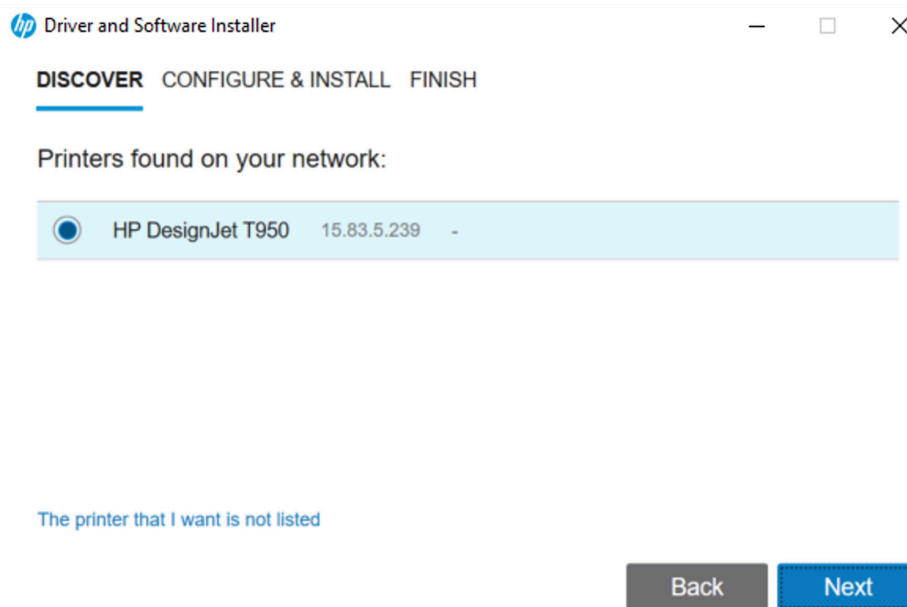

hp Driver and Software Installer

**DISCOVER** CONFIGURE & INSTALL FINISH


Printers found on your network:

|                                  |                   |             |   |
|----------------------------------|-------------------|-------------|---|
| <input checked="" type="radio"/> | HP DesignJet T950 | 15.83.5.239 | - |
|----------------------------------|-------------------|-------------|---|


The printer that I want is not listed

Back Next

4. Choose between custom or easy installation.

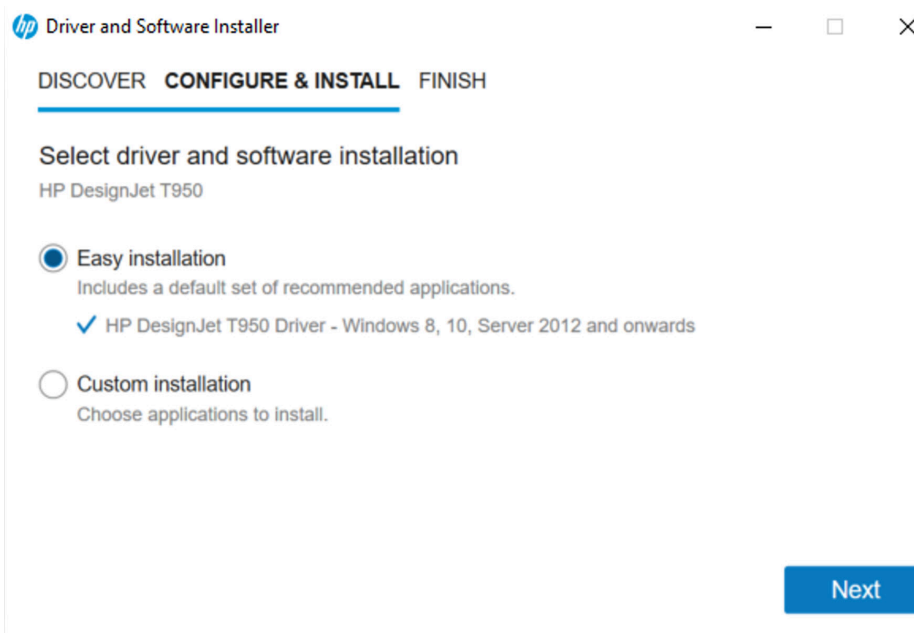


5. Queue created and driver installation complete.

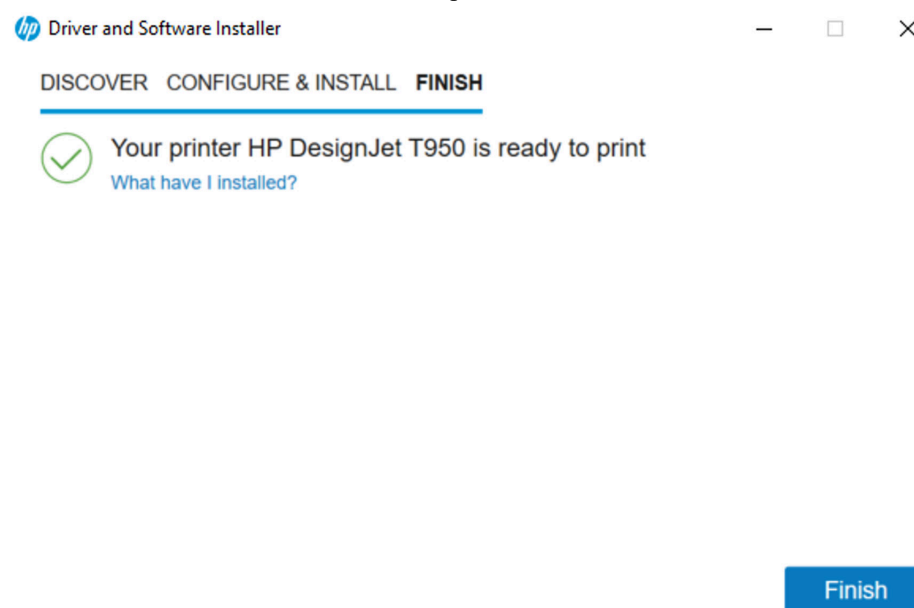


### How to install a driver (.inf) under Windows

Follow the steps in the order presented.


1. Download the driver (.exe) from [hp.support.com](http://hp.support.com).
2. Double-click the downloaded file to start the extracting process.

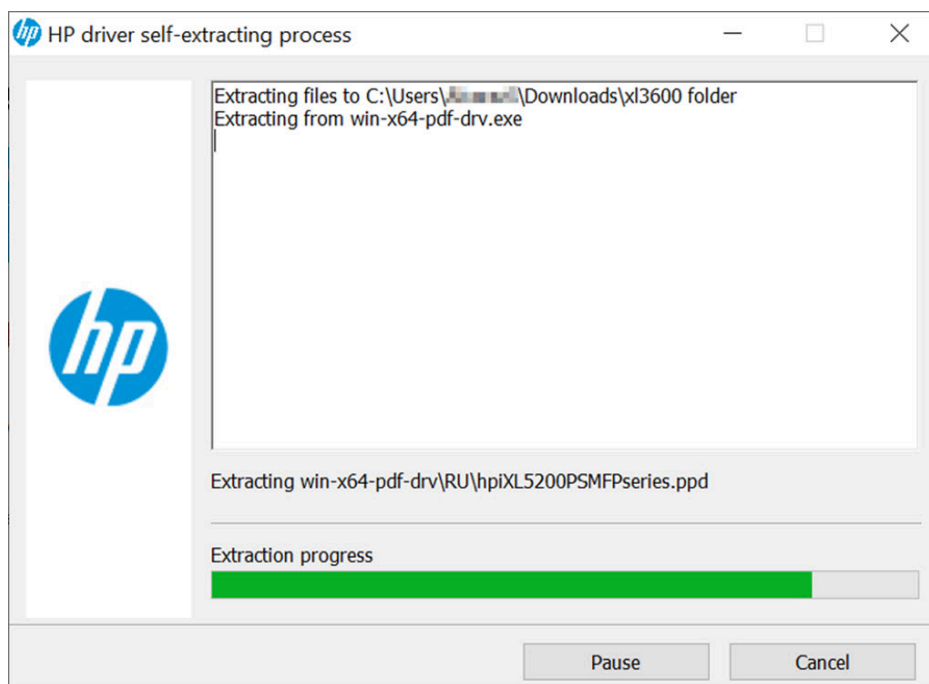


3. Open the Windows Control Panel and select **View devices and printers**.

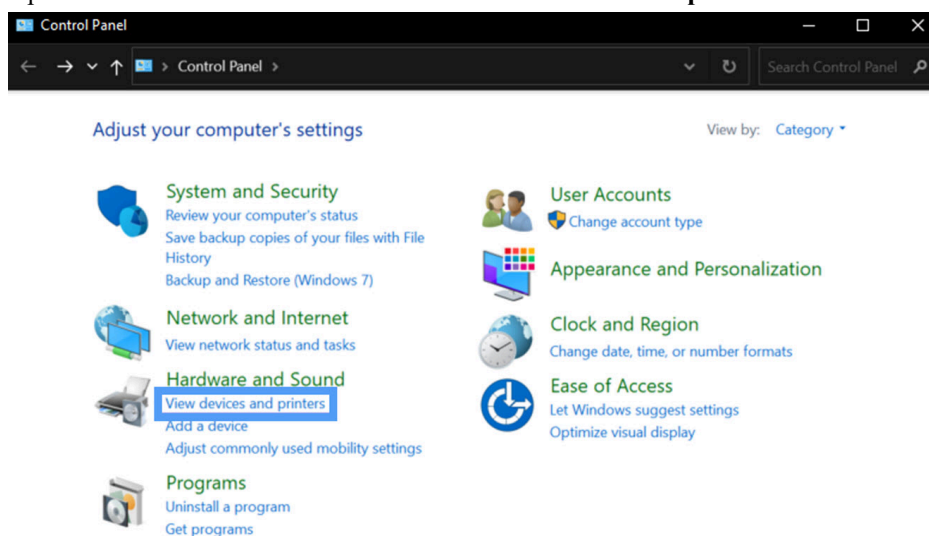

4. Click **Add a printer**.

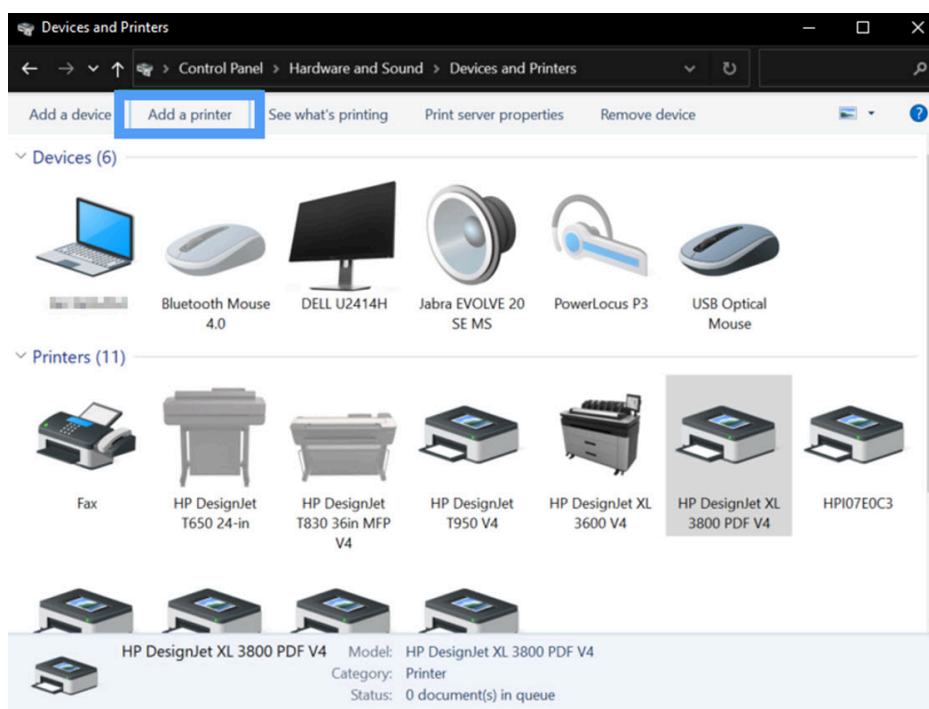

5. Select **The printer that I want isn't listed.**

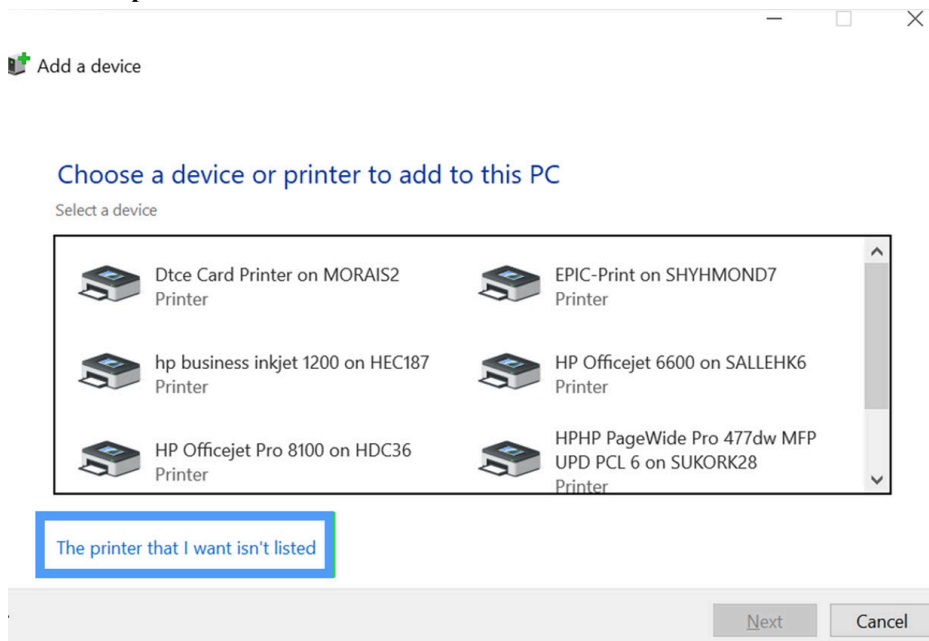

6. Select add IPP, TCP/IP.

✕

←  Add Printer

**Find a printer by other options**

☐ My printer is a little older. Help me find it.  
☐ Find a printer in the directory, based on location or feature  
☐ Select a shared printer by name

Browse...

Example: \\computername\prntername or  
http://computername/printers/prntername/.printer

☒ Add a printer using an IP address or hostname  
☐ Add a Bluetooth, wireless or network discoverable printer  
☐ Add a local printer or network printer with manual settings

Next
Cancel

## 7. Add the printer using the IP.

✕

 Network Printer Installation Wizard

**Printer Address**  
You can type the printer's network name or IP address.

Type of Device: TCP/IP Device ▾

Host name or IP address: 15.83.1.172


Port name: 15.83.1.172

☐ Auto detect the printer driver to use.


Autodetect detects WSD and TCP/IP printers.  
To search for IPP printers, please select IPP from the drop down box

< Back
Next >
Cancel


## 8. Select install a new driver.

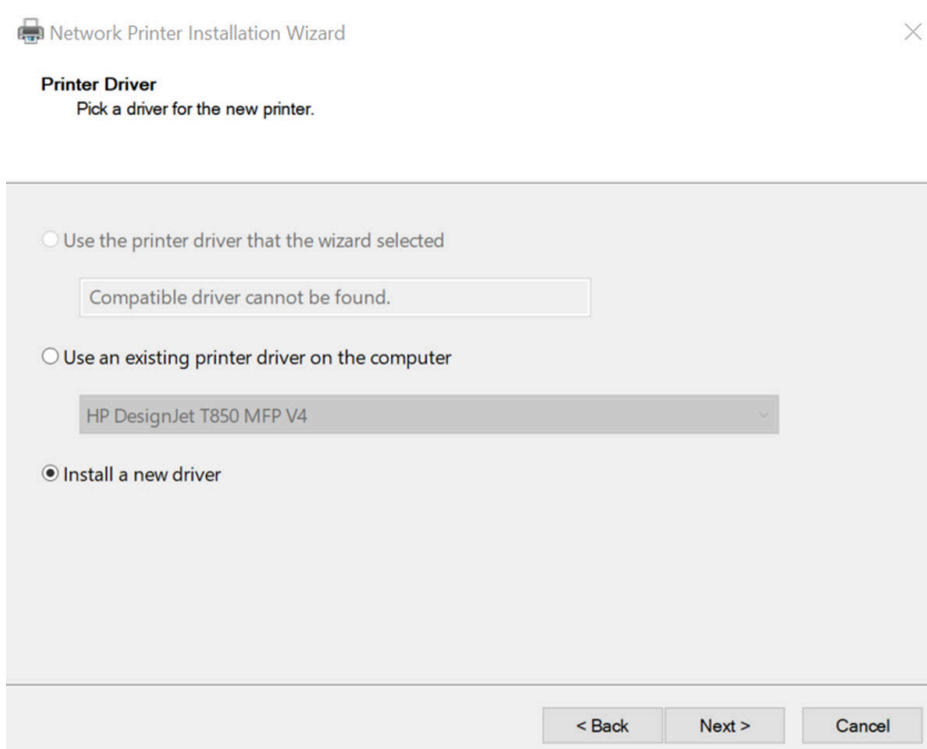


**9. Go to Have Disk.**

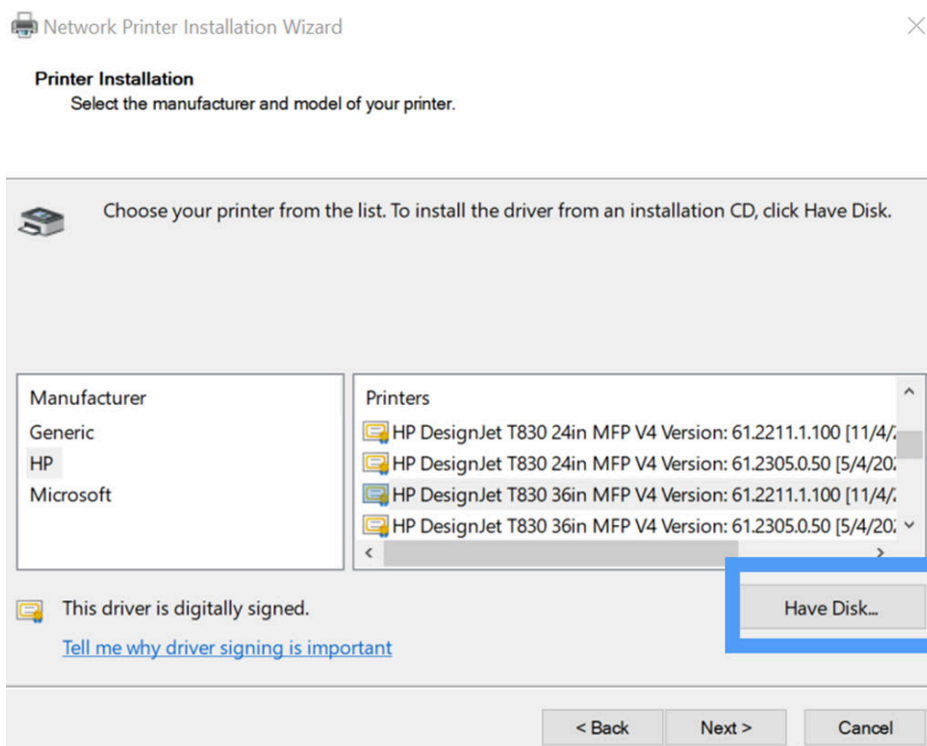

**10. Browse to the location of the .inf file and select it.**

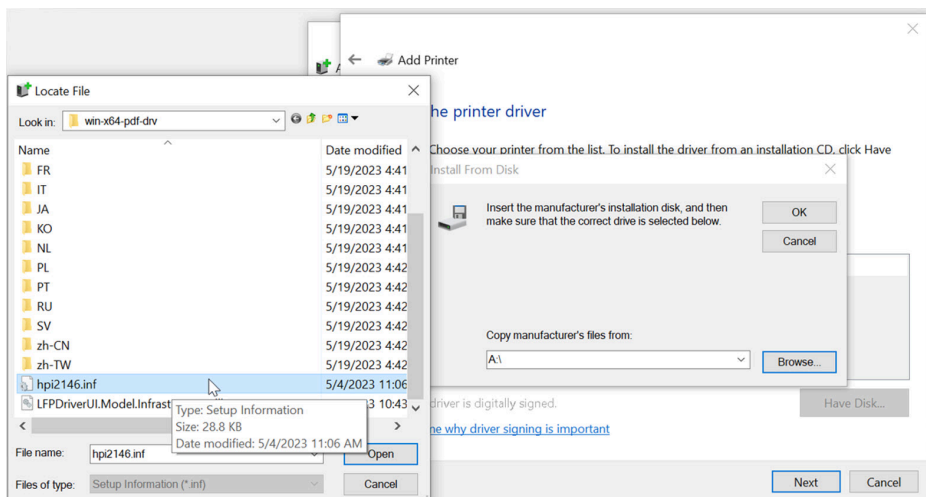

## 11. Driver has been successfully installed.

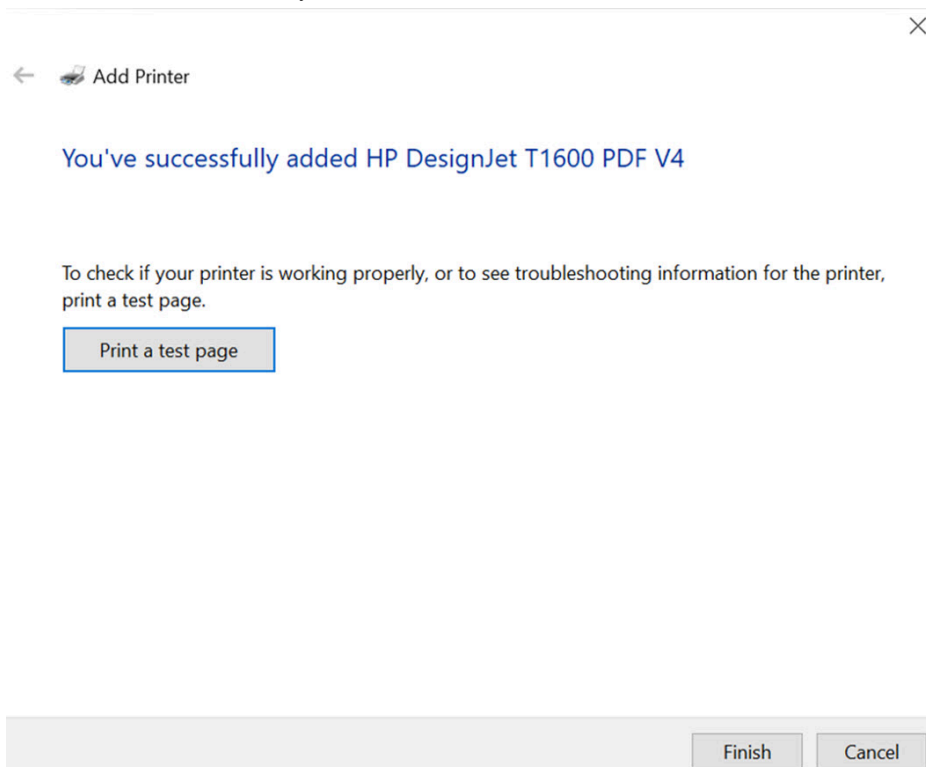

### Note:

It is strongly recommended to use an HP driver instead of the default Microsoft Class driver for your printer because the HP driver often provides better compatibility, enhanced features, improved print quality, and access to advanced settings.

### V3 drivers

The following sections provide details for this topic.

#### HP-GL/2 drivers

The drivers that are specifically designed for certain products and support HP-GL/2 have been discontinued. However, a generic HP-GL/2 driver has been tested and is now available.

The generic HP-GL/2 driver is available for elevations for the following printer series:




- HP DesignJet XL3800 printer series
- HP DesignJet T850/T950 printer series

### Important:

The printer handles jobs, with PCL3 jobs being processed by a PC. It is faster in modern plotter or old PC environments. It is not affected by Microsoft's line-thickness issue, but this applies only to XPS architecture with PCL3 and non-pass through PDF. It is not recommended to use it for transparencies as there may be missing elements.

### HP-GL/2 architecture

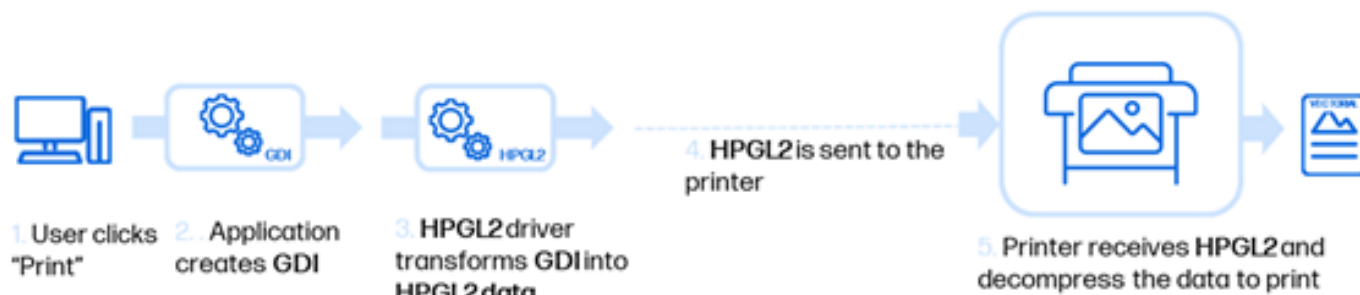

### PostScript

A PostScript driver is a print driver that converts document data into a PostScript file, a page description language used by many printers and graphic design software. This driver allows the operating system and applications to communicate with PostScript-compatible printers, ensuring that documents are printed with high fidelity and accuracy.

### PostScript architecture




### V4 drivers

#### PCL3

A PCL3 driver is a print driver developed by HP that processes print jobs using Printer Command Language 3 (PCL3). This driver translates document data into PCL3 commands, enabling efficient communication between the operating system and HP printers, ensuring proper formatting and print quality.

## PCL3 architecture

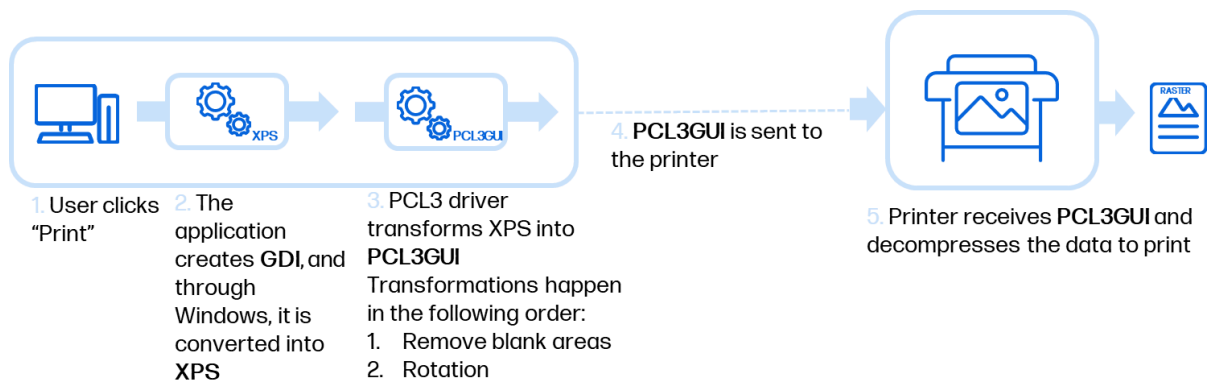


## PDF

A PDF driver is a print driver that allows users to generate and print documents in PDF format directly from applications. This driver ensures that documents retain their layout, fonts, and graphics accurately, making it useful for creating digital documents or printing to PDF-compatible printers.


### PDF passthrough architecture

Passthrough on: The printer receives a raw PDF file and processes it internally, reducing the workload on the computer. This is efficient for printers with built-in PDF processing capabilities.

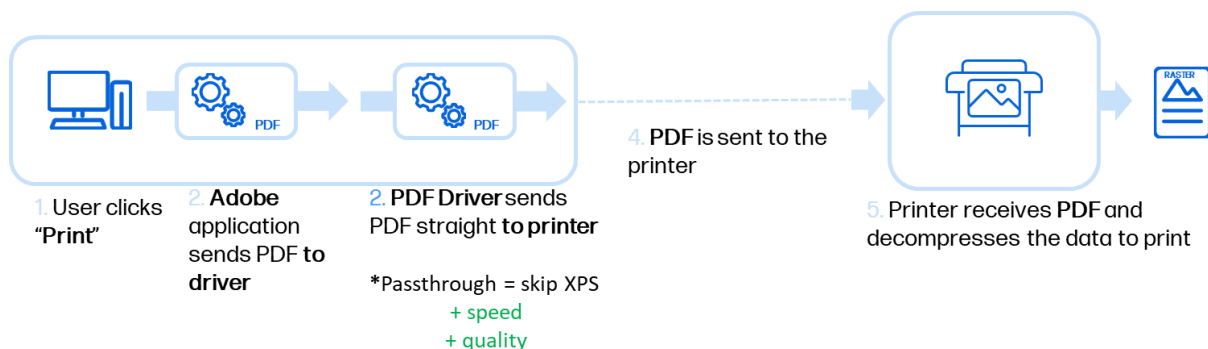

### PDF passthrough-off architecture

Passthrough off: The PDF file is converted to another format (such as PostScript or PCL) before being sent to the printer. This method ensures compatibility with printers that do not natively support PDF printing, but may increase processing time on the computer.

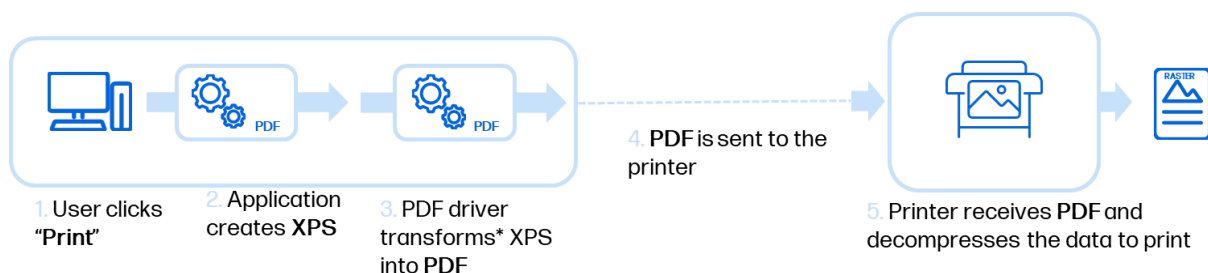

### Important:

Supported only by InDesign, Illustrator, and Acrobat.


## XPS driver features

**Table 3: XPS driver features**

| Features                                               | Explanation                                                                                                                                                                                                                                                                                        |
|--------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Remove blank areas (RBA)                               | Eliminates the white areas of the printed document to save paper.<br><br><b>Note:</b><br>Affects only the top and bottom margins for PDF and applies to four slides in PCL3.                                                                                                                       |
| A.R.S.S (Automatic Roll Switch System)                 | Allows the printer to switch between roll and tray paper sources <b>without user intervention</b> . The driver must have bi-directional communication with the printer and autorotation must be enabled to avoid clipping.                                                                         |
| Autorotate (AR)                                        | The driver examines the page layout and content of a document to determine the most appropriate orientation for printing.                                                                                                                                                                          |
| Passthrough (only for PDF printed from Adobe software) | Print settings disabled in the driver (application instead).                                                                                                                                                                                                                                       |
| Preset                                                 | Create a custom configuration and save it to keep the configuration available in the preset dropdown.<br><br><b>Note:</b><br>Unlike the V3 drivers, the presets created on the server will stay in the server. There is a preset synchronization tool available internally (only for escalations). |

## Bi-directionality

- Bi-directionality is used by V4 drivers in two features:
  - Autorotate
  - Paper source
- Driver queries printer via SNMP to obtain bi-directional information (regardless of server or local installation).



- In general, the following information is received via bi-directionality:
  - Printer status
  - Paper and supply levels
  - Job progress
  - Error messages
  - Configuration and settings

## How to check the driver version under Windows and macOS


This section explains how to check the driver version both under Windows and under macOS.

## How to check the driver version under Windows


In the driver's user interface, there is no information about the driver version. If you need to check it, open "Print Management" and check the driver version.

Follow the steps in the order presented.


1. Open the Control Panel and go to **View devices and printers**.

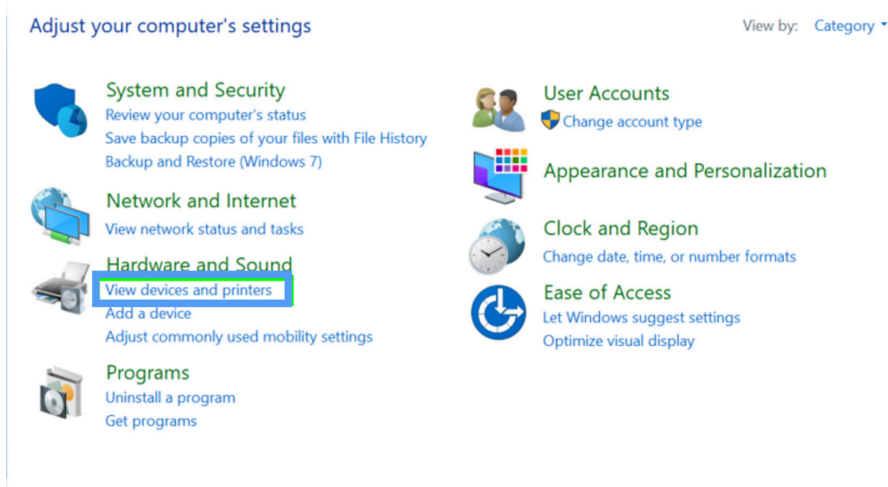

2. Open the driver UI by clicking **Printing Preferences**.

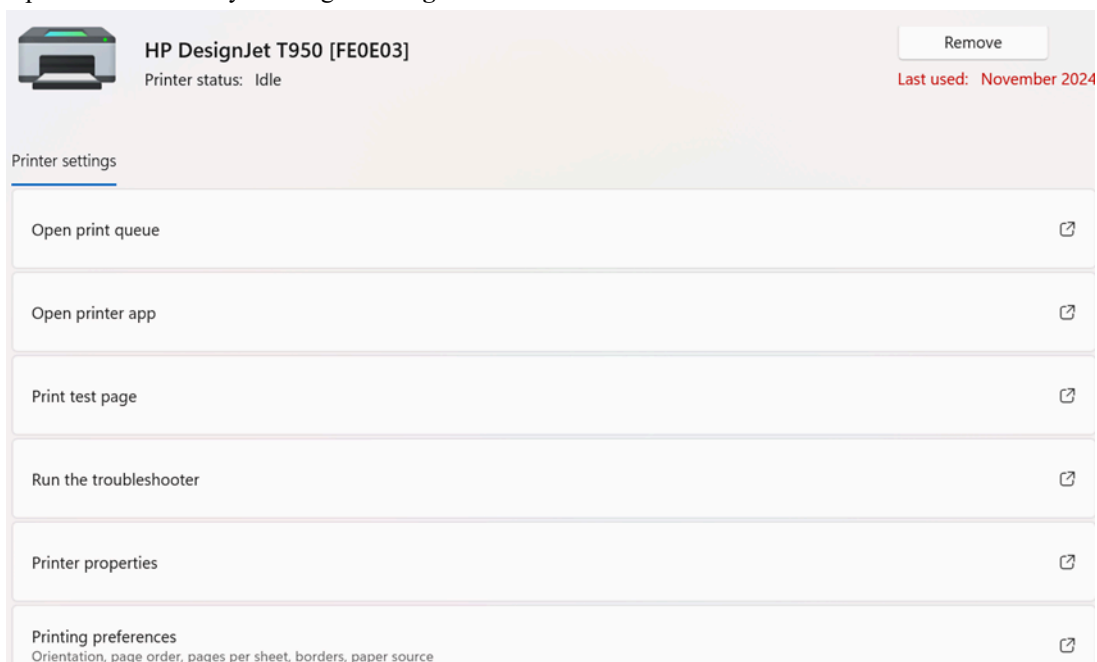

3. Click the information icon in the top right-hand corner of the screen.

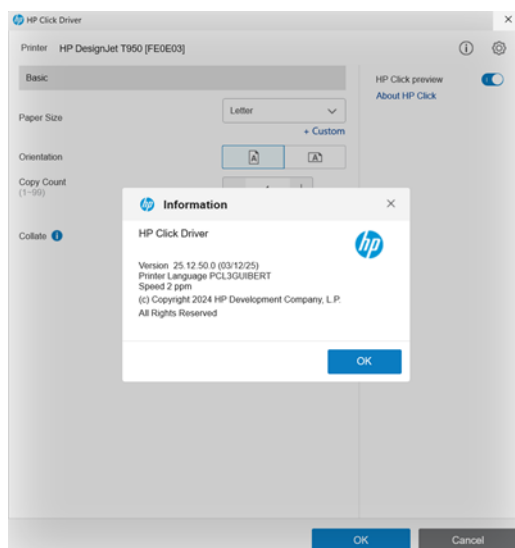


## How to check the driver version under macOS


This section explains how to check the version of the driver under macOS.

Follow the steps in the order presented.

1. Go to **Printers & Scanners**, find the printer that is using the driver, and click **Options & Supplies**.

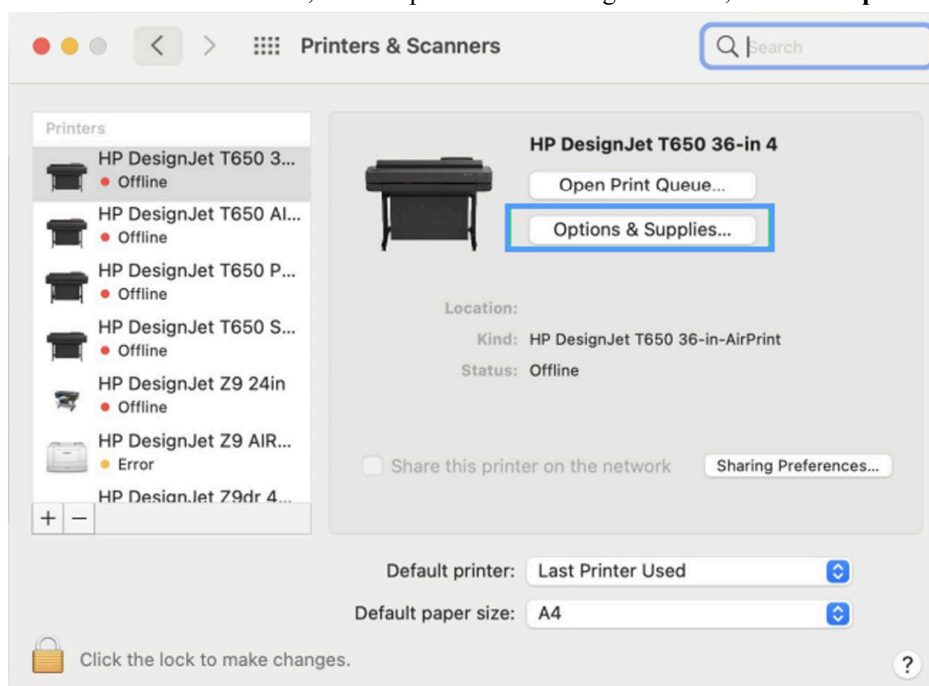

2. The version of the driver is in the General tab.

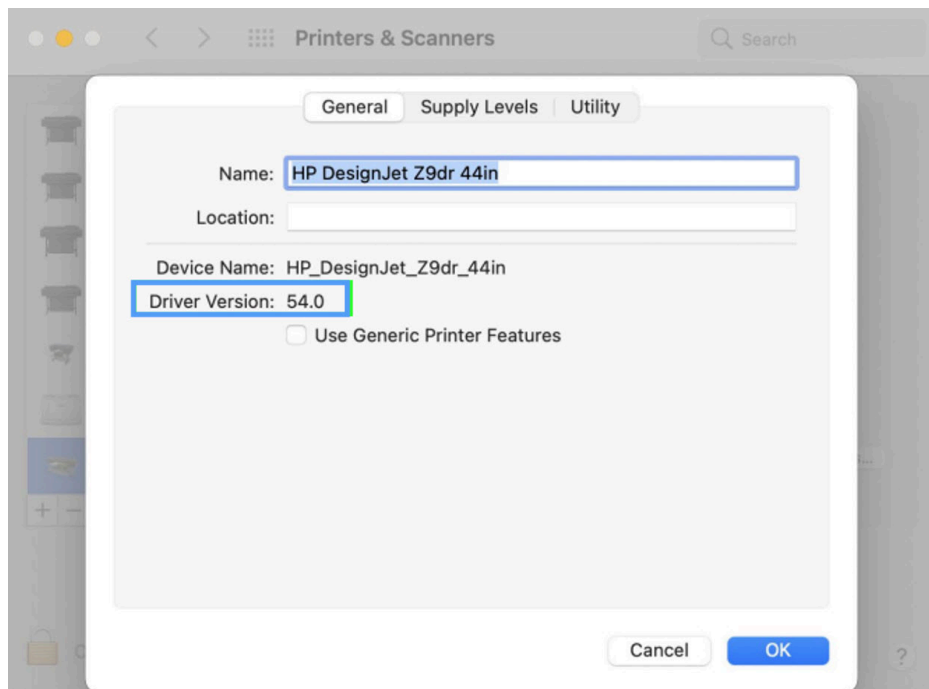

## How to set up a print server

The objective of a print server is to streamline and optimize printing tasks throughout the network. The print server works as an intermediary between client computers and printers, handling print jobs and ensuring efficient print management.

### Prerequisites


- Ensure you have administrative rights on the server.
- Verify network connectivity is established.
- Ensure SNMP is enabled on the network.

### Steps to set up a print server

1. Log in to the Windows Server with administrative credentials.
2. Open the 'Server Manager' from the Start menu.
3. In the 'Server Manager' dashboard, click on 'Add roles and features'.
4. Follow the wizard and select 'Print and Document Services'.
5. Choose 'Print Server' and proceed with the installation.
6. Once installed, open 'Print Management' from the Tools menu.
7. For Windows Server 2019:
  - a. Right-click on 'Print Servers' and select 'Add/Remove Servers'.
  - b. Add the local server and configure the print queues as needed.
8. For Windows Server 2022:
  - a. Navigate to 'Print Servers' and select 'Manage'.
  - b. Configure the print queues and printer drivers as required.

**Note:** Troubleshooting If you encounter issues with SNMP or bi-directionality, refer to the following topics: [Enable SNMP](#) on page 60

## Print Server Setup — Architecture

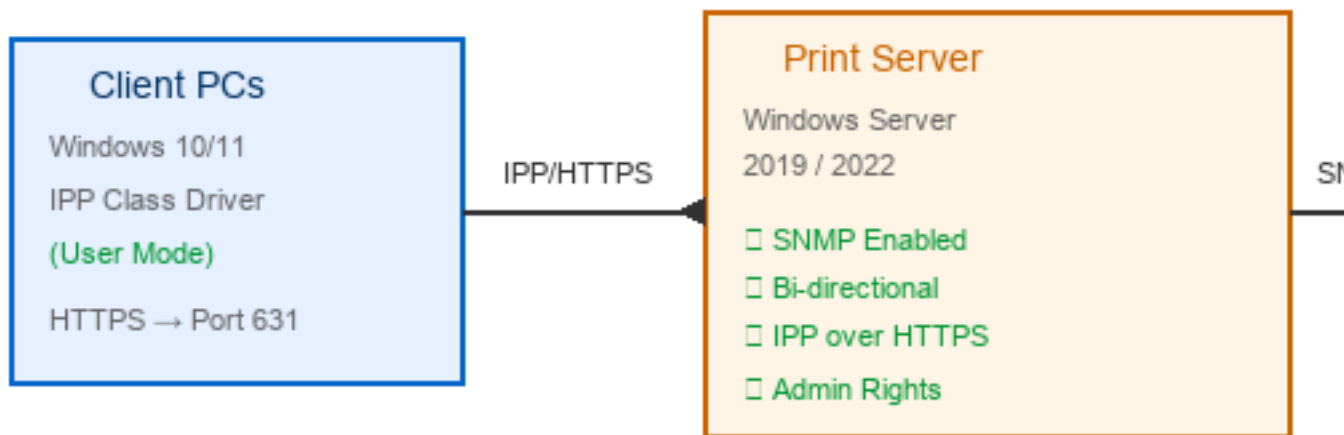

### Prerequisites

1. Administrator rights on the print server
2. Network connectivity between server and printers (SNMP ports 161/162 open)
3. SNMP enabled on all target printers via Embedded Web Server
4. Bi-directional communication enabled in printer properties
5. TLS 1.2+ certificates configured on printers for HTTPS
6. Windows Server 2019 or 2022 with Print and Document Services role
7. HP Universal Print Driver (UPD) or IPP Class Driver deployed

### V3 print architecture

1. Client connects to the shared printer on the server.
2. Server sends driver details to the client.
3. Client checks for an existing suitable driver.
4. If not found, client checks its local driver store for a simplified version of the driver.
5. If not found, client tries to download the simplified driver from the server.
6. If not found, client prompts user to provide the simplified driver manually.

### V4 print architecture

1. Client connects to the shared printer on the server.
2. Server sends driver details to the client.

3. Client checks whether it has the necessary HP v4 driver.
4. If not found in local store, client uses Windows Update to fetch the HP v4 driver.
5. If Windows Update is unavailable, client prompts user to provide the HP v4 driver manually.
6. Once the HP v4 driver is installed, client uses Windows Update to fetch any necessary printer extensions and PDFs.

### Distribute MSI package


This section explains how to distribute an MSI package through GPO (server) and GPO (client).

#### Distribute an MSI package through GPO (server)

Distributing an MSI package can be useful in those environments in which Windows update is unavailable.


Follow the steps in the order presented.

1. Install the driver and then save driver installer (.exe) as a .msi.
2. Share the folder that contains the .msi.

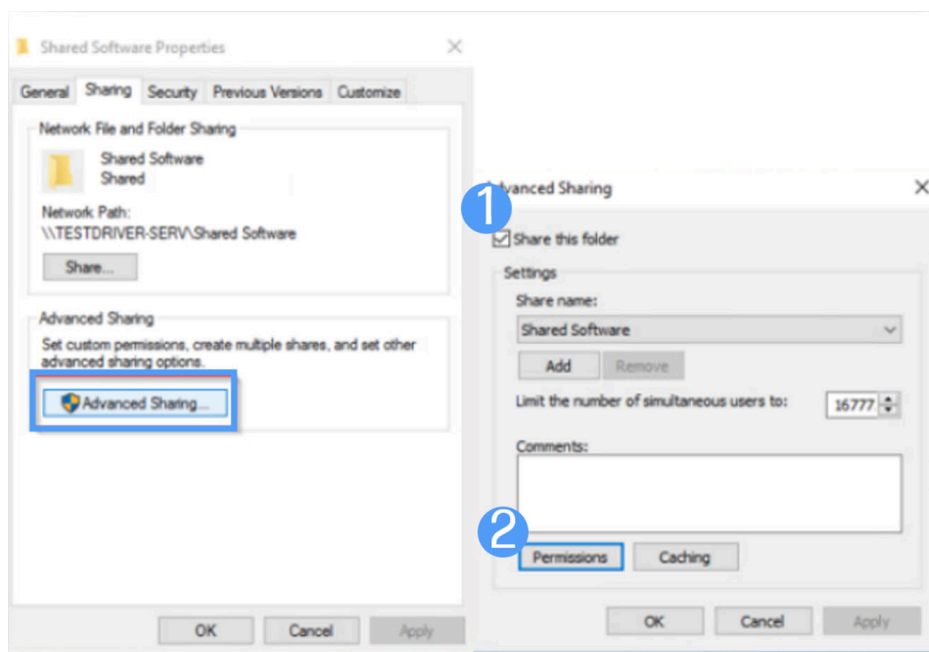

3. Allow reading permissions for 'Domain Users' and 'Authenticated Users'.
4. **Create the GPO** (Group Policy Object) through Server Manager. Add the path where we allocated the .msi and manages the employees or users who are going to use this policy.



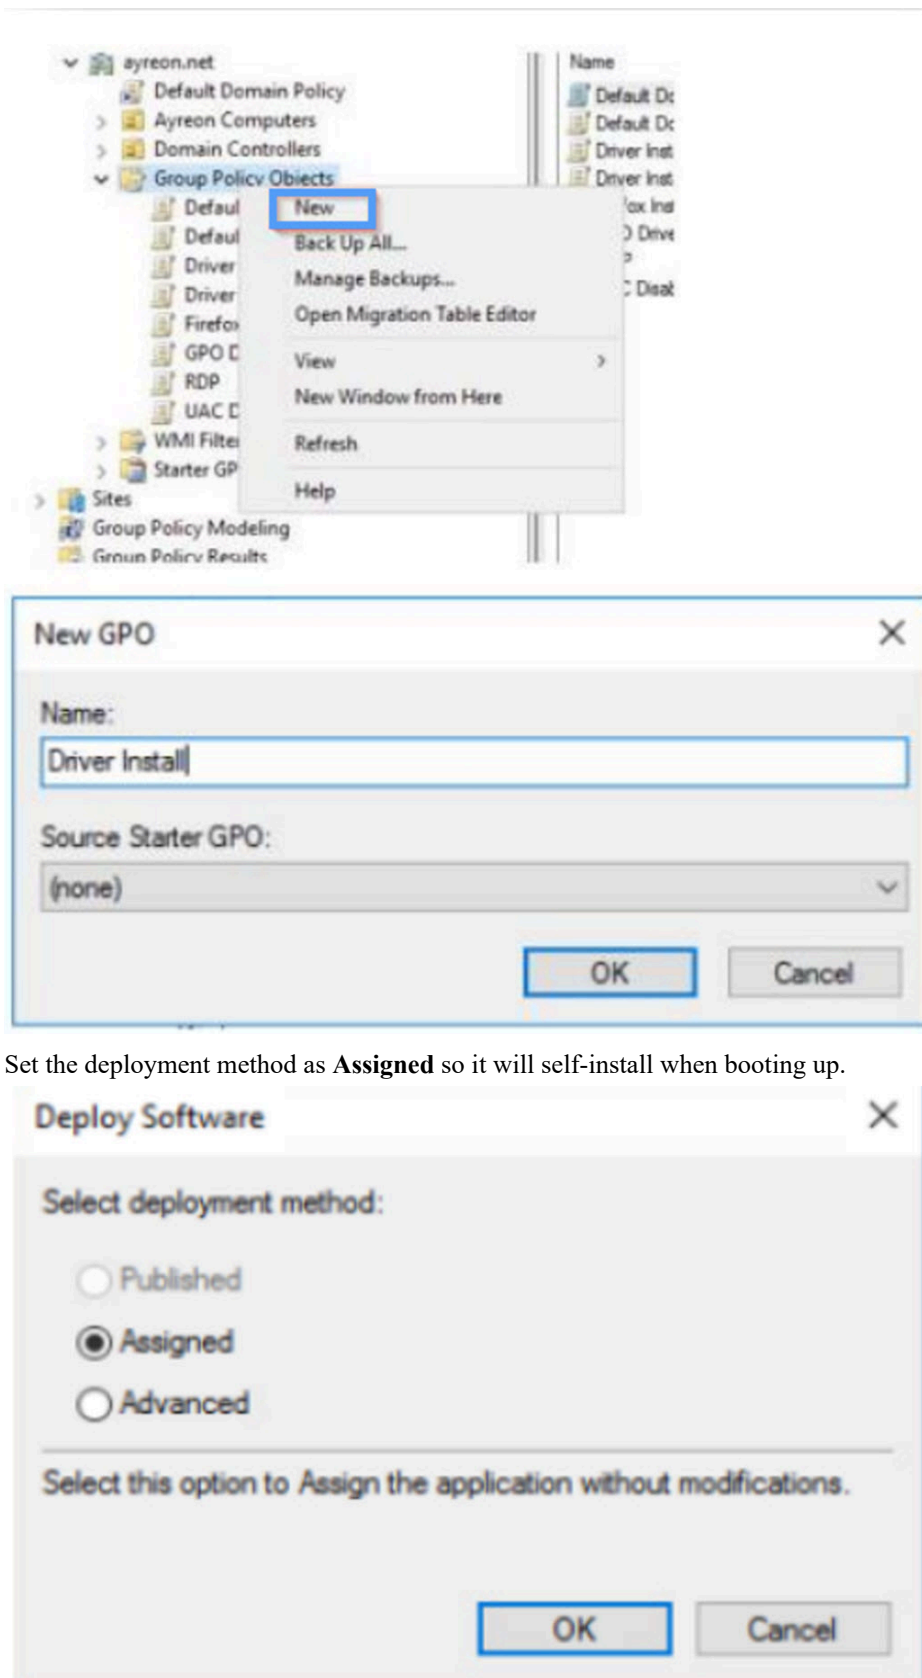


### Distribute an MSI package through GPO (client)

On the client's side, it is necessary to restart the computer and update the policies.

Follow the steps in the order presented.

1. Users/employees must **restart their computers or update the policies** of their computer to install the new policy (the .msi is trying to being installed).

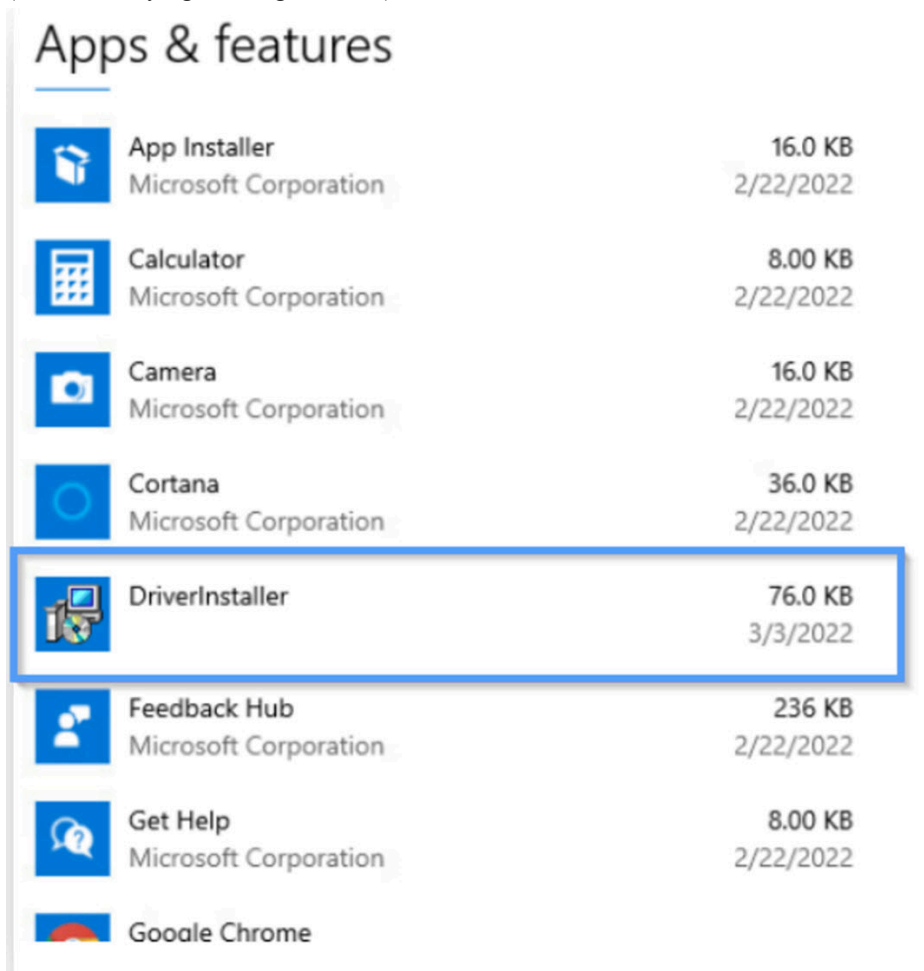


2. After rebooting the system, if the employee goes to Print Management they will see the **driver already installed**.
3. Connect to the Server as usual and then connect to the shared printer. Afterwards, **the queue appears** and tried to open, the UI will work.

**For detailed steps and visual guidance, refer to the video tutorials provided:**

- <https://myknowledge.hpcloud.hp.com/#/documents/97254738-b0d0-46d2-b433-304e62ac5964>
- <https://myknowledge.hpcloud.hp.com/#/documents/2825c2f1-2a4d-4027-985e-7f3c3a21398c>
- <https://myknowledge.hpcloud.hp.com/#/documents/0c22f217-6108-4c7e-a7d4-6081efe51ac3>


### Select job processing side

It is important to select the Render print jobs on the client computers checkbox to ensure an efficient print when using a shared printer.

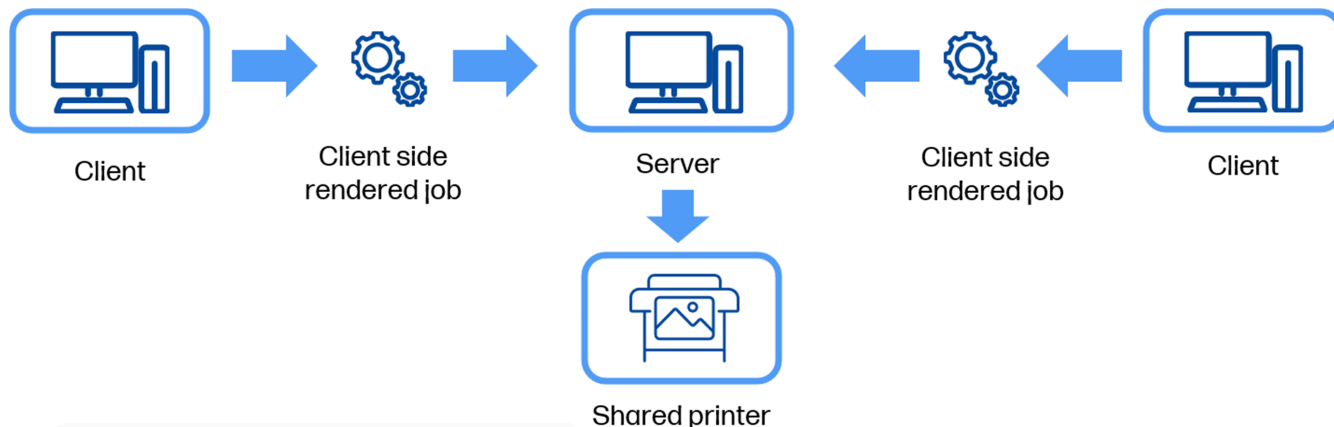


To share a printer, perform the following steps in the order presented:

1. Go to the Control Panel and select **Hardware and Sound > Devices and Printers**.
2. Right-click the printer you want to share, then click **Printer properties**.

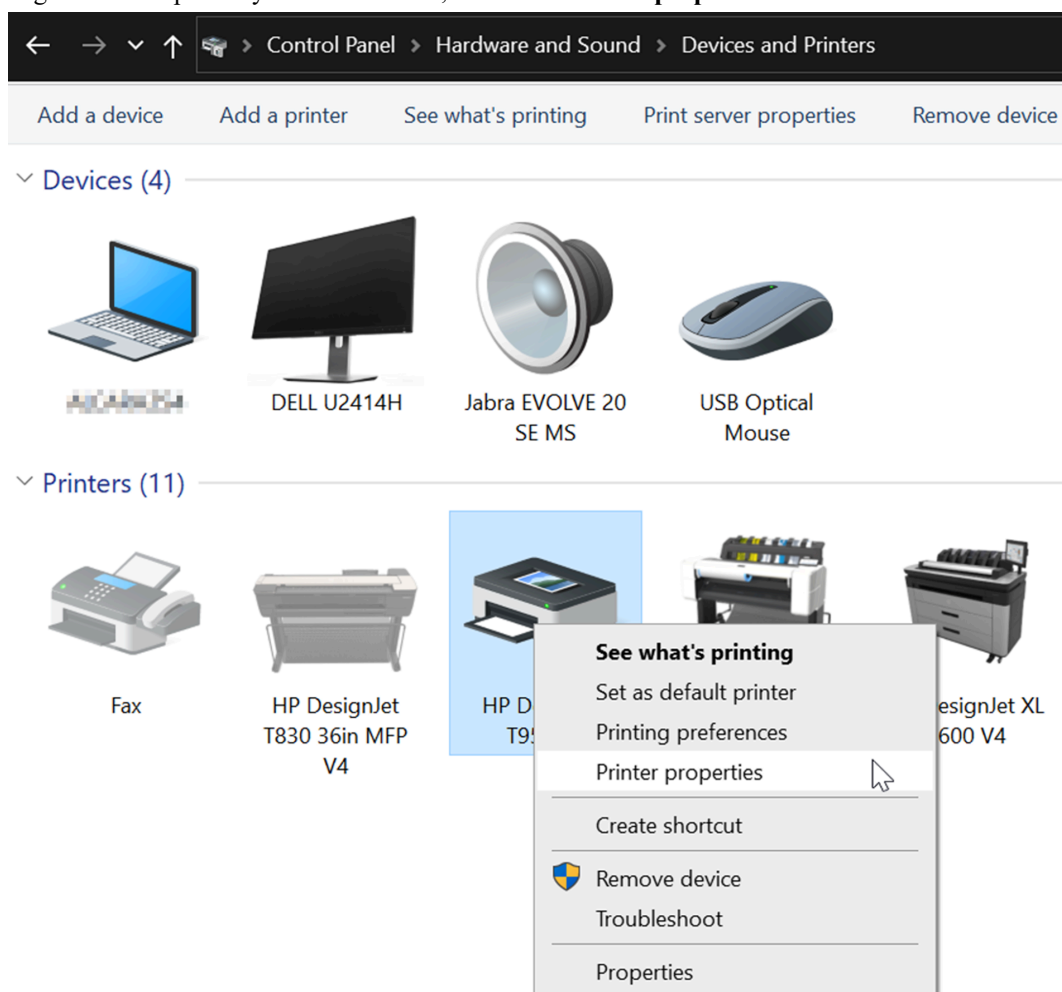


3. Mark the checkboxes for the **Share this printer** and **Render print jobs on client computers** options.

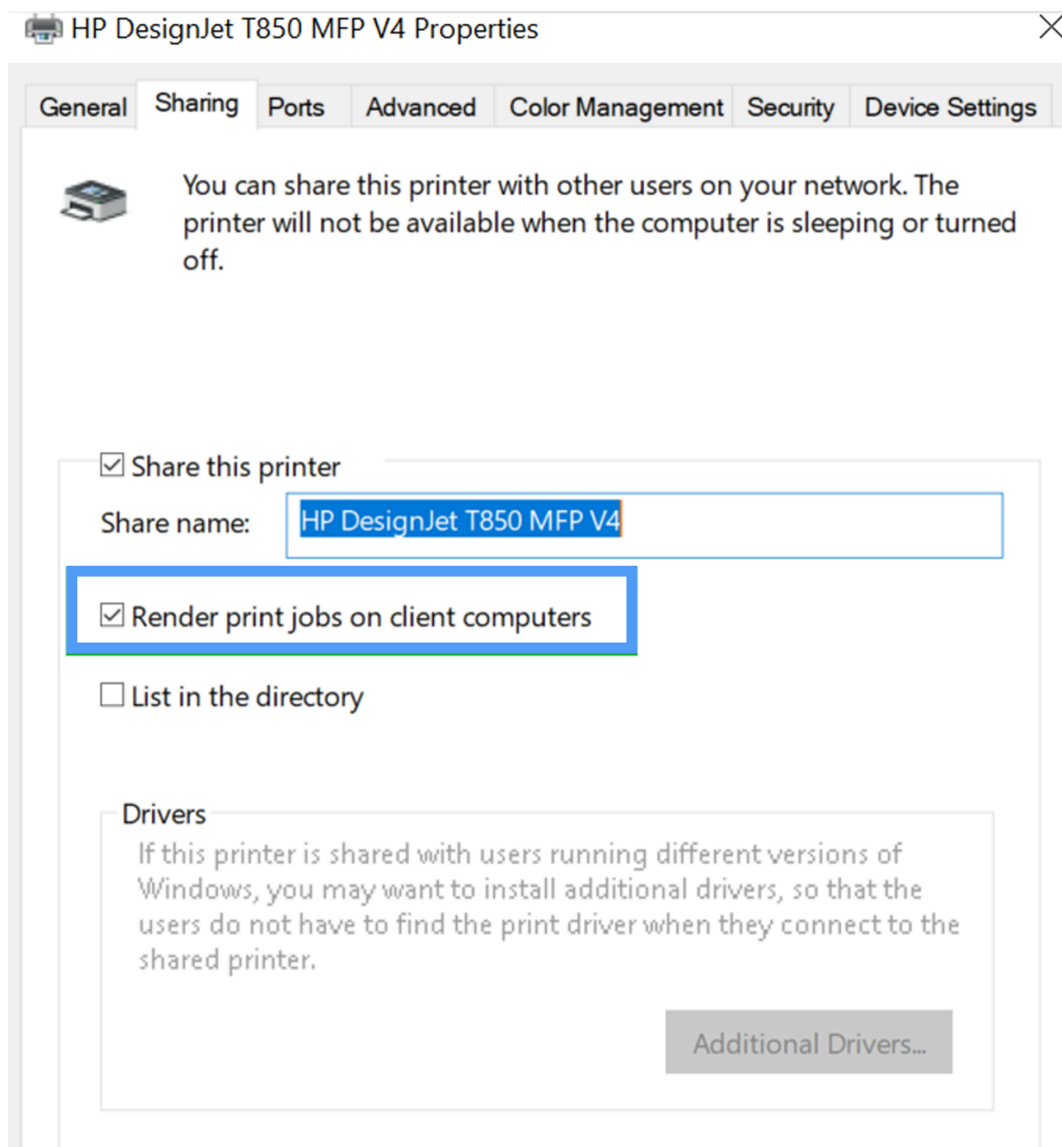

### Preset synchronization tool

To share a preset in the V4 architecture, an external HP tool is used.

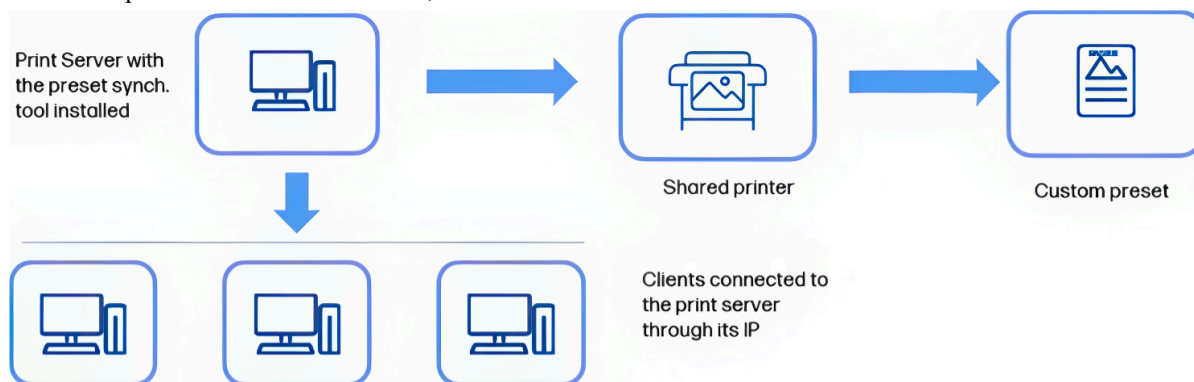

This tool enables you to share a custom preset created in a print server with all the clients that use the shared printer.

Only the GBU has access to the preset synchronization tool. If you need to share a custom preset, contact the GBU.

The installation of the preset synchronization tool is almost the same for the client and the server. The only difference is that, on the client side, it is mandatory to add the IP address of the print server.

### **Transitioning from V3/V4 drivers to an IPP class driver**

Migrating from legacy V3/V4 print drivers to the HP Click driver, powered by IPP class driver technology, brings significant improvements in security, simplified IT management, and a smoother printing experience. By utilizing Microsoft's Print Support Apps (PSA) framework and the Internet Printing Protocol (IPP) over HTTPS, the HP Click driver reduces many of the risks and complexities associated with traditional drivers.

### **Understanding legacy V3 print drivers**

Designed for early Windows versions (XP, 7).

Operate in kernel mode, meaning they have unrestricted access to the system.

Security risks: Vulnerabilities in drivers can be exploited to gain unauthorized system control.

Stability issues: Faulty drivers can cause system crashes, including Blue Screen Of Death (BSOD) errors.

### **Kernel mode and its security vulnerabilities**

Kernel mode allows drivers to execute with the highest privileges in the system, meaning:

- If a malicious or faulty driver runs in kernel mode, it can cause complete system failure.
- Attackers can exploit kernel-mode vulnerabilities to execute unauthorized code, steal data, or install persistent malware.
- Buggy print drivers running in kernel mode can crash the entire OS, affecting business operations.

To mitigate these risks, modern driver architectures move away from kernel mode and operate in user mode instead.

### **V4 print drivers: Limited improvement, persistent drawbacks**

Microsoft introduced V4 print drivers as an attempt to reduce the reliance on kernel-mode execution and improve manageability. However, V4 drivers still present drawbacks:

- Operate in user mode – Unlike V3 drivers, V4 print drivers execute in user mode, which reduces system-wide failure risks but still has limitations.
- Security limitations – Although V4 drivers execute in user mode, they still require direct access to system resources, creating potential attack vectors.

### **HP Click driver with PSA + IPP class driver**

The HP Click driver eliminates the need for traditional drivers by leveraging:

- IPP over HTTPS for secure communication between printers and Windows.
- User-mode execution in an isolated environment, preventing system-wide failures.
- Microsoft Store-based updates, ensuring compliance with security best practices.

### **Advantages of HP Click driver**

No kernel-mode execution – Reduces the risk of driver-based security threats.

Isolated execution environment – The driver runs in a sandboxed user mode, ensuring vulnerabilities are contained within the application.

Prevents system-wide crashes – Eliminates the risk of BSODs caused by faulty drivers.

Automatic security updates – Ensures the latest protections through controlled Microsoft Store updates.

Limited system exposure – Since the HP Click driver operates within an isolated environment, any exploitation attempts remain at the application level and do not compromise system-wide integrity.

Reduced attack surface – Since PSA handles driver execution, it limits system-level exposure, further strengthening security.

Supports cloud and network printing – Fully compatible with IPP over HTTPS for remote printing.

Microsoft-recommended printing solution – Ensures long-term support and compatibility.


Enhanced reliability – Since the driver operates within an isolated user-mode framework, any crashes and errors do not propagate to the rest of the system.

## Troubleshooting


### Bi-directionality troubleshooting

If bi-directionality is no longer present, try these steps to troubleshoot the issue.

1. Click the **Refresh** link in **Paper source**.

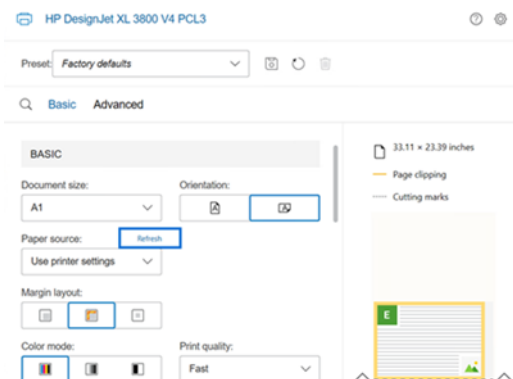

2. Check that SNMP is enabled in the Embedded Web Server and **Configure Standard TCP/IP Port Monitor**.

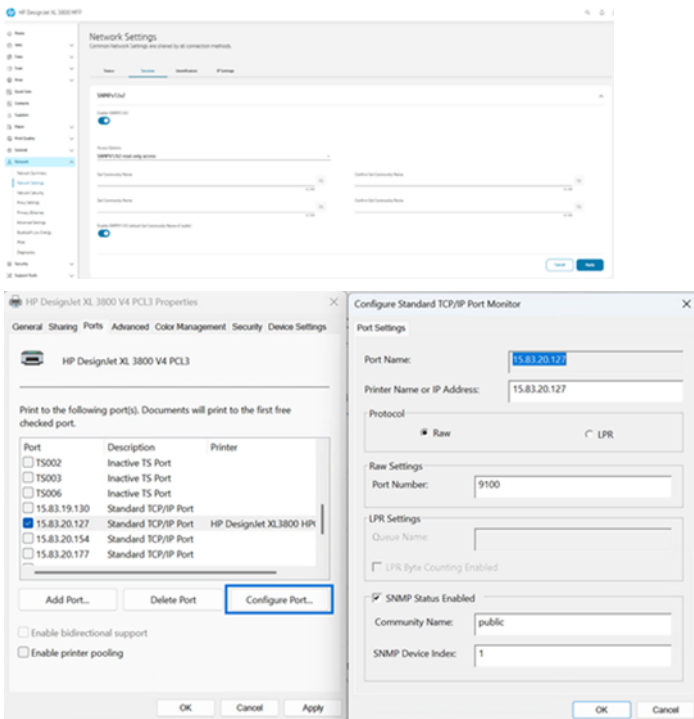

## Apps & features

|                                                                                     |                                        |                      |
|-------------------------------------------------------------------------------------|----------------------------------------|----------------------|
|    | App Installer<br>Microsoft Corporation | 16.0 KB<br>2/22/2022 |
|    | Calculator<br>Microsoft Corporation    | 8.00 KB<br>2/22/2022 |
|    | Camera<br>Microsoft Corporation        | 16.0 KB<br>2/22/2022 |
|    | Cortana<br>Microsoft Corporation       | 36.0 KB<br>2/22/2022 |
|    | DriverInstaller                        | 76.0 KB<br>3/3/2022  |
|    | Feedback Hub<br>Microsoft Corporation  | 236 KB<br>2/22/2022  |
|   | Get Help<br>Microsoft Corporation      | 8.00 KB<br>2/22/2022 |
|  | Google Chrome                          |                      |

3. Change/Re-create the printer port.

### Installed base handbook

This is a valuable resource to understand the features available for a specific printer.

Go to <https://dgt.bcn.rd.hpincorp.net/> to discover all the features available for a specific printer model.

For example, the features of the T950 MFP are listed in the following image:

| Feature                                                                                                      | Selected | Default                     |
|--------------------------------------------------------------------------------------------------------------|----------|-----------------------------|
|  Rotate roll width          | ≠        | From printer                |
|  Collate                    | ≠        | Off                         |
|  Color management           | ≠        | Printer managed colors      |
|  Color Options              | ≠        | Print in color              |
|  Default RGB source profile | ≠        | sRGB                        |
|  EconoMode                  | ≠        | Off                         |
| Fast rendering mode <i>Windows-V3, Mac-OSX, Linux-V4</i>                                                     | ✓        | On                          |
|  Enable automatic cutter    | ≠        | On                          |
|  Margin                     | ≠        | 5 mm                        |
|  Margins/Layout             | ≠        | Standard                    |
|  Maximum detail             | ≠        | Off                         |
| Mirror image                                                                                                 | ✓        | Off                         |
|  Orientation                | ≠        | Portrait                    |
|  Page order                 | ≠        | Last page on top (Standard) |
|  Paper size                 | ✓        | Letter                      |
|  Paper source               | ✓        | Use printer settings        |
|  Paper type                 | ≠        | Use printer settings        |
|  Print quality              | ≠        | Normal                      |
| Print Quality Settings                                                                                       | ✓        | Standard                    |
|  Remove blank areas         | ≠        | Off                         |
| Resolution                                                                                                   | ✓        | 600 x 600 dpi               |
|  Rotate                   | ≠        | Autorotate                  |
| Autorotate                                                                                                   | ✓        |                             |
| Rotate by 0 degrees                                                                                          | ✓        |                             |
| Rotate by 90 degrees                                                                                         | ✓        |                             |
| Rotate by 180 degrees                                                                                        | ✓        |                             |
| Rotate by 270 degrees                                                                                        | ✓        |                             |

## Support elevation

### How to reach HP Support


For the elevation process, the following information will be required:

- Driver version number
- Print path:
  - Application version number
  - Settings applied
- OS version number
- Troubleshooting done: bi-di, spooler reset, reinstallation
- .prn file

### First actions

1. The first action to take is to uninstall and reinstall (the Assisted Driver installer is recommended).
2. Restart the spooler: Open the Task Manager, go to **Services**, look for the Spooler service and restart it.



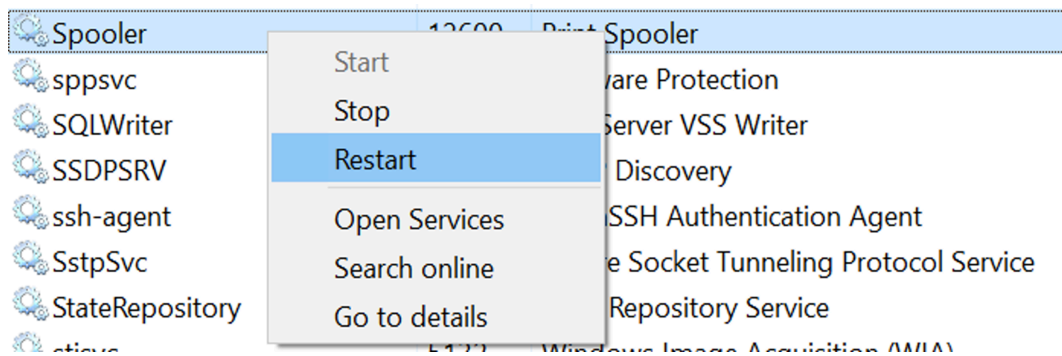

## HP Click driver

---

This is the User Guide for SW Solutions HP Click Driver.

### Introduction

The HP Click driver is an advanced, software-driven printer driver designed to optimize print workflows, reduce errors, and improve user experience. By integrating Printer Support App (PSA) functions, it simplifies the printing process for users.

### Product features and benefits

#### Full integration with Windows 11

The HP Click driver seamlessly integrates with Windows 11, aligning with native system print paths to enhance accessibility and ease of use.

The HP Click driver addresses common printing issues that often lead to reprints, offering a dependable, high-quality solution for professionals who need accurate output with minimal intervention.

#### Efficiency in print flow

A streamlined, guided workflow from document selection to final print. This guided workflow includes automatic adjustments and setting retention for quick, repeatable, and high-quality output.

#### Reliability and error management

Equipped with advanced error detection and management features, the driver helps users to prevent common printing issues, ensuring that prints are accurate and meet quality expectations.

The HP Click driver is optimized for customers in small to medium enterprises, particularly in industries such as AEC (Architecture, Engineering, and Construction). The key attributes include:

- **Direct application printing:** Users can print directly from commonly used applications (Windows) without needing additional software.
- **Compatibility with natural workflow:** The driver's integration into the existing Windows print path allows users to work within their familiar digital environment, minimizing disruptions, and improving productivity.

The HP Click driver addresses common printing issues that often lead to reprints, offering a dependable, high-quality solution for professionals who need accurate output with minimal intervention.

### Comparison of HP Click driver and HP Click application

The following table outlines the distinct capabilities of the HP Click driver compared to the HP Click application, highlighting its exclusive features and functions for Windows 11 users.

**Table 4: Comparison of HP Click driver and HP Click application**

| Feature            | HP Click driver                  | HP Click application          |
|--------------------|----------------------------------|-------------------------------|
| Print preview      | Available, real-time             | Not available                 |
| Error protection   | Active error alerts and logs     | No built-in error protection  |
| PDF saving         | Simultaneous print and save      | Not available                 |
| Print progress     | Visible and updated in real-time | No detailed progress view     |
| File compatibility | Any Windows application          | PDF, JPEG, TIFF, DWF, HP-GL/2 |
| Operating systems  | Windows 11                       | Windows, macOS                |

### Supported operating system

The HP Click driver currently runs under Windows 11.


### Supported printers

The HP Click driver currently supports various HP DesignJet printers (including contractual and MFPs).

- HP DesignJet T210
- HP DesignJet T230
- HP DesignJet T250
- HP DesignJet T630
- HP DesignJet T650
- HP DesignJet T850
- HP DesignJet T858
- HP DesignJet T908
- HP DesignJet T918
- HP DesignJet T950
- HP DesignJet Studio

### Data flow overview

The HP Click driver's data flow is designed to provide users with control over document preview and error-free transmission.

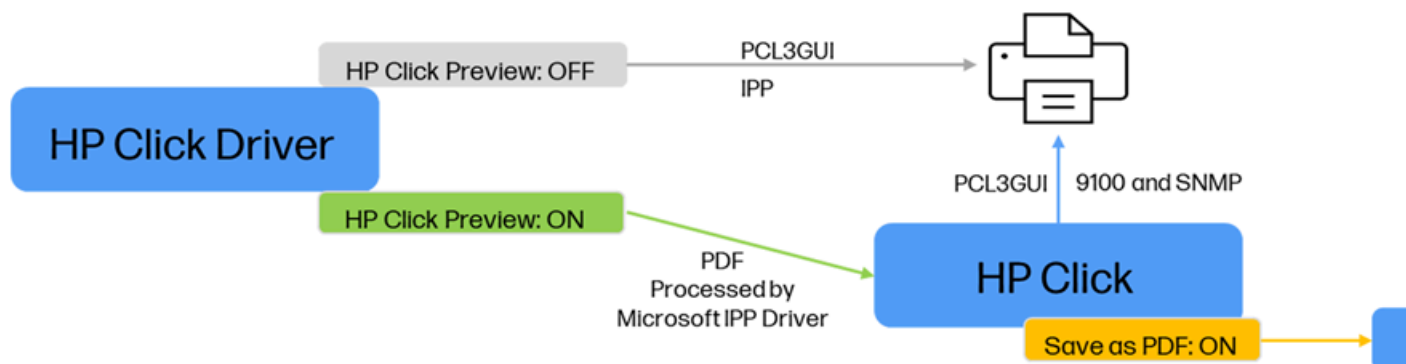

1. Direct print (preview off): With print preview disabled, data is transmitted directly through the IPP protocol in PCL3GUI format, bypassing the preview step.
2. Preview enabled: When the preview is on, print data is sent to the HP Click application, displaying a preview for user confirmation and final adjustments before printing.
3. Save as PDF option: When enabled, a PDF of the document is saved concurrently with the print job.

Communication Protocols Utilized:

- IPP (Internet Printing Protocol): Supports direct network communication for print jobs.
- 9100 port: Facilitates direct data transmission from the device to the printer.
- SNMP (Simple Network Management Protocol): Provides real-time monitoring of the printer's operational status.


**Note:**

Only SNMP v1/v2 are supported.

## Setup and installation

### Installation sources for HP Click driver

Users can download the HP Click driver from various sources.

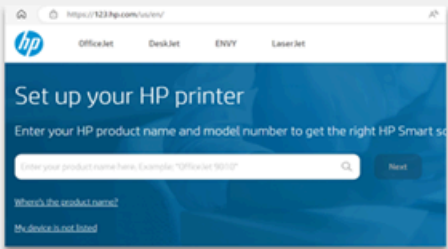

**123.HP Flow**

User downloads the installer 'pack' which includes + HP Click



**HP Support Page Flow**

User downloads the installer 'pack' which includes HP Click Driver + HP Click



**Window add printer**


User adds printer and HP Click Driver

HP Click not down

1. **HP 123 website:** Navigate to 123.hp.com, select the printer model, and download the driver package.
2. **HP Support page:** Access the **Software and Drivers** section, choose **Printers**, and enter the printer model for driver download.
3. **Windows add-printer flow:** Through the Windows Store, users can add and install the HP Click driver directly to their system.


**Note:**

Using the Windows Store option installs only the HP Click driver, not the full HP Click application. If the user does not have HP Click previously installed, a pop-up will appear which recommends downloading the HP Click application to access the print preview feature in the first print after installing the HP Click driver.

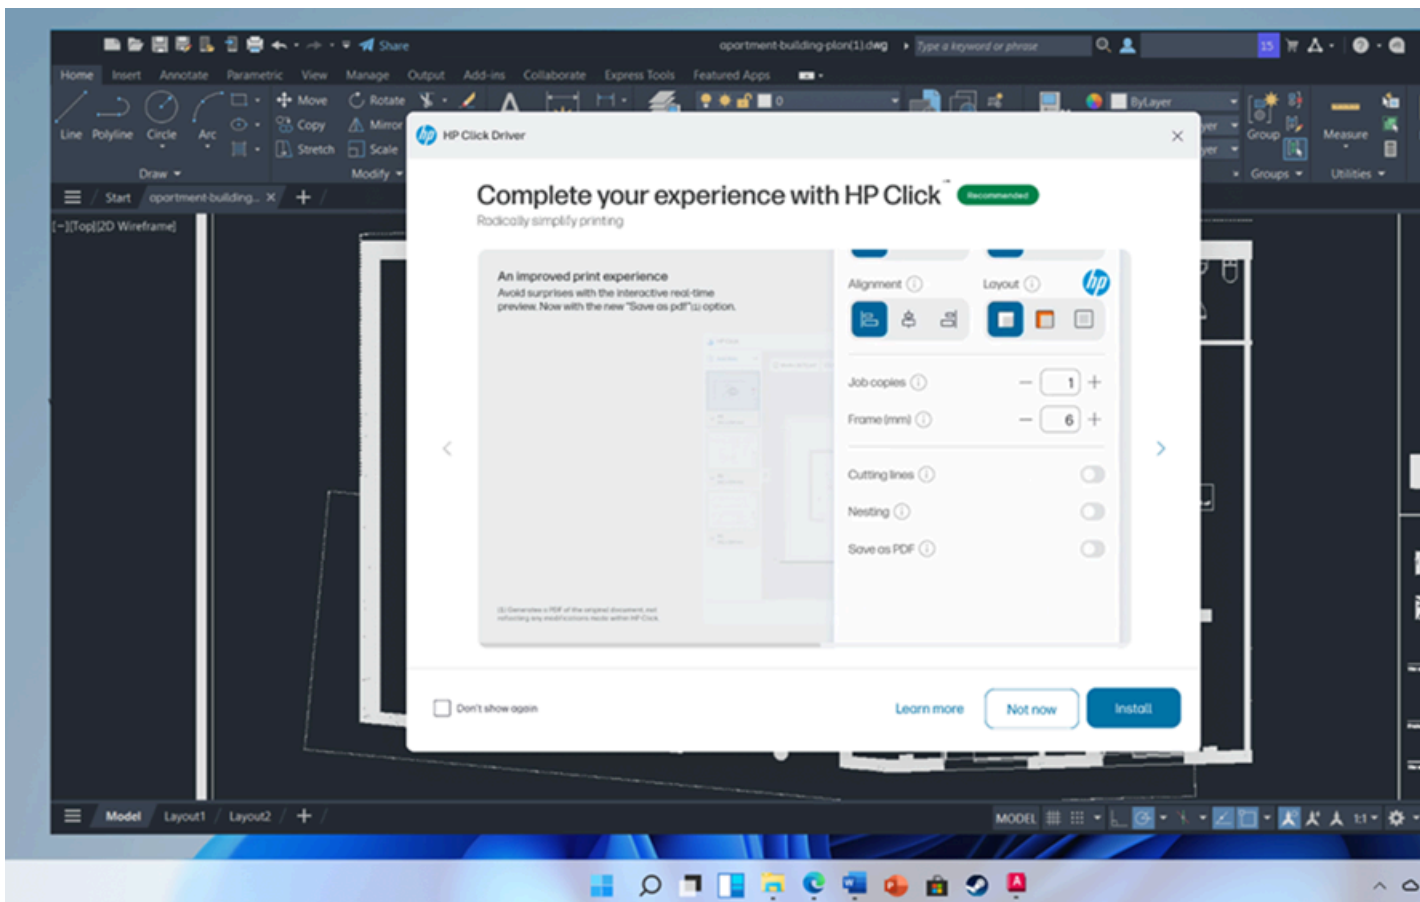

### Prerequisites for installation


IPP (Internet Printing Protocol) must be enabled; it is on by default in the printers. If it is not, it must be activated in the Embedded Web Server.

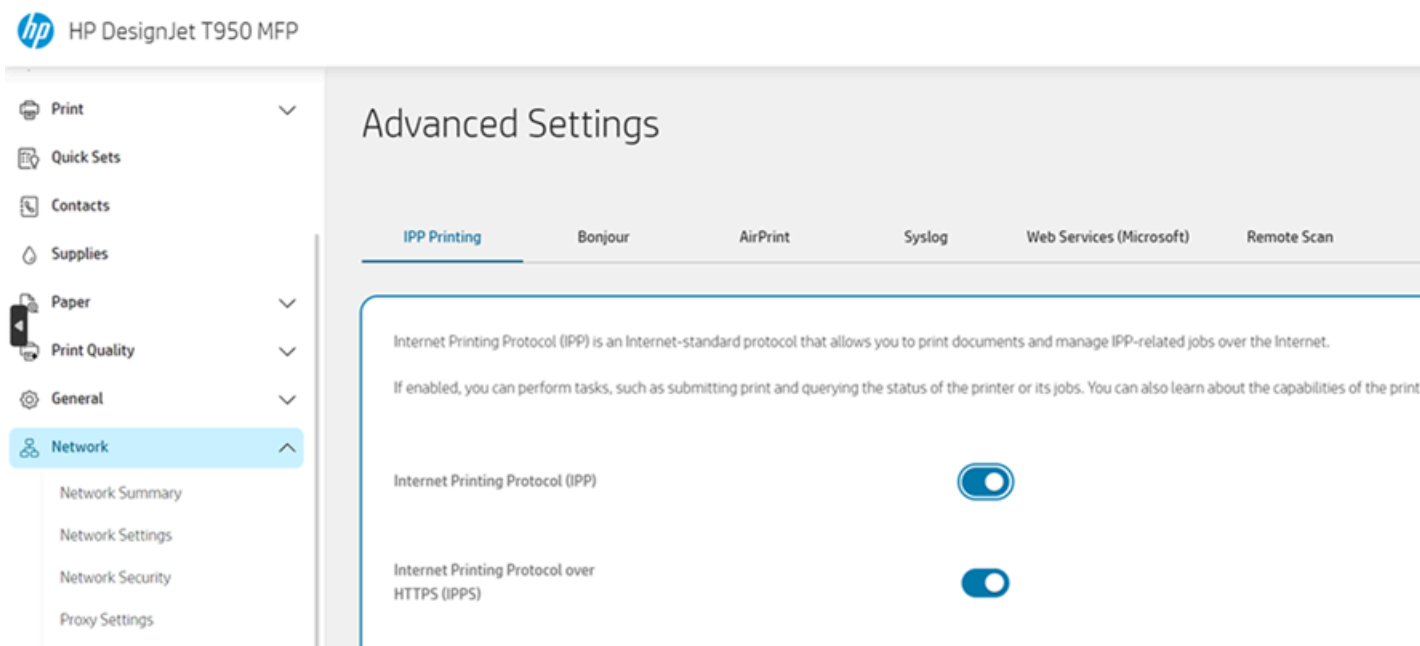




## Installation process




Follow the steps in the order presented.


1. **Download the installer package:** Obtain from one of the approved sources previously mentioned.
2. **Run the installer:**
  - a) Automatic detection: Run the installer to detect compatible printers automatically on the network.
  - b) Manual configuration: If detection fails, enter the device IP address manually for setup.
3. **Printer queue setup:** Confirm the printer queue for proper print job alignment within Windows.

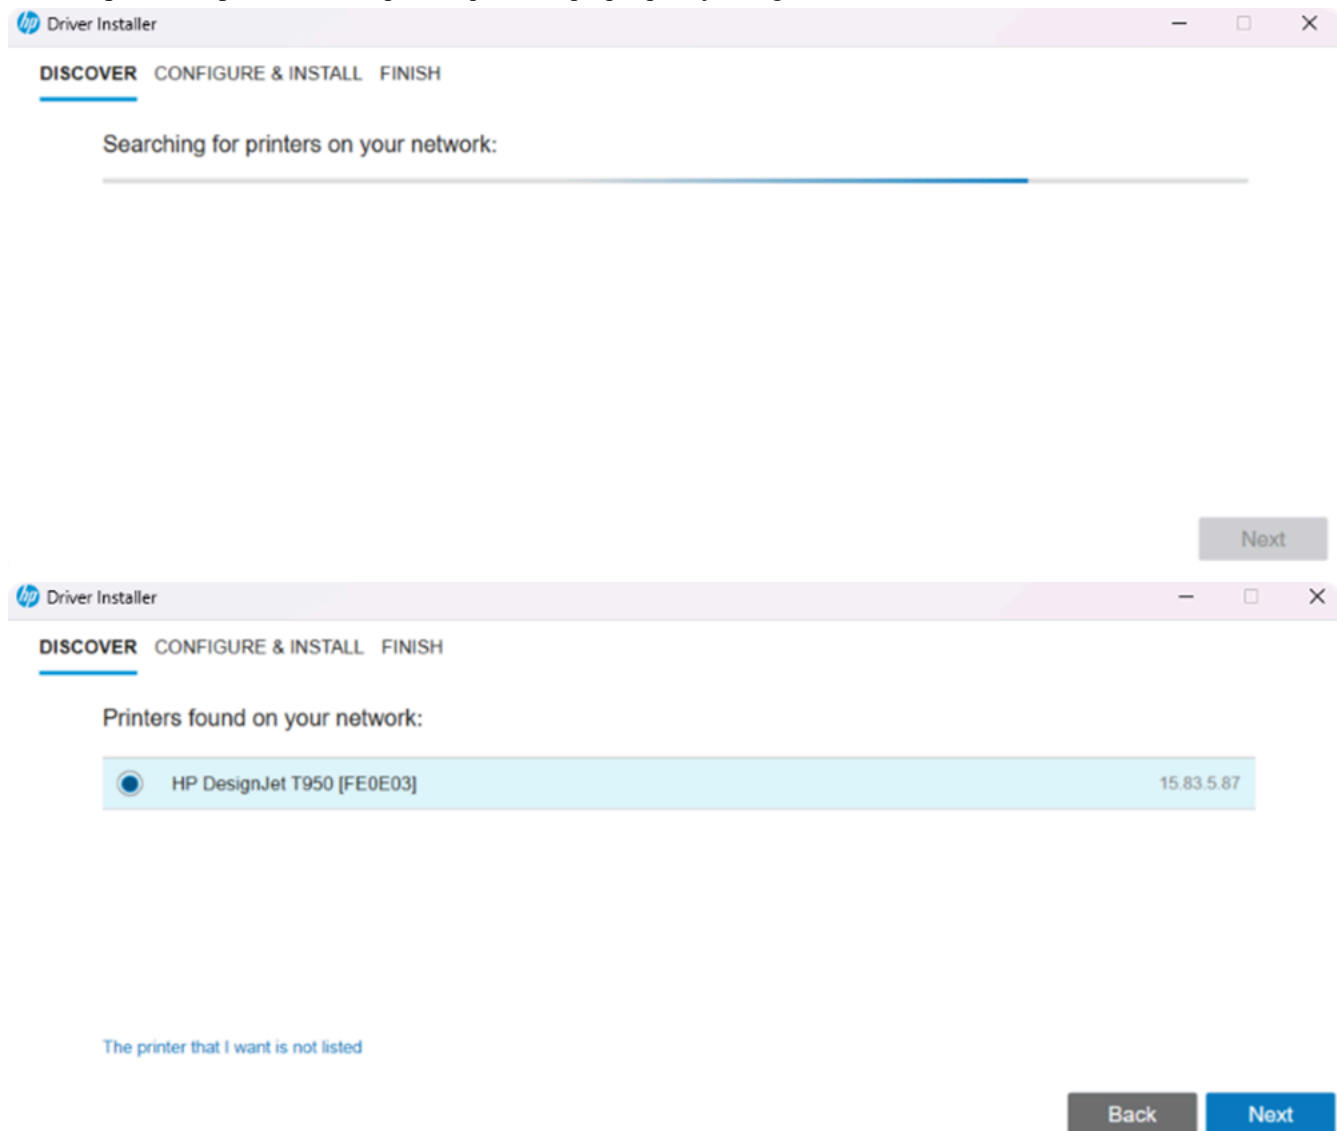

4. If the autodiscovery did not find the device, continue by adding the device manually

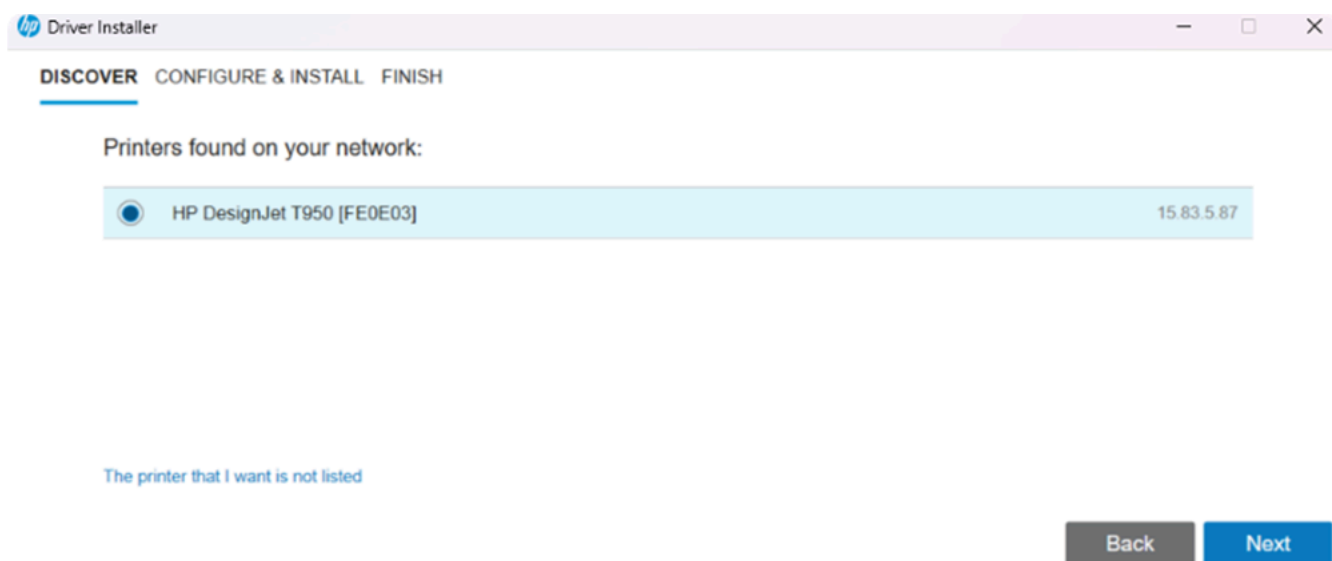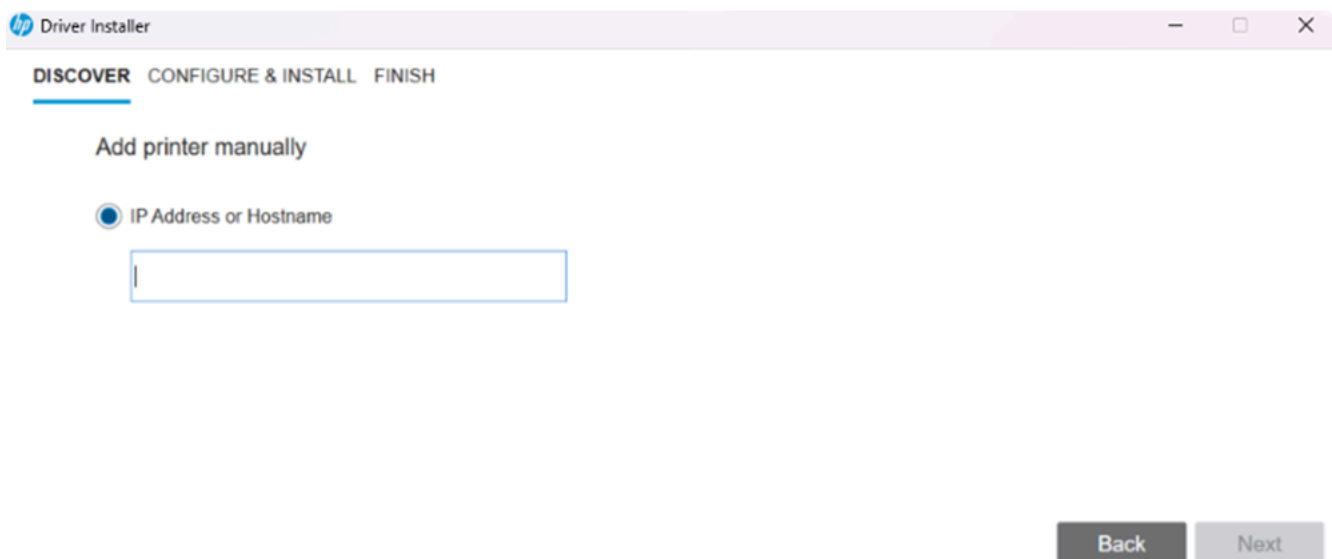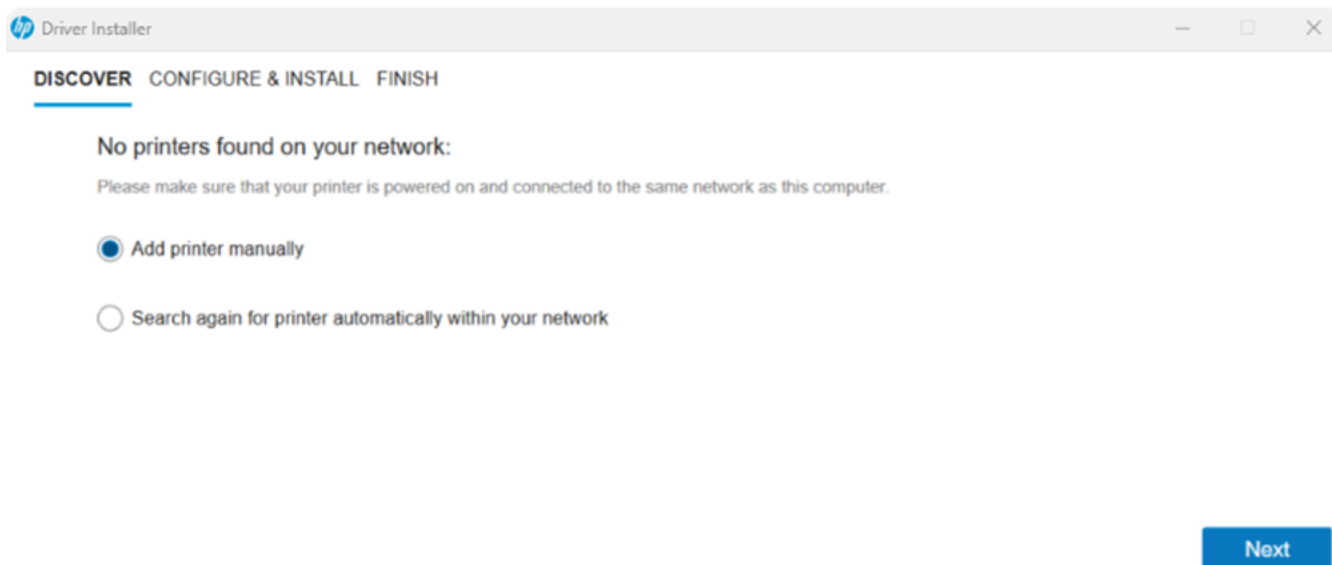

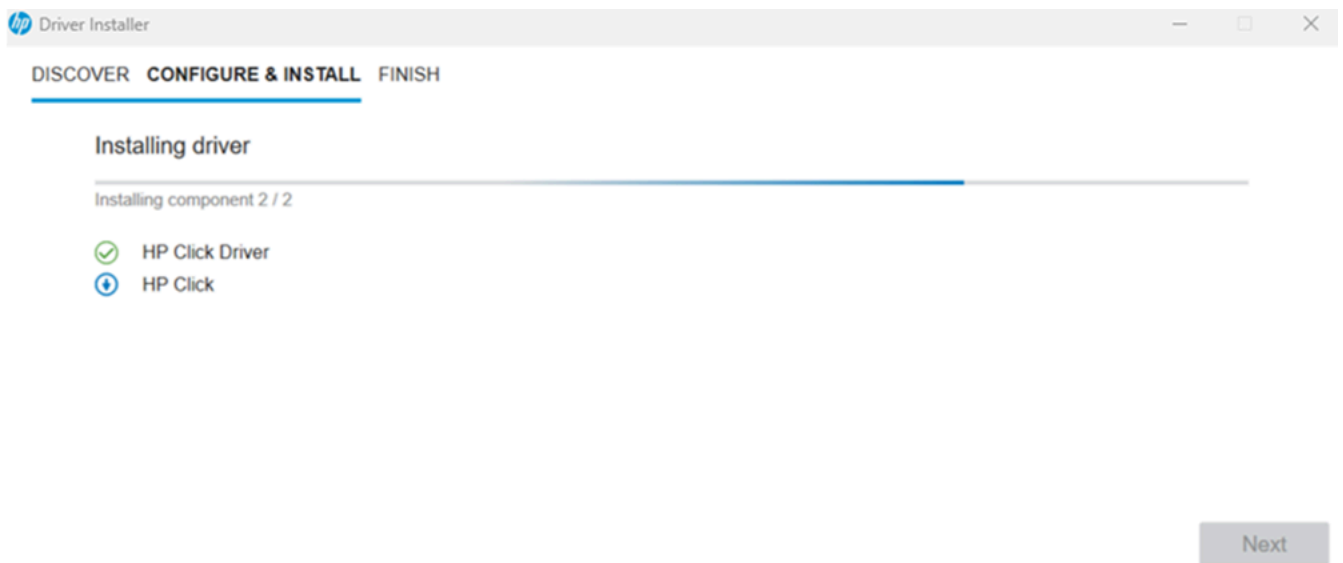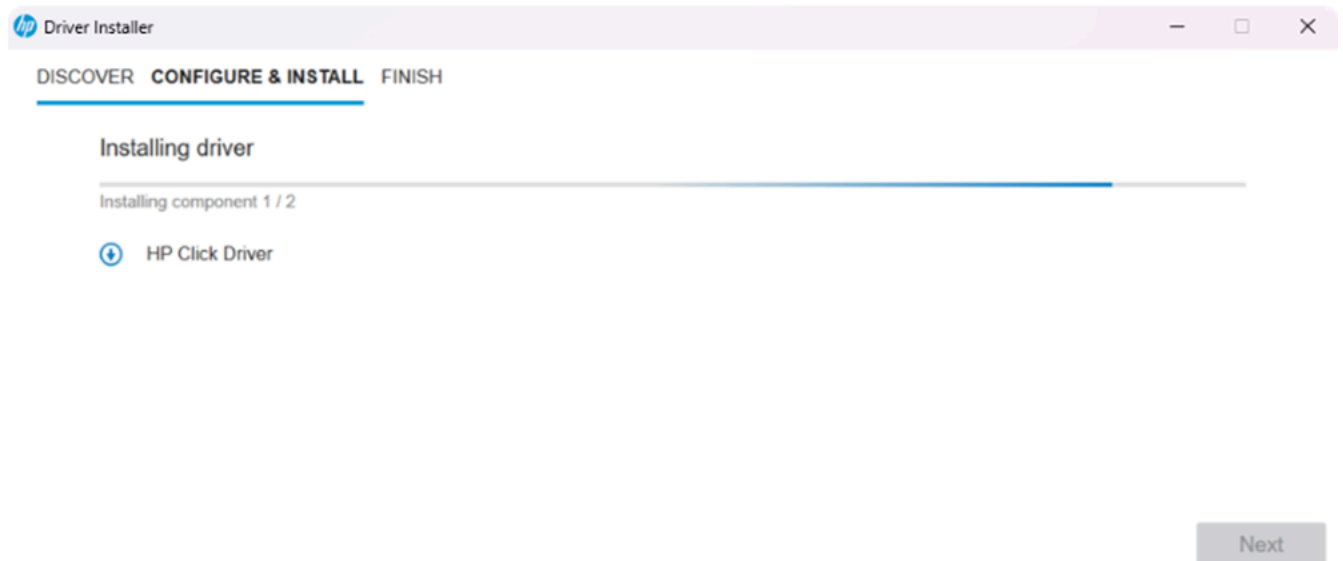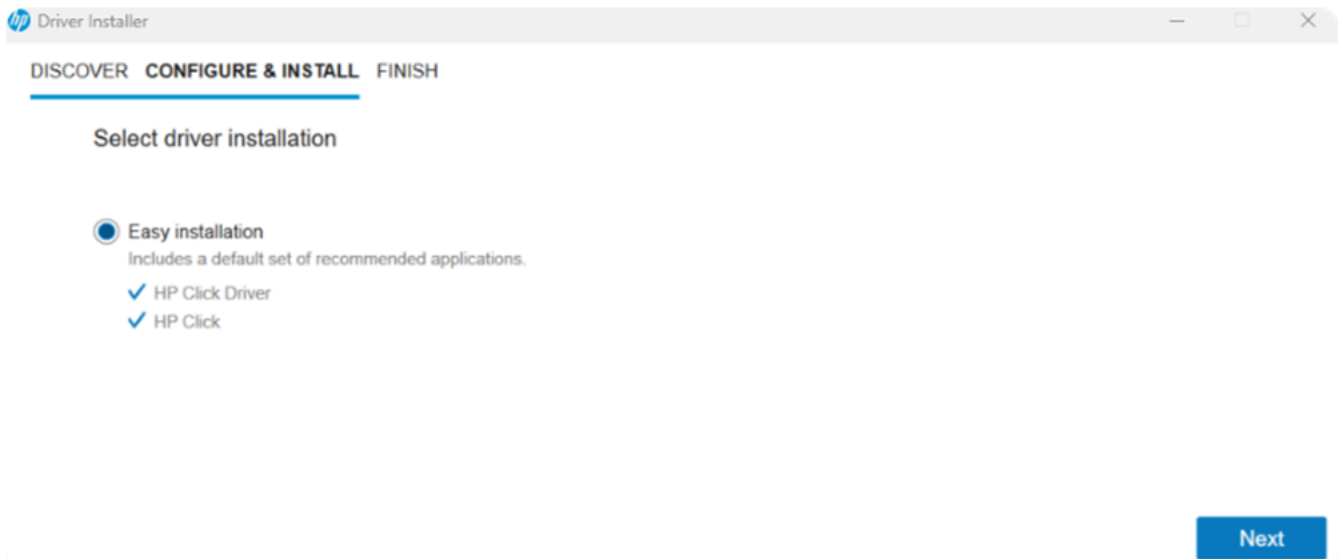

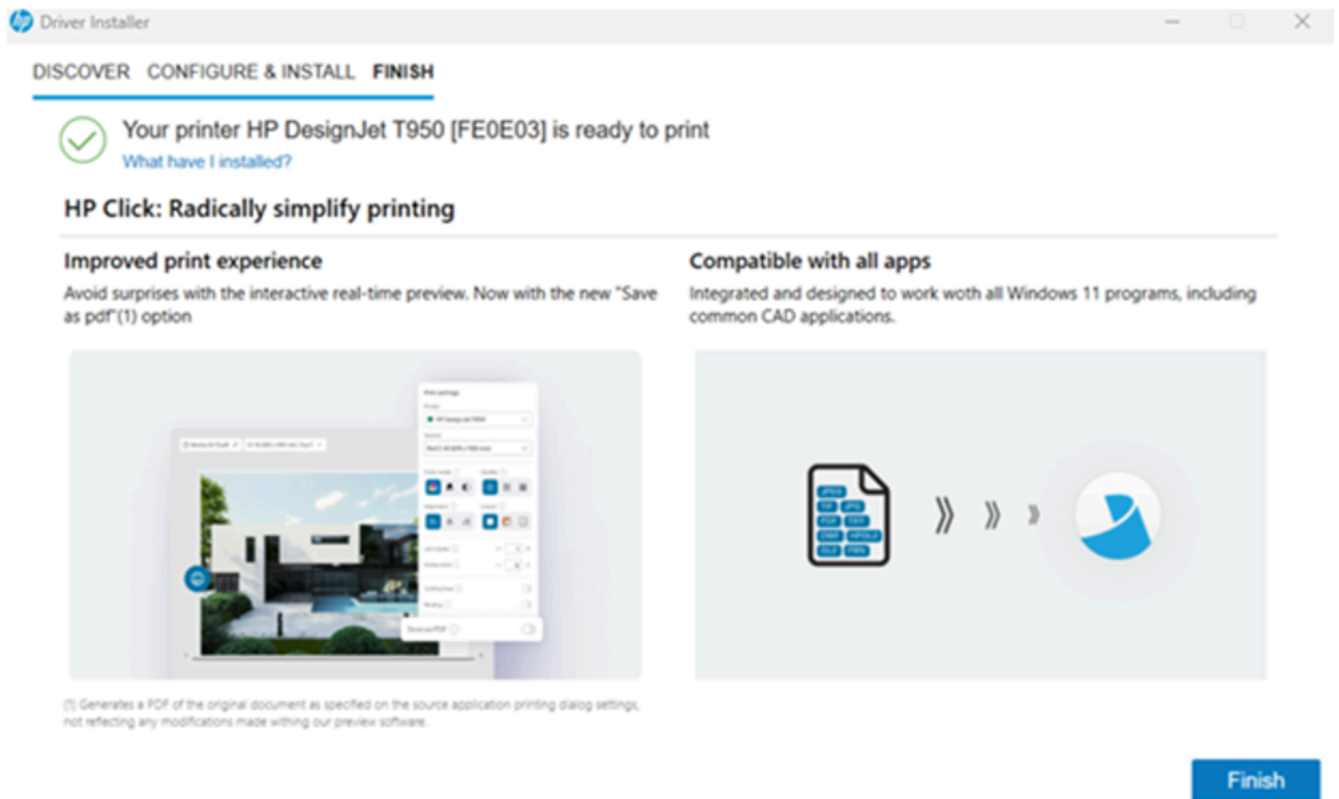


## Printing process


Follow the steps in the order presented.

1. **Open desired application:** Start by opening a Windows-compatible application, such as AutoCAD, Revit, Bluebeam, and so on.
2. **Access Print menu:** Open the file you wish to print, then select **Print** from the application menu.
3. **Select HP Click driver queue:** Choose the HP Click driver in the Print dialog as the designated print queue.
4. **Adjust print properties:** In the driver's UI, adjust necessary print settings for the current job.
5. **Enable print preview:** By default, the driver will show a preview. If not needed, disable to print directly.



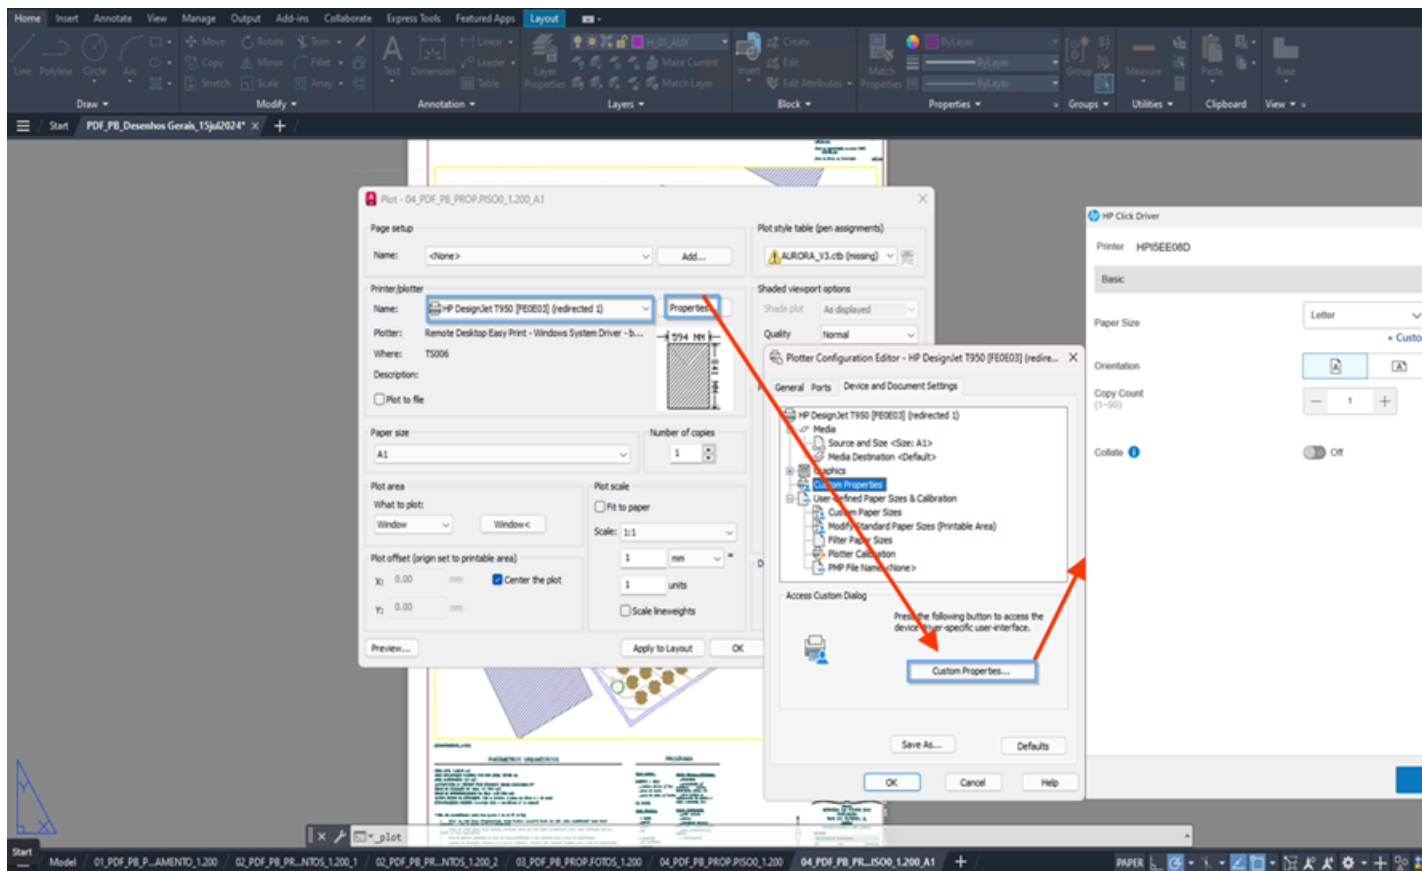



Remember that the print preview can be disabled by clicking the toggle located in the top-right corner. All print settings will then be shown.

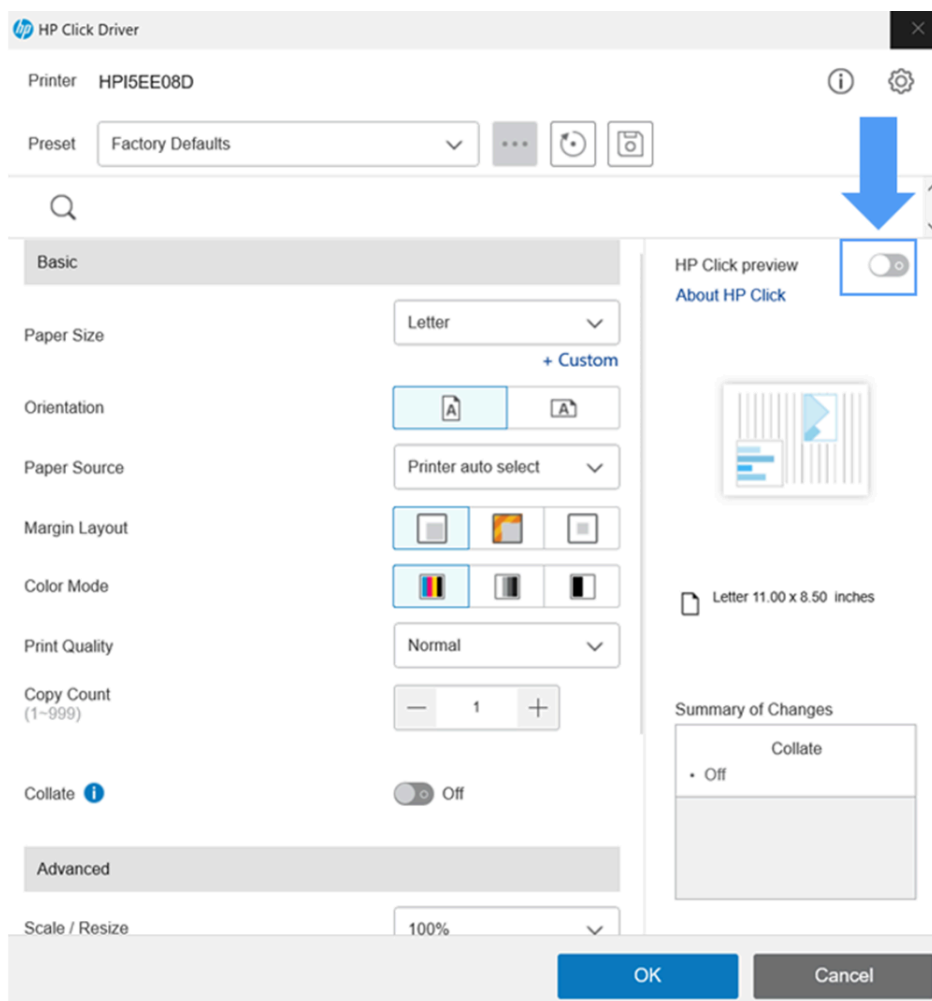

### Note:


When the print preview is disabled, users cannot adjust final settings in the preview before sending the job.

If the user keeps the print preview enabled, some print settings can be adjusted in the driver UI. However, when the user clicks **Print** in the application's Print dialog, the print preview will appear, allowing access to additional print settings and features.

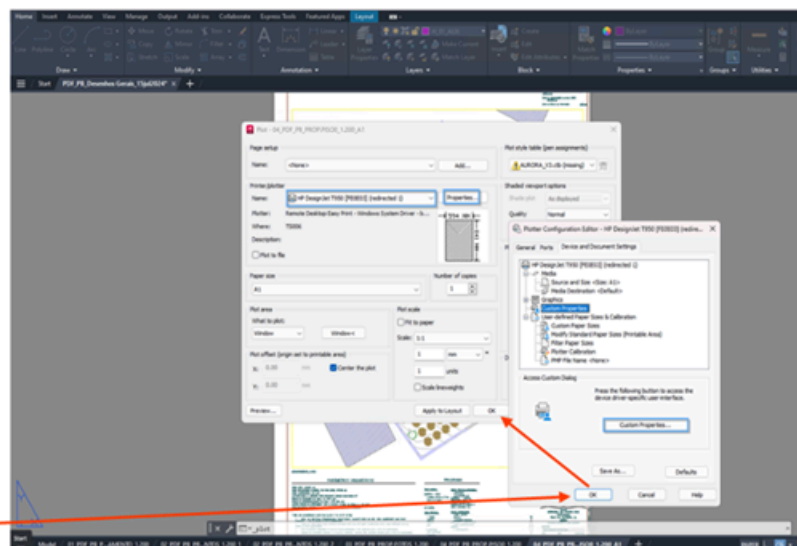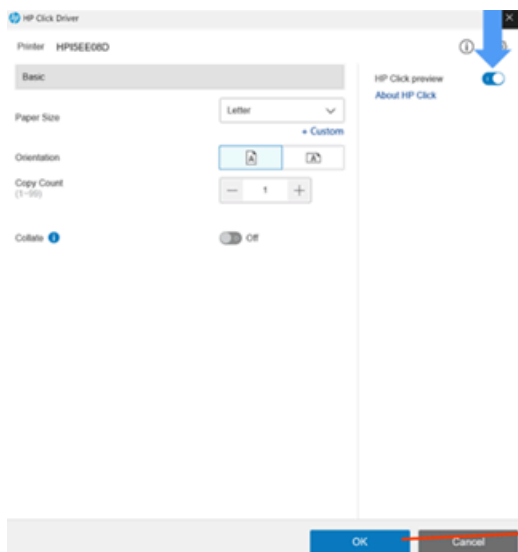

## Interface overview

The HP Click driver interface provides a user-friendly, interactive experience tailored for efficient control and monitoring of print jobs. The interface is designed to simplify the printing process by offering clear visual feedback, status updates, and direct access to essential settings.

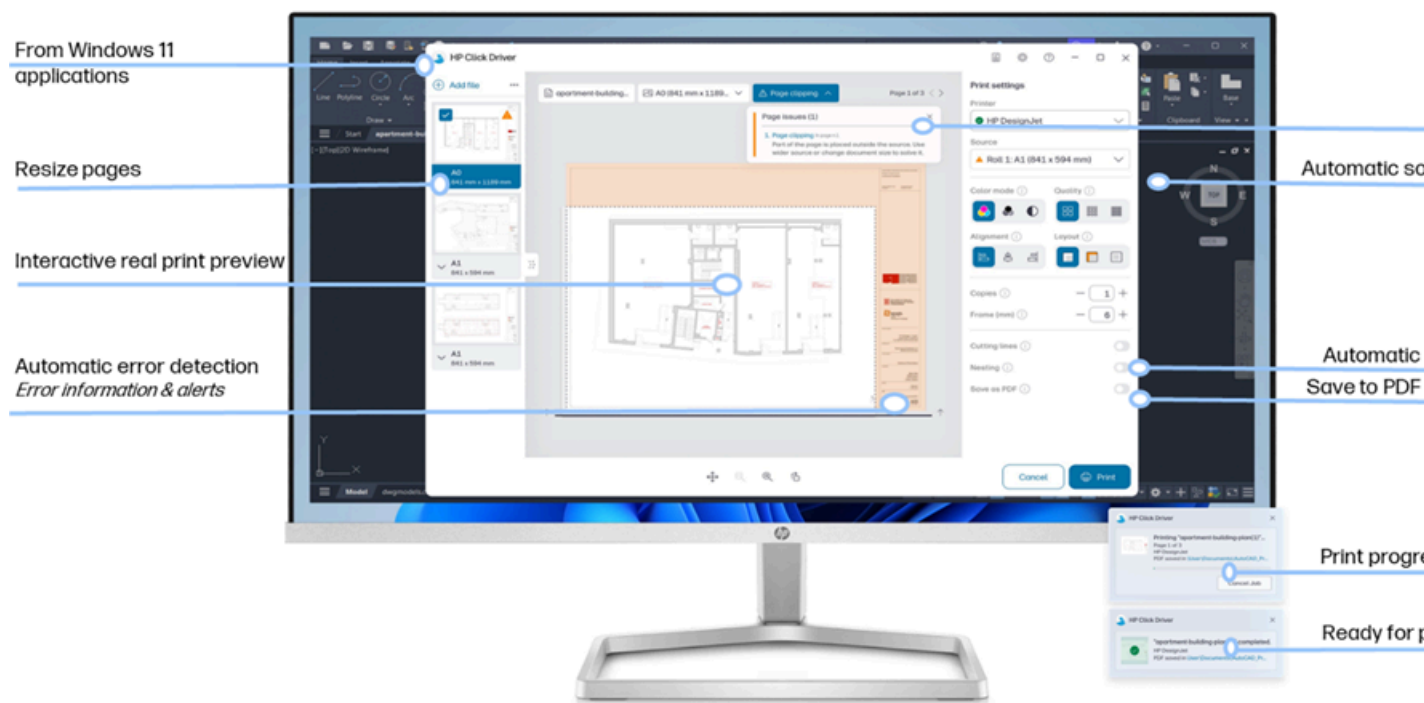

## Interactive real-time print preview

The key components of the interface include:

1. Displays a true-to-print preview, which allows users to verify layout, scale, and formatting accuracy before initiating the print job.
2. This preview minimizes print errors by ensuring the document's appearance matches user expectations.

## Automatic error detection and alerts

1. The interface actively monitors for potential issues (such as paper-size mismatches and low-ink warnings) and provides instant alerts.
2. Error messages are displayed in clear, accessible language, with troubleshooting prompts available to assist users in resolving common problems.

## Document-resizing options

1. Includes tools to resize pages directly within the interface, allowing users to fit documents to specific paper sizes or adjust scale as needed.
2. Resizing maintains aspect ratios and layout integrity to ensure professional print results.

## Save to PDF and print simultaneously

1. Users can choose to save a digital PDF copy of the document while sending it to print, supporting document archiving and sharing needs.
2. This feature reduces the need for separate software and simplifies workflow for users who frequently require digital and physical copies.

### Automatic nesting for efficient paper use

1. The driver's automatic nesting feature arranges multiple pages or images efficiently within the paper's printable area, minimizing waste.
2. Nesting options can be enabled or disabled depending on print job requirements.

### Source selection automation

1. The interface automatically selects the optimal paper source based on the document's size and type, ensuring consistent print quality and reducing manual adjustments.

### Real-time print progress status

1. Provides a status bar that displays the current stage of the print job, from spooling to printing, keeping users informed of their job's progress.
2. Notifications such as `Ready for Pickup` inform users when the print job is complete, enhancing user convenience.

## Deployment procedures

### Using Windows Update

#### Workflow

1. Server setup
  - Set up an IPP (Internet Printing Protocol) printer queue on the server.
2. Client setup
  - Connect the client computer to the server and to the printer queue created on the server.

#### Note:

The HP Click driver interface may not initially open correctly because the required files are pending download from Windows Update.

3. Windows Update
  - Download the .inf driver file via Windows Update.
4. Microsoft Store
  - Download the HP Click driver .msix bundle from the Microsoft Store.
5. Verification:
  - Once all necessary software components are downloaded and installed, the HP Click driver interface should open correctly.
  - You can now submit print jobs from the client to the server, which will forward them to the connected physical printer.

### Without using Windows Update

#### Workflow

- Install the HP Click driver and configure it to connect to a physical printer on the server.

#### Alternative installation methods

- **Option A: Manual installation on client machines**
  - Manually install the driver on each client machine.
  - Connect the client to the server to finalize the installation.
  - This process ensures that all required files for the HP Click driver interface are available.
- **Option B: Using the .msix file for deployment**

- Purpose: The .msix file enables IT administrators to deploy the driver across multiple client machines without requiring individual manual installations.
- Required files: Install the HP Click driver **.inf** file and the HP Click driver **.msix** bundle.
- Server setup: Set up an IPP (Internet Printing Protocol) printer queue.


## Troubleshooting

The following section provides information on troubleshooting.


### The name of the printer queue is not recognizable

If you installed the HP Click driver but you cannot recognize its name, follow the steps in the order presented.

1. Open **Settings**.
2. Go to **Bluetooth & devices > Printers & scanners**.
3. Find and select a printer queue that looks like the following.



4. Click **Printer properties**.
5. Modify the name to assign it the one you consider appropriate.

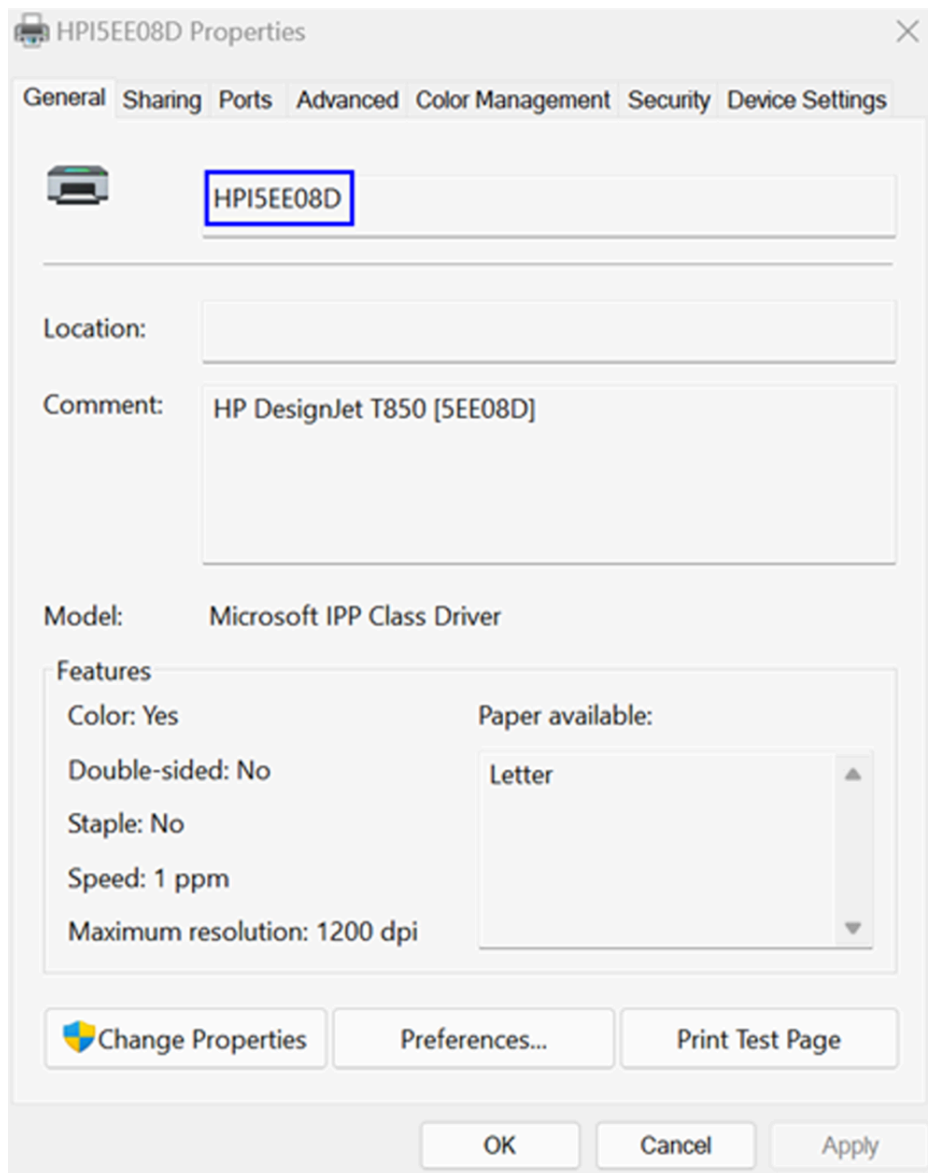


6. Click **OK** to save the changes.

7. Go back to **Printers & scanners** to see the printer queue with the new name assigned.

### **The printer does not receive the job**


When you open the user interface, if it looks like the following image then follow the steps outlined below.

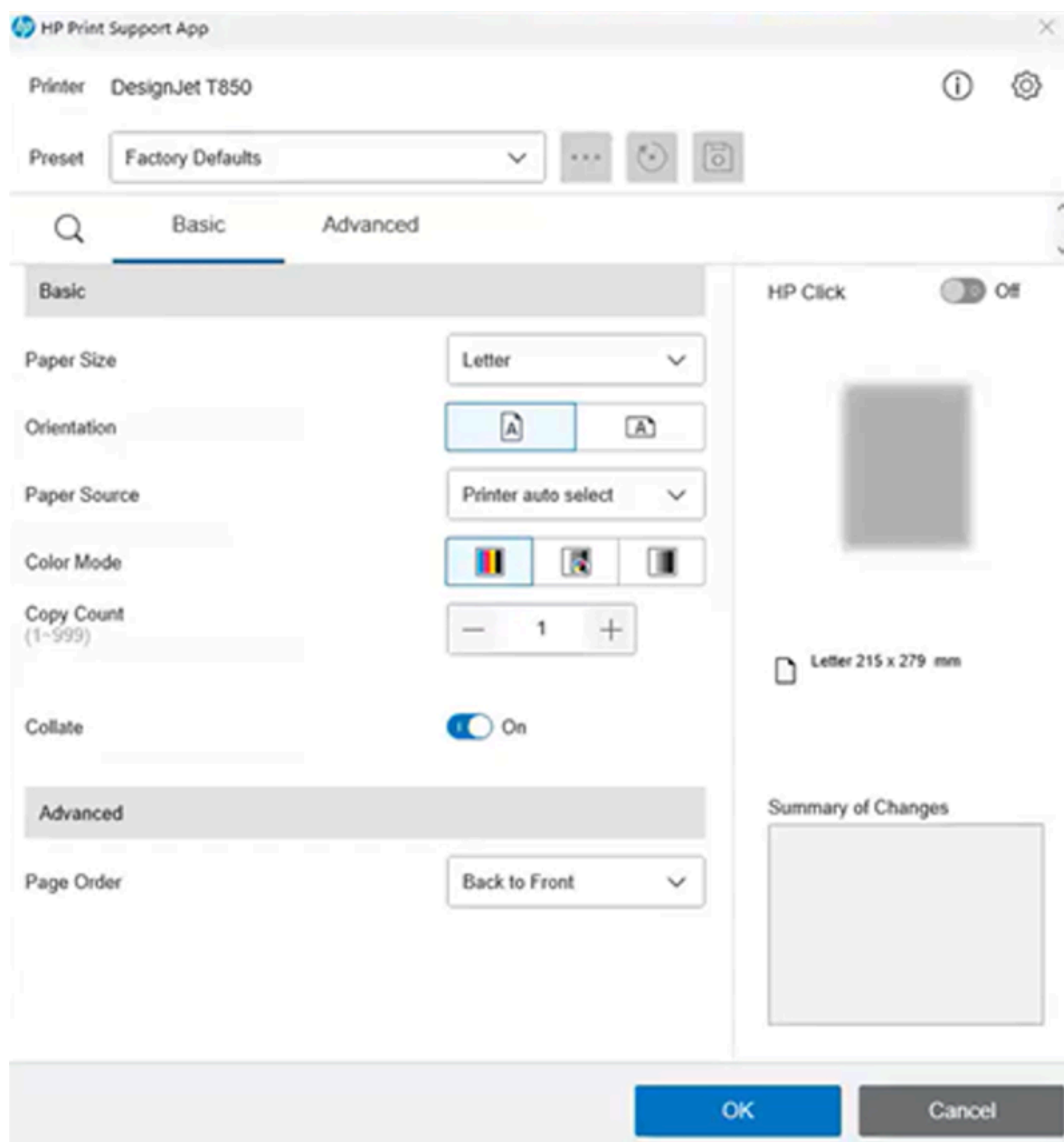

1. If the printer does not receive the print job when you send it, try restarting the printer.
2. If this does not resolve the issue, restart the computer too.
3. You should then be able to access the full user interface, and the driver should communicate properly with the printer.

## Application non-response


If any Windows application is unresponsive when selecting a printing device, ensure that the printer is powered on and then restart the application.

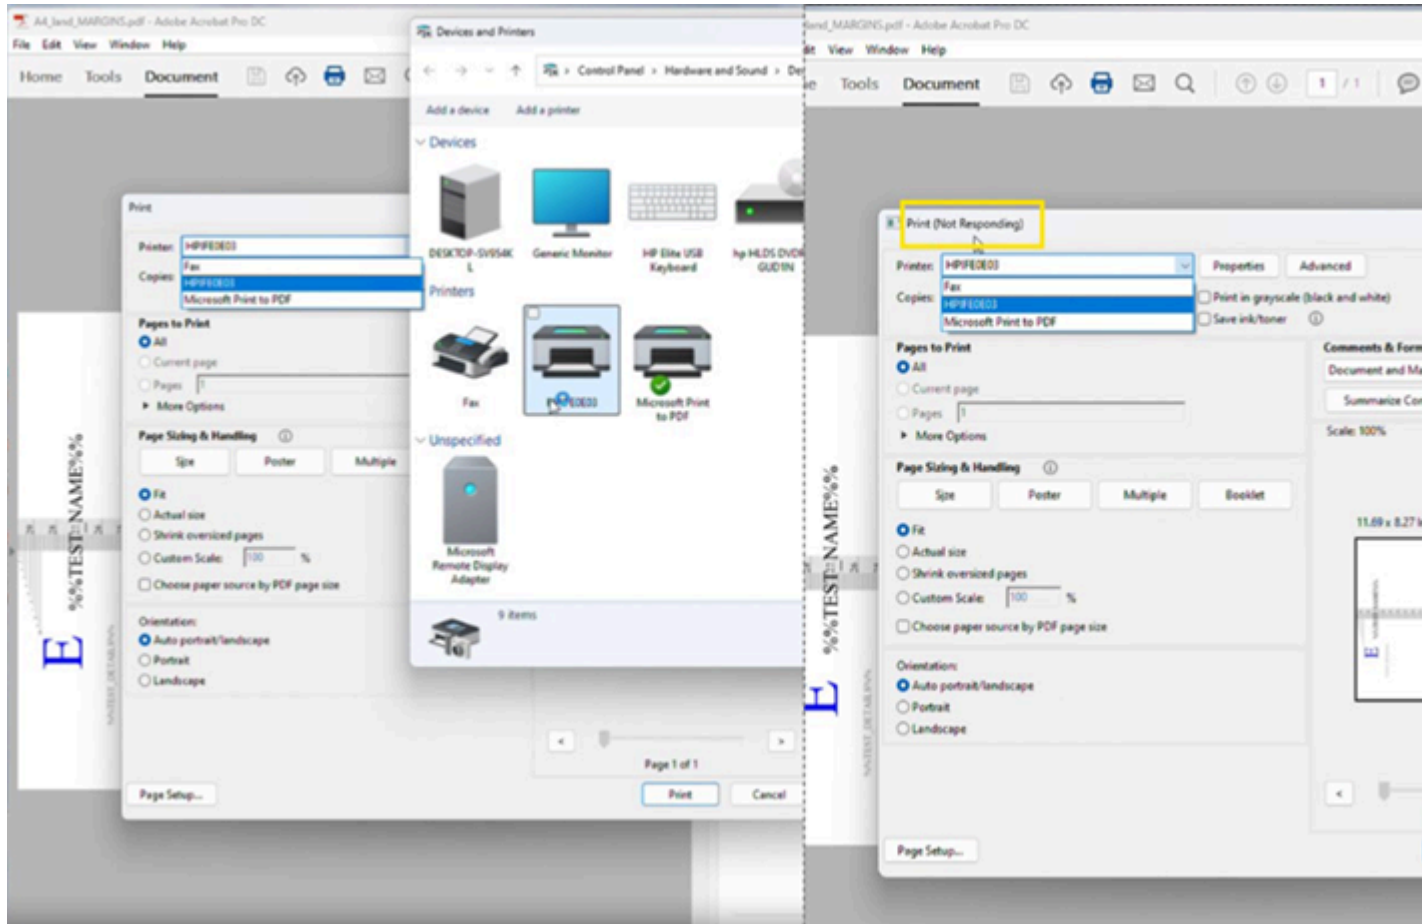



### Print preview accuracy (Content clipped)

If you change the page size in the application's print dialog, and the page size is smaller than the content to be printed, and you do not select the 'Fit to content' option, the print preview result may not be accurate. It will show only the portion of the content that fits within the size selected on the print dialog.

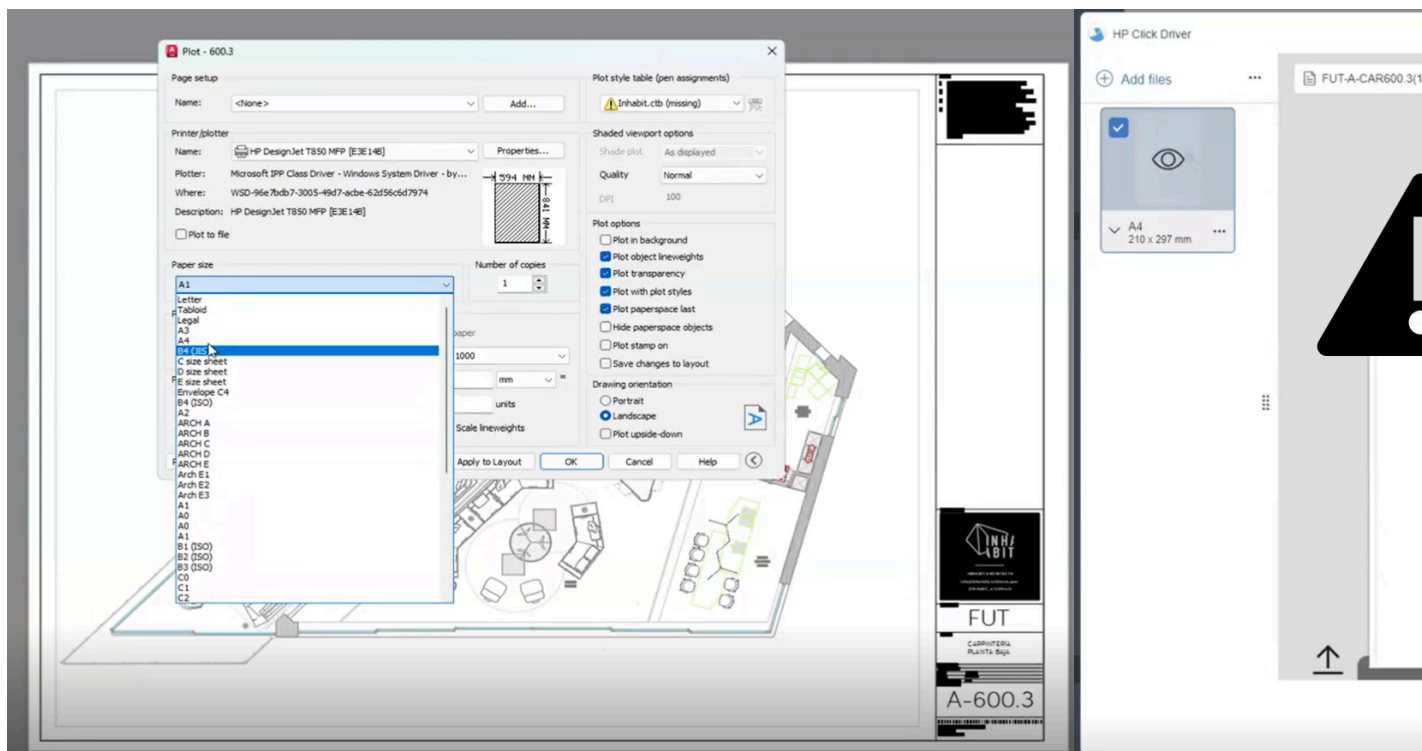

### Troubleshooting

1. Cancel the job on the print preview.
2. Open the application print dialog again (CTRL+P) and select the appropriate page size or select **Fit to content** on it.
3. Click **Print** and review the job on print preview.

### Print preview accuracy (color)

If you change to grayscale in the application's print dialog, these changes will be reflected in the print preview. However, once in the preview, you cannot apply the color setting again.


### Troubleshooting

1. Cancel the job on the print preview.
2. Open Application print dialog again (CTRL+P) and disable grayscale setting in the application's print dialog. Click **Print** and review the job on print preview.

### How to capture the log file of the installer

How to capture the log file of the installer if any issues arise during the installation.

1. Open the folder "%temp%" in the File Explorer.
2. Search for **HP**.
3. Find the log file named **HPDIntegratedInstaller.log**.
4. Contact your service representative and share the file for investigation.

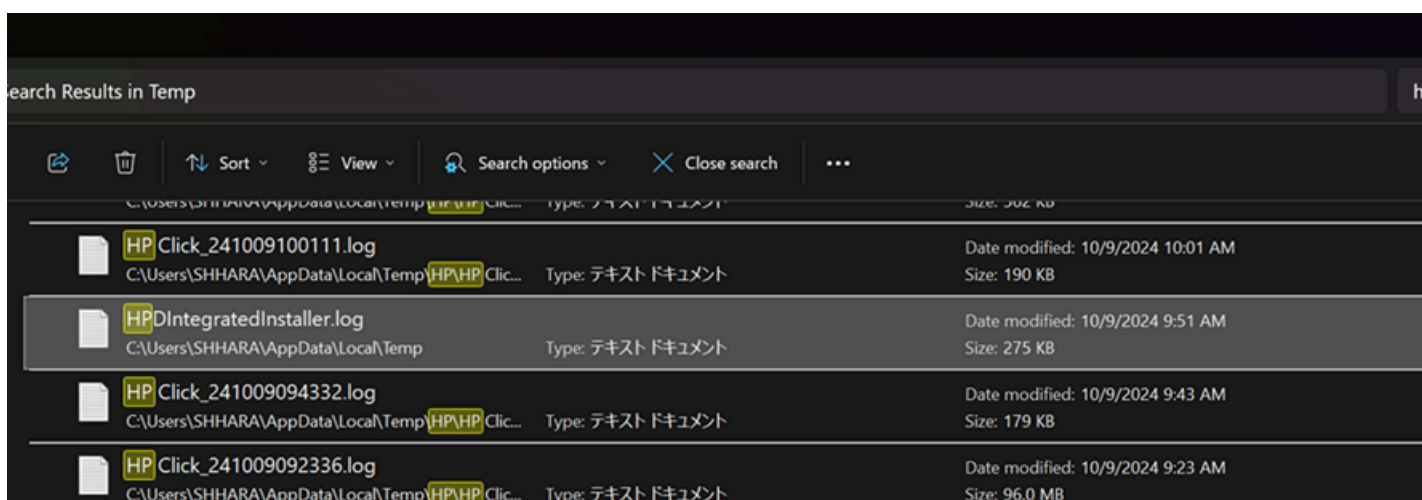

### How to collect all the information needed to diagnose a possible bug in the HP Click driver

1. Open a new File Explorer window and navigate to the %localappdata%\Packages\AD2F1837.HPClickDriver\_v10z8vjag6ke6\LocalState folder.
2. Edit AppConfig.xml in a text editor.
  - a. Set to true the logs and file dump:
 

```
<?xml version="1.0" encoding="utf-8" ?>
<Configuration>
<EnableDump>true</EnableDump>
<EnableLog>true</EnableLog>
<PdcTimeout>60</PdcTimeout>
</Configuration>
```
  - b. Save AppConfig.xml
3. After reproducing the issue, navigate to %localappdata%\Packages\AD2F1837.HPClickDriver\_v10z8vjag6ke6 and generate a zip file with the LocalState folder.
4. Contact your service representative and share the LocalState zip file, it will contain all the logs and files (including job prn) needed to diagnose the bug.

## HP Click printing software

This is the User Guide for SW Solutions HP Click printing software.

### Introduction

#### Who is it for?

HP Click is an easy-to-use job-submittal tool designed for people with low-volume printing needs, who want to print reliably. Ideal for a broad range of graphics and technical applications including posters, roll-up banners, info-graphic presentations, maps, and CAD documents.


#### Getting started

The following steps provide the complete procedure for this topic.


1. Install the application.
2. Start the application. You will see a very simple window.




3. To see what's new in the latest version of the application, click **?** and then **What's new**.
4. The application automatically detects any supported printers connected to your local network. It automatically selects language, units of measurement, and a selection of page sizes according to your operating system settings. (However, you can change all these things manually, and add printers manually if necessary.)

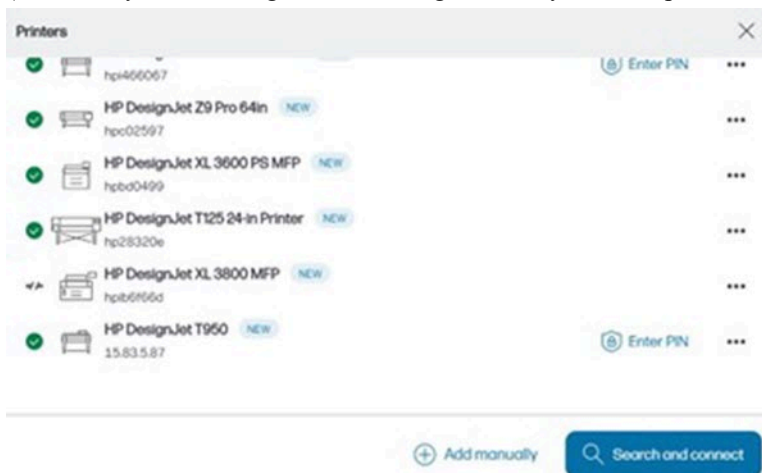


5. Select a printer at the top left of the window. You can also change print settings here.

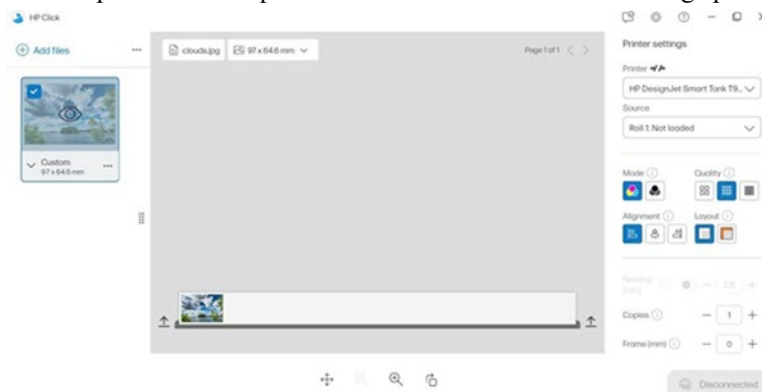

6. Take any compatible file that you want to print and drop it on the application window, or click **Select File** in the center of the window to browse for your file. All the images will be collected on the left side of the application window.

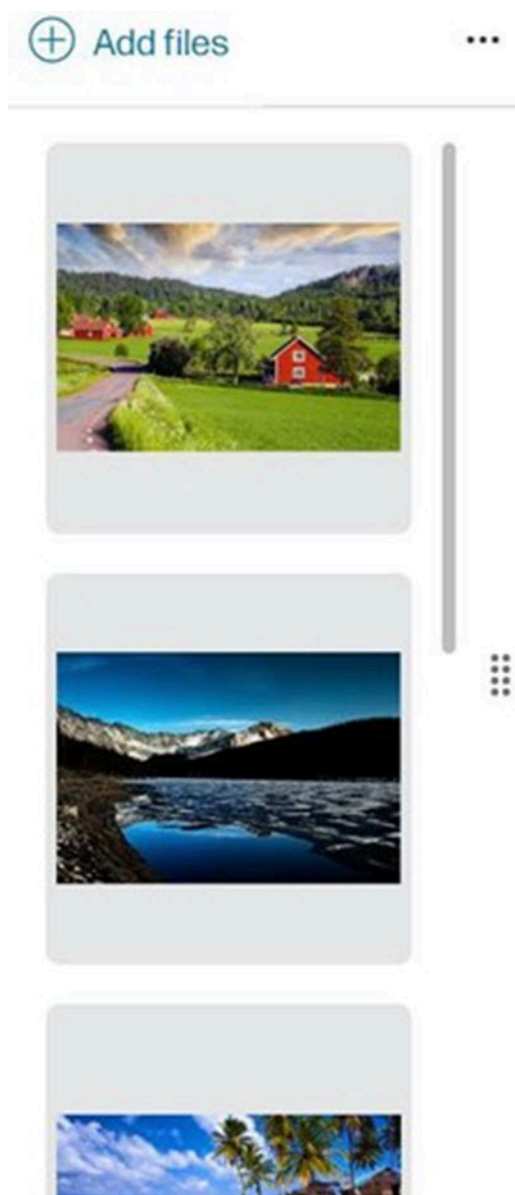

7. If you click an image, you will see a print preview of it.

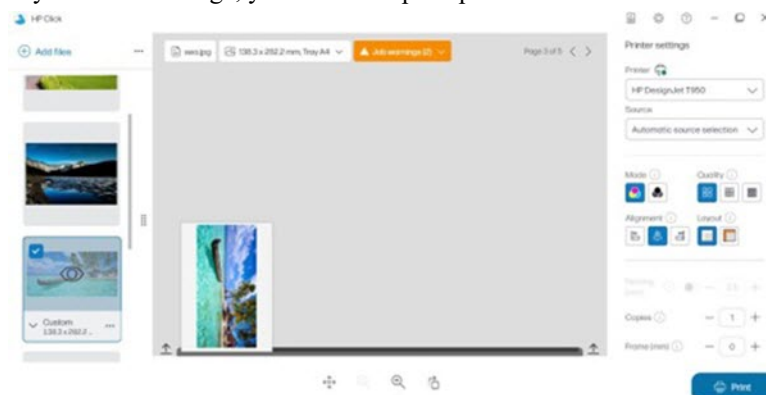

8. When you are ready to print, click the **Print** button. By default, all pages are printed.

## Installation

### Requirements

This topic explains the concepts involved in this subject.

Microsoft Windows 7 or later (64-bit only)

- Intel Core i3 2.4 GHz with four virtual cores/threads, or equivalent or better processor
- 4 GB of RAM, or more
- 3.5 GB of free space on hard disk, or more, plus 100 MB for each additional printer
- Screen resolution of 1280 × 1024 pixels, or more, tuned or calibrated to sRGB for optimal performance
- Ethernet network, IPv4, 100 Mb/s or faster

Mac OS X 10.10 or later

- Intel Core i5 1.6GHz with dual core, or equivalent or better processor
- 4 GB of RAM, or more
- 3.5 GB of free space on hard disk, or more
- Screen resolution of 1280 × 1024 pixels, or more, tuned or calibrated to sRGB for optimal performance
- Ethernet network, IPv4, 100 Mb/s or faster

Ensure that your computer is connected to the same subnet as your printers. Otherwise, ensure that computer and printers are able to communicate through the 8080, 8085, 8086, 9100, 9102 TCP, and 161 UDP ports.

If you feel the need of improvement, the performance of the application can be improved by exceeding the minimum specifications above: more than 4GB of RAM (which requires a 64-bit operating system), a faster processor with more cores, a faster network, and a faster hard disk drive (ideally a solid-state drive).

### Supported printers

This topic explains the concepts involved in this subject.

HP Click currently supports the following printers:

- HP DesignJet D5800 Production Printer (60 in, available only in APJ)
- HP DesignJet Studio printer (24 and 36 in)
- HP DesignJet T100 printer (24 in)
- HP DesignJet T120 printer (24 in)
- HP DesignJet T125 printer (24 in)
- HP DesignJet T130 printer (24 in)
- HP DesignJet T210 printer (24 in)
- HP DesignJet T230 printer (24 in)
- HP DesignJet T250 printer (24 in)
- HP DesignJet T520 printer (24 and 36 in)
- HP DesignJet T525 printer (24 and 36 in)
- HP DesignJet T530 printer (24 and 36 in)
- HP DesignJet T630 printer (24 and 36 in)
- HP DesignJet T650 printer (24 and 36 in)
- HP DesignJet T730 printer (36 in)
- HP DesignJet T790 printer (24 and 44 in, with and without PostScript)
- HP DesignJet T795 printer (44 in)
- HP DesignJet T830 MFP (24 and 36 in)
- HP DesignJet T920 printer (36 in, with and without PostScript)
- HP DesignJet T930 printer (36 in, with and without PostScript)
- HP DesignJet T940 Printer (36 in)
- HP DesignJet T1300 printer (44 in, with and without PostScript)
- HP DesignJet T1500 printer (36 in, with and without PostScript)

- HP DesignJet T1530 printer (36 in, with and without PostScript)
- HP DesignJet T1600 and T1600dr printers (36 in, with and without PostScript)
- HP DesignJet T1700 and T1700dr printers (44 in, with and without PostScript)
- HP DesignJet T1708 and T1708dr printers (44 in, with and without PostScript)
- HP DesignJet T2300 MFP (44/36 in, with and without PostScript)
- HP DesignJet T2500 MFP (36 in, with and without PostScript)
- HP DesignJet T2530 MFP (36 in, with and without PostScript)
- HP DesignJet T2600 and T2600dr MFPs (36 in, with and without PostScript)
- HP DesignJet T3500 MFP (36 in, with and without PostScript)
- HP DesignJet T7100 printer (42 in, with and without PostScript)
- HP DesignJet T7200 printer (42 in, with and without PostScript)
- HP DesignJet Z6 (24 and 44 in, with PostScript)
- HP DesignJet Z6dr (44 in, with PostScript)
- HP DesignJet Z9<sup>+</sup> (24 and 44 in, with PostScript)
- HP DesignJet Z9<sup>+</sup>dr (44 in, with PostScript)
- HP DesignJet Z2100 Photo printer (24 and 44 in)
- HP DesignJet Z2600 PostScript printer
- HP DesignJet Z3200 Photo printer (24 and 44 in, with and without PostScript)
- HP DesignJet Z5200 printer (44 in, with and without PostScript)
- HP DesignJet Z5400 printer (44 in, with and without PostScript)
- HP DesignJet Z5600 PostScript printer
- HP DesignJet Z6200 printer (42 and 60 in, with and without PostScript)
- HP DesignJet Z6600 printer (60 in, with and without PostScript)
- HP DesignJet Z6610 printer (60 in, with and without PostScript)
- HP DesignJet Z6800 printer (60 in, with and without PostScript)
- HP DesignJet Z6810 printer (42 and 60 in, with and without PostScript)
- HP DesignJet XL 3600 MFP (36 in, with PostScript)
- HP PageWide XL 3900/3920 MFP (40 in, PostScript only)
- HP PageWide XL 4000 printer and MFP (40 in, PostScript only)
- HP PageWide XL 4100 printer and MFP (40 in, PostScript only)
- HP PageWide XL 4200 printer and MFP (40 in, PostScript only)
- HP PageWide XL 4500 printer and MFP (40 in, PostScript only)
- HP PageWide XL 4600 printer and MFP (40 in, PostScript only)
- HP PageWide XL 4700 printer and MFP (40 in, PostScript only)
- HP PageWide XL 5000 printer and MFP (40 in, PostScript and AMS only)
  - HP Click license required for printer in AMS region.
- HP PageWide XL 5100 printer and MFP (40 in, PostScript and AMS only)
  - HP Click license required for printer in AMS region.
- HP PageWide XL 5200 printer and MFP (40 in, PostScript and AMS only)
  - HP Click license required for printer in AMS region.
- HP PageWide XL Pro 5200 printer and MFP (40 in, PostScript and AMS only)
  - HP Click license required for printer in AMS region.

**Note:**

HP Click supports only HP original ink supplies.

**Supported file formats**

This topic explains the concepts involved in this subject.

HP Click can print the following file formats:

- JPEG
- HP-GL/2
- PDF
- PNG
- TIFF
- DWF (Windows only)

### Supported languages

HP Click can operate in English, Portuguese, Spanish, Catalan, French, Dutch, Italian, German, Polish, Russian, Chinese Simplified, Chinese Traditional, Korean, or Japanese.

### Updates

HP Click is updated automatically to incorporate bug and security fixes, add new features or performance enhancements.

If you want to make sure you have the latest version of HP Click or want to manually download it, go to <http://www.hp.com/go/hpclick/software>.

## Licensing


For further information on how to install a USB license and to get the trial license, go to the website.

See <http://www.hp.com/go/hpclick/howtoinstall>.

### USB dongle license available

Check the *HP PageWide XL Dongle Accessory Installation Guide* for HP Click, and make sure the USB dongle license is correctly installed in the printer.

HP Click tells you if the license is not installed, with a message in the **Preferences > Printers** panel menu.

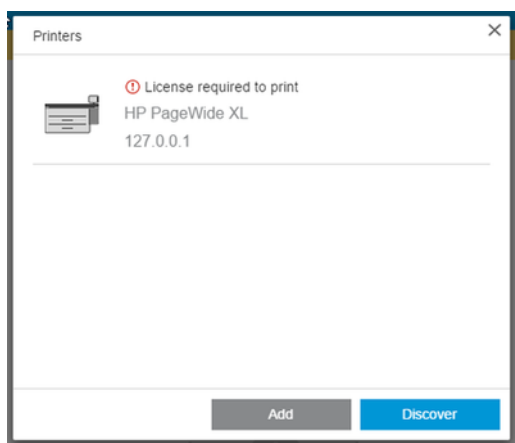


To check that a license has been correctly installed, use the printer's control panel to view general information, or the Embedded Web Server (see the printer's user guide).


### Trial license available

A trial license enables you to try the software free, for 60 days.

Open your Web browser and enter the printer's IP address. Once in the printer's Embedded Web Server, click the **General** tab, then **Firmware update**. Follow the instructions to upload the trial license you just downloaded.

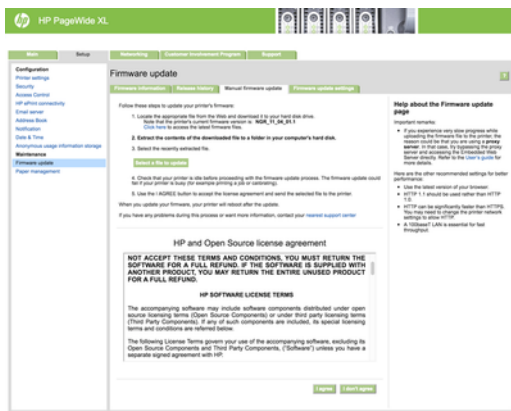

HP Click shows how much trial license time remains in the **Printers** panel menu.

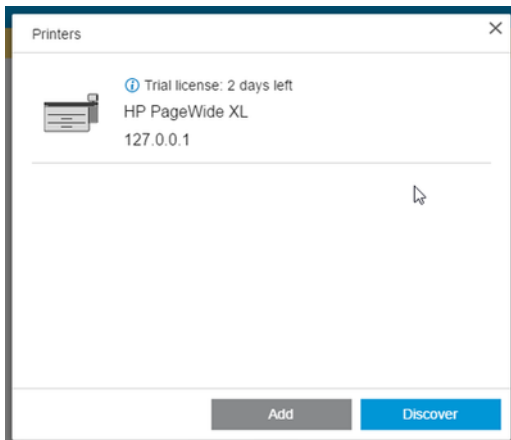


To check that a license has been correctly installed, use the printer's control panel to view general information, or the Embedded Web Server (see the printer's user guide).

## Preferences

The application preferences allow you to change the HP Click configuration, which is initially set automatically.

To access the preferences, click the  icon in the title bar, then click **Preferences** to change the general preferences, or **Printers** to change the list of printers.

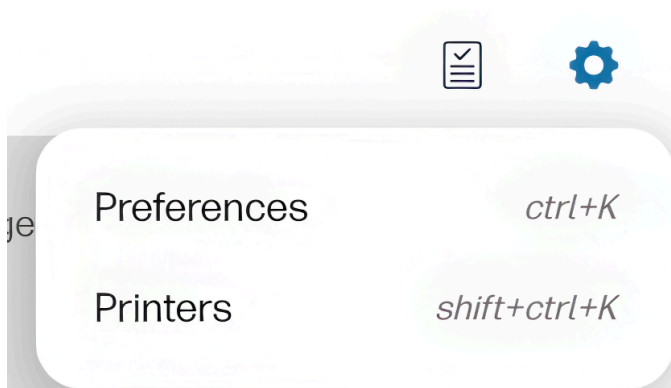



## General preferences

The general preferences apply to all printers.

General Preferences

Open HP Click when printing from any app  
(Changes will be applied from next app launch)

Language and units

Language: English

Units: Millimeters

Page size

Standard page size is used for several settings. Choose which family to see:

|                                                       |                                                     |
|-------------------------------------------------------|-----------------------------------------------------|
| <input checked="" type="checkbox"/> ANSI              | <input checked="" type="checkbox"/> American        |
| <input checked="" type="checkbox"/> Architectural     | <input checked="" type="checkbox"/> DIN A (ISO/JIS) |
| <input checked="" type="checkbox"/> DIN B (ISO)       | <input checked="" type="checkbox"/> DIN B (JIS)     |
| <input checked="" type="checkbox"/> Photo paper sizes | <input checked="" type="checkbox"/> Super sizes     |

Default application layout

☒ Preview visible  
Decide to use the application with preview visible from start

- **Language and units:** You can change the language of the text and the units of measurement displayed by the application.
- **Page size:** There are various families of standard page sizes. You can choose which families you wish to see in the application.
- **Preview visible:** If you check the box, the preview is visible from the start. Otherwise, it is displayed when you double-click the page thumbnail.
- **Thumbnail information visible:** If you check the box, extra information is displayed under each thumbnail.
- **Nesting by page order:** The page order is maintained when nesting is applied.
- **Accessibility:** You can choose to increase the character size of the text and/or use shortcuts.

## Printer preferences

The printer preferences allow you to edit the list of printers displayed by the application.

Printers

My printers (64)


|                                     |  |                                       |     |
|-------------------------------------|--|---------------------------------------|-----|
| <input checked="" type="checkbox"/> |  | HP DesignJet XL 3800 MFP<br>hpi4bf344 | ... |
| <input checked="" type="checkbox"/> |  | HP DesignJet XL 3800 MFP<br>hpi7f8788 | ... |
| <input checked="" type="checkbox"/> |  | HP DesignJet XL 3800 MFP<br>hpi9e5ae4 | ... |
| <input checked="" type="checkbox"/> |  | HP DesignJet XL 3800 MFP<br>hpidb00   | ... |
| <input checked="" type="checkbox"/> |  | HP DesignJet XL 3800 MFP<br>hpi183fc  | ... |

HP DesignJet XL 3800 MFP


Add manually Search and connect

- Click the **Search and connect** button to try to discover more printers by automatic search of your local network.

- Click the **Add manually** button to add a printer manually, by entering its IP address or hostname.

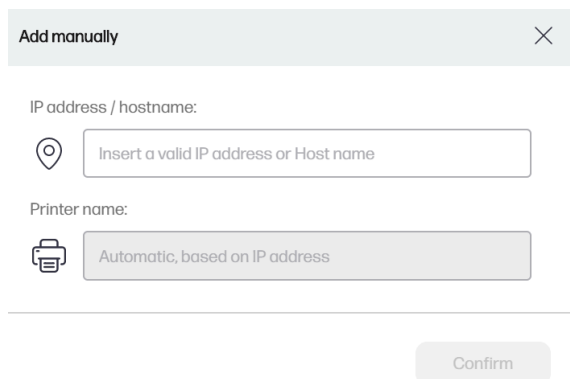


- Click a particular printer to change its name or delete it.

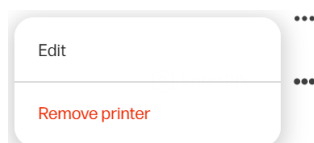

## Help menu

To display the help menu, click the  icon in the title bar.

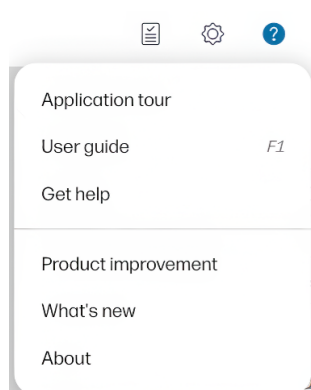


- Application tour** gives you an introduction to the application.
- User guide** gives you more detailed information about the application.
- Get help** gives you direct access to the HP Support team and allows you to submit questions.
- Product improvement** collects anonymized data on how you use the application, to help HP in designing future versions.
- What's new** displays a window listing the new features of this version of the application.
- About** displays the version number of the application.

## Job preparation

### Settings

The print settings dialog is displayed when you click a job to see the preview on the right side of the application window.

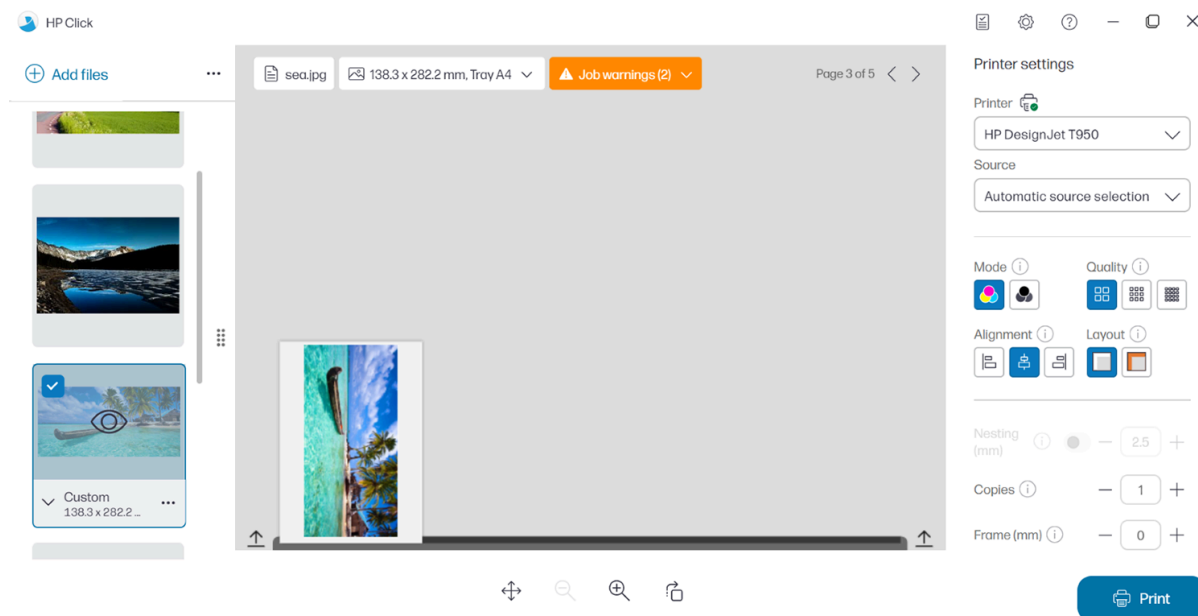

- **Printer:** Select the printer you want to use from the list of connected printers. To connect another printer, see [Printer preferences](#) on page 53.

With some printers, you will see links below the printer's name that offer convenient access to the printer's Embedded Web Server, which gives you printer and print-job status information, and enables you to change printer settings and manage the printer from your computer.

- **Printer job queue:** In which you can see the status of your print jobs and manage the job queue.
- **Accounting:** In which you can see information about the usage of consumable supplies by the latest printed jobs. With some printers, there is a tab in which you can assign a cost to each print job, which can be exported to an Excel file.

The Embedded Web Server has online help that provides fuller information about its features and how to use them.

- **Source:** Select the paper source, which can be roll, tray, single sheet, or automatic selection (if supported).
- **Mode:** Select color, grayscale, or black-and-white printing, depending on the modes available in the printer.
- **Quality:** Select the print quality, which can be Fast, Normal, or Best. Higher quality usually means lower speed of printing.
- **Gloss enhancer:** This setting is available only for the HP DesignJet Z9+ Printer series, if gloss enhancer is installed, and if the loaded paper supports gloss enhancer. To use gloss enhancer ink and achieve superior gloss uniformity, you need to install a separate kit available for the whole Z9+ series.
- **Alignment:** Select where content should be aligned on the roll/sheet.
- **Layout:** If this is checked, the application assumes that the printer margins are zero, and that it can print across the full width of the paper. However, the printer will not print anything that falls within the actual printer margins.
- **Nesting:** Turn nesting on or off (default: off) and select the gap between pages. See [Nesting](#) on page 58.
- **Copies:** Select the number of copies of the job to be printed, from 1 to 99. Two or more job copies will be sent to the printer as collated sets.
- **Cutting lines:** If this is checked, additional marks are printed to indicate where the paper should be cut to obtain the desired page size.
- **Borderless:** If your printer supports borderless printing and/or uses a specific trimming device, this setting will be available when the conditions apply, based on the paper loaded.

**Tip:**

Some paper types do not support borderless printing to the edges of the paper, but they may support borderless printing using a vertical trimmer, if the printer has a vertical trimmer.

- **V-trimmer:** If vertical trimming is supported by the printer, additional cutting lines are displayed in the page preview. Make sure this feature is activated in your printer.

**Tip:**

HP recommends using Borderless if selected manually and V-trimmer if activated. Due to printer margins, printable area may be reduced when using the vertical trimmer. If you prefer to avoid clipping the image, deactivate it to use the whole surface of the paper.


- **Remember last settings:** If this is checked, the application will remember the last set of printing settings that you selected, saving you some time and effort.

|                                                                                           |                                                                 |
|-------------------------------------------------------------------------------------------|-----------------------------------------------------------------|
| Printer  | Printer is ready                                                |
| Printer  | Printer is sending warning messages, but can print              |
| Printer  | Printer is sending error messages, and may not be able to print |
| Printer  | Printer is disconnected: you cannot print to it                 |

**Figure 1: Printer status**

**Page options**

Various options are available when you click a specific page in the application.

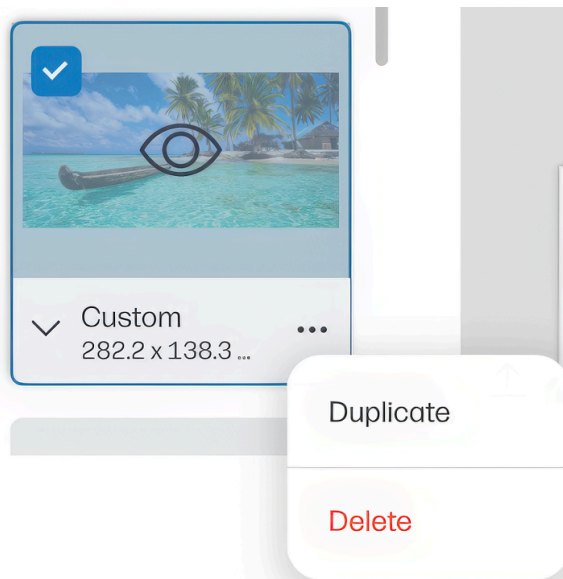


**Page selected:** By default, every page is selected for printing. If you do not want to print the selected page, click  at the top left of the thumbnail to turn off printing for that page.

To see the following options, click  below the image and to the right:

- **Duplicate:** Click to request extra copies of the selected pages.
- **Delete:** Click to delete the current page from the overall page layout.

## Preview

When the preview is visible, it is displayed on the right-hand side of the window, while the page thumbnails are displayed on the left.

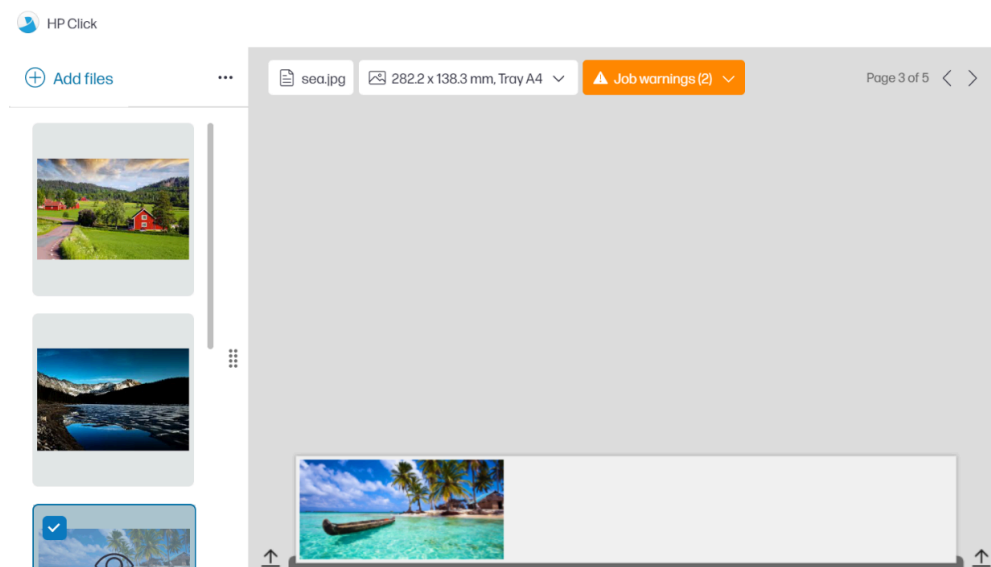

Remember that the **Print** button prints all pages (unless you have turned off printing for some of them), not just the page currently shown in the preview.

The preview reminds you if you have turned off printing for that page.


If your page is too large for the loaded paper, a yellow overlay in the preview indicates the part that will be clipped (not printed).

### Preview actions

- To zoom in, click the  icon.
- To zoom out, click the  icon.
- To rotate the page, click the  icon.
- You can also hold down the Ctrl key and use the mouse wheel to zoom.
- To go to the next page, click >.
- To go to the previous page, click <.
- To move the preview image within the preview area, click anywhere in the image and drag it. This does not affect the print.
- To remove the preview from the screen and display only the thumbnails, click  in the center of the thumbnails.
- To move the border between the preview and the thumbnails, drag  to the left or right.

## Nesting

Nesting enables you to save paper and time by printing two or more pages side by side on the paper, if the paper is wide enough.

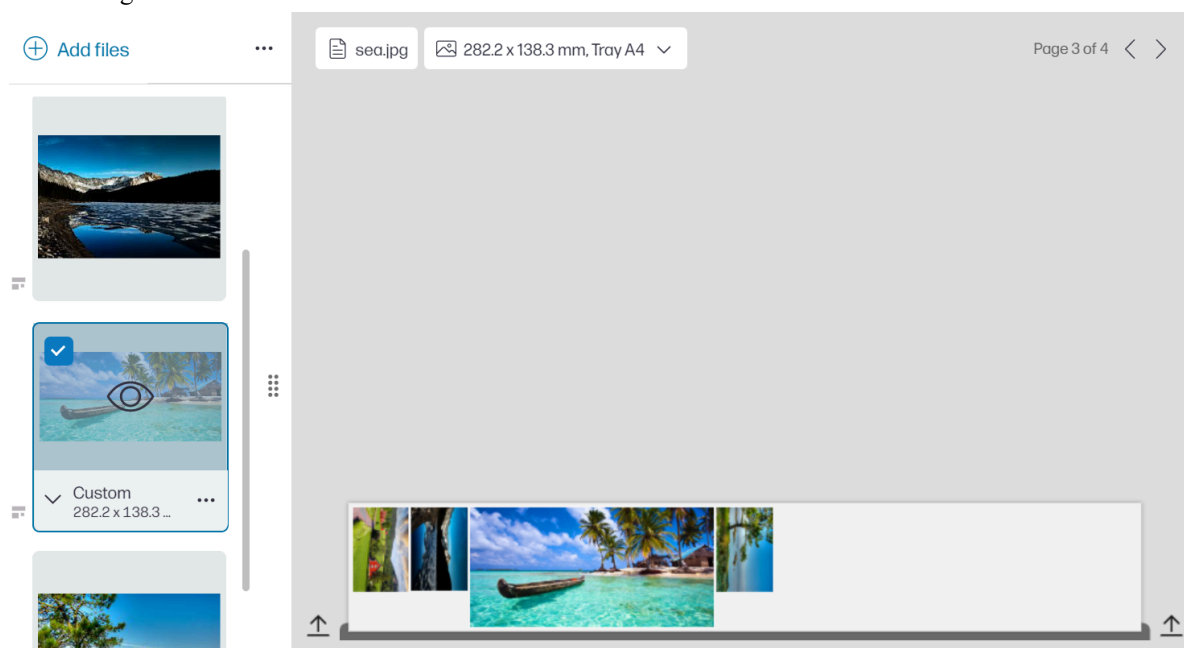

### Note:

The application may automatically change the order of the pages and/or rotate pages in order to save paper. If you want to rotate or align a page manually, make sure nesting is disabled.

You can turn nesting on and off for each printer using the icon in the settings, and you can also choose the distance between nested pages.

With nesting enabled, you can check in the preview how many pages of your document are together on an output page.

### Tip:

To apply nesting to multiple copies, add the desired pages again. Setting job copies does not affect nesting.

The pages that are nested together on the same sheet are marked with the  icon next to each thumbnail.

## Printing

When printing is possible, the **Print** button is enabled. If it is disabled, you must ensure that the printer is connected and ready for printing, or use a different printer that is ready for printing.

When you click the **Print** button, all pages loaded into the application are printed, except those pages that you have unchecked.

By default, pages are printed at the original size specified, unless you have used the resizing options.

If the printer can hold pages in a queue, all the pages are immediately sent to the printer. Otherwise, the application holds each page until the printer is ready to receive it. The progress of sending the job to the printer is indicated in the **Print** button.

You can see the jobs in the queue by selecting the **Printer job queue** link available in the **Print settings** dialog, which will open a link to the Embedded Web Server in your default browser.

The application sends the pages of a job in the order in which they appear on the screen.

### Note:

The application provides information to the user about the status of the job sent to print: Printed, Canceled, or Failed.

## Troubleshooting

To access the troubleshooting tool, enter the section **Get Help** in the menu and tap the **Support tool** button.



If you have any problem with the application, see the [Troubleshooting](#) section in the user guide.

**Support tool**

**Table 5: Troubleshooting**

| Situation                                                                                 | Suggested action                                                                                                                                                                                                                            |
|-------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| HP Click does not start, or fails while starting.                                         | Ensure that you are using a 64-bit operating system.<br>Uninstall and reinstall HP Click.                                                                                                                                                   |
| During the discovery process, a printer is not detected nor added.                        | Sometimes, depending on the topology of the network, the discovery process is unable to detect a printer. Add the printer manually by IP address or hostname.<br><br><b>Note:</b><br>Only HP printers can be connected to this application. |
| When adding a printer by hostname, HP Click says that it is “unreachable”.                | Sometimes a computer cannot resolve the hostname. Add the printer by IP address.                                                                                                                                                            |
| Adding a printer fails.                                                                   | Ensure that the printer is one of the supported printers.                                                                                                                                                                                   |
| HP Click says that a printer has an incompatible firmware version.                        | Update the printer’s firmware to the latest version.<br>HP Click needs the latest printer firmware to work correctly.                                                                                                                       |
| In the preview, the whole image is shaded yellow, indicating that it will all be clipped. | Ensure that the printer has a roll selected and that the roll is wide enough for the image.<br><br>Use the page options to reduce the size of the image so that it will fit on the roll.                                                    |
| You have deleted one or more files by mistake.                                            | Once you have deleted a file, there is no way to restore it. You will have to add each file again.                                                                                                                                          |
| The error message “Unsupported file format” appears when adding a file.                   | Check that the file is in one of the supported file formats.                                                                                                                                                                                |

| Situation                            | Suggested action                                                                                                                                                                            |
|--------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The <b>Print</b> button is disabled. | <p>Ensure that at least one thumbnail is selected to print.</p> <p>Ensure that there is a connection between the printer and the computer.</p> <p>Ensure that the printer is turned on.</p> |


If you need further help with HP Click, contact [hpclick.support@hp.com](mailto:hpclick.support@hp.com).

### Support tool

The support tool can be very useful for troubleshooting.

The following steps will help you find the support tool embedded in HP Click:

1. Click the  icon and go to the **Get help** menu.
2. Click **Support tool**.
3. Click **Get logs**.

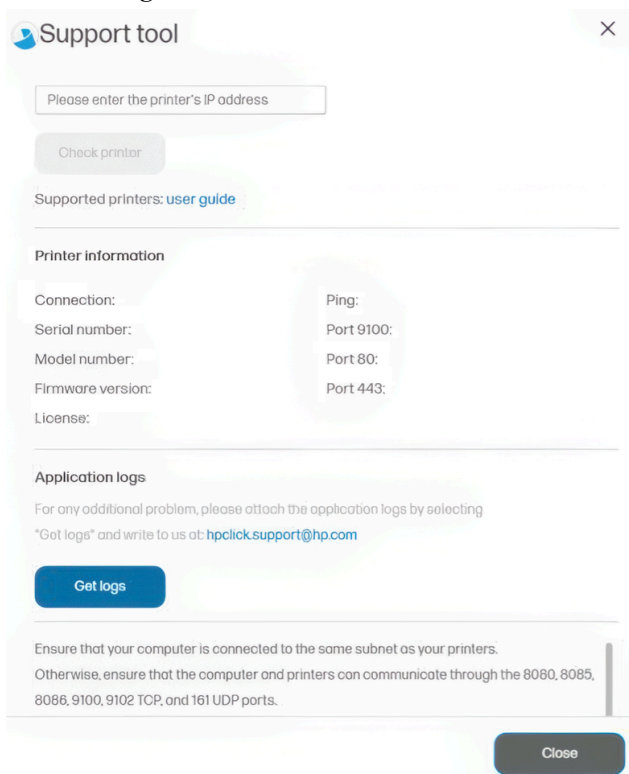

The HP Click support tool provides information about the connected ports and the firmware version of the printer. It also provides logs and the support email address.


### Enable SNMP

SNMP can be configured through the Embedded Web Server, in the Network Settings.

Ensure the following to enable SNMP:

- SNMP v1/v2 is enabled.
- It has read/write access.
- The community name is set to public.



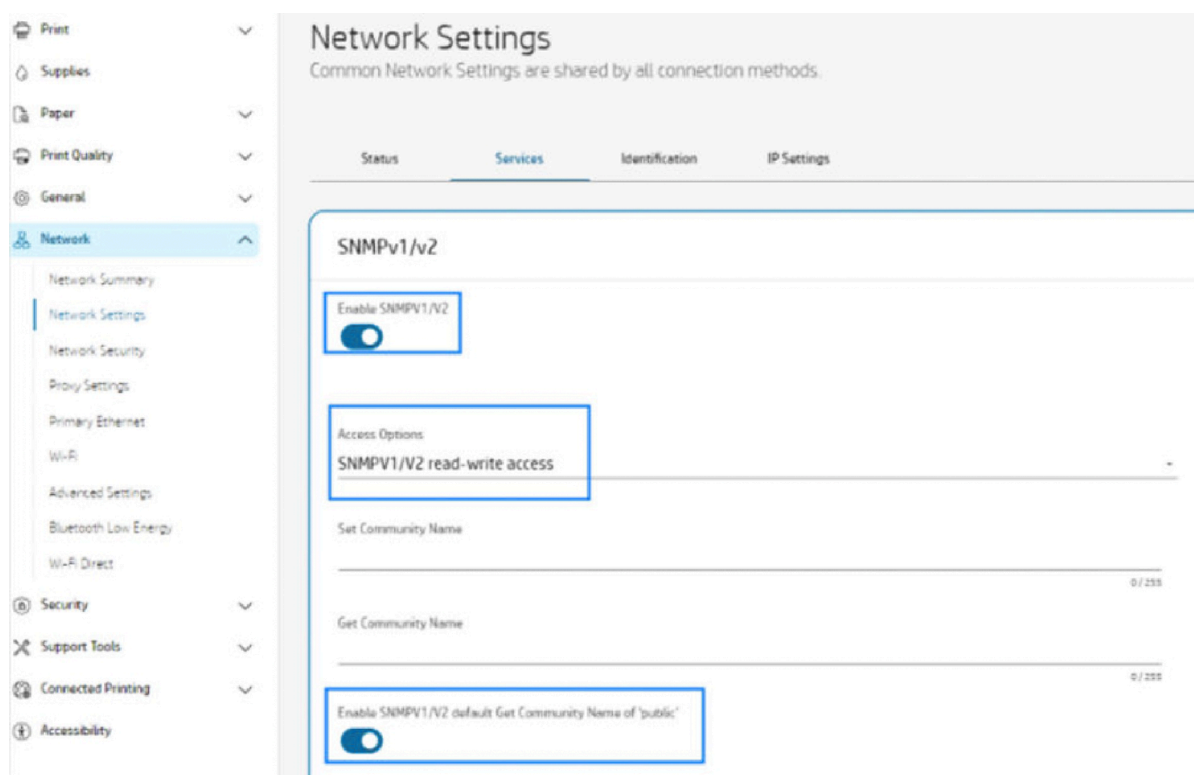

## HP SmartStream

This is the User Guide for SW Solutions HP SmartStream.

### What is it for?

HP SmartStream for HP PageWide XL printers and HP DesignJet Production printers is a professional software solution that helps to improve your productivity and operator efficiency, while expanding your color production. Now, your large-format production workflow will be twice as efficient for both monochrome and color without changing your current workflow.

**SPEED** – Do jobs in half the time

- Respond to the tightest deadlines with ultra-fast HP SmartStream Preflight Manager file analysis and processing.
- Reduce reprints—rely on native PDF management with Adobe PDF Print Engine 4.
- Stop changing settings one by one—create presets to bundle all desired settings, then reuse as needed.
- Simplify production of large jobs—visualize clusters of pages by size and content.
- Stay productive with an easy and intuitive user interface.

**EFFICIENCY** – Streamline your production workflow

- Easily distribute the HP SmartStream configuration into different workstations—presets, hot folders, printers.
- Make sure files are produced reliably with automatic detection of potential issues.
- Run HP PageWide XL and HP DesignJet production accessories—such as an online folder and high-capacity or integrated stacker—using generic accessory support.
- Operate your non-HP large-format LED printers through standard drivers.\*
- Manage all connected HP PageWide XL and HP DesignJet production printers in your fleet.

**GROWTH** – Expand with color production

- Efficiently produce all your GIS maps and point-of-sale (POS) posters on HP PageWide XL printers.
- Preview color, just as it will print, and adjust settings with interactive HP Crystal Preview Technology.

- Get the most out of your paper with nesting designed to minimize paper waste.
- Get accurate data for invoicing—the job report summary even includes pixel coverage.

Bring key efficiencies to your business by adding a powerful solution to enhance your current production workflow. Now you can turn operator efficiency into operating profit with HP SmartStream software for HP PageWide XL printers and HP DesignJet Production printers.

\* Support is provided for a limited number of brands and models. For more information, see <http://www.hp.com/go/smartstreampagewidexl> and <http://www.hp.com/go/smartstreamdesignjet>.

## Getting started

The following steps provide the complete procedure for this topic.

1. Install the software and software licenses. See the installation guide.
2. Create a job in the job preparation pane, which gives you many tools for manipulating and setting up each job before printing. To create your first job, select the printer that you want to use, and drag and drop one or more files onto the job preparation pane (or click  to browse for files). At this point, the Preflight Manager checks each file and reports any errors in the file that could affect printing. You can preview pages in the preview pane.

### Note:

The supported file formats are PDF, JPEG, TIFF, HP-GL/2, DWF, as well as SMJ and ZIP files containing files in any of the preceding formats.

3. Send your job to the printing queue (using the **Print job** button), where you can monitor its progress.

### Tip:

If you are printing to an HP DesignJet printer, do not close the application or shut down the computer until your job has printed.

4. Conveniently reprint past jobs from the application's history tab.

### Note:


Whenever a new version of the application becomes available, it will notify you, and it can update itself if you give permission.

## Introduction

The following sections provide details for this topic.

### What do I see on the screen?

The following sections provide details for this topic.

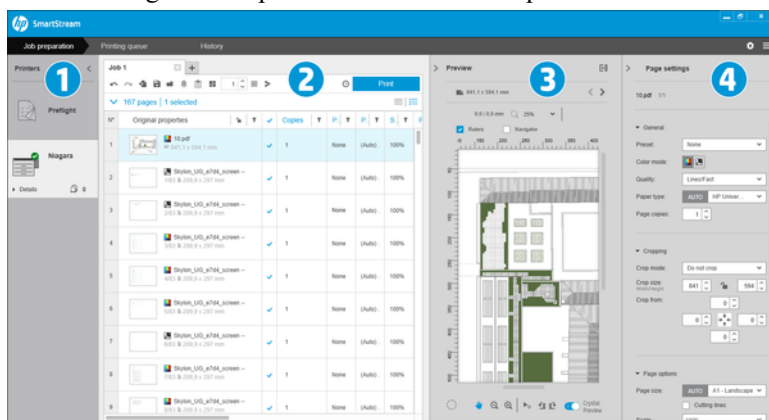

HP SmartStream provides three tabs, only one of which is visible at a time:

- The job preparation tab, in which you prepare each job. This contains:
  1. The printers pane, showing the printers available to the application and their status

You can select here the Preflight desk instead of a printer, if you want to prepare jobs without assigning them to a specific printer.

2. The job preparation pane, showing the pages of the job
3. The preview pane, showing a preview of the selected page
4. The settings pane, which lists the print settings for the selected page

The printers pane, preview pane, and settings pane can be minimized.

- The printing queue tab, in which you can monitor the progress of each job
  - The printers pane
  - The printing queue pane, showing the jobs in the printing queue and their status
  - The preview pane
- The history tab, from which you can reprint any past job
  - The printers pane
  - The history pane, showing the old jobs in the history


### How can I adjust the HP SmartStream window?

The widths of each area can be changed according to your requirements.

- The printers pane (with Preflight desk) is minimized by default, but can be widened by clicking the active printer.
- The preview pane can be minimized by clicking > or the **PREVIEW** title, or widened by dragging the left pane border to the left, or maximized by clicking  in the top right corner of the pane.
- The settings pane is minimized by default, but can be widened by clicking < and then minimized again by clicking >.
- The job preparation pane includes a horizontal scroll bar if necessary, so that all columns can be accessed.

You can change the order of the columns by dragging the column headings.

You can show or hide columns by right-clicking anywhere in the column heading row, and then checking or unchecking column names in the menu.

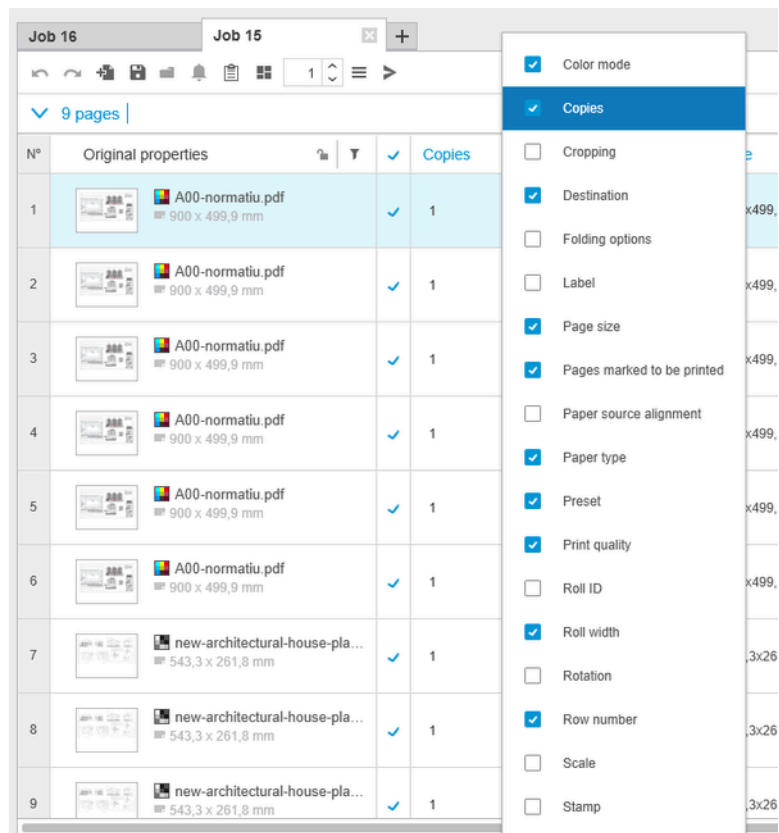

You can freeze the first column by clicking  in the column heading.


## Notifications

This topic provides a full set of reference information for this subject.

A notification is displayed briefly on the screen when certain events occur, such as:

- A job moves from the job preparation pane to the printing queue.
- A job moves from the printing queue to the history (when it has been printed).
- A stacker or folder has been installed or uninstalled.

The notification normally fades in, remains for 5 seconds, and then fades out. You can stop it from fading by hovering over it, or see it again by hovering over the notification icon in the icon tray (if you have enabled it).

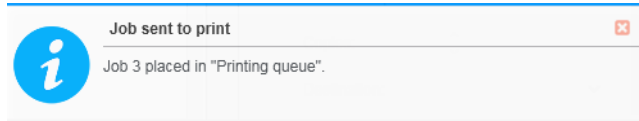

## Recommended ways to set up the software

HP SmartStream can be set up in a variety of ways, the most common of which are described below.

### *End-to-end printing workflow*

The end-to-end workflow is a basic flow designed around the needs of a single operator managing the end-to-end flow of a job from job reception to preparation/preflight to printing and perhaps finishing.

For example, only one operator is in charge of printing, or possibly one operator per printer. In this case, this operator has full control over the printing workflows and the printing queue using HP SmartStream.

In other cases, with multiple operators, each of them may be responsible for a single job end to end; that is, from the reception of the job to its delivery.

An individual installation of HP SmartStream can perform all the required steps of an end-to-end printing workflow, allowing an operator to prepare jobs and print to one or more printers.

Files can be added to the application from local or removable drives, local network, or remote locations, as long as they are accessible by the operating system's file explorer.

### *Distributed workflows*

In a typical enterprise environment with this setup in place, the HP SmartStream solution allows users (such as architects or engineers) to send jobs to the CRD (Central Reprographics Department), so that the central print operator can print them.

This is not intended to replace using any printer present in the users' own department to print samples or a limited number of pages on their own. Rather, it is intended for jobs with many pages or high urgency, when professional print operators should take care of the printing and finishing.

In order to streamline the job submission and subsequent processing by the print operator, the installation of HP SmartStream in the CRD should have one or more hot folders configured that point to a folder that any user in the enterprise can access. See [Hot folders](#) on page 75.

Likewise, each user's installation of the HP SmartStream Submission Driver should point to a hot folder that is connected to the CRD's HP SmartStream software.

## 1. Job submission from the user's computer

Users can:

- Send a print-ready file from their specialized application (such as CAD software) by selecting the HP SmartStream Submission Driver from the application's print menu. See [Submission driver](#) on page 122.
- Select their desired color mode, paper type, page settings, number of copies, and finishing options. See [Job preparation](#) on page 77.
- Assign the project and/or department ID to the job for tracking and/or accounting purposes. See [Accounting](#) on page 119.

- Add any further instructions as a comment. See [Accounting](#) on page 119.
- Submit the file to the CRD with the job ticket information.

## 2. Job reception and printing in the CRD

The print operator can:

- Act on a notification that a new job has arrived in a hot folder, by opening it in the preparation pane. See [Job preparation](#) on page 77.
- Check the instructions in the job ticket by opening the detailed job summary. See [Accounting](#) on page 119.
- Make sure that a suitable roll is loaded in the printer, and that the finisher is ready.
- Change the page settings according to instructions, where they have not been applied automatically when the job was added from the hot folder.
- Ensure that any issues detected (such as content in the printer margins) are tolerable, by consulting the Resolution Center. See [Resolution Center](#) on page 79.
- Print the job and prepare the printout for delivery or pickup. See [Printing](#) on page 106.

### Note:


Configuring a hot folder for auto-print allows unattended processing and printing of incoming jobs. See [Hot folders](#) on page 75.

## Printers

The following sections provide details for this topic.

### Preflight desk

There is a **Preflight** entry in the list of printers, with which you can use the Preflight Manager to check your files without printing them. It has only the settings that are appropriate without a printer, and has no printing queue or history.

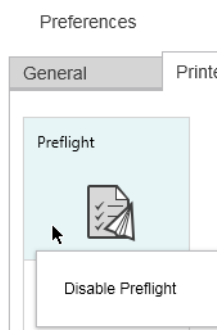

The Preflight desk can be disabled from the printer preferences by right-clicking the icon and selecting **Disable Preflight desk**. Subsequently, the Preflight desk will no longer appear in the printers pane, but it cannot be deleted, and can be re-enabled from the printer preferences.

### Add a printer

The following steps provide the complete procedure for this topic.

1. Before you can add any printers, the software must be licensed. See the installation guide.
2. Ensure that the printer you want to add is turned on, awake, and accessible from your computer.
3. Click  near the top right of the window.
4. Click the **Printers** tab.

Preferences

General Printers Presets Hot folders

Preflight

HP PageWide XL...

Add

General

Printer name: HP PageWide XL 5000P

IP address / hostname: 192.168.178.11

Collect accounting data at page level: ☐

Default job settings

Paper type: Auto

Color mode: Auto

Quality: Lines/Fast

Folding options:

Disable cutter: ☐

Job separator: ☐

Cancel Save

##### 5. Click the **Add Printer** button.

Printer installation

Printer name: My printer  
(Max. 40 characters)

IP address / hostname: 192.168.178.11 →

[Add non-HP large-format printer](#)

Close

6. You can give the printer a name (this is optional) and enter its IP address or hostname (this is required), then click **Continue**. If you assign a name, you can choose any name you like; it will be used only in the printers pane. If you do not know the printer's IP address, the printer's own documentation will tell you how to find it. It is normally available from the Connectivity menu in the printer's control panel.

##### **Note:**

You can change the IP address or hostname later in the printer preferences.

##### **Note:**

Only supported printers are detected (see the installation guide), and only licensed printers can be added to the application; any attempt to add an unlicensed printer will fail, unless you have a trial version of the software (see the installation guide).

7. The application downloads a set of color profiles for the new printer.

The name you have given the new printer should now appear in the printers pane.

You can add more printers, in which case their names all appear in the printers pane.

### **Change a printer's IP address or hostname**

If the IP address of a printer changes, it is removed from HP SmartStream.

To add it again with the new IP address see [Add a printer](#) on page 65.


When you add it with the new IP address, HP SmartStream detects that it is the same printer with a new IP address, and asks whether you would like to merge the two printers.

- Click **Merge** to merge the two printers: the new printer keeps the history of the old printer.
- Click **Duplicate** not to merge the printers: the new printer's history starts off empty.

## Delete a printer

The following steps provide the complete procedure for this topic.

1. Click  near the top right of the window.
2. Click **Preferences** in the drop-down menu
3. Right-click the printer that you want to remove, and click **Delete printer** in the popup window.

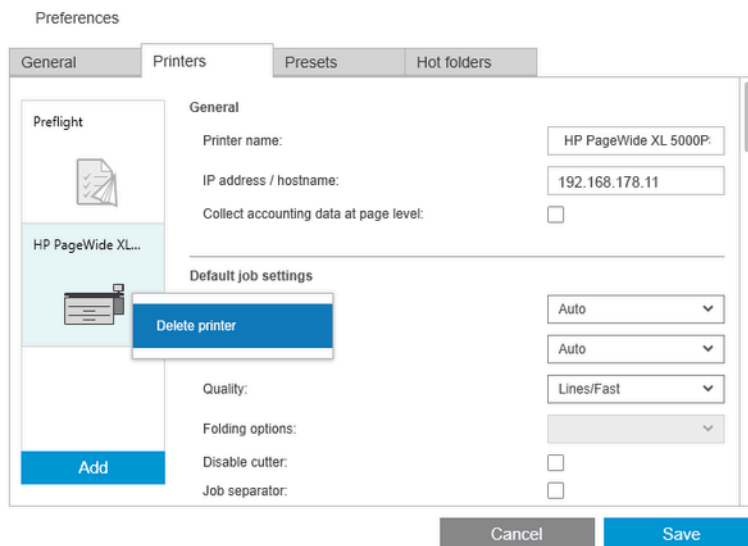


4. Another window warns you of the implications of removing the printer, and offers you the chance to **Cancel** or **Delete printer**.

## Printers pane

The printers pane is at the far left of the window. By default, it shows only the names of the printers that you have added.

Click a printer name to select the active printer; the rest of the window always shows the jobs for the active printer, in any of the three tabs.

The active printer is shown with a lighter background color than the others.

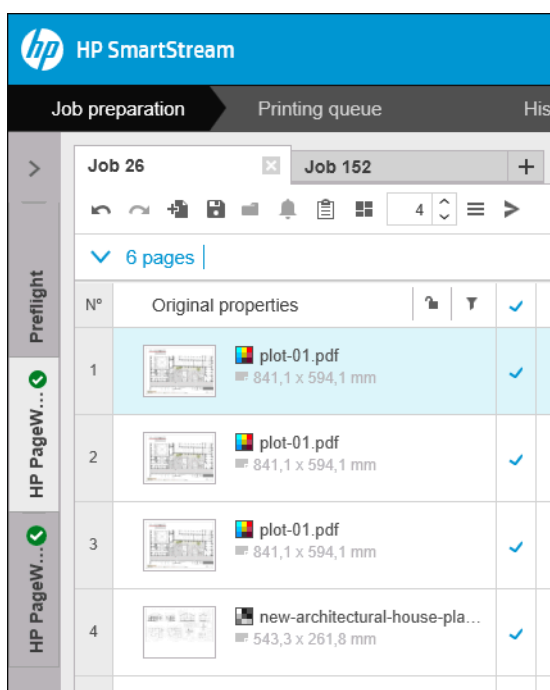


To widen the pane and see more information about each printer, click the active printer or double-click an inactive printer (which also activates it). You can now see up-to-date status information on the printer and its accessories.

**Note:**

There may be a short delay while the application retrieves the status information from the printer.



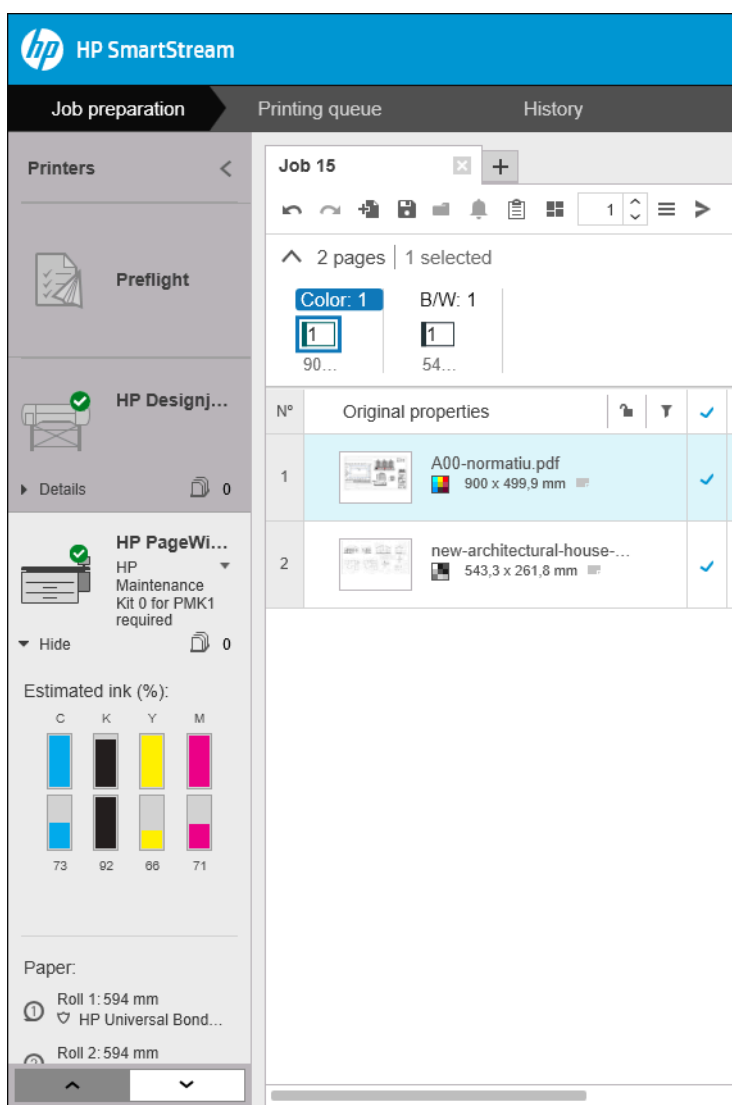


To return to the default narrow pane, click the  icon in the top right corner.

To see more details about the active printer, click **Details**.

When fully expanded, the printers pane contains the following items:

**Table 6: Printers pane**
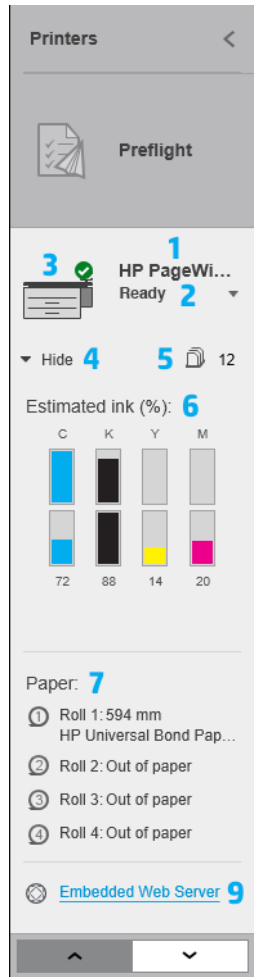
| Pane                                                                               | Items                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <ol style="list-style-type: none"><li>1. The name of the printer</li><li>2. The overall status of the printer</li><li>3. A picture of the printer</li><li>4. An expander button to increase or decrease the number of details shown</li><li>5. The total number of pages in the queue for this printer.</li><li>6. The ink level in each ink cartridge</li><li>7. The dimensions and type of paper loaded on each roll, and a warning or error message if necessary</li><li>8. The status of the folder and stacker, if any</li><li>9. A link that opens the printer's Embedded Web Server</li></ol> |

The collapsed printers pane (before clicking **Details**) contains only items 1 to 4 above.

If the pane is too small to show all of the printers, you can move up and down the list by clicking the  and  buttons at the bottom of the pane.

**Accessory status**

This topic explains the concepts involved in this subject.

If a printer has a folder installed, its status may be described in the following ways. However, the status values depend on the folder you are using: for more detail, check the documentation provided with the folder.

Folder status

- **Initializing:** The folder is initializing and will be ready soon.
- **Ready:** The folder is ready or folding.
- **Full:** The folder is full, and you must remove the folded paper in order to continue printing.
- **Jam:** The folder is jammed, and you must clear the jam in order to continue printing.
- **Open:** A folder door is open, and you must close the door in order to continue printing.
- **Detached:** The folder is detached from the printer, and you must attach it in order to continue printing.
- **Disabled:** The folder is disabled, and you must enable it in order to continue printing.

- **Communication error:** The printer cannot communicate with the folder; there are various possible reasons (door open, folder turned off, communication cable disconnected).
- **Internal error:** The folder is not working correctly; there are various possible reasons (door open, folder jammed or offline). An error code is displayed on the control panel; check the service documentation for an explanation of it.

If a printer has a stacker installed, its status may be described in the following ways. However, the status values depend on the stacker you are using; for more details, check the documentation provided with the stacker.

#### Stacker status

- **Initializing:** The stacker is initializing and start warming up soon.
- **Warming up:** The stacker is warming up and will be ready soon.
- **Ready:** The stacker is ready or stacking.
- **M:** The printer is in manual mode: the stacker door is open.
- **Full:** The stacker is full, and you must remove the stacked paper in order to continue printing.
- **Busy:** The stacker is being cleaned, and you must wait for the cleaning procedure to finish.
- **Upgrading firmware:** The stacker firmware is being updated, and you must wait for the updating procedure to finish.
- **Jam:** The stacker is jammed, and you must clear the jam in order to continue printing.
- **Open:** The stacker door is open, and you must close it in order to continue printing.
- **Detached:** The stacker is detached from the printer, and you must attach it in order to continue printing.
- **Disabled:** The stacker is disabled, and printing will continue without using the stacker.
- **Communication error:** The printer cannot communicate with the stacker; the stacker may be turned off or disconnected from the printer.
- **Internal error:** The stacker is not working correctly for some unknown reason. An error code is displayed on the control panel; follow the instructions there.


## Set preferences

The preferences dialog allows you to configure HP SmartStream.

### General preferences

The general preferences apply to all printers in the printers pane.

To set your preferences, click the  icon near the top right of the window.

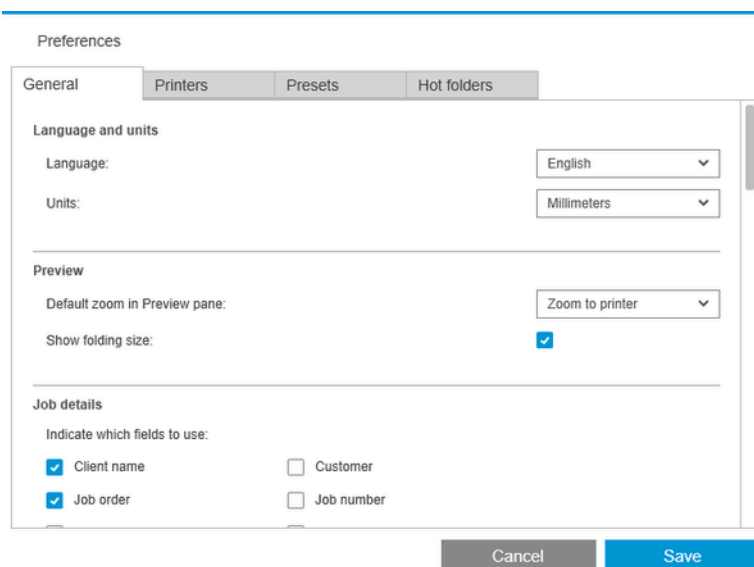

The screenshot shows the 'Preferences' dialog box with the 'General' tab selected. The dialog has four tabs: 'General', 'Printers', 'Presets', and 'Hot folders'. The 'General' tab contains the following settings:

- Language and units:**
  - Language: English (dropdown menu)
  - Units: Millimeters (dropdown menu)
- Preview:**
  - Default zoom in Preview pane: Zoom to printer (dropdown menu)
  - Show folding size: ☒
- Job details:**
  - Indicate which fields to use:
 

|                                                 |                                     |
|-------------------------------------------------|-------------------------------------|
| <input checked="" type="checkbox"/> Client name | <input type="checkbox"/> Customer   |
| <input checked="" type="checkbox"/> Job order   | <input type="checkbox"/> Job number |

At the bottom of the dialog are 'Cancel' and 'Save' buttons.

You can set:

- **Language and units:** The language of the text and the units of measurement displayed by the application
- **Preview**
  - **Default zoom in Preview pane:** The default zoom option used in the print preview
  - **Show folding size:** Whether to display the folding size in the preview
- **History:** How long jobs should be retained in the history
- **Page size:** Which standard page sizes should be displayed in lists of page sizes, and whether page sizes should be mapped to the nearest standard size
- **Save options:** Whether to embed the documents when saving jobs, increasing the job file size
- **Resolution Center:** Whether the Preflight Manager should omit warnings of specific kinds
- **Checks before printing:** Whether the Preflight Manager should perform the normal checks before printing
- **Batch rename save folder:** The folder in which renamed pages are saved.

## Accounting preferences

This topic provides a full set of reference information for this subject.


You can set:

- **Job details:** Choose which fields should be used in the job details, and manage account IDs.
  - If you check the box **Check whether Accounting fields are filled**, HP SmartStream will require all fields of the job summary to be filled in before sending the job to print.
  - The **Export** button creates a CSV file containing the account IDs known to HP SmartStream.
- **Currency:** Choose the currency to be used in job details and cost calculations. You can start to enter the name of the currency manually, in which case non-matching currencies are removed from the list.

## Printer-specific preferences


There are a number of preferences that you can set separately for each printer.

Click the  icon near the top right of the window, then select the **Printers** tab in the Preferences window. On the left side of the **Printers** tab, you can see a list of your printers: click the printer whose preferences you would like to set.

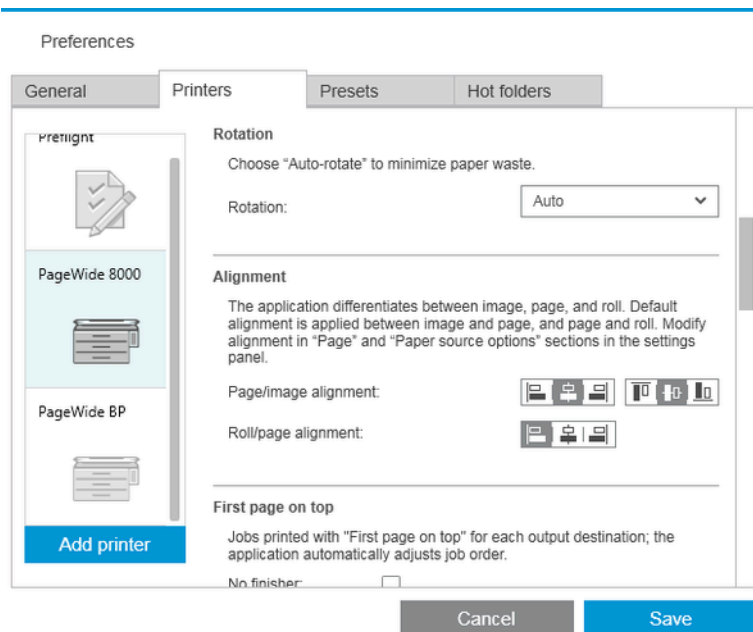

You may be able to set the following preferences, although the list of preferences can vary, depending on your printer and its accessories:

- **Printer name:** Your chosen name for this particular printer in this application.
- **IP address / hostname:** The printer's IP address or hostname.
- **Collect accounting data at page level:** Whether to gather page accounting data from the printer (HP PageWide XL printers only). See [Accounting](#) on page 119.
- **Paper type:** Choose the default paper type.
- **Color mode:** Choose the default color mode.
- **Quality:** Choose the default print quality.
- **Folding options:** Choose the default folding style.
- **Disable cutter:** Whether to disable the automatic cutter.
- **Job separator:** Whether to print a job separator page after the last page of each job. See [Job separators \(HP PageWide XL only\)](#) on page 107.
- **Job separator roll ID:** A roll number, or **Any**.
- **Non-HP accessory name:** Assign a name of your choice to a non-HP accessory connected to the printer.
- **Preflight Manager analysis:** By default, a thumbnail of each page in a job is generated, and displayed in the left column of the job preparation pane. You can choose a partial analysis to increase the speed of the Preflight Manager, by unchecking the **Always generate thumbnails** box here; in which case, a placeholder image is displayed in place of each thumbnail. However, by turning off thumbnails you also disable some features of HP SmartStream, such as identifying the color mode of your original documents, clipping detection, fast page preview, and automatic removal of white areas.

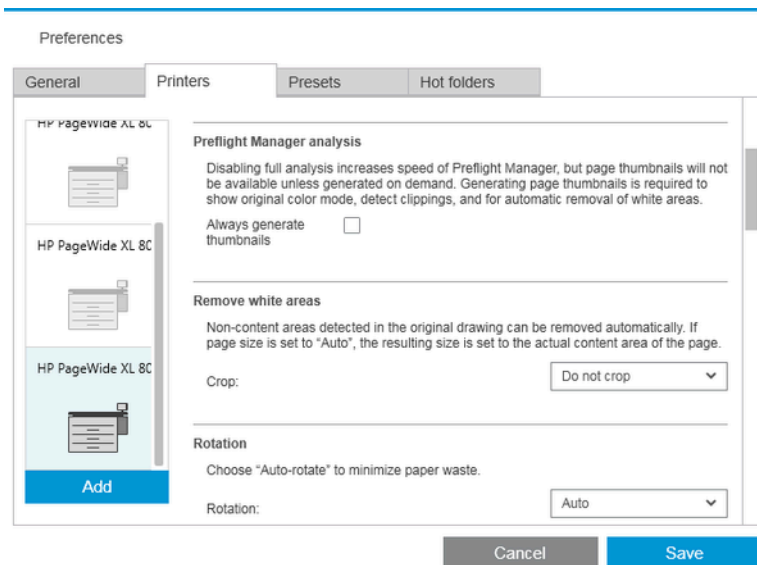

If thumbnail generation has been turned off, you can use the  icon in the job header to generate thumbnails for all pages in the current job at any point.

- **Remove white areas:** If you choose **Remove white areas** or **Smart crop**, your pages are automatically cropped to remove white areas at the edges. You can also choose **Custom crop**. See [Cropping](#) on page 97.
- **Rotation:** Choose the page rotation to be applied by default (**Original**, **Auto**, **Landscape**, or **Portrait**).
- **Alignment**
  - **Page/image alignment:** Choose how the image is aligned with respect to the page.
  - **Roll/page alignment:** Choose how the page is aligned with respect to the roll.
- **First page on top:** You can request printing with the first page on top (the reverse of the default order) when using the stacker, when using the folder, and when using neither.
- **Content in printer margin:** The printer margins are normally 5 mm, but in some circumstances you may be able to choose a printer margin of 3 mm, depending on the printer, the printer firmware, and the paper type.
  - You can choose whether the printer should try to detect content in the printer margins (never, moderate analysis, or extensive analysis).

**Note:**


Moderate analysis may not detect all clipping; extensive analysis detects all clipping but may sometimes detect clipping when there is none (a false positive).

- If content is detected in the printer margin, the application can try to fix the problem automatically by adjusting the paper source margins.
- When adding margins, you can choose between the minimum distance needed to avoid clipping and the whole width of the printer margin.
- **Paper and ink alerts:** Whether to minimize paper and ink alerts.
- **Roll switching options:** If you choose **Non-stop printing** (see [Job options](#) on page 83), the application will try to carry on printing even if a roll runs out of paper while printing and there is no roll of the same roll width loaded. In this case, it will look for a roll of the same paper type with a wider roll. The narrowest suitable roll is selected. If there are multiple narrowest suitable rolls, the application can choose between them according to one of the following rules:
  - **Minimize roll switches**
  - **Use roll with less paper**
- **Color options:** You can select **Relative colorimetric**, the default setting, or **Perceptual**, which emulates the output of a PostScript driver. See [Color management](#) on page 110.
- **Nesting:** see [Nesting](#) on page 88.

## Presets

A preset is a group of settings saved together under a single name.

You can create, modify, or delete presets in the **Presets** tab.

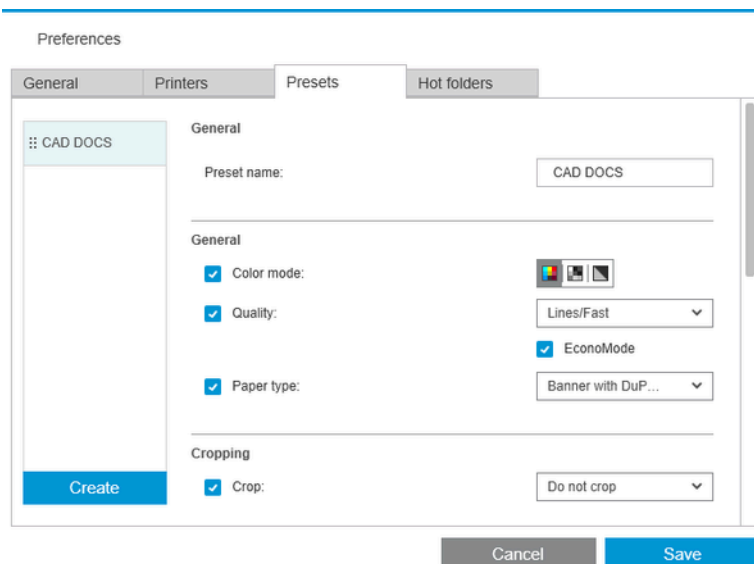

On the left, you can select from a list of presets that you have created. They are displayed in the same order in the preset drop-down menu in the job preparation pane. You can delete a preset by right-clicking its name in this list.


On the right, you can see the settings of the selected preset. A setting is part of the preset only if the box to the left of the setting is checked.

You can use the Preset column in the job preparation pane to apply a preset to one or more pages, or to a whole job.

## Hot folders

This tab enables you to define hot folders for incoming and outgoing files. Once defined, the hot folder allows you to import files into (or export files from) the application in an easy way.

See [Using a multifunction printer that includes a scanner](#) on page 114.

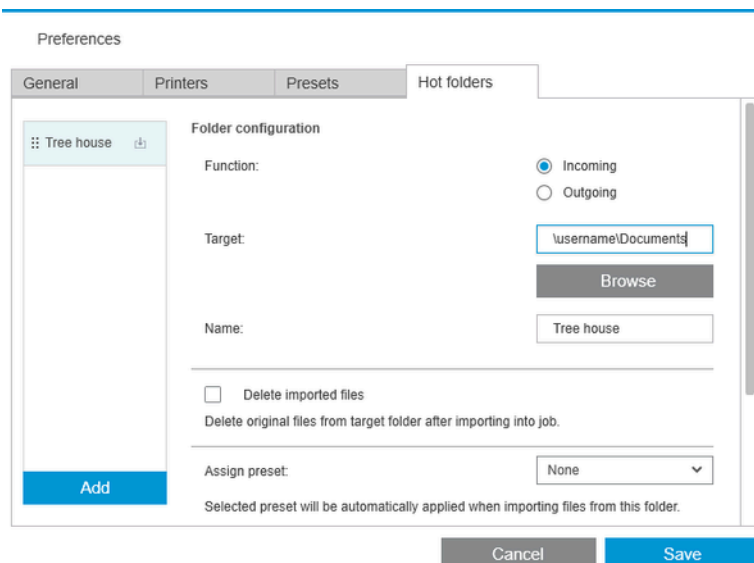

You can set:

- **Function:** Whether this particular hot folder is for incoming or outgoing files

- **Target:** The folder in your computer or network that will contain the hot folder
- **Name:** The name of the hot folder
- **Delete imported files:** Whether the imported documents should be deleted after importing them

**Note:**


If you delete the imported files, you are recommended to attach the files when saving the job, otherwise the application will not be able to find the files when you reopen the job. See **Save options** in [General preferences](#) on page 71.

- **Assign preset:** An optional preset that may be applied automatically when files are added to or dragged from this folder.


**Note:**

You must create the preset in advance in order to select its name here.

- **Printer to autoprint:** A printer that will automatically print any files added to this hot folder. If you select **None**, the files in the hot folder will not be automatically printed. You can specify here the number of copies to be printed.

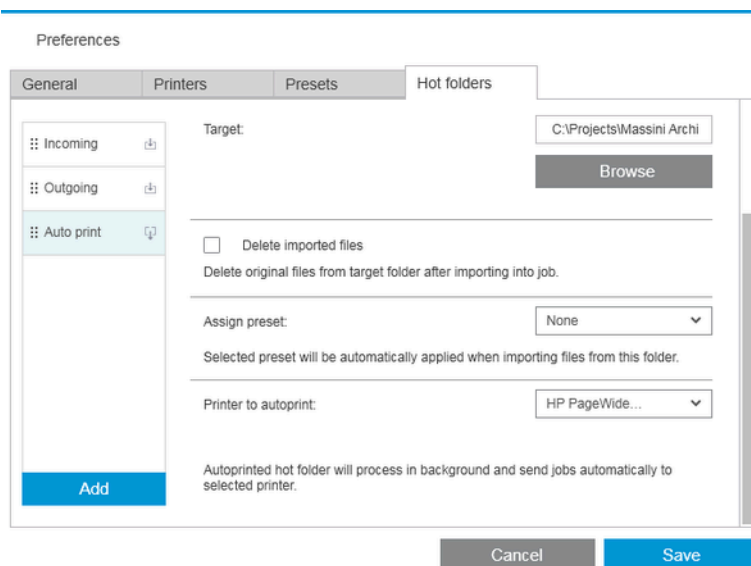

If the printer has any problem, automatic printing is suspended until the printer is ready again, and a warning is added to the hot folder icon in the job preparation pane.

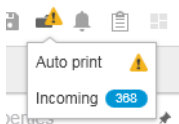

Log files for autoprint operations can be found in the **My Documents\HP SmartStream\Auto-print Logs** folder. A log file contains information about the success or failure of the autoprint operation. Any document added to the hot folder that cannot be processed correctly by the application will be copied to a subfolder of the logs folder.


**Note:**

Documents added to a hot folder with autoprint enabled will print as they are to the most suitable roll available in the assigned printer. If the printer has no roll wide enough for the document, the print of that document will be clipped.



## Job preparation

You can create and edit jobs in the job preparation pane.

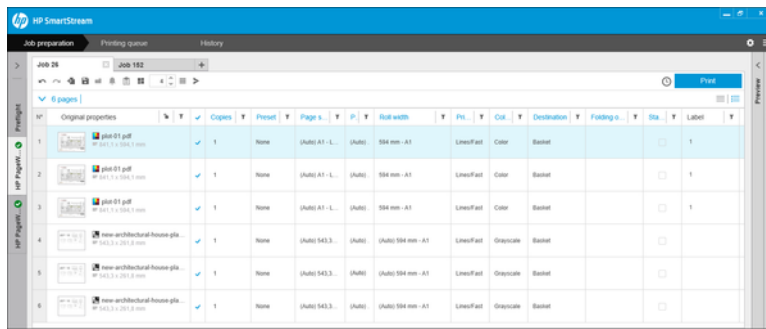

HP SmartStream allows you to work in two different ways:

- You can select a specific printer and prepare a job for that printer.
- You can select the Preflight desk in order to prepare a job without specifying a specific printer. This allows you to check page size and alignment. The job can be assigned to a printer later, by clicking ► or by dragging the job to a printer in the printers pane.

### The job preparation process

The following steps provide the complete procedure for this topic.

1. Select the printer that you want to use to print your job, or select the Preflight desk.
2. Create a new job by clicking  at the top left of the job preparation pane, or by dragging files or folders directly onto an empty job preparation pane.

#### Note:

Whenever you add a new printer, an empty job is created automatically.

3. To add files or folders to a job, you can click , or drag and drop the files or folders onto the job preparation pane.

See also [Tracking files added to the job](#) on page 126.

#### Note:

You can drag and drop files directly from Microsoft Outlook to HP SmartStream.

4. A Preflight Manager window is displayed while the application is checking each file for problems. This window disappears when the job is ready. See [File error detection](#) on page 78.

If problems are found that prevent files from being added, a report window appears with a summary of the problems. This window remains open until you click **Later**. More details can be seen in the Resolution Center. See [Resolution Center](#) on page 79.

If problems are found that do not prevent files from being added, the Preflight Manager does not produce a report, but the details can be seen in the Resolution Center.

5. After checking the files, the application automatically suggests the paper type (unless the preferences indicate to use one specific paper type), the page size, the rotation of the page on the roll, and the roll width. See [Automatic attribute detection and setting assignment](#) on page 80.
6. You can review and modify the settings using the job preparation pane and/or the settings pane. See [Edit a job](#) on page 81.

You can also sort and/or filter the content of the grid. See [Sort pages](#) on page 93 and [Filter pages](#) on page 92.

See [Accounting](#) on page 119 for information about clusters and the job details icon.

#### Tip:

Changing the view from standard  to compact  turns off the display of thumbnails and thus allows you to see more rows on the screen.

7. Use the print preview to see how a page will look when printed, how it will be positioned on the roll, and whether your image will be clipped with your present settings. See [Print preview](#) on page 101.
8. When you are ready to print, click the **Print job** button. See [Printing](#) on page 106.

If you decide to print the job on a printer different from the one you originally selected, you can drag the job tab to another printer tab.

## HP SmartStream Preflight Manager

The Preflight Manager analyzes each file to check for errors, issue warnings, and propose various page settings automatically.


### Note:

You can choose to perform only a limited Preflight Manager analysis. See **Preflight Manager analysis** in the [Printer-specific preferences](#) on page 72.

### File error detection

When files are added to a job, the Preflight Manager checks them for possible errors. If an error means that a page cannot be printed, it is not added to the job preparation pane and is not included in the job.

All supported file types are checked. The Adobe Libraries are used for fast and accurate checking of PDF files.

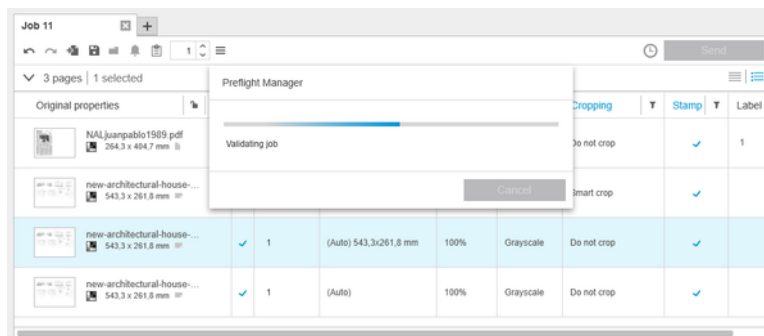

### Errors that prevent adding files

In these cases, the file is not added to the job.

- The file format is not supported by HP SmartStream.
- The file is corrupted.
- A certificate is needed to open the file.
- You do not have enough free memory or enough free hard disk space to process the file.

The author of a PDF file can specify an Open password that you must provide to open the file, and/or a Permissions password that you must provide to print the file. If you try to add a password-protected PDF file to a job, an Action Required window is displayed, in which you can enter the required password(s). If you cannot provide a required password, the file is not added to the job.

A PDF file with a Permissions password but no Open password is treated as being in error, and is not added to the job.

### Errors that do not prevent adding files

In these cases, an explanation is added to the resolution center for your information, but the page is added to the job and can be printed, unless you decide to exclude it.

- The page and/or image will be clipped. You can ask the application to try to fix this problem automatically, or you can fix it manually after viewing the preview to see what will be clipped and where.

### Note:

You can choose not to be notified about clipping that occurs within the printer margins. See [Printer-specific preferences](#) on page 72.

- Some layers are not printable. You can check what will be printed in the preview.
- Some layers are not visible, but can be printed. You can check what will be printed in the preview.
- The following errors are found only in PDF files:
  - Fonts are missing. The application can automatically substitute other fonts for the missing fonts. Alternatively, you may be able to recreate the PDF file with the correct fonts embedded in it.
  - There are references to external items, which will not be printed. If you want to print these items, they must be embedded in the file.
  - The file contains one or more embedded PostScript objects that will not be printed.

When a page has an error, its thumbnail is outlined in yellow. When it is selected, its background color changes to blue.


## Resolution Center

The toolbar contains a Resolution Center  icon. If a job contains no issues (everything is fine), this icon is disabled.

If there are any issues with the job, you can click the button to see them. In addition, a warning icon  is displayed over the page thumbnail. You can double-click the warning icon to open the Resolution Center at the page showing the issue.

The issues may consist of the following types:

- Information: These give you information but require no action.
- Warnings: These warn you of a possible problem that may require action. The action is explained.

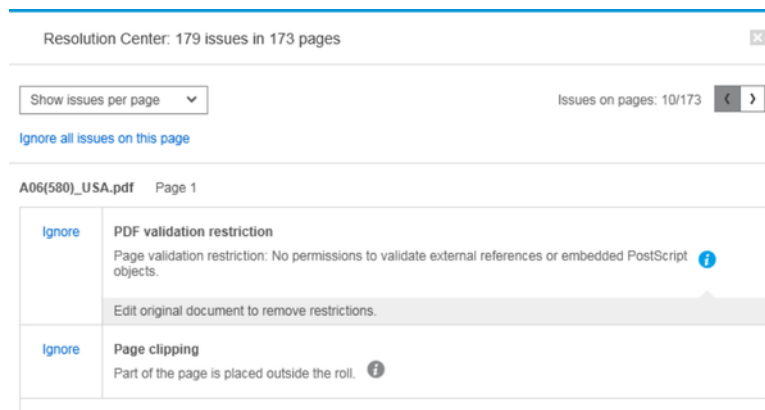

- Actions: These explain a situation and offer you options for responding to it.

In the resolution center, you can choose to see all the issues on a page, or you can choose a specific type of issue and browse through the pages that have that issue.

Issues are shown per page, and you can navigate from page to page by using the buttons at the top right.

You can choose to ignore specific issues, or use the General preferences to ignore all issues of a specific kind, or not to perform checks before printing. See [General preferences](#) on page 71.

### Tip:

#### If I get a warning that the image will be clipped, what can I do about it?

You can click the **Solve all** button, in which case HP SmartStream will try to solve the problem automatically.

Alternatively, you can use the preview to see exactly what the problem is, and solve it manually. For more details, see [Print preview](#) on page 101.

## Automatic attribute detection and setting assignment

This topic explains the concepts involved in this subject.

The following attributes are detected automatically for each page that is added to a job:

- The document name and the number of pages that it contains
- The original image size of the page
- Whether the page is in color or grayscale

The following settings are automatically assigned for each page:

- The page size
- The page rotation, if any

### Note:

In the paper source options, you can turn automatic rotation on or off by means of a check box. See [Paper source options](#) on page 99.

- The paper type, which is limited to the paper types currently loaded in the printer

### Note:

In the Preferences window, you can choose to use a specific default paper type when adding pages, instead of using the paper type proposed by the application. See [Printer-specific preferences](#) on page 72.

- The roll width, which depends on the page size
- The roll ID, which may depend on the roll width

### Note:

The roll ID is assigned automatically only if you have set it to **Any** in the paper source options. See [Paper source options](#) on page 99.

### Note:

Your printer may enable you to set a roll to *protected* status. In this case, the roll ID is not available for automatic assignment; you can print on that roll only by requesting it explicitly.


You can modify these proposed settings. If you have changed a setting and want to restore the automatic value, click the **AUTO** button.

## Job overview

The following sections provide details for this topic.

### Visual job overview


The Preflight Manager generates a visual overview of each job, known as a cluster, which can be displayed near the top of the job preparation pane. It divides the pages of the job into categories, first dividing them into color or monochrome pages, and then dividing them by page size; showing a count of the pages in each category.

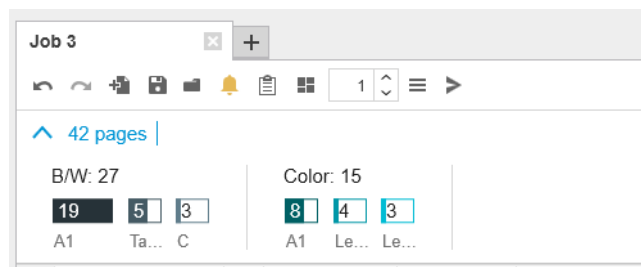

Page clusters are a new feature that helps you to simplify the production of large jobs by giving you a fast and clear understanding of the job composition from the beginning, knowing the number of pages that each job has for each size and page content. In addition, you can easily select all pages in one or more categories by clicking those categories. In this way you can apply and modify settings at a category level.

The total page count is always displayed; you can open or close the display of categories.

If a filter is in operation, the pages hidden from the job preparation pane are also excluded from the cluster.

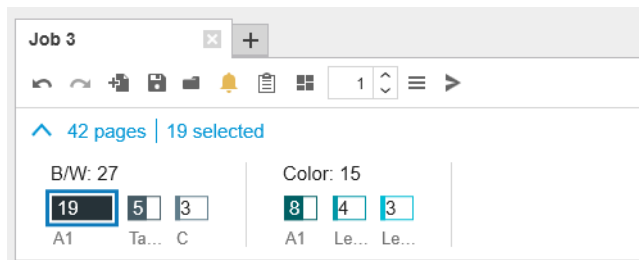


### Job details

The  icon in the toolbar displays information about the job that may be used for accounting purposes. See [Accounting](#) on page 119.

The icon appears in the job preparation pane and in the history pane.

### Edit a job

The following sections provide details for this topic.

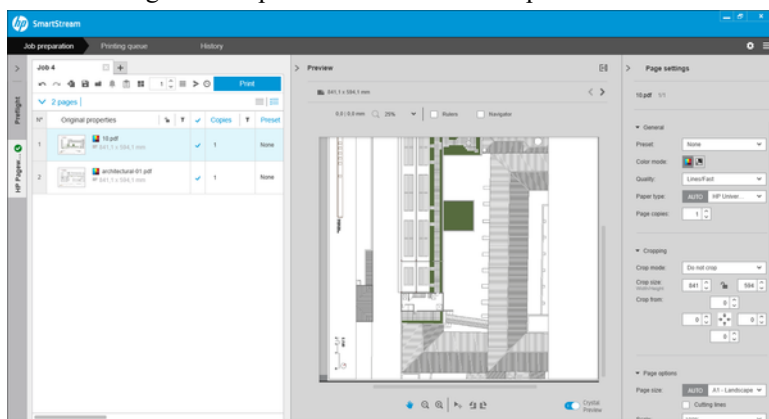

You can edit a job in various ways to print the pages that you want, in the order that you want, and with the print settings that you want.

- By selecting one or more pages and changing the print settings

You can change print settings in the job preparation pane or in the settings pane; the effect is the same. The difference is that the display of settings in the job preparation pane can be customized: you can change the order of the columns and remove columns that you don't normally use. The settings pane displays all available settings in a fixed order: it cannot be customized.

To display a list of all the possible columns that you can show or hide, right-click any column header.

- By clicking the column header to change the settings of the whole job
- By sorting the pages into a different sequence (see [Sort pages](#) on page 93)
- By applying a filter to one or more columns in the job preparation pane, and thus hiding some pages (see [Filter pages](#) on page 92)
- By selecting one or more pages and dragging manually them up or down to a different position: this changes the sequence in which the pages will be printed
- By renaming pages (see [Rename pages](#) on page 126)


This is not a complete list of the possibilities. For further options, see the subsequent sections in this chapter.

### Tip:

If you make a mistake or change your mind while editing a job, you can use  and  (or their Ctrl-Z and Ctrl-Shift-Z shortcuts) to undo or redo edits to a single job. Actions other than job editing cannot be undone.

## Toolbar

This topic provides a full set of reference information for this subject.

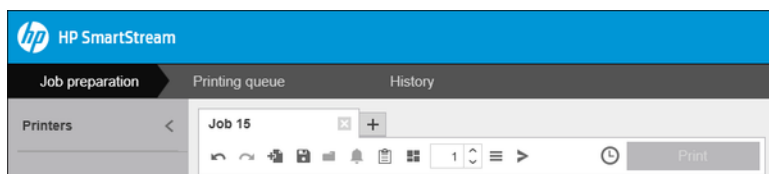

The toolbar contains the following icons and buttons:

- to undo the last job editing action
- to redo the last action that was undone
- to add documents to a job or open a saved job
- to save a job
- to show the status of the hot folders
- to show the status of the resolution center
- to show the job details
- to toggle nesting on and off
- to change the number of copies of the job to be printed
- to select job options
- to send (in the context of a printer)
- to submit a job but put it on hold in the printing queue
- to print a job

## Labels

The job preparation pane has a Label column that is hidden by default, but can be shown (right-click any column header to show or hide columns).

If you choose to show this column, it initially contains the tag attached to each page of a PDF file. However, you can edit these tags in the Label column, replacing them with any text you like. The new text that you provide is saved as part of the job, but it is not saved in the PDF file.

| Label       |
|-------------|
| Floor area  |
| Desks       |
| Desks       |
| Side view   |
| Environment |
| Side view   |
| Environment |

The existence of this column allows you to sort and filter pages according to tags that you can choose yourself.

### Discipline


The job preparation pane has a Discipline column that is hidden by default, but can be shown (right-click any column header to show or hide columns).

If you choose to show this column, it initially contains a subset of categories. However, you can edit these categories in the Discipline column, replacing them with any you like.

The existence of this column allows you to sort and filter pages according to tags that you can choose yourself.

### Job options

You can see the job options for any job by clicking  in the toolbar of the preparation pane.

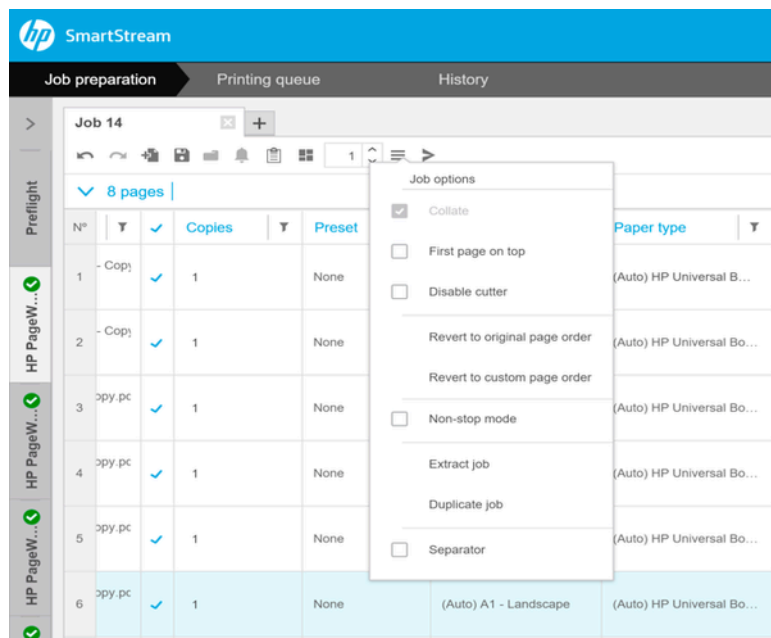

- **Collate:** If you choose to print more than one copy of the job, you can choose to collate the copies; otherwise, the printer will print multiple copies of the first page, then multiple copies of the second page, and so on.
- **First page on top:** You can choose to print the job with the first page on top, which may be convenient if you are stacking the pages face-up as they emerge.

#### Note:

You can choose in the Preferences window whether this option is on or off by default. See [Printer-specific preferences](#) on page 72.

- **Disable cutter:** If the paper is cuttable and the cutter is turned on at the printer's control panel, you can turn it off here. If the paper is not cuttable or the cutter is turned off at the control panel, you cannot turn it on from HP SmartStream.
- **Revert to original page order:** Restore the original sequence of pages in the job, as they were when you created the job. This may be useful if you have sorted the pages or changed the order manually.
- **Revert to custom page order:** Restore the last manual sequence of pages in the job, as they were when you last manually reordered them.
- **Non-stop mode:** The application checks the selected roll ID, roll width, and paper type for each page against the currently loaded rolls in the printer. If a roll with the correct characteristics is not loaded, a window appears asking you how to proceed. However, just before printing the page, if a roll is detected of the correct paper type but wider than specified, printing will continue.

#### Note:

This option allows you to print with minimal interruptions, while still respecting the paper type specified in the job and avoiding clipping. A job may be printed on wider paper if the specified width is not available.

- **Extract job:** You can extract a whole job and store it, in the same way that individual pages can be extracted. See [Extract pages](#) on page 91.
- **Duplicate job:** You can duplicate a whole job, including its job options and page settings.

**Note:**

You can also duplicate a job by dragging it to the + tab at the top of the job preparation pane.

- **Separator:** You can choose to print a job separator page for this particular job. See [Job separators \(HP PageWide XL only\)](#) on page 107.

## Gloss enhancer

Gloss enhancer is a layer of coating that you can apply to prints to create a special effect. It can be switched on or off in the job options, and applies to the whole job.

See [Job options](#) on page 83.

**Note:**


Gloss enhancer cannot be applied on all paper types.

**Note:**

For printers that support this feature.

## Stamps

In the preparation pane, in the **Stamp** column, you can choose to assign a stamp to a page or create a new one. This prints a text and/or graphical stamp or watermark over the contents of the page; you can assign the same stamp to all pages of a job, or particular stamps to particular pages.

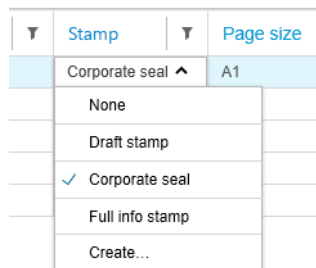

You can specify the position of the stamp and the formatting of a text stamp: its font, size, color, angle, opacity, and offset. You can add various dynamic fields to be displayed as part of the text.

TIFF, PNG, and JPEG files can be imported to provide a graphical stamp. You can also import one of these files contained in a ZIP file. If the ZIP file is password-protected, you will need to give the password in order to import the image successfully.

**Note:**

A ZIP file within a ZIP file is not supported.

The stamp can consist of a maximum of five layers.



Manage stamps: new stamp 1\* (unsaved)

new stamp 1

New stamp layer (1)

Image:  Size: W:  H:

Text:   
[Text options](#)

Angle:  0 Offset (mm) H:  5 Position:   
 Opacity:  100 V:  5

+ Add new layer

Save


Export stamp template : You can export your stamp design as a template. Templates are saved in **My Documents \HP SmartStream\Stamps**, with the **.smst** extension (HP SmartStream Stamp Template file).

Open stamp template : You can open a stamp design saved in a template file. All stamp fields are filled with data from the template, or they become empty if the corresponding fields in the template are empty.

### Stamps in the preview

The stamp can be seen in the page preview. If you select the Move tool, each layer of the stamp is indicated with a red rectangle. To select a stamp layer, the image, or the page, just click what you want to select.


If you select a stamp layer, the following parts of it can be distinguished.

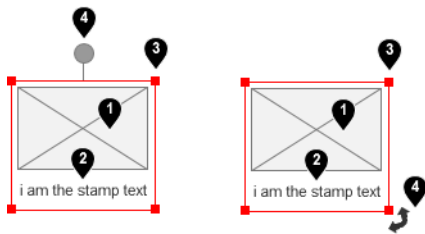

1. Stamp image
2. Stamp text
3. Stamp transformation controls
4. Stamp rotation tool

You can readjust a stamp in various ways after selecting the Move tool:

- You can resize it by dragging one of the corners of the red rectangle. The aspect ratio is preserved.
- You can rotate it by dragging the rotation tool: the gray circle above the center of the stamp. If you hold down the Shift key while dragging, the rotation is constrained to steps of 15°.
- You can reposition it by dragging it into any of the positions in the predefined stamp grid.

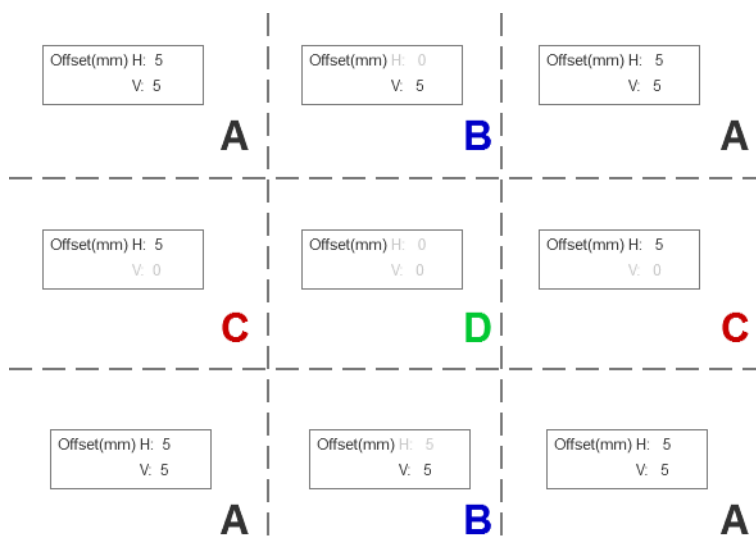

If you double-click a stamp layer, the layer is opened in the stamps dialog box.

Remember that a stamp belongs to one page only. After editing it, you can copy it to all other pages of the job, if you want to do that.

## QR codes

You can generate a QR code and add it to an image.

In the preparation pane, in the **QR & Stamp** column, you can choose to assign a QR code to a page or create a new one. You can assign the same code to all pages of a job, or particular codes to particular pages.

Manage stamps: New QR stamp\* (unsaved)

New QR stamp

New QR stamp layer (1)

Add any text to generate QR code (such as http://www.yoururl.com), up to 1800 characters.

Generate

Size: W: H:

Text:

Text options

Angle: 0

Offset (mm) H: 5

Position:

Opacity: 100

V: 5

Add new layer

Save

Introduce text, URL, vcard, and so on; then click the **Generate** button to generate and place the QR code on the page.

You can specify the position and the formatting of a QR code: its font, size, color, angle, opacity, and offset. You can add various dynamic fields to be displayed as part of the text.

TIFF, PNG, and JPEG files can be imported to provide a graphical QR code. You can also import one of these files contained in a ZIP file. If the ZIP file is password-protected, you will need to give the password in order to import the image successfully.

### Note:

A ZIP file within a ZIP file is not supported.

The QR code can consist of a maximum of five layers.

Export stamp template : You can export your QR code as a template. Templates are saved in **My Documents \HP SmartStream\Stamps**, with the **.smst** extension (HP SmartStream Stamp Template file).

Open stamp template : You can open a QR code saved in a template file. All fields are filled with data from the template, or they become empty if the corresponding fields in the template are empty.


### Note:

For printers that support this feature.

## Printing on sheets

You can print on sheets of loose paper with fixed dimensions.

To change from roll view to sheet view, click the Sheet icon  in the toolbar. The preparation grid then displays different fields such as sheet size and thickness.

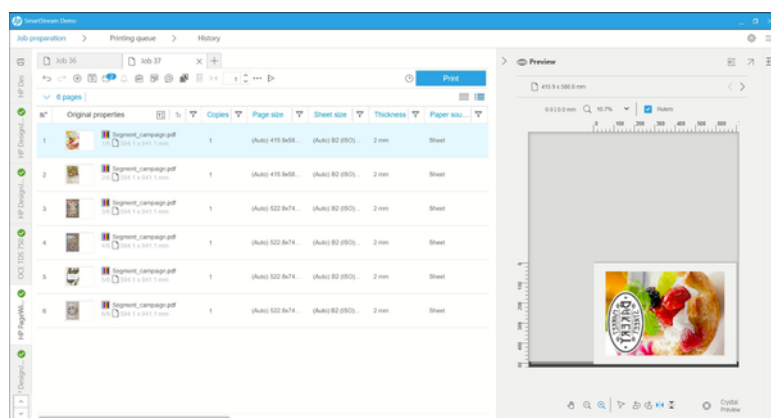


## Double-sided printing

Double-sided printing allows you to print on both sides of a sheet of paper.

To enable double-sided printing, click the Double-Sided icon  in the toolbar.


Once enabled, documents on the page are marked as side A or side B.

Documents are paired as A and B sides. Properties or actions applied to side A are replicated on side B.

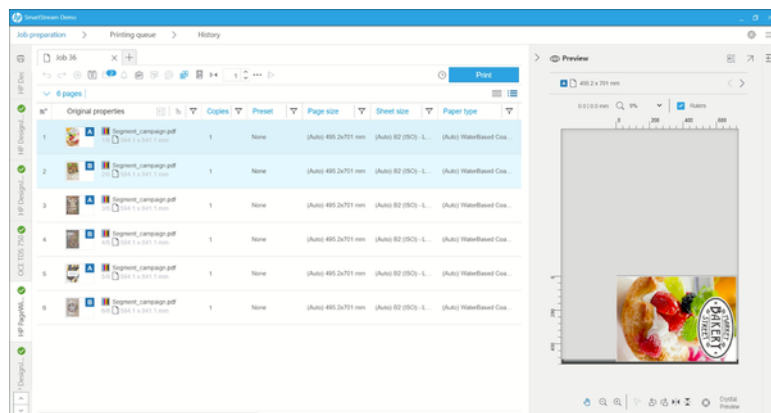

### Double-sided printing order

Select the printing order A|B, A|B, A|B, or AAA|BBB from the job options.

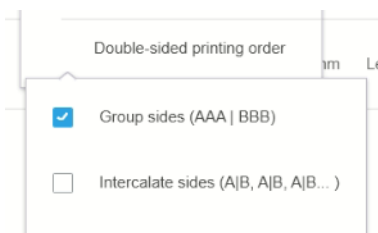


### Automatic alignment

When aligning a document on side A, the application applies an automatic alignment to side B.

### Side-to-side registration

Enabling this feature with the Registration icon ►◄ allows you to preview double-sided documents, with a slider to change the transparency of side A in order to see side B.

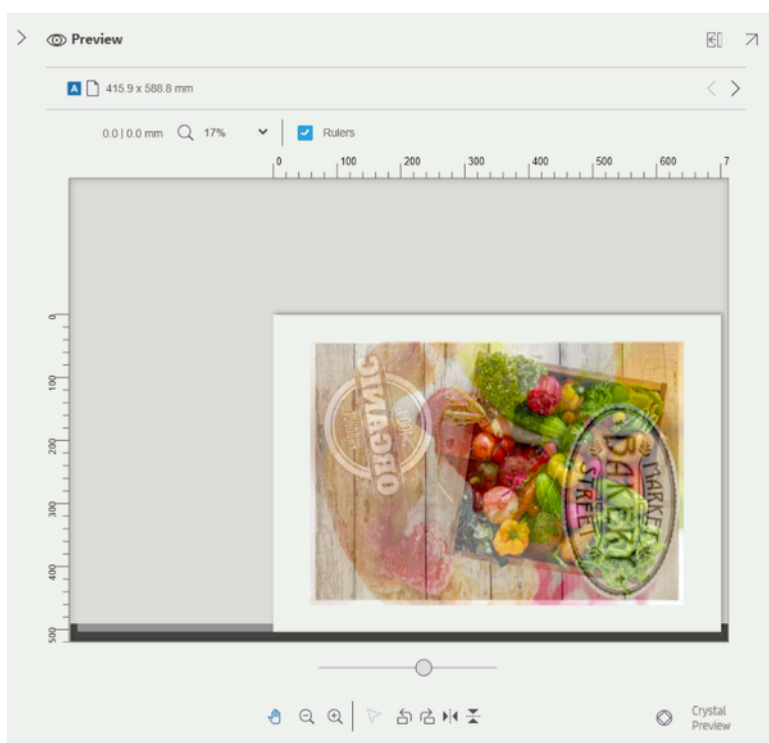

### Nesting

Nesting enables you to save paper and time, by printing two or more pages side-by-side on the paper (if the paper is wide enough). In this way, you can print the whole document more quickly, and avoid wasting paper.

#### Note:


When you nest a job, the paper type and print quality must be the same for all pages in the job.

#### Note:


Nesting is not available if you have chosen the Preflight desk.

You can set the nesting parameters for each printer in the printer preferences (see [Printer-specific preferences](#) on page 72), and you can turn nesting on and off for each job using the ■ icon in the toolbar.

In the preview (see [Print preview](#) on page 101), you can see how your pages will be nested, and you can move individual pages in the preview if you like. The order and positioning of pages that you set in the preview will be respected in the final print.

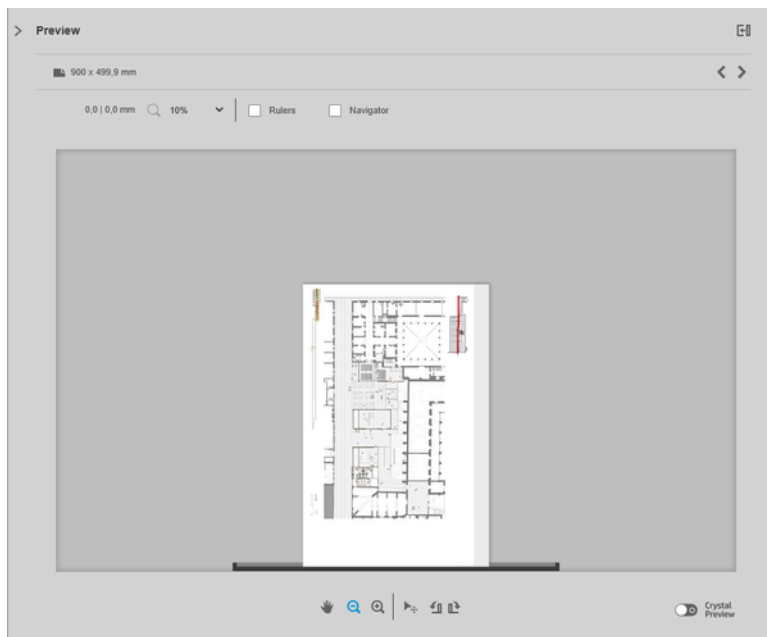

If you have asked for multiple copies of a page, the copies of that page can be nested, which is known as N-up printing.

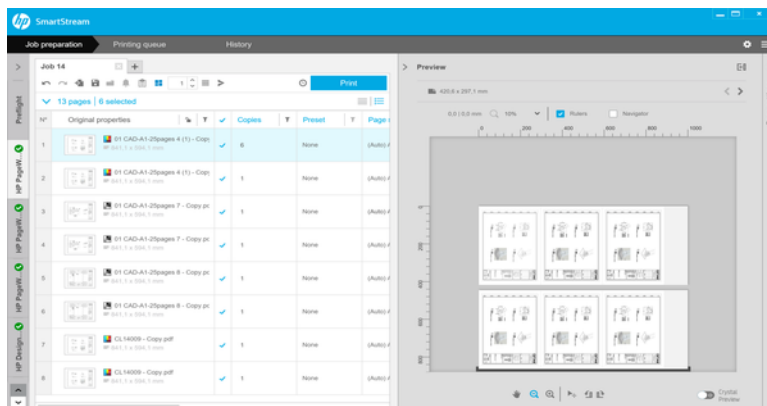

### Nesting preferences on roll paper

This topic provides a full set of reference information for this subject.

Nest width:

Max. loaded

Sheet length:

Minimum (cut wh...

Page gap (mm):

3

Cutting lines:

☐

Add printer margin:

☒

Grouped alignment:

Page/Source

☐

☒

☐

Turn off

Nest

- Nest width: The maximum total width of the nested pages. **Roll width (auto)** by default, which uses the width of the widest roll loaded into the printer.

**Note:**

If there is a page in your document wider than the nest width you have selected, the width of that page is used as the nest width.

- **Sheet length:** The printer is allowed to cut the paper into sheets of this length or greater. **Minimum** by default, which means that the printer is allowed to cut the paper into sheets of any length. Or you can choose to **Disable cutter**.
- **Page gap:** The spacing between pages, from 0 to 100 mm (3 mm by default).
- **Cutting lines:** If checked, the application adds cutting lines to all pages (unchecked by default).
- **Add printer margin:** If checked, the application avoids trying to print in the printer margins (checked by default).
- **Grouped alignment:** Align all nested documents as a group horizontally to the left, center, or right; and vertically to the top, middle, or bottom.

### Nesting preferences on sheet paper

You can print multiple pages side-by-side on a sheet of paper, if your printer supports this feature.

Sheet size: B2 (ISO) - Landscape ▼

Page gap (mm): 3 ▲▼

Cutting lines: ☐

Add printer margin: ☒

Grouped alignment: Page/Source

Horizontal alignment: ☒ Left ☐ Center ☐ Right

Vertical alignment: ☐ Top ☒ Middle ☐ Bottom

Turn off Nest

- **Sheet size:** All sheets should be the same size.
- **Page gap:** The spacing between pages, from 0 to 100 mm (3 mm by default).
- **Cutting lines:** If checked, the application adds cutting lines to all pages (unchecked by default).
- **Add printer margin:** If checked, the application avoids trying to print in the printer margins (checked by default).
- **Grouped alignment:** Align all nested documents as a group horizontally to the left, center, or right; and vertically to the top, middle, or bottom.

### Double-sided nesting

Double-sided nesting on sheets enables you to print multiple pages side-by-side on both sides of a sheet of paper, if your printer supports this feature.

To enable double-sided nesting, click the Double-Sided Nesting icon  in the toolbar.

You can set the nesting parameters for each printer in the printer preferences, and you can turn nesting on sheets on and off for each job (see [Nesting preferences on sheet paper](#) on page 90).

### Vertical trimmer

The vertical trimmer allows the printer to cut paper along the Y axis.

There are two cutters, one at the left of the printer that is fixed, and one at the right that moves along the X axis. There is a limit on how close both trimmers can be.

### How to use it

To enable the vertical trimmer, click  in the toolbar. When activated, the preview displays two vertical lines to indicate where the page will be trimmed.

#### Note:

For printers that support this feature.

## Borderless printing

Borderless printing allows you to print on the whole paper surface, without margins.

### How to use it

To enable borderless printing, click  in the toolbar. When activated, the preview displays a page with no borders.

### Note:

For printers that support this feature.

## Move or copy a job or pages to another printer

To move a job to another printer, click the job tab (containing the job name) and drag it to the other printer in the printers pane.

Alternatively, you can use the **Send** button.

You can select one or more pages and drag them to a printer, in which case a new job is created for that printer with those pages.

To copy instead of moving, hold down the Ctrl key during the operation.

## Delete a job

To delete a job, click  to the right of the job name in the job tab.

Alternatively, you can select **Delete job** from the job option menu in the job header.

## Page options

You can right-click any selected pages to see a menu of options for those pages. The page options enable you to extract or delete the selected pages, or ignore an issue affecting that page.



If you right-clicked on a table cell containing a print setting, you can choose to copy that setting to other pages.

- **Copy down** copies the setting in the current cell to all pages below it in the table.
- **Copy to all** copies the setting in the current cell to all pages above and below it in the table.

If a filter is active, the setting is not copied to hidden pages.

## Extract pages

You can extract pages from a job and store them elsewhere, to be printed later on another printer. This may be useful for small-format or monochrome pages.

First select the pages that you want to extract, then right-click the selection and click **Extract**. Then choose a folder in which the extracted pages will be stored.

### Note:

You can extract pages from PDF files only if extraction is not restricted.

### Tip:

**How can I extract small-format pages?**

Use a filter to remove large-format pages from the job preparation grid, and extract the whole job. Alternatively, sort the pages by page size, select the smallest pages manually, and extract those pages.

**Tip:**

**How can I separate color and black-and-white pages?**

Again, you can filter or sort the page.

**Delete pages**

To remove one or more pages permanently from a job, select the pages, then right-click the selection and select **Delete**.

**Note:**


The pages are removed from the job only: they are not removed from the original document.

**Filter pages**

You can hide a particular category of document or page by clicking one of the ▼ icons in the column headers, unchecking one or more of the boxes in the menu, and clicking the **Apply** button. All unchecked categories are then hidden and do not appear on the screen. Thus, you can hide items of a particular page size, paper type, print quality, and so on.

**Note:**

Only categories that are actually present in the job are shown in the filter menu.

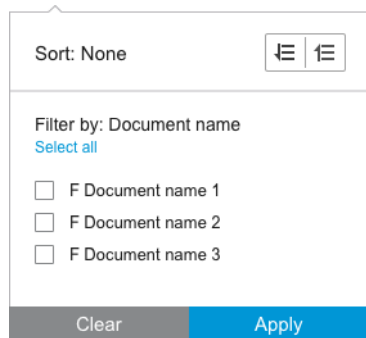

For example, if you want to see only the pages assigned to print on glossy paper, in order to apply a superior print quality, you can use the filter to do so quickly and easily.

Multiple filters can be applied simultaneously to different columns.

You can click the ▼ icon in a column header to see what filter is active for that column. If all boxes are unchecked, no filter is applied. When a specific filter has been applied, the filter icon changes to indicate that at a glance.


**Important:**

If you click the **Print job** button while one or more filters are active, only the visible pages (and not the hidden pages) are transferred to the printing queue. See [Printing](#) on page 106.



## Sort pages

When you click a filter icon, you can also sort the items in the job preparation pane.

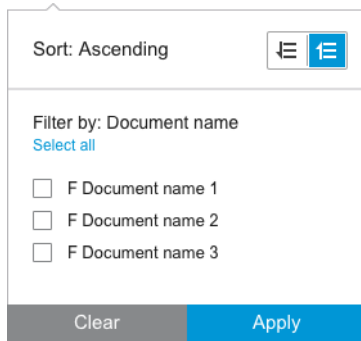

The screenshot shows a user interface for sorting and filtering items. At the top, it says "Sort: Ascending" next to two icons: a list icon and a sort icon. Below this, there is a section titled "Filter by: Document name" with a link "Select all". Underneath, there are three checkboxes, each followed by the text "F Document name 1", "F Document name 2", and "F Document name 3" respectively. At the bottom, there are two buttons: "Clear" and "Apply".

Sorting by document name is in alphabetical order. When there is a list of items in the popup window, they are sorted into the order in which they appear in the list. When there are checkboxes, the ticked boxes are sorted first and the unticked boxes afterwards (or the reverse, if you select reverse order).

After sorting, you can use the job options to restore either the original sequence in which the documents were added to the job (**Restore original position**), or the last sequence into which they were arranged manually (**Restore manual position**).

## Print settings

The settings shown in this pane depend on the characteristics of the selected printer and its active accessories.

>
**Page settings**

new-architectural-house-plans-with-hom...
1/1

▼
General

Preset:
None

Color mode:

Quality:
Lines/Fast

Paper type:
AUTO
Poster Plain

Page copies:
1

▼
Cropping

Crop mode:
Do not crop

Crop size:
Width/Height
543,3
261,8

Crop from:
0
0
0
0

▼
Page options

Page size:
AUTO
543,3x26...

☐ Cutting lines

Scale:
100%

Alignment:
Image/Page

Margins:
0
0
0
0

Rotation:
0°
90°
180°
270°

☒ Auto-rotation

▼
Paper source options

Roll width:
AUTO
594 mm - A1

Roll ID:
Any

Alignment:
Page/Roll

Margins:
0
0
50,7
0

Destination:
Basket

Print settings can be changed either in the job preparation pane or in the settings pane. The changes are applied to the currently selected item(s), which can be a single page or multiple pages.

**Note:**

When a setting has been determined automatically by the application, such as the roll number, paper type, page size, or rotation, **(Auto)** is displayed before the setting in the job preparation pane.

**General settings**

- **Preset:** Select a preset to be applied (see [Presets](#) on page 75).
- **Color mode:** With supported HP DesignJet T-series printers, you can select color, grayscale, or pure black and white (initially set automatically from the color mode detected in the image).

With supported HP DesignJet Z-series printers, you can select color, grayscale with gray and black inks only, or grayscale with the full set of inks (initially set automatically from the color mode detected in the image).

With HP PageWide XL printers, you can select color or grayscale.

- **Print quality:**
  - For HP DesignJet printers, the available options are **Fast**, **Normal**, and **Best**. The default value is **Normal**.  
There may also be a check box for EconoMode in the Settings pane, unchecked by default. The job preparation pane does not show whether EconoMode is on or off.
  - For HP PageWide XL and HP PageWide XL Pro printers (except the Pro 10000), the available options are **Lines/Fast**, **Uniform areas**, and **High detail**.

**Table 7: HP PageWide XL and HP PageWide XL Pro printers (except the Pro 10000)**

|   | If the image content is...                                                                 | Recommended print mode | You will obtain...                                                               |
|---|--------------------------------------------------------------------------------------------|------------------------|----------------------------------------------------------------------------------|
| A | Monochrome or color lines and text<br>Any content if maximum productivity is needed        | Lines/Fast             | High-quality lines with maximum productivity                                     |
| B | Large areas of uniform colors                                                              | Uniform areas          | High-coverage graphics with more uniform and saturated colors                    |
| C | Text or lines on top of color backgrounds<br>Highly complex drawings with plenty of detail | High detail            | Higher-resolution images with smooth backgrounds, accurate lines, and sharp text |



When printing blueprints

- You are recommended to choose **Lines/Fast** in all cases, except when printing on Natural Tracing Paper, when you should choose as indicated above.
- Blueprints are printed in shades of blue (bluescale). For a more saturated result, you could change the original file to pure black-and-white (not grayscale), in which case the print will be in 100% blue and white.
- For the HP PageWide XL Pro 10000 printer, the available options are **Fast**, **Normal**, and **Best**.

**Table 8: HP PageWide XL Pro 10000 printer**

|   | If the image content is...                                                              | Recommended print mode | You will obtain...                                                                                       |
|---|-----------------------------------------------------------------------------------------|------------------------|----------------------------------------------------------------------------------------------------------|
| A | Simple graphics                                                                         | Fast                   | Maximum productivity for printing graphics                                                               |
| B | Large areas of uniform colors                                                           | Normal                 | Graphics with uniform and saturated colors                                                               |
| C | Smooth background with fine detail<br>Complex designs with vivid colors and transitions | Best                   | Best print quality and consistency throughout the job<br>Best performance delivering top-quality posters |



- **Paper type:** Your options are those provided by the printer. For each printer, you can choose in the preferences dialog whether the paper type can be set automatically or not. If not, you can choose the default paper type to be used by the printer.
  - If the paper type is set automatically (which is the default behavior), it works in the same way as the other automatic settings, and you can still choose to set the paper type manually for one or more pages.
  - If the paper type is not set automatically, it remains set to the default type unless you change it manually.

**Note:**

When printing blueprints, you should select one of the papers in the Blueprint Paper category.

- **Page copies:** You can select how many copies are printed of that page.

**Tip:**

**How can I change and assign paper types?**

In the print settings (general settings).

**Cropping**

You can choose from the following cropping options:

- **Do not crop:** No cropping is done (the default option).
- **Remove white areas:** Crop white areas around the edges of the image.
- **Smart crop:** Crop white areas around the edges of the image, and solve any issue arising from content in printer margins.
- **Custom crop:** Crop the image to a specified width and height.

**Tip:**

The ability to crop white border areas automatically can save you a lot of work compared with doing the same task manually for each page.

**Tip:**

You can lock the width and height to preserve the aspect ratio of the cropped image, or release the lock to change width and height independently.

If the page size is set automatically and you crop to a different page size, that becomes the new page size. However, if you have set the page size manually, cropping does not change it.

After cropping, you can select **Do not crop** to restore the original image size.


### Page options

- **Scale:** You can rescale the image to a different size—to a percentage of its original size, to fit a particular page size, or to fit the current roll.
  - When you rescale the image, the page margins are also rescaled.
  - When the page size is set automatically, it will change automatically if you rescale the image.
  - However, when you set the page size manually and then rescale the image, the page size is not affected.
- **Page size:** This is initially set automatically, based on the dimensions of your original document, but you can change it. The page-size list enables you to select portrait or landscape mode. You can also click **AUTO** at any time to return to the automatic page size.

#### Note:

If your original document has dimensions within 1.5 mm0.6 in of a standard size, the page size is set to the standard size. You can disable the display of standard sizes in the preferences. See [General preferences](#) on page 71.

To print your document on the nearest standard page size, scroll down to **Nearest standard size** in the page-size list. Below it is a list of page-size families (ANSI, American, Architectural, and so on); click the family you want to use. See also **Page size** in [General preferences](#) on page 71.

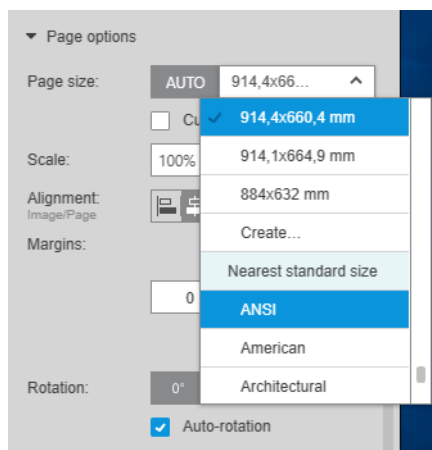

You can create, modify, and delete custom page sizes by selecting **Create** from the page-size list. A custom page size is specific to a particular printer: it is not available for use with all printers.

Custom page size: ✕

Width:

Height:

Units:

|  |            |
|--|------------|
|  | 500x500 mm |
|--|------------|

The application notifies you if you try to create a custom size that already exists; whether it is a standard size or another custom size.

- Cutting lines: In the Settings pane, you can add dashed lines to show where the paper should be cut to achieve the correct page size. Cutting lines can be printed only if they fall within the printable area of the paper.

Cutting lines are turned off by default, but you can turn them on for particular pages, or change the preferences to turn them on by default.

- Alignment: You can align the image to the left, right, center, top, or bottom of the page.
- Margins: In the Settings pane, you can change the margins between the printed image and the page boundaries.
- Rotation: You can rotate the page and image by multiples of 90°, or select automatic rotation (the default behavior), which seeks to minimize the use of paper.

**Note:**

The Top, Bottom, Left, and Right fields when cropping or adjusting margins always take into account the current rotation of the page (if any) as seen in the preview.

### Paper source options

With these options, you can specify how the page should be printed on the available paper sources.

- Paper source: You can select a roll or single sheets, or select **Any** to tell HP SmartStream to select the paper source automatically.
- Roll width: You can select the desired roll width, or select **Any** to tell HP SmartStream to select the roll automatically.
- Alignment: You can specify how pages should be aligned on the roll.
- Margins: You can change the margins between the roll edges and the page.
- Destination: You can select the destination of the printed output if the printer offers a choice. For example, you may be able to choose between a basket and a stacker. If no choice is available, this option is not shown.

A **Manual mode** checkbox may be provided if the printer has a stacker that offers this option. If you check the box, before the page is printed you will be reminded to put the printer into manual mode (it cannot be done automatically).

- Folding style: If the printer has a folder installed, you can assign a folding style, display the folding style in the preview, or create a new folding style (if the folder allows you to do that). For more information on folding styles, see the printer or folder user's guide. This option is not shown if no folder is available.


**Note:**

With auto-rotation enabled, pages with the folder as destination are rotated depending on the selected folding style; see the list of rules below.


To help users to set rotation automatically for a job when there is a folding style selected, automatic rotation is applied if any of the following folding style families are selected: DIN, inverse DIN, fan fold only, mailer, or a custom folding style.

Autorotation applies the following rules:

- If page width is greater than or equal to page height ( $B \geq A$ ), rotate  $270^\circ$ .
- If page width is less than page height ( $B < A$ ), rotate  $180^\circ$ .
- If page width is less than page height ( $B \leq A$ ), and page height is less than or equal to 305 mm, and page width is less than or equal to 229mm ( $A \leq 305 \text{ mm} \ \&\& \ B \leq 229 \text{ mm}$ ), rotate  $270^\circ$ .

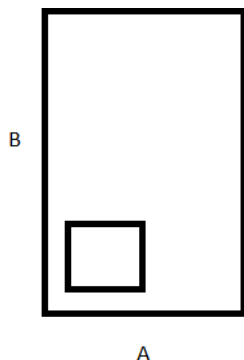


- If page width is greater than page height ( $B > A$ ), and page width is less than or equal to 305 mm, and page height is less than or equal to 229 mm ( $B \leq 305 \text{ mm} \ \&\& \ A \leq 229 \text{ mm}$ ), rotate  $180^\circ$ .

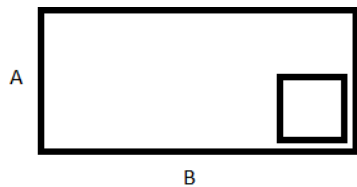



## Print preview

The preview pane shows what your final print will look like, and adds a visual indication of margins and clipping (if any).

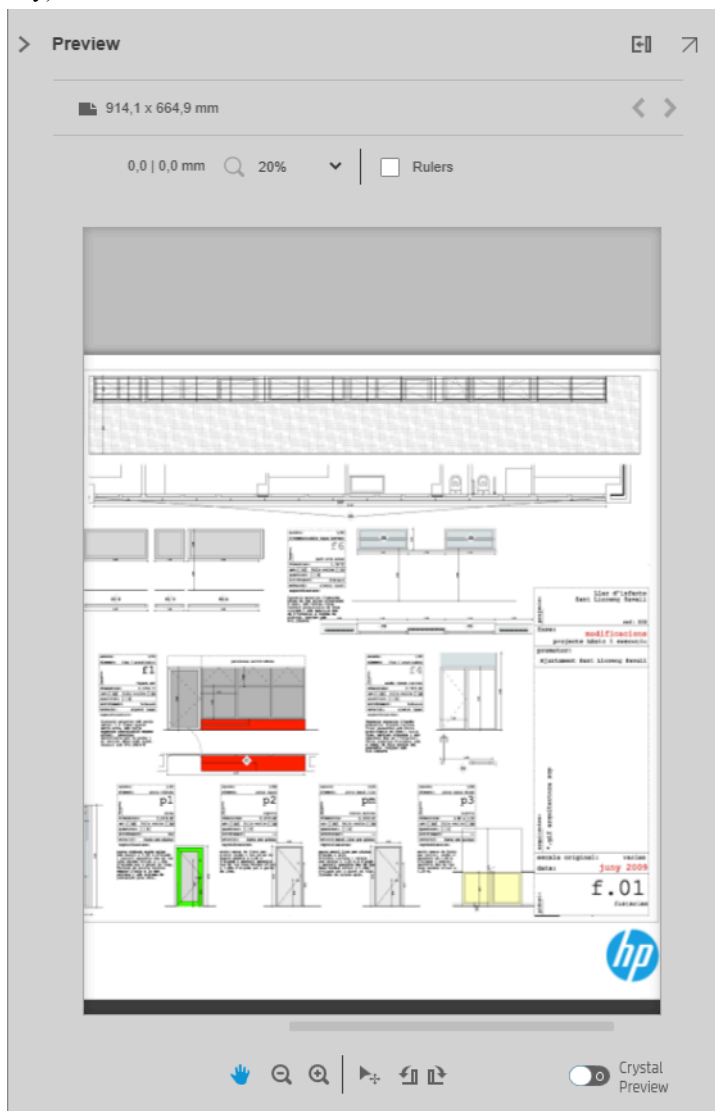

The preview pane can be enlarged by dragging the left pane border further to the left, or maximized by clicking the maximize button in the top right corner of the pane.

You can zoom in or out by using the Zoom drop-down menu (above the preview), or by pressing the Ctrl key and moving the mouse wheel. You can also zoom in on a particular section of the preview by clicking and dragging to form a rectangle enclosing that section.

If you have zoomed in so that the preview is too big to fit in the available space, you can view different parts of it by using the scroll bars, or by pressing the space bar and dragging the image with the mouse (panning). If you have a mouse wheel, you can use it to pan vertically or (with the Shift key) horizontally.

The interactive preview also allows you to adjust the paper and the page freely with the Move tool, or rotate left or right with the Rotate buttons.

## Image, page, and roll

HP SmartStream distinguishes between the image, the page, and the roll.

The documents you want to print consist of one or more pages, called original pages. For each original page, you can select it completely or crop it to select a particular part of it. The part of the original page selected for printing is called the image.

Images are laid out on destination pages, called simply pages in HP SmartStream. The destination page is the output you want to print. If cutting lines are requested, they will be drawn around this page. By default, the destination page size is the same as the image size, but you can define a different page size which may create margins between the image and the page. When there is a difference between the image size and the page size, you can set how the image is aligned within the page in the page options. See [Page options](#) on page 98.

Pages are printed on rolls of paper. The roll can be wider than the page, in which case you can set how the page is aligned within the roll in the paper source options. See [Paper source options](#) on page 99.

## Preview features

A preview shows the whole roll width (not just the page), and it shows the page boundaries and image boundaries if they are different.

All previews are marked with boundaries in various ways:

- The background color of the page is white; any part of the roll outside the page is colored light gray.
- Printer margins are shown as dashed gray lines.
- If the image size differs from the page size, the boundaries of the image are shown as blue lines.

The printed image may be clipped for different reasons; these are indicated by warning icons in the job preparation pane, and visually marked in the preview:

- Part of the image falls outside the page: The image is cropped, and the cropped edge is shown with a solid yellow line. Also, the page options in the Settings pane include a negative margin.
- Part of the page falls outside the roll: That part of the page is highlighted in yellow. Also, the paper source options in the Settings pane include a negative margin.
- One image is overlapped by another.

If the clipping indicated in the preview is not acceptable, there are various ways to avoid it, such as:

- Choose a wider roll.
- Reduce the widths of the margins (if possible).
- Rotate the page and/or the image.
- Rescale the page and/or the image.

If the folder style does a cross and fan fold, the preview shows a green rectangle in the appropriate corner. If the folder style only does a fan fold, the rectangle is shown at the top or bottom, across the whole width of the roll.

### Tip:

**How can I use the color proofing preview to see the real colors that will be printed?**

Click the  button.

### Tip:

**How can I remove white areas from the edges of the page?**

You can do this easily and automatically by selecting **Remove white areas**, which is one of the cropping options in the print settings. See [Cropping](#) on page 97.

## Preview tools

This topic explains the concepts involved in this subject.

The preview is interactive: it permits image manipulation using the tools provided in the preview pane:

- The Rotate buttons allow you to rotate the image.

- The Move tool allows you to select the image (click the image) or the page (click the edge of the page), and move it to a new position on the paper.


You can also use the Move tool to resize an image, by dragging a corner of the image. To maintain the image proportions (the aspect ratio), hold down the Shift key while resizing.

**Note:**

The Move tool is disabled if the job has not been assigned to a printer.

## Undock the preview

You can undock the preview into its own separate window by clicking the  button at the top right of the preview pane. This gives you more space for the other panes in the SmartStream window.

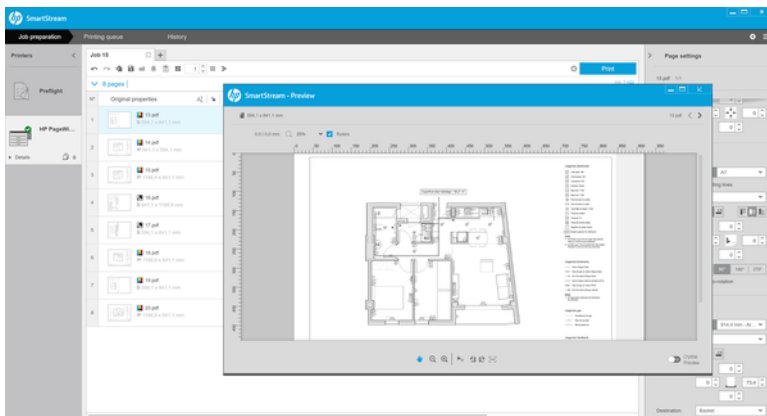


To return the preview to the SmartStream window, click the  button at the top right of the preview window.

## Mirror

Mirroring allows you to reflect an image horizontally or vertically.

For horizontal mirroring, click the Horizontal Mirror icon , and for vertical mirroring click the Vertical Mirror icon



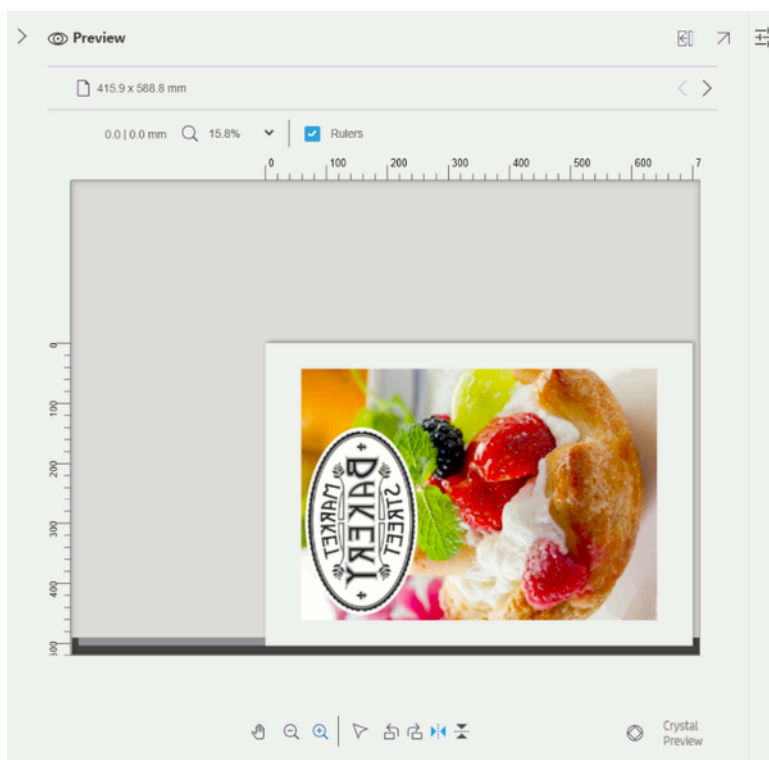

### Crystal Preview

If HP SmartStream finds problems in a PDF file, in some cases it can continue and print the file, but the thumbnail and preview may not correctly represent the final print.

In these cases, you can display an accurate soft-proofing preview by clicking the  **Crystal Preview** button near the bottom left of the preview pane.

The following scenarios require the Crystal Preview, which uses the Adobe Libraries:

- Fonts are used but not found in the PDF file nor in the system.
- Some PDF layers are enabled or disabled differently, depending on whether they are viewed or printed.
- There are references to external documents or images.
- Embedded PostScript (EPS) is contained in the PDF file.

The Crystal Preview provides an accurate preview whatever the characteristics of the file, showing you exactly what will be printed, so that you can evaluate the printed colors, and judge for yourself the effect of any problems in the file. However, the Crystal Preview may take longer to generate than the default preview.

It performs full color management (see [Color management](#) on page 110), and can understand and handle the following PDF features correctly:


- Output intent
- Transparency
- Overprinting
- Rendering spot colors with the HP Professional PANTONE Emulation Library

While the computer is busy generating a Crystal Preview, the toolbar buttons in the Preview pane are disabled.


The example below illustrates the use of soft proofing to judge the printed colors.

Table 9: Soft proofing

Crystal Preview for glossy paper

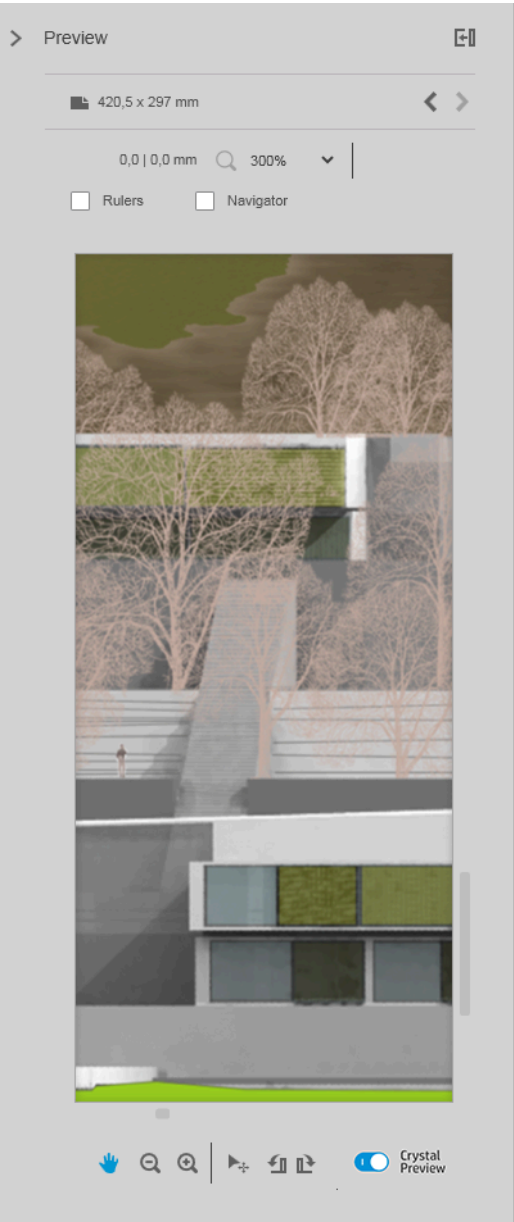

Crystal Preview for plain paper

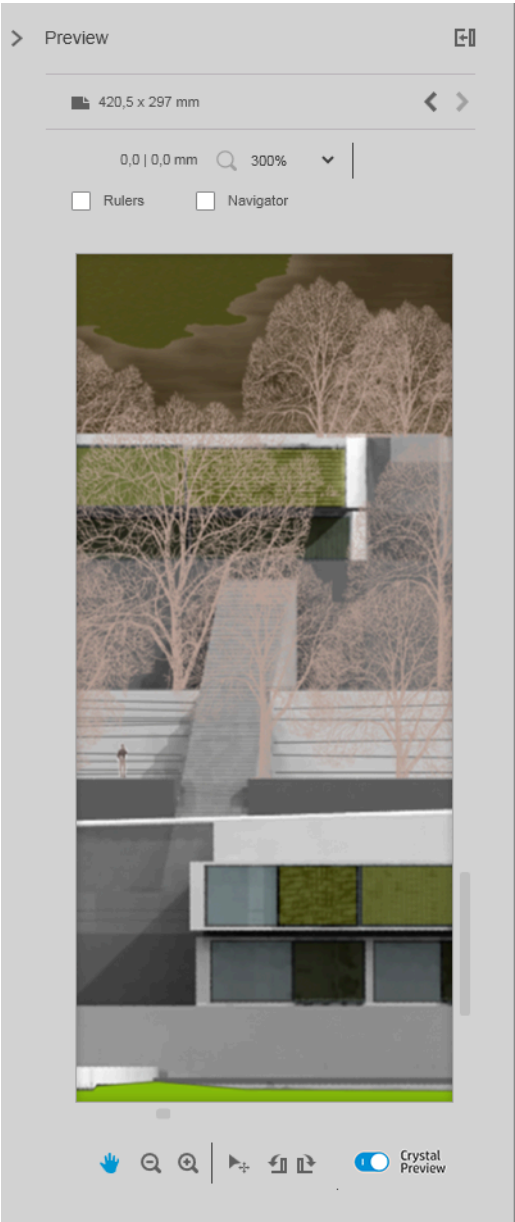

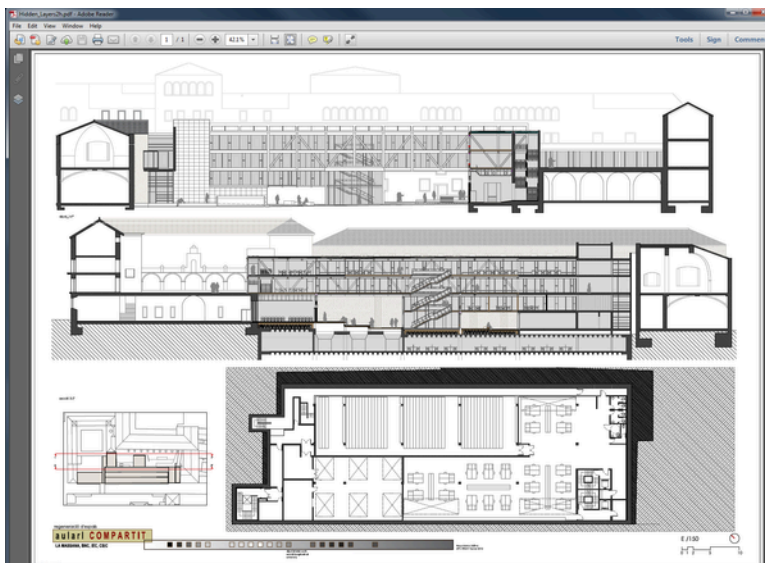


Figure 2: PDF file with unprintable layers

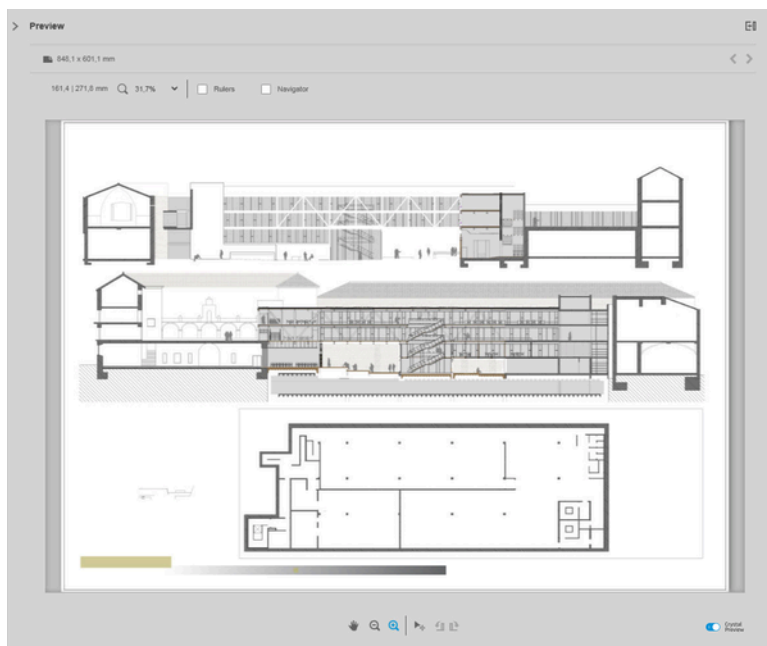


Figure 3: Crystal Preview showing what will be printed

## Printing

### Submit jobs for printing

From the job preparation pane, you can submit the selected job(s) for printing by clicking the **Print job** button at the top right.

Jobs are checked for possible problems before being added to the printing queue. If any problems are found, you can choose between the following options:

- **Modify settings:** The job is not added to the printing queue but is kept in the job preparation pane so that you can try to solve the problems.
- **Continue anyway:** The job is added to the printing queue without modification. If the problem consists of clipping an image, the image will be clipped. Other problems, such as a paper type mismatch, may cause a pause and notification while printing.

 Job 14: 1 mismatch in 1 page

Pages to print with issues:

Page clipping

Part of the page is placed outside the roll.

▶ 1 page (49,9 mm of clipping):

Modify settings

Continue anyway

### Filtered and unchecked pages

If you have hidden some pages by using a filter, they disappear from the screen and are not printed. However, if you remove the filter, those pages reappear in the job preparation pane.

See [Filter pages](#) on page 92.

If you have excluded some pages by unchecking the box in the Print column, they remain visible on the screen. When you click **Print job** and the job is printed, the excluded pages are not printed, but they are added to the history together with the printed pages.

### Job separators (HP PageWide XL only)

A job separator is a page of information about a printing job.

If you have chosen to print job separators, a separator is printed as soon as all pages of the job have been printed, regardless of the **First page on top** setting. You can choose to print job separators in the printer-specific preferences (for all jobs of a particular printer), or in the job options (for a particular job). A job separator is not counted as part of the job for accounting purposes.

© All Rights Reserved  
**Job name**    **20 pages**    **1/5 job copy**

Printed on 11<sup>th</sup> September 2016 at 17:54  
 HP PageWide XL 8000 first floor

**Client name:** Microsoft Australia      **Job order:** 1204040300

**Currency:** United Kingdom      **Payment Terms:**

**Comments:** Customer has agreed that computers are not useful tools for credit default ("No Cash") SL, though he has acknowledged ahead of time that early exposure to computer games does lead to better credit in our C&B development's a C&B's second round third year ("Third-Eye Development") SL.

## General

|  |  |  |  |  |  |
|--|--|--|--|--|--|
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |

## Print coverage

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

## Work log

|                        |          |
|------------------------|----------|
| <b>Activities</b>      | <b>8</b> |
| <hr/>                  |          |
| Business public access | 3        |
| Job supervisor         | 5        |
| <hr/>                  |          |
| Unusable business      | 5        |
| <hr/>                  |          |
| Local file system      | 4        |
| PDF validation results | 1        |

It is sent to the same destination as the last printed page, with the same width as the last printed page, and the same height as the last printed page plus 5 cm. It is printed in grayscale (no color).

A job with collated copies has a separator for each collated copy.

A job separator is indicated in the printing queue and history as ‘(+1)’ after the stated number of pages of the job. It is not indicated in the job preparation pane.

## Printing queue

You can monitor the printing process by clicking **Printing queue** near the top of the window.

The screenshot shows the 'Printing queue' window. At the top, it says 'Total jobs: 1 Queued pages: 180'. There are three buttons: 'Cancel all', 'Hold all', and 'Release all'. Below is a table with columns: 'Jobs', 'Printing progress', 'Destination', and 'Finishing status'. The table lists several jobs, each with a progress bar and a status. The first three jobs are 'Printed', and the remaining five are 'Waiting to process'.

| Jobs                                                | Printing progress  | Destination             | Finishing status |
|-----------------------------------------------------|--------------------|-------------------------|------------------|
| Job 13 110274-A0L-20pages.pdf 1:00 1188.9 x 841.1 n | Printed            | Stacker (high-capacity) | Completed        |
| Job 14 110274-A0L-20pages.pdf 2:00 1188.9 x 841.1 n | Printed            | Stacker (high-capacity) | Completed        |
| Job 15 110274-A0L-20pages.pdf 3:00 1188.9 x 841.1 n | Printed            | Stacker (high-capacity) | Completed        |
| Job 16 110274-A0L-20pages.pdf 4:00 1188.9 x 841.1 n | Processing         | Stacker (high-capacity) |                  |
| Job 17 110274-A0L-20pages.pdf 5:00 1188.9 x 841.1 n | Waiting to process | Stacker (high-capacity) |                  |
| Job 18 110274-A0L-20pages.pdf 6:00 1188.9 x 841.1 n | Waiting to process | Stacker (high-capacity) |                  |
| Job 19 110274-A0L-20pages.pdf 7:00 1188.9 x 841.1 n | Waiting to process | Stacker (high-capacity) |                  |
| Job 20 110274-A0L-20pages.pdf 8:00 1188.9 x 841.1 n | Waiting to process | Stacker (high-capacity) |                  |
| Job 21 110274-A0L-20pages.pdf 9:00 1188.9 x 841.1 n | Waiting to process | Stacker (high-capacity) |                  |

In the printing queue tab, you can see the progress of each job and document in the active printer queue, including the destination of the print, which may be the stacker, the folder, or the basket.

At the top of the printing queue are the **Cancel all** and **Hold all** buttons, which can be clicked to cancel or put on hold all jobs in the queue. There is also a **Release all** button to release all jobs that have been held.

In the Actions column, at job level only, there is a **Cancel** button to cancel the job. If the job has not started printing, there is also a **Hold** button to put the job on hold, and a **Modify settings** button that returns the job to the job preparation pane so that you can modify the print settings.

If you are printing to an HP PageWide XL printer:

- You can cancel only your own jobs from the application. You can cancel jobs created by other people from the printer's control panel.
- You can change the order of the jobs in the queue.

The job at the top of the queue is printed first, and any jobs added to the queue are added at the bottom. You can change the order of the jobs in the queue by dragging a job into a different position, except for jobs that are currently printing or about to be printed. You cannot drag a job to a different printer.

Before printing, each page of a job is checked for mismatches between the job settings and the loaded roll (for instance, the wrong paper type is loaded). If there is a mismatch, you can resolve the problem by modifying the print settings, loading a different roll, or canceling the job.

### Job status

- The current status of a job is displaying below the printing progress bar. A normal, successful job passes through the following states: Waiting to process in printer\*, Waiting to process\*\*, Processing in printer\*, Processing\*\*, Waiting to print, Printing, Printed.
- If the job encounters some problem, you may see: Paused, Failed.
- If you interrupt the job in some way, you may see: On hold in printer\*, On hold for mismatch, Canceling, Canceled, Pausing, Printer paused\*, Releasing.
- In the Finishing column, you may see: Servicing\*, Stacking, Folding, Completed.

\* HP PageWide printers only

\*\* HP DesignJet printers only

## Printing interruptions

This topic explains the concepts involved in this subject.

There are various situations in which printing may be interrupted, such as:

- A paper jam in the printer
- A problem with the cutter, stacker, or folder



- The printer runs out of paper
- The printer runs out of ink
- The connection to the printer has been lost
- A page cannot be rendered for one of various possible reasons
- The printer is paused, perhaps because a cover is open

In such situations, a popup window explains what has happened, and offers options depending on the situation. For example:

- **Paper jam:** If there is a paper jam, you will have to clear the jam and restart the printer. This means that the job that was printing when the jam occurred will be left uncompleted, and the whole job will appear in the history with the unprinted pages marked as failed.
- **Out of paper:** If the current roll runs out of paper, there are various possible consequences. These depend on the validation mode (see [Printer-specific preferences](#) on page 72) and the job settings (such as roll ID) that you assigned. In some cases, if the printer finds another roll of the required paper type and roll width, it will continue printing automatically; in these cases, a page that was interrupted while printing is normally reprinted in full on the second roll. Such a page is marked with a warning in the history.

You may see the following options in an out-of-paper situation:

- **Cancel:** This cancels the job and moves it to the history.
- **Modify settings:** This cancels the job and moves it back to the job preparation pane.
- **Assigned roll/Continue:** This allows you to choose a roll of the same or greater width to continue printing the current job.
- **Hold:** This puts the current job on hold.

If the connection to the printer is lost or printing is impossible for some other reason, the current job is canceled and the jobs remaining in the queue are put on hold. You can choose to print the jobs when the printer problem has been fixed.

### Cancel jobs

This topic explains the concepts involved in this subject.

There are three ways of canceling print jobs:

- In the printing queue, click the **Cancel** button in the Actions column, next to the job name, to cancel that job.
- In the printing queue, click the **Cancel all** button at the top of the queue to cancel all jobs for a particular printer.


#### Note:

With an HP PageWide XL printer, all jobs for that printer are shown, but **Cancel all** cancels only the HP SmartStream jobs.

- Use the printer's control panel to cancel the job that is currently printing. Any other jobs for that printer in the HP SmartStream queue are also canceled.

### Exit the application while printing

If you are printing to an HP DesignJet printer, and you try to close the HP SmartStream application while there are still jobs in the printing queues, you are warned and offered the opportunity to change your mind. If you go ahead and close the application, any jobs in the printing queues are canceled and moved to the history.

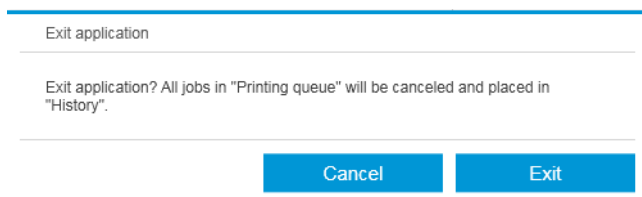

This does not occur if you are printing to an HP PageWide XL printer, because in that case the queue is stored in the printer.

## Color management

HP SmartStream provides many advanced color management features with a very simple user interface. ICC V4 and V2 color profiles are fully supported for all supported file types, plus black point compensation, PDF output intent, HP Professional PANTONE emulation, and Crystal Preview soft-proofing.

See [Crystal Preview](#) on page 104.

HP Professional PANTONE Emulation (HP PPE) is a technology that replaces PANTONE color names with RGB or CMYK colors calculated specifically for your printer and paper at print time, in the same way that professional graphic artists and prepress professionals prepare PANTONE emulations by hand. The results are professional-quality emulations of PANTONE colors that look as similar to the originals as possible with a given combination of printer and paper.

Crystal Preview soft-proofing uses the Adobe Libraries to emulate on your screen what your print will look like on paper, using color profiles provided with your printer to take account of the characteristics of paper, ink, and printing mode.

### Supported color spaces

- PDF: Any color space supported by PDF 1.7
- JPEG: Gray, RGB, CMYK, and ITU/Fax CIE L \* a \* b \*
- TIFF: Monochrome, indexed, gray, RGB, CMYK, and CIE L \* a \* b \*
- HPGL2: Adobe RGB, sRGB, and Device RGB

### Color options

Color management is automatically applied by HP SmartStream to provide optimal color output. However, you can choose between two color management options in the Preferences window (see [Printer-specific preferences](#) on page 72):

- **Relative colorimetric:** This is the default option. It favors more saturated colors and modern CMYK standards. It uses relative colorimetric rendering intent and black point compensation, sRGB IEC 61966-2.1 as the default RGB color space, and ISO Coated v2 as the default CMYK color space.
- **Perceptual:** This option provides color consistency with a printer using a PostScript driver. It uses perceptual rendering intent, sRGB IEC 61966-2.1 as the default RGB color space, and SWOP as the default CMYK color space.

## History

The HP SmartStream history preserves a record of printed jobs in case you want to reprint any of them later; perhaps with changed settings.

### Note:

You can also save jobs outside the history, using the  icon in the toolbar. See [Toolbar](#) on page 82.

The history contains a tab for each printer, which has its own separate history.

The history includes various items of information about the original job, including its success or failure.

To manage the size of the history, you can set a time limit in the general preferences: jobs older than this are deleted from the history. See [General preferences](#) on page 71.

### Tip:

#### How can I reprint from the history in case of a mismatch?

Click the **Reprint** button, and correct the mismatch by changing the loaded paper or changing the print settings in the job preparation tab.

## Search the history

There is a search field that you can use to search for past jobs or documents by name.

## Reprint a job

To reprint a job, click the **Reprint** button in the job action column.

- If the job was printed on an HP PageWide XL printer, the reprint is done by the printer.
- In the case of other printers, the job is returned to the job preparation pane for error detection; if there are no errors, the job moves automatically to the printing queue and is sent to the active printer. If you want to change the printer, click and hold the **Prepare to print** button, which displays a menu of all the available printers; select the one you want.

### Note:

You can reprint only a whole job; you cannot select part of a job. You can select the number of copies.

### Note:

If the printer no longer has the same rolls available, there may be a mismatch between the job and the available rolls, in which case you are offered the opportunity to modify the job settings.

## Reconfigure a job

To change settings or revalidate an old job, click the **Prepare to print** button in the job action column. The job is moved to the job preparation pane.

Any settings that were originally set automatically are recalculated, which may change the settings, depending on the rolls loaded. Settings that were set manually remain unchanged. You can change any of the settings manually.


## Remove jobs from the history

You can remove an individual job by clicking the **Remove** button in the job action column.

## Folding


If your printer has a folder installed, you can select the folding style as one of the print options. Also, you can choose to print jobs in reverse order whenever the folder is in use.

See [Paper source options](#) on page 99.

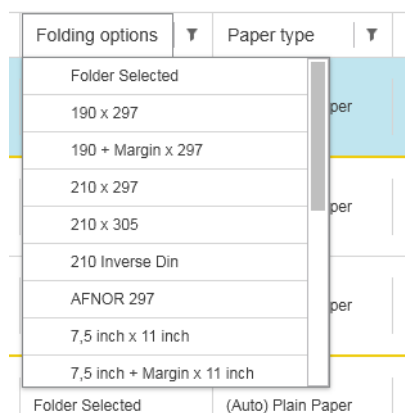

If the folder permits custom folding styles, you can create them by selecting **Create** from the folding style print option and then filling in the specifications of your custom folding style.

Folding style
✕

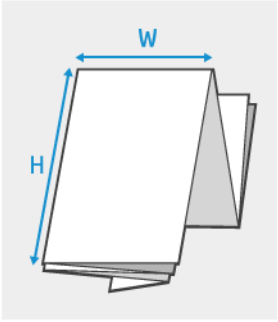

**Name:**

**Folding options:**

☐ Fan-fold only

☐ Compensation

☐ Tabs

**Width (W):**   
From 203 to 920 mm

**Height (H):**   
From 500 to 3500 mm

**Margin (M):**   
From 0 to 5 mm

Save

|  |         |                                      |
|--|---------|--------------------------------------|
|  | Custom1 | 203+2 mm (Fan-fold and Compensation) |
|  | Custom2 | 203x500 mm (Tabs)                    |
|  |         |                                      |

You can specify in the dialog the dimensions of your custom folding style. You can also choose from the following options:

- **Fan-fold only:** The folding style is fan-fold, and has no cross-fold part.
- **Compensation:** The folding style performs compensation if necessary.
- **Tabs:** The folding style uses tabs (this option appears only if the folder has tabs).


**Note:**

If you are using an HP PageWide printer, any custom folding style created with the printer's control panel will automatically be synchronized to HP SmartStream.

You can specify in the application preferences whether you want to see the dimensions of the folded paper indicated in green in the preview. See [General preferences](#) on page 71.

**Note:**

In some cases, the folded dimensions may not be shown because the application does not know them.

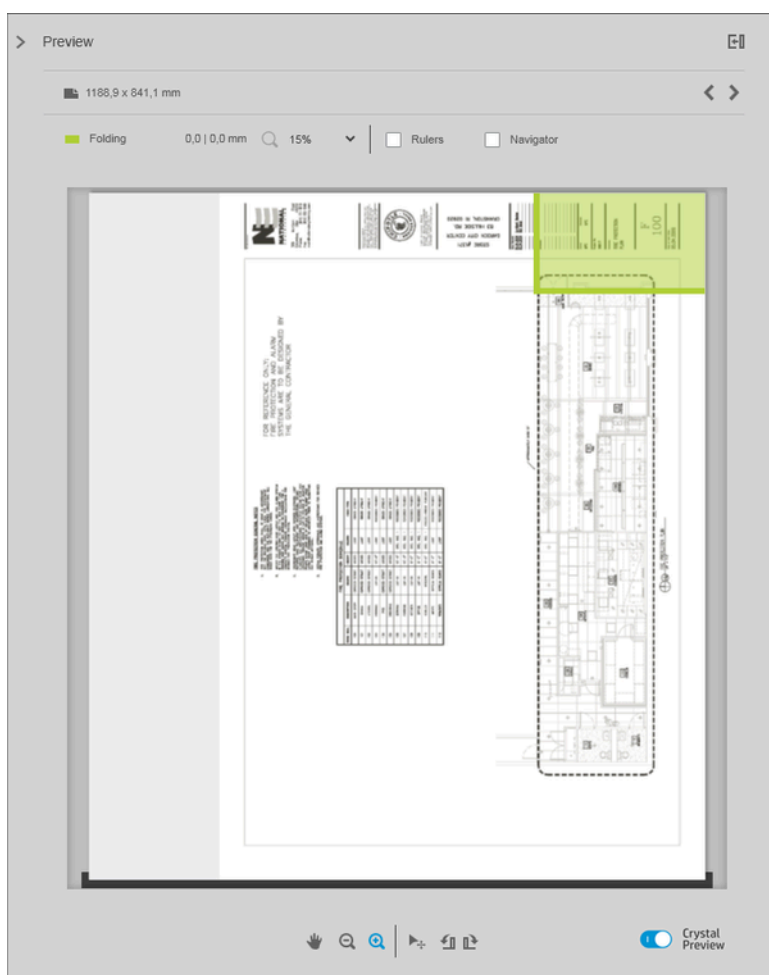

The green rectangle in the preview indicates which part of the page will be on top after folding. If the page contains some header or summary information describing its contents, you may want to ensure that this is in the green rectangle, so that it will be easily visible once the page has been folded. To move the contents of the page, you can use the rotation, alignment, and/or margins options (among the paper source options in the settings pane).

The following steps are recommended to check that the required content is in the green rectangle, and to adjust the page if necessary:

1. Set the default alignment between page and roll in the preferences so that the page is placed on the correct side of the roll (see [Printer-specific preferences](#) on page 72). You need to do this only once.
2. Select the first page of the job to see it in the preview.
3. Zoom in on the green rectangle. You may want to maximize the preview.
4. If required, use the E key on the keyboard to rotate the page 90° counterclockwise or the R key to rotate 90° clockwise.
5. Use the down-arrow navigation key to select and preview the next page.

## Scanning

The following sections provide details for this topic.

### Tip:

If you have no scanner connected, you can still use the printer-specific preferences to set up a hot folder from which you can import files conveniently into a job. See [Printer-specific preferences](#) on page 72.

### Using a multifunction printer that includes a scanner

If you have a multifunction device with a scanner in the printers pane, you can scan directly into HP SmartStream.

1. Use the Embedded Web Server of your multifunction device to set up a scan folder in which scanned pages will be stored for use by HP SmartStream.

Every printer compatible with HP SmartStream includes an Embedded Web Server that you can use to monitor printing activity and perform various other functions from any Web-connected device. You can access the Embedded Web Server by clicking the link in the printers pane.

2. In the HP SmartStream preferences for your multifunction device, set the scan folder to the same folder that you selected in step 1. See [Printer-specific preferences](#) on page 72.
3. Use the control panel of your multifunction device to send a scanned page as a file to HP SmartStream.
4. The application automatically detects the incoming file and displays a notification (see [Notifications](#) on page 64).

#### Note:

New files in a hot folder are automatically detected only if they are newer than the previous file detected in that folder. If you copy old files into the folder, they will not be detected.

5. To import the files into a job, click the hot folder name. All files are imported that have not already been imported into a job. Clicking  opens a window that allows you to select specific files to import.

#### Note:

The number in the icon  tells you how many files are waiting to be imported. If there are no new files, the icon is disabled.

### Connecting an HP PageWide XL scanner

If you have a stand-alone scanner, you must ensure that it is connected to your network.

1. Physically connect it to the network: connect a network cable to the scanner.
2. On the scanner's control panel, click  to open the file manager.
3. Click the **Network** button.



4. Click the **Add Network Connection** button. After clicking it, you should see the following screen.

#### Add Network Connection settings

Contact your network administrator if you need help with any of these settings.

- **Network folder:** Enter the full path name to the location on the network.
- **User name:** The login username for the network server.
- **Password:** The login password for the network server.
- **Label:** This is what your scanner will display in its browse dialogs.
- **Inactivity timeout:** You can set an individual timeout value (in minutes) for your network connections, for added security.
- **Reconnect at logon:** If this is left unchecked, your network connection definition will automatically be deleted when you shut down the scanner. Check the box to tell the scanner to store the connection and reactivate it whenever the scanner is restarted.
- **HP SmartStream:** Check this box to display an icon in the file browser, which helps you to link to the HP SmartStream hot folder.

#### Note:

The scanner and HP SmartStream must point to the same folder.

#### Add the hot folder in HP SmartStream


The following steps provide the complete procedure for this topic.

1. In the HP SmartStream preferences for your scanner, set the scan folder to the same folder that you selected in the scanner's control panel. See [Printer-specific preferences](#) on page 72.
2. When you scan a document, the application automatically detects the incoming file and displays a notification. See [Notifications](#) on page 64.


#### Using an HP PageWide XL scanner

The following steps provide the complete procedure for this topic.

1. Click the **Scan** icon.

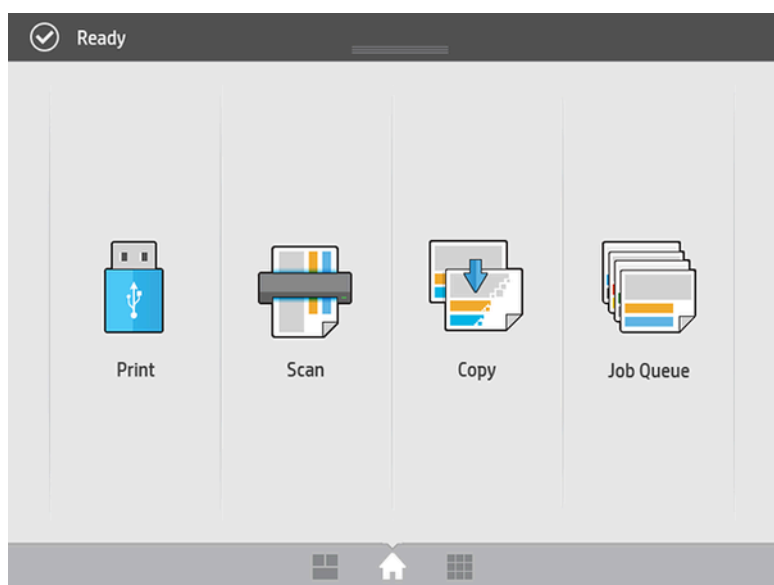

2. Select the scan destination.

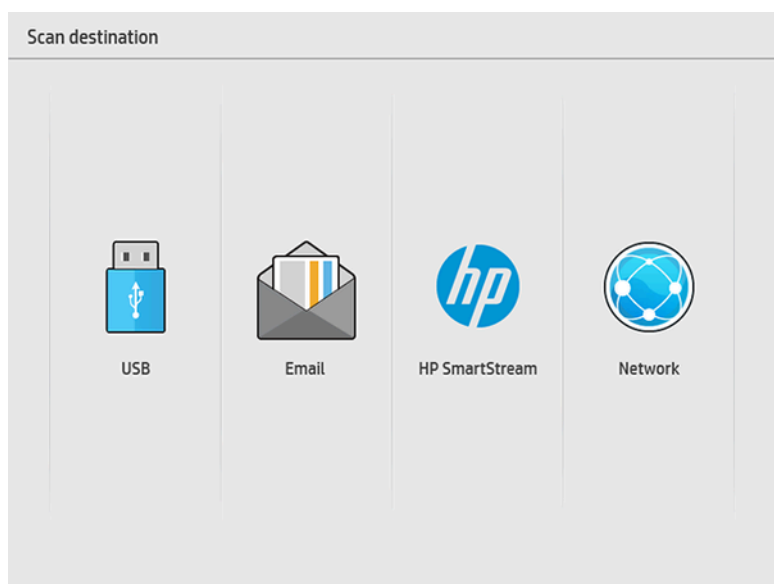

- Scan to USB
  - Scan to email (an email address will be requested)
  - Scan to HP SmartStream
  - Scan to network
3. Select a quickset for this session and click **Continue**. You can scan with the same quickset for the whole session.


**Note:**

Clicking **New scan** at the end of the scanning process does not end the session.

**Note:**


A quickset is associated with a single-page or multipage scan; remember to select the appropriate one.



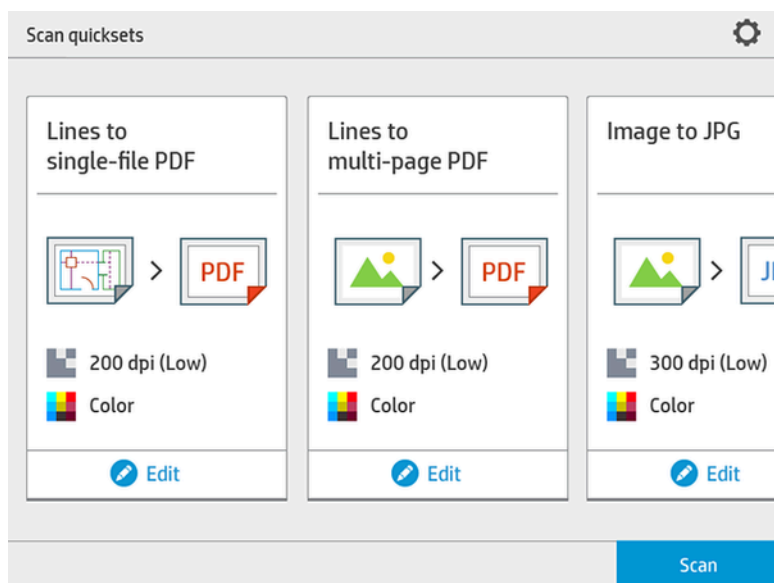


To change a quickset temporarily during a scan session, click **Edit** below the quickset.

4. Insert the original, facing upwards.

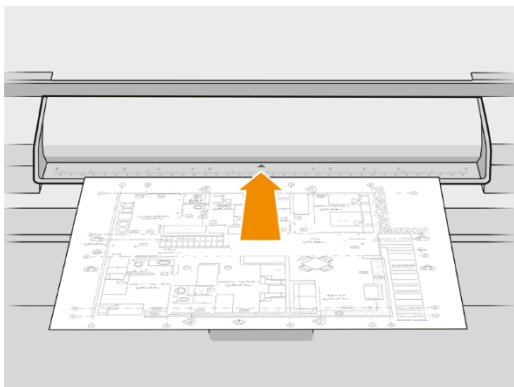

5. Pick up the original when the scanner releases it.

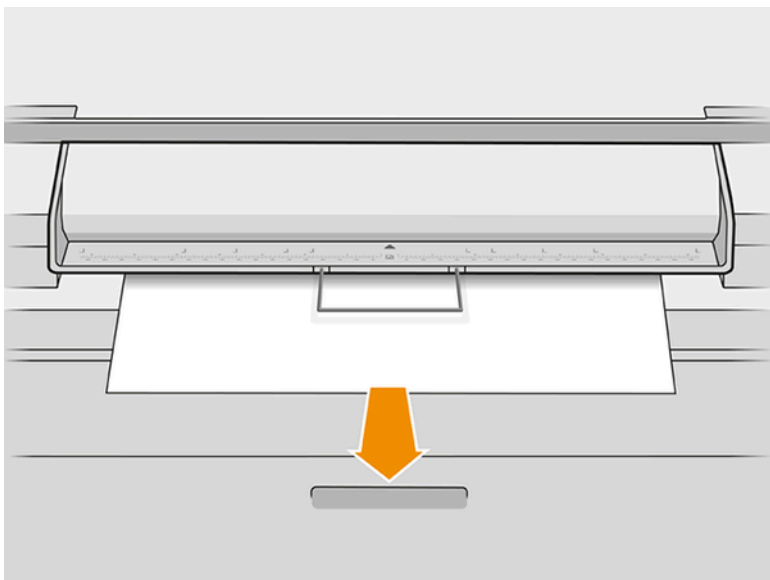


**Tip:**

To release the page, you can select automatic release in the quickset settings, or keep the original on hold until you click **Release page** or insert a new original.


6. If the pre-scan option is activated in the quickset options, the scanner prescans the document, and you can select the area to scan. When the pre-scanned job appears, move or resize the selection area to define the area to scan. In the toolbar, you can zoom in and out of the document, and use the third button to adjust the selected area to fit the screen size.
7. One of the most useful quickset options is the one to scan a multipage or single-page document.
  - Multipage: The result will be a single document containing all the scanned pages.

When scanning a multipage document, insert the next page when prompted.

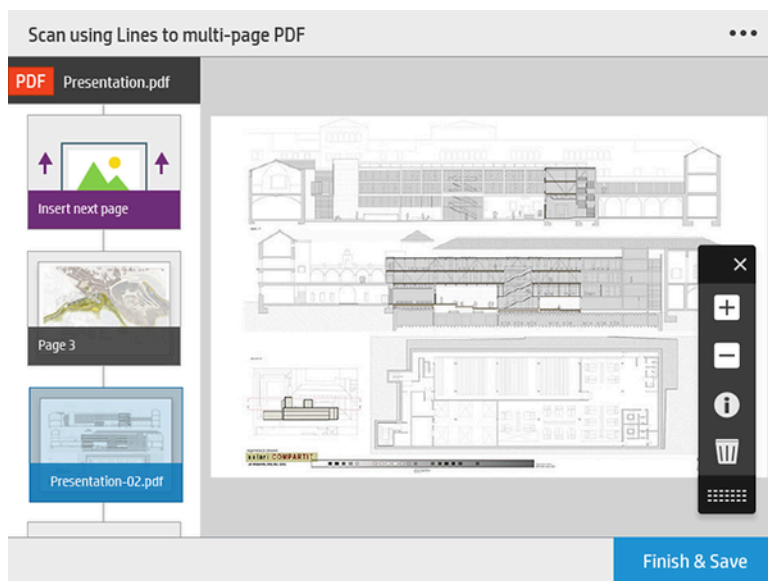

- Single-page: The result will be a single-page PDF or TIFF document.

When scanning a single page, the document is automatically saved. If you insert another page, a new document is created.

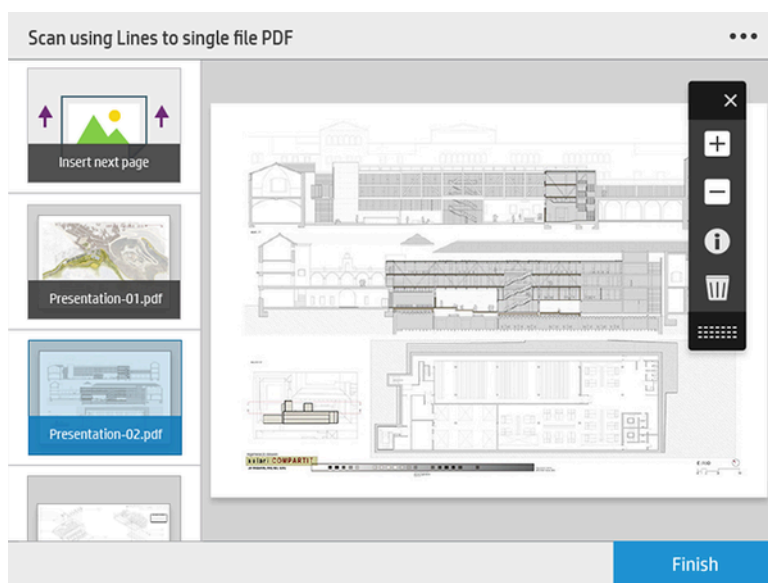

**Note:**

By clicking ... you can change the scan settings for the following pages. Change the settings as you like and click **Apply to next scan**.


**Note:**

You can zoom, and see scanner information about the selected page, with the toolbar buttons. In a multipage document, you can delete a page.

**Note:**

When you are scanning to a USB flash drive, the space remaining on the drive is displayed.

8. Exit the scan by clicking **Finish** (for single-page documents), or save the document and exit by clicking **Send/Save** (for multipage documents).
9. Click **New scan** to scan again with the same settings. Click **Job queue** to see the status of the scanned jobs. With **USB viewer** (only when scanning to USB) you can go to the USB flash drive to confirm that the job is there and preview it.

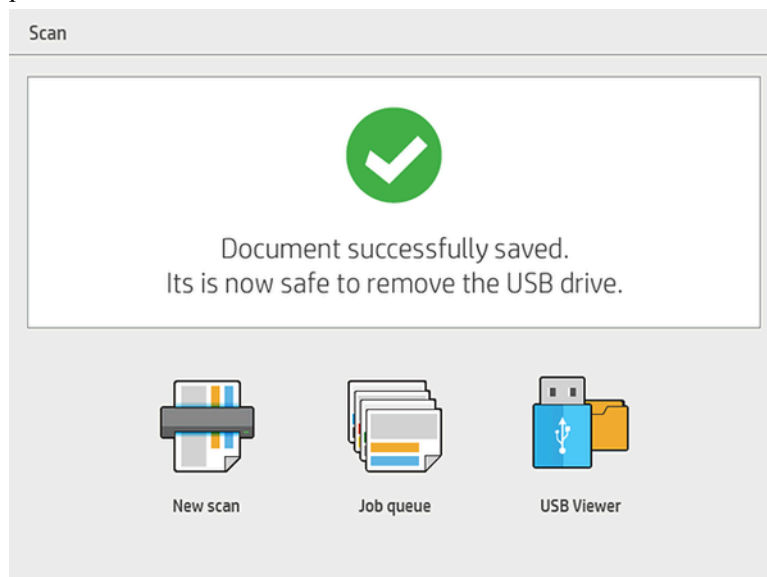

## Accounting

The  icon in the toolbar displays information about the job that may be used for accounting purposes. The icon appears in the job preparation pane and in the history pane; but some of the information is available only from the history pane, after the job has been printed.

You can decide in the general preferences (see [General preferences](#) on page 71) what information is displayed.

The **General** tab normally includes:

- Total number of pages; total area of paper printed (not including wasted paper outside the page area); and total length of paper printed
- Number of pages per paper-type category
- Number of pages per page size
- Number of pages per color mode
- Number of pages per page length
- Area of paper used per print-coverage category

**Note:**

A job analysis module is available that can calculate the print coverage per page in advance, so that you can plan your jobs.

Job details

General Accounting Work log

Pages: 9      Pages area: 4.68 m<sup>2</sup>      Job length: 1.99 m

Table view: Page size / Paper type

|              | A0       | A1       | A4       | Total    |
|--------------|----------|----------|----------|----------|
| Coated Paper | 3        | 3        | 3        | 9        |
| <b>Total</b> | <b>3</b> | <b>3</b> | <b>3</b> | <b>9</b> |

| Print Coverage | < 10%               | 10-50%             | >50%               |
|----------------|---------------------|--------------------|--------------------|
| Mono           | 0.19 m <sup>2</sup> | 0.0 m <sup>2</sup> | 0.0 m <sup>2</sup> |
| Color          | 4.5 m <sup>2</sup>  |                    |                    |

Export OK

In the general preferences (see [General preferences](#) on page 71), you can move two sliders to adjust the three print-coverage categories shown in this tab.

#### Print coverage

Configure job details print coverage categories threshold to classify pages after print.




☐ Apply set threshold to past printed jobs

The units of measurement used in the job details are those you have chosen for the application in general.

If you have selected the Preflight desk, you will see here only the page counts, with no paper types nor printed area.

You can click the **Export** button to export the job details to a file in the PDF or CSV format.

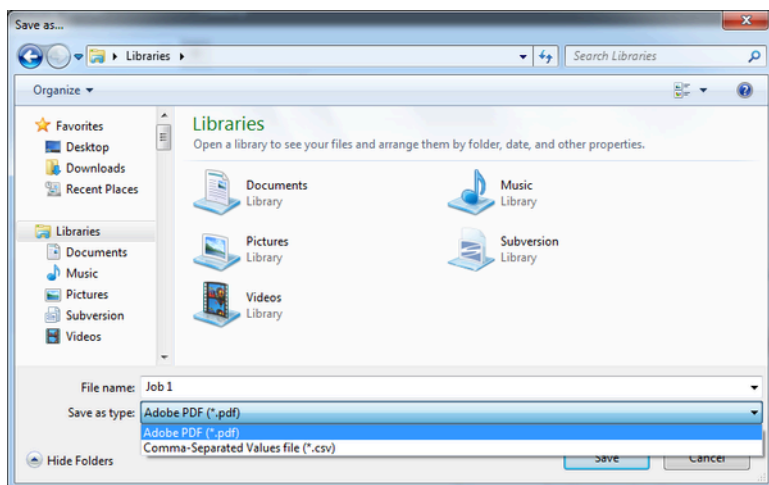

If you have chosen to gather page accounting data from the printer (see [Printer-specific preferences](#) on page 72), the history pane will contain an icon to access the accounting data.

Printing queue

History



| Jobs    |                                                                                                                                                                                                                                                                                       | Result    |       |
|---------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|-------|
| ▶ Job 5 | 1 pages ALDOMA-WS - HP Smart...    | Completed | 16:36 |
| ▶ Job 6 | 1 pages ALDOMA-WS - HP Smart...    | Completed | 16:36 |
| ▶ Job 2 | 1 pages ALDOMA-WS - HP Smart...    | Completed | 16:36 |
| ▶ Job 3 | 1 pages ALDOMA-WS - HP Smart...    | Completed | 16:36 |
| ▶ Job 4 | 1 pages ALDOMA-WS - HP Smart...    | Completed | 16:35 |
| ▶ Job 1 | 1 pages ALDOMA-WS - HP Smart...    | Completed | 16:35 |

The **Accounting** tab contains information that you can attach to the job for accounting purposes.

Job details

General

Accounting

Work log

Use template:

None

Client name:

Job order:

Account ID:

Add to list

Comments:

Export

OK

You can select a previously-created template from the **Use template** list as an alternative to filling in the fields manually. To create a template, click **Create** at the bottom of the **Use template** list. Accounting templates are saved in **My Documents\HP SmartStream\Accounting templates** with the **.smat** extension (HP SmartStream Accounting Template file).

The **Work log** tab contains a summary of the settings that were applied to the printed pages, and a summary of any unsolvable issues.

Job details

General Accounting **Work log**

**Actions** Total: 78

Cropped images 78

**3 unsolvable issues:**

- 1 Missing fonts
- 1 Unprintable layers
- 1 Disabled layers

Export OK

If you want a higher level of accounting details, such as getting to know which users sent jobs to print, and generating and customizing reports with accounting information, consider using HP SmartTracker software. Your service representative can give you more information about HP SmartTracker.

## Submission driver

The HP SmartStream Submission Driver enables you to send content from any application (including CAD and graphics applications) and any file format (including DWF, DWG, Microsoft Office, and so on) to be prepared and printed with HP SmartStream.

The submission driver appears among your system's list of printers and creates a package containing the content to be printed plus the print instructions and accounting information. Once submitted, the package is sent to the hot folder monitored by HP SmartStream. See [Hot folders](#) on page 75.

The submission driver is an ideal companion for HP SmartStream in enterprise environments with Central Reprographic Departments (see [Distributed workflows](#) on page 64), or for anyone using applications that are unable to save HP SmartStream-supported file formats (see [Color management](#) on page 110).

### HP Applications Center

In particular, the submission driver enables you to use HP SmartStream to prepare and print files from the HP Applications Center.

To set this up:

1. Click .
2. Click the **Hot folders** tab.
3. Add a new incoming hot folder and enter its path and name.
4. Check the box **Get files from Applications Center**.

Preferences

General Accounting Printers Presets OCR profiles Hot folders

Applications...

☒ Get files from [HP Applications Center](#)

Get files by entering the URL, username, and password of your HP Applications Center account.

URL:

Username:

Password:

☐ Delete imported files

Delete original files from target folder after importing into job.

Assign preset:

Selected preset will be automatically applied when importing files from this folder.

Add

Cancel Save

5. Enter the Applications Center URL, and your username and password.

The hot-folder toolbar icon will notify you of any Applications Center files in the hot folder, as usual.

### Restrict account IDs

By default, the submission driver accepts any account ID entered by the user, but it can be set up to offer a closed list of permissible account IDs.

1. Go to the driver's **Advanced** tab and select **Account IDs file**.
2. Enter the name of a CSV file containing the list of permissible account IDs.

The CSV file can be automatically generated from HP SmartStream, using the account IDs known to the application. In the **General** tab of the application preferences, click the **Export** button and select a folder in which to create the file.

Preferences

General Printers Presets Hot folders

Show folding size: ☒

Job details

Enable "Account ID" checks before printing

☐ Check whether some Account ID is set

☐ Only Account ID existing on the list permitted

Account ID list:

- Electrical department
- Architects
- Mechanical engineering

Export Manage

Cancel Save

## Troubleshooting

The following sections provide details for this topic.

### Error codes

There are some issues that may cause an application error window to be displayed, showing one or more error codes and descriptions. These are listed in the table below.

**Table 10: Error codes**


| Error code | Short description                                                     | Full description                                                                                                                                                                                                                                    |
|------------|-----------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2001-0199  | Non-recoverable generic database error                                | An internal database error has occurred. Restart the application.<br>If the problem persists, contact your reseller.                                                                                                                                |
| 2002-0186  | Disk error: can't create temporary storage in infrastructure          | The application does not have sufficient system resources to create temporary data. You are recommended to restart the application. Before restarting the application, check that, for example, your hard disk has sufficient free space.           |
| 2002-1086  | Disk error in analysis                                                | The application does not have sufficient system resources to perform the file analysis. It is recommended to restart the application. Before restarting the application you can check if for example your system has sufficient disk space.         |
| 2002-1087  | Analysis: application or resources not found or no access permissions | The application stopped working. One of its resources is not responding. You are recommended to restart the application.<br>If the problem persists, the application may need to be reinstalled. Contact your reseller if necessary.                |
| 2002-2086  | Disk error: can't create temporary storage in job processing          | The application does not have sufficient system resources to process a job you want to print. You are recommended to restart the application. Before restarting the application, check that, for example, your hard disk has sufficient free space. |
| 2002-2087  | Application or resources not found or no access permissions           | The application stopped working. One of its resources is not responding. You are recommended to restart the application.<br>If the problem persists, the application may need to be reinstalled. Contact your reseller if necessary.                |
| 2002-5086  | Disk error: HP-GL/2 can't write to disk                               | The application does not have sufficient system resources to process an HP-GL/2 file. You are recommended to restart the application. Before restarting the application, check that, for example, your hard disk has sufficient free space.         |
| 2002-5186  | Disk error in Imaging Library                                         | The application does not have sufficient system resources to analyze a raster document. You are recommended to restart the application. Before restarting the application, check that, for example, your hard disk has sufficient free space.       |
| 2002-6186  | Disk error in PDF Library                                             | The application does not have sufficient system resources to analyze a PDF document. You are recommended to restart the application. Before restarting the application, check that, for example, your hard disk has sufficient free space.          |



| Error code | Short description                                             | Full description                                                                                                                                                                                                                                     |
|------------|---------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2202-5144  | Disk error: can't create temporary storage in Imaging Library | The application does not have sufficient system resources. You are recommended to restart the application. Before restarting the application, check that, for example, your hard disk has sufficient free space.                                     |
| 2202-8089  | Unsupported printer or required license                       | Check that the printer you are trying to use is supported by the application (see the installation guide). In particular, check that it is a PostScript printer.<br><br>Check that the required licenses are installed (see the installation guide). |
|            | Printer protocol unsupported version. Upgrade SW application. | This application is not compatible with the printer. Contact your reseller for upgrade possibilities, or download the upgrade from the link.                                                                                                         |
|            | Printer protocol unsupported version. Upgrade printer FW.     | The firmware of one of the installed printers is not compatible. Check whether firmware updates are available for your printers, or download the update from the link.                                                                               |

### Troubleshooting tool

There is a troubleshooting tool provided in the HP SmartStream program group, which offers various options to help you to recover from a problem.

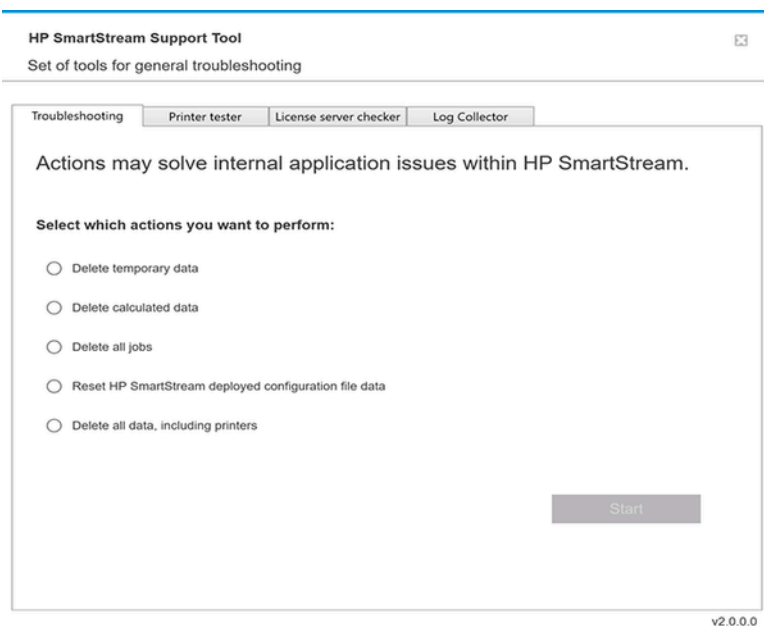

1. **Delete temporary data:** Delete only temporary files in **C:\Users\User\AppData\Local\Temp\HP\HPSmartStream**. The database (folder and files) is not deleted.

Also delete all files in **C:\Users\User\AppData\Local\Roaming\HP\HPSmartStream**.

2. **Delete calculated data:** Delete all items in option 1, plus jobs in preparation. This option can be used if you have a job in preparation that is causing an error, and you cannot delete it any other way.
3. **Delete all jobs:** Delete all items in options 1 and 2, plus all other jobs, including the job history, and all HP SmartStream application data in the Windows registry (persistent settings).
4. **Reset HP Smart Stream Configuration Tool configuration:** Deletes information in the registry related to the latest configuration file applied. This option can be used if you want to reapply the latest configuration file.

- 5. Delete all data, including printers:** Delete all items in options 1 to 4, plus the database. Licenses are not deleted. This option can be used to reset the software if you are experiencing frequent errors; it may be more convenient than reinstalling the software.

Choose the option you wish to use and click **Start**; or click **Close** to use none of them.

## Optional modules for advanced users

Three optional modules are available for HP SmartStream: the document organizer module, the pixel analysis module, and the workflow management module.


Each module requires a specific electronic license. If the license is not present, the features of the module will not appear in the application.

### Document organizer module

The document organizer module allows you to track files that you have already added to a job, and to rename documents and pages in several different ways.

#### Tracking files added to the job

The application remembers which files you have added to your job. When you use the HP SmartStream file explorer to locate more files to add, any files in the folder that you have already added are marked with a blue dot.

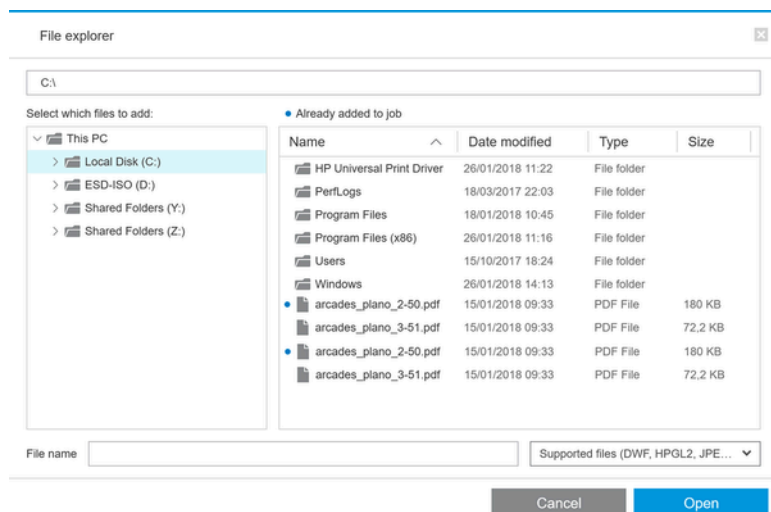

Files that are added by dragging and dropping are also remembered.

However, the application no longer remembers the added files after the job has been printed.

### Rename pages

Documents and pages can be renamed in three different ways: manual renaming, batch renaming, and OCR renaming.

Renaming overwrites the original files. Therefore, if you want to retain the original files, copy them before renaming.

If you rename a single page of a multipage PDF file, the page is extracted from the original document.


DWF, HP-GL/2, and TIFF files are not supported for renaming.

#### Manual renaming


You can rename one or more documents or pages manually.

To rename a page manually:

- Right-click the current page name in the job preparation pane, and select **Rename** from the popup menu.

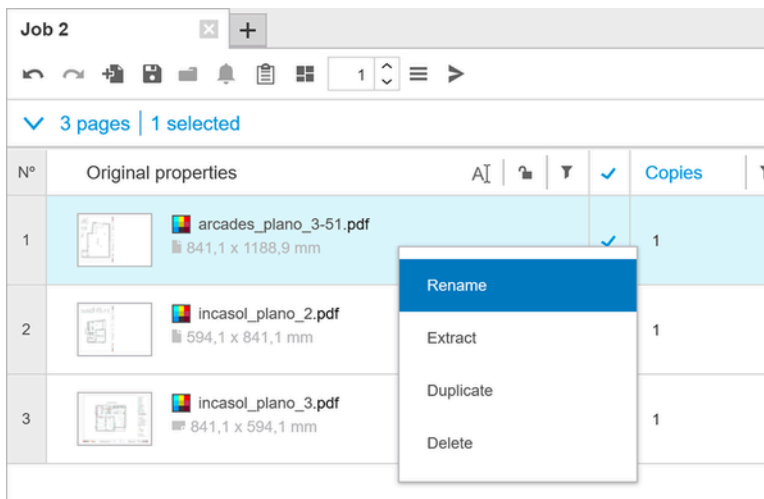


- Alternatively, ensure that the page is selected, and press F2.

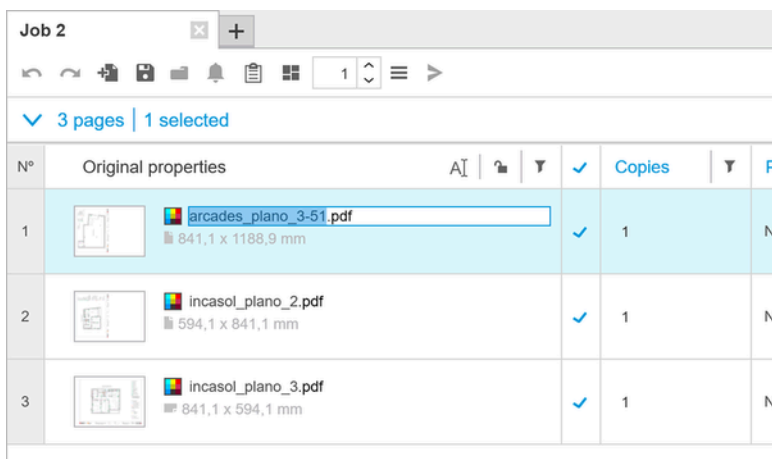

Press Enter to confirm the new name.

To rename the next page, press Tab. To rename the previous page, press Shift Tab.

Manual renaming can also be done in the settings pane.

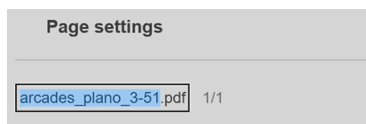

If you enter a name that is already in use, the application will suggest another name.

---

Rename file

---

Do you want to rename "arcades\_plano\_3-51.pdf" to "arcades\_plano\_2-50 (2).pdf" ?

There is already a file with the same name.

---

Cancel
Rename


If you select multiple pages to rename at once, the name you enter will be used for all pages, with an added numerical suffix to distinguish between them. The suffix for the first page will be 1, 01, or 001, depending on the number of renamed pages.

### *Batch renaming*


You can rename multiple documents or pages in a single batch.

First select the pages you want to rename in the job preparation pane. If none are selected, all pages will be renamed.

Near the left of the column headers in the job preparation pane, click  and then **Renaming Center**.

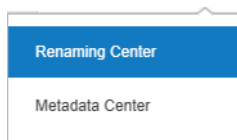

The following dialog box appears, in which you can specify the new filenames that you want to use.

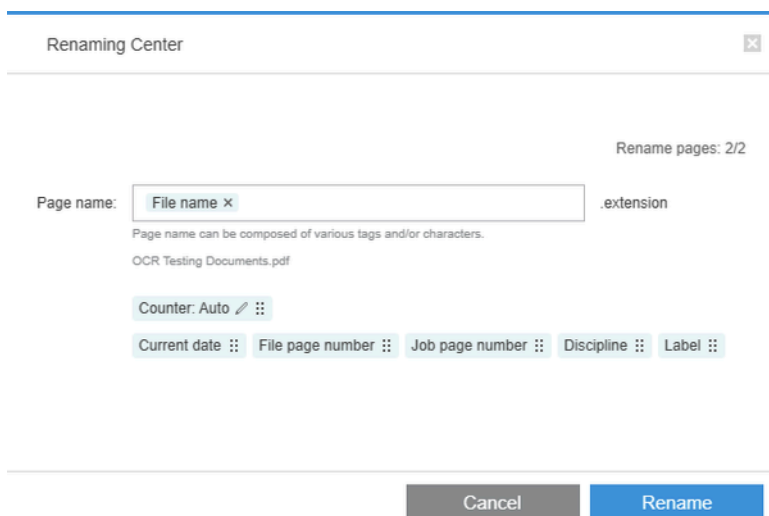


The new page names can be composed of a prefix, a main part, a suffix, and the filename extension (which you cannot edit).


You can fill each part of the new name by entering text (avoid using special characters), and/or by clicking one of the variables below: file name, file page number. and so on.

If used, the **Current date** variable is displayed in the standard format that you have selected in your operating system.

By default, the suffix consists of a numerical counter, starting from 1, 01, or 001, depending on the number of renamed pages. But this is not obligatory: you can remove the counter from the suffix. Alternatively, you can change the starting value and format of the counter by clicking the icon in the counter.

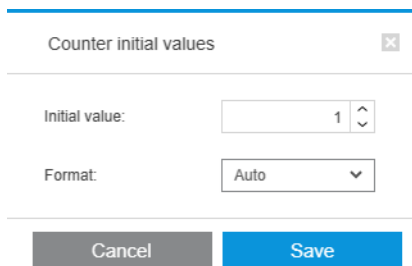

When you have specified how you want to rename the pages, click **Rename** to start renaming.

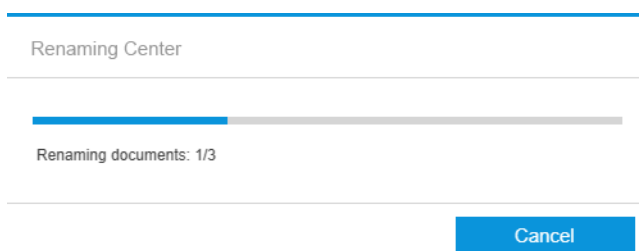

While the renaming operation is in progress, you can cancel it at any time. If you cancel it, all pages are restored to the names they had at the beginning of the operation.

By default, the renamed files remain in their original folder, but you can specify a different batch-rename save folder in the preferences; see [General preferences](#) on page 71.

**Note:**

Any pages whose extensions are not supported by the application will not be renamed.

**Note:**


If you try to give a file a name that already exists in the same folder, the application will modify the new name automatically.

*OCR renaming*


OCR stands for Optical Character Recognition: the software technique of interpreting pixels as text. You can use this technique to obtain a filename to be used in renaming.

First select the pages you want to rename in the job preparation pane. If none are selected, all pages will be renamed.

Near the left of the column headers in the job preparation pane, click  and then **Renaming Center**.

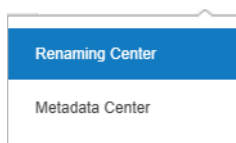

In the Renaming Center dialog box, click **Define OCR areas**.

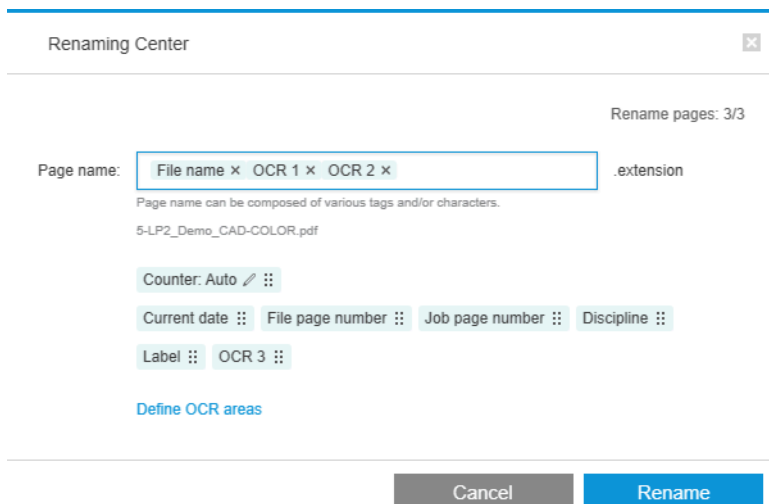

In the preview pane, you can define up to three OCR areas containing text to be used in renaming. Each area is defined by drawing a rectangle around it on the preview image, enclosing the text.


Areas can be added, modified, or deleted.



When you have specified in the Renaming Center dialog box how you want to rename the pages, click **Rename** to start renaming.

#### Autoprofiles

During Optical Character Recognition you can select **Autoprofile**, in which case the application will try to detect a pattern in the text.

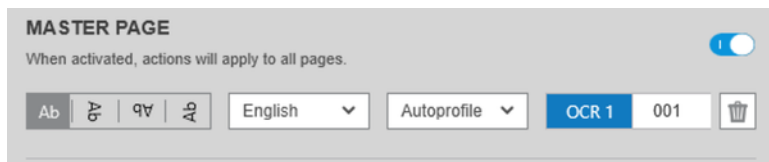

The autoprofile has a tooltip that shows the autodetected pattern.

#### Create a new OCR profile

The **OCR profiles** tab enables you to save named OCR profiles, each one specifying rules for interpreting scanned text.

Preferences

General Accounting Printers Presets **OCR profiles** Hot folders

General

Name:

Profile:

Profile can be composed of various token tags and/or text

Sample: uzs79

1. Click **Create**.
2. Enter a name for the new profile.
3. Enter the profile specification. You can enter characters directly and/or drag one of the patterns shown below.
4. Click **Save** to save the new profile.

Your OCR profiles are listed on the left; you can reorder the list, and delete profiles from it (right-click, then **Delete**).

#### OCR simulation

In the OCR simulation window, you can see the OCR results and manually correct any that need adjustment. You can choose different OCR profiles and see the results.

In the Renaming Center, click **OCR simulation** to check the OCR results before applying them. See [Create a new OCR profile](#) on page 130.

OCR simulation


OCR area:  Profile:  Total files: 50

| Current document name            | OCR result                         |
|----------------------------------|------------------------------------|
| HERepro-002A-folder-A1P-... 1/50 | <input type="text" value="001"/>   |
| HERepro-002A-folder-A1P-... 2/50 | <input type="text" value="001.b"/> |
| HERepro-002A-folder-A1P-... 3/50 | <input type="text" value="002"/>   |
| HERepro-002A-folder-A1P-... 4/50 | <input type="text" value="003"/>   |
| HERepro-002A-folder-A1P-... 5/50 | <input type="text" value="004"/>   |
| HERepro-002A-folder-A1P-... 6/50 | <input type="text" value="005"/>   |
| HERepro-002A-folder-A1P-... 7/50 | <input type="text" value="DOG"/>   |
| HERepro-002A-folder-A1P-... 8/50 | <input type="text" value="007"/>   |
| HERepro-002A-folder-A1P-... 9/50 | <input type="text" value="008"/>   |

When you have finished with this window, you can click **Apply** to apply the results as displayed, or **Cancel** not to apply them. Both buttons close the window.

Zoom to legend box


In the preview zoom drop-down menu, select **Zoom to legend box**. This displays the title box in the viewport and helps you to identify and focus on a document's legend box.

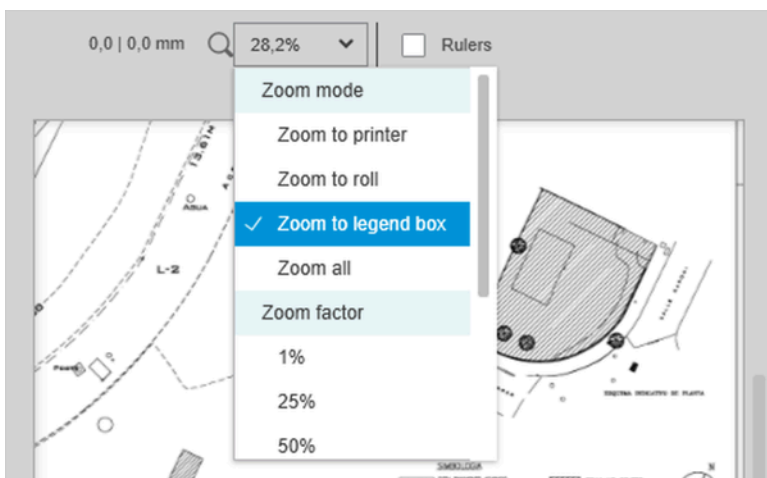

### Add metadata

First select in the job preparation pane the pages to which you want to add metadata. If none are selected, the metadata will be added to all pages.

Near the left of the column headers in the job preparation pane, click **T** and then **Metadata Center**.

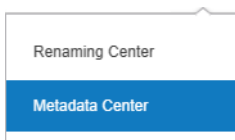

In the Metadata Center dialog box, you can enter metadata that will appear in the Label or Discipline column in the job preparation pane. As in a renaming operation (see [Batch renaming](#) on page 128), there are various variables you can use, including one OCR variable (see [OCR renaming](#) on page 129).

Metadata Center
✕

Pages selected: 3/3

Copy to:

Label
▼

File name ✕

File metadata and/or column values can be composed of various tags and/or characters.

5-LP2\_Demo\_CAD-COLOR

Counter: Auto ✎ ::

Current date ::

File page number ::

Job page number ::

[Define OCR areas](#)

Cancel

Apply

When you have specified the metadata you want to add, click **Apply**.



## Pixel analysis module

With the pixel analysis module, the application can calculate the pixel coverage of pages and classify them into custom categories that you can set in the preferences. A report then appears in the job details, with an estimate of the total page cost.

### Categories and thresholds

If the pixel analysis module license is active, you will find the pixel coverage section at the bottom of the application's accounting preferences, in which you can specify pixel coverage thresholds and categories.

The screenshot shows the 'Preferences' window with the 'Accounting' tab selected. Under 'Coverage thresholds', there is a slider from 0 to 100 with markers at 10, 50, and 100. Below this is a table with columns 'Category name', 'Threshold', and 'Cost: Sq. m cost'. The table lists five categories: Mono lines, Color lines, Low-density image, High-density image, and Custom category. The 'Custom category' row is highlighted with a blue border.

| Category name      | Threshold                                 | Cost: Sq. m cost |
|--------------------|-------------------------------------------|------------------|
| Mono lines         | Grayscale (0-10%)                         | 12 \$            |
| Color lines        | Color (0-10%)                             | 3 \$             |
| Low-density image  | Color and grayscale (11-50%)              | 40 \$            |
| High-density image | Color and grayscale (51-100%)             | 7 \$             |
| Custom category    | To add a 5th category, type a custom name | 0 \$             |

Below the table, there is a checkbox labeled 'Calculate job details in sq. m per source'. If selected, sq. m will be calculated per page size instead of roll size.

When you use the application for the first time, default categories are set up as shown above, with no prices.

You can edit these categories and set prices for each category, per square meter or per page. Costs can be calculated for the total amount of paper used (the roll width) or only for the paper that is actually printed on (the page width).

The fifth category is optional. To use it, just enter a name of your own choice where you see **Custom category** on the screen. You will then see a extra marker in the threshold slider, as shown below.

The screenshot shows the 'Preferences' window with the 'Accounting' tab selected. Under 'Coverage thresholds', there is a slider from 0 to 100 with markers at 10, 50, 87, and 100. Below this is a table with columns 'Category name', 'Threshold', and 'Cost: Sq. m cost'. The table lists five categories: Mono lines, Color lines, Low-density image, High-density image, and Super-high-density. The 'Super-high-density' row is highlighted with a blue border.

| Category name        | Threshold                     | Cost: Sq. m cost |
|----------------------|-------------------------------|------------------|
| Mono lines           | Grayscale (0-10%)             | 12 \$            |
| Color lines          | Color (0-10%)                 | 3 \$             |
| Low-density image    | Color and grayscale (11-50%)  | 40 \$            |
| High-density image   | Color and grayscale (51-87%)  | 7 \$             |
| Super-high-density x | Color and grayscale (88-100%) | 10 \$            |

When you click **Save**, your changes are saved and applied to all past as well as future jobs.

### Calculating pixel coverage

If the pixel analysis module license is active, the **Coverage** column appears in the job preparation pane. This column is visible by default, but it can be made to disappear or reappear like the other columns.

See [How can I adjust the HP SmartStream window?](#) on page 63.

To analyze pixel coverage, just click  in the column header. Pixel coverage can be calculated for a single page, or for all pages in a job.

| Original properties |                                             | A1 |  | Y | ✓ | Coverage  | Y | Copies | Y | Preset | Y |
|---------------------|---------------------------------------------|----|--|---|---|-----------|---|--------|---|--------|---|
|                     | arcades_plano_3-51.pdf<br>841,1 x 1188,9 mm |    |  |   | ✓ | 8.3% / 0% |   | 1      |   | None   |   |
|                     | arcades_plano_2-50.pdf<br>594,1 x 841,1 mm  |    |  |   | ✓ | 4.4% / 0% |   | 1      |   | None   |   |
|                     | arcades_plano_2-50.pdf<br>594,1 x 841,1 mm  |    |  |   | ✓ | Calculate |   | 1      |   | None   |   |

When pixel coverage has been calculated, the **Coverage** column displays two values: the total percentage coverage of the surface, and the color percentage coverage.

Coverage of pages or documents can be recalculated at any time.

### Job details

The job details window includes a table summarizing the pixel coverage analysis.

Job details

General
Accounting
Work log

Pages
Pages area
Job length
Job cost

5
3,54 m<sup>2</sup>
4,06 m
7,08 \$

Job composition
Table view:
Page size / Paper type

|                         | A1       | A0       | Total    |
|-------------------------|----------|----------|----------|
| Plain Paper less tha... | 3        | 1        | 4        |
| Natural Tracing Paper   | 0        | 1        | 1        |
| <b>Total</b>            | <b>3</b> | <b>2</b> | <b>5</b> |

Pixel coverage

| Category                     | Pages | Sq. m               | Sq. m cost |
|------------------------------|-------|---------------------|------------|
| Mono lines (0-10%)           | 5     | 3,54 m <sup>2</sup> | 7,08 \$    |
| Color lines (0-10%)          | 0     | 0,0 m <sup>2</sup>  | 0 \$       |
| Low-density image (11-50%)   | 0     | 0,0 m <sup>2</sup>  | 0 \$       |
| High-density image (51-100%) | 0     | 0,0 m <sup>2</sup>  | 0 \$       |

Export
OK

Click **Export** to export the job details report to a CSV or PDF file. The exported report includes a detailed list of all pages with page statistics.

hp SmartStream **Job 86** 1/2

**Accounting**

Export date: 27/10/2017 - 14:25 h Client name: Jaume  
 Job order: 1 Account ID: 1

Comments: Primer Test

**General**

9 Pages 6,13 m<sup>2</sup> Pages area 7,28 m Job length 29,19 \$ Job cost

Details: Page size / Paper type

|                                    | Long plot | B0 (ISO) | A0       | B2 (ISO) | Letter   | Total    |
|------------------------------------|-----------|----------|----------|----------|----------|----------|
| Plain Paper (70 g/m <sup>2</sup> ) | 1         | 2        | 1        | 1        | 4        | 9        |
| <b>Total</b>                       | <b>1</b>  | <b>2</b> | <b>1</b> | <b>1</b> | <b>4</b> | <b>9</b> |

### Workflow management module

The workflow management module allows HP SmartStream to use Job Definition Format (JDF) files.

JDF is a technical standard in use with XML files. HP SmartStream JDF supports job settings such as job name, job copies, and collate; and document settings such as number of copies, color mode, and destination.

When a JDF file is added it will be analyzed as a separate job, regardless of the job in which it was inserted.

Once the JDF file has been analyzed, only the files referenced by the JDF will exist as documents in the application; the JDF file itself is not preserved as an item within the application (as with SMJ and ZIP files).

### Ink-density profile

The ink-density profile allows you to select the percentage of ink to be used for printing a job.

#### Notice:

This feature is available only for the HP PageWide XL Pro 10000 printer.

Ink density: 100% ^

Paper type: ✓ 100%

Page copies: 90%

80%

70%

60%

50%

▼ Cropping

Crop mode:

## How to use non-HP printers with HP SmartStream

The following sections provide details for this topic.

### Introduction

HP SmartStream can print to some non-HP large-format printers by using specific drivers, each of which may cover multiple non-HP printers.

**Table 11: Officially supported printers and their drivers.**

| Printer model | Windows driver |
|---------------|----------------|
| OCE TDS600    | OCE WPD1.22    |

| Printer model         | Windows driver                                                                   |
|-----------------------|----------------------------------------------------------------------------------|
| OCE TDS700            | OCE WPD2.13                                                                      |
| OCE TDS750            |                                                                                  |
| OCE TDS800            |                                                                                  |
| OCE TDS860            |                                                                                  |
| OCE PLOTWAVE 750      |                                                                                  |
| OCE PLOTWAVE 900      |                                                                                  |
| OCE CW600             |                                                                                  |
| OCE CW650             |                                                                                  |
| OCE CW500             |                                                                                  |
| OCE CW700             |                                                                                  |
| KIP 5000 – 5000 MF    | KIP wide-format driver installer v.8.159.0.0 WHQL - GL2 v.0.3.4103.159 (GL2/RTL) |
| KIP 7000 – 7000 MF    |                                                                                  |
| KIP 7700 – 7700 MF    |                                                                                  |
| KIP 8000              |                                                                                  |
| KIP 9900              |                                                                                  |
| RICOH AFICIO MP W5100 | RICOH Aficio MP W5100 PS (v.6.0.0.0)                                             |
| XEROX DOCUWIDE 6055   | XEROX WHQL Driver version 1.8.2                                                  |


### Installing the printer

Before you can add any printers, the software must be non-HP licensed. The license for non-HP printers enables the non-HP mode in SmartStream, so users will be able to print to multiple non-HP printers with only one license.

Contact your HP sales representative to acquire an EON code with a non-HP full license (T9B46AAE: HP SmartStream Print Controller for Non-HP MV-HV devices E-LTU). You can test the new functionality by using the trial license for non-HP printers for 60 days. See how to get the EON code for the trial license here: <http://www.hp.com/go/smartstreampagewidexl/software>.

Once the non-HP license is added to the License Manager, follow these instructions to add non-HP printers:

1. Click **Preferences** near the top right of the window.
2. Click the **Printers** tab.
3. Click the **Add printer** button.
4. Click **Add non-HP large format printer** (visible only when there are compatible printer drivers installed in the system).

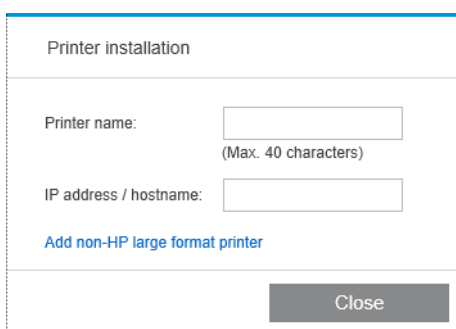


Printer installation

Printer name:   
(Max. 40 characters)

IP address / hostname:

[Add non-HP large format printer](#)

5. Give the printer a name (optionally) and select a driver.

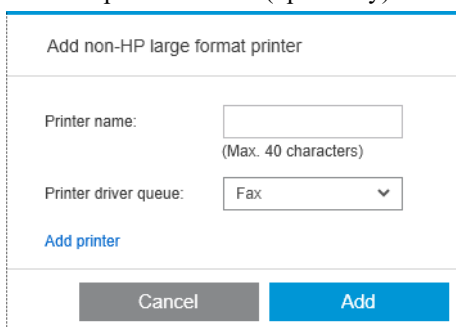

Add non-HP large format printer

Printer name:   
(Max. 40 characters)

Printer driver queue:

[Add printer](#)

**Note:**

Only drivers that are installed and compatible with HP Smartstream will appear; so you must install the driver in advance.

6. Click the **Add** button.


**Preparing a job**

Non-HP printers are driver-supported in HP SmartStream, which means that there are some differences in functionality compared with HP printers.

In the job preparation or settings pane you will be able to edit only the following print settings for each page:

- General settings: Color mode
- Page options: Page size, scale, orientation, alignment on page, rotation on page
- Cropping
- Advanced options: Copies

Print settings can be changed in either the job preparation pane or the settings pane. Other settings must be defined at job level, with the  icon.

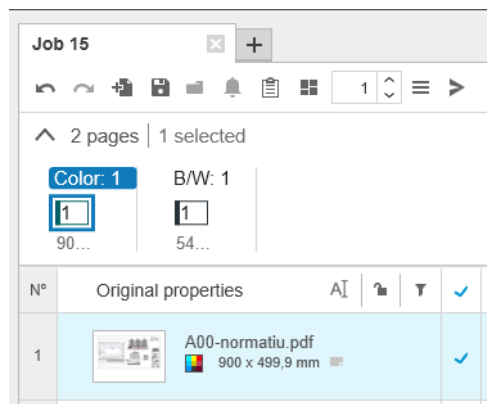

Job 15

2 pages | 1 selected

Color: 1 B/W: 1

90... 54...

| N° | Original properties                                                                                                    | A <sub>1</sub> | A <sub>2</sub> | A <sub>3</sub> | ✓ |
|----|------------------------------------------------------------------------------------------------------------------------|----------------|----------------|----------------|---|
| 1  |  A00-normatiu.pdf<br>900 x 499,9 mm |                |                |                | ✓ |

Here you can define the following job settings or actions:

- Copies
- Collate
- Revert to original page order
- Revert to custom page order
- Print job
- Extract
- Delete job

For non-HP printers, **Advanced options** at job level is enabled within the above list. Select this option to open the printer driver. Here you can change driver default values and save them, so that they apply to the whole job. In this way, you can define additional settings such as the output destination or print quality.

However, the following driver settings will not be saved: they are always overwritten by those defined at page level in the job preparation pane.

- General settings: Color mode
- Page options: Page size, scale, orientation, alignment on page, rotation on page

Therefore, you are not recommended to change these settings in the driver.

### Other considerations

Compared with HP printers, non-HP printer integration in HP SmartStream has some limitations in the following areas.

#### Printer status

Only three statuses are reported.

- Ready
- Paused
- Error

#### Printer queue

Jobs being processed are categorized based on the submittal process instead of the printing process.

- Submitting
- Submitted
- About to submit
- Preparing to submit
- Waiting to submit

## History

Jobs sent to print are categorized as Submitted, Failed, or Canceled.

## Job summary

No printer paper type field is included.

Job details

General
Accounting
Work log

Pages
13

Pages area
1.9379 m<sup>2</sup>

| B2 (ISO) | Letter | Arch E2 | Total |
|----------|--------|---------|-------|
| 8        | 4      | 1       | 13    |

| Print Coverage | <10%                 | 10-50%               | >50%                 |
|----------------|----------------------|----------------------|----------------------|
| Mono           | 0.000 m <sup>2</sup> | 0.000 m <sup>2</sup> | 0.000 m <sup>2</sup> |
| Color          | 0.000 m <sup>2</sup> |                      |                      |

Export
OK

## Resolution center

Alerts of three kinds do not appear.

- Output destination
- Rolls
- Paper size mismatch

## Preview

Three features are disabled.

- Crystal Preview
- Zoom to roll
- Zoom to printer

## Presets

Only some of the settings available when defining a preset will be applied to a non-HP printer.

- Color mode
- Print quality
- Page options (cutting lines, rotation, paper alignment)
- Cropping

## Printer preferences

Only some of the printer preference settings are available.

- Printer name
- Print quality
- Remove white areas
- Rotation
- Page/image alignment
- Roll/page alignment
- Content in printer margin
- Color options

- Nesting

### Other limitations

This topic explains the concepts involved in this subject.

- Print-preview orientation inconsistency: If the printer has a **Save paper** setting activated, the orientation of the HP SmartStream preview may not match the orientation of the print.
- Long plots: Some printers may not permit prints longer than 5 m, which will be canceled.

## Shortcut keys

You can use keyboard shortcuts (keys or combinations of keys) to do things that you would otherwise do with a mouse.

### Overall selectors

This topic provides a full set of reference information for this subject.

**Table 12: Overall selectors**

| Key               | Function                                                                    |
|-------------------|-----------------------------------------------------------------------------|
| Esc               | Cancel                                                                      |
| F3                | Maximize job preparation pane (close other panes) or restore previous state |
| F4                | Printers panel open/close                                                   |
| F5                | Navigator panel open/close                                                  |
| F6                | Preview panel open/close                                                    |
| F7                | Settings panel open/close                                                   |
| Tab               | Tabulate through content                                                    |
| Q                 | Printing queue tab                                                          |
| Alt E             | Rotate left                                                                 |
| Alt R             | Rotate right                                                                |
| Y                 | History tab                                                                 |
| O                 | Options menu                                                                |
| F                 | Freeze column on/off                                                        |
| J                 | Job preparation tab<br>In job preparation tab, focus on job                 |
| K                 | Preferences                                                                 |
| Enter or Spacebar | Press selected button, or select element in focus                           |
| Home              | Go to first page (or first of selection)                                    |



| Key                     | Function                               |
|-------------------------|----------------------------------------|
| End                     | Go to last page (or last of selection) |
| Page Up or up arrow     | Go to previous page                    |
| Page Down or down arrow | Go to next page                        |
| Left arrow              | Scroll left                            |
| Right arrow             | Scroll right                           |

### Icon-toolbar selectors

This topic provides a full set of reference information for this subject.

**Table 13: Icon-toolbar selectors**

| Key          | Function                                   |
|--------------|--------------------------------------------|
| Ctrl D       | Duplicate job                              |
| Ctrl W       | Remove job                                 |
| Ctrl R       | Resolution center                          |
| Ctrl T       | Nest job on/off                            |
| Shift Ctrl T | Nest drop-down options                     |
| Ctrl O       | Open/add documents                         |
| Shift Ctrl O | Original position order                    |
| Ctrl P       | Print                                      |
| Shift Ctrl P | Job options                                |
| Ctrl S       | Save                                       |
| Ctrl F       | Hot folder (open drop-down menu and focus) |
| Ctrl J       | Job details                                |
| Ctrl Z       | Undo                                       |
| Shift Ctrl Z | Redo                                       |
| Shift Ctrl X | Extract                                    |
| Shift Ctrl C | Focus job copies                           |
| Shift Ctrl M | Restore manual/custom order                |

| Key        | Function |
|------------|----------|
| Ctrl Enter | Send     |

## Globals

This topic provides a full set of reference information for this subject.

**Table 14: Globals**

| Key                | Function                                     |
|--------------------|----------------------------------------------|
| F1                 | Help (open user's guide)                     |
| F2                 | Rename active tab                            |
| Alt F4             | Close application                            |
| Shift F10          | Display shortcuts                            |
| Ctrl W             | Cancel active job in print queue or history  |
| Shift Ctrl W       | Cancel all in print queue                    |
| Ctrl R             | Release active job in print queue or history |
| Shift Ctrl R       | Release all in print queue                   |
| Ctrl U             | Details, or collapse current printer         |
| Ctrl I             | Drop-down information on printer status      |
| Ctrl A             | Select all (with focus on pane)              |
| Ctrl F             | Focus on search in history                   |
| Ctrl H             | Hold active job in print queue or history    |
| Shift Ctrl H       | Hold all in print queue                      |
| Ctrl N             | New tab                                      |
| Ctrl X             | Cut text                                     |
| Ctrl C             | Copy text                                    |
| Ctrl V             | Paste text                                   |
| Shift Ctrl N       | New job with selection                       |
| Windows up arrow   | Maximize                                     |
| Windows down arrow | Minimize                                     |

## Preview selectors

This topic provides a full set of reference information for this subject.

**Table 15: Preview selectors**

| Key                          | Function                                                                                                    |
|------------------------------|-------------------------------------------------------------------------------------------------------------|
| Esc                          | Cancel crop                                                                                                 |
| Ctrl 0                       | Zoom all                                                                                                    |
| Ctrl -                       | Zoom out                                                                                                    |
| Ctrl +                       | Zoom in                                                                                                     |
| E                            | Rotate left                                                                                                 |
| R                            | Rotate right                                                                                                |
| H                            | Select Hand tool (pan)                                                                                      |
| L                            | Rulers on/off                                                                                               |
| Z                            | Select Zoom-in tool                                                                                         |
| X                            | Crystal Preview on/off                                                                                      |
| C                            | Select Crop tool                                                                                            |
| V                            | Select Move tool                                                                                            |
| Shift                        | Scale proportionally with the Move tool                                                                     |
| Ctrl                         | Enable mouse wheel with the zoom tool selected                                                              |
| Alt                          | Temporary inverse zoom (resumes previous state on release)                                                  |
| Spacebar                     | Temporarily select hand tool (resumes previous state on release)                                            |
| Ctrl Spacebar                | Temporarily select zoom (resumes previous state on release)                                                 |
| Enter or Spacebar or C       | Confirm crop                                                                                                |
| < or up arrow or Page Up     | Previous                                                                                                    |
| > or down arrow or Page Down | Next                                                                                                        |
| Arrow keys                   | Scroll with the Hand tool<br>Go to an adjacent page with the Move tool<br>Move the image with the Crop tool |

## Job selectors

These shortcuts can be used in job preparation, in the job queue, or in the history.

**Table 16: Job selectors**

| Key            | Function     |
|----------------|--------------|
| Ctrl 1         | First job    |
| Ctrl 2 to 8    | Job 2 to 8   |
| Ctrl 9         | Last job     |
| Ctrl Tab       | Next job     |
| Shift Ctrl Tab | Previous job |
| Ctrl D         | Deselect all |

## HP SmartTracker


HP SmartTracker has been designed to help you control your printing costs and accurately charge your customers for the prints you do for them.

### Notice:

HP SmartTracker software is compatible only with Original HP ink supplies.


## Launching HP SmartTracker the first time

The first time you access the application, a popup with the EULA (End User License Agreement) terms is displayed, as shown below:

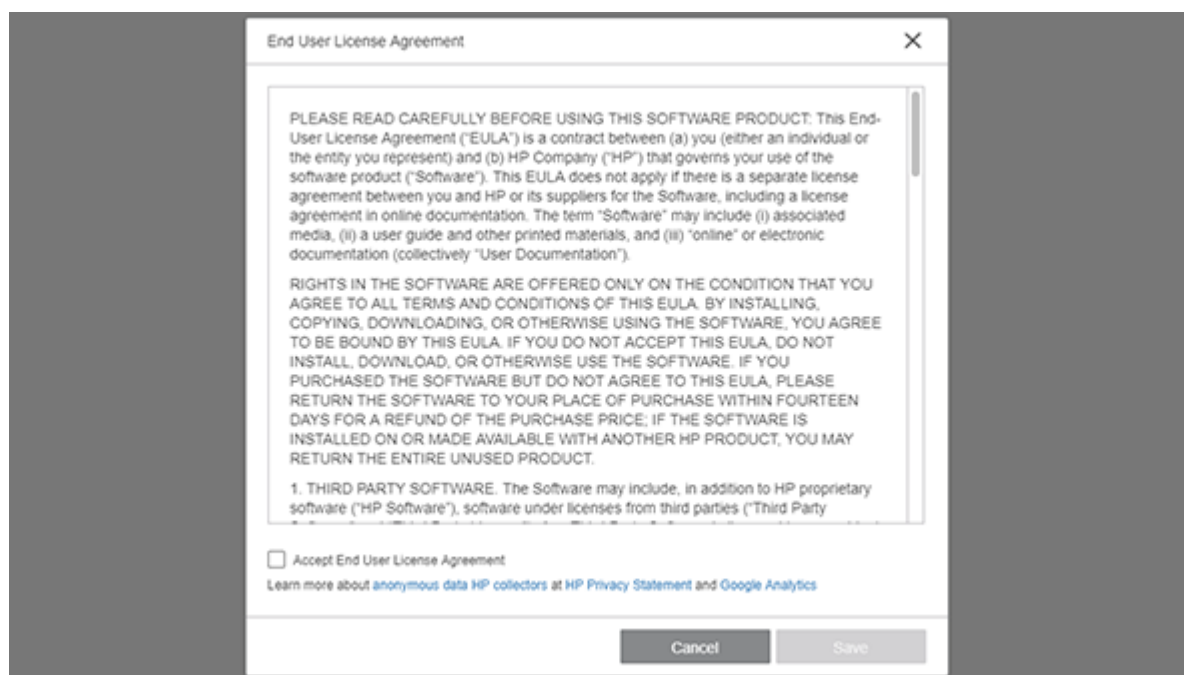

You must accept these terms and click **Save** in order to use HP SmartTracker.


If at any time you want to stop sending personal data, if logged-in as an administrator, you can opt out. To do so, or to review the data collection terms and conditions, click the  icon on the main screen and choose **Product Improvement**. A window opens as shown below:

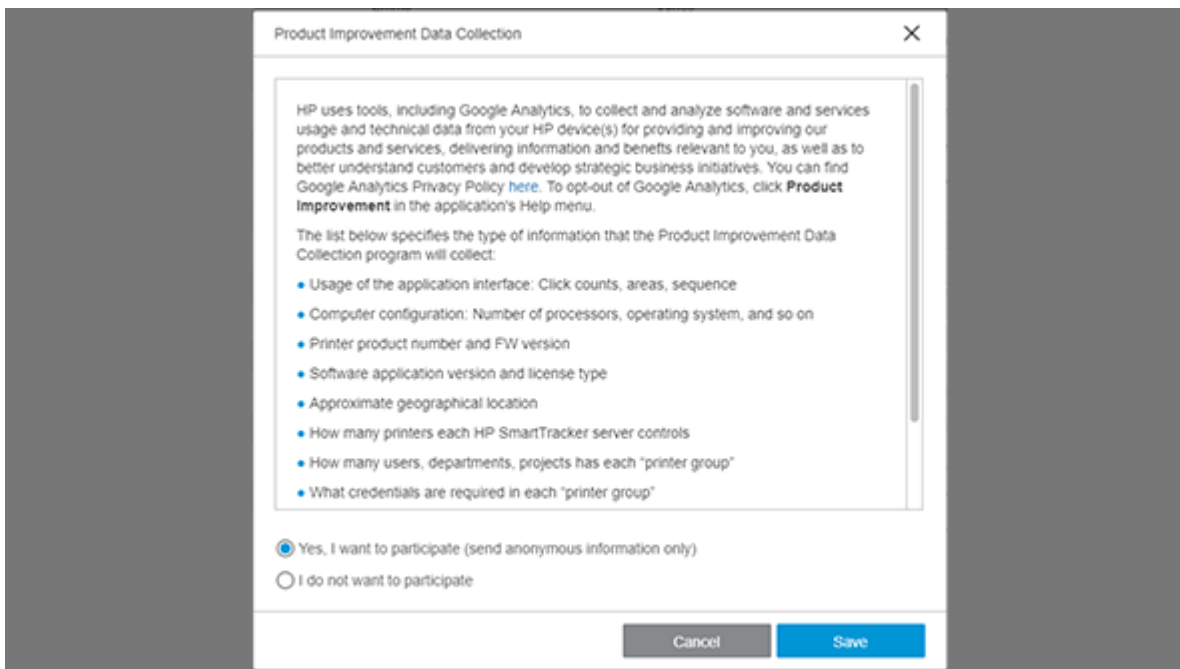

Choose whether you want to participate or not and click the **Save** button.

## Connectivity


The first time that the HP SmartTracker application opens, the **Preferences** panel is automatically displayed. The **Connectivity** tab is selected by default.

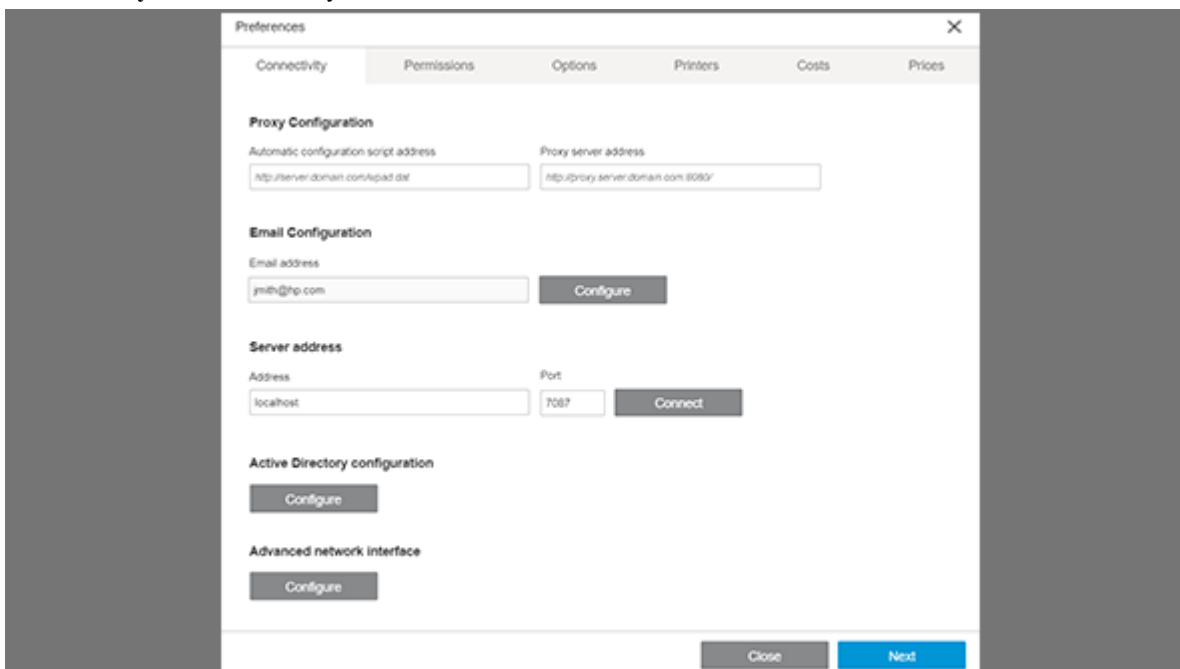


### HP SmartTracker's email service

HP SmartTracker has an email service that it uses whenever it needs to send messages. It is highly recommended to configure this service during setup.

To configure this service, click the **Configure** button. The following window is displayed:

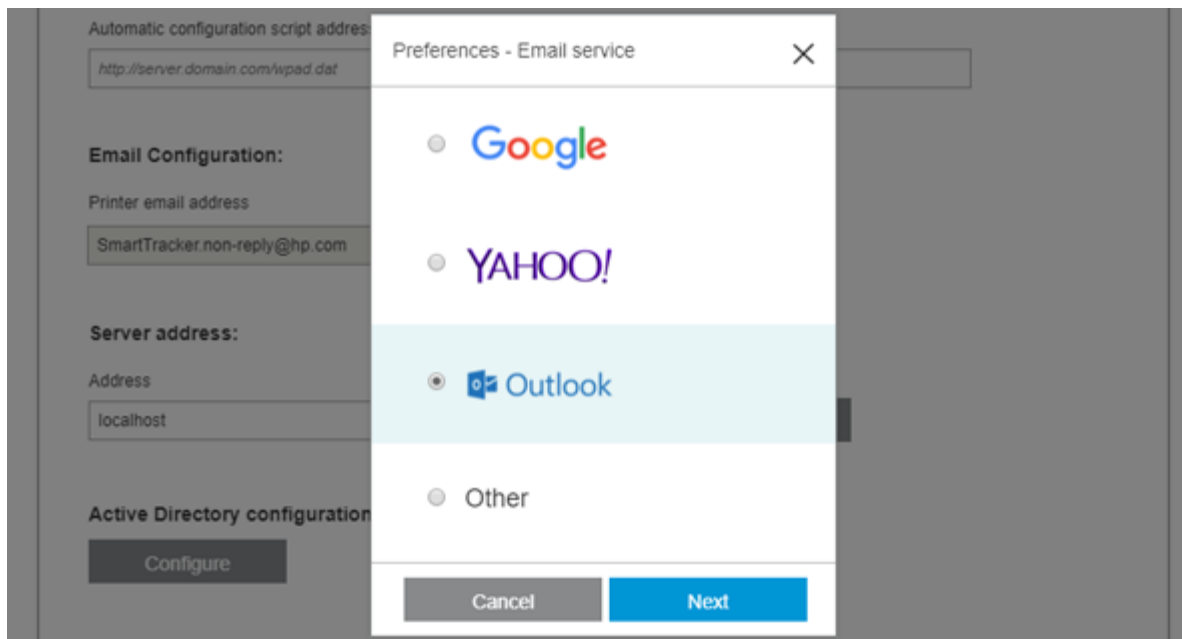

Configure the preferred e-mail service, then click **Next**. The following window is displayed:

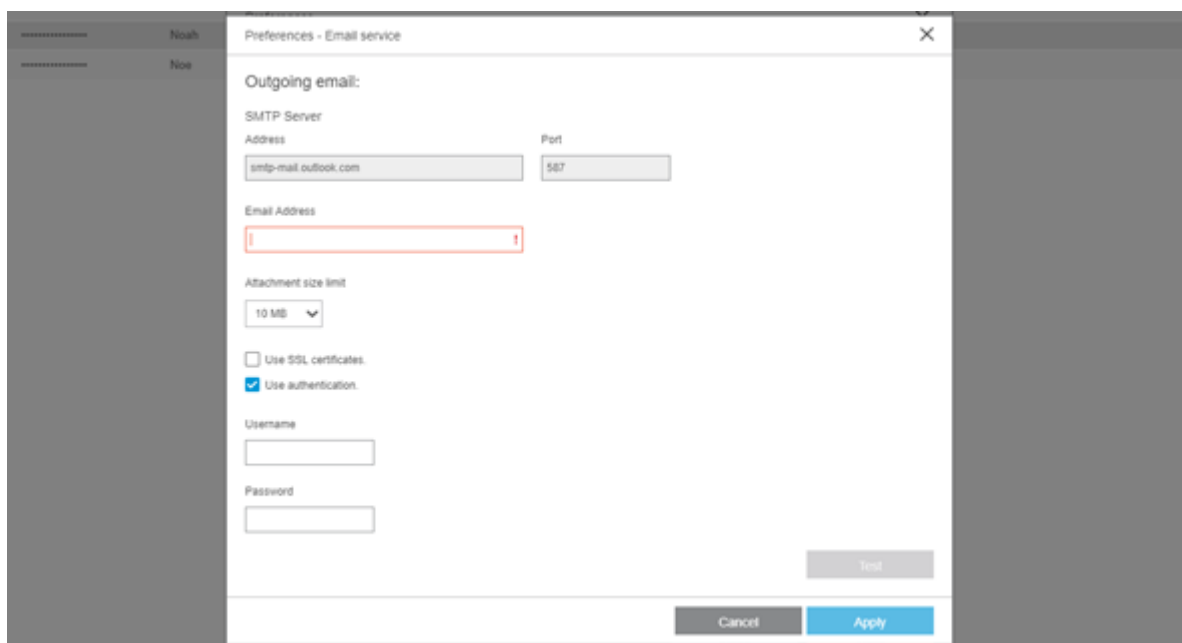

Enter the email address and port in the corresponding fields of this window. Select the attachment size limit from the drop-down list. The **Test** button can be used to send an email to the administrator, using the settings you make here, and allows you to check the configuration before applying it.

You can also enable the use of SSL certificates and authentication by marking the corresponding checkboxes.

Once you have entered all the data, click the **Apply** button to return to the **Preferences** panel.

## Server address configuration

When setting the HP SmartTracker server address and port number, make sure that you enter the same server address and port number as you used during the installation of HP SmartTracker Server. By default, the port number is 7087.

The screenshot shows the 'Preferences' dialog box with the 'Permissions' tab selected. The 'Connectivity' tab is also visible. The 'Proxy Configuration' section has two text boxes: 'Automatic configuration script address' with the value 'http://server.domain.com/epad.dat' and 'Proxy server address' with the value 'http://proxy.server.domain.com:8080/'. The 'Email Configuration' section has an 'Email address' text box with the value 'jmith@hp.com' and a 'Configure' button. The 'Server address' section has an 'Address' text box with the value 'localhost', a 'Port' text box with the value '7087', and a 'Connect' button. The 'Active Directory configuration' section has a 'Configure' button. The 'Advanced network interface' section has a 'Configure' button. At the bottom right, there are 'Close' and 'Next' buttons.

Next, click the **Connect** button to validate the data.

Once you have entered all the necessary data, click the **Next** button.

## Configuration via Active Directory (AD)

If you want HP SmartTracker to make use of your active directory, you need to configure **Active Directory Configuration** in the **Preferences** panel.

Go to the **Connectivity** tab and click the corresponding **Configure** button.

This screenshot is identical to the one above, showing the 'Preferences' dialog box with the 'Permissions' tab selected. It displays the same configuration fields and buttons: 'Proxy Configuration' (script and server addresses), 'Email Configuration' (email address and Configure button), 'Server address' (address, port, and Connect button), 'Active Directory configuration' (Configure button), and 'Advanced network interface' (Configure button). The 'Close' and 'Next' buttons are at the bottom right.

The **Server does not require authentication** option is enabled by default. The **Username** and **Password** fields are disabled, as illustrated below:

Add the address of your Active Directory server in the **AD Server Address** and **Port** fields.

If the Active Directory server has been configured to use a secure connection (SSL), check the **Use a secure connection (SSL)** checkbox.

If the Active Directory server has been configured to request authentication, select the **Server requires authentication** option, the **Username** and **Password** fields will be enabled, enter here the details of a user that has permissions to search in the active directory.

The **Path to start search (Base DN, Search Root)** is the location where the search in the active directory tree will start. This is a compulsory field.

In the **AD Search Attribute** field, add the **SAM Account Name Attribute** field of the AD tree structure to search for. This is a compulsory field.



In the **AD Filter Condition** field, add a complex filter to be applied during the search for the user. This is a optional field.


Click the **Test** button to verify the connection before saving changes.

Click the **Apply** button to save the changes, at the same time a background test for the connection is performed. If an error is encountered, a warning will be displayed.

Click the **Cancel** button to close the window without saving any changes.


#### Note:

In order for the AD to work, locker of users must be **Use Active directory**.

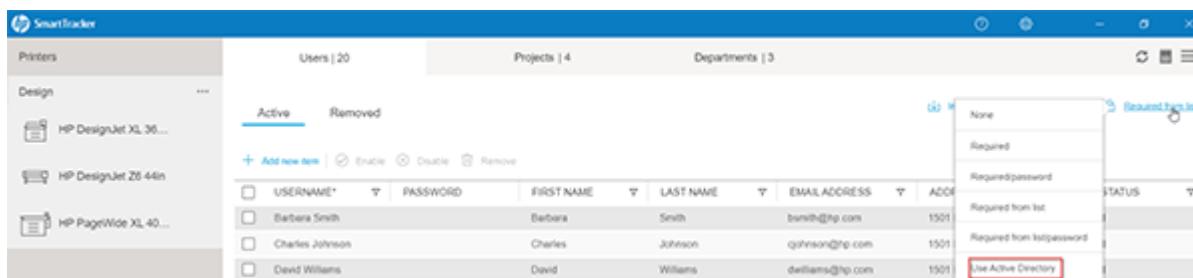


### Advanced Network Interface

Log in as administrator, access the **Preferences > Connectivity**, and the **Advanced Network Interface** is visible. As HP SmartTracker requires all setup to be done within the same network, it is possible that, in environments where more than one LAN is defined, communication between the client-server printer could fail. With this feature an administrator can select the desired network interface.

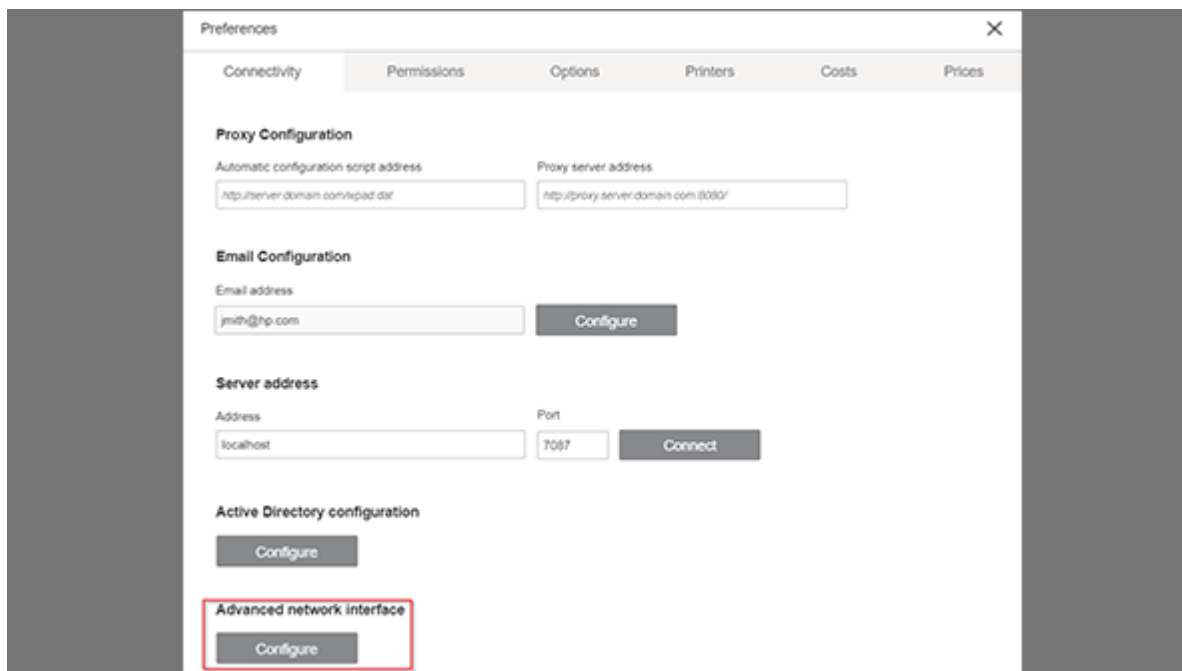


When configuring the network interface, a popup window appears to apply the changes. The network interface that HP SmartTracker detected is used as the default.

If you want to select a different network, it can be manually changed by adding a new IP.

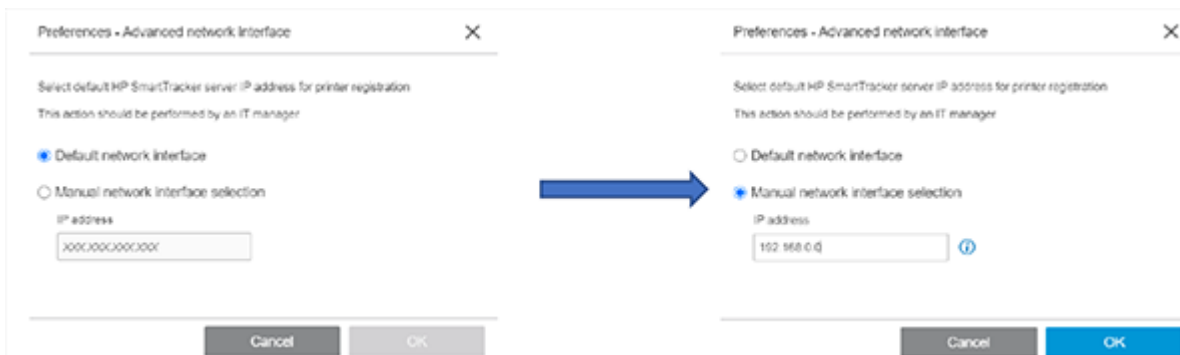

### Important:

When changing the network interface, this message appears:

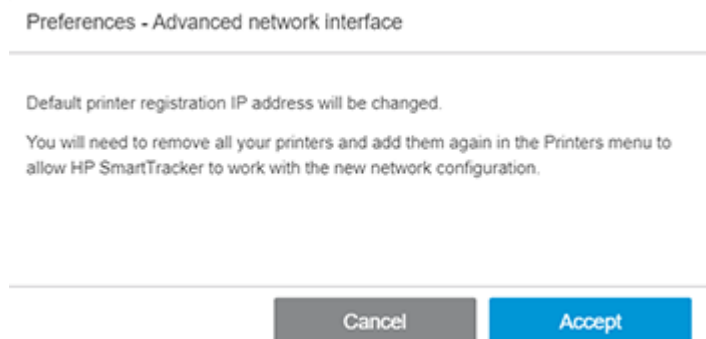

This message informs you as administrator that the printers already added to HP SmartTracker need to be removed and added again for them to "be informed" about the latest manually introduced IP.


If the administrator clicks **Accept**, it changes the default network interface to the new one; if the administrator clicks **Cancel**, it goes back to the previous window.

## Printers


### Configuring printers

You can, at any time you choose, search for and add printers.

If you have completed all the configuration steps and you have no printers already configured, the screen illustrated below will automatically be displayed the first time the HP SmartTracker application is launched:

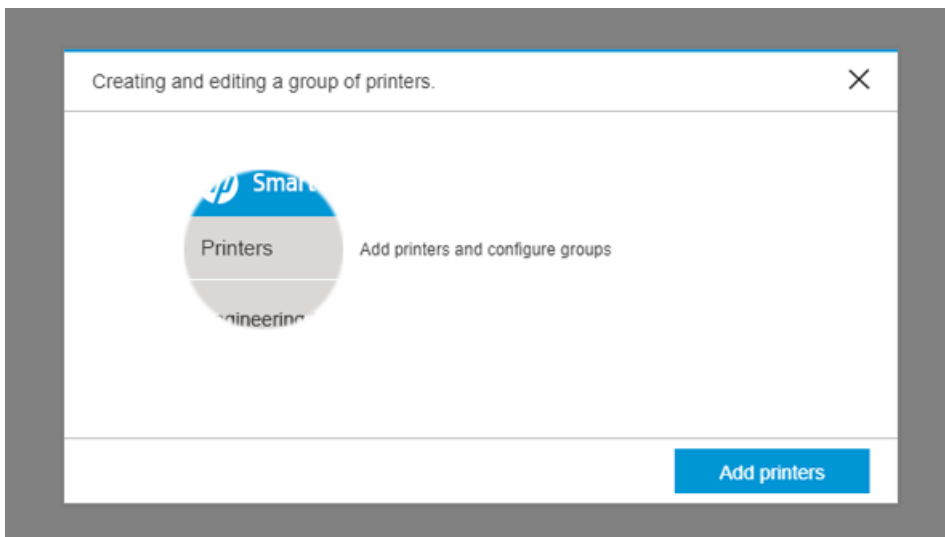

By clicking the **Add printers** button in the window illustrated above, or alternatively, when you have printers already configured, by going to the **Preferences** panel and opening the **Printers** tab, a window similar to the one shown below will open:

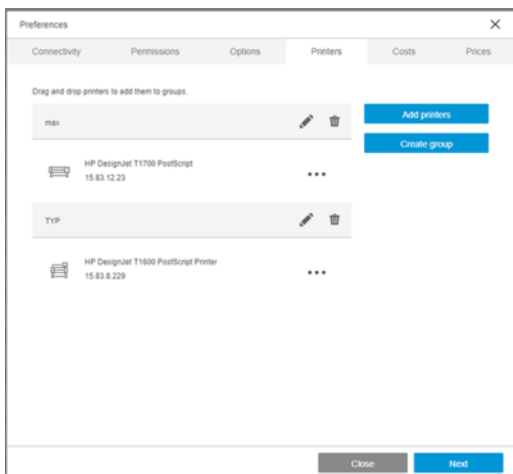


Any previously added printers will appear in the list illustrated above.

**Note:**

Printers to be managed by HP SmartTracker must have been configured with an administrator password in both the printer itself and in HP SmartTracker.

Click **Add printers** and HP SmartTracker will automatically search for any supported printers that are connected to your network as illustrated below:

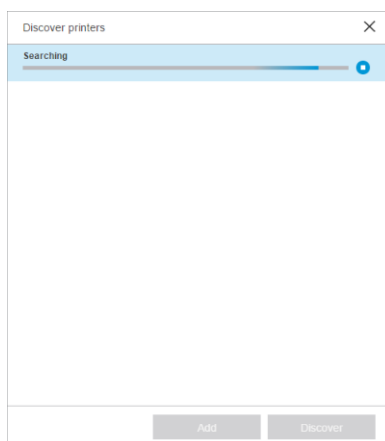

Select the printer you want to add and click the **Add** button.

As an alternative to choosing the automatic discovery mode, you could stop the discovery process and, without selecting any printer, click the **Add** button. In this case you will see the following screen:

Enter the name you would like to assign to the printer, its IP address/hostname, the administrator password, and assign an existing group[1] where the printer will be placed, or create a new one if desired. Below is an example:

Add printer manually
✕

---

Printer name:

IP address/hostname

Password

 ⓘ

Group

 ▼

Add

Once you have filled in all the required fields, click the **Add** button. If the fields are correct, the printer will be added to HP SmartTracker.

[1] Groups can be used to aggregate different printers under the same clump. This can interact when being in the Summary/Reports view as when selecting the group name, the view will show the consumption of the whole group.

**Note:**

Printers that are to be used with HP SmartTracker must have an administrator's password that has been configured using the printer's Embedded Web Server. See the *HP SmartTracker Installation Guide* for further information.

### Editing a printer

Click the **Printers** tab in the **Preferences** panel.

Click the **...** icon alongside the printer you want to edit, choose **Edit** from the menu that opens and you will see a screen as illustrated below:

Edit printer
✕

---

Name:

Printer Administrator Username:

Password

☒ Graceful failover

This Printer Administrator Password will be used to validate your administrator privileges for this printer.

Save

By default, **Graceful Failover** mode is selected.

Graceful failover mode determines printing behavior in the event that the server fails. If it is enabled in a printer, it means that even if HP SmartTracker fails, jobs will still be printed. If it is not selected and the server fails, no jobs will be printed.

**Note:**

If there is a server failure, any jobs that have been printed will be included in the reports and assigned to “Unknown”.


You can edit the printer name and/or password.

Make the changes and click the **Save** button.


### Creating a group of printers

Ensure that there are printers available.

1. Click the **Printers** tab in the **Preferences** panel.
2. Click the **Create group** button. You will see the following screen:

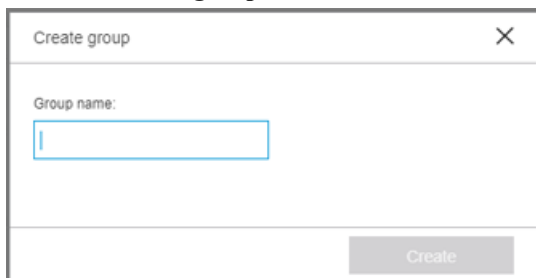

3. Enter the group name.
4. Click the **Create** button.
5. Select the printers you want to add, and drag-and-drop them into the group.

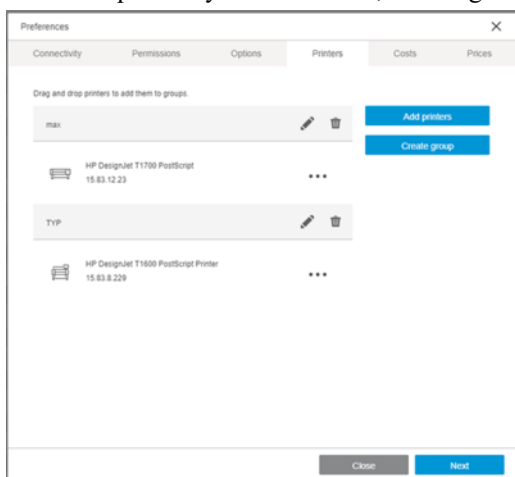


6. Click the **Next** button.

### Editing a group of printers

Use the  icon to edit a particular group of printers.

1. Click the  icon.

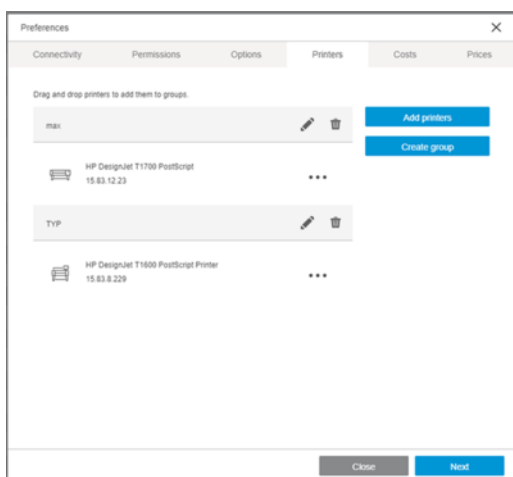


2. Make the changes.
3. Click the **Done** button.


### Deleting a group of printers

Use the  icon to remove a particular group of printers.

1. Click the  icon.

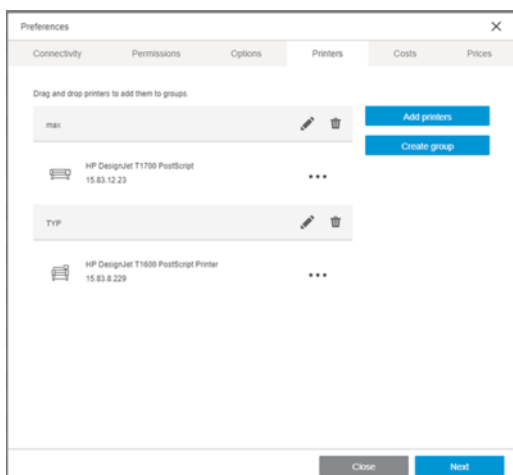

2. Click the **Accept** button.

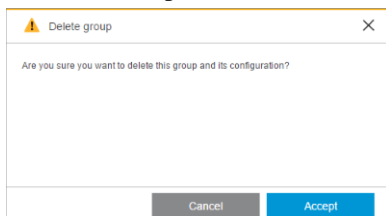

You are now returned to the home screen.

## Permissions

In the **Permissions** tab you can assign permissions to administrators and bookkeepers. At this point there is a minimum requirement to configure at least one administrator.

**Preferences**

Connectivity Permissions Options Printers Costs Prices

**Administrators:**  
Can open HP SmartTracker and access the Configuration and Reports panels. They can set permissions, costs, printers, projects and users. They can also retrieve data and create reports.

| Username*   | Password*   | First name  | Last name   | Email address* |
|-------------|-------------|-------------|-------------|----------------|
| admin       | *****       | John        | Doe         | jdoe@hp.com    |
| Add text... | Add text... | Add text... | Add text... | Add text...    |

**Bookkeepers:**  
They can retrieve data, create new and review previous reports.

| Username*   | Password*   | First name  | Last name   | Email address* |
|-------------|-------------|-------------|-------------|----------------|
| book        | *****       | Jane        | Smith       | jsmith@hp.com  |
| Add text... | Add text... | Add text... | Add text... | Add text...    |

Close Next

In this screen you can configure two types of HP SmartTracker user: administrator and bookkeeper. Users of the printers will be configured later.

### Note:

It is mandatory to enter an email address in the screen above. Provided that HP SmartTracker's email server is correctly configured, it is this address that will be used to receive notifications sent by HP SmartTracker.

Administrators can:

- Open the configuration panel and reports.
- Create new reports.
- Retrieve data.
- Set permissions, costs, prices, printers, projects, users, and groups.
- Set language, measurement units, and currency to be used by HP SmartTracker.
- View previous reports.

Bookkeepers can:

- Create new reports.
- Retrieve data.
- View previous reports.

The first time you configure permissions you must create at least one user who is an administrator.

To create an administrator user, enter data directly in the fields in the Administrators section of the **Permissions** tab illustrated below:



**Administrators:**

Can open HP SmartTracker and access the Configuration and Reports panels.

They can set permissions, costs, printers, projects and users. They can also retrieve data and create reports.

| Username*   | Password*   | First name  | Last name   | Email address* |
|-------------|-------------|-------------|-------------|----------------|
| admin       | *****       | John        | Doe         | jdoe@hp.com    |
| Add text... | Add text... | Add text... | Add text... | Add text...    |

Press the Enter key.

Once an administrator user has been created, the login screen, illustrated below, appears:

The above screen will become the initial screen for your HP SmartTracker application.

Enter your username and password and click the **Login** button to return to the **Preferences** panel.

Here you can add more administrators and/or create bookkeepers.

To create a bookkeeper, enter the data directly into the fields in the Bookkeepers section:

**Bookkeepers:**

They can retrieve data, create new and review previous reports.

| Username*   | Password*   | First name  | Last name   | Email address* |
|-------------|-------------|-------------|-------------|----------------|
| book        | *****       | Jane        | Smith       | jsmith@hp.com  |
| Add text... | Add text... | Add text... | Add text... | Add text...    |

Press the Enter key.

To edit a user, click the data, make the necessary changes, then press the Enter key.

To delete a user, right-click it.

**Note:**

There is no request for confirmation when you delete a user. If you delete a user by mistake, you will have to re-enter that user's data.

## Options

In the **Options** tab you can configure a variety of settings for the HP SmartTracker application: application language, accounting units, accounting currency, logo to be included in reports, and touch points where authentication will be required.

### Setting the application language

You can select the language to be used by the application from the ones available in the **Language** drop-down list.

### Setting the application units

You can select which units are to be used for paper accounting purposes, either imperial (inches, square feet) or metric (millimeters, square meters).

### Setting the currency

In this section you can select the currency to be used by typing its three character code (such as USD or EUR).

### Setting the costs and prices configuration

You can choose to assign the cost or price value based on the ink or paper type used in print jobs.

Distribution of cost/price can be done by print category (**Mono lines**, **Color lines**, **Low density** and **High density** images) or by total coverage (**Color** and **Mono** percentage).

#### Note:

The selection you make here applies to all printers and will be effective for the **Costs** and **Prices** tabs. Changing this selection in one of these tabs will automatically change the selection used by the other tab.

### Setting a company logo for reports

A company logo can be added to your custom\_reports by clicking the **Upload** button and navigating to the image (jpg or png format) of your choice; some restrictions exist.

Your current company logo can be removed by clicking the **Remove** button.

### Selecting the required touch points

By checking job submission points, you can select the touch points that will require authentication and tracking (by default all points require authentication).

If a submission point is left unchecked, unauthenticated printing will be enabled, consequently there will be no tracking of activities that use that submittal point.

### Touch points

You can select whether HP SmartTracker requires authentication from the following print agents: HP SmartStream, HP Click, Driver, and the printer.

#### Note:

If a print agent is left deselected, unidentified users are free to print from that particular print agent.

Kevin  
Noah  
Noe

Preferences

Connectivity Permissions Options **Printers** Costs Prices

**Configuration**

Language: English

Units: Imperial

Company logo used for reports  
Supported formats: \*.jpg and \*.png  
5 MB limit

Touch points  
Request authentication from:  
☒ HP SmartStream  
☒ Driver

Costs and Prices configuration  
Print categories: Print categories  
Currency: USD

Upload  
Remove

Close Next

## Costs

Click the **Costs** tab. This is where you can configure the units to be used for accounting and those that will also appear in the reports.

If, for example, you selected **Print categories** in the **Options** tab:

Preferences

Connectivity Permissions Options Printers **Costs** Prices

**Tax cost configuration**

Tax Rate: 1 %

☐ Costs excluding tax ☒ Costs including tax

**Printer cost configuration**

Printer: HP PageWide XL Pro 8200 Series

**Costs by print categories** Per sq ft

|             |               |                 |               |
|-------------|---------------|-----------------|---------------|
| Mono Lines  | 1 € per sq ft | Color Lines     | 1 € per sq ft |
| Low density | 1 € per sq ft | High density    | 1 € per sq ft |
| Blueprint   | 1 € per sq ft | Premium quality | 1 € per sq ft |

Tax Incl.

If, for example, you selected **Print Coverage** in the **Options** tab:

**Preferences**

Connectivity Permissions Options Printers **Costs** Prices

**Tax cost configuration**

Tax Rate: 1 %

☐ Costs excluding tax ☒ Costs including tax

**Printer cost configuration**

Printer: HP PageWide 4000 Series

Costs by print coverage: Per sq ft

| Supplies costs |               | Service costs |               |
|----------------|---------------|---------------|---------------|
| Color          | 1 € per sq ft | Color         | 1 € per sq ft |
|                | Tax Incl.     |               | Tax Incl.     |
| Mono           | 1 € per sq ft | Mono          | 1 € per sq ft |
|                | Tax Incl.     |               | Tax Incl.     |

You can introduce costs specific to each of the printer models installed.

You can assign the costs based on milliliter usage, area printed, area used, and linear meters. You can also select the **Hybrid** option which provides a combination of two metrics.

If you need to change the metrics, you can select an alternative unit of measurement from the drop-down menu.

By clicking the  icon a window opens showing the complete list of possible paper types and you can select which of them will be taken into account and the cost associated with each of them.

**Note:**

In **Costs** and **Prices** you can introduce the total price with or without taxes. Later in the reports, you can select whether to apply the tax or not.

## Prices

When you click the **Prices** tab, you will see the screen illustrated here:

**Prices**

**Tax price configuration**

Tax Rate: 1 %

☐ Prices excluding tax ☒ Prices including tax

**Printer price configuration**

Printer: HP PageWide 4000 Series

**Prices by print categories** Per sq ft

|             |               |                 |               |
|-------------|---------------|-----------------|---------------|
| Mono Lines  | 1 € per sq ft | Color Lines     | 1 € per sq ft |
| Low density | 1 € per sq ft | High density    | 1 € per sq ft |
| Blueprint   | 1 € per sq ft | Premium quality | 1 € per sq ft |

Tax Incl. checkbox for each category.

In this tab you can include the prices to be charged to your customers. The introduction of prices works in exactly the same way as the introduction of costs.

## About the home screen

The home screen consists of a vertical bar on the left-hand side where all printers and printer groups that you configured are listed. There are three tabs, by default they are named: **Users**, **Projects**, and **Departments**. The **User** tab name is not editable, the remaining two can be renamed, but only by **Administrators**.

Each tab has a grid where you can enter data for each printer and printer group:

**SmartTracker**

Printers: Design Group

- HP PageWide XL 4000PS
- HP DesignJet XL 3600 PS
- HP DesignJet T2500D Pk
- HP DesignJet T1700D Pk

**Users** 16 Projects 14 Departments 14


Active Removed

+ Add new user

| USERNAME*                             | PASSWORD | FIRST NAME | LAST NAME | EMAIL ADDRESS       | ADDRESS                     | USER STATUS |
|---------------------------------------|----------|------------|-----------|---------------------|-----------------------------|-------------|
| <input type="checkbox"/> BarbaraSmith | *****    | Barbara    | Smith     | bsmith@mail.com     | 1501 Page Mill Rd, Palo ... | Enabled     |
| <input type="checkbox"/> JamesWhite   | *****    | James      | White     | jameswhite@mail.com | 1501 Page Mill Rd, Palo ... | Enabled     |
| <input type="checkbox"/> JackBlack    | *****    | Jack       | Black     | jackblack@mail.com  | 1501 Page Mill Rd, Palo ... | Enabled     |
| <input type="checkbox"/> LindaDavis   | *****    | Linda      | Davis     | ldavis@mail.com     | 1501 Page Mill Rd, Palo ... | Enabled     |
| <input type="checkbox"/> JaneBrown    | *****    | Jane       | Brown     | janebrown@mail.com  | 1501 Page Mill Rd, Palo ... | Enabled     |
| <input type="checkbox"/> SophiaMoore  | *****    | Sophia     | Moore     | smoore@mail.com     | 1501 Page Mill Rd, Palo ... | Enabled     |

### Note:

The information displayed in the grid depends on the printer group you currently have selected on the left-hand side.

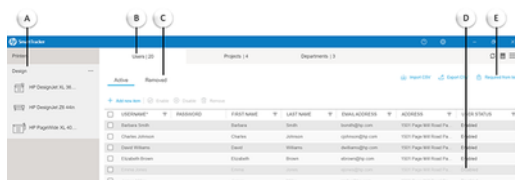

Below are brief explanations of the various parts of the screen.

**Table 17: Parts of the screen**

| Part | Description of the screen                                                                                                              |
|------|----------------------------------------------------------------------------------------------------------------------------------------|
| A    | Example of a printer group.                                                                                                            |
| B    | <b>Users</b> tab containing grid with data for the selected printer group.                                                             |
| C    | <b>Removed</b> items view with the <b>Users</b> , <b>Projects</b> and <b>Departments</b> already removed.                              |
| D    | <b>Users</b> , <b>Projects</b> or <b>Departments</b> in <b>Disabled</b> status are not available from the agents' authentication form. |
| E    | Authentication mode.                                                                                                                   |

You can edit the home screen tabs and customize the data to suit your needs.

|          |            |               |
|----------|------------|---------------|
| Users 16 | Projects 4 | Departments 4 |
|----------|------------|---------------|

Active Removed

Import CSV Export CSV Required from list

Add new user

| USERNAME*                             | PASSWORD | FIRST NAME | LAST NAME | EMAIL ADDRESS       | ADDRESS                     | USER STATUS |
|---------------------------------------|----------|------------|-----------|---------------------|-----------------------------|-------------|
| <input type="checkbox"/> BarbaraSmith | *****    | Barbara    | Smith     | bsmith@mail.com     | 1501 Page Mill Rd, Palo ... | Enabled     |
| <input type="checkbox"/> JamesWhite   | *****    | James      | White     | jameswhite@mail.com | 1501 Page Mill Rd, Palo ... | Enabled     |
| <input type="checkbox"/> JackBlack    | *****    | Jack       | Black     | jackblack@mail.com  | 1501 Page Mill Rd, Palo ... | Enabled     |
| <input type="checkbox"/> LindaDavis   | *****    | Linda      | Davis     | ldavis@mail.com     | 1501 Page Mill Rd, Palo ... | Enabled     |
| <input type="checkbox"/> JaneBrown    | *****    | Jane       | Brown     | janebrown@mail.com  | 1501 Page Mill Rd, Palo ... | Enabled     |
| <input type="checkbox"/> SophiaMoore  | *****    | Sophia     | Moore     | smoore@mail.com     | 1501 Page Mill Rd, Palo ... | Enabled     |

Show 25 Entries

First Previous Next Last

**Note:**

FOR ADMINISTRATORS ONLY: To edit the name of one of the **Projects** or **Departments** tabs, double-click the tab name.

**Note:**

The **Projects** and **Departments** tabs cannot both have the same name.

The number that appears in each tab corresponds to the number of active rows in the grid.


## Configuring users of printers and printer groups

Here we configure the users of the printers and the various printer groups, not to be confused with administrators and bookkeepers, who are users of the application.


Select a printer/printer group from the list on the left-hand side.

Click the **Users** tab.

A grid appears on screen where you can enter and store all the data for that printer group, as seen in the following screen:

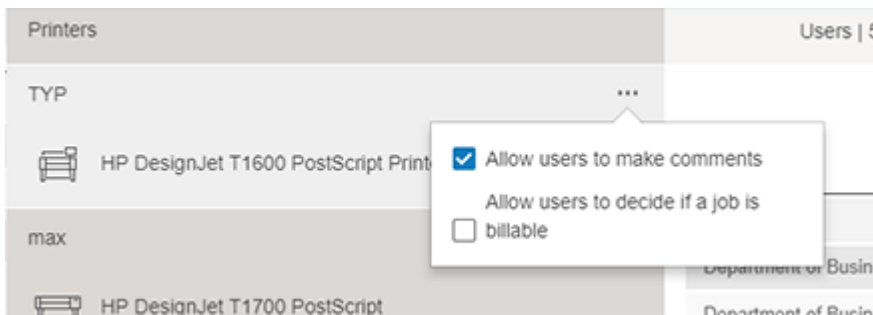

By default, the authentication mode to control access to the printer is set to None. To change it, click the  icon and choose the option you want from the drop-down list:

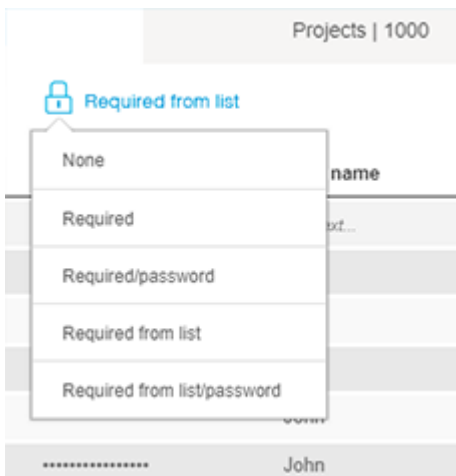

Below is an explanation of the authentication options in the menu:

**Table 18: Authentication options**

| Option                              | Description                                                                                                                                                                                             |
|-------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>None:</b>                        | No authentication needed.                                                                                                                                                                               |
| <b>Required:</b>                    | System asks for a Username.                                                                                                                                                                             |
| <b>Required/password:</b>           | System asks for a username and password.                                                                                                                                                                |
| <b>Required from list:</b>          | Username can be selected from a drop-down list.                                                                                                                                                         |
| <b>Required from list/password:</b> | Username can be selected from a drop-down list and a password must be entered.                                                                                                                          |
| <b>Use Active Directory:</b>        | User is identified using their credentials as configured in the earlier section titled Active Directory. (This option appears only after having configured “Active Directory Configuration” correctly.) |

To add users, click **Add new item** to enter the data directly in the fields where it says **Enter...** and click the **Enter** key after you have filled in the last field.


**Note:**

**Users, Projects, Departments** cannot be given the names “Guest”, “Others”, “Service”, or “Unknown”.

**Note:**

**Users, Projects, Departments** maximum length is 100 characters in English. For other languages with special characters the length can be smaller.

To filter by a **Status**, right-click it. You will see the following screen:

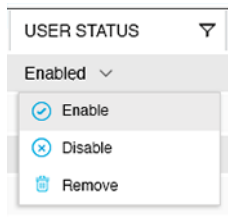

Below is an explanation of the options in the menu:

**Table 19: Options in the menu**

| Option                   | Description                     |
|--------------------------|---------------------------------|
| <b>Enabled/Disabled:</b> | Enable or disable selected row. |
| <b>Removed:</b>          | Remove selected row.            |

**Note:**

Disabled users are those with credentials that are not valid for printing temporarily. As a result they will not appear in a drop-down list. The credentials can be enabled at any time.

To enable a **Disabled** user, select the row using the checkbox and click **Enable**.

**Note:**

Users, projects and departments that are no longer valid in the organization can be removed from this list. They go to the **Removed** view that can be emptied from the **Cleanup** tab in the **Database Management** menu (explained later).

**Note:**

When **Use Active Directory** is selected as the authentication method, the existing list is disabled and a warning message **Using Active Directory, HP SmartTracker users are disabled** is displayed.

**Note:**

Multiple selection is available to execute the same operation as **Enable**, **Disable** or **Remove** for the selected rows.


## Marking a job as billable

You can decide, on a job-by-job basis, which particular jobs are billable or non-billable.

In the same illustration you can see a setting where, like the setting discussed above, you can choose to provide users with the option to add a comment to a job.

To do so, click the **...** icon next to the printer group.



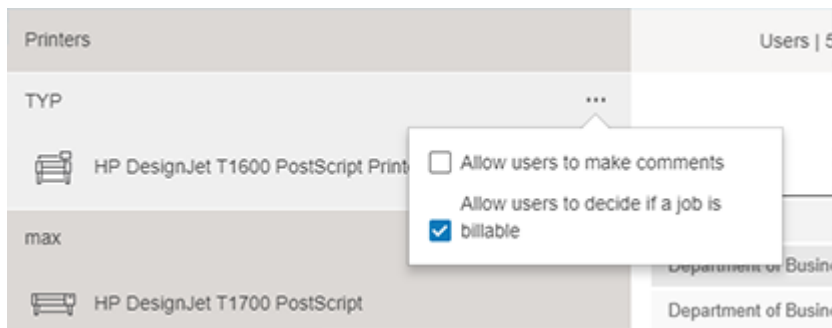


### Note:

In the illustration above you will see the “Allow users to decide if a job is billable” field, it can be enabled or disabled. Your choice for this setting is independent of, and should not be confused with, the decision regarding whether, or not, all jobs for the printer are billable. To modify this setting you must select each printer group, one by one, and make the appropriate selection. If this setting is enabled, HP SmartTracker will ask you to make this decision every time you send a job to the printer.

Select the options you want and click out of the box.

## Filtering

You can filter by clicking the  icon and choosing an option from the drop-down list:

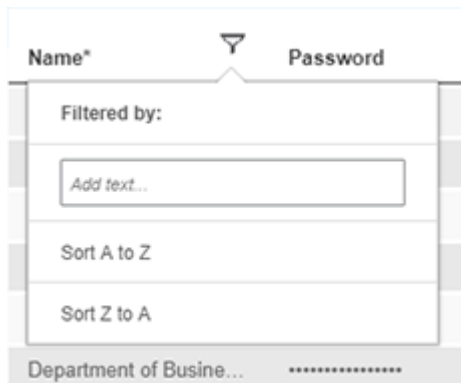

Below are brief descriptions of the options in the menu.

**Table 20: Options in the menu**

| Option              | Description                                                                        |
|---------------------|------------------------------------------------------------------------------------|
| <b>Text box:</b>    | you can type directly in the field to filter the content of the table dynamically. |
| <b>Sort Z to A:</b> | organizes users in reverse alphabetical order.                                     |
| <b>Sort A to Z:</b> | organizes users in alphabetical order.                                             |

You can also filter by enabled and/or disabled users by clicking the User status column filter.

Once a filter is selected, the icon turns blue.


## Removing a filter

To remove the dynamic filter, click the  icon to open the filter and then delete the text from the box. Click out of the filter.

Other filters are only removed once you exit the current view. To exit the current view, click a different printer group.

## Projects


Click the **Projects** tab. This is where you can configure data for the projects using the selected printer group.

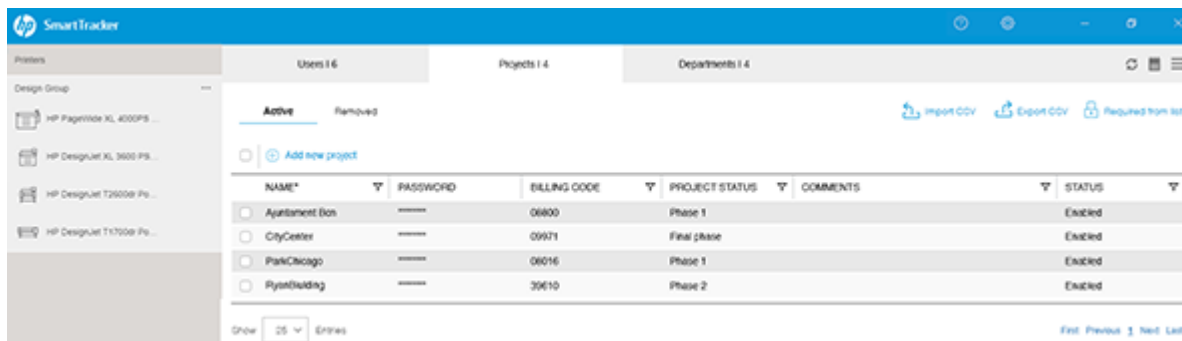

To create project data, click **Add new item** to enter the data directly in the fields where it says **Enter...** and click **Enter** after you have filled in the last field.

## Departments

Click the **Departments** tab. This is where you can configure data about the departments included in this printer group.

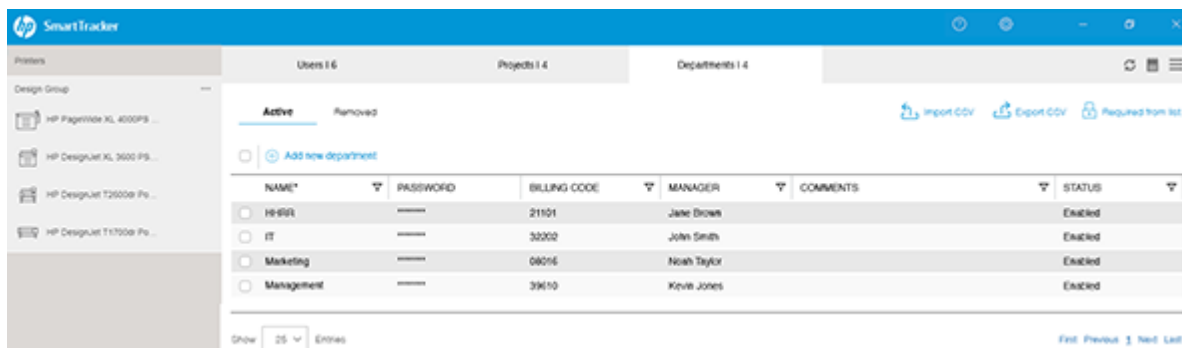

To add data for different departments, click **Add new item** to enter data directly in the fields where it says **Enter...** and click **Enter** after you have filled in the last field.

### Note:

In the three tabs you will find here, you can edit:

- The name of the tab (**Departments** and **Projects**)—administrators only
- The names of several of the columns

## Import/export CSV

### Configuration—import CSV

You can import or export a CSV file in order to import or export user, project, and department configurations to or from the HP SmartTracker application.


To import a .CSV file into HP SmartTracker, click the **Import CSV** option on the home screen, a window like the one illustrated below will be displayed:

**Warning:**

The CSV imported file requires specific fields delimitation and formatting.

**Tip:**

Export a CSV file first, add your data, and then import it.

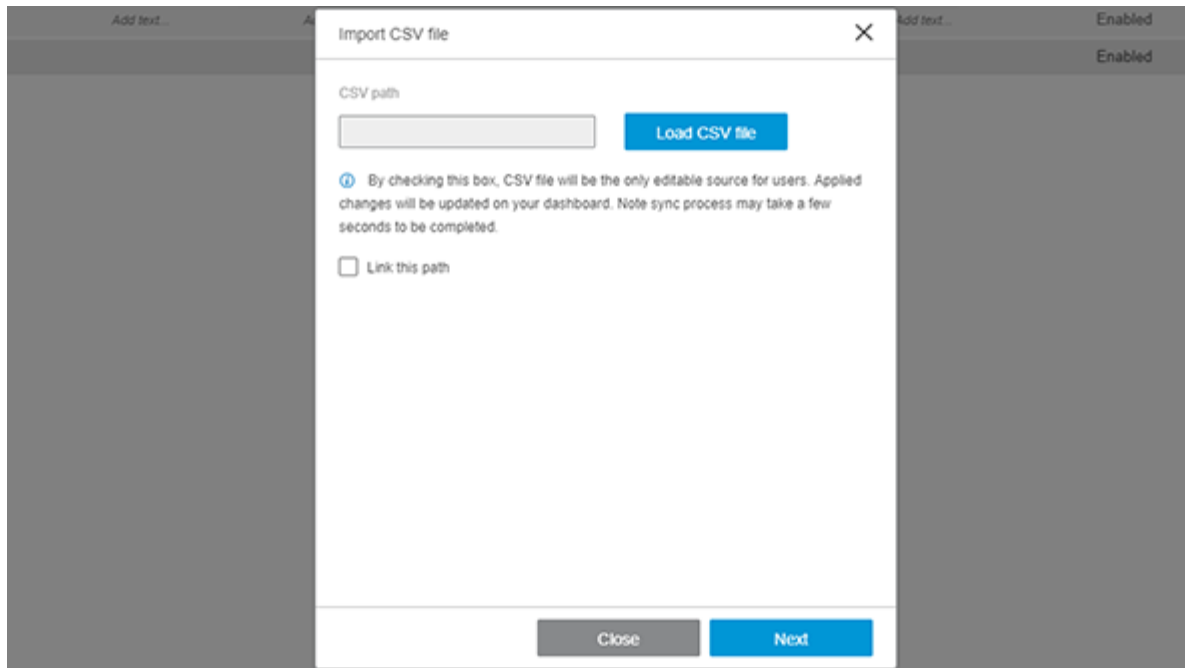

If you choose to check the **Link this path** checkbox, the imported CSV file must be located in the same PC where the HP SmartTracker Server application is installed (a network folder, or a path to another PC in which an instance of HP SmartTracker Client is running, will not work).

**Warning:**

If you check the **Link this path** checkbox, a warning message will be displayed. The reason for this is that with this checkbox selected you are creating a dynamic link with this file. This causes the configuration you have uploaded here to be refreshed, within the space of a few minutes, to reflect any changes made in this file, for as long as this option is checked. If the **Link this path** option is checked and properly configured, the Users/Projects/Departments management will be disabled in the HP SmartTracker Client's home screen.

After you click **Next**, the following window is displayed:

**Import CSV file**

Drag each CSV File Fields and drop it to the corresponding HP SmartTracker Field.

| CSV File Fields | HP SmartTracker Fields |
|-----------------|------------------------|
| Name            | Name *                 |
| Password        | Password               |
| Billing Code    | First name             |
| Project Owner   | Last name              |
| Comments        | Email address          |
| Status          | Address                |

\* Mandatory field(s)

Back Save

All the fields from the imported CSV file and the existing fields from the tab, are displayed.

To create a mapping between the two columns of fields, you need to drag and drop the fields from left column to the right column.

**Import CSV file**

Drag each CSV File Fields and drop it to the corresponding HP SmartTracker Field.

| CSV File Fields | HP SmartTracker Fields |
|-----------------|------------------------|
| Name            | Name *                 |
| Password        | Password               |
| First Name      | First name             |
| Last Name       | Last name              |
| Email           | Email address          |
| Address         | Address                |

\* Mandatory field(s)

Back Save

After finishing the drag and drop process, click **Save** and the configuration is completed. If changes are made in the source CSV file, and during the CSV file import process you enabled the **Link this path** option, the changes are, after a few minutes delay, applied to the HP SmartTracker database.

### Export CSV

To export a CSV file, first you should enter all the data that you want to export, on the home screen.

Click the **Export CSV** option:



## Generating reports

For bookkeeper users, the Reports screen is the home screen.

However, administrator users will have to click the  icon to open the Reports screen.

This screen provides three options: **Summary**, **Reports**, and **Custom**.

The **Summary** report can provide an overview of: all printers; a specific printer group or; a specific printer.

The **Custom** report lets you customize the content of your report to contain the tables and charts you choose.

The **Reports** option is a standard report that provides a detailed analysis of either a particular user, a department, a project, or individual jobs.

Default reports can be created per printer and per printer group.


#### Note:

Cumulative cost/price data are updated once a day based on the costs/prices configured. If changes are made to the configured cost/price data, these changes will be immediately effective, however the changes will not have any effect on the cumulative data from previous days.

## Summary


The information presented in the summary screens reflect how the costs/prices have been entered: Print categories or Printing supplies. The graphics here are illustrations of one possible configuration.

Here are examples of Summary reports:

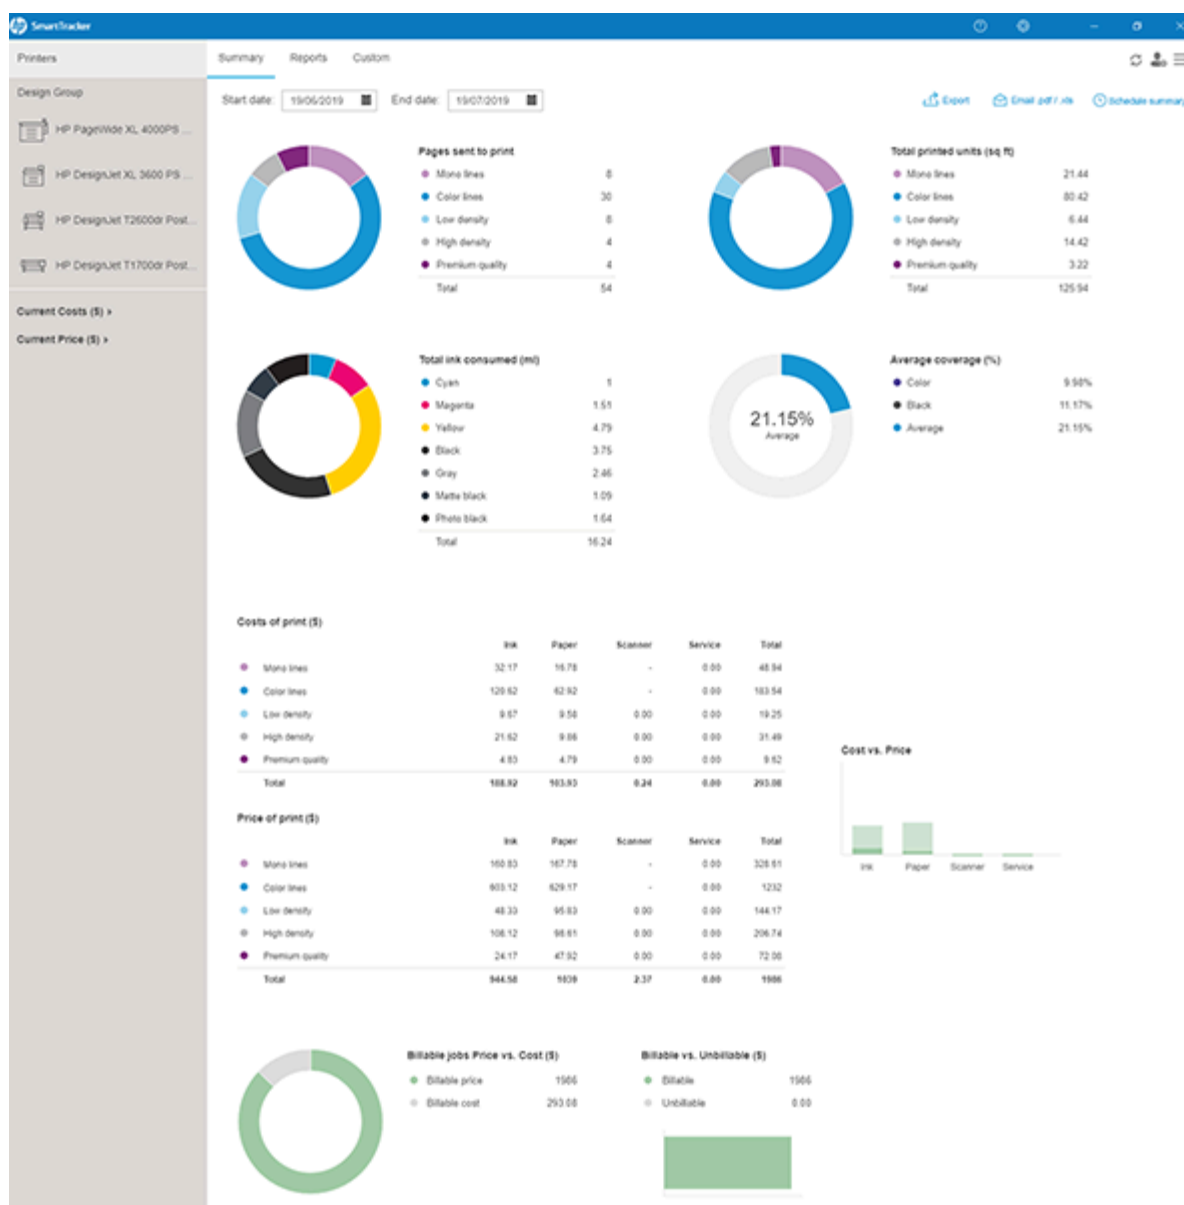

You can view a global summary for all printers, a specific printer group or a specific printer.

You can choose the time frame of when the data is collected.

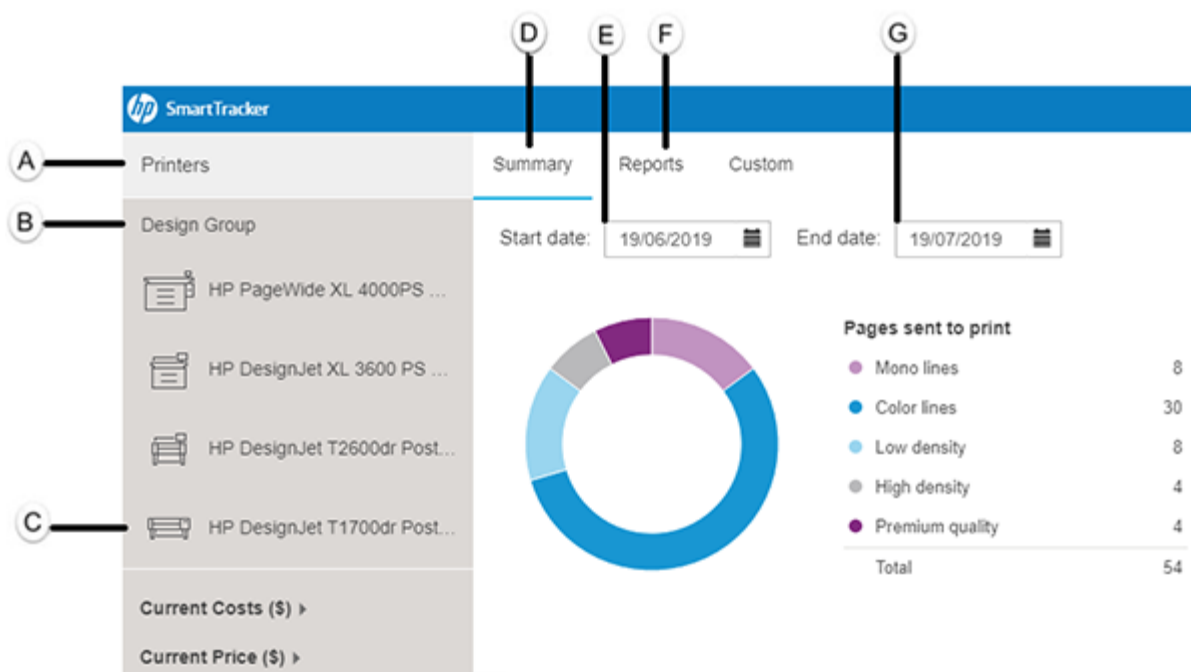


Below are brief descriptions of the various parts of the screen:

**Table 21: Parts of the screen**

| Part | Description                                         |
|------|-----------------------------------------------------|
| A    | View global summary for all printers.               |
| B    | View global summary for selected printer group.     |
| C    | View global summary for selected printer.           |
| D    | Summary: Totals of cost and usage for the period.   |
| E    | Set the date that the data started being collected. |
| F    | Report: totals by users, projects or departments.   |
| G    | Set the date that the data stopped being collected. |

You can export the data in different file formats.

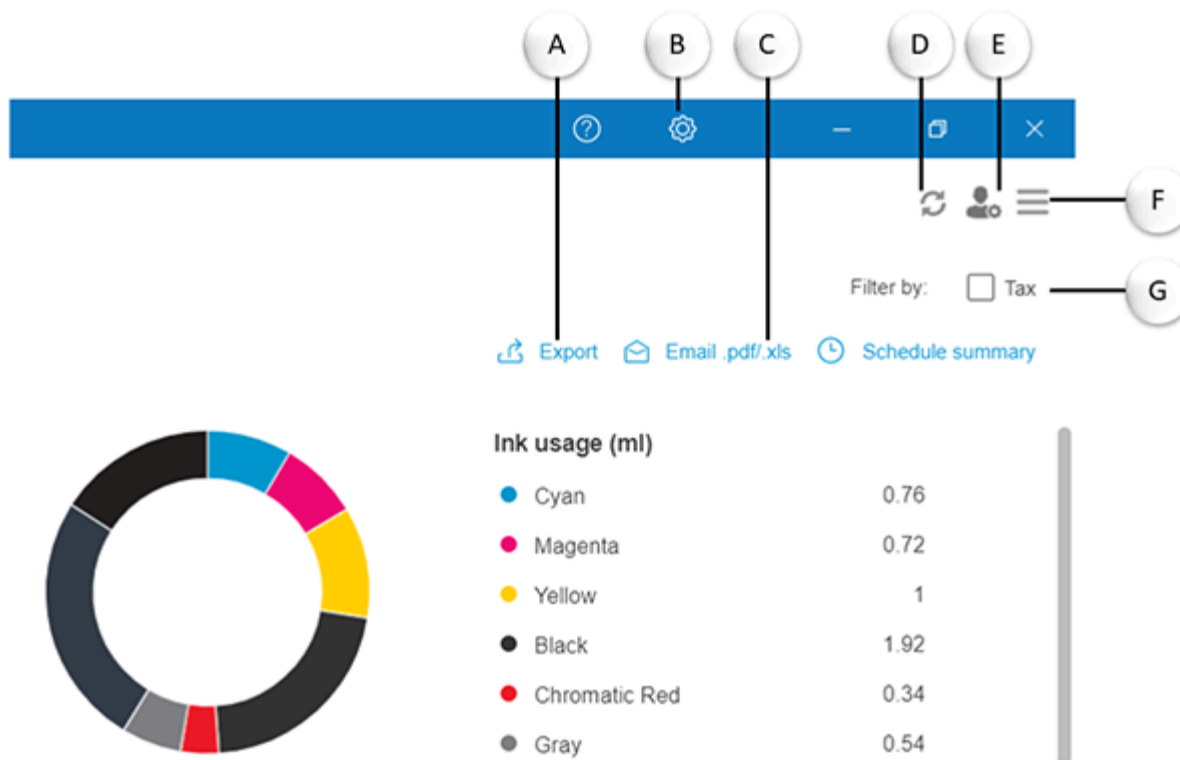

Below are brief descriptions of the various parts of the screen:

**Table 22: Parts of the screen**

| Part | Description                                                                                                                                                                   |
|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| A    | Export data as PDF or Excel file.                                                                                                                                             |
| B    | Open the <b>Preferences</b> panel*.                                                                                                                                           |
| C    | Send data in an email as a PDF or Excel file. (This option is active only if the <b>HP SmartTracker Email Server</b> was properly configured in the <b>Connectivity</b> tab.) |
| D    | Refresh current view.                                                                                                                                                         |
| E    | Open the <b>Administrator</b> panel*.                                                                                                                                         |
| F    | Open the menu.                                                                                                                                                                |
| G    | Include/exclude taxes.                                                                                                                                                        |

\* These icons are visible to administrator users only.

There are pie charts displaying the total number of pages and printed units according to the settings you configured in the **Preferences** panel. There is another pie chart with the total ink consumed by color and a wheel showing the percentage average coverage:





The summary provides a comparative overview of both costs and prices:



**Note:**

The graphics that appear in the **Summary** tab depend on the preferences you have selected. Any unselected features will appear in gray in the report. If you set any values to zero, the charts will appear as empty, even though the features were selected.


**Note:**

When you select the **Tax** checkbox, reports take into account the tax rate configured in the **Costs/Prices** tab.

## Reports

There are four types of standard reports: by Users, by Projects, by Departments, and Export All (raw data of all jobs in a CSV file format).

Here are examples of reports by Projects:

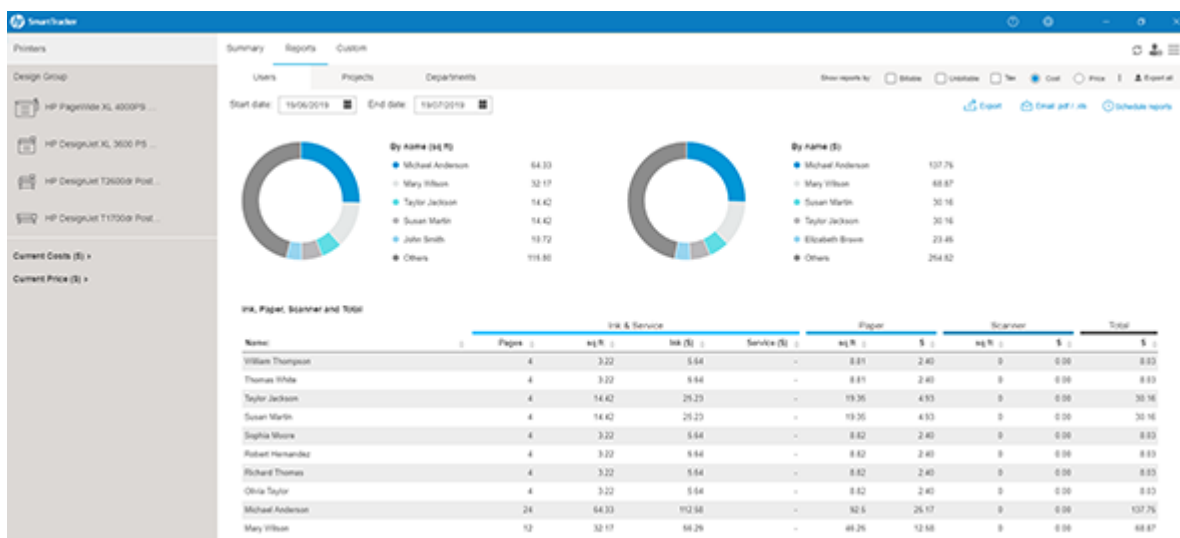


You can view the default report for all printers, a specific printer group or a specific printer.

You can choose the time frame of when the data is collected and the file format to be used when the data is exported.

**Note:**

The application uses the time recorded by the server at the moment the job is printed.

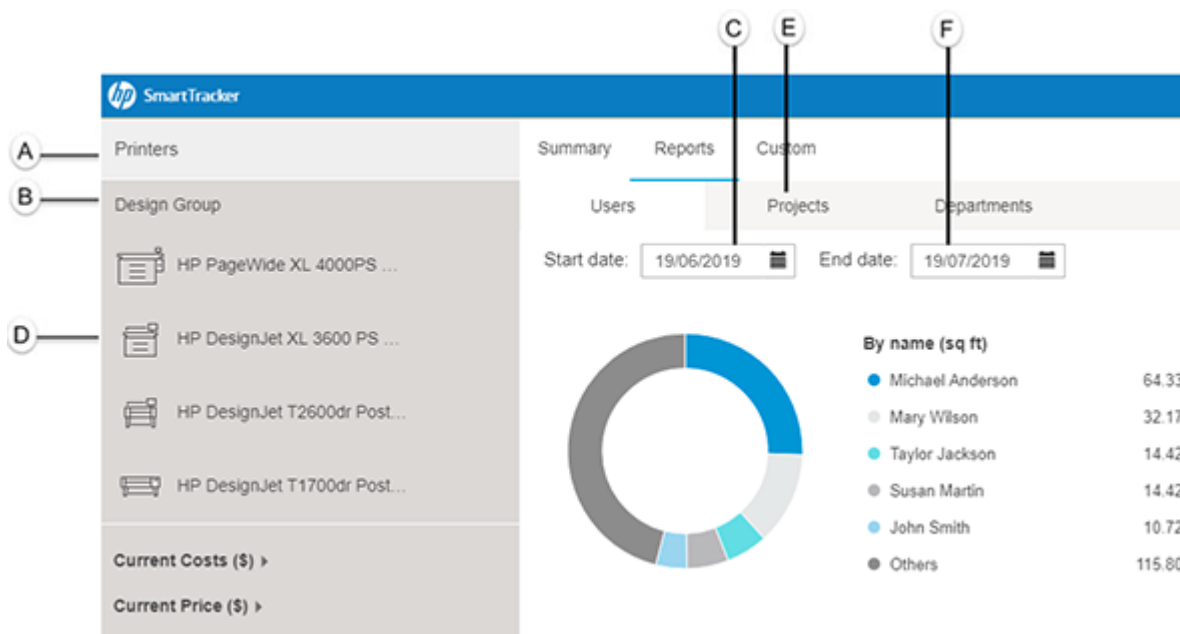

Below are brief descriptions of the various parts of the screen:



**Table 23: Various parts of the screen**

| Part | Description                                         |
|------|-----------------------------------------------------|
| A    | View report for all printers.                       |
| B    | View report for selected printer group.             |
| C    | Set the date that the data started being collected. |

| Part | Description                                                       |
|------|-------------------------------------------------------------------|
| D    | View report for selected printer.                                 |
| E    | View reports for projects included in the selected printer group. |
| F    | Set the date that the data stopped being collected.               |

In the example above, the **Projects** tab is selected. However, you can also view reports for users and departments by clicking the respective tabs.

You can view the data by billable jobs, non-billable jobs as well as jobs by price or by cost. At the top of the screen you can select the options that fit your needs. This is shown in the next image.

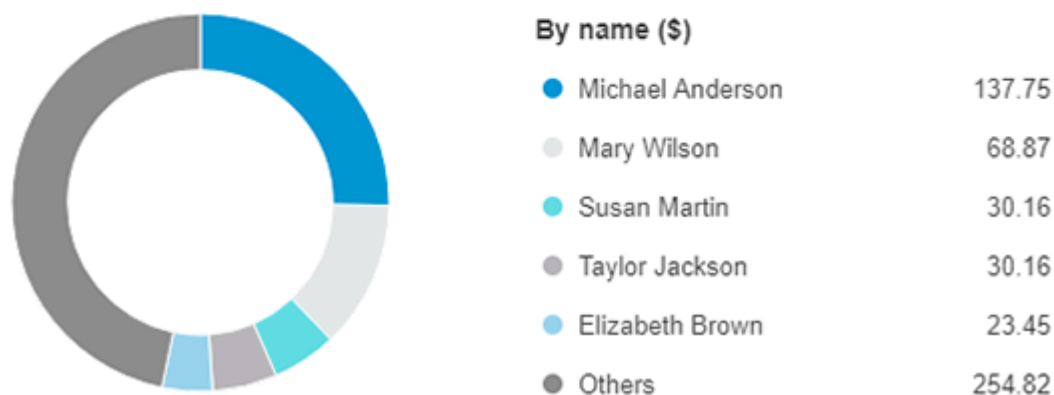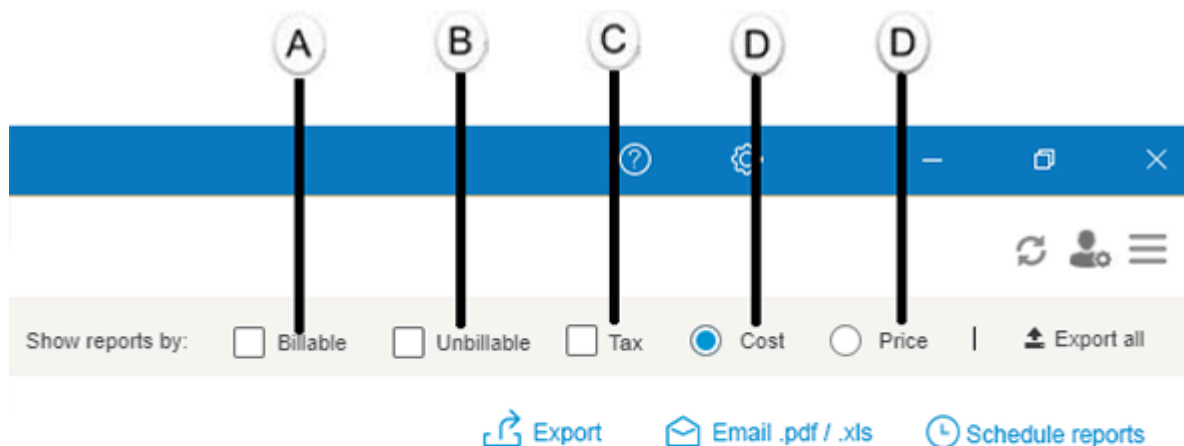

Below are brief descriptions of the various parts of the screen:

**Table 24: Various parts of the screen**

| Part | Description                                          |
|------|------------------------------------------------------|
| A    | Activate to view only billable jobs.                 |
| B    | Activate to view only non-billable jobs.             |
| C    | Activate to view quantities taking tax into account. |

## Part Description

**D** Select one of the following options:

**Cost:** View report data by cost.

**Price:** View report data by price.

Data is organized by name in pie charts according to the units of measurement and currency selected when you configured the **Preferences** panel:



The doughnut charts make it easy to view the percentage of the categories being consumed.

There are tables listing the data by ink, paper, and scanner usage according to data recorded by the printers:

Totals by user

| Name: | Supplies & Service |       |          |              | Paper |      | Scanning |      | Total |      |
|-------|--------------------|-------|----------|--------------|-------|------|----------|------|-------|------|
|       | Pages              | sq ft | Ink (\$) | Service (\$) | sq ft | \$   | sq ft    | \$   |       | \$   |
| Name  | 0                  | 0.00  | 0.00     | 0.00         | 0.00  | 0.00 | 0.00     | 0.00 | 0.00  | 0.00 |
| Name  | 0                  | 0.00  | 0.00     | 0.00         | 0.00  | 0.00 | 0.00     | 0.00 | 0.00  | 0.00 |
| Name  | 0                  | 0.00  | 0.00     | 0.00         | 0.00  | 0.00 | 0.00     | 0.00 | 0.00  | 0.00 |
| Name  | 0                  | 0.00  | 0.00     | 0.00         | 0.00  | 0.00 | 0.00     | 0.00 | 0.00  | 0.00 |

Load more

The table makes it easy to view and compare data per project including the number of pages used, quantity of ink consumed, the total cost and the total price.

You can see specific data for the preferences you configured in the table:


Print by name

| Name      | Mono lines |        |       | Color lines |        |       | Low density |        |      | High density |        |      | Premium quality |        |     |
|-----------|------------|--------|-------|-------------|--------|-------|-------------|--------|------|--------------|--------|------|-----------------|--------|-----|
|           | Pages      | Sq. ft | USD   | Pages       | Sq. ft | USD   | Pages       | Sq. ft | USD  | Pages        | Sq. ft | USD  | Pages           | Sq. ft | USD |
| Project 1 | 0          | 0.00   | -     | 4           | 14.24  | 14.24 | 0           | 0.00   | -    | 0            | 0.00   | -    | 0               | 0.00   | -   |
| Project 2 | 2          | 13.33  | 13.33 | 7           | 22.28  | 22.28 | 1           | 2.68   | 2.68 | 1            | 5.37   | 5.37 | 0               | 0.00   | -   |
| Project 3 | 2          | 10.75  | 10.75 | 8           | 35.74  | 35.74 | 1           | 2.68   | 2.68 | 1            | 5.37   | 5.37 | 0               | 0.00   | -   |
| Project 6 | 1          | 5.37   | 5.37  | 3           | 13.43  | 13.43 | 1           | 2.68   | 2.68 | 0            | 0.00   | -    | 0               | 0.00   | -   |

## Custom

Choose the **Custom** tab to create your own report according to your needs.

Next, decide if you want to create a report based on users, projects or departments. Make your choice by clicking the corresponding sub-tab. In the example below, the Projects sub-tab is selected:

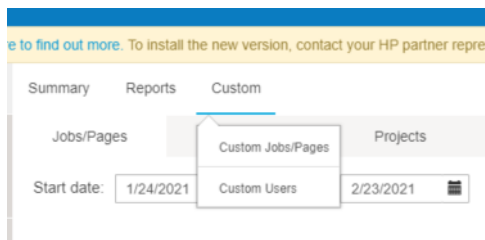

You can see the template of your custom report contains gray panels. The smaller panels are where the graphs you choose will be displayed. The larger panels are for displaying tables depending on the data you choose to show.

To create a panel, click the **New panel** button.

To configure a panel, click the  icon. The following window opens:

The type of image you want to display affects the options available later:

- **Graphic:** To add a graph
- **Table:** To add a table

If you selected **Graphic**, you can choose which values to compare:

- **Same values:** To add a pie chart
- **Different values:** To add a bar chart

You can then choose the units you want to display in your custom report:

- **Usage:** This will display the use of ink, paper, and scanner
- **Fees:** This will display data by cost/price, billable, non-billable, both billable and non-billable together.

Select the value you want to show based on the unit you chose above.

Finally, select the name of the project you are creating the report for. In this example, the report is for a project since the project sub-tab was selected at the beginning. However you also have the option to create reports for departments and users.

If on the other hand you selected **Table**, the window below is displayed:


You can now choose all the values and projects (or users or departments, depending on the sub-tab selected) that you want to see in the report. Selected projects/users/departments move to the top of the list.

Click the **Create** button to save your choices and close the window.

Once you have created the panels you want, you can drag-and-drop them to the position you prefer.

To delete a panel, click the icon.

To view previously created custom reports, hover over the **Custom** menu:

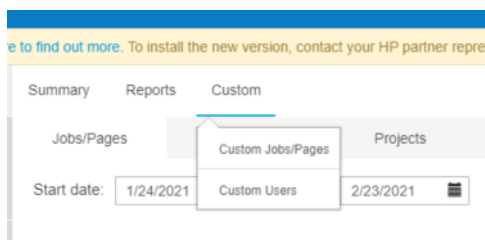

Click the report you want to open.

To delete a report, hover over the **Custom** menu and, when the menu appears, choose the report you want to delete. Once the report is displayed on-screen, click the **Delete** button. If you hover over the **Custom** tab again, you will see that the deleted report no longer appears in the list.

You can also create a customized raw data report with all the information related to the jobs and pages, and export it to a csv formatted file. First you must select the information per job to be exported, such as Username, Project, Department, Date, Ink cost by usage, Paper price, and so on. The end and start dates for the report must also be selected.

## Custom jobs/pages (raw data)

Custom jobs/pages reports are a special type of data table report in which the user can select the information to be shown for each job that has been printed during the selected time frame.

When viewing a report already created and clicking the icon or the icon, a new window will appear showing all the available values for a job. The user can select values to be used in the report, rename the column names, and change the order in which they should appear.

Once all the desired values have been selected and placed in the correct order, the user can click the **Save** button to close the window and confirm the selections made.

Once the values have been confirmed, the report is automatically populated with the values stored in the database for each job included in the time frame selected.


## Custom logo

This topic provides a full set of reference information for this subject.

### Note:

Administrators only

To configure or change a logo to be included in the reports, click the  icon to open the **Preferences** panel and by clicking the **Options** tab a screen, as shown below, will be displayed:

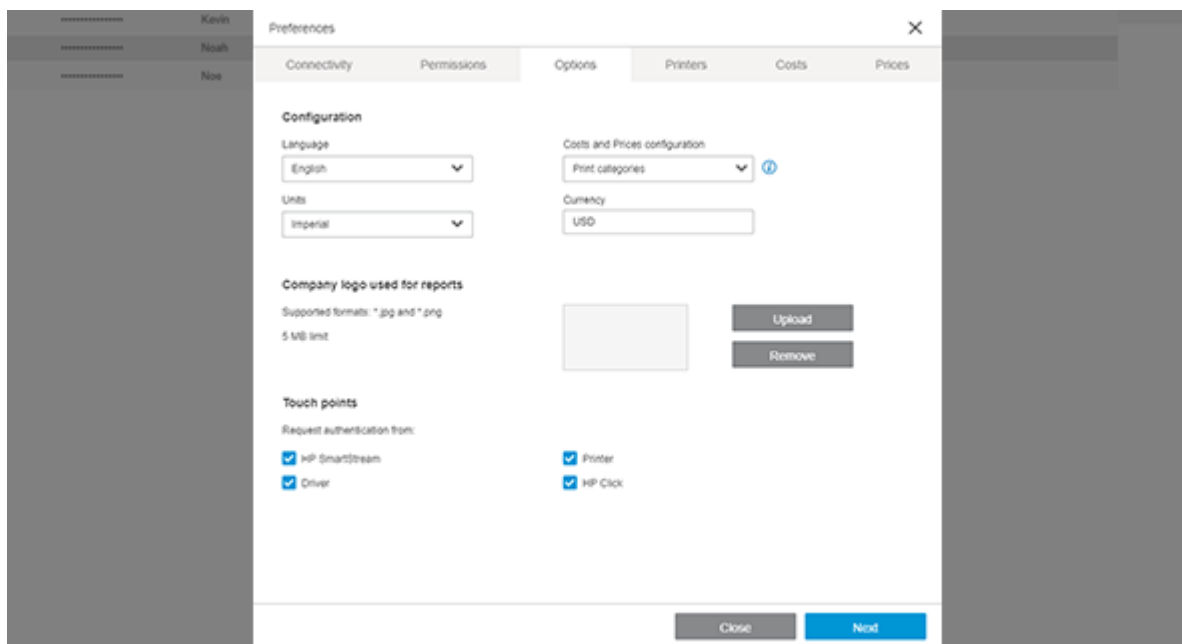

Preferences

Connectivity Permissions Options Printers Costs Prices

**Configuration**

Language: English

Units: Imperial

Costs and Prices configuration

Print categories: [dropdown]

Currency: USD

**Company logo used for reports**

Supported formats: \*.jpg and \*.png  
5 MB limit

Upload Remove

**Touch points**

Request authentication from:

☒ HP SmartStream ☒ Printer

☒ Driver ☒ HP Click


Close Next

To upload a logo image file click the **Upload** button and a window will open so you can browse for the image to be used. The uploaded image must adhere to the characteristics mentioned in this screen.

If a logo has already been uploaded, click the **Remove** button to remove it.

Once a logo is uploaded, it is immediately available to an administrator or bookkeeper for use in a report to be exported.

By default the option to **Include company logo** is checked.

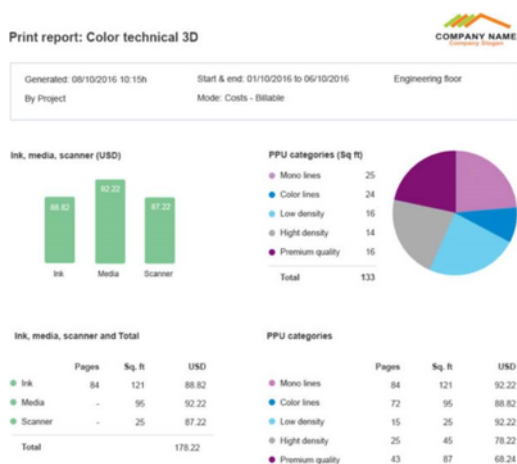

## Scheduling and emailing reports

Administrator and bookkeeper users can email reports to a specific user, project, or department. They can also choose the format of the report, PDF and/or xslx.

To email a report, click **Email .pdf/.xls**. The following window opens:

Email PDF or Excel

Email destination  
user1@hp.com;user2@hp.com;user3@hp.com

☒ PDF ☐ Excel

☒ Include company logo 

All users ▼  
All users

Send

In the **Email destination** field, enter the email address(es) where you want to send the report. Next choose whether you want to send the report in PDF or Excel format, and click the **Send** button.

### Note:

Reports saved in Excel format do not contain any images.

To schedule and email a Summary report, click **Schedule Summary**. A window like the one shown below is displayed:

Schedule summary

When the report is sent  
19/09/2018 0:00h

Recurrency  
None

Email destination  
summary@hp.com

☒ PDF ☐ Excel

☒ Include company logo 

Delete Send



In the **Start sending reports since** field, select the date on which you want to send the first report. Choose the time from the drop-down menu.

You can also choose how often the email should be sent by selecting a value from the using **Recurrency** drop-down list.

In the **Email destination** field, enter the email address where the report is to be sent. To send to more than one destination, separate each address by a semicolon (;) character.

Next, by checking the **PDF** and **Excel** checkboxes, choose the format(s) to be used for the exported report.

Finally, click the **Send** button.

## Schedule and email user, project, or department reports

To schedule and email a specific report, click the **Users**, **Projects**, or **Departments** tab and then click **Schedule Reports**. The following window opens:

In the **Start sending reports** field, select the date on which you want to send the first report. Choose the time from the drop-down menu.

You can also choose how often the email should be sent by selecting a value from the **Recurrency** drop-down list.

In the **Email destination** field, enter the email address to which the report is to be sent. To send to more than one destination, separate each address by a semicolon (;) character.

Next, by checking the **PDF** and **Excel** checkboxes, choose the format(s) to be used for the exported report.


The **All or individual projects** field can be used to select one particular project from the list of available projects (the information displayed in the list will depend on user selection).

## Printing workflow authentication

### Printing from the user's PC

The printing workflow to an HP SmartTracker-enabled printer is similar to the regular printing workflow from any of the submittal tools: HP SmartStream, HP Click, or HP driver.

You can send a job to be printed in the usual way (when printing through the driver, by selecting the **File > Print** option from any application) and, while the HP SmartTracker configuration is obtained from the server, the following popup will be shown:

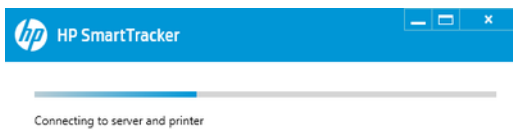

If the printer has been configured to ask for authentication through HP SmartTracker, a popup will appear asking for the credentials that have been configured for the printer group of the printer. For example, if the printer group has been configured to require a username with password, project, and department, the popup will look similar to the following:

 A screenshot of the HP SmartTracker authentication popup. The title bar is blue with the HP logo and the text 'HP SmartTracker'. The main content area has a light gray background and contains the following fields:
 

- 'Please enter credentials to allow the identification' (instructional text)
- 'Username:' label followed by a dropdown menu showing 'smith'
- 'Password:' label followed by a text box with six asterisks
- 'Project:' label followed by a dropdown menu showing 'Project146'
- 'Password:' label followed by a text box with six asterisks
- 'Department:' label followed by a dropdown menu showing 'Engineering'
- 'Password:' label followed by a text box with three asterisks
- 'Biliable' checkbox (checked)
- 'Remember data' checkbox (unchecked)
- 'Cancel' button (gray)
- 'OK' button (blue)


Once you have entered all the information that has been requested (username, project, department, comments, and passwords), the **OK** button must be clicked in order to continue the authentication process and send the job to the printer. You can also select the **Cancel** button to cancel the printing workflow at any time.

In many cases the information you enter in the authentication window will be the same, in order to avoid that you have to re-enter the same authentication data each time in order to print you can check the **Remember data** checkbox and, as long as the configured credentials for the printer group are not changed, the next time the authentication popup is shown it will be populated with the data entered last time.

When you click the **OK** button, the printer proceeds to check whether the provided credentials are valid or not, the **Connecting to server and printer** popup will be shown, and if the authentication is successful, the job will be sent to the printer without any more on-screen messages.

### Authentication error cases


If you have completed all the information asked by the authentication popup, but the credentials provided do not match any of the previously stored credentials on the HP SmartTracker Server, an “Authentication error: invalid credentials” message will appear.

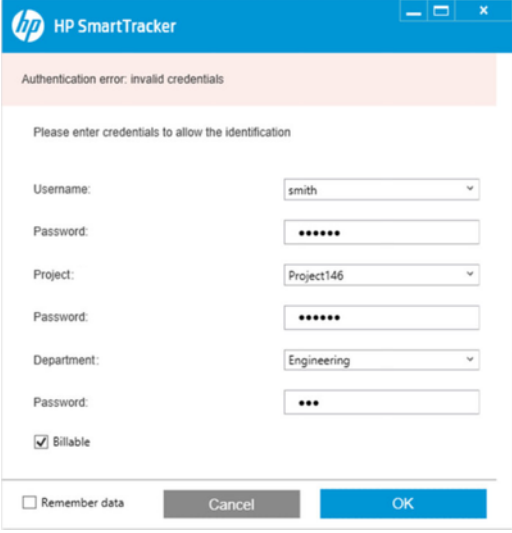

The screenshot shows a dialog box titled "HP SmartTracker" with a blue header. Below the header, a pink banner displays the message "Authentication error: invalid credentials". The main area of the dialog contains the text "Please enter credentials to allow the identification". There are five input fields: "Username:" with a dropdown menu showing "smith", "Password:" with a masked field "\*\*\*\*\*", "Project:" with a dropdown menu showing "Project146", "Password:" with a masked field "\*\*\*\*\*", and "Department:" with a dropdown menu showing "Engineering". Below these fields is a "Bilable" checkbox which is checked. At the bottom, there is a "Remember data" checkbox, a "Cancel" button, and an "OK" button.

In such cases, you will be able to re-enter the credentials and click **OK** to repeat the authentication process, or click **Cancel** to cancel the job.

If the communication between the user's PC and either the printer or the HP SmartTracker server is lost, a **Server not available** message will appear and the user will be prompted to cancel the job or continue printing without the use of credentials. However, this will happen only if the administrator has enabled the **Graceful failover** mode for that particular printer. Otherwise the printer cannot be used again until the HP SmartTracker server is back online.

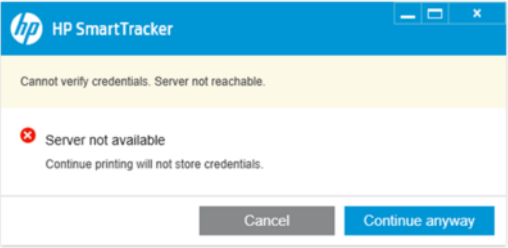

The screenshot shows a dialog box titled "HP SmartTracker" with a blue header. Below the header, a yellow banner displays the message "Cannot verify credentials. Server not reachable.". The main area of the dialog contains a red error icon, the text "Server not available", and the text "Continue printing will not store credentials.". At the bottom, there are two buttons: "Cancel" and "Continue anyway".

If you click **Continue anyway**, the job will be directly printed and will be assigned to user/project/department "Unknown" in the reports section.

### Printing, scanning, or copying from the printer's control panel

In order to be able to print, scan, or copy from the printer's control panel, you must be authenticated by providing any credentials configured on the HP SmartTracker server for the printer.

The authentication process starts whenever you start any of the restricted actions (print from USB, print a job from the job queue, scan, or copy). In these cases, an authentication popup is shown on the printer's control panel, asking for the credentials stored on the server:

Credentials required

Please enter credentials to allow the identification

Username: smith

Password: .....

Project: Project146

Password: .....

Cancel OK

Once you provide all the required information and click **OK**, the credentials are validated with the server and, if they are correct, the user is logged in and can continue with the workflow that has been initiated.


You will remain authenticated on the printer provided you continue performing actions from the control panel, no new authentication will be required when starting any of the restricted actions (print from control panel, scan, or copy).

After a period of control-panel inactivity, you will be automatically logged out and you will have to repeat the authentication in order to start any of the restricted actions.

You can also choose to log out from the printer by clicking the **user log-out** icon on the control panel; any new user will have to go through the authentication process in order to start any of the restricted actions.

## Database management


**Database management** is available inside the  menu.

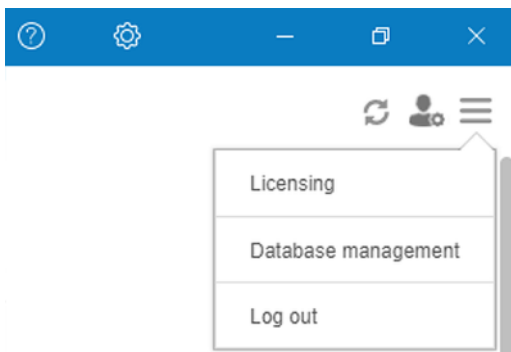

If the SmartTracker client is installed in a different PC than the server, the **Database management** option is unavailable (the option is only for administrator roles).

### Backup and restore database

Select the **Backup and Restore Database** tab, and the screen below appears:

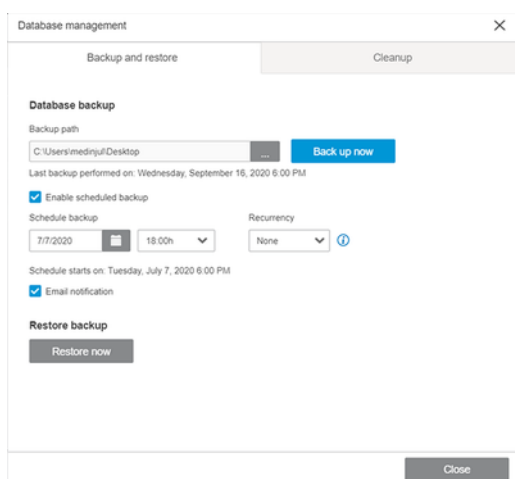


Select a file name to backup or restore, and click the button to start the backup or restore operation. A window appears to tell you that the process will take several minutes. The server automatically restarts, and during the process, the SmartTracker server is unreachable.

### Note:

You cannot save a backup file directly to C:\, another location must be chosen.

Below, there is an option to activate or deactivate the **Backup Scheduler** functionality. Automatic backups can be set periodically (weekly, monthly) starting at a certain date and time. Activate or deactivate the toggle to enable or disable the configured schedule:

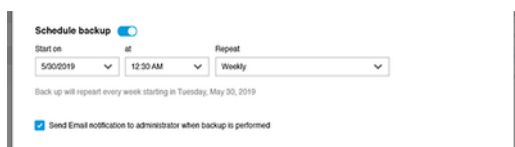


## Restore

To restore the database from a previous backup, select the **Database management** option and, under **Restore backup**, click the **Restore now** button. This opens the File Explorer, where you can select the required backup to restore (backups are stored with a **.bk** file extension).


## Clean up database

As database content increases, there is no automatic process to delete the content. The **Cleanup** tab gives administrators the ability to remove some data permanently, including users, projects, departments, and jobs.

In the home screen there is an option to remove users, projects, and departments no longer required by setting the **Remove** status to the desired items:

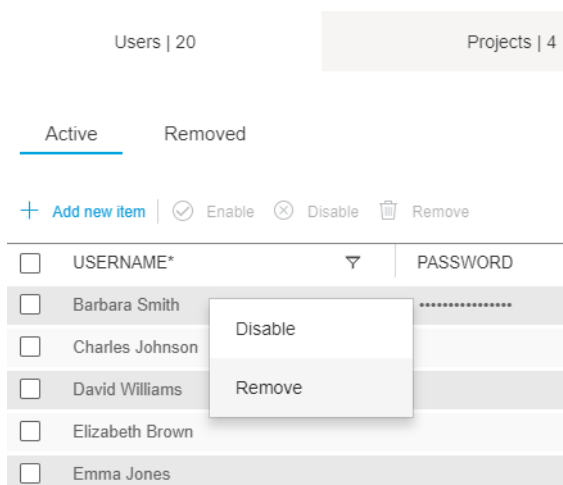

To delete an item already selected to **Remove**, click the  icon, then in **Database Management** click the **Cleanup** tab, select the desired items to delete permanently, and click **Delete**.

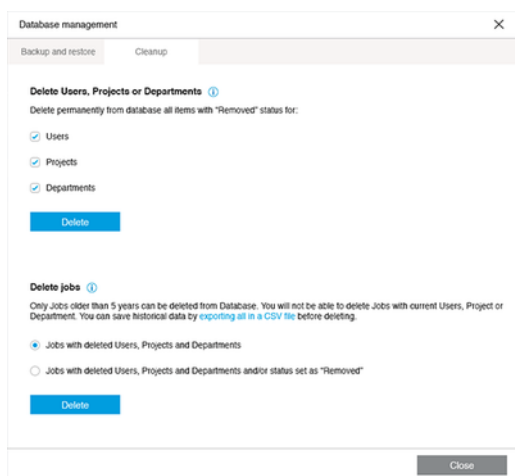


To delete jobs older than a 5 years permanently, select the desired option in **Delete jobs** and click **Delete**.

### Note:

Only jobs older than 5 years can be deleted. You cannot delete jobs with enabled or disabled users, projects, or departments, only the items deleted temporarily or permanently will be removed. You can save historical data by exporting a CSV file before deletion.

## Support tool

For troubleshooting, an integrated support tool has been added to the  menu.

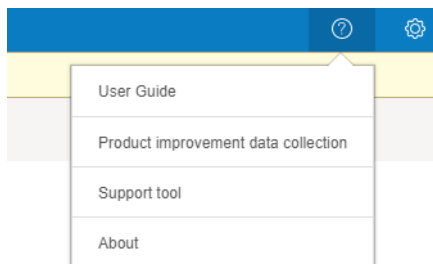

It gathers information about the computer running it, and the server and client versions.

It also includes the following options to help test the printer and SmartTracker software recover from a problem. Fill in the printer IP address or hostname.

Support tool

Information Printer tester Log collector

IP address/hostname:  Check

Printer model: - Firmware version: -  
 License: not available Type of license: -  
 Printer in SmartTracker mode: - Server IP address registered in printer: -  
 Graceful Follower: - Open accounting response: -  
 Printer timestamp: - ST Server timestamp: -  
 Proxy configured: - Proxy server name: -  
 Proxy server port: -

Save results

Close

Click the **Check** button, and a set of checks run automatically.

Support tool

Information Printer tester Log collector

IP address/hostname: 15.93.7.28 Check

✓ Printer model: HP PageWide XL 3900PS MFP ✓ Firmware version: NGR\_13\_02\_01.1  
 ✓ License: Available ✓ Type of license: Trial (111 Days)  
 ✓ Printer in SmartTracker mode: Yes ⓘ Server IP address registered in printer: 15.93.4.174  
 ⓘ Graceful Follower: Active ✓ Open accounting response: Success  
 ✓ Printer timestamp: 2019-07-19 14:45:32 UTC ✓ ST Server timestamp: 2019-07-19 14:45:13 UTC  
 ✓ Proxy configured: No ⓘ Proxy server name: -  
 ⓘ Proxy server port: -

Save results

Close

You can save the client and server logs.

Support tool

Information Printer tester Log collector

① Create a log package of application to get better technical support.

Client logs package  
Get logs

Server logs package  
Get logs

Close

**Note:**

Server-logs package generation is unavailable when the HP SmartTracker Client is installed on a PC other than the Server.

## Manual update

Whenever a new version of the application is available, the SmartTracker client notifies you. You can download the client and the server from [hp.com](http://hp.com).


If you prefer not to update at that time, just discard the message and check for updates whenever you like from the **About** menu in the client application.

If the outgoing email has been properly configured, an email is sent to the administrator.

Make sure to update the server, plus any client that is installed, with exactly the same version number. Other versions may not be compatible.

## Logging out

To log out of HP SmartTracker, click the  icon and choose **Log out** from the menu.

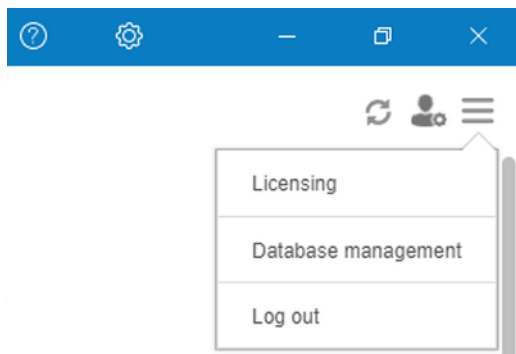

You are successfully logged out of the application. To log in again, you will need to enter your username and password.



# Index

## A

about the home screen [161](#)  
 accounting [119](#)  
 accounting preferences [72](#)  
 add files [77](#)  
 advanced network interface [149](#)  
 application error [124](#)  
 authentication error cases [183](#)  
 automatic settings [80](#)

## B

backup/restore database [184](#)  
 billable, marking a job as [164](#)  
 borderless printing [91](#)

## C

cancel jobs [109](#)  
 categories, pixel coverage [133](#)  
 cleanup database [185](#)  
 clipping [102](#)  
 clusters [80](#)  
 collate [83](#)  
 color management [110](#)  
 columns  
   hide [62](#)  
   resequence [62](#)  
   show [62](#)  
 configuration via Active Directory (AD) [147](#)  
 configuring printers [150](#)  
 configuring users of printers and printer groups [162](#)  
 connectivity [145](#)  
 copies [83](#)  
 copy job/pages [91](#)  
 copy settings [91](#)  
 costs [159](#)  
 costs, setting [158](#)  
 create a group of printers [154](#)  
 create a job [77](#)  
 Crystal Preview [104](#)  
 csv, import/export [166](#)  
 currency, setting [158](#)  
 custom [176](#)  
 custom jobs and pages [178](#)  
 custom logo [179](#)

## D

database management [184](#)  
 delete a group of printers [155](#)  
 delete a job [91](#)  
 delete pages [92](#)  
 departments [166](#)  
 discipline [83](#)  
 distributed workflow [64](#)

document organizer module [126](#)  
 double-sided printing [87](#)  
 driver  
   installation [5](#)

## E

edit a group of printers [154](#)  
 edit a job [81](#)  
 editing a printer [153](#)  
 email service [146](#)  
 error detection [78](#)  
 errors [79](#)  
 excluded pages [107](#)  
 exit while printing [109](#)  
 export csv [166](#), [169](#)  
 extract pages [91](#)

## F

file formats, supported [50](#)  
 filter pages [92](#)  
 filter, remove [166](#)  
 filtered pages [107](#)  
 filtering [165](#)

## G

general preferences [71](#)  
 generating reports [169](#)  
 getting started [46](#)  
   HP SmartStream [62](#)  
 gloss enhancer [84](#)

## H

history [110](#)  
 hot folders [75](#), [113](#)  
 HP Click  
   job preparation [55](#)  
   nesting [58](#)  
   page options [56](#)  
   preferences [52](#)  
   preview [57](#)  
   print settings [55](#)  
   printing [58](#)  
   support tool [60](#)  
   troubleshooting [59](#)  
 HP Click application [46](#)  
 HP SmartStream  
   getting started [62](#)  
   shortcut keys [140](#)  
 HP Support [28](#)

## I

image [102](#)

import csv [166](#), [166](#)  
 ink-density profile [135](#)  
 installation [49](#)  
 interrupted printing [108](#)  
 introduction [46](#)

## J

job  
     edit [81](#)  
 job options [83](#)  
 job overview [80](#)  
 job preparation [77](#)  
     HP Click [55](#)  
 job separators [107](#)

## L

labels [82](#)  
 language [71](#)  
 language, setting [158](#)  
 languages, supported [51](#)  
 launching HP SmartTracker the first time [144](#)  
 licensing [51](#)  
 logging out [188](#)  
 logo, setting [158](#)

## M

main window [62](#)  
 manual update [188](#)  
 metadata [132](#)  
 mirror [103](#)  
 move job/pages [91](#)  
 MSI package  
     distribute [20](#)

## N

N-up printing [88](#)  
 nesting [88](#)  
     HP Click [58](#)  
 non-HP printers [135](#)

## O

options [158](#)

## P

page [102](#)  
 page options [91](#)  
     HP Click [56](#)  
 pane widths [62](#)  
 PDF  
     password protection [78](#)  
 permissions [156](#)  
 pixel analysis module [133](#)  
 preferences  
     accounting [72](#)  
     general [71](#)

    HP Click [52](#)  
     printer-specific [72](#)  
 preflight desk [65](#)  
 preset synchronization tool [24](#)  
 presets [75](#)  
 preview [101](#)  
     HP Click [57](#)  
     moving stamps [85](#)  
 preview tools [102](#)  
 preview undocking [103](#)  
 prices [160](#)  
 prices, setting [158](#)  
 print operator [64](#)  
 print settings  
     HP Click [55](#)  
 printer  
     add [65](#)  
     change address [66](#)  
     delete [67](#)  
     non-HP [135](#)  
 printer-specific preferences [72](#)  
 printers [150](#)  
 printers pane [67](#)  
 printers, supported [49](#)  
 printing [106](#)  
     HP Click [58](#)  
 printing from the user's PC [181](#)  
 printing queue [106](#), [108](#)  
 printing workflow authentication [181](#)  
 printing, scanning, or copying from the printer's control panel [183](#)  
 projects [166](#)

## Q

QR codes [86](#)  
 queue [108](#)

## R

raw data [178](#)  
 rename pages [126](#)  
 reports [173](#)  
 requirements [49](#)  
 resolution center [79](#)  
 restore [185](#)  
 roll [102](#)

## S

scanning [113](#)  
 schedule and email user, project, or department reports [181](#)  
 scheduling and emailing reports [180](#)  
 send to print [106](#)  
 separators, job [107](#)  
 server address configuration [147](#)  
 sheets [87](#)  
 shortcut keys  
     HP SmartStream [140](#)  
 soft proofing [104](#)  
 software setup [64](#)  
 sort pages [93](#)

- stamps [84](#)
  - in preview [85](#)
- submission driver [122](#)
- summary [169](#)
- support tool [186](#)
  - HP Click [60](#)

## T

- thresholds, pixel coverage [133](#)
- thumbnails
  - disable [72](#)
- toolbar [82](#)
- touch points [158](#)
- touch points, selecting [158](#)
- track added files [126](#)
- trial license [51](#)
- troubleshooting
  - HP Click [59](#)

## U

- units of measurement [71](#)
- units, setting [158](#)
- updates, automatic [51](#)
- user interface [62](#)

## V

- vertical trimmer [90](#)

## W

- warnings [79](#)
- workflow management module [135](#)