
Quick servo assembling instructions

ENSTA | INSTITUT POLYTECHNIQUE DE PARIS



Strip cable and assemble penetrator

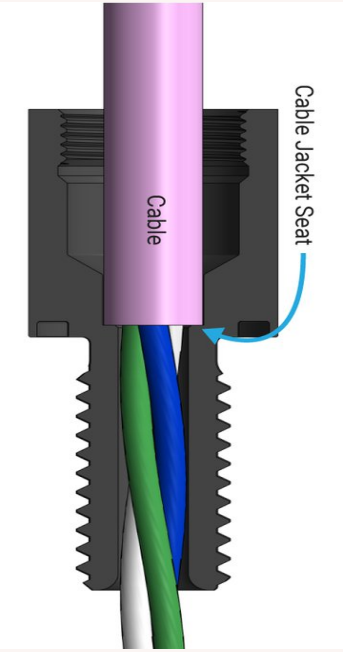

Put penetrator in servo case



Put servo in case

⚠ align both servo shaft and case shaft

For servo :
power on and set position to zero

For case :
put the hub and align it




Cut both 3-wires at correct length



Solder the wires together



Lube the o-ring and screw the case

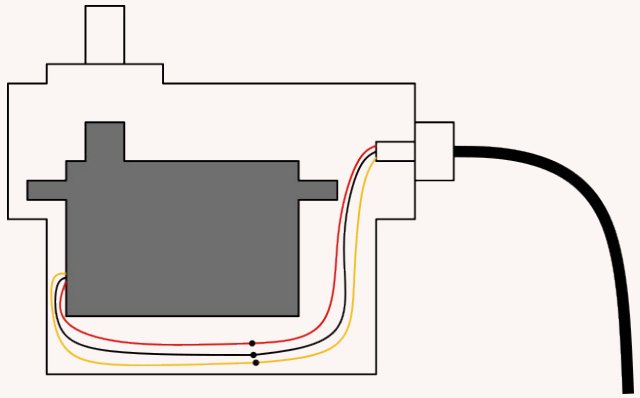

Thank you for your attention

Do you have any question?

ENSTA | INSTITUT POLYTECHNIQUE DE PARIS