


MANUAL

V6.0

Please check regularly for updated versions of this manual on slacktivity.com


«seaHorse-1.5»

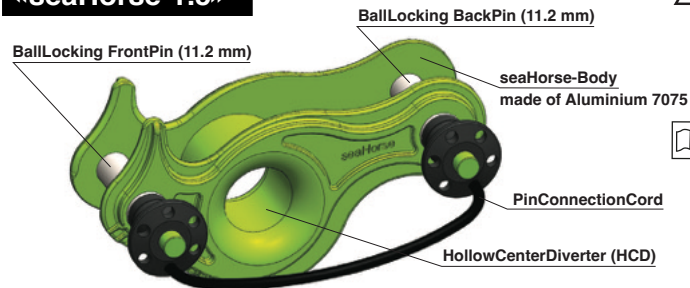

Weight: 263g

WLL: 12kN / MBS: 70kN
For slackline webbings
» of Polyester/Polyamid/UHMWPE
» 25-27mm width / +Spacer 18-20mm
» up to 8mm thickness

2. How to setup

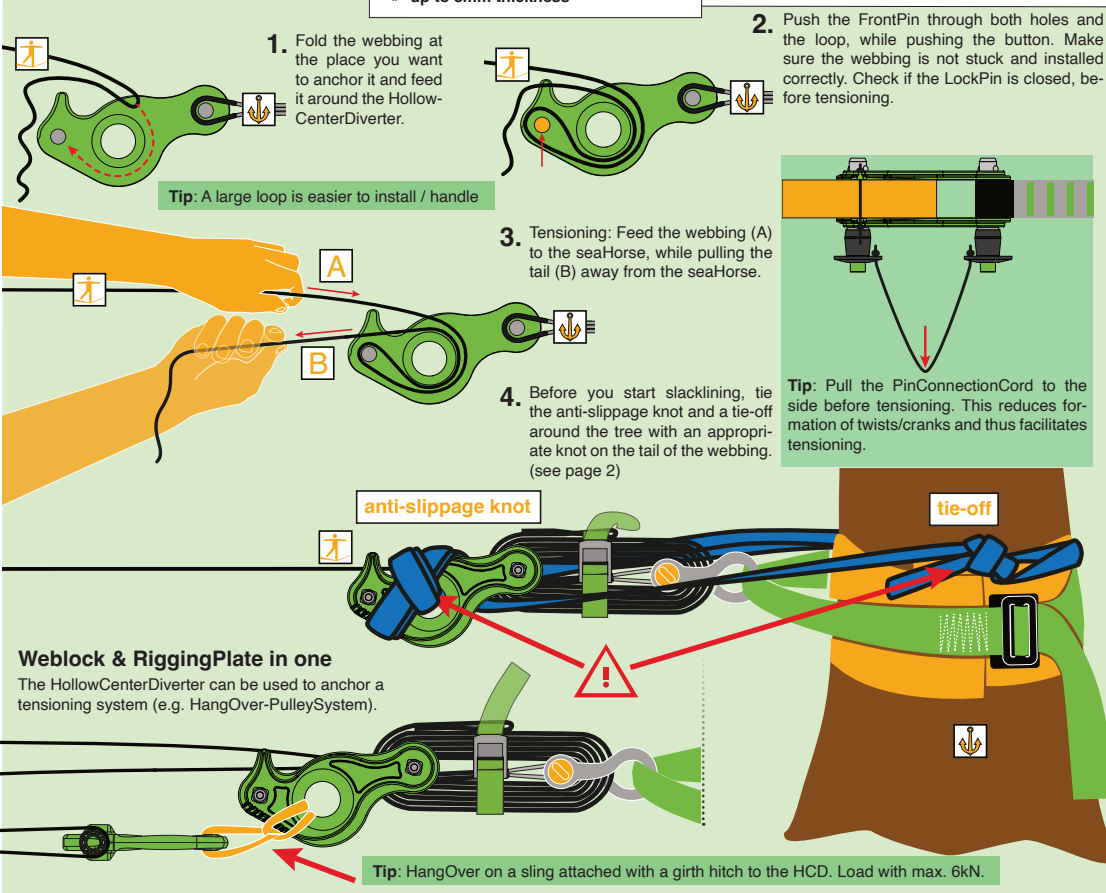

Markings In highlining there is a potential risk of accident, severe injury or death. Therefore this product must only be used by trained or otherwise competent persons or people that are under direct supervision and visual control of such a person.



Before using this equipment, you must read and understand all instructions for Use.



1. Area of application

The seaHorse is a weblock for fixation of slackline webbings in slackline-systems and highlines.

The seaHorse is approved for the single and double wrap method.


Use only ISA:41 approved webbing for highline applications.

3. Warnings

Only the displayed connection elements are allowed to use with the seaHorse

Allgemeiner Hinweis

Carabiners (according to EN 362 or EN 12275) are not approved for highline use. Exception is the use of carabiners for tie-off and backup.

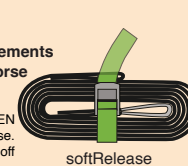

softRelease




deadManPlate



ConnectionLoop




Slings

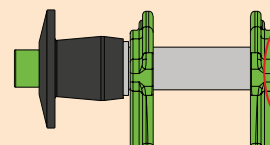


Make sure at each use that the balls of the pins are locked outside of the seaHorse body. You can double-check that by trying to pull out the pin without pressing the green button.



Attention! Dirt can prevent the automatic latching of the locking mechanism. Therefore this check is important!

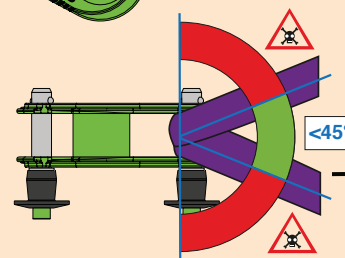

The HollowCenterDiverter must not be used as primary anchor. The seaHorse would turn by 180° and thereby lose the webbing locking ability.

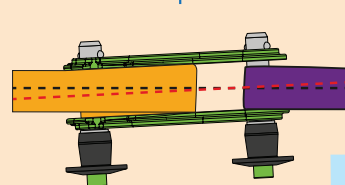

The seaHorse must be installed hanging freely. No support.

An angle of 45° of the anchoring slings must not be exceeded to prevent too high expanding forces.

<45°



4. Lifespan and replacement

With occasional, proper use without visible wear and under optimal storage conditions, the product has an unlimited service life. However, this is reduced with intensive use and under harsh environmental conditions such as salt, sand, snow, ice, moisture, or chemical exposure. Regular and careful inspection for signs of corrosion is required, especially when used in corrosive environments (e.g., near the sea). Contact points between the pin and the aluminum body, as well as areas where the anodized layer is weakened, are particularly susceptible to corrosion. After contact with salt water, the product must be thoroughly rinsed with fresh water and completely dried. Damage to the seaHorse may reduce its service life to a single use. Before each use, the condition of the seaHorse must be checked for proper function, wear, corrosion, deformation, and cracks. If any damage is detected, the product must be taken out of service immediately. The seaHorse must no longer be used if the aluminum body shows significant wear, especially if the pin holes are no longer round or if the body exhibits deformation, cracks, or material buildup (burrs). The PinConnectionCord can be replaced, if worn, with a standard rubber cord (Ø 3 mm).

Tip softRelease




When using the seaHorse in combination with a softRelease, connect the loop of the softRelease to the shackle. This prevents untwisting of the shackle pin when releasing.

Transportation and storing


The product must be stored dry and protected from light, separated from sharp objects, acids, bases & solvents.

© by SLACKTIVITY


4. Anti-slippage knot & tie-off

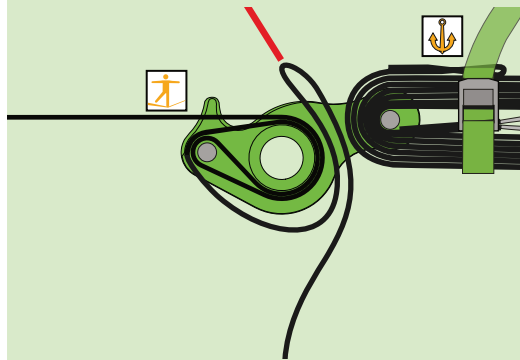


4.1 Put the folded tail coming out of the seaHorse in between the BackPin and the HollowCenterDiverter. Make sure that the webbing is straight and not twisted.

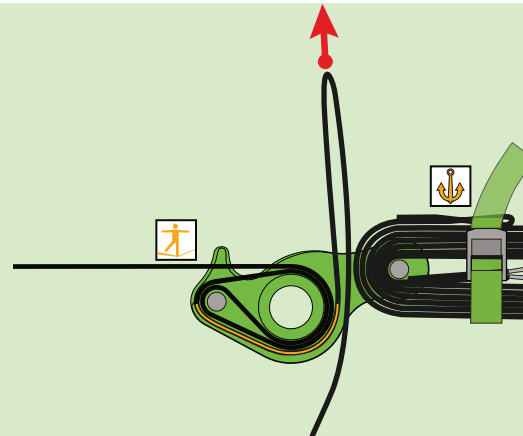


4.2 Pull through enough webbing to wrap around the seaHorse and the tie-off later. Make sure that the line is tight against the HollowCenterDiverter.

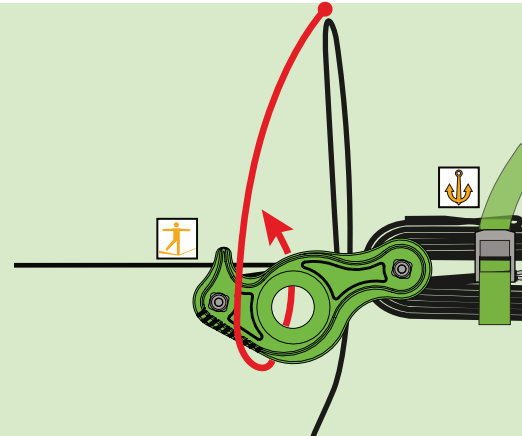

4.3 Wrap the tail of the webbing around the seaHorse (in between the FrontPin and the HollowCenterDiverter). Which direction to wrap around doesn't matter.

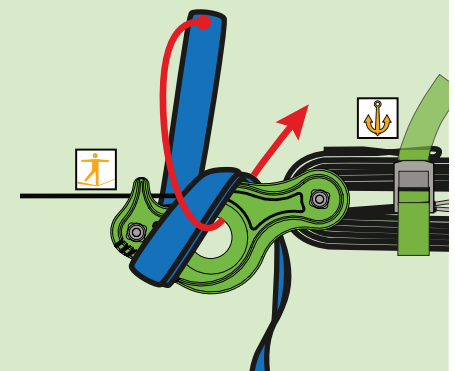


4.4 Now put the tail of the webbing into the HollowCenterDiverter in a way that the webbings are crossing once.

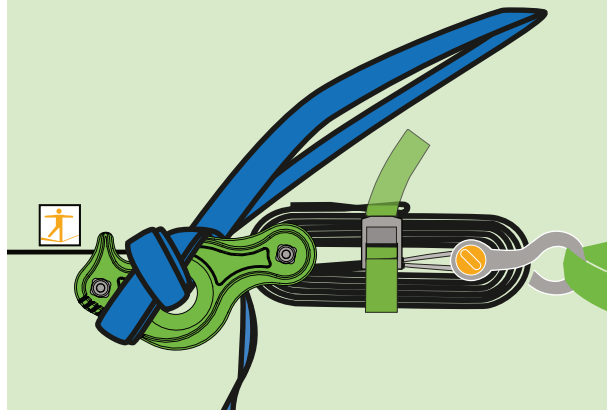

4.5 Pull the knot tight around the seaHorse. Make sure the webbing is nicely on top of one another and not twisted.

4.6 You can tie-off the seaHorse in multiple ways (for example A+B).

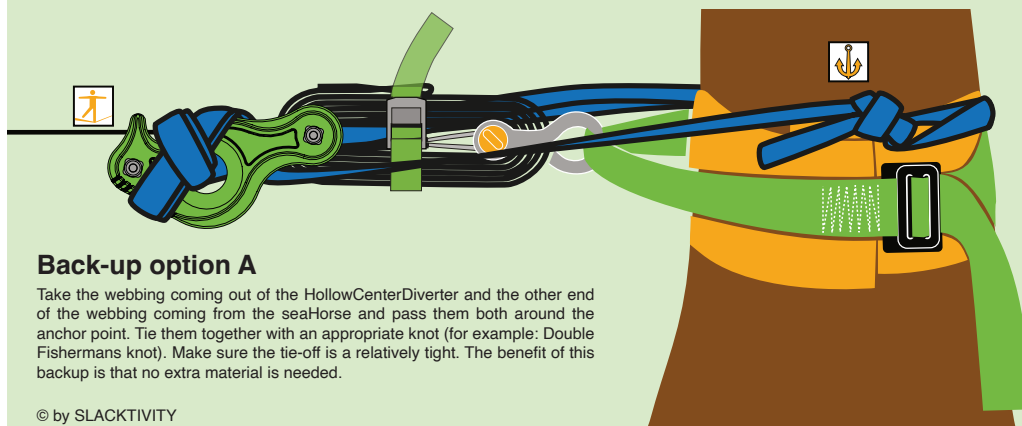

Back-up option A

Take the webbing coming out of the HollowCenterDiverter and the other end of the webbing coming from the seaHorse and pass them both around the anchor point. Tie them together with an appropriate knot (for example: Double Fishermans knot). Make sure the tie-off is a relatively tight. The benefit of this backup is that no extra material is needed.

© by SLACKTIVITY




Webbing-Slippage & Tail-Walk

With low tension slacklines (common in highlines) micro slippage might occur. This means the webbing slips millimeter by millimeter out of the weblock. This is not a malfunction, but a consequence of how the weblock is built. The anti-slippage knot and the tie-off demonstrates in the video and this manual completely stops this micro slippage on most lines. With very slippery webbing it's at least minimized and will be stopped when the tie-off is tensioned. **Most important the anti-slippage knot prevents any tail misalignment caused by slippage of the weblock.** Tail misalignment by tail-walking could lead to complete failure of locking the webbing. Be sure to always tie-off your weblock/webbing so that your line will always stay connected to the anchor point.



<https://youtu.be/z3smBHxE7bl>

More information about micro slippage and tail-walking and the tutorial "How to tie-off the seaHorse" can be found in this video.

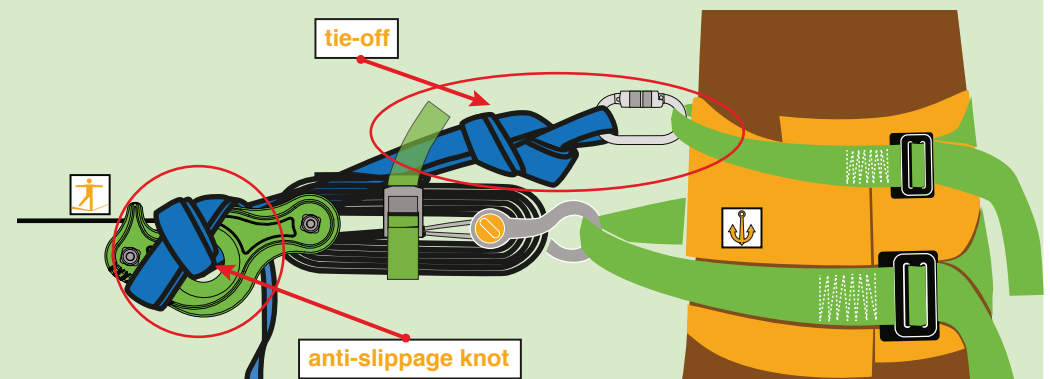

Back-up option B

Make a Figure-8-knot (or double fig. 8) with the webbing coming out of the HollowCenterDiverter and connect it with an additional carabiner or shackle to a separate sling/anchorpoint.

The benefit of this tie-off is that it is easy to check and easy to tie.

Do not forget!

Before you release the softRelease, untie your tie-off.

Additional Informations

Developed & designed by SLACKTIVITY Switzerland manufactured in Taiwan

Please report incidents and accidents with slacklines on this URL: sair.slacklineinternational.org

Contact

SLACKTIVITY.CH Ltd.
Dörfli 2, 8765 Engi, Switzerland
Phone: +41 77 408 03 57
Email: info@slacktivity.ch
URL: www.slacktivity.com