


GP0 - Joypad Output 1
 GP1 - Joypad Output 2
 GP2 - SD CLK
 GP3 - SD MOSI
 GP4 - SD MISO
 GP5 - SD CS
 GP10 - Joypad 1&2 Clock
 GP11 - Joypad 1&2 Latch
 GP12 - D0+ (TX0+)
 GP13 - D0- (TX0-)
 GP14 - CK+ (TXC+)
 GP15 - CK- (TC-)
 GP16 - D2+ (TX2+)
 GP17 - D2- (TX2-)
 GP18 - D1+ (TX1+)
 GP19 - D1- (TX1-)
 GP20 - Green LED
 GP21 - Red LED
 GP27 - Reset Button
 GP28 - Mono Audio Output

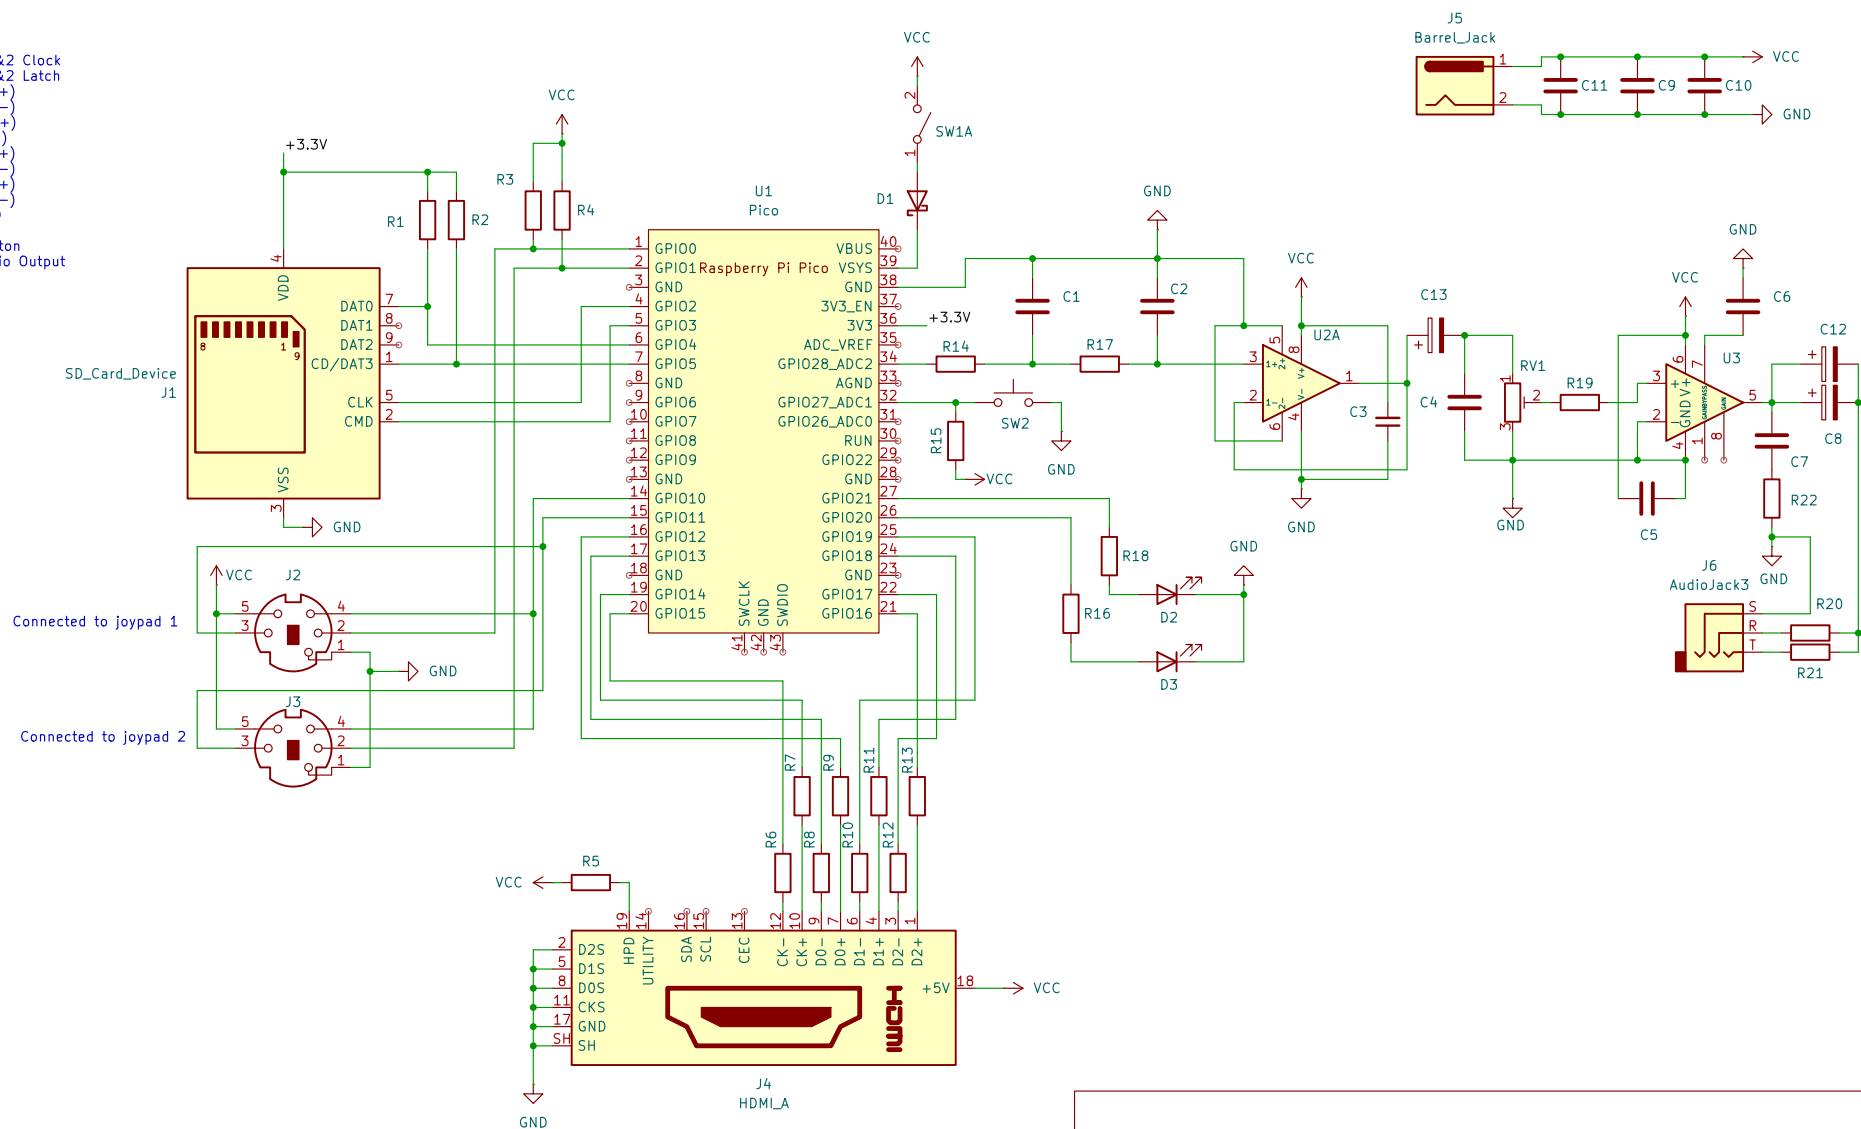

A. Kachaev, J. Jansa

Sheet: /

File: fwkes.kicad_sch

Title: FWKES Motherboard

Size: A4

Date: 2026-01-31

Rev:

KiCad E.D.A. 9.0.7

Id: 1/1