

This guide walks you through fitting your Diablo AK-47 FRT kit to your rifle. These kits are universal and require some fitting to your specific AK platform, so please read the instructions carefully to get the most out of your kit.

Most of the fitting steps below may not be required for your rifle, but this guide covers every issue you may come across along the way.

This kit will not work with ALG or B.A.D. triggers.

A labeled reference image of all kit components is included at the end of this guide. For a full video walkthrough, watch our installation video: youtube.com/watch?v=KYxbE5pt0qg

STEP 1: REMOVE THE DUST COVER

Press the recoil button protruding from the rear of the dust cover until it's flush with the surface, then lift the dust cover away.

STEP 2: REMOVE THE RECOIL ASSEMBLY

Push in the rear of the recoil assembly until it disengages from the tracks, then lift it up and pull it out.

STEP 3: REMOVE THE SAFETY LEVER & RETAINER PLATE / WIRE

Lift the safety lever until it's at a 90-degree angle from the top of the receiver, then pull it out. Once the safety lever is removed, take out the retainer plate or retainer wire.

Note: instructions for removing the retainer wire can't be provided due to its many variants. To remove the retainer plate, lift the rear of the plate and pull it out. If the plate doesn't lift easily, try lifting it diagonally, as a rivet may be obstructing removal.

STEP 4: REMOVE, DISASSEMBLE & REINSTALL THE TRIGGER ASSEMBLY

With the safety lever and retainer plate/wire removed, you can now take out the trigger assembly. First, move the legs of the hammer spring out of the way by grabbing both legs and pushing them toward the front of the hammer. Use a shotgun shell, rubber band, or zip tie to hold the legs in place (Figure A).



Figure A — Hold the hammer spring legs in place

Next, remove the axis pin by either grabbing the pin on the left side of the receiver or pushing in the pin on the right side while holding the left side pin. Once the pin is out, the trigger assembly will lift free.

Note: leave the Bolt Carrier Group (BCG) and hammer assembled in the receiver.

Once the trigger assembly is out of the receiver, you can begin disassembling it. Whether your trigger has a pin sleeve depends on the specific style — not having one is not an issue. If your trigger does have a pin sleeve, remove it first. Next, take out the disconnecter and disconnecter spring and set them aside; these two components won't be needed for reinstallation (Figure B).

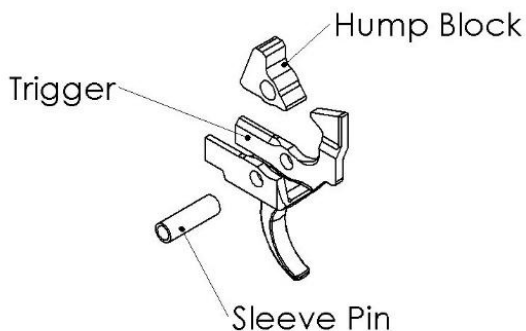


Figure B — Disassembled trigger components

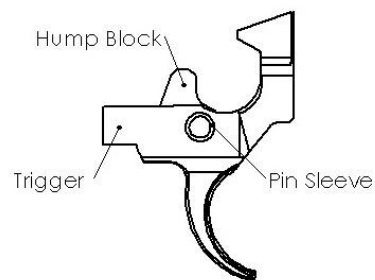


Figure C — Correct reassembly orientation

Now take your hump block, trigger, and pin sleeve and refer to the orientation image above (Figure C) for correct positioning.

Once assembled, place the trigger back into the receiver and reinstall the axis pin. Next, take the retainer plate included in the kit and install it into the receiver, making sure it fits into the channel on the axis pin. Use Figure D for guidance.

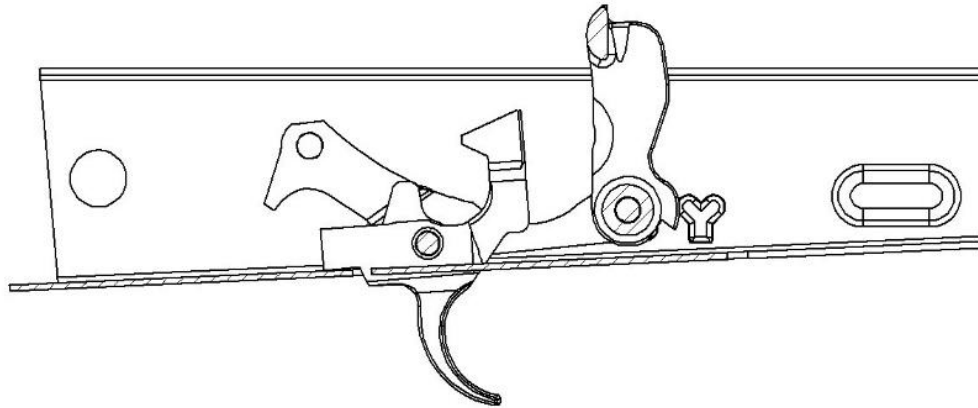


Figure D — Retainer plate installed in the receiver

TROUBLESHOOTING: RETAINER PLATE ALIGNMENT

If your retainer plate isn't seated properly and its hole doesn't align with the safety hole on the left side of the receiver, follow these steps:

1. **Check axis pins:** make sure your axis pins are fully installed.
2. **Verify safety alignment:** confirm the safety is properly seated and aligned with the retainer plate.
3. **Misalignment issue:** if you're having difficulty installing the safety, the retainer plate may be misaligned. In this case, you may need to remove material from the retainer plate for a proper fit.
4. **Consult example images:** refer to Figure E for guidance on where to remove material, and Figure F to assess whether your retainer plate is misaligned.

Following these steps should resolve the alignment issue with your retainer plate and safety.

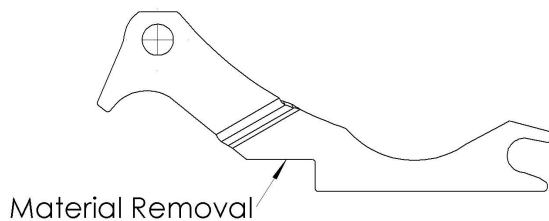


Figure E — Where to remove material

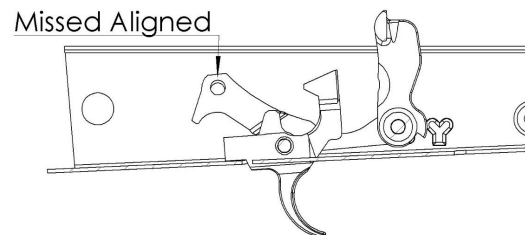


Figure F — Example of a misaligned retainer plate

INSTALL THE SAFETY LEVER & TRIGGER LOCKING BAR (TLB)

First, take the safety lever and Trigger Locking Bar (TLB). Start by inserting the safety lever into the keyhole of the receiver, but don't fully install it yet. Make sure the safety lever is positioned with the handle pointing upward.

Next, slide the TLB onto the shank of the safety lever. Keep in mind the TLB works together with the retainer plate — the cylinder on the left side of the TLB (Figure G) must fit securely within the channel of the retainer plate. Once complete, fully install the safety lever. Refer to Figure H to confirm correct orientation and installation.


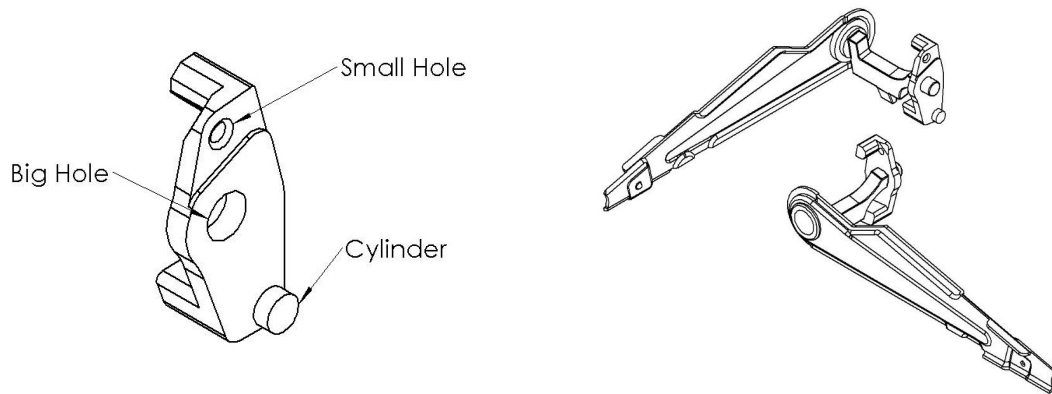


Figure G — TLB cylinder detail

Figure H — Safety lever & TLB, exploded view

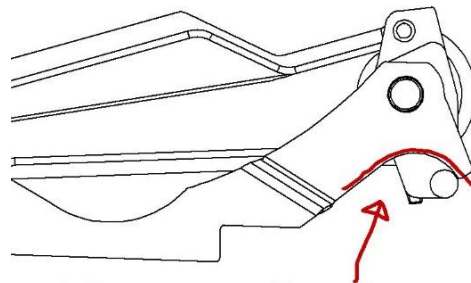

The cylinder must fit within the channel


Figure I — The cylinder must fit within the channel

CHECK TLB FITMENT

Once the safety lever and TLB are correctly installed, check the fitment of the TLB. Pull the Bolt Carrier Group (BCG) until it contacts the TLB, then pull it back a little further to see if it clears the TLB. Pull firmly but don't slam it — if the BCG can't clear the TLB, forcing it could cause damage.

If the BCG can't clear the TLB, it may be sitting too low (this is rare), leaving insufficient clearance. Double-check your setup and confirm the TLB is fully extended (Figure J).

BCG too low

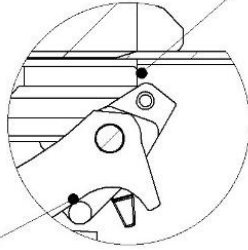


TLB max extension

Figure J — BCG too low / TLB max extension

Before disassembling the safety lever, TLB, and retainer plate, check how much material the trigger is holding onto the hammer while the TLB is engaged. Cock the hammer, engage the TLB, and squeeze the trigger to see how much material contact there is. Refer to Figure K for what the TLB looks like when engaged.

TLB Engaged

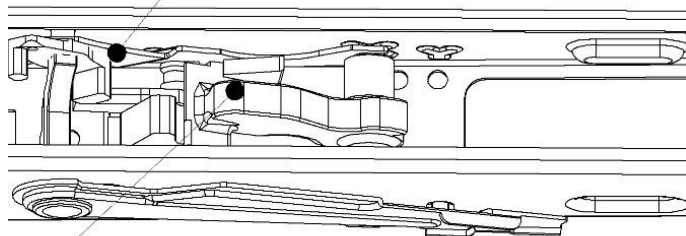

Trigger Holding On
to the Hammer

Figure K — TLB engaged / trigger holding on the hammer

At minimum, the trigger needs to hold onto the hammer by about 1mm; anything greater is fine. This measurement determines your next step: if it's greater than 1mm, modify the retainer plate. If it's close to 1mm or tighter, modify the TLB instead.

Option A — Modify the Retainer Plate

Disassemble the safety lever, TLB, and retainer plate after removing them from the receiver, then reassemble the three components outside the receiver. Extend the TLB as if engaging it — this will show you where to remove material from the retainer plate. Use a file or Dremel tool to make gradual adjustments, checking fit frequently to avoid removing too much material at once (Figure L).

Mark for material removal

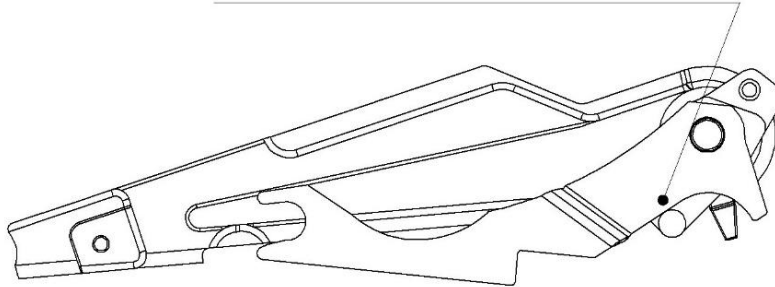


Figure L — Mark for material removal (retainer plate)

Option B — Modify the TLB

If the trigger is holding onto the hammer at around 1mm or tighter, a TLB modification (uncommon) is your route instead. To mark how much material to remove, leave all three components installed in the receiver, pull the BCG until it makes contact with the TLB, then mark that point. Use a file or Dremel tool and make gradual adjustments, checking fit frequently (Figure M).

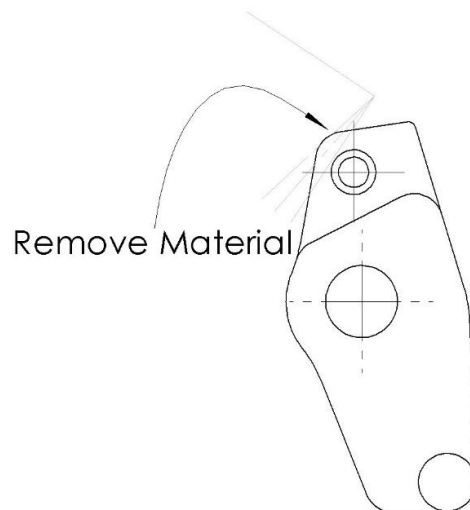


Figure M — Remove material from the TLB

Reinstall the three components into the receiver and perform a function test to confirm the BCG can clear the TLB.

FINAL TRIGGER FITMENT & COMPLETE INSTALLATION

Begin by squeezing the trigger (don't pull it), then pull the BCG until it contacts the TLB. Pull slightly beyond that point to confirm whether the BCG can clear the TLB. If it can't, the TLB isn't allowing the trigger to function properly.

To resolve this, remove all components except the hammer and BCG. Take the trigger assembly and carefully remove material from its rear left corner, shaving gradually and checking fit frequently (Figure N). *We recommend making this modification even if there's already clearance, since it reduces trigger slap and gives a smoother overall feel.*

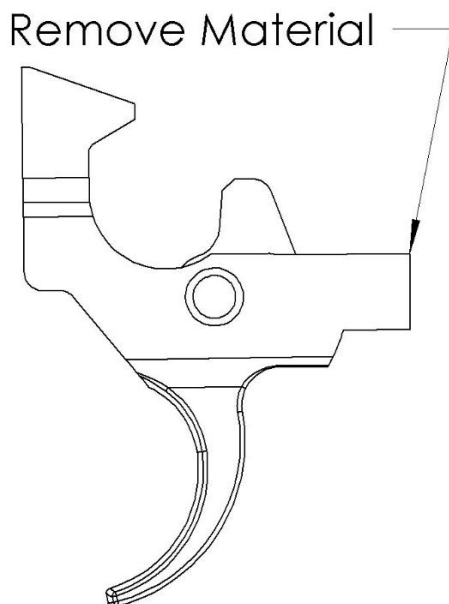


Figure N — Remove material from the rear left corner

Once everything fits properly with adequate clearance, proceed with full installation of the kit. Start by removing the BCG, then install all components except the safety lever and TLB.

Next, partially install the safety lever and TLB onto the receiver. Take the Transfer Bar (TB) — both ends are the same length — and fit one end into the same hole on the TLB while it's still hinged on the partially installed safety lever. Remember, the TLB works together with the retainer plate.

Now push the safety lever through the receiver from the opposite side. Press down on the TB and place it into the channel of the bolt guide, then flip down the safety lever to complete installation.

Engage the TLB; if the wire pops out, simply push it back into place. Install the BCG and put it into battery, then perform a function test. If the BCG doesn't go into battery, the bolt may be hanging up on the TB — double-check by examining the bolt to see if the TB is catching.

If needed, remove the BCG, pull out, and flip up the TB without removing any other components. Carefully bend the TB toward the left side of the receiver, checking fitment frequently as you go.

Now that fitment and function tests are complete, reassemble your AK fully. Perform one final function test and you're done (Figure O).

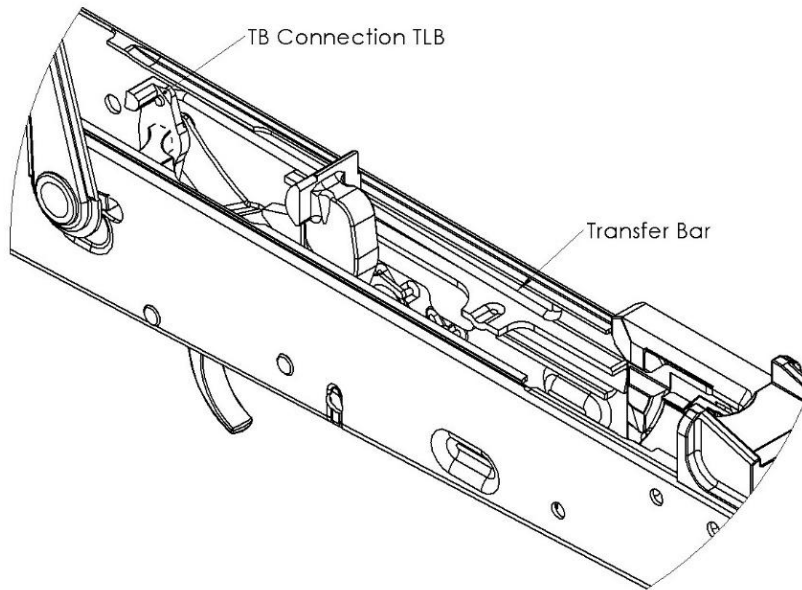


Figure O — Final reassembly

TIP: Racking the gun several times helps break in your kit.

OPTIONAL: TRANSFER BAR WIRE-TO-PLATE SWAP

If the Bolt Carrier Group (BCG) is interfering with your Transfer Bar wire — typically because the gap between the BCG and receiver wall is greater than 2mm — your kit may not function properly. Replacing the wire with a Transfer Bar plate resolves this issue.

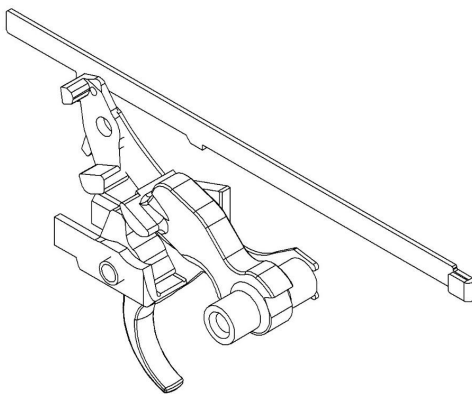


Figure P — Transfer Bar wire assembly

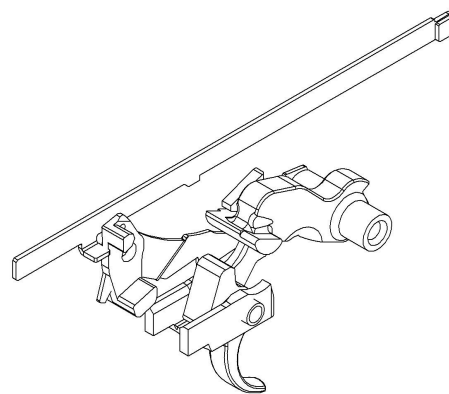


Figure Q — Transfer Bar plate assembly

1. Lay the part into the receiver, using Figure R for reference.

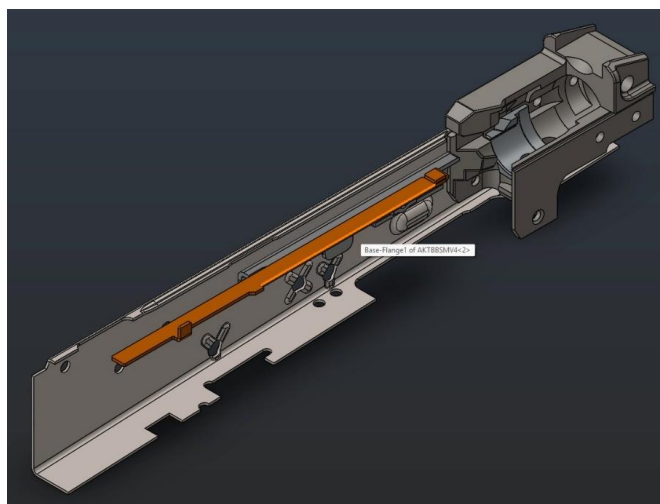


Figure R

2. Push the part into the receiver, making sure it fits between the top rail and the bolt guide, using Figure S for reference.

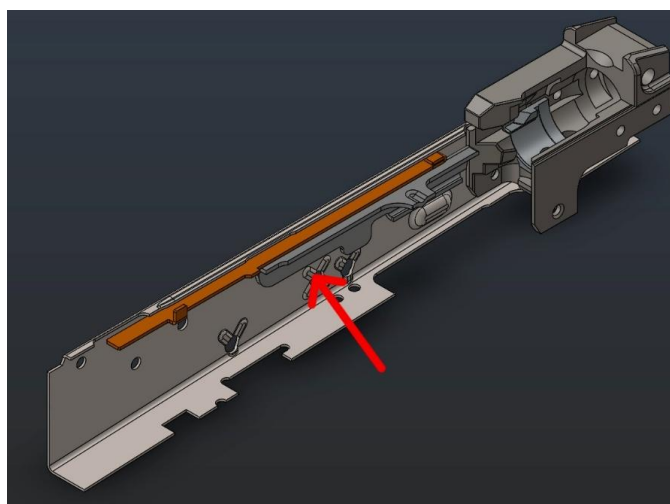


Figure S

3. Pivot the part into the receiver — this is the only way it will fit — using Figure T for reference.

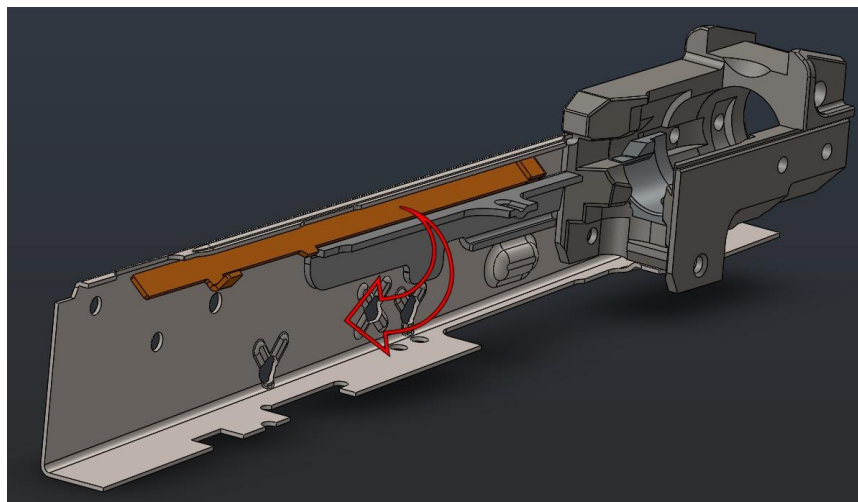


Figure T

4. This is how the part should sit once properly fitted, shown in Figure U.


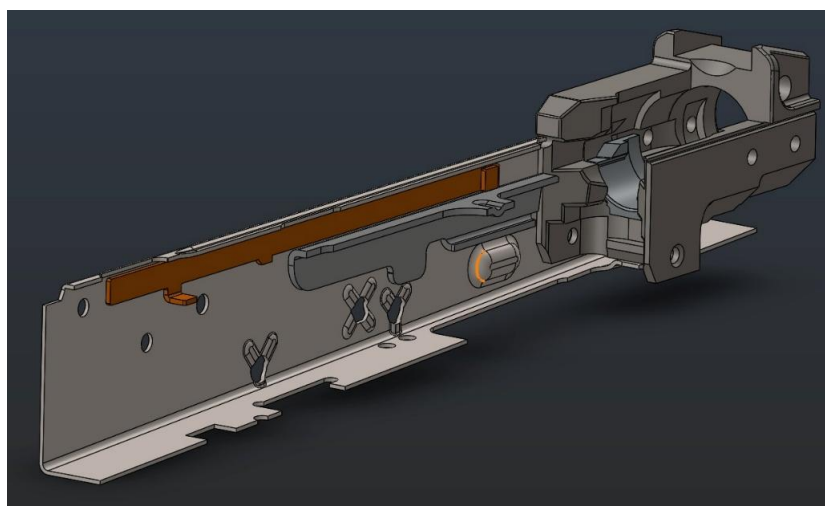


Figure U

KIT COMPONENTS REFERENCE

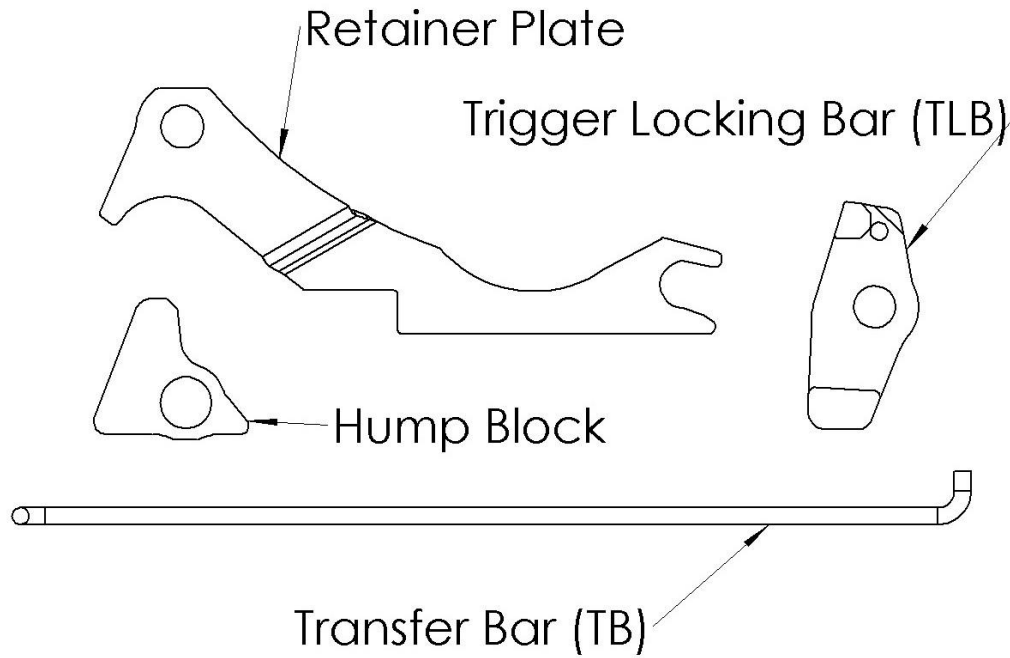

Labeled reference: Retainer Plate, TLB, Hump Block, and Transfer Bar