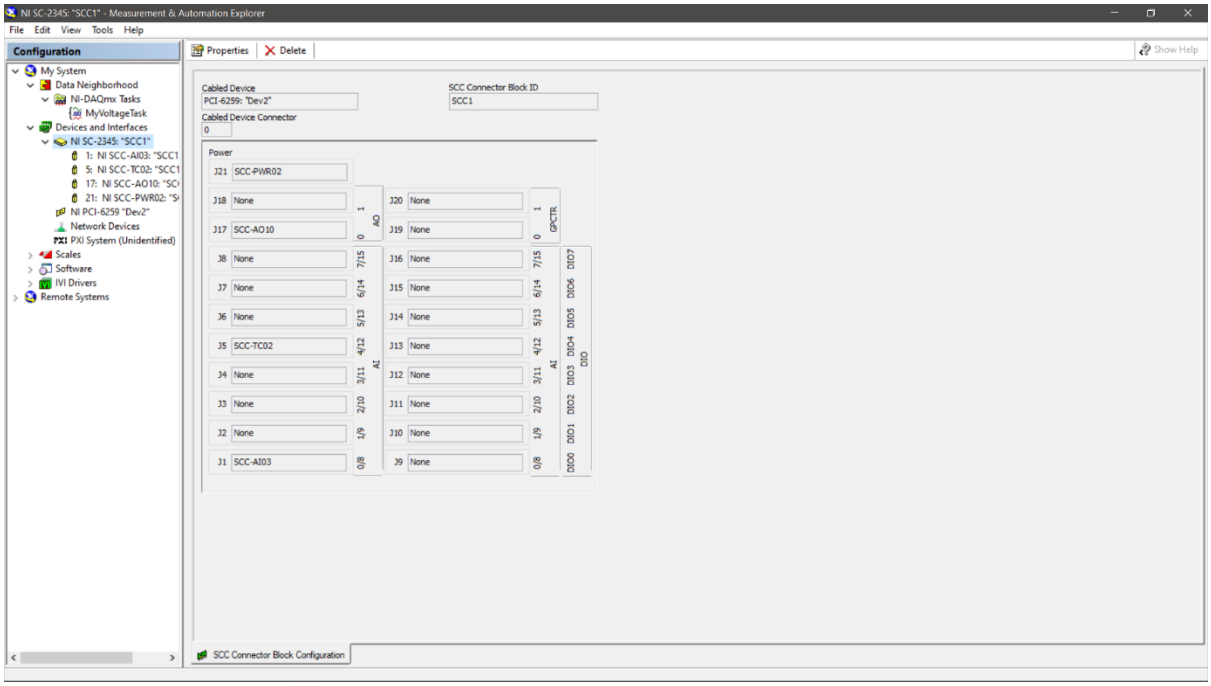
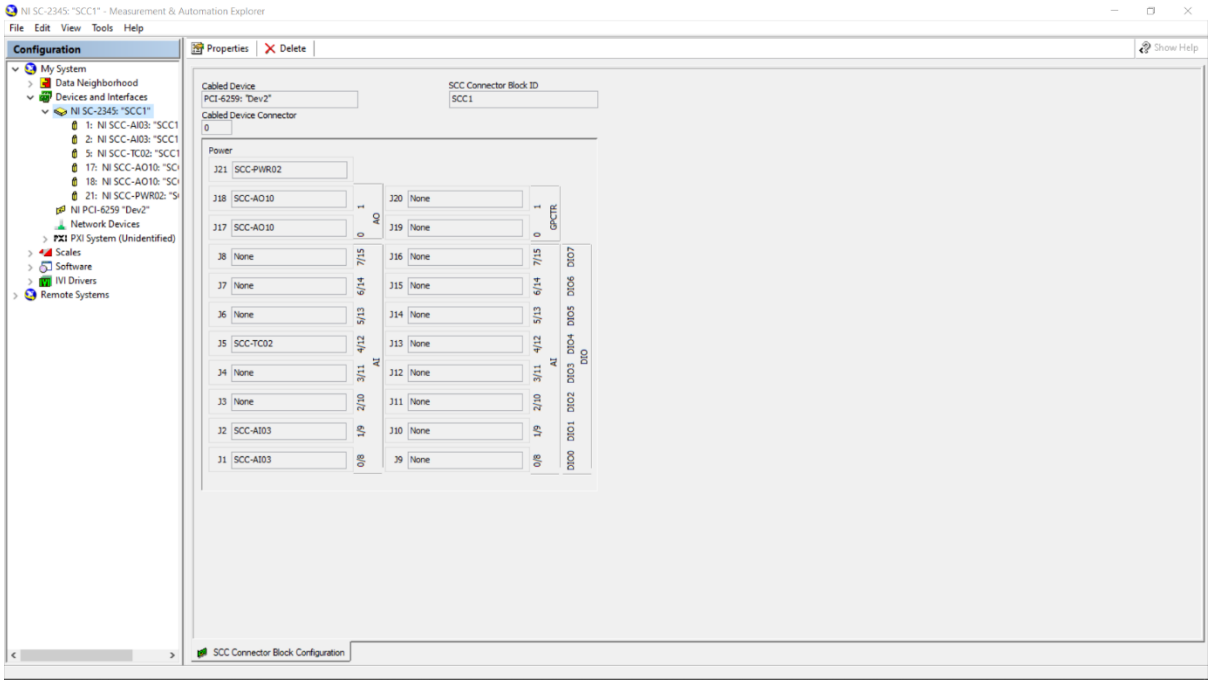
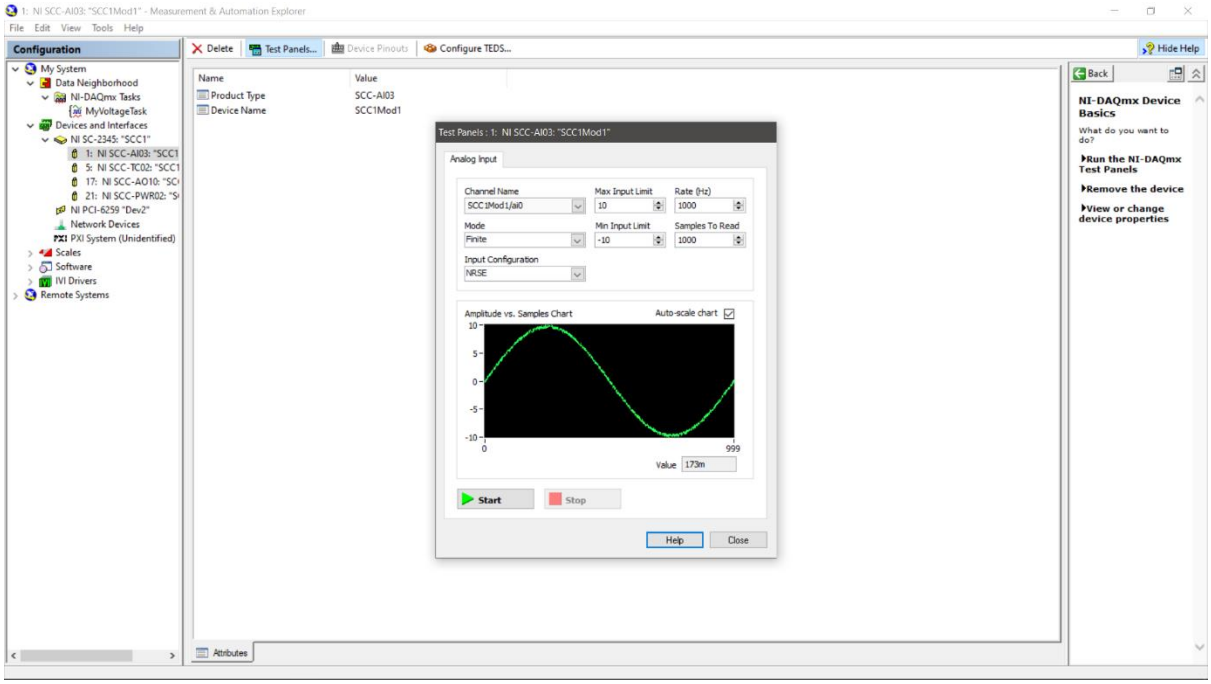
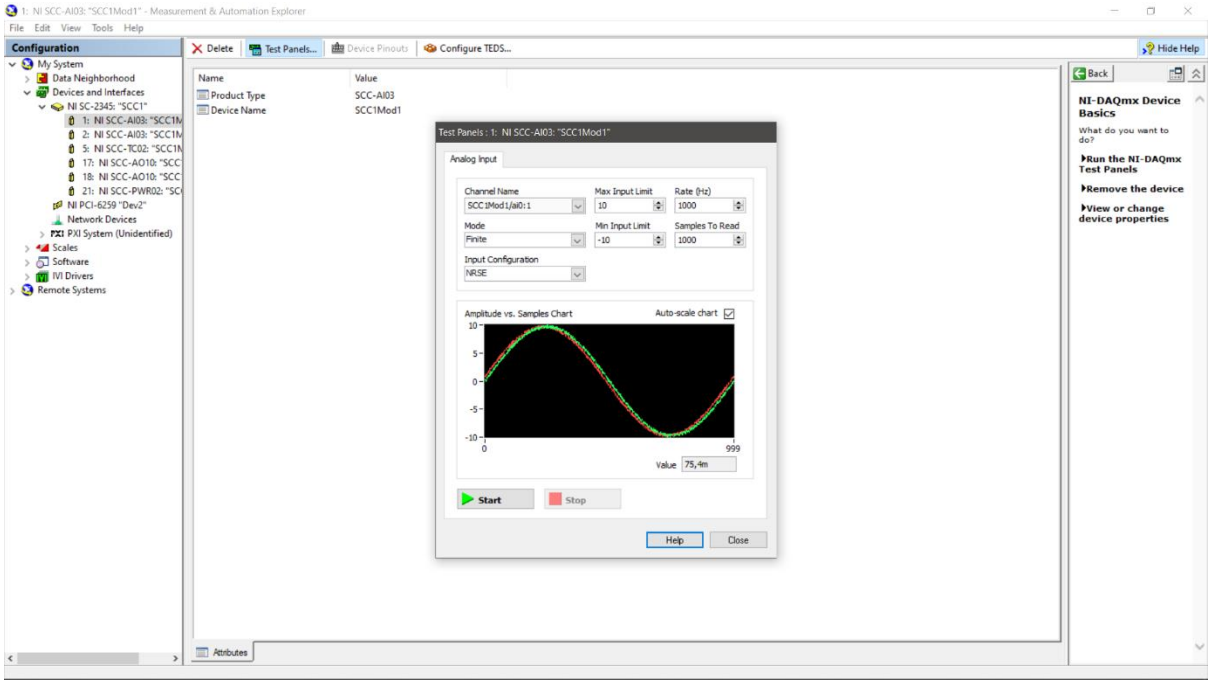
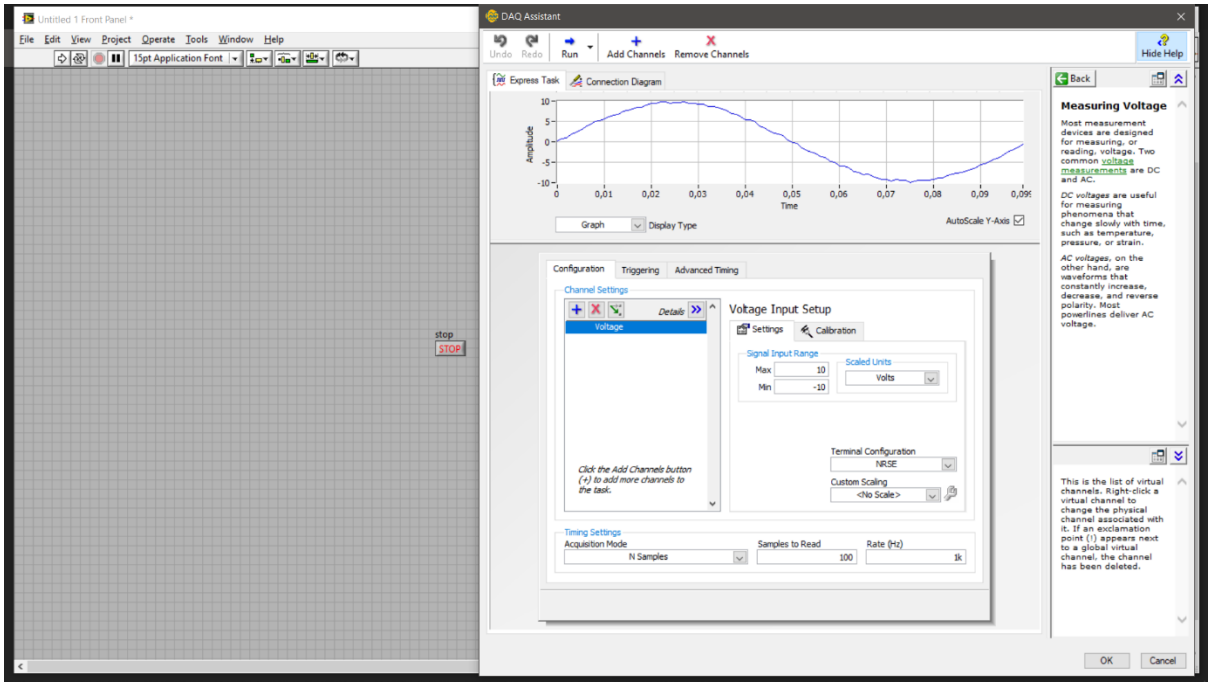
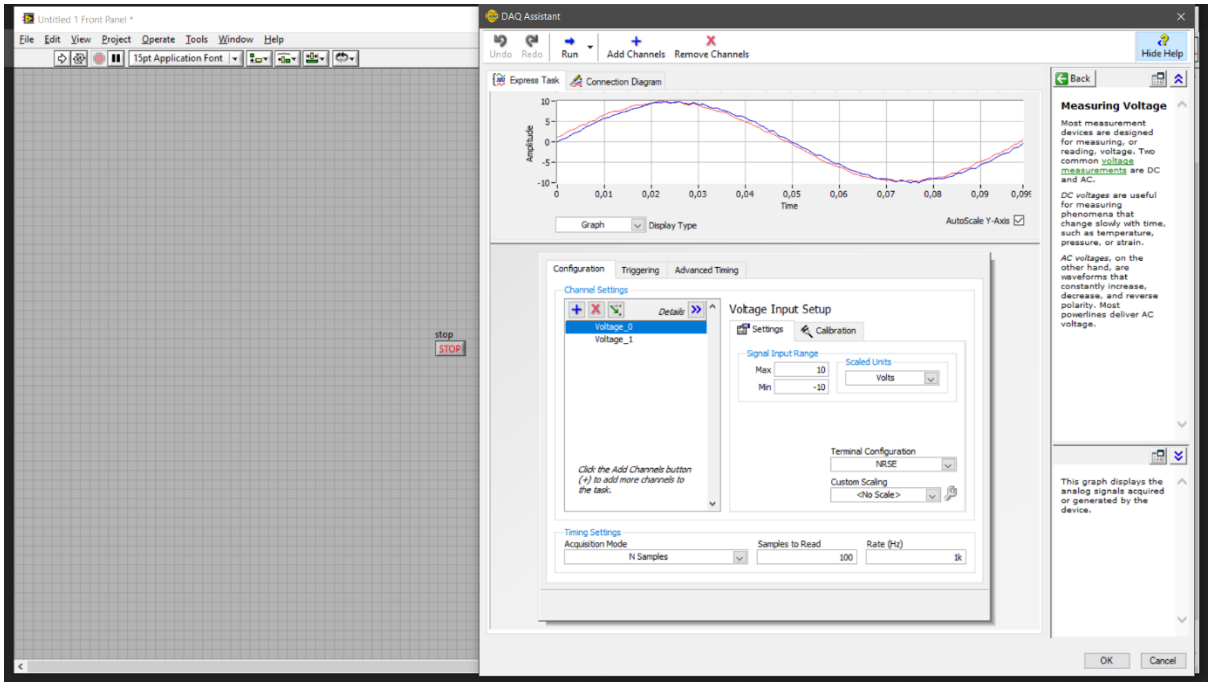

NI SC-2345: "SCC1" - Measurement & Automation Explorer
File Edit View Tools Help
Configuration
My System
Data Neighborhood
NI-DAQmx Tasks
MyVoltageTask
Devices and Interfaces
NI SC-2345: "SCC1"
1: NI SCC-AI03: "SCC1
5: NI SCC-TC02: "SCC1
17: NI SCC-AO10: "SC
21: NI SCC-PWR02: "S
NI PCI-6259 "Dev2"
Network Devices
PXI System (Unidentified)
Scales
Software
IVI Drivers
Remote Systems
Properties
Delete
Show Help
Cabled Device
PCI-6259: "Dev2"
Cabled Device Connector
0
SCC Connector Block ID
SCC1
Power
J21 SCC-PWR02
J18 None
J17 SCC-AO10
J20 None
J19 None
J8 None
J7 None
J6 None
J5 SCC-TC02
J4 None
J3 None
J2 None
J1 SCC-AI03
J16 None
J15 None
J14 None
J13 None
J12 None
J11 None
J10 None
J9 None
AO
AI
GPCTR
DIO
SCC Connector Block Configuration

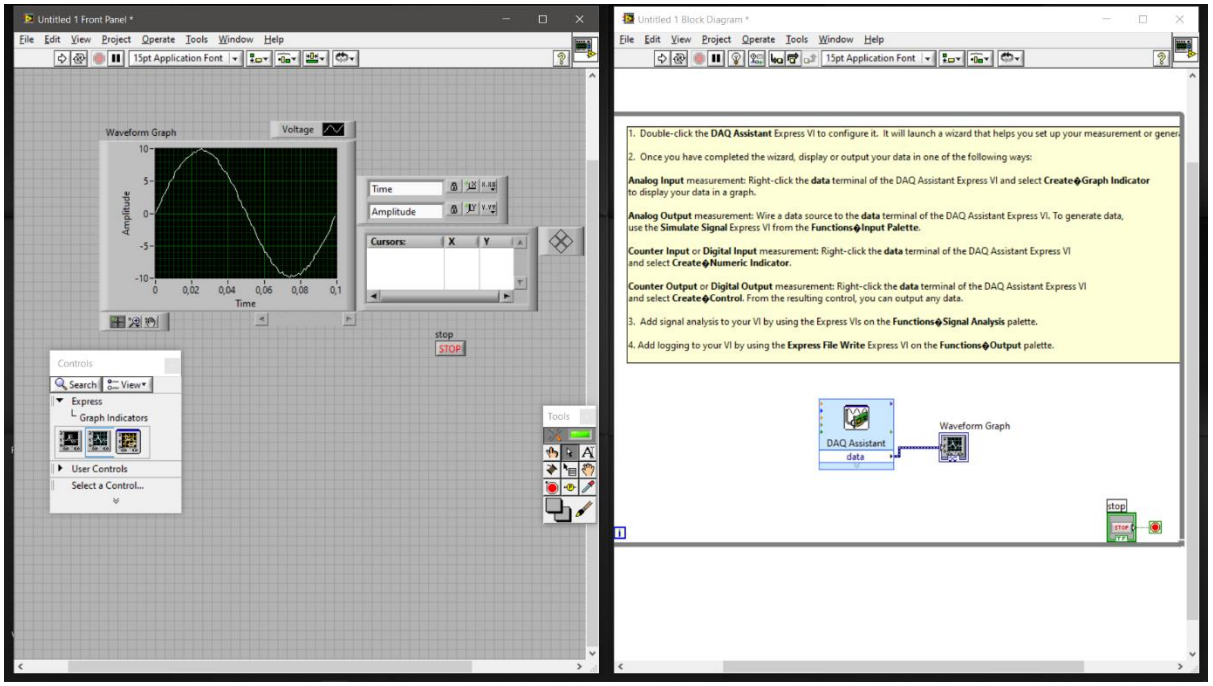

NI SC-2345: "SCC1" - Measurement & Automation Explorer
File Edit View Tools Help
Configuration
My System
Data Neighborhood
Devices and Interfaces
NI SC-2345: "SCC1"
1: NI SCC-AI03: "SCC1
2: NI SCC-AI03: "SCC1
5: NI SCC-TC02: "SCC1
17: NI SCC-AO10: "SC
18: NI SCC-AO10: "SC
21: NI SCC-PWR02: "S
NI PCI-6259 "Dev2"
Network Devices
PXI System (Unidentified)
Scales
Software
IVI Drivers
Remote Systems
Properties
Delete
Show Help
Cabled Device
PCI-6259: "Dev2"
Cabled Device Connector
0
SCC Connector Block ID
SCC1
Power
J21 SCC-PWR02
J18 SCC-AO10
J17 SCC-AO10
J20 None
J19 None
J8 None
J7 None
J6 None
J5 SCC-TC02
J4 None
J3 None
J2 SCC-AI03
J1 SCC-AI03
J16 None
J15 None
J14 None
J13 None
J12 None
J11 None
J10 None
J9 None
AO
AI
GPCTR
DIO
SCC Connector Block Configuration

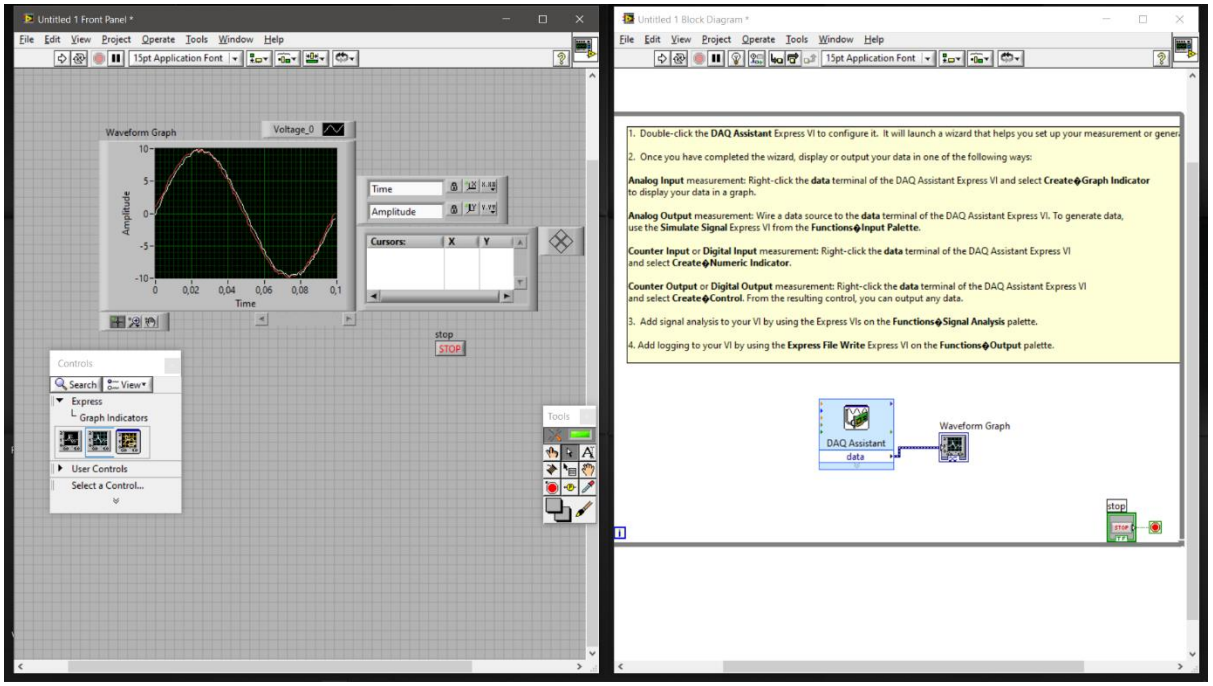

1: NI SCC-AI03: "SCC1Mod1" - Measurement & Automation Explorer
File Edit View Tools Help
Configuration
My System
Data Neighborhood
NI-DAQmx Tasks
MyVoltageTask
Devices and Interfaces
NI SC-2345: "SCC1"
1: NI SCC-AI03: "SCC1
5: NI SCC-TC02: "SCC1
17: NI SCC-AO10: "SC
21: NI SCC-PWR02: "S
NI PCI-6259 "Dev2"
Network Devices
PXI System (Unidentified)
Scales
Software
IVI Drivers
Remote Systems
Delete
Test Panels...
Device Pinouts
Configure TEDS...
Hide Help
Name
Value
Product Type
SCC-AI03
Device Name
SCC1Mod1
Test Panels : 1: NI SCC-AI03: "SCC1Mod1"
Analog Input
Channel Name
SCC1Mod1/ai0
Max Input Limit
10
Rate (Hz)
1000
Mode
Finite
Min Input Limit
-10
Samples To Read
1000
Input Configuration
NRSE
Amplitude vs. Samples Chart
Auto-scale chart
10
5
0
-5
-10
0
999
Value
173m
Start
Stop
Help
Close
Attributes
Back
NI-DAQmx Device Basics
What do you want to do?
Run the NI-DAQmx Test Panels
Remove the device
View or change device properties


1: NI SCC-AI03: "SCC1Mod1" - Measurement & Automation Explorer
File Edit View Tools Help
Configuration
My System
Data Neighborhood
Devices and Interfaces
NI SC-2345: "SCC1"
1: NI SCC-AI03: "SCC1M
2: NI SCC-AI03: "SCC1M
5: NI SCC-TC02: "SCC1M
17: NI SCC-AO10: "SCC
18: NI SCC-AO10: "SCC
21: NI SCC-PWR02: "SC
NI PCI-6259 "Dev2"
Network Devices
PXI System (Unidentified)
Scales
Software
IVI Drivers
Remote Systems
Delete
Test Panels...
Device Pinouts
Configure TEDS...
Hide Help
Name
Value
Product Type
SCC-AI03
Device Name
SCC1Mod1
Test Panels : 1: NI SCC-AI03: "SCC1Mod1"
Analog Input
Channel Name
SCC1Mod1/ai0:1
Max Input Limit
10
Rate (Hz)
1000
Mode
Finite
Min Input Limit
-10
Samples To Read
1000
Input Configuration
NRSE
Amplitude vs. Samples Chart
Auto-scale chart
10
5
0
-5
-10
0
999
Value
75,4m
Start
Stop
Help
Close
Attributes
Back
NI-DAQmx Device Basics
What do you want to do?
Run the NI-DAQmx Test Panels
Remove the device
View or change device properties


Untitled 1 Front Panel *
File Edit View Project Operate Tools Window Help
15pt Application Font
stop
STOP
DAQ Assistant
Undo Redo Run Add Channels Remove Channels Hide Help
Express Task Connection Diagram
Amplitude
Time
Graph Display Type
AutoScale Y-Axis
Configuration Triggering Advanced Timing
Channel Settings
Details
Voltage
Click the Add Channels button (+) to add more channels to the task.
Voltage Input Setup
Settings Calibration
Signal Input Range
Max 10
Min -10
Scaled Units
Volts
Terminal Configuration
NRSE
Custom Scaling
<No Scale>
Timing Settings
Acquisition Mode
N Samples
Samples to Read
100
Rate (Hz)
1k
Back
Measuring Voltage
Most measurement devices are designed for measuring, or reading, voltage. Two common voltage measurements are DC and AC.
DC voltages are useful for measuring phenomena that change slowly with time, such as temperature, pressure, or strain.
AC voltages, on the other hand, are waveforms that constantly increase, decrease, and reverse polarity. Most powerlines deliver AC voltage.
This is the list of virtual channels. Right-click a virtual channel to change the physical channel associated with it. If an exclamation point (!) appears next to a global virtual channel, the channel has been deleted.
OK
Cancel


Untitled 1 Front Panel *
File Edit View Project Operate Tools Window Help
15pt Application Font
stop
STOP
DAQ Assistant
Undo Redo Run Add Channels Remove Channels Hide Help
Express Task Connection Diagram
Amplitude
Time
Graph Display Type
AutoScale Y-Axis
Configuration Triggering Advanced Timing
Channel Settings
Details
Voltage_0
Voltage_1
Click the Add Channels button (+) to add more channels to the task.
Voltage Input Setup
Settings Calibration
Signal Input Range
Max 10
Min -10
Scaled Units
Volts
Terminal Configuration
NRSE
Custom Scaling
<No Scale>
Timing Settings
Acquisition Mode
N Samples
Samples to Read
100
Rate (Hz)
1k
Back
Measuring Voltage
Most measurement devices are designed for measuring, or reading, voltage. Two common voltage measurements are DC and AC.
DC voltages are useful for measuring phenomena that change slowly with time, such as temperature, pressure, or strain.
AC voltages, on the other hand, are waveforms that constantly increase, decrease, and reverse polarity. Most powerlines deliver AC voltage.
This graph displays the analog signals acquired or generated by the device.
OK
Cancel


Untitled 1 Front Panel *
File Edit View Project Operate Tools Window Help
15pt Application Font
Waveform Graph
Voltage
Amplitude
Time
Time
Amplitude
Cursors:
X
Y
stop
STOP
Controls
Search
View
Express
Graph Indicators
User Controls
Select a Control...
Tools
Untitled 1 Block Diagram *
File Edit View Project Operate Tools Window Help
15pt Application Font
1. Double-click the DAQ Assistant Express VI to configure it. It will launch a wizard that helps you set up your measurement or gener
2. Once you have completed the wizard, display or output your data in one of the following ways:
Analog Input measurement: Right-click the data terminal of the DAQ Assistant Express VI and select Create Graph Indicator to display your data in a graph.
Analog Output measurement: Wire a data source to the data terminal of the DAQ Assistant Express VI. To generate data, use the Simulate Signal Express VI from the Functions Input Palette.
Counter Input or Digital Input measurement: Right-click the data terminal of the DAQ Assistant Express VI and select Create Numeric Indicator.
Counter Output or Digital Output measurement: Right-click the data terminal of the DAQ Assistant Express VI and select Create Control. From the resulting control, you can output any data.
3. Add signal analysis to your VI by using the Express VIs on the Functions Signal Analysis palette.
4. Add logging to your VI by using the Express File Write Express VI on the Functions Output palette.
DAQ Assistant
data
Waveform Graph
stop


Untitled 1 Front Panel *
File Edit View Project Operate Tools Window Help
15pt Application Font
Waveform Graph
Voltage_0
Amplitude
Time
Time
Amplitude
Cursors:
X
Y
stop
STOP
Controls
Search
View
Express
Graph Indicators
User Controls
Select a Control...
Tools
Untitled 1 Block Diagram *
File Edit View Project Operate Tools Window Help
15pt Application Font
1. Double-click the DAQ Assistant Express VI to configure it. It will launch a wizard that helps you set up your measurement or gener
2. Once you have completed the wizard, display or output your data in one of the following ways:
Analog Input measurement: Right-click the data terminal of the DAQ Assistant Express VI and select Create Graph Indicator to display your data in a graph.
Analog Output measurement: Wire a data source to the data terminal of the DAQ Assistant Express VI. To generate data, use the Simulate Signal Express VI from the Functions Input Palette.
Counter Input or Digital Input measurement: Right-click the data terminal of the DAQ Assistant Express VI and select Create Numeric Indicator.
Counter Output or Digital Output measurement: Right-click the data terminal of the DAQ Assistant Express VI and select Create Control. From the resulting control, you can output any data.
3. Add signal analysis to your VI by using the Express VIs on the Functions Signal Analysis palette.
4. Add logging to your VI by using the Express File Write Express VI on the Functions Output palette.
DAQ Assistant
data
Waveform Graph
stop