




BMW iX3 NA5
SUV
11/2025

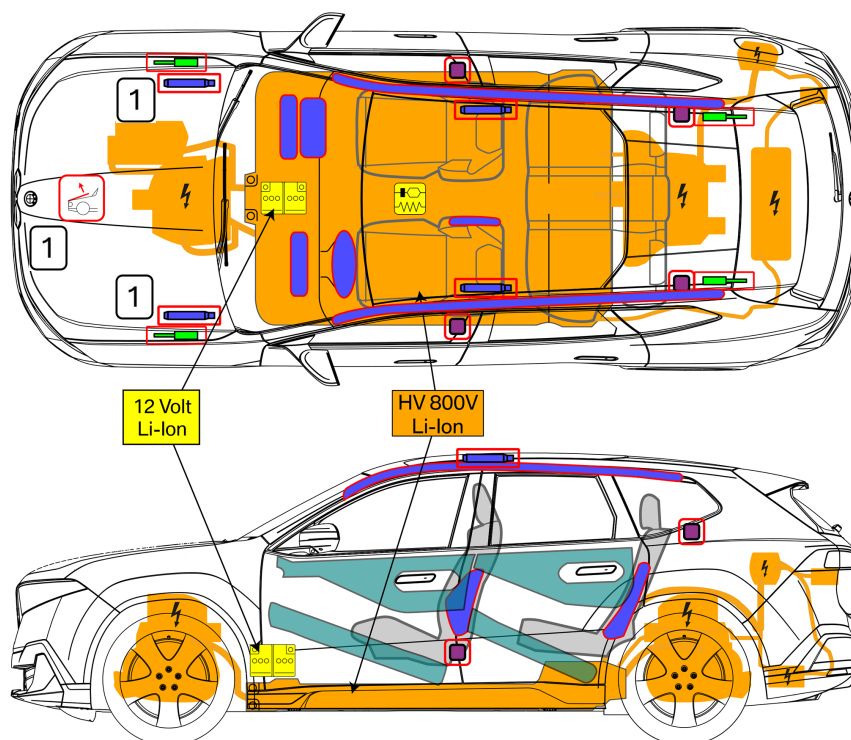

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		active pedestrian protection
	Gas strut / Preloaded spring		Body reinforcement		Cable cut		Battery low voltage		Battery pack, high-voltage
	High voltage power cable		High voltage component						

1) Not equipped on US and Canadian market vehicles

1. Identification / recognition

The absence of engine noise does not mean that the vehicle has been turned off. Quiet movement or restart capability is possible until the vehicle has been switched off completely. Wear appropriate personal protective equipment.

Vehicle identification features

High-voltage charging socket at the right rear side panel


Model designation "iX3"




2. Immobilisation / stabilisation / lifting

Immobilization

Press button (1) (for approx. 1 second) to apply the parking brake and turn off the vehicle.

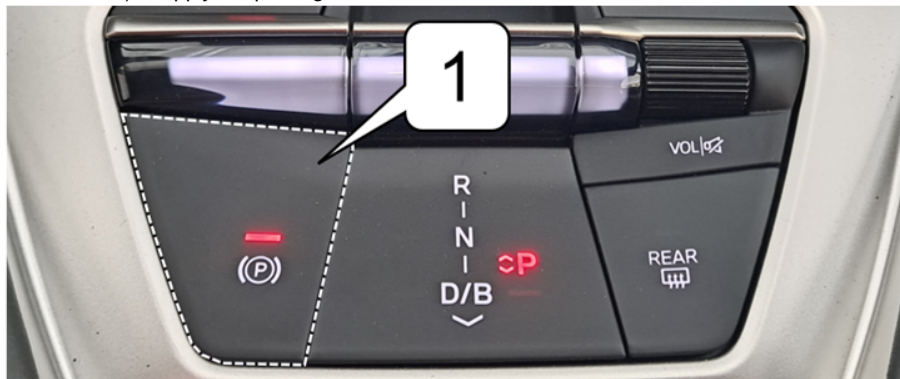

Stabilization points/lifting points

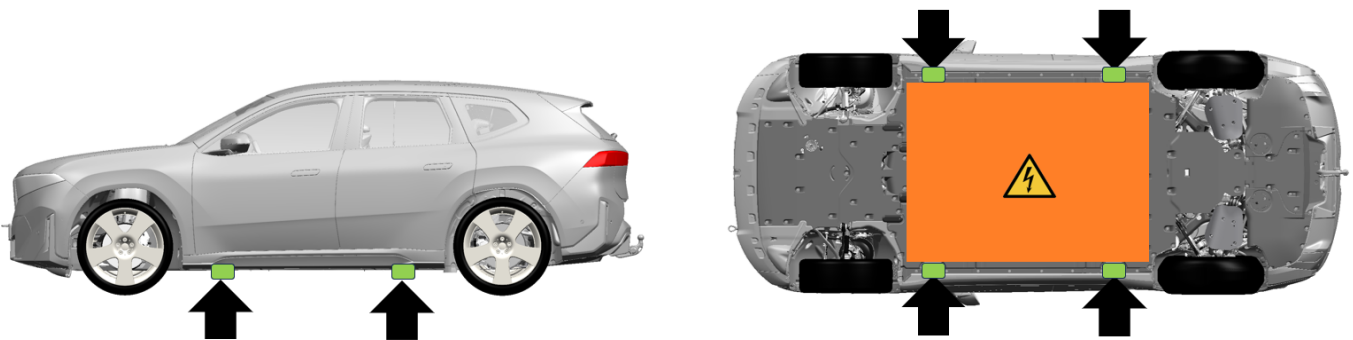

3. Disable direct hazards / safety regulations

Condition of the high-voltage system

Airbag deployment means that the high-voltage system has been deactivated.

The following display identifies the deactivation of the high-voltage system.



Warnings from the high-voltage system

The vehicle detects an overheated and/or damaged high-voltage battery and indicates this in the display cluster.

Do not get in, or exit the vehicle if already inside.




Procedure for deactivation Version 1



1. Open hood.



2. Cut through the labeled low-voltage cable (1) to deactivate the high-voltage system.

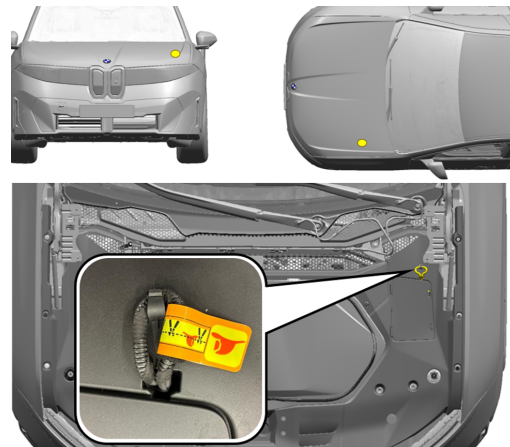


Version 2



1. Open the tailgate and remove the cover on the right side.



2. Cut through the labeled low-voltage cable (1) to deactivate the high-voltage system.

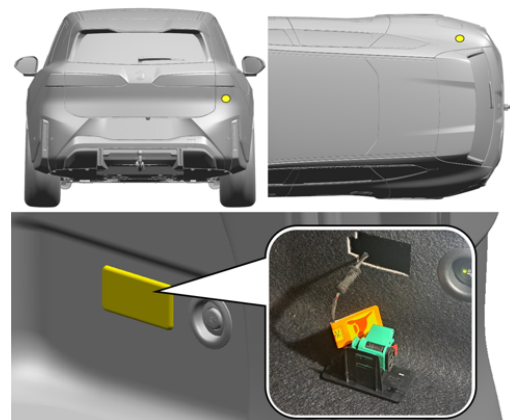

Disconnect high voltage power cable from the vehicle

The vehicle must be unlocked.

Press button to unlock.

Pull off the high voltage power cable in the arrow direction.



4. Access to the occupants


1 - Interface for removing the roof

2 - Door lock

3 - Door hinges


A - Laminated safety glass

B - Tempered safety glass

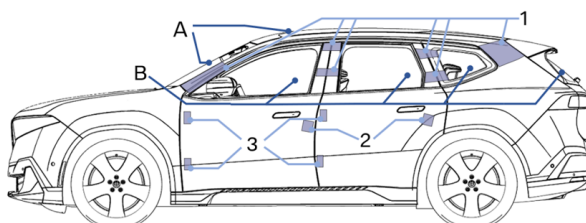

Mechanical emergency release inside door opener

To open the door when the on-board electrical system is inactive, over-extend the button for the door opener (1).

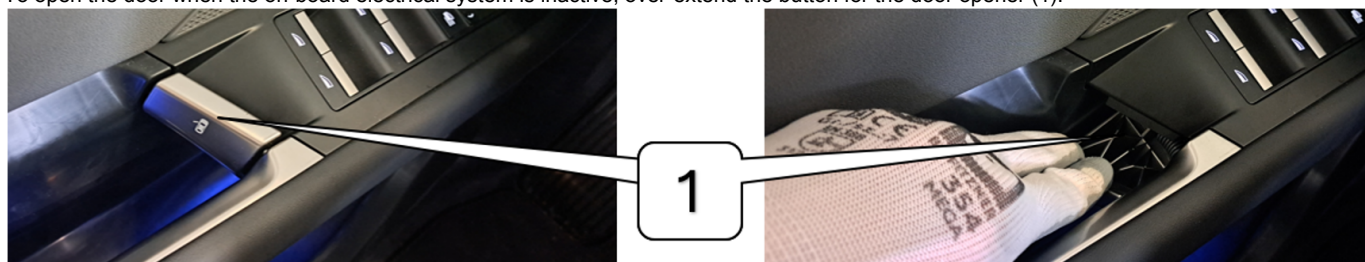

5. Stored energy / liquids / gases / solids

	    	12V Li Ion
	     	800V Li Ion
	 	600g

6. In case of fire



Even after a fire, an electrical risk remains. Risk of injury!

Use personal protective equipment identical to the equipment used for conventional vehicle fires.



BGI / GUV-I 8677 Electrical risks at the location of deployment. Risk of injury!

Do not touch high-voltage components.

Maintain a safety distance when extinguishing the fire:

- 1 m for spray jet
- 5 m for direct jet



Extinguish the fire with large quantities of water.

To do so, open the hood if possible and direct the extinguisher jet in these areas toward the underbody / high-voltage battery. In addition, water can be added through the wheelwells. Large quantities of water are required to cool the battery down.



Use a thermal imaging camera to detect a temperature increase in high-voltage components

7. In case of submersion

Vehicle in water and submerged in water

After the vehicle has been recovered from the water, deactivate the high-voltage system as described.



After the vehicle has been salvaged from the water:

- Monitor vehicle closely
- Park vehicle outside and far away from flammable materials
- Ensure clear access for firefighters

8. Towing / transportation / storage



Electric vehicles with damaged batteries or with a red high-voltage warning light must be parked outside of buildings with a safety distance of 5 m to adjacent vehicles/objects.

If 5 m is not feasible, vehicles should be parked next to non-flammable structures such as concrete barriers.



Battery pack, high-voltage: Repeat ignition is possible!

9. Important additional information

This document shows all national-market versions and the maximum equipment of the vehicle.