

LightSYS2

UK

Simple Programming Setup Guide



Technical Addendum: LightSYS™2 V5.xx PCB

RISCO recommend that the main keypad is updated to the latest firmware revision before attempting any system programming.

To do this, connect the keypad to the LightSYS2 BUS, power up, then select menu option (7) Install, option (1) BUS Device, option (1) Automatic Press (Unlock / OK) to initiate the scan and as each device is found to advance the search onto the next device.

Once all connected devices have been found and confirmed, immediately exit programming mode to allow the LightSYS2 Main PCB to update (if required) all connected Keypad(s).

Also be aware that all devices connected to the LightSYS2 BUS will be flash updated (if necessary) automatically by the LightSYS2 Panel whenever Programming mode is exited.

Keypad number 1 is the first device to be flash updated. If this occurs, Keypad address 1 will display either a 'Clock' or an 'Up Arrow' for the duration of the flash update.

Please be patient - this could take several minutes.

DO NOT remove power during the update.

After Keypad number 1 has been updated, Keypad number 1 will display the flashing progress for any other connected BUS devices being upgraded.

Introduction:

This simple setup procedure will ensure that all common steps are taken to program the LightSYS2 from factory default, which will ensure that you have a basic working system, ready to use in no time.

Firstly: Suitable locations


Decide where to position your LightSYS2 control panel. A central location is often the best place, making wiring to expanders and accessories far easier. For long cable runs, please use the correct cable as stated in the full Installation Manual. A plan of expanders/accessories physical locations before hand is advisable, as this will determine which type of expander is required at which location.

Warning: If connecting Remote Power Supplies, do **NOT** connect the Red wire (+12v) between PSU and LightSYS2.

Secondly: Installing Hardware (Devices)

1. Connect the Bell/Sounder.

See Installation Manual (Fit 2K2 Resistor in line with Tamper Return)

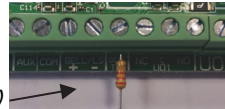

Ideally within the Bell Box

2. Fit 2K2 Resistor (Red, Red, Red) between [BELL/LS+] and [BELL/LS-] (unless fitting extension speaker with DIP 1 Off)

3. Connect any/all Keypads and Expanders/Accessories necessary for the installation using the BUS connections.

For most devices, a DIP switch number must be set. Devices are split into 'Families'. Each 'Family' of devices have sequential identification numbers which are set by the DIP switches. If a DIP switch is changed on any device, it is necessary to remove power from that device and re-power.

Families that have sequential ID numbers are:

- Zones (8 Wired Zone Expander, Wireless Receiver, BUS Zones)
- Outputs (8 Open Collector Outputs, 4 Relay Outputs, X-10 Outputs) and Power Supplies
- Keypads
- Sounders/Bells

For example: Each Zone Expander has sequential numbering such as 1,2,3,4 etc..

ID1 (First Zone Expander)	= DIP Switch '1 off, 2 off, 3 off, 4 off'	= [↓↓↓↓]
ID2 (Second Zone Expander)	= DIP Switch '1 on , 2 off, 3 off, 4 off'	= [↑↓↓↓]
ID3 (Third Zone Expander)	= DIP Switch '1 off, 2 on , 3 off, 4 off'	= [↓↑↓↓]
ID4 (Fourth Zone Expander)	= DIP Switch '1 on , 2 on, 3 off, 4 off'	= [↑↑↓↓]

First zone on 'Zone Expander' one will be ZONE 09

Last zone on 'Zone Expander' one will be ZONE 16

First zone on 'Zone Expander' two will follow on from the last zone on 'Zone Expander' one.

NOTE: On 3 AMP Supervised Power Supplies and a Wireless Receiver, there are two programmable outputs. These programmable outputs belong to the 'Output' family. There are DIP switch settings. One for the PSU **or** Receiver ID and **then** one for the OUTPUT ID.
Note: Ensure DIP4 on the "PS" Dip switch bank is on to 'enable' communications.

Powering Up:

1. Ensure DIP 2 (The Default Switch) is **ON**
2. Connect Mains power
3. Wait until Keypad displays the 'Menu' Icon

Navigating through the menus:


When navigating through the LightSYS2 menus, the following keys are used...

-  - to enter numeric values where required
-  - to scroll through the menu options displayed
-  - Enter/Save (To move into the displayed menu or to save the data that you have changed)
-  - to toggle displayed menu options from 'N' to 'Y' and vice-versa or BUS type device
-  - to go back/quit/don't save (Menu Button)

If you do not know where you are in the menu structure, press [BACK] repeatedly to return to the beginning/root menu.

Entering Text Descriptions (Labels)

- Key [1] = 1.,'?"'-'()@/:_+&*#
- Key [2] = abc2ABC
- Key [3] = def3DEF
- Key [4] = ghi4GHI
- Key [5] = jkl5JKL
- Key [6] = mno6MNO
- Key [7] = pqr7PQRS
- Key [8] = tuv8TUV
- Key [9] = wxyz9WXYZ
- Key [0] = {space} 0

-  = Move cursor Right
-  = Enter/Save

Entering Engineer Mode:

1. Press [MENU]
2. The system will ask for the Engineer/Installer code.

PLEASE NOTE: When accessing Engineer mode for the first time on a new system, you will be prompted to choose a language.

The language you choose will determine the panel's ** [Defaults and Behaviour] **

With this in mind, please select [ENGLISH UK]

Press [1][1][1][1][ENTER][ENTER] (Default Engineer Code)
You are now in Engineer Programming mode

Quick Keys shown (in square brackets) can be pressed when at the 'Beginning Menu' rather than using the Up/Down keys and OK to navigate.

Configuring the connected Devices:

QUICK KEYS = [7][1][1]

NOTE: In most cases, when entering engineer mode with DIP switch [2] on, the system will 'assume' that this is a 'virgin' installation and take you immediately to Automatic. If the keypad is already showing "Automatic", skip to step 3 below

1. Using the Up/Down keys, select [Install] and press [ENTER]
2. Using the Up/Down keys, select [Bus Device] and press [ENTER]
3. Using the Up/Down keys, select [Automatic] and press [ENTER] {Scan for connected devices}
4. Verify that the Keypad display is showing the devices that you have connected pressing [ENTER] to accept what is being displayed and move on to the next device found
5. Repeat from step 4 until all devices have been shown.

Note: If a Wireless Receiver is connected and it is fitted inside the polycarbonate main Control Box, ensure that 'Y' (using the   button) for the 'OMIT BOX TAMPER?' question is chosen.

Bus Test:

QUICK KEYS = [7][1][3][1]

The Bus Test will send multiple test commands to each device connected to the system to ensure good connectivity.

1. Using the Up/Down keys, select [Testing] and press [ENTER]
2. Using the Up/Down keys, check that every device shown reports 99% or higher.

Note: If a low reading is experienced, check connections with the device and DIP switch addresses and repeat Bus Test.

Programming: SYSTEM

SYSTEM - Timers (Entry/Exit Times etc)

QUICK KEYS = [1][1]

1. Using the Up/Down keys, select [Timers] and press [ENTER]
 2. Using the Up/Down keys, select the required timer option and press [ENTER]
- Note: Some options have more menu levels which are accessed by pressing the [ENTER] key*
3. Using the numeric keys, change the selected option to the desired value and press [ENTER]

SYSTEM - Controls (Audible Panic, Silent Part Set, Enable Comms, Engineer Reset, EN Settings etc)

QUICK KEYS = [1][2]

1. Using the Up/Down keys, select [Controls] and press [ENTER]
2. Using the Up/Down keys, select the option required.
3. Using the [ ] key, select [Y] (Yes) or [N] (No)
4. Repeat from step 2 until all required options have been set as required, then press [ENTER]

Note: Controls are split into several categories:

- Basic – *Most common options*
- Advanced – *Advanced options*
- Communication – *Switching on ARC, FM, CS(UDL) and Cloud*
- EN50131 – *Options relevant for EN50131*
- PD6662 – *Options relevant for PD6662*
- CP-01 – *Misc Options*
- Device – *Device Options*

Programming: Wireless ZONES

ZONES - Wireless Calibration (Wireless Receiver background noise threshold setting)

QUICK KEYS = [7][2][1]

1. Using the Up/Down keys, select [Install] and press [ENTER]
2. Using the Up/Down keys, select [WL Device] and press [ENTER]
3. Press [ENTER] when 'RX Calibrate' is seen.
If two Receivers fitted, select the relevant one and press [ENTER]
4. Using the   key, change 'N' to 'Y' and press [ENTER]
5. After a short while, the measured background noise will be shown.
6. Add 10 to the displayed 'NEW THOLD' (New Threshold) by using the numeric keys and press [ENTER]

Explanation:

The Calibration measurement above shows the amount of background 'noise' that the receiver can 'hear' on the same frequency as the RISCO wireless devices. This 'noise' could be neighbouring devices of another system or other devices operating on the same frequency nearby. These are 'unwanted' signals that the LightSYS2 wireless receiver must be told 'not to listen to'.

The threshold (set above) is the absolute minimum signal strength needed to be heard from a wireless device in order for the receiver to effectively 'hear it'. This 'threshold' is set at ten above the background 'noise' (recommended) making the receiver ignore the unwanted signals.

With this threshold set, the LightSYS2 receiver will only hear its own devices which are nearer and having a signal strength greater than the threshold level set.

ZONES - Wireless Zone Allocation (Enrolling the wireless devices)

QUICK KEYS = [7][2][2][1][1]

1. Using the Up/Down keys, select [Install] and press [ENTER]
2. Using the Up/Down keys, select [WL Device] and press [ENTER]
3. Using the Up/Down keys, select [Allocation] and press [ENTER]
4. Using the Up/Down keys, select [By RF] and press [ENTER]
5. Using the Up/Down keys, select [Zone] and press [ENTER]
6. Using the Up/Down keys, select the desired zone number and press [ENTER] {Countdown will begin}
7. Depending on the wireless device enrolled, please do one of the following...
For Wireless PIRs, Door Contacts, Flood Detectors, Shock - Close the tamper
For Wireless Smoke Detectors, Fit the batteries and lid then, do nothing for 10-30 seconds
For Wireless PANIC Pendants and WRIST device, hold the button(s) in for 8 seconds
8. Repeat from step 6 until all required wireless devices have been enrolled.

Programming: ZONES Wired & Wireless (Parameters)

The bold sub headings below are 'Main Menu' headings.

The [ENTER] key is pressed to move into the various sub menus.

To return back to the 'Main Menu' headings at any time, press [BACK] repeatedly.

1. Using the Up/Down keys, inside the 'Zone Parameters Menu', select [One By One] and press [ENTER]
2. Using the numeric keys, enter the desired zone number and press [ENTER]

ZONES - Labels (Zone description text)

3. Using the Up/Down keys, select [LABEL] and press [ENTER]
4. Using the numeric keys, enter the desired zone number and press [ENTER]
5. Using the keys listed previous, enter the required text for the zone description and press [ENTER]

PARTITIONS

6. Using the numeric keys, select or deselect the relevant partitions to which this zone will belong to and press [ENTER]

GROUP SETS

5. Using the [ ] and Arrow keys, select the required group and press [ENTER]

ZONE TYPE

6. Using the Up/Down keys, select the required zone type and press [ENTER]

SET SOUND – The sound that the Zone will make when opened during SET

7. Using the Up/Down keys, select the required zone sound option and press [ENTER]

PART SOUND – The sound that the Zone will make when opened during PART SET

8. Using the Up/Down keys, select the required zone sound option and press [ENTER]

UNSET SOUND – The sound that the Zone will make when opened during UNSET

9. Using the Up/Down keys, select the required zone sound option and press [ENTER]

Note: This sound determines if the zone will 'be silent', 'cause Bell to activate', 'cause Buzzer to activate', 'cause Bell and Buzzer to activate', 'create keypad bleep for chime' etc... when the zone is opened during the states above.
'Buzzer' refers to the sound emitted from the Keypad(s) and a Panel Loudspeaker if fitted.

TERMINATE (Only applicable for hard wired zones)

10. Using the Up/Down keys, select the required zone termination type and press [ENTER] {NO/NC/EOL/DEOL/TEOL}

ZONE RESPONSE

11. Using the Up/Down keys, select the required response time and press [ENTER]

Programming: DIGICOM/ARC (For PSTN Dialling)

The bold sub headings below are 'Main Menu' headings.

The [ENTER] key is pressed to move into the various sub menus.

To return back to the 'Main Menu' headings at any time, press [BACK] repeatedly.

NOTE: In order for the following menu to be visible, you must have first enabled the ARC option in [System][Controls][Communication] (Quick Keys [1][2][3])

COMMUNICATION - ARC (ARC Telephone numbers and Communication format)

QUICK KEYS = [5][2][1]

1. Using the Up/Down keys, select [Report Type] and press [ENTER]

2. Using the Up/Down keys, select [ARC 1] and press [ENTER]

3. Using the Up/Down keys, select [VOICE] and press [ENTER]

4. Using the Up/Down keys, select [PSTN Only] and press [ENTER]

Note: It is the assumption (in this example) that a regular phone line is used for communication to ARC.

5. Using the numeric keys, enter *Primary* the ARC phone number and press [ENTER]

6. Using the Up/Down keys, select [ARC 2] and press [ENTER]

7. Using the Up/Down keys, select [VOICE] and press [ENTER]

8. Using the Up/Down keys, select [PSTN Only] and press [ENTER]

Note: It is the assumption (in this example) that a regular phone line is used for communication to ARC.

9. Using the numeric keys, enter *Secondary* the ARC phone number and press [ENTER]

DIGICOM - Accounts (Site Code/ID)

QUICK KEYS = [5][2][2]

1. Using the Up/Down keys, select [Accounts] and press [ENTER]

3. Using the Up/Down keys, select [ACR 1] and press [ENTER]

4. Using the numeric keys, enter the Site Code/ID for ARC 1 (e.g. 001234) and press [ENTER]

3. Using the Up/Down keys, select [ACR 2] and press [ENTER]

4. Using the numeric keys, enter the Site Code/ID for ARC 2 (e.g. 005678) and press [ENTER]

DIGICOM - Communication Format (Transmission protocol to ARC)

QUICK KEYS = [5][2][3]

1. Using the Up/Down keys, select [Comm Format] and press [ENTER]

2. Using the Up/Down keys, select [Contact ID] or [SIA] and press [ENTER]

Programming: OUTPUTS

The bold sub headings below are 'Main Menu' headings.

The [ENTER] key is pressed to move into the various sub menus.

To return back to the 'Main Menu' headings at any time, press [BACK] repeatedly.

PROG OUTPUTS - Parameters (Example for Bell & Strobe)

QUICK KEYS = [3][1] – **Note:** In later versions of LightSYS, Outputs 1 & 2 are predefined as Bell & Strobe operation

1. Using the Arrow keys, select the Output and press [ENTER]

Note: Outputs 1-4 are located on the main LightSYS panel.

2. By using the Up/Down keys, select the *Category* in which this output will activate and press [ENTER]

For "BELL" or "STROBE", this will be "PARTITION"

3. By using the Up/Down keys, select the *Event* in which this output will activate and press [ENTER]

For "Bell", this should be defined as "Partition>Bell Trigger".

For "Strobe", this should be defined as "Partition>Strobe Trigger"

4. By using the numeric keys, select the *Partitions* that will cause this output to activate and press [ENTER]

For Bell and Strobe, if you have only one Partition defined, leave as is "Y---"

5. By using the Up/Down keys, select the *Switching Mode* that this output will follow and press [ENTER]

For Bell and Strobe, select "LATCH N/O"

6. By using the [ ] key, select Any/All *Partition* that will activate this output and press [ENTER]

For Bell and Strobe, select "ANY"

7. By using the [ ] key, select Any/All *Partition* that will deactivate this output and press [ENTER]

For Bell and Strobe, select "ANY"

8. Using the keys listed below, enter the required text for the Output description and press [ENTER]

9. Repeat from step 1 for all Outputs requiring programming

Entering Text Descriptions (Labels)

Key [1] = 1.,?\"-()@/:_+&*#

Key [2] = abc2ABC

Key [3] = def3DEF

Key [4] = ghi4GHI

Key [5] = jkl5JKL

Key [6] = mno6MNO

Key [7] = pqr7PQRS

Key [8] = tuv8TUV

Key [9] = wxyz9WXYZ

Key [0] = {space} 0

  = Move cursor Right

  = Enter/Save

Codes: (Changing the Engineer code)

Press [BACK] repeatedly to return to 'Main Menu'

QUICK KEY = [4][3]

1. Using the Up/Down keys, select [Codes] and press [ENTER]
2. Using the Up/Down keys, select [Engineer] and press [ENTER]
3. Enter a new Engineer code and press [ENTER]
4. Repeat the new Engineer code and press [ENTER] to confirm.

System Backup:

1. Fit a 12V Rechargeable Lead Acid Battery and secure the LightSYS2 Panel Lid.

Exiting Programming Mode:

1. Press [BACK] repeatedly to return to 'Main Menu'.
2. Press [0][ENTER] to EXIT and SAVE your settings.

NOTE: The system will not allow exit from engineer mode if a 'Tamper' or 'System Fault' condition exists. Correct any tamper and/or system fault conditions before attempting to exit engineer mode.

System is now programmed and ready for use.

For more comprehensive and detailed instructions, please see the Installation Manual

For User Functions, please consult the User Manual.

ZONES - Wireless Communication Test (Signal strength of the wireless devices)**From the user/day mode:**

1. Press BACK
2. The system will ask for a code.
Press [1][1][1][1][ENTER] (Default Engineer Code)
You are now in Engineer Menu
3. Using the Up/Down keys, select [Maintenance] and press [ENTER]
4. Using the Up/Down keys, select [Wireless Test] and press [ENTER]
5. Using the Up/Down keys, select [Zones] and press [ENTER]
6. Using the Up/Down keys, select [Comm Test] and press [ENTER]
7. Activate all wireless devices in turn
8. Using the Up/Down keys, observe the signal strength received from each device zone number.
Note: Make sure that the signal strengths are at least 10 units higher than the receiver threshold level.
9. When you're done, simply press [BACK] repeatedly

THIS PAGE IS INTENTIONALLY BLANK

Standard Limited Product Warranty (“Limited Warranty”)

RISCO Ltd. (“RISCO”) guarantee RISCO’s hardware products (“Products”) to be free from defects in materials and workmanship when used and stored under normal conditions and in accordance with the instructions for use supplied by RISCO, for a period of (i) 24 months from the date of delivery of the Product (the “Warranty Period”). This Limited Warranty covers the Product only within the country where the Product was originally purchased and only covers Products purchased as new.

Contact with customers only. This Limited Warranty is solely for the benefit of customers who purchased the Products directly from RISCO or from an authorized distributor of RISCO. RISCO does not warrant the Product to consumers and nothing in this Warranty obligates RISCO to accept Product returns directly from end users who purchased the Products for their own use from RISCO’s customer or from any installer of RISCO, or otherwise provide warranty or other services to any such end user directly. RISCO’s authorized distributor or installer shall handle all interactions with its end users in connection with this Limited Warranty. RISCO’s authorized distributor or installer shall make no warranties, representations, guarantees or statements to its end users or other third parties that suggest that RISCO has any warranty or service obligation to, or any contractual privity with, any recipient of a Product.

Remedies. In the event that a material defect in a Product is discovered and reported to RISCO during the Warranty Period, RISCO shall accept return of the defective Product in accordance with the below RMA procedure and, at its option, either (i) repair or have repaired the defective Product, or (ii) provide a replacement product to the customer.

Return Material Authorization. In the event that you need to return your Product for repair or replacement, RISCO will provide you with a Return Merchandise Authorization Number (RMA#) as well as return instructions. Do not return your Product without prior approval from RISCO. Any Product returned without a valid, unique RMA# will be refused and returned to the sender at the sender’s expense. The returned Product must be accompanied with a detailed description of the defect discovered (“Defect Description”) and must otherwise follow RISCO’s then-current RMA procedure published in RISCO’s website at www.riscogroup.com in connection with any such return. If RISCO determines in its reasonable discretion that any Product returned by customer conforms to the applicable warranty (“Non-Defective Product”), RISCO will notify the customer of such determination and will return the applicable Product to customer at customer’s expense. In addition, RISCO may propose and assess customer a charge for testing and examination of Non-Defective Product.

Entire Liability. The repair or replacement of Products in accordance with this Limited Warranty shall be RISCO’s entire liability and customer’s sole and exclusive remedy in case a material defect in a Product is discovered and reported as required herein. RISCO’s obligation and this Limited Warranty are contingent upon the full payment by customer for such Product and upon a proven weekly testing and examination of the Product functionality.

Limitations. This Limited Warranty is the only warranty made by RISCO with respect to the Products. The warranty is not transferable to any third party. To the maximum extent permitted by applicable law, this Limited Warranty shall not apply and will be void if: (i) the conditions set forth above are not met (including, but not limited to, full payment by customer for the Product and a proven weekly testing and examination of the Product functionality); (ii) if the Products or any part or component thereof: (a) have been subjected to improper operation or installation; (b) have been subject to neglect, abuse, willful damage, abnormal working conditions, failure to follow RISCO’s instructions (whether oral or in writing); (c) have been misused, altered, modified or repaired without RISCO’s written approval or combined with, or installed on products, or equipment of the customer or of any third party; (d) have been damaged by any factor beyond RISCO’s reasonable control such as, but not limited to, power failure, electric power surges, or unsuitable third party components and the interaction of software therewith or (e) any failure or delay in the performance of the Product attributable to any means of communication provided by any third party service provider, including, but not limited to, GSM interruptions, lack of or internet outage and/or telephony failure. BATTERIES ARE EXPLICITLY EXCLUDED FROM THE WARRANTY AND RISCO SHALL NOT BE HELD RESPONSIBLE OR LIABLE IN RELATION THERETO, AND THE ONLY WARRANTY APPLICABLE THERETO, IF ANY, IS THE BATTERY MANUFACTURER’S WARRANTY. RISCO does not install or integrate the Product in the end user’s security system and is therefore not responsible for and cannot guarantee the performance of the end user’s security system which uses the Product or which the Product is a component of.

This Limited Warranty applies only to Products manufactured by or for RISCO. Further, this Limited Warranty does not apply to any software (including operating system) added to or provided with the Products or any third-party software, even if packaged or sold with the RISCO Product. Manufacturers, suppliers, or third parties other than RISCO may provide their own warranties, but RISCO, to the extent permitted by law and except as otherwise specifically set forth herein, provides its Products “AS IS”. Software and applications distributed or made available by RISCO in conjunction with the Product (with or without the RISCO brand), including, but not limited to system software, as well as P2P services or any other service made available by RISCO in relation to the Product, are not covered under this Limited Warranty. Refer to the Terms of Service at: <https://riscocloud.com/ELAS/WebUI/UserLogin/License> for details of your rights and obligations with respect to the use of such applications, software or any service. RISCO does not represent that the Product may not be compromised or circumvented; that the Product will prevent any personal injury or property loss by burglary, robbery, fire or otherwise, or that the Product will in all cases provide adequate warning or protection. A properly installed and maintained alarm may only reduce the risk of a burglary, robbery or fire without warning, but it is not insurance or a guarantee that such will not occur or will not cause or lead to personal injury or property loss. CONSEQUENTLY, RISCO SHALL HAVE NO LIABILITY FOR ANY PERSONAL INJURY, PROPERTY DAMAGE OR OTHER LOSS BASED ON ANY CLAIM AT ALL INCLUDING A CLAIM THAT THE PRODUCT FAILED TO GIVE WARNING.

EXCEPT FOR THE WARRANTIES SET FORTH HEREIN, RISCO AND ITS LICENSORS HEREBY DISCLAIM ALL EXPRESS, IMPLIED OR STATUTORY, REPRESENTATIONS, WARRANTIES, GUARANTEES, AND CONDITIONS WITH REGARD TO THE PRODUCTS, INCLUDING BUT NOT LIMITED TO ANY REPRESENTATIONS, WARRANTIES, GUARANTEES, AND CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS, TO THE EXTENT PERMITTED BY LAW. WITHOUT LIMITING THE GENERALITY OF THE FOREGOING, RISCO AND ITS LICENSORS DO NOT REPRESENT OR WARRANT THAT: (i) THE OPERATION OR USE OF THE PRODUCT WILL BE TIMELY, SECURE, UNINTERRUPTED OR ERROR-FREE; (ii) THAT ANY FILES, CONTENT OR INFORMATION OF ANY KIND THAT MAY BE ACCESSED THROUGH THE PRODUCT SHALL REMAIN SECURED OR NON DAMAGED. CUSTOMER ACKNOWLEDGES THAT NEITHER RISCO NOR ITS LICENSORS CONTROL THE TRANSFER OF DATA OVER COMMUNICATIONS FACILITIES, INCLUDING THE INTERNET, GSM OR OTHER MEANS OF COMMUNICATIONS AND THAT RISCO’S PRODUCTS, MAY BE SUBJECT TO LIMITATIONS, DELAYS, AND OTHER PROBLEMS INHERENT IN THE USE OF SUCH MEANS OF COMMUNICATIONS. RISCO IS NOT RESPONSIBLE FOR ANY DELAYS, DELIVERY FAILURES, OR OTHER DAMAGE RESULTING FROM SUCH PROBLEMS. RISCO WARRANTS THAT ITS PRODUCTS DO NOT, TO THE BEST OF ITS KNOWLEDGE, INFRINGE UPON ANY PATENT, COPYRIGHT, TRADEMARK, TRADE SECRET OR OTHER INTELLECTUAL PROPERTY RIGHT IN ANY EVENT RISCO SHALL NOT BE LIABLE FOR ANY AMOUNTS REPRESENTING LOST REVENUES OR PROFITS, PUNITIVE DAMAGES, OR FOR ANY OTHER INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF THEY WERE FORESEEABLE OR RISCO HAS BEEN INFORMED OF THEIR POTENTIAL.

Contacting RISCO Group

RISCO Group is committed to customer service and product support. You can contact us through our website (www.riscogroup.com) or at the following telephone number and e-mail:

United Kingdom
Tel: +44-(0)-161-655-5500
support-uk@riscogroup.com

All rights reserved.

No part of this document may be reproduced in any form without prior written permission from the publisher.

RTX0082 – LightSYS2 – Simple Programming Setup Guide – Rev 1.4b

© RISCO Group 11/2019

5IN2865 B

5IN2865

LIGHTSYS SIMPLE PROGRAMMING SETUP GUIDE

